

Atlas Copco Generator Trailer

Series 4230 and 4240 (for QAS 108-138)

Parts list

1310 3011 42 Ed. 0 2001-10

“Copyright 2001, Atlas Copco Compressors, Inc. Holyoke, Massachusetts
Any unauthorized use or copying of the contents or any part of this book is prohibited.
This applies in particular to trademarks, model denominations, part numbers and
drawings.”

No. 1310 3011 42 Ed. 0
2001-10

Atlas Copco

OWNERSHIP DATA

Unit model: _____ Owner's machine no.: _____

Electric motor type: _____ Unit service no.: _____

Delivery date: _____ Motor serial no.: _____

Service plan: _____ First start-up date: _____

Selected Lubricants

Compressor: _____ Capacity: _____

Bearing grease type, electric motor: _____

Printed Matter Nos.

Atlas Copco instruction book: _____ Atlas Copco logbook: _____

Atlas Copco parts list: _____ Motor parts list: _____

Local Atlas Copco Representative

Name: _____

Address: _____

Telephone: _____ Contact persons: _____ Service: _____

Telefax: _____ Parts: _____

Example parts list

<u>Ref.</u>	<u>Part number</u>	<u>Qty</u>	<u>Name</u>	<u>Remarks</u>
1	1310 0332 64 158		Screw - Round Head	
2	1310 0326 91 2		Hinge	
3	1310 0326 79 2		Fender	

Explanation of columns:

Ref. - Reference number. Relates a part in list and drawing. "x" means that the part is not shown on the drawing. "-" indicates the beginning of a new list item.

Part number. "---" directs to consult another list of which the heading mostly has the same designation. "****" means that the part is not available as spare part. Parts followed by one dot are comprised in the assembly(ies) listed above the first dot.

Qty - A number indicating the quantity of parts. The quantity is only related to its corresponding reference number ("Ref") and may differ from the total quantity of this part for the entire unit. For parts of an assembly the quantity mentioned is for one assembly. "AR" means "as required" : bulk material or quantity to be determined.

Name - Mostly part names. When machine types, Classification Societies, dimensions, etc. are mentioned under the same "Designation", look carefully for the part number for your specific equipment. When a selection is to be made, the various selections are indented and preceded by a dash.


Remarks - A number followed by a bracket, e.g. 1), refers to a footnote.

ORDERING PARTS

Always quote the part number, "Designation" and quantity of the desired parts as well as type designation and serial number of the unit.

Table of Contents


1.	Trailer Assembly.....	4
2.	Fuel Tank Assembly.....	5
3.	Hub and Drum Components.....	6
4.	Electrical Components.....	7

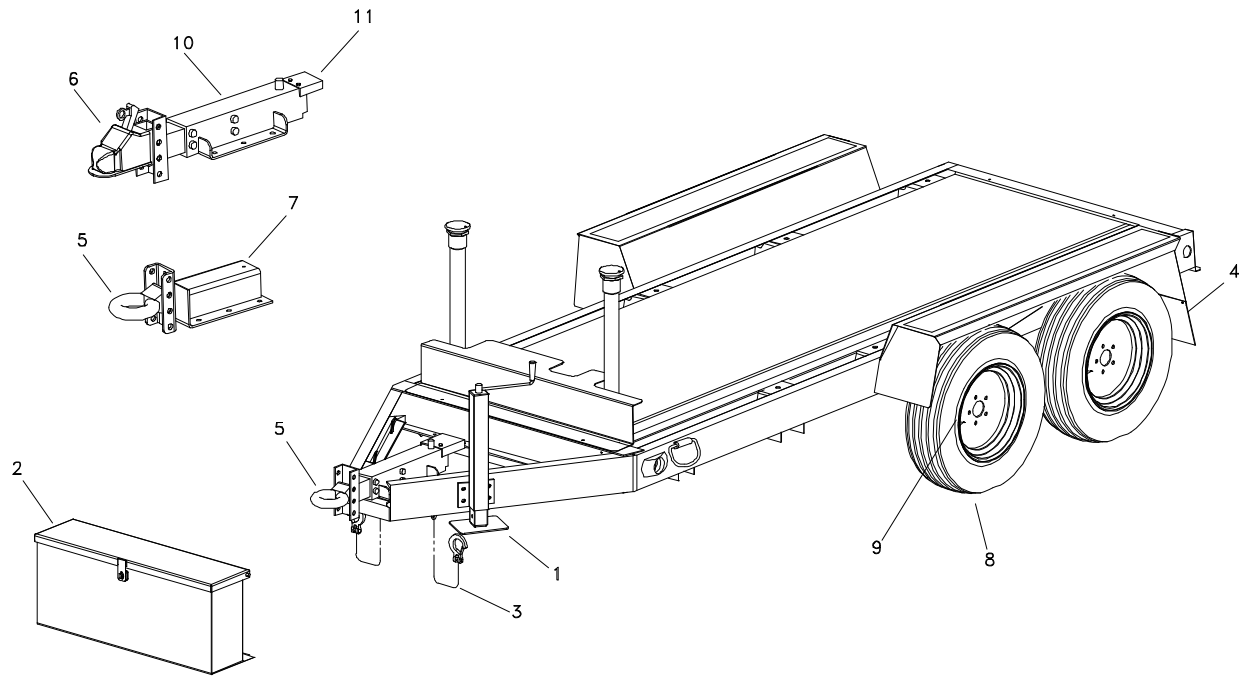

1. Trailer Assembly

Ref	Part number	Qty	Name	Remarks
1	1310 0347 12	1	Tongue Jack	
2	1310 0348 43	1	Toolbox	3
3	1310 0346 46	2	Safety Chain (5/16")	2
4	1310 0347 65	2	Atlas Copco Mud Flap	
5	1310 0346 73	1	Towing Eye (2-1/2", gloss black)	
6	1310 0333 21	1	Ball Coupler (2-5/16" - gloss black)	
7	1310 0348 44	1	Tow Bar (EB only)	
8	1310 0348 56	4	Tire & Wheel Assembly	
9	---	2	Axle Assy., 3500 Lb., Torflex	
	1310 0362 30		Hydraulic Brake System	
	1310 0362 31		Electric Brake System	
10	1310 0345 82	1	Actuator Kit	
11	1310 0352 43	1	Shield	

- 1 Not shown
- 2 Includes hook and safety chain anchor
- 3 Optional

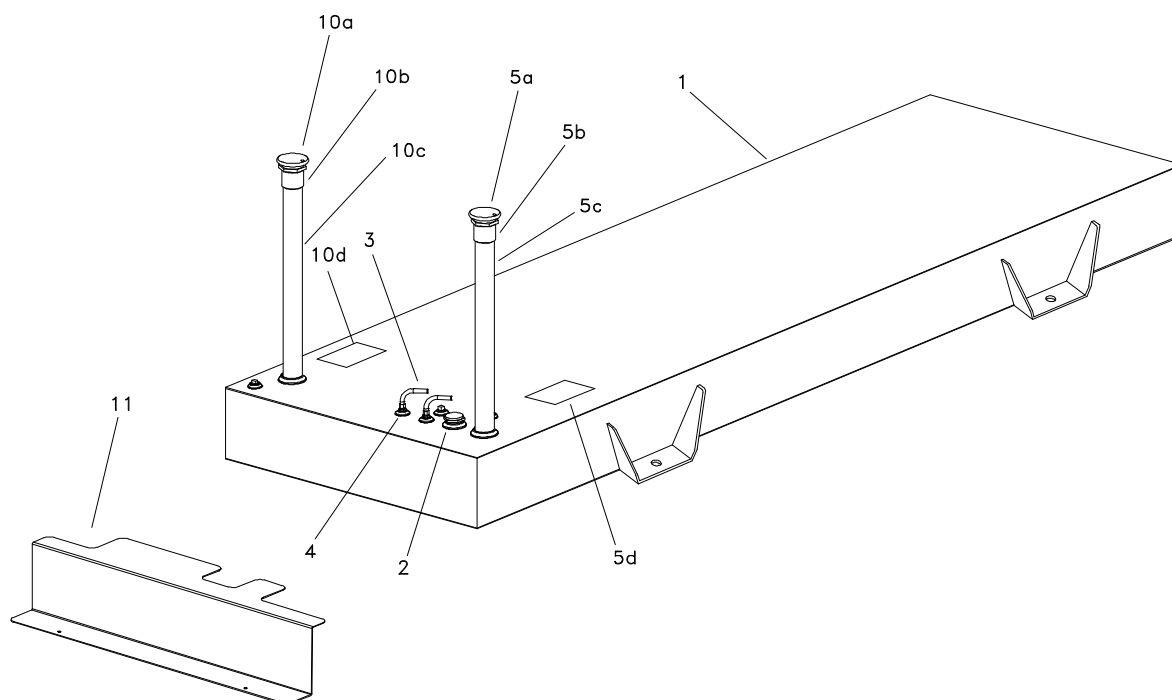

2. Fuel Tank Assembly


Ref	Part number	Qty	Name	Remarks					
1	1310 0362 28	1	Tank, 107 Gal, Double Wall		7	1310 0347 14	1	Fuel tank Interconnection Kit	1
2	1310 0346 86	1	Fuel gauge		8	1310 0349 82	1	Fuel Connection Kit	1
3	1310 0346 75	2	Suction and Return Tube		9	1310 0346 27	1	Low Fuel Warning Switch	1
4	1310 0346 74	2	Compression Fitting		10	1310 0347 88	1	Vent Pipe Kit	3
5	1310 0355 31	1	Fill Pipe Kit	3	10a	1310 0346 38	1	Prevent Cap	
5a	1310 0346 38	1	Prevent cap		10b	1310 0346 62	1	Coupling, 2"	
5b	1310 0346 62	1	Coupling, 2"		10c	1310 0356 97	1	Pipe	
5c	1310 0350 88	1	Fill Pipe, 2" x 33"		10d	1310 0346 97	1	Label, Vent Port	
5d	1310 0356 96	1	Label, Fill Port		11	1310 0362 37	1	Cover Plate	
6	1310 0346 22	1	Suction and Return Kit	1					

1 Not shown

2 Optional

3 Including prevent cap, 2" coupling and label

1310 9043 91 Rev. 00

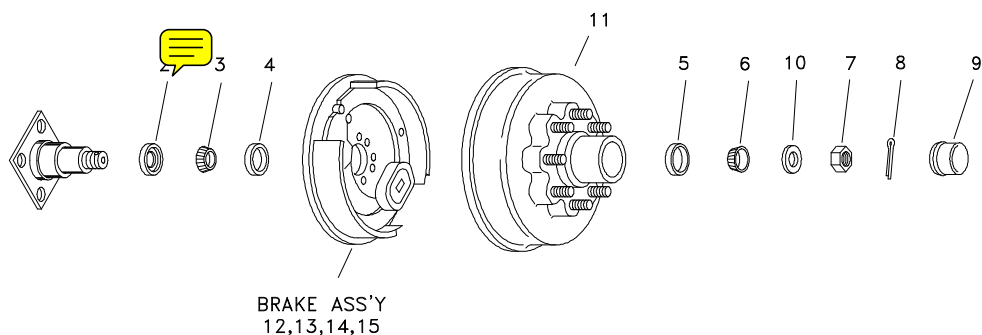


NOTE: HB IS HYDRAULIC BRAKE
EB IS ELECTRIC BRAKE

3. Hub And Drum Components

Ref	Part number	Qty	Name	Remarks
1	1310 3115 98	1	Bearing Kit including: Items 2-10	
2		1	Grease seal	
3		1	Inner Bearing Cone 25580	
4		1	Inner Bearing Cup 25520	
5		1	Outer Bearing Cup 02420	
6		1	Outer Bearing Cone 02975	
7		1	Spindle Nut	
8		1	Cotter Pin	
9		1	Grease Cap	
10		1	Spindle Washer	
11	1310 0350 92	1	Hub & Drum Assembly, Including Item 1	
12	1310 0362 33	1	Brake Assembly LH Electric Brake	
13	1310 0362 34	1	Brake Assembly RH Electric Brake	
14	1310 0362 35	1	Brake Assembly LH Hydraulic Brake	
15	1310 0362 36	1	Brake Assembly RH Hydraulic Brake	

1310 9043 96 Rev. 00

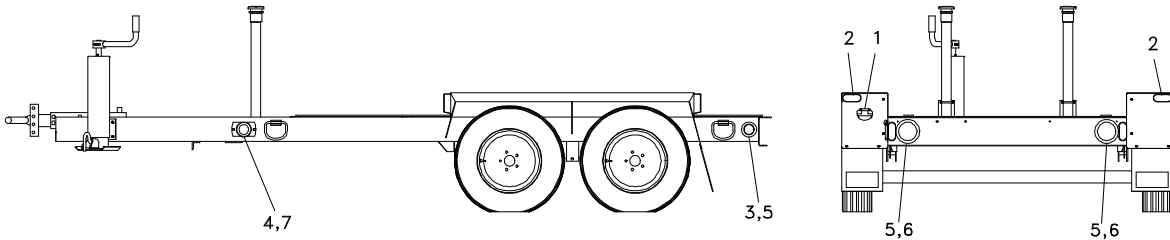

6. Electrical Components

Ref	Part number	Qty	Name	Remarks
1	1310 0362 24	1	License Plate Lamp	
2	1310 0348 06	4	Reflector, red	
3	1310 0347 42	2	Marker Light, red	
4	1310 0347 43	2	Marker light, yellow	
5	1310 0346 89	2	Marker light, grommet	
6	1310 0347 45	2	Tail Light Assembly, sealed	
7	1310 0362 73	2	Light Bracket	
8	1310 0362 25	1	Wire Harness, Deck section	1
-	1310 0350 81	1	Wire Harness, Front section	1
-	1310 0362 26	1	Wire Harness, Rear section	1
-	1310 0362 27	1	Wire Harness, licesnse light	1
9	1310 0348 30	1	Breakaway Switch, EB Only	1
10	1310 0350 85	1	Emergency Brake Wire, EB Only	

1 Not shown

1310 9043 97 Rev. 00