



LaMARCHE®

A46 / A46F

Constavolt Float Rectifier

INSTRUCTION MANUAL

ECN/DATE

CPN 40533

| | | | |
|--|----------------------|-----------------|--------------|
| | 17650 – 11/07 | 15761 – 2/03 | 14575 – 2/01 |
| | 16842 - 07/05 | 15349-01 – 5/02 | 13608 – 5/00 |

106 BRADROCK DRIVE
DES PLAINES, IL. 60018
(847) 299-1188
FAX: (847) 299-3061

ISSUE DATE: 12036 - 6/98

INSTRUCTION DRAWING NUMBER:

P25 - **LA46-2**

IMPORTANT SAFETY INSTRUCTIONS

1. **SAVE THESE INSTRUCTIONS.** This manual contains important safety and operating instructions. Before using this equipment, read all instructions and cautionary markings on (1) unit, (2) battery, and (3) product using the battery.
2. **CAUTION:** To reduce risk of injury and/or damage to the batteries, use only the type of batteries specified on the charger nameplate.
3. Do not expose equipment to rain or snow.
4. Do not operate equipment if it has received a sharp blow, been dropped, or otherwise damaged in any way; take it to a qualified serviceman.
5. Do not disassemble this unit; take it to a qualified serviceman when service or repair is required. Incorrect re-assembly may result in a risk of electric shock or fire.
6. To reduce risk of electric shock, disconnect this unit from the AC supply, batteries and loads before attempting any maintenance or cleaning. Turning off controls will not reduce this risk.
7. **WARNING – RISK OF EXPLOSIVE GASES**
 - a. Working in the vicinity of a battery is dangerous. Some batteries generate explosive gases during normal battery operation. For this reason, it is of utmost importance that each time before using this unit, you read this manual and follow the instructions
 - b. To reduce risk of battery explosion, follow these instructions and those published by the battery manufacturer and manufacturer of any equipment you intend to use in the vicinity of the battery. Review cautionary marking on all products.
8. **PERSONAL PRECAUTIONS:**
 - a. Someone should be within range of your voice or close enough to come to your aid when you work near a battery.
 - b. Have plenty of fresh water and soap nearby in case the battery electrolyte contacts skin, clothing, or eyes.
 - c. Wear complete eye protection and clothing protection. Avoid touching eyes while working near a battery.
 - d. If the battery electrolyte contacts skin or clothing, wash immediately with soap and water. If the electrolyte enters the eye, immediately flood the eye with running cold water for at least ten (10) minutes and get medical attention immediately.
 - e. Never smoke or allow a spark or flame in vicinity of a battery.
 - f. Be extra cautious, DO NOT drop metal onto a battery. It might spark or short-circuit the battery or cause an explosion.
 - g. Remove personal metal items such as rings, bracelets, necklaces, and watches when working with a battery. A battery can produce a short-circuit current high enough to weld these items causing severe burns.
 - h. NEVER charge a frozen battery.
 - i. Do not use battery charger for charging dry-cell batteries that are commonly used with home appliances. These batteries may burst and cause injury to person or damage to property.
9. **PREPARING TO CHARGE**
 - a. If it is necessary to remove the battery connections, always remove grounded terminal from the battery first. Make sure all loads are disconnected and unit is off, so as not to cause an arc.
 - b. Be sure the area around the battery is well ventilated while the battery is being charged.
 - c. When cleaning battery terminals, be careful to keep corrosion from coming in contact with eyes.
 - d. Study all the battery manufacturer's specific precautions such as removing or not removing cell caps while charging, recommended rates of charge, and maintenance procedures.
 - e. Follow the battery manufacturer's recharging instructions.
10. **UNIT LOCATION**
 - a. Never place this unit directly above the standard flooded battery. Gases from the battery will corrode and damage equipment. A sealed maintenance free or valve regulated lead acid (VRLA) may be placed below this equipment.
 - b. Never allow the battery electrolyte to drip on this unit when reading the specific gravity or filling the battery.
 - c. Do not operate this unit in a closed-in area or restrict ventilation in any way.
 - d. Do not set any battery on top of this unit.

11. DC CONNECTION PRECAUTIONS

Connect and disconnect DC output cables only after setting all of this unit's switches to off position and removing AC input supply. Do not pull on output cables when disconnecting charger from battery.

12. GROUNDING INSTRUCTIONS

This battery charger should be connected to a grounded, metal, permanent wiring system; or an equipment grounding conductor should be run with circuit conductors and connected to equipment-grounding terminal or lead on battery charger. Connections to battery should comply with all local codes and ordinances.

RECEIVING INSTRUCTIONS AND GENERAL EQUIPMENT INFORMATION

CAUTION: To ensure safe installation and operation, the information given in the instruction manual should be read and understood before installing or using the equipment.

RECEIVING INSTRUCTIONS

Unpacking and Inspection: Examine the shipping crate upon arrival. If there is obvious damage, describe on the receiving documents. Within a few days after delivery, the equipment should be uncrated and carefully inspected for hidden damages. When removing packaging material, be careful not to discard any equipment, parts, or manuals. If any damage is detected you should:

1. File a claim with the carrier within five (5) days.
2. Send a copy of the claim to La Marche Mfg. Co.
3. Call La Marche Mfg. For a RETURN MATERIAL AUTHORIZATION NUMBER.

Failure to properly file a claim for shipping damages, or provide a copy of the claim to La Marche Mfg., may void warranty service for any physical damages reported for repair.

HANDLING

WARNING: Equipment can be very heavy, and top-heavy. Use adequate manpower or equipment for handling. Until the equipment is securely mounted, care must be used to prevent the equipment from being accidentally tipped over.

NOMENCLATURE PLATES

Each piece of La Marche Mfg. Equipment shipped is identified by part number on the nomenclature plate.

ADJUSTMENTS

All equipment is shipped from the factory fully checked and adjusted. Do not make any adjustments unless the equipment has been powered-up and the settings have been determined to be incorrect.

SPARE PARTS

To minimize downtime during installation or normal service, it is advisable to purchase spare fuses, circuit boards and other recommended components. Please refer to the list of recommended spare parts and their La Marche Mfg. Part numbers included with the instruction manual. It is recommended that spare fuses be ordered for all systems.

To order spare parts, please contact La Marche Mfg. (847)-299-1188 during business hours and ask for the Parts Department.

INSTALLATION AND OPERATING INSTRUCTIONS - A46 / A46F

The Constavolt Float Rectifier is designed to operate on a specific number of battery cells. The nameplate indicates the type and the number of battery cells required. Once properly installed and adjusted, the rectifier will maintain the battery in a fully charged condition. Install the rectifier so that the flow of air through the ventilators is not obstructed. Binding posts with wire lug connectors are provided on a terminal board within the unit. When hooking up the DC cables to the battery, be certain the positive terminal of the charger is connected to the positive battery terminal and the negative terminal is connected to the negative of the battery.

After the rectifier has been installed, follow the battery manufacturers specifications for equalize, give the battery a freshening charge to make certain it is fully charged by putting the Float/Equalize Switch on the front of the rectifier in the equalize position. When the battery is in a fully charged condition, return the switch to the float position. With the switch in this position, the voltage should average 2.17 volts per cell for lead acid cells, 1.4 volts per cell for nickel-cadmium and 2.25 volts per cell for sealed valve regulated cells (VRLA).

The **Model A46F** is similar to the Model A46, except it's output is filtered. It can be used with all types of batteries, sealed maintenance free, valve regulated lead acid (VRLA) or standard flooded types.

NOTE: THE A46, HOWEVER, IS NOT RECOMMENDED FOR USE ON SEALED VALVE REGULATED BATTERIES.

The charger is factory tested and preset so that no field adjustments are necessary. A resistor is provided for adjusting the float and equalizing voltages to the required levels. Should field adjustments be necessary, the float voltage may be adjusted by moving the red slider band on the voltage divider resistor RV1. Moving the slider toward the green slider or toward RV2 raises the taper and shutdown point moving the slider in the opposite direction lowers the point of shutdown. The green slider band is the equalizing voltage adjustment and may be adjusted in the same manner as the float slider.

In normal operation, the A46/A46F Float Charger maintains a constant battery voltage from no load up to 80% its rated load capacity as indicated by the nameplate. If the external loads exceed nameplate capacity, the charger will attempt to carry the excess load up to its current limiting capacity. Beyond this point, the battery will carry the excessive loads. If the battery is discharged, the charge will recharge the battery on a taper curve from its current limiting capacity to full charge.

The Float/Equalize Switch is used to raise the rectifier output voltage to 2.33 volts per cell for lead acid cells (L), 1.55 volts per cell for nickel-cadmium cells (N), 2.27 volts per cell valve regulated lead acid (VRLA), so that the battery can be given an equalizing charge. To give an equalizing charge, it is only necessary to throw the switch to the equalize position. The rectifier will automatically hold the cell voltage at the equalizing voltage while the switch is in high position and will drop back to float voltage when the switch is put back into the normal or float position.

If a 24 or 72 hour (option 04G or 04H) equaling timer is provided, the timer switch replaces the manual float/equalize switch. To operate the timer, it is only necessary to turn the timer knob to the desired equalizing time setting & push the start equalize button. The time switch transfers the charger from the float to the equalizing charge rate. The timer times out automatically and returns the charger to the float charge position. See accessories for other options.

The inherent design of the transformer reactor combination provides compensation for line voltage variations of $\pm 10\%$.

The DC output current is limited to provide for complete protection. The current limiting feature allows for the unit to carry overloads and limits the output to a maximum of 120% of the rated output.

TROUBLESHOOTING **GENERAL INFORMATION**

This troubleshooting guide should be used by trained service personnel or an experienced electrician.

CAUTION: Hazardous AC and DC voltages are present within the unit's enclosure.

Equipment: The only equipment required is a multi-scale volt-ohm meter, and a stand tool kit.

Before setting up any complicated testing or jumping to any conclusions, give the unit a general inspection. Check the following:

1. Check DC output cables, connections, battery type, and number of battery cells with charger rating.
2. Check unit specifications with customer order.
3. Check input connections, input voltage, and line breaker size.
4. Check for shipping damage, loose connections, broken wires, etc.
5. Certain failures can be caused by defective batteries and customer loads, make sure batteries and loads are free from defects.

NOTE: If the problem is found to be located in the printed circuit boards, the board should be replaced. No attempt should be made to repair circuit boards in the field.

Information you should have when calling in for troubleshooting assistance:

1. Equipment model number and serial number.
2. The actual AC input voltage.
3. The DC output voltage with and without battery.
4. Result of check of AC Breaker and DC output fuse.
5. DC output amps when measuring the DC output voltage with battery and load connected to rectifier.

TROUBLESHOOTING CONSTAVOLT BATTERY CHARGERS

| SYMPTOM | POSSIBLE CAUSE | PROCEDURE |
|--|--|---|
| Open AC input fuse | <ol style="list-style-type: none"> 1. Incorrect AC input 2. Shorted diodes | Compare AC input voltage with voltage on unit nameplate. See "Troubleshooting and Diode Replacement Sheet" |
| Open DC output fuse | <ol style="list-style-type: none"> 1. Defective or wrong voltage battery 2. Shorted connector 3. Shorted or reverse output 4. Shorted diodes | Compare battery voltage with unit nameplate. Check with volt-ohmmeter. Check with volt-ohmmeter. See "Troubleshooting and Diode Replacement Sheet" |
| TYPE (AC1) CONTROL PANEL: Charger operates but will not charge battery. | <ol style="list-style-type: none"> 1. Defective Control Panel. 2. Defective cutout relay | To check control panel, disconnect the blue and black wires going to Terminal #1 on control panel; connect the two (2) wires together, but do not reconnect to panel. Connect battery and turn on unit. If charger goes into high rate, the control panel is defective. To check cutout relay, turn unit on and measure the voltage from terminal one on the control panel to the positive output terminal of the battery charger. If zero DC voltage is measured, the relay is defective. |
| Charger will not taper to finish rate. | <ol style="list-style-type: none"> 3. Open cell in battery 1. Defective battery 2. Defective control panel | Check battery cells. Check for defective cells in battery. To check control panel, disconnect and separate blue and black wires going to terminal one on the control panel. If the unit shuts down, the control panel may be defective. |

TROUBLESHOOTING INSTRUCTIONS AND DIODE REPLACEMENT

The silicon diode may be a source of trouble. The function of the diode is to allow the flow of current through it in one direction only. If the polarity of the conducting current is reversed, the diode will block the current flow. Thus, the diode has a low resistance to current flow in one direction and a high resistance to current flow in the other direction. Therefore, a simple ohmmeter may be used to test the diode. The procedure for checking the silicon diode is as follows:

1. Isolate one end of the diode by disconnecting the wires attached to the nipple (or pigtail) end of the diode (only one end of the diode must be disconnected).
2. Clip one lead of the ohmmeter to the nipple (or pigtail) lead of the diode. Clip the other ohmmeter lead to the aluminum heat sink (if a portable multimeter is used, set the switches on ohms, DC and scale RX100).
3. Note the ohmmeter reading. Then reverse the leads to the diode. Again, note the ohmmeter reading. If the diode is good, the meter will indicate a high resistance in one direction and a low resistance with the leads reversed. If the diode is shorted, the meter will read full scale or "O" resistance with the leads in either direction. If the diode is "open", the ohmmeter needle will not indicate or show infinite resistance, indicating an open circuit with the ohmmeter leads in either direction.
4. All diodes must be checked in the event that more than one diode is defective.
5. If the diode is defective, remove the defective diode from the heat sink and replace with a new diode.

WHEN ORDERING REPLACEMENT PARTS, DRAWINGS OR SCHEMATICS, OR REQUESTING SERVICE INFORMATION, ALWAYS GIVE MODEL NUMBER, SERIAL NUMBER AND AC INPUT VOLTAGE.

INSTALLERS INFORMATION

The table below lists the AC and the DC minimum wire size requirements. At distances exceeding 10 feet, the DC wire size should be chosen to keep the voltage difference between the unit's terminals and the battery at less than 1/2 volt when the unit is fully loaded. If the distance between the unit and the battery exceeds 10 feet, use the Power Cabling Formulas to determine wire size.

WIRE SIZE TABLE
(Based upon unit fuse size)

NOTE: These are recommended wire sizes. All National and Local Wiring Codes must be followed.

| FUSE SIZE | WIRE SIZE REQUIREMENT CUSTOMER CONNECTION | EQUIPMENT GROUNDING CONDUCTOR MINIMUM | FUSE SIZE | WIRE SIZE REQUIREMENT CUSTOMER CONNECTION | EQUIPMENT GROUNDING CONDUCTOR MINIMUM |
|-----------|---|---------------------------------------|-----------|---|---------------------------------------|
| 1 | #14 | #14 | 150 | #1 | #6 |
| 3 | #14 | #14 | 175 | #1/0 | #6 |
| 4 | #14 | #14 | 200 | #2/0 | #6 |
| 5 | #14 | #14 | 225 | #2/0 | #4 |
| 6 | #14 | #14 | 250 | #4/0 | #4 |
| 10 | #14 | #14 | 300 | 250-MCM | #4 |
| 15 | #12 | #12 | 350 | 350-MCM | #2 |
| 20 | #12 | #12 | 400 | 400-MCM | #2 |
| 25 | #10 | #12 | 450 | 500-MCM | #2 |
| 30 | #10 | #10 | 500 | 600-MCM | #2 |
| 35 | # 8 | #10 | 600 | 900-MCM | #1 |
| 40 | # 8 | #10 | 700 | 1500-MCM | 1/0 |
| 45 | # 8 | #10 | 800 | 2/500-MCM | 1/0 |
| 50 | # 8 | #10 | 1000 | 2/800-MCM | 4/0 |
| 60 | # 6 | #10 | 1200 | 2/1000-MCM | 4/0 |
| 70 | # 6 | # 8 | 1600 | 2/2000-MCM | 4/0 |
| 80 | # 4 | # 8 | 2000 | | 250-MCM |
| 90 | # 4 | # 8 | 2500 | | 350-MCM |
| 100 | # 4 | # 8 | 3000 | | 400-MCM |
| 110 | # 2 | # 6 | 4000 | | 500-MCM |
| 125 | # 2 | # 6 | 5000 | | 700-MCM |
| 130 | # 2 | # 6 | 6000 | | 800-MCM |

POWER CABLING FORMULAS

WIRE GAUGE TABLE

| <u>SIZE AWG</u> | <u>AREA CIR. MILS</u> | <u>SIZE MCM*</u> | <u>AREA CIR. MILS</u> |
|---------------------|-------------------------------|----------------------|-------------------------------|
| 18 | 1620 | 250 | 250000 |
| 16 | 2580 | 300 | 300000 |
| 14 | 4110 | 350 | 350000 |
| 12 | 6530 | 400 | 400000 |
| 10 | 10380 | 500 | 500000 |
| 8 | 16510 | 600 | 600000 |
| 6 | 26240 | 700 | 700000 |
| 4 | 41740 | 750 | 750000 |
| 3 | 52620 | 800 | 800000 |
| 2 | 66360 | 900 | 900000 |
| 1 | 83690 | 1000 | 1000000 |
| 0 | 105600 | 1250 | 1250000 |
| 00 | 133100 | 1500 | 1500000 |
| 000 | 167800 | 1750 | 1750000 |
| 0000 | 211600 | 2000 | 2000000 |

*Denotes all sizes larger than #0000 are expressed in MCM.

TABLE OF CONVENTIONS:

| | | |
|---------|---|--|
| CMA | = | Cross-section of wire in circular MIL area. |
| A | = | Ultimate drain in amperes. |
| LF | = | Conductor loop feet. |
| MAX AMP | = | Maximum allowable amperes for given voltage drop. |
| CMA | = | Cross section of wire in circulate MIL area. |
| AVD | = | Allowable voltage drop. |
| LF | = | Conductor loop feet. |
| K | = | 11.1 Constant factor for commercial (TW Type) copper wire (KS5482-01). |
| | = | 17.4 for aluminum (KS20189) |

1. Calculating Wire Size Requirements..... $CMA = \frac{A \times LF \times K}{AVD}$
2. Calculating Current Carrying Capacity of Wire..... $Max\ Amp = \frac{CMA \times AVD}{LF \times K}$

SOURCE: HANDBOOK 100-NATIONAL BUREAU OF STANDARDS

NOTE: ALL WIRE #6 AND LARGER IS STRANDED.

General Maintenance Procedure

Yearly

1. Blow out rectifier/inverter with a low-pressure air hose.
2. Make sure all connections are tight.
3. Perform a visual check on all internal components.
4. Check front panel meters and alarms for accuracy.

4th Year

REPEAT ABOVE WITH THE ADDITION OF:

1. Check relay contacts for pitting or corrosion.
2. Check capacitors for leakage.

7th Year

REPEAT ALL, WITH THE ADDITION OF:

1. Filter, resonating capacitors and control relays should be replaced.

10th Year

REPEAT ALL WITH THE ADDITION OF: (except replacing capacitors, they should be replaced every 7 years)

1. Check magnetics, components and wiring for signs of excessive heat.

MANUFACTURER'S STANDARD WARRANTY

(IF OUR INVOICE TO YOU SHOWS THAT YOU HAVE PURCHASED THE EXTENDED PARTS WARRANTY OR IF YOU ARE INTERESTED IN PURCHASING THE EXTENDED PARTS WARRANTY, SEE THE MANUFACTURER'S EXTENDED PARTS WARRANTY)

All La Marche Manufacturing Co. equipment has been thoroughly tested and found to be in proper operating condition upon shipment from the factory and is warranted to be free from any defect in workmanship and material that may develop within one year from date of purchase. In addition to the standard one (1) year warranty, La Marche warrants its magnetics and power diodes on a parts replacement basis only for nine (9) more years under normal use.

Any part or parts of the equipment (except protective devices, DC connectors and other wear-related items) that prove defective within a one (1) year period shall be replaced without charge providing such defect, in our opinion, is due to faulty material or workmanship and not caused by tampering, abuse, misapplication or improper installation. Magnetics and power diodes are warranted for ten (10) years after date of purchase. During the last nine (9) years of this ten (10) year warranty period, the warranty covers parts replacement only, no labor or other services are provided by La Marche, nor is La Marche obligated to reimburse the owner or any other person for work performed.

Should a piece of equipment require major component replacement or repair during warranty period, these can be handled in one of three ways:

1. If the Purchaser elects to take the responsibility of repairing the equipment and requests replacement part(s), Purchaser or Sales Representative must contact Factory for return authorization and a purchase order must be issued. Replacement part(s) will be promptly shipped and invoiced. After the defective part(s) are returned and inspected at the Factory, if the defect(s) were due to faulty material or workmanship, credit will be issued.
2. The equipment can be returned to the La Marche factory to have the inspections, parts replacements and testing performed by factory personnel. Should it be necessary to return a piece of equipment or parts to the factory, the customer or sales representative must obtain authorization from the factory. If upon inspection at the factory, the defect was due to faulty material or workmanship, all repairs will be made at no cost to the customer during the first year. If the Extended Warranty is purchased, the parts required for repair will also be at no cost but La Marche will notify the Purchaser of the costs of Labor to replace the defective part(s). A Purchase Order to cover this labor is required before repairs will be initiated. Transportation charges or duties shall be borne by Purchaser.
3. If the purchaser elects not to return the equipment to the factory and wishes a factory service representative to make adjustments and/or repairs at the equipment location, La Marche's field service labor rates will apply. A purchase order to cover the labor and transportation cost is required prior to the deployment of the service representative.

In accepting delivery of the equipment, the purchaser assumes full responsibility for proper installation, installation adjustments and service arrangements. Should minor adjustments be required, the local La Marche sales representative should be contacted to provide this service only.

All sales are final. Only standard La Marche units will be considered for return. A 25% restocking fee is charged when return is factory authorized. Special units are not returnable.

In no event shall La Marche Manufacturing Co. have any liability for consequential damages, or loss, damage or expense directly or indirectly arising from the use of the products, or any inability to use them either separately or in combination with other equipment or materials, or from any other cause. In addition, any alterations of equipment made by anyone other than La Marche Manufacturing Co. renders this warranty null and void.

La Marche Manufacturing Co. reserves the right to make revisions in current production of equipment, and assumes no obligation to incorporate these revisions in earlier models.

The failure of La Marche Manufacturing Co. to object to provisions contained in customers' purchase orders or other communications shall not be deemed a waiver of the terms or conditions hereof, nor acceptance of such provisions.

THE ABOVE WARRANTY IS EXCLUSIVE, SUPERCEDES AND IS IN LIEU OF ALL OTHER WARRANTIES, EXPRESSED OR IMPLIED, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS. NO PERSON, AGENT OR DEALER IS AUTHORIZED TO GIVE ANY WARRANTIES ON BEHALF OF THE MANUFACTURER, OR TO ASSUME FOR THE MANUFACTURER ANY OTHER LIABILITY IN CONNECTION WITH ANY OF ITS PRODUCTS UNLESS MADE IN WRITING AND SIGNED BY AN OFFICIAL OF THE MANUFACTURER.

MANUFACTURER'S EXTENDED PARTS WARRANTY

(THIS IS YOUR WARRANTY IF YOU HAVE PURCHASED THE EXTENDED PARTS WARRANTY AS SHOWN ON OUR INVOICE TO YOU OR IF YOU PURCHASE THE EXTENDED PARTS WARRANTY WITHIN 30 DAYS AFTER THE DATE OF OUR INVOICE)

All La Marche Manufacturing Co. equipment has been thoroughly tested and found to be in proper operating condition upon shipment from the factory. Any part or parts of the equipment (except protective devices, DC connectors and other wear-related items) that prove defective within a one (1) year period from the date of our invoice to you shall be replaced without charge providing such defect, in our opinion, is due to faulty material or workmanship and not caused by tampering, abuse, misapplication or improper installation. Labor and parts are covered during this one (1) year period.

For the next four (4) years after the expiration of the one-year warranty, on a parts replacement only basis, any part or parts of the equipment (except protective devices, DC connectors and other wear-related items) that prove defective within the additional four (4) year period shall be replaced providing such defect, in our opinion, is due to faulty material or workmanship and not caused by tampering, abuse, misapplication or improper installation. During this four (4) year period, the warranty covers parts replacement only, no labor or other services are provided by La Marche, nor is La Marche obligated to reimburse the owner or any other person for work performed.

In addition, magnetics and power diodes are warranted for ten (10) years after the date of our invoice to you. The defect in the magnetics or power diodes must, in our opinion, be due to faulty material or workmanship and not caused by tampering, abuse misapplication, or improper installation. Labor and replacement magnetics and power diodes are covered during the initial one (1) year period from the date of our invoice to you. During the last nine (9) years of this ten (10) year warranty period for magnetics and power diodes, the warranty covers parts replacement only, no labor or other services are provided by La Marche, nor is La Marche obligated to reimburse the owner or any other person for work performed.

Should a piece of equipment require major component replacement or repair during warranty period, these can be handled in one of three ways:

1. If the Purchaser elects to take the responsibility of repairing the equipment and requests replacement part(s), Purchaser or Sales Representative must contact Factory for return authorization and a purchase order must be issued. Replacement part(s) will be promptly shipped and invoiced. After the defective part(s) are returned and inspected at the Factory, if the defect(s) were due to faulty material or workmanship, credit will be issued.
2. The equipment can be returned to the La Marche factory to have the inspections, parts replacements and testing performed by factory personnel. Should it be necessary to return a piece of equipment or parts to the factory, the customer or sales representative must obtain authorization from the factory. If upon inspection at the factory, the defect was due to faulty material or workmanship, all repairs will be made at no cost to the customer during the first year. If the Extended Warranty is purchased, the parts required for repair will also be at no cost but La Marche will notify the Purchaser of the costs of Labor to replace the defective part(s). A Purchase Order to cover this labor is required before repairs will be initiated. Transportation charges or duties shall be borne by Purchaser.
3. If the purchaser elects not to return the equipment to the factory and wishes a factory service representative to make adjustments and/or repairs at the equipment location, La Marche's field service labor rates will apply. A purchase order to cover the labor and transportation cost is required prior to the deployment of the service representative.

In accepting delivery of the equipment, the purchaser assumes full responsibility for proper installation, installation adjustments and service arrangements. Should minor adjustments be required, the local La Marche sales representative should be contacted to provide this service only.

All sales are final. Only standard La Marche units will be considered for return. A 25% restocking fee is charged when return is factory authorized. Special units are not returnable.

In no event shall La Marche Manufacturing Co. have any liability for consequential damages, or loss, damage or expense directly or indirectly arising from the use of the products, or any inability to use them either separately or in combination with other equipment or materials, or from any other cause. In addition, any alterations of equipment made by anyone other than La Marche Manufacturing Co. renders this warranty null and void.

La Marche Manufacturing Co. reserves the right to make revisions in current production of equipment, and assumes no obligation to incorporate these revisions in earlier models.

The failure of La Marche Manufacturing Co. to object to provisions contained in customers' purchase orders or other communications shall not be deemed a waiver of the terms or conditions hereof, nor acceptance of such provisions.

THE ABOVE WARRANTY IS EXCLUSIVE, SUPERCEDES AND IS IN LIEU OF ALL OTHER WARRANTIES, EXPRESSED OR IMPLIED, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS. NO PERSON, AGENT OR DEALER IS AUTHORIZED TO GIVE ANY WARRANTIES ON BEHALF OF THE MANUFACTURER, OR TO ASSUME FOR THE MANUFACTURER ANY OTHER LIABILITY IN CONNECTION WITH ANY OF ITS PRODUCTS UNLESS MADE IN WRITING AND SIGNED BY AN OFFICIAL OF THE MANUFACTURER.