
The following catalog has gaps in its page numbers, or doesn't have any numbers. We have chosen to leave the page numbering in the order that Acrobat assigns it.

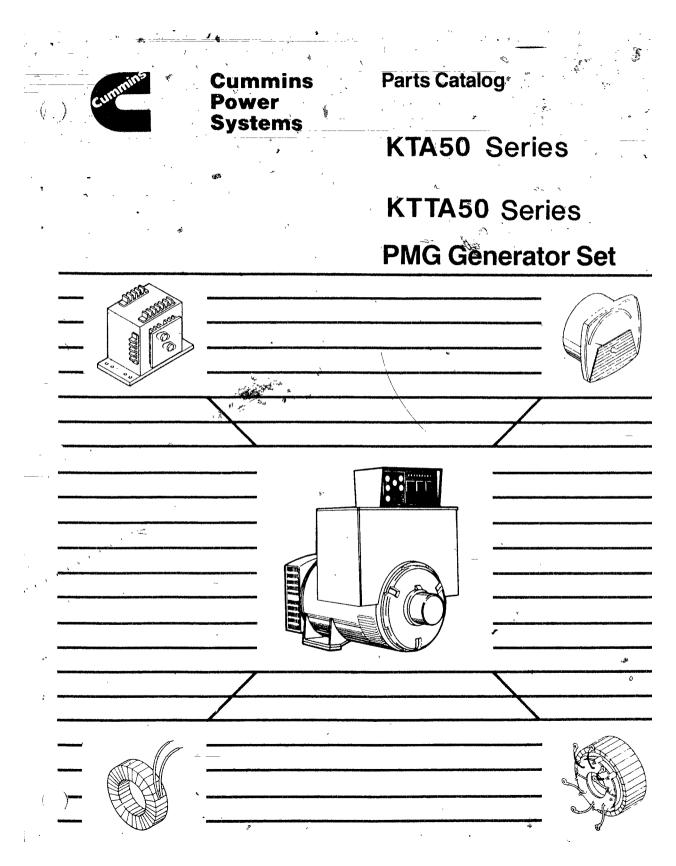

Indéx

		gi Kozti Zos		· · · ·		' <u>-</u> ''		" ·			GRID	
•	ـــــــــــــــــــــــــــــــــــــ	Ala Alt Amm	rm ern ete	Modu ator r -	AC A	 	· · · · · · · ·	••••	• • • •	 	B17, B19 C19 A6 C6, C8 C10, C12	н ^т
		8e1 80a	t, rd,	Driv Aut	e. oSt	, . art	 	· · · · ·	• • • •		A6 C17, C18 C6	\$. ,
ŋ	×	Cle	áne ane		ir Ar	- € H	xtr eav	y Du		Duty	A8 A8	
,	•	Cle Con Con Con	ane tac tro tro	r, A tor, 1, E 1, G	ir He ngi iene	~ 0 ate ne rat	utd r, or	00r			A8 A12 C10, C12 C4 C6, C8	
	0	Çon Con	tro tro	\$	ver , G	spe	ed	r			C17, C18 C17, C18 B17, B19	
	-	Ele Ele	men men	Driv t, A t, C r, F	ir 1	Fil	ter	r Magn	et		A8 A6 B20	
	<u> </u>	Fil Fil Gau <u>Ga</u> u Gen	ter ter ge, ge, era	Fi , Oi , Wa Pre Ten tors tor Be	uel il ater ssu sper Siz	re atu	- 0 re	1]	**	×	 [∞] A8 A6 C10, C12 C10, C12 B11 B8, B9 A6 	
										×.		

×.

÷Q.

ни [,]	GRID
Harness, Engine	A8
Harness, Engine Control	C10, C12
Harness, Generator Control	C14, C16
Heater, Generator	B13, B15
Heater, Water	A10, A12
Horn, Electrical	C19
Indicatòr, Air Service	_ A8
Meter, Hour	C10, C12
Regulator, Voltage .⊗	B13, B15
Relay	C17, C18
Rotor, Exciter	B17, B19
Rotor, Generator	B17, B19
Sender, Pressure – Oil Sender, Temperature Starter Stator, Exciter Switch, Heater-Control Switch, Magnetic - Starter Switch, Pressure - Oil Switch, Selector * Switch, Temperature	A8 A8 A6 B13, B15 ₹ A10 A\$ O6, C8 A8
Fachometer	C10, C12
Transducer, Temperature - Water	A6
Transducer, Watt	C18
Transducer,Pressure - 011 .	A6
Transformer, Current	C4
Voltmeter C6,C	8, C10, C12
Wattmeter	C6, C8

ŝ

5.

This Parts Catalog applies to the Generator Sets Listed Delow. The illustrations are arranged in groups of related items, and each part or assembly is identified by a Reference, Number. All parts illustrated are typical, and unless otherwise mentioned in the description column the parts are interchangeable between models. Dual Part No. may be applicable; CPS are Cummins Power Systems assigned Part Numbers and GEC are th Cummins Engine Company asigned Part Numbers.

đ

Introduction

These typical illustrations are subject to change and reflect only the latest replace ment parts arrangement. The Right and Left sides of the Generator Set are determined by FACING the FRONT of the Set (Engine Radiator End)

Set Data Table

ENGINE ID. No.	GEN SET ID No	RPM RATING	BATTERY VOLTAGE
Note 1. KTA50-G*#	Note 2 xxxKTAB - \$	1800 RPM/ 1500 RPM	24 VDC
KTTA50-G <u>*#</u>	×××KTTAD - §	`1800 RPM/ 1500 RPM	24 VDC

Note 1 * - Letter S for Standby, Letter C for Continious Duty applications Note:1 # - Number 1 thru 9 used to denote size varations Note:2 x - Numbers used to denote kW rations. 230,000 watt set Note 2 @ - Number used to denote size varations. 2 NOTE.2 § - Numbers and a letter used to provide configuration identification

Electrical Data Table

VOLT					
LOWY	HIGH Y	HERTZ	WIRE	PHASE	NOTES
	, , , , , , , , , , , , , , , , , , ,			· · ·	
190/110	380/219	60	12	3	
208/120	416/220	60	12	3	
220/127	440/254	60	, 12	3	à
230/133	460/266	60	12	3	
240/139	480/277	60	12	3	
190/110	380/219	50	12	3	
200/115	400/231	50	12	3	
208/120	416/240	50	12	3	`

Engine Replacement Parts

The External Engine Components added or modified during the Generator Set Assembly and most General Maintance Items are identified in this Parts Catalog. For Internal Engir Parts and Components not covered herein; refer to the applicable Cumming Engine & Driv Parts Catalog. **General Information**

For parts or service, contact the distributor from whom you purchased this equipment or refer to the nearest Authorized Cummins Distributor.

To avoid errors or delays in filling your parts order, always give the full MODEL, SERIAL and ID No. from the nameplate.

AC Generator Set

Model____




	، ب م		' o .
	kva	pf	phase
voltage		amps	1 ³ e
duty		overload	
rpm	9	hz	
class of insulat	ion	pmg voltage	
 field amp max 		field voltage	max
generator model	no.	, ,	
voltage regulato			
ID no.			
generator set se	rial no.		
BS5000	-	NEMA	


For handy reference, insert "YOUR" nameplate information in the spaces above.

AWARNING


TAKE ALL NECESSARY PRECAUTIONS WHEN CHECKING OR CHANGING ENGINE OIL Not to ingest, breathe the fumes or contact the oil. Used engine oils Phave been identified by federal and some state agencies as causing cancer.

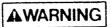

TAKE ALL NECESSARY PRECAUTIONS WHEN HANDLING ENGINE GASKETS. DO NOT INGEST, BREATHE, OR CONTACT DUST FROM GASKETS. USE ADEQUATE VENTILATION AND WEAR PROTECTIVE GLOVES, MASK AND CLOTHING. ASBESTOS HAS BEEN IDENTIFIED BY FEDERAL AND SOME STATE AGENCIES AS CAUSING CANCER.

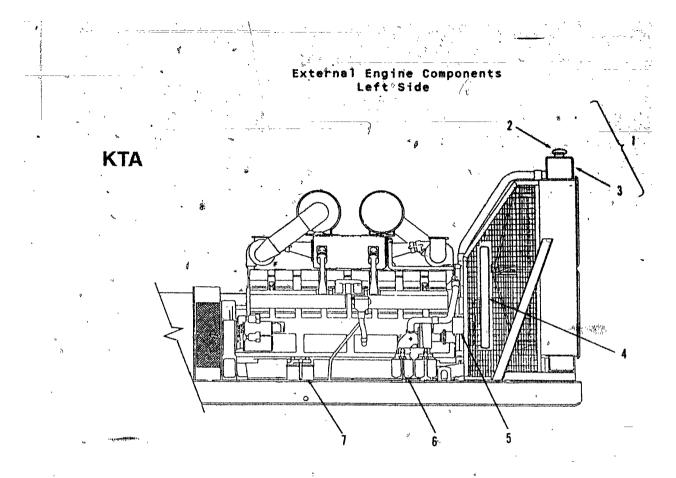

KTTA

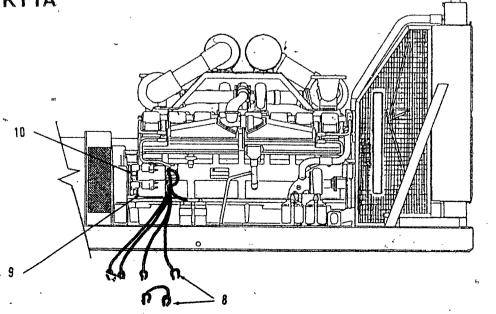


Side Left REF OTY PART CEC USED PART NO. DESCRIPTION HO. PART NO. Cooling System - Radiator 1 1 Spec A & B & D Note 1 Spec C Note 2 KTA50G1, G2 (Bearward# 53071A-4PA) KTA50G3, G4 None Built KTTA50G1 (Bearward# 53071-5PA) 2 1 Cap, Radiator 7 PSI (For 2" Fill Tube) 7 PSI (For 3" Fill Tube) 130-0523 130-2981 10 PSI (For 2" Fill Tube) 130-3395 Radiator (Includes Front Guards, Excludes Cap) 3 1 Spec A & B & D Standard Cooling 40°C/100°F 3050213 KTA50G1 with Dry Manifold 3050212 KTA50G1 with Wet Man#fold 3050212 KTA50G2 with Dry or Wet Manifold KTA50G3 & G4 Dry Manifold (No Wet Manifold Application) 3050212 3050212 KTTA50G with Dry Manifold (No wet Manifold Application) Hi Ambient Cooling 50°C/125°F KTA50G1 with Dry or Wet Manifold KTA50G2 with Dry or Wet Manifold 3050212 3050212 KTA50G3 & G4 Dry Manifold (No Wet Manifold Application) 3050212 KTTA50G with Dry Manifold (No Wet Manifold Application) 3050212 Spec C Standard or Hi Ambient Cooling 130-3405 KTA50G1 with Dry Manifold KTA50G2 with Dry Manifold 130-3405 KTA50G3 & G4 with Dry Manifold N/A KTTA50G with Dry Manifold 130-3406 1 Belt, Drive (Fan) Spec A & B & D All Models 3003467 Spec C 3003341 All Models 5 Charging System Components Alternator (35 Amp, 24 VDC) 191-1846-01 3016627 1 130-3317-01 201986 1 Pulley, Drive Belt, Drive 511-0163 3040283 2 Filter, Water - W/Corosion Inhibiting Chemical DCA4 6 Note 3 4 130-3538 Service for 90&up Gal Cooling Systems 3318201 Pre-Charging for 90 & up Gal Cooling Systems 130-3541 3318318 Filter, Oil - Bypass 122-0526 7 3313283 2 8 Cables & Leads 416-0473 2 Cable, Battery - Jumper' Cable, Battery (44" Lg) 416-0444 ۵ Lead, Electrical 416-0680 ٦ 3010125 9 2 Starter, 24 VDC 10 307-2621-02 3050692 Switch, Magnetic 1 NOTES: 1. Spec A & B & D Cooling Systems 'Assembled at Cummins Engine Company. For replacement components refer to the applicable Engine G-Drive Parts Manuals 2. Spec C Cooling Systems Installed at Cummins Power System Facitities and is Supplied by Bearward, Consult with Bearward for additional replacement components. USA Office: BEARWARD RADIATOR BEARWARD ENGINEERING LTD Route 22 Box 187 Main Road, Far Cotton Fleetwood, PA 19522 Northampton, England NN4 9HU 215-944-6017 Ø Replacement cartridges recommend and should be used in lieu of the Original 3 Engine Factory Installed Item which contains a Pre-Charge amount of DCA or DCA4 Chemical. Replacement with Pre-charge Cartridge may overload the Cooling

いいさいだ

nnal-Engine Components

System and cause cooling system problems.


em problems.

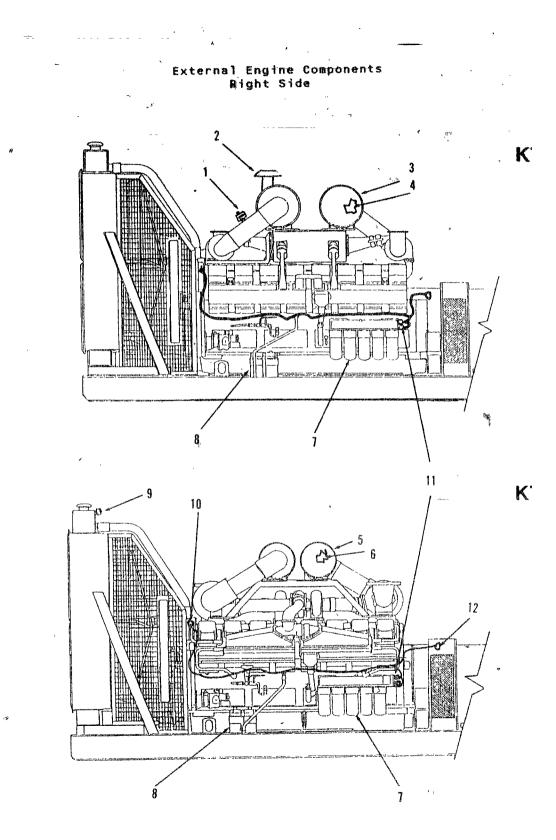

External Engine Components Right Side

OTY PART CEO* DESCRIPTION" PART NO. USED . PART NO. NO. 1 Indicator, Air Restriction (Includes Fitting) (Cap. Air Cleaner (Select as Applicable) 2 178957 140-2226 .2 Ž For 6" Tube Inleta 140-2264 3028847 For 8" Tube Inlet 140-2364 3017003 47 <u>`</u>` For 10" Tube Inlet 🐉 # 3058481 140-2352 Air Cleaner (Includes Element(s) unless A Disposable Type) 2 3 KTA50G1 & G2 Indoor (16"0D, 7"0D Outlet) 140-2264 3028847 Outdoor (16"OD, 8"OD Inlet, 7"OD Outlet) 3017002 140-2363 Heavy Duty (Rectangular Shape, 8"OD Outlet) 140-2345-02 3015349 KTA50G3 & G4 Indoor (13%"OD, Disposable) Heavy Duty (18"OD, 10"OD Inlet, 8"OD Outlet) 140-2413 . 3050498 3058474 140-2349 Element(s), Air Cleaner KTAG1 & G2 2 Indoor & Outdoor 140-2402 3010842 140-2408 3013212 Heavy Duty Primary Heavy Duty Safety 140-2407 3013213 KTAG3 & G4 Heavy Duty Primary 140-2411 3060222 Heavy Duty Safety #140-2412 3060223 Air Cleaner (Includes Elements(s) unless Disposable Type) 5 2 **KTTA50G1** 140-2413 3050498 Indoor (13%"OD, Disposable) 3058474 Heavy Duty (18"00, 10"0D Inlet, 8"0D Outlet) 140-2349 Element(s), Air Cleaner 2 KTTA50Ġ1 Heavy Duty Primary 140-2411 3060222 Heavy Duty Safety 3060223 140-2412 Filter, Oil 1 122-0757 3310169 5 ā 299202 2 Filter, Fuel 149-2232 Switch & Harness - Low Coolant Level 9 1 Switch, Low Coolant Level 309-0579-03 3046031 Harness, Wiring 338-2393 3050414 Switch, Sender & Harness - Engine Coolant Temperature Items 10 Transducer (Sender) - Temperature (All Specs) 302-1854 3015238 2 Spec A, B & C OLD STYLE (Nason) Switch, Temperarure - Alarm, Low Temps (2 Wire Harness) Note 1 309-0570 3034866 1 Switch, Temperature - Shutdown, H1 Temp_(2 Wire Harness) 309-0569-04 3048725 1 Switch, Temperature - Alarm & Shutdown (4 Wire Harness) 309-0572-02 3048727 1 Spec A, B, C & D NEW STYLE (Robert-Shaw); Spec A, B, C, Require Note 1 Adapter Harness for interface with Engine Wiring Harness) Switch, Temperature - Alarm (u/w 338-2471 Forked Harness) 309-0596-06 3056355 1 Switch, Temperature - Shutdown (u/w 338-2471 in Dual Switch 309-0596-04 3056353 1 Applications or with 338-2473 Harness in Single Application. Harness, Wiring (Spec A, B, C Single Switch Application) 338-2471 3066834 1 Harness, Wiring - Forked (Spec A, B, C Dual Switch Application) 338-2473 3066832 1. 11 Switch, Sender & Harness - Engine Oil Pressure 302-1853 3015237. 1 Transducer (Sender), Pressure (All Specs) Spec A, B & C OLD STYLE (Nason) Switch - Shutdown with 3 Wire Harness (12PSI) Note 1 309-0565-01 3034864 1 309-0566 3034863 Switch - Alarm & shutdown with 4 Wire Harness (12/18PSI) 1 Spec A, B, C & D NEW STYLE (Robert-Shaw); Spec A, B, C Require Note 1 Adapter Harness for interface with Engine Wiring Harness) Switch, Pnessure - Alarm (u/w 338-2470 Forked Harness) 309-0595-02 3056344.* 1 Switch, Pressure - Shutdown (u/w 338-2470 in Dual Switch 309-0595-03 3056345 1 Application or with 338-2472 in Single Application) Harness, Wiring (Spec A.B.C Single Switch Application) Harness, Wiring (Spec A.B.C Dual Switch Application) 338-2472 -3066830 3066835 338-2470 1 12 Harness, Wiring - Engine Spec A, B & Č 338-2389-02 3053027 1 338-2052-02 3062872 1 Spec D

NOTE: 1. New Style Switches introducted During Spec B & C Gen Set Assembly and Standard on Spec D Gen Sets during 1988, Replacement of old style (NASON) items with new style (ROBERT-SHAW) items Recommended by Cummins Engine Company Engineering.

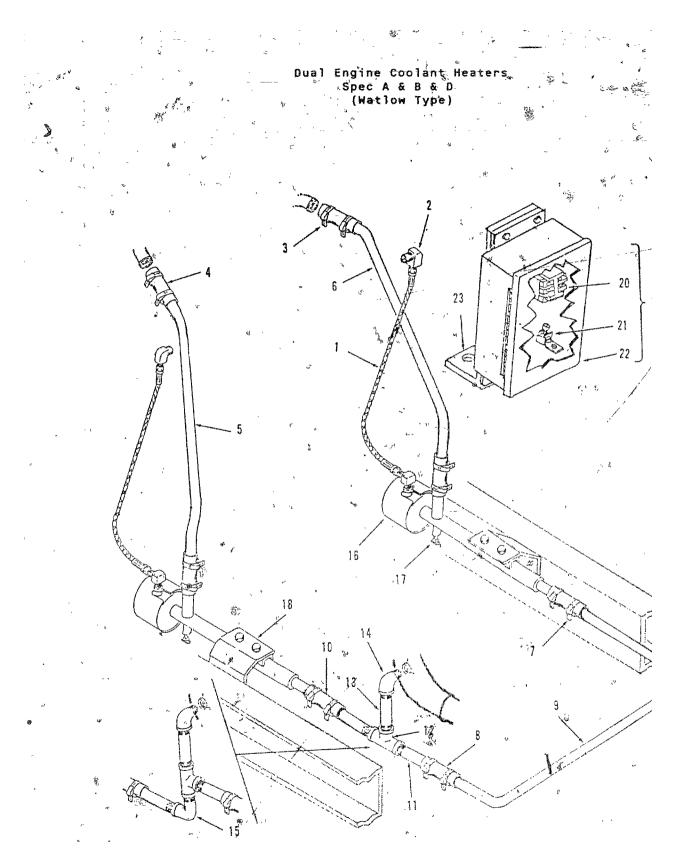

		i i servere			
·•		- C	1 2	5	Dual Engine Coolant Heaters
	18-		* <u>`</u>		⁹ Spec A & B & D
din.	- Kaplania			il and	(Watlow Type)
				1714	5
	ίt.	Relate	- <u>·</u> ··· }	1	
Ę.	1.5	1.32	\	ы.	
			£., Mar /		
	· · · · · · · · · · · · · · · · · · ·				
58	1944 - 19		were set 1		PART -
ŧ,	REF	CPS A	CEC PART NO.		DESCRIPTION
	NO. 1	PART NO.	FALL MAL	Jusco	
	1:4		16,00- 12- 12-	2	Hose Assembly - Oil Pressure (Selecters required)
	5	501-0537-03	A5403255	1-	32" Lg
	ĺ		AS4040SS		40" Lg
2004		501-0537-07	A\$4050SS	1.	50" Lg
.5	1	501-0537-26	A54060SS		60" Lg
	23	502-1043-01	68139	* 4 1	Elbow, Pipe - Male, 90 DEG
	3		43828A	8	Çlamp, Hose
	4	503-1602	3027706	4	Hose, Rubber
	- 5/	130-3339	3060899	1	Tube, Water
	6	130-3340	3060900	1	Tube, Water '
	7/ -	503-1603	43828A	6	Clamp, Hose o
	8		200517	2 \ 1	Hose, Rubber Tube, Water
	9		8056251		Hose, Rubber
	10		3009805 153409	1 2	Nipple, Pipe - Half
	11		3056256	1 .	Tee, Pipe
	12 13 14		59120	î	Nipple, Pipe
	10	-	5906C	1	Elbow, Pipe - Street - 90*
	is		3056257	i	Elbow, Pipe - Street - 90; (Used on some installations)
	16	Note 1.	000000	2	Heater, Electrical - Coolant (Includes Thermostat, Drain Cock,
	1				Mounting Nuts and may or may not include pressure switch)
					Mounting Nuts and may organay not include pressure switch) With Oil Pressure Switch
		333-0389-06	3053979		Mounting Nuts and may orgmay not include pressure switch) With,Oil Pressure Switch 120 VAC, 4000 Watt
					With, Dil Pressure Switch
;	,	333-0389-06 333-0389-04			With,Oil Pressure Switch 120 VAC, 4000 Watt 480 VAC, 4000 Watt Without Oil Pressure Switch
	y '		3056184		With,Oil Pressure Switch 120 VAC, 4000 Watt 480 VAC, 4000 Watt Without Oil Pressure Switch
		333-0389-04	3056184 3063630		With Oil Pressure Switch 120 VAC, 4000 Watt 480 VAC, 4000 Watt Without Oil Pressure Switch 120 VAC, 4000 Watt 208 VAC, 4000 Watt
	y	333-0389-04 333-0413-09	3056184 3063630 3063473		With Oil Pressure Switch 120 VAC, 4000 Watt 480 VAC, 4000 Watt Without Oil Pressure Switch 120 VAC, 4000 Watt 208 VAC, 4000 Watt 480 VAC, 4000 Watt
	<i>y</i>	333-0389-04 333-0413-09 333-0413-08 333-0413-10	3056184 3063630 3063473 3053631		With Oil Pressure Switch 120 VAC, 4000 Watt 480 VAC, 4000 Watt Without Oil Pressure Switch 120 VAC, 4000 Watt 208 VAC, 4000 Watt 480 VAC, 4000 Watt Attaching Parts for Heater
		333-0389-04 333-0413-09 333-0413-08 333-0413-10 800-0222	3056184 3063630 3063473 3053631 5114	4	With Oil Pressure Switch 120 VAC, 4000 Watt 480 VAC, 4000 Watt Without Oil Pressure Switch 120 VAC, 4000 Watt 208 VAC, 4000 Watt 480 VAC, 4000 Watt 480 VAC, 4000 Watt Attaching Parts for Heater Screw, Cap - Hex Head (1/4-20 × 3/4")
		333-0389-04 333-0413-09 333-0413-08 333-0413-10 800-0222 850-0101	3056184 3063630 3063473 3053631 \$114 \$600	4	With Oil Pressure Switch 120 VAC, 4000 Watt 480 VAC, 4000 Watt Without Oil Pressure Switch 120 VAC, 4000 Watt 208 VAC, 4000 Watt 480 VAC, 4000 Watt 480 VAC, 4000 Watt Attaching Parts for Heater Screw, Cap - Hex Head (1/4-20 × 3/4") Washer Lock - Spring (1/4")
		333-0389-04 333-0413-09 333-0413-08 333-0413-10 800-0222 850-0101 402-0608	3056184 3063630 3063473 3053631 5114 5600 3035083	4	With 0il Pressure Switch 120 VAC, 4000 Watt 480 VAC, 4000 Watt Without 0il Pressure Switch 120 VAC, 4000 Watt 208 VAC, 4000 Watt 480 VAC, 4000 Watt 480 VAC, 4000 Watt Attaching Parts for Heater Screw, Cap - Hex Head (1/4-20 x 3/4") Washer Lock - Spring (1/4") Isolator, Vibration
	*	333-0389-04 333-0413-09 333-0413-08 333-0413-10 800-0222 850-0101 402-0608 .402-0609	3056184 3063630 3063473 3063631 \$114 \$600 3035083 3035084	4 4 4	With 0il Pressure Switch 120 VAC, 4000 Watt 480 VAC, 4000 Watt Without 0il Pressure Switch 120 VAC, 4000 Watt 208 VAC, 4000 Watt 480 VAC, 4000 Watt 480 VAC, 4000 Watt Attaching Parts for Heater Screw, Cap - Hex Head (1/4-20 × 3/4") Washer Lock - Spring (1/4") Isolator, Vibration Isolator, Vibration
	17	333-0389-04 333-0413-09 333-0413-08 333-0413-10 800-0222 850-0101 402-0608 ,402-0609 504-0003	3056184 3063630 3063473 3063631 \$114 \$600 3035083 3035084 \$923E	4 4 2	With 0il Pressure Switch 120 VAC, 4000 Watt 480 VAC, 4000 Watt Without 0il Pressure Switch 120 VAC, 4000 Watt 208 VAC, 4000 Watt 480 VAC, 4000 Watt Attaching Parts for Heater Screw, Cap - Hex Head (1/4-20 × 3/4") Washer Lock - Spring (1/4") Isolator Vibration Isolator Vibration Cock Drain (1/4 PT)
	17 18	333-0389-04 333-0413-09 333-0413-08 333-0413-10 800-0222 850-0101 402-0608 .402-0609	3056184 3063630 3063473 3063631 \$114 \$600 3035083 3035084	4 4 4	With Oil Pressure Switch 120 VAC, 4000 Watt 480 VAC, 4000 Watt Without Oil Pressure Switch 120 VAC, 4000 Watt 208 VAC, 4000 Watt 480 VAC, 4000 Watt 480 VAC, 4000 Watt 480 VAC, 4000 Watt Attaching Parts for Heater Screw, Cap - Hex Head (1/4-20 × 3/4") Washer Lock - Spring (1/4") Isolator, Vibration Isolator, Vibration Cock Drain (1/4 NPT) Bracket Mounting - Heater
		333-0389-04 333-0413-09 333-0413-08 333-0413-10 800-0222 850-0101 402-0608 ,402-0608 ,402-0609 504-0003 130-3189	3056184 3063630 3063473 3053631 5114 5600 3035083 3035084 59238 3056255	4 4 2 2 2	With 0il Pressure Switch 120 VAC, 4000 Watt 480 VAC, 4000 Watt Without 0il Pressure Switch 120 VAC, 4000 Watt 208 VAC, 4000 Watt 480 VAC, 4000 Watt 480 VAC, 4000 Watt Attaching Parts for Heater Screw, Cap - Hex Head (1/4-20 x 3/4") Washer Lock - Spring (1/4") Isolator, Vibration Isolator, Vibration Isolator, Vibration Cock Drain (1/4 NPT) Bracket Mounting - Heater Attaching Parts for Bracket
		333-0389-04 333-0413-09 333-0413-08 333-0413-10 800-0222 850-0101 402-0608 402-0609 504-0003_130-3189 800-0210	3056184 3063630 3063473 3063631 5114 5600 3035083 3035084 59236 3056255 5103D	4 4 2 2 8	With 0il Pressure Switch 120 VAC, 4000 Watt 480 VAC, 4000 Watt Without 0il Pressure Switch 120 VAC, 4000 Watt 208 VAC, 4000 Watt 480 VAC, 4000 Watt 480 VAC, 4000 Watt Attaching Parts for Heater Screw, Cap - Hex Head (1/4-20 × 3/4") Washer Lock - Spring (1/4") Isolator, Vibration Isolator, Vibration Cock Drain (1/4 NPT) Bracket Mounting - Heater Attaching Parts for Bracket Screw, Cap - Hex Head (3/%-16 × 1-1/4)
		333-0389-04 333-0413-09 333-0413-08 333-0413-10 800-0222 850-0101 402-0608 402-0609 504-0003 130-3189 800-0210 850-0103	3056184 3063630 3063473 3063631 5114 5600 3035083 3035084 5923E 3056255 51030 5604	4 4 2 2 8 8	With 0il Pressure Switch 120 VAC, 4000 Watt 480 VAC, 4000 Watt Without 0il Pressure Switch 120 VAC, 4000 Watt 208 VAC, 4000 Watt 480 VAC, 4000 Watt 480 VAC, 4000 Watt Attaching Parts for Heater Screw, Cap - Hex Head (1/4-20 × 3/4") Washer Lock - Spring (1/4") Isolator, Vibration Isolator, Vibration Cock Drain (1/4 NPT) Bracket Mounting - heater Attaching Parts for Bracket Screw, Cap - Hex Head (3/%-16 × 1-1/4) Washer, Lock - Spring (3/8")
	18	333-0389-04 333-0413-09 333-0413-08 333-0413-10 800-0222 850-0101 402-0608 402-0609 504-0003_130-3189 800-0210	3056184 3063630 3063473 3053631 5114 5600 3035083 3035084 5923E 3056255 \$103D \$604 \$254	4 4 2 2 8 8 8	<pre>With 0il Pressure Switch 120 VAC, 4000 Watt 480 VAC, 4000 Watt Without 0il Pressure Switch 120 VAC, 4000 Watt 208 VAC, 4000 Watt 280 VAC, 4000 Watt 480 VAC, 4000 Watt 480 VAC, 4000 Watt Attaching Parts for Heater Screw, Cap - Hex Head (1/4-20 × 3/4") Washer Lock - Spring (1/4") Isolator, Vibration Screw, Cap - Hex Head (1/4-20 × 3/4") Bracket Mounting - Heater Attaching Parts for Bracket Screw, Cap - Hex Head (3%-16 × 1-1/4) Washer, Lock - Spring (3/8") Nut, Hex - Brass (3/8-16)</pre>
	18 19	333-0389-04 333-0413-09 333-0413-08 333-0413-10 800-0222 850-0101 402-0608 402-0609 504-0003 130-3189 800-0210 850-0103	3056184 3063630 3063473 3053631 5114 5600 3035083 3035084 59238 3056255 \$1030 5604 \$254 3063475	4 4 2 2 8 8	<pre>With 01 Pressure Switch 120 VAC, 4000 Watt 480 VAC, 4000 Watt Without 01 Pressure Switch 120 VAC, 4000 Watt 208 VAC, 4000 Watt 480 VAC, 4000 Watt 480 VAC, 4000 Watt 480 VAC, 4000 Watt 480 VAC, 4000 Watt Attaching Parts for Heater Screw, Cap - Hex Head (1/4-20 x 3/4") Washer Lock - Spring (1/4") Isolator, Vibration Isolator, Vibration Isolator, Vibration Cock Drain (1/4 NPT) Bracket Mounting - Heater Attaching Parts for Bracket Screw, Cap - Hex Head (3/8=16 x 1-1/4) Washer, Lock - Spring (3/8") Nut, Hex - Brass (3/8=16) Switch, Control - Heater {Ircludes Contactor, Ground Lug and Box}</pre>
	18 19 20	333-0389-04 333-0413-09 333-0413-08 333-0413-10 800-0222 650-0101 402-0608 402-0609 504-0003 130-3189 800-0210 850-0103 871-0028	3056184 3063630 3063473 3053631 5114 5600 3035083 3035084 5923E 3056255 \$103D \$604 \$254	4 4 2 2 8 8 8	<pre>With 01 Pressure Switch 120 VAC, 4000 Watt 480 VAC, 4000 Watt Without 01 Pressure Switch 120 VAC, 4000 Watt 208 VAC, 4000 Watt 480 VAC, 4000 Watt 480 VAC, 4000 Watt Attaching Parts for Heater Screw, Cap - Hex Head (1/4-20 x 3/4") Washer Lock - Spring (1/4") Isolator, Vibration Isolator, Vibration Cock Drain (1/4 NPT) Bracket Mounting - Heater Attaching Parts for Bracket Screw, Cap - Hex Head (3/8-16 x 1-1/4) Washer, Lock - Spring (3/8") Nut, Hex - Brass (3/8-16) Switch, Control - Heater [Iroludes Contactor, Ground Lug and Box] Contactor (50 AMP, 3 Pole, SPST, 120 VAC Cuil}</pre>
	18 19 20 21	333-0389-04 333-0413-09 333-0413-08 333-0413-10 800-0222 850-0101 402-0608 402-0609 504-0003 130-3189 800-0210 850-0103 871-0028	3056184 3063630 3063473 3053631 5114 5600 3035083 3035084 59238 3056255 \$1030 5604 \$254 3063475	4 4 2 2 8 8 8 8 8 8 8 8 2 1	<pre>With 0il Pressure Switch 120 VAC, 4000 Watt 480 VAC, 4000 Watt Without 0il Pressure Switch 120 VAC, 4000 Watt 208 VAC, 4000 Watt 480 VAC, 4000 Watt 480 VAC, 4000 Watt Attaching Parts for Heater Screw, Cap - Hex Head (1/4-20 x 3/4") Washer Lock - Spring (1/4") Isolator, Vibration Isolator, Vibration Cock Drain (1/4 NPT) Brakket Mounting - Heater Attaching Parts for Bracket Screw, Cap - Hex Head (3/8-16 x 1-1/4) Washer, Lock - Spring (3/8") Nut, Hex - Brass (3/8-18) Switch, Control - Heater {Ircludes Contactor, Ground Lug and Box} Contactor (50 AMP, 3 Pole, SPST, 120 VAC Cuil}</pre>
	18 19 20 21 22	333-0389-04 333-0413-09 333-0413-08 333-0413-10 800-0222 650-0101 402-0608 402-0609 504-0003 130-3189 800-0210 850-0103 871-0028	3056184 3063630 3063473 3053631 5114 5600 3035083 3035084 5923E 3056255 51030 5604 5254 3063475 3063477	4 4 2 2 8 8 8 8 8 8 2 1	<pre>With 0il Pressure Switch 120 VAC, 4000 Watt 480 VAC, 4000 Watt Without 0il Pressure Switch 120 VAC, 4000 Watt 208 VAC, 4000 Watt 208 VAC, 4000 Watt 480 VAC, 4000 Watt Attaching Parts for Heater Screw, Cap - Hex Head (1/4-20 x 3/4") Washer Lock - Spring (1/4") Isolator Vibration Isolator Vibration Cock Drain (1/4 NPT) Bracket Mounting - heater Attaching Parts for Bracket Screw, Cap - Hex Head (3/8-16 x 1-1/4) Washer, Lock - Spring (3/8") Nut, Hex - Brass (3/8-16) Switch, Control - Heater (Includes Contactor, Ground Lug and Box) Contactor (50 AMP, 3 Pole, SPST, 120 VAC Cuil) Lug, Ground Box, Electrical</pre>
	18 19 20 21	333-0389-04 333-0413-09 333-0413-08 333-0413-10 800-0222 850-0101 402-0608 402-0609 504-0003 130-3189 800-0210 850-0103 871-0028	3056184 3063630 3063473 3053631 5114 5600 3035083 3035084 59238 3056255 \$1030 5604 \$254 3063475	4 4 2 2 8 8 8 8 2 1 1	<pre>With 0il Pressure Switch 120 VAC, 4000 Watt 480 VAC, 4000 Watt Without 0il Pressure Switch 120 VAC, 4000 Watt 208 VAC, 4000 Watt 480 VAC, 4000 Watt 480 VAC, 4000 Watt 480 VAC, 4000 Watt Attaching Parts for Heater Screw, Cap - Hex Head (1/4-20 x 3/4") Washer Lock - Spring (1/4") Isolator, Vibration Isolator, Vibration Isolator, Vibration Cock Drain (1/4 NPT) Bracket Mounting - Heater Attaching Parts for Bracket Screw, Cap - Hex Head (3/8-16 x 1-1/4) Washer, Lock - Spring (3/8") Nut, Hex - Brass (3/8-16) Switch, Control - Heater (Iroludes Contactor, Ground Lug and Box) Contactor (50 AMP, 3 Pole, SPST, 120 VAC Cont) Lug, Ground Box, Electrical Bracket, Mounting - Box</pre>
	18 19 20 21 22	333-0389-04 333-0413-09 333-0413-08 333-0413-10 800-0222 850-0101 402-0608 402-0609 504-0003 130-3189 800-0210 850-0103 871-0028	3056184 3063630 3063473 3053631 5114 5600 3035083 3035084 5923E 3056255 51030 5604 5254 3063475 3063477	4 4 2 2 8 8 8 8 2 1 1	<pre>With 0il Pressure Switch 120 VAC, 4000 Watt 480 VAC, 4000 Watt Without 0il Pressure Switch 120 VAC, 4000 Watt 208 VAC, 4000 Watt 208 VAC, 4000 Watt 480 VAC, 4000 Watt 480 VAC, 4000 Watt Attaching Parts for Heater Screw, Cap - Hex Head (1/4-20 × 3/4") Washer Lock - Spring (1/4") Isolator Vibration Solator Vibration Cock Drain (1/4 %PT) Bratket Mounting - Heater Attaching Parts for Bracket Screw, Cap - Hex Head (3/%=16 × 1-1/4) Washer, Lock - Spring (3/8") Nut, Hex - Brass (3/8-16) Switch, Control - Heater (Includes Contactor, Ground Lug and Box) Contactor (50 AMP, 3 Pole, SPST, 120 VAC Cuil) Lug, Ground Box, Electrical Bracket, Mounting - Box Attaching Parts for Brackets Screw, Cap - Hex Head (1/4-20 × 3/4")</pre>
	18 19 20 21 22	333-0389-04 333-0413-09 333-0413-08 333-0413-10 800-0222 850-0101 402-0608 402-0609 504-0003 130-3189 800-0210 850-0103 871-0028 Note 2 Note 3.	3056184 3063630 3063473 3053631 5114 5600 3035083 3035084 59238 3056255 51030 5604 5254 3068475 3063477 3063476	4 4 2 2 8 8 8 8 8 8 2 1 1 2	<pre>With 0il Pressure Switch 120 VAC, 4000 Watt 480 VAC, 4000 Watt Without 0il Pressure Switch 120 VAC, 4000 Watt 208 VAC, 4000 Watt 208 VAC, 4000 Watt 480 VAC, 4000 Watt 480 VAC, 4000 Watt Attaching Parts for Heater Screw, Cap - Hex Head (1/4-20 × 3/4") Washer Lock - Spring (1/4") Isolator Vibration Solator Vibration Cock Drain (1/4 %PT) Bratket Mounting - Heater Attaching Parts for Bracket Screw, Cap - Hex Head (3/%=16 × 1-1/4) Washer, Lock - Spring (3/8") Nut, Hex - Brass (3/8-16) Switch, Control - Heater (Includes Contactor, Ground Lug and Box) Contactor (50 AMP, 3 Pole, SPST, 120 VAC Cuil) Lug, Ground Box, Electrical Bracket, Mounting - Box Attaching Parts for Brackets Screw, Cap - Hex Head (1/4-20 × 3/4")</pre>
	18 19 20 21 22	333-0389-04 333-0413-09 333-0413-08 333-0413-10 800-0222 850-0101 402-0608 402-0609 504-0003 130-3189 800-0210 850-0103 871-0028 Note 2 Note 2 Note 3. 800-0222	3056184 3063630 3063473 3053631 \$114 \$600 3035083 3035084 \$9236 3056255 \$103D \$604 \$254 3063475 3063475 3063476 \$114'	4 4 2 2 8 8 8 8 2 1 1 2 8 8 8 2 1 1 2 8 8 8 8	<pre>With 0il Pressure Switch 120 VAC, 4000 Watt 480 VAC, 4000 Watt Without 0il Pressure Switch 120 VAC, 4000 Watt 208 VAC, 4000 Watt 480 VAC, 4000 Watt 480 VAC, 4000 Watt 480 VAC, 4000 Watt Attaching Parts for Heater Screw, Cap - Hex Head (1/4-20 × 3/4") Washer Lock - Spring (1/4") Isolator, Vibration Cock Drain (1/4 NPT) Braket Mounting - Heater Attaching Parts for Bracket Screw, Cap - Hex Head (3/8-15 × 1-1/4) Washer, Lock - Spring (3/8") Nut, Hex - Brass (3/8-18) Switch, Control - Heater (Ircludes Contactor, Ground Lug and Box) Contactor (50 AMP, 3 Pole, SPST, 120 VAC Coil) Lug, Ground Box, Electrical Bracket, Mounting - Box Attaching Parts for Brackets</pre>

.

r,

ź


Div. of Watlow Electric 2. Watlow No. 191-16-6-1 3 Watlow No. 303-62-29-29

١

4

(ii ÷ Ŧ

à

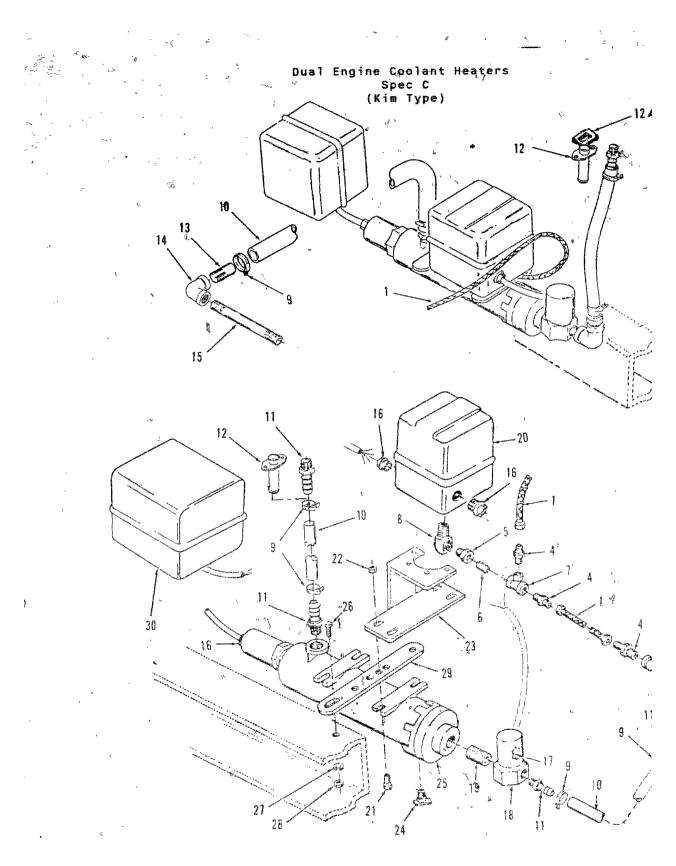

Dual Engine Coolant Heaters Spec C (Kim Type)

لتتني

34

. 1 🦅 🗄

aret or e.

ċ

	- ,	-	· _		
REF NO.	CPS PART NO.	CEC QTY PART NO. USED	PART DESCRIPTION		
1	501-0199	2	Line, Fuel - Flexible	•	
2	505-0037	ĩ	Elbow - 90 Degree (1/8 NPT)	· 3•	÷
ີ່ 3		1	Nipple, Pipe - Close (1/8 NPT x 1-1/2")	L.	
	505-0104	1	Adapter, Hex - Pipe to Line		
. 4	502-0193	4			
- 5	505-0007	* 2	Bushing, Reducer - Hex (1/4 NPT x 1/8 NPT)		
6	505-0098		Nipple, Pipe - Close (1/8 NPT x 3/4")		
7	505-0059	1	Tee, Pipe (1/8 NPT)	° Ar∈	,
ູ8	502-0054	2	Elbow, Pipe - Street, 90 Degree (1/8 NPT)	S. And Star	
<u>^</u> 9	503-0398	8	Clamp, Hose		4
. 10	503-0249	18"4."" AB	Hose, Rubber - Bulk (1"ID x 1-3/8"0D) [Sold in	MUITI FOOT	
			lengths, order length as required	· 8	\$
11	505-0759	7	Adapter, Hose to Pipe		in.
12	130-3200	3178301 2	Adapter, Hose with Flange (Used on some applic	:ations) 🐙	AK *
12A		3177556 2 2	Seal - Rectangular Ring	•	
13	505-0324	- 1	Nupple, Pipe - Half $(3/4 \text{ NPT} \times 2^{"})$		
14	505-0132	** 1	Elbow, Pipe - Street, 90 Degree (3/4 NPT)		
15	505-0438	1	Nipple, Pipe (3/4 NPT x 8")		
16	331-0027	12	Clamp, Cable		•
17	COT DOT!		Terminals	6 <u>}</u>	
÷ 1	323-0957	- 4 '	Nut, Wire	1.224	
	332-0014	. ~ 8	Lug, Terminsk - Ring (#10)	۲ <u>۲</u> , ۰-	
	332-0149	5 8	Lug, Terminal - Ring (#8)		
10	332-0149		Switch, Thermostatic		
18	200 0400	\	100° - 120° Fahrenheit		
	309-0490	` 2			
• •	309-0253	2	120° - 140° Fahrenheit		
19	505-0004	2	Nipple, Pipe - Close (3/4 NPT x 1-1/2)		
20	309-0271	, 2	Switch, Pressure - 011		
			Attaching Parts for Switch		
a	812-0079	8	<pre>Screw, Machine - Round Head (#8-32 x 1/2")</pre>	,	
	854-0007	. 8 ;	'Washer, Lock - ET (#8)		
21	800-0008	" 4 >	Screw, Cap - Hex Head (1/4-20 x 1-1/4*)		
22	870-0212	. 4	Nút Self-locking - Hex (1/4-20)		
23	333-0224	2	Bracket Support - Pressure Switch		
24	504-0003	. 2	Cock, Drain		
25			'Heater, Electrical		
	333-0143	Å _≤ 2	4000 Watt, 208 VAC - 1 Phase		
	333-0164	¥ 2	4000 Watt, 208 VAC - 3 Phase 🧳		فم
	333-0138	2 ' '	4000 Watt, 240 VAC - 1 Phase		
	333-0190	2 .	' 4000 Watt, 240 VAC - 3 Pnase	÷ -	195. 6
	333-0150	2 **	4000 Watt, 277 VAC ~ 1 Phase		'e *** 3
	333-0183		4000 Watt, 380 VAC ~ 1 Phase		No. State
,	333-0174	2	"4000 Wart, 380 VAC - 3 Phase		61 (1) BARTAN 1.
	333-0161	- 2	4000 Watt, 480 VAC - 1 Phase	F	· ·
	333-0144	. 2	4000 Watt / 480' VAC - 31 Phase	· · · · · · · · · · · · · · · · · · ·	
26 1	821-0030		Screw, Self-locking - Hex Head (5/16-18 x 1-1)	/4") 🗽	
27	850-0045	Ř.	Washer, Lock - Spring (5/16")		
28	862-0015	* R/.	Nut, Hex (5/16-18)		
29	130-1191	· 32 2 .	Bracket, Mounting	•	
30	100 1191	1 N N	Contactor		
30	307-1460	いそう	230 VAC. 3 Pole		
	307-1164	2	460 VAC, 3 Pole		
~	001 1104		The true of the second se		4
		-7		L .	

6.8

GENERATOR SECTION

Table of Contents

 Generator Size Table SPEC A & B & D
 32

 Generator Size Table SPEC C
 33

 Generators SAEO/SAE18
 35

 Generator Stator Section [Frame Size 5]
 37

 Generator Stator Section [Frame Size 7]
 39

 Generator Rotor Section [Frame Size 6, SAEO/SAE18]
 41

 Generator Rotor Section [Frame Size 7, SAEO/SAE18]
 43

 Permanent Magnet Exciter
 44

Ŷ

Ř

Low Range Generators

4

i i

		:: :: : : :					1								
	<u>````</u>	·	T						AT 60				50 HER		
` •	OPTION CODE	FRAME	ADPTR SAE	DISK SAE	LEAD	W RATING	380 190	416 208	440 220	460 230	480 240	380 190	400 200	416 208	
						4	, ,								
•	MG8320	6 AS	00	18	6	Standby Prime Pwr	610 575	640 600	660 625	680 640	700 650	540 500	550 515	570 525	
•	MG8321	6 A	0	`18 `&	6	Standby Prime	670 625	700 650	740 675	770 710	800 730	610 555	630 580	650 600	
	MG8322	6 B	0	18	6	Standby Prime Pwr	750 680	800 730	830 770	860 800	900 820	680 620	700 640	720 √660	-
	MG8323	6 C		,18	6 100	Standøy ° Prime Pwr	880 820-	920 850	960 880	1000 920	1050 950	800 730	825 750	840 765	
\$	MG8324	_ 6 D	ο.	18	6	Standby Prime Pwr	950 880	1000 950	1050 990	1100 1020	1150 1050	875 800	900 825	920 850	
	MG8326	6 A	0	18	12	Standby Prime Pwg	670 625	700 650	740 _675	*770 710	800 730	610. 555 v#	630 580	650 600	
,	MG8327	68	0	18	12	Standby Prime Pwr	750 680	800 730	830 770	1860 800	900 820	680 620	700 640	720 660	
	MG8328 -	° 6 C	0	18	12 12	Standby Prime Pwr	880 820	920 850	960 880	1000 920	1050 950	800 [°] 730	825 750	840 765	
	MG8329	6 D	0	18	12	Standby Prime	950 880	1000 950	1050 990	1100 1020	:150 1050	875 800	900 825	920 850	
	MG8330	7 A	0	18	e	Standby Prime Pwr	1120 1030	1175 1075	120Č 111C	1225 11,25	1250 1150	1000 920	1050 950	1075 975	
	MG8331	78	O	18	6	Standby Prime	1300 1200	1350 1250 -	1420 1300	1475 1350	1500 1975	_120 1030	116C 1050	1180 1075	
	MG8332	7 C	0	18	6	Standby Prime Pwr	1660 1525	1700 1600	1875 1650	1850 1725	1875 1800	1450 1350	1525 1400	1600 1450	
1		L.,	·L	L	L	I			L	£.1	L	L	L	L	ł

Medium Range Generators

esi

,*

OPT TON	FRAME	ADPTR	DISK	LEAD	W RATING	VOLTAGE AT 60 HERTZ	AT 50 HERTZ
CODE	SIZE	SAE	SAE			4160/2400	3300/1905
MG8333	7 A	δ	18	6	Standby Prime Pwr	540 500	430 400
MG8334	7 B	0	,18	6	Standby Prime Pwr	810 750 +	650 600
MG8335	7 C	0	18	6	Standby Prime	1060 1000	860 800
MG8336	7 D	0	18	12	Standby Prime Pwr	1620 <i>* • •</i> 1500	1300 1200

GENERATOR TABLE SPEC C

化 •

 \hat{n}

107

ĩ

 $\mathbb{R}_{\mathbf{A}}$


ow Range Generators L

								÷#						
								OLTAGE			1		50 HER	Z
	OPTION CODE	FRAME SIZE	ADPTR SAE	DISK SAE	LEAD	kw RATING	380 190	416 208	440 220	460	480	380	400	416
	· CODE	5125	SAE	JAL			190	208	220	230	240	190	200	208
	9MG0020	6 AS",	0	18	6	Standby	610	640	66d	680	200	540	550	570
			1			Prime Pwr	575	600	625	640	650	500	515	525
								.						
	9MQ0021	6 A	0	18	6	Standby	670	700	740	.770	800	610	630	650
						Prime	625	650	675	710	730	\$55	580	600
	9MG0022	68	0	18 -	6	Standby	750	800	830	860	- 900	680	700	720
	31100022			20 0	U U	Prime Pwr	680	730	770	800	900 820	620	640	660
							000	150	110	800	020	020	040	060
	9MG0023	- 6 C	0	18	6	Standby	880	920	960	1000	1050	800	825	840
			1			Prime Pwr	820	850	880	920	950	730	750	765
	9MG0024	6 D	. 0	18	6	Standby	950	1000	1050	1100	1150	875	900	920
		~				Prime Pwr	880	950	990	1020	1050	800	825	850
•	9MG00,26	6 A,,	0	18	12	Standby	670	700	740	770	800	610	630	650
~	311000/20		ľ	10	**	Paime Pwr	625	650	675	710	730	555	580	600
							020		_0,0			000	000	
	9MQ0027	6 B	0	18	12	Standby	750	008		v [∿] 860	900	680	700	720
i						Prime Pwr	680	730	770,	5 800	820	620	640	660
	9MG0028	6,C	0	18	12	Standby	880	920	960	1000	1050	800	825	840
	U,			-		Prime Pwr	-820	/ 850	880	920	950	730	750	765
	-9MG0029	6 D	0	18	12	Standby	-950	1000	1050	1100	1150	875	900	920
1	100020		l , ĭ	10		Priné	°880	, 950	990	1020	1050	800	825	920
					~			4				<u>, , , , , , , , , , , , , , , , , , , </u>	÷	
	9MG0030	7 4	0	18	εŤ	Standby	1120	1175	12,00	1203	1250	1000	1050	10774
		5		· ·		Prime Pwr	1030-	1075	1110	1125	1:50	920	950	975
	9MG0031	7 B	0	18	6	Standby Prime	1300	1350	1420	14"5	1500	1130	1160	1180
ł					•		1200	1%10/50	1300	1,350	1375	1030	1050	1075
	9MG0032	7 C	0	18	6	Standby	1660	1700	1775	1850	1875	1450	1525	1600
					-	Prime Pwr	1525	1600	1650	1725	1800	1350	1400	1450
				ł			, ····			1				1
		the second se											Concerns a manufacture of	*****

-13

Medium Range Generators

OPTION CODE	FRAME SIZE	ADPTR SAE	DISK SAE	LEAD	KW RATING	VOLTAGE AT 60 HER12 4160/2450	3300/1905
9MG8333	7 A	0	18	6	Standby Prime Pwr	540 500	430 400
9MG8334	78	٥	<u>±</u> 8	6	Standby Prime Pwr	810 755	650 600
9MG8335	7 C	0	18	6	Standby Prime	1080 1000	860 800
9MG8336	7 D	0	18	12	Standby Prime Pwgg-	1520 1500	1300 1200

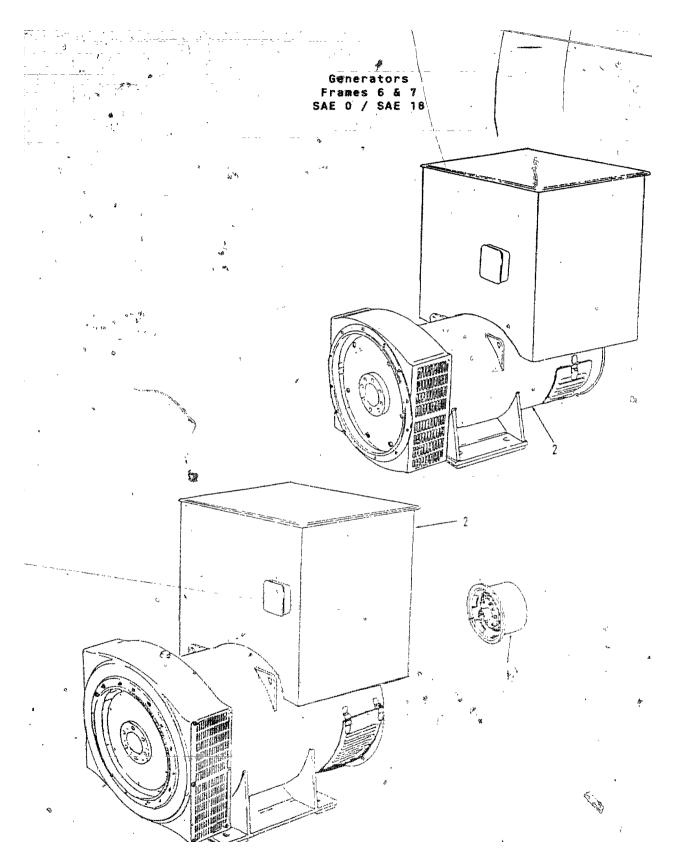

Generators Frames 6 & 7 SAE 0 / SAE 18

<u>(</u>**R**)

1

Ð

۲

÷

<u>ې</u>


٤,

;;

REF NO.	CPS PART NO.	CEC PART NO.	OTY USED	PART DESCRIPTION
1			1 -	Module, Permanent Magnet Exciter (See Separate Page for Components) Attaching Parts For Module
	249-0298		4	Screw, Cap - Hex Head (M8 x 16mm)
	249-0218	40 Ha i	4	<pre>washer, Lock (M8)</pre>
	249-0315		4	Clamp, Remaining
2	Note 1	-		Generator [Includes PMG Exciter)
s. 6			-2	(See Separate Pages for Stator and Rotor Components)
х.	1	<u>.</u>		Attaching Parts Generator To Skid Frame 6 and 7
	800-0242	S161	۵.	Screw, Cap - Hex Head (1-8 x 3-1/2")
	850-0109		44	" Washer, Lock - Spring (1")
	526-0360		8 -	Washer, Flat (1')
	370-4045	3025064	4	Spacer (frame 6 only)
۴	370-4046-01	125356	4	Sh איז א
	370-4046-02	125357	4	Shim *
	370-4046-03	125358	4	Shum
	862-0037	S222	4	Nut. Hex (1-8)
				Attaching Parts Adapter to Flywheel Housing
	800-0215	S113	2	Screw, Cap - Hex Head (1/2-13 > 1+1/2))
2	800-0236	S106	14	* Screw, Cap - Hek Head (1/2-13 × 1-3≮4))
	850-0165	\$608	16 .	Washer Lock - Spring (1/21)
				Frame 7
	800~0236	\$10E	12	Screw Gap - Hex Head (1/2-13 x 1-3 4)
	850-0105	S608	12	Washer Lock - Spring (1/21)
	800-0242	S1€1	4	Screw Cap - Head (1 08 x 3-1,1
	850-0109	S613	4	Washer 'bok - Spring (1 08')
				Attaching Parts Drive Disc to Flywheel Frame 6
	815-6719	206332	£	Sonew Cas - 12 Point Oniver 5 8-11 + 1 11471
	126-0362	200861	£	washer fist 5 f
				Frame 7
	815-0725	206391	ų	Conew Car (12 Finne Christen Nue 12 Alter 11

Note 1: For replacement Generator please supply the jubic etc. Gen Set installate who denerated nameplate data

.

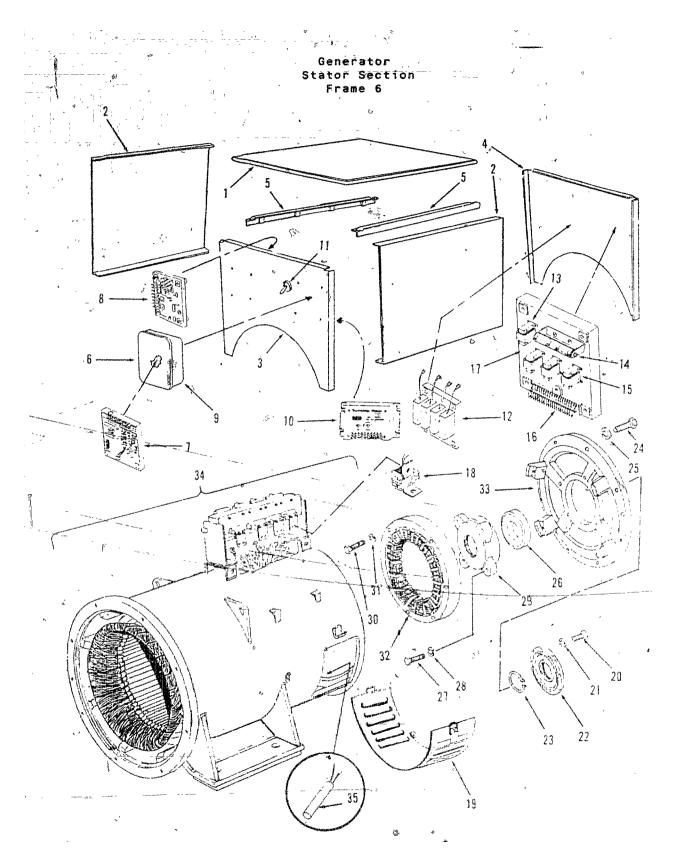

Generator Stator Section Frame 6

+ -

''<u>'</u>4

J.

ì

ē.

......


	15	'		· •	- 5 1
REI	F CPS	CEC	OTY	PART 3	, fr
NO		PART NO.	ÜSED	DESCRIPTION	· .
	· _			*	
ਾ 1			1	Lid	
· 2			2	Panel, Side	3
3			1	Panel, Front	
4			1	Panel, Rear	
5			2,	Bracket, Angle	
6	249-0425		2	Lid	
			~	Attaching Parts	۲.
	249-0304	E.	8	Screw, Captive	
7		1		Regulator, Voltage	
	305-0770	ť	1	Standard S Dhana Samaing Madula)	
	305-0778	1	1 1	3 Phase (Used with 3 Phase Sensing Module)	
	305-0803		T	Manual Attaching Parts	
	1 240-0208		4	Pillar, Threaded	
	249-0398		4	Module, 3 Phase Sensing	
8	300-3278		1	Attaching Parts	
	249-0398		4	Pillar, Threaded	
9			2	Box	
· 10				Module, Overvoltage	
10	303-0022 4		Į	Attaching Parts	
	249-0295		4	Screw, Cap - Hex Head (M5 x 35mm)	
	249-0288		4	Washer, Plastic (M5)	
	249-0287		4	Nut, Hex - Nylon (M5)	
11			1	Switch	
12			1	RFI Suppressor Assy	0
13			1	Choke -	
14			ī	Resistor, Adjustable	
15			3	Transformer, Voltage Sensing	
16			3	Block, Terminal	¢
17			1	Panel, Terminal Block Mounting	
18			3	Transformer, Current	
19			1	Grille, Inlet - Air	
20			4	Screw, Cap - Hex Head (M10 × 30mm)	
21			4	Washer, Lock - Spring (M10)	L.
22			1	Cap, Bearing - Outer	
23			1	Circlipt	an analasi anagana na aya kasasa masila 'ka-
24			8	Scnew, Cap - Hex Head (M12 x 40mm)	
25			8	- Washer, Lock - Spring (M12)	
26		. مەرسىيەيەر بەر يە مەيكىيە - « مەيكىيە - « مەيكىيە»	1	Bearing, Ball	
			4	Screw, Cap - Hex Head (M10 x 50mm)	
28			4	Washer, Lock - Spring (M10)	
29	249-0509		1	Cap, Bearing - Inner	
° 30	249-0445		6	Screw, Cap - Hex Head (M6 x 85mm)	
31	249-0212		6	Washer, Lock -@Spring (M6)	
, 32	249-0470		1	Stator, Exciter	
33	3 249-0527		1	Bracket, End	
34	Note 1		1	Stator, Generator (Includes Terminal Studs a	ind Links)
				Attaching Parts Stator to Adapter	
	249-0204		8	Screw, Cap - Hex Head (M12 x 40mm)	
	249-0205		8	Washer, Lock - Spring (M12)	
35	5			Heater, Electrical - Replacement	
-	249-0621		1	70 Watt, 120 VAC *	
	249-0622		1	70 Watt, 240 VAC	
				x	

Notes: 1. Items not stocked, replacement available only on special order with long lead time likely.

e,

, ÷

<u>،</u>

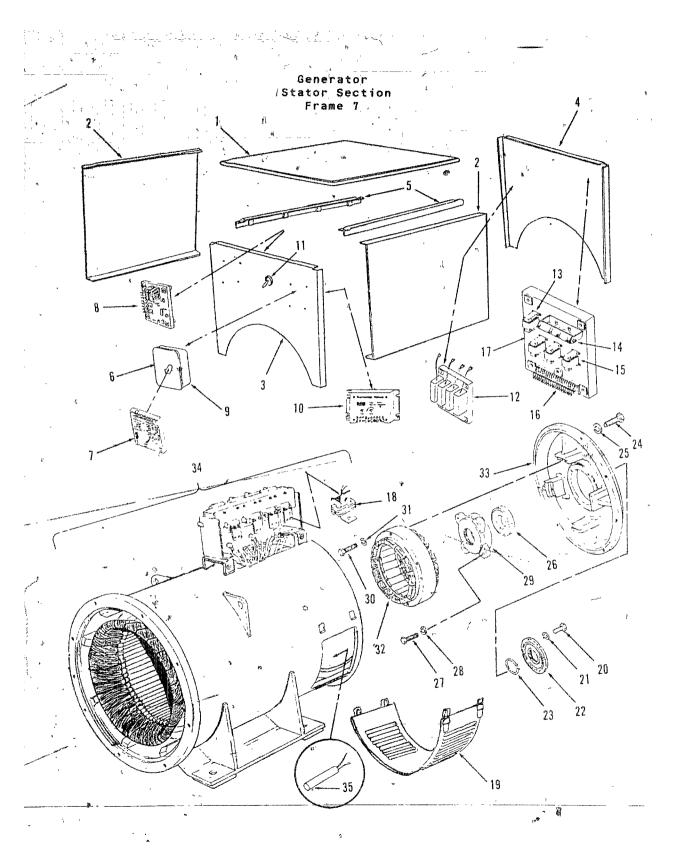

Generator Stator Section Frame 7

<u>ا_</u> ۲۰


				Frame 7
Â,		r ,	-	
REF NO.	CPS PART NO.	CEC PART NO.	OTY USED	PART DESCRIPTION
1	Note 1		1	Lid
2	Note 1		2	Panel, Side
3	Note 1		ĩ	Panel, Front
4	Note 1	-	ĩ	Panel, Rear
5	Note 1		2	Bracket, Angle
6	249-0425		2	Lid
	• • • • • • • • • • • • • • • • • • • •		1	Attaching Parts
	249-0304		8	Screw, Captive
7				Regulator, Voltage
	305-0770		1	Standard
	305-0778	r	1	3 Phase (Used with 3 Phase Sensing Module)
	305-0803		1	Manual
				Attaching Parts
	249-0398		4	Pillar, Threaded
8	300-3278		1	Module, 3 Phase Sensing
		1		Attaching Parts 🦼
	249-0398	`.	4	Pillar, Threaded
9	249-0395		2	Box
10	305-0822	-	1	Module, Overvoltage
				Attaching Parts
	249-0295	5	4	ø Screw, Cap – Hex Head (M5 x 35mm)
	249-0288	ę	4	Wasner, Plastic (15)
	249-0287	1	4 c-,	Nut, Hex - Nylon (M5)
11	249-0449		1	Switch .
12	249-0569		1,	RFI Suppressor Assy
13	302-1851		1 .	Choke '
. 14	354-0031		·· 1 ··	* Resistor, Adjustable
15	000 1004		2	Transformer Voltage Sensing (Used on Standard Voltage Generators)
	302+1884		3 3	Isolation (Used on Medium Voltage Generators)
16	302-1876		3	Block, Terminal
17	249-0289 249-0424		1	Panel, Terminal Block Mounting
18	249-0424	<u>،</u> ۰	1	Transformer, Current
10	302-1852-0	1 5	3	Used on Standard Voltage Generators
	302-1852-0		3	Jsed on Medium Voltage Generators
19	249-0583			Grille, "Inlet - Air
20	249-0243	THE REPORT AND ADDRESS	4	Screw, Cap - Hex Head (M10 x 30mm) -
21	249-0202	. satata	4	Washer, Lock - Spring (M10)
22	249-0510		1	Cap, Bearing - Outer
23	249-0447	•	° 1	Circlip
24	249-0204	light	8	Screw, Cap - Hex Head (M12 × 40mm)
25	249-0205		8	Washer, Lock - Spring (M12)
26	249-0448		1	Bearing, Ball
27	249-0245		4	Screw, Cap - Hex Head (M10 x 50mm)
28	249-0202	۰ <u>۴</u> ۰	4	Washer, Lock - Spring (M10)
29	249-0509		1	Cap, Bearing - Inner
30	249-0438	1	6	Screw, Cap - Hex Head (M6 × 85mm)
31	249-0218		6	Washer, Lock - Spring (M6)
32	249-0470		1	Stator, Exciter
33	249-0471		1	Bracket, End
34	Note 1		1	Stator, Generator (Includes Terminal Studs and Links)
		,	·	Attaching Parts Stator to Adapter
	249-0204		8	Screw, Cap - Hex Head (M12 x 40mm)
	249-0205		× 8	Washer, Lock - Spring (M12)
.35			•	Heater, Electrical - <u>Replacement</u>
	249-0621		1	70 Watt, 120 VAC
	249-0622		1	70 Watt, 240 VAC
				*

Notes: 1. Item not stocked, replacement may be available only by special order with a long lead time, likely

ð

, V

. 😨

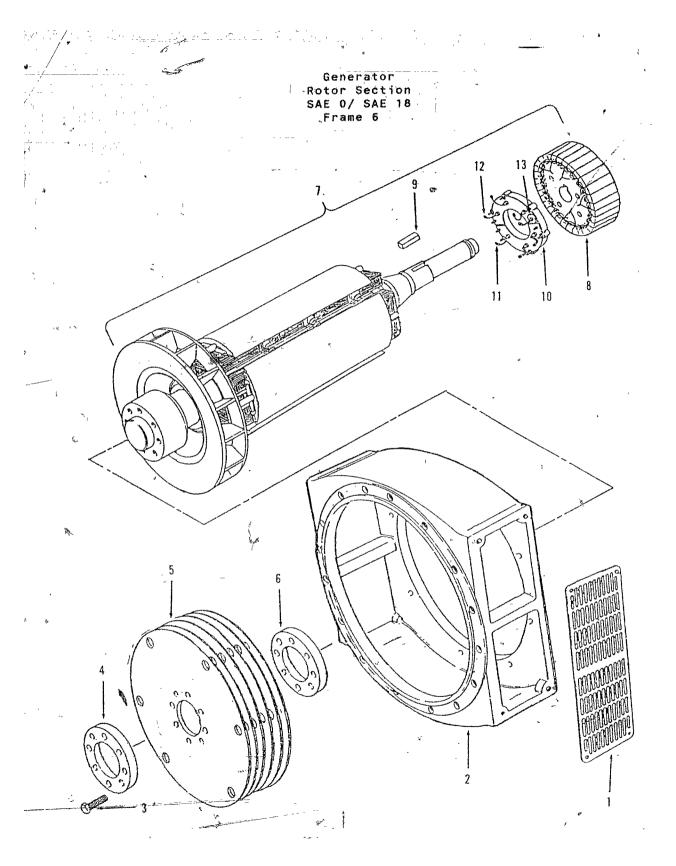

.25 REF CPS CEC . OIY N. PART PART NO. PART NO. USED DESCRIPTION NO. 1 249-0534 2 Screen, Air - Adapter Attaching Parts Screw, Gap - Hex Nead (M5 x 12mm) 249 0294 12 Washer, Lock - Spring (MS) Washer, Plat (MS) "Adapter, Generator SA& O 249-0307 249-0365 12 12 249-0533 11 Screw Cap - Hex Head (M20 x 75mm) 3 249 0437 8 Plate, Pressure Disc, Drive SAE 18 249 0230 4 1 #49 0276 5 后手 249 0217 Spacer 6 7 Note 1 1 Rotor, Generator (Includes Exciter, Key, and Rectifier Assy) 249-0512 н 1 Rotor, Exciter (Does Not Include Rectifier Assy) 9 249-0620 1 Key Rectifier Assy (Includes Diodes) 10 249 0237 1 Diode, Forward Polarity Diode, Reverse Polarity 11 249 0239 3 12 249 0238 3 13 249 0240 1 Var ister

Rotor, Section SAE 0/25AE 18 Ename 18

. (

Notes

×


∦-:, ₫

> 1 Item not stocked, replacement available only on special order with long lead time likely.

> > ¢

) ¹

ŵ

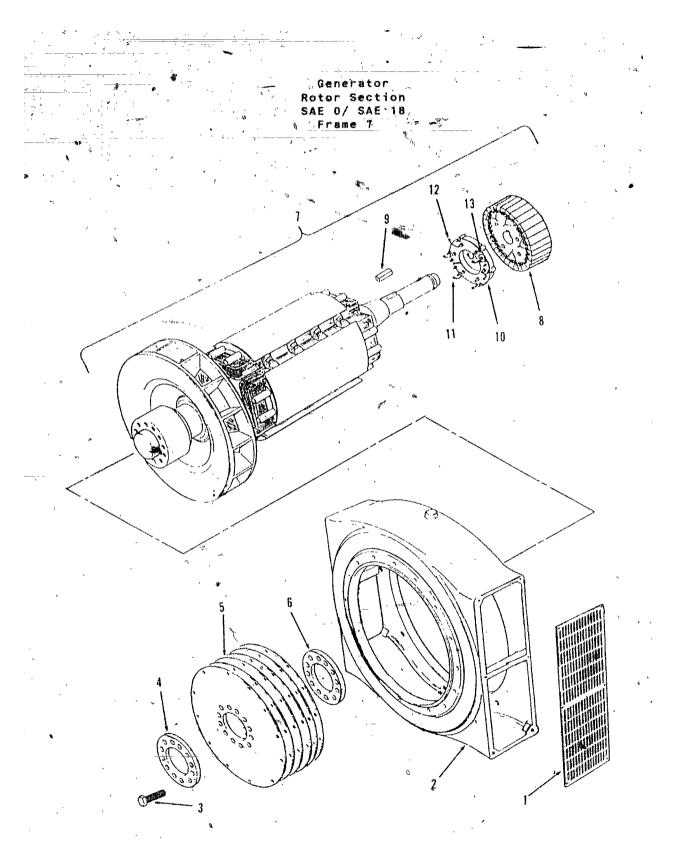

Generator Rotor Section SAE 0/ SAE 18 Frame 7

REF	CPS PART NO.	CEG PART NO.	QTY USED	PART DESCRIPTION	
1	249-0482	· •	- 2	Screen, Air - Adapter	۰ په د د د د د د د د د د د د د د د د د د
•				Attaching Parts	•
ι	249-0294	ê.	12	Screw, Cap - Hex Head (M5 x 12mm)	
r.	249-0307	· · ·	12	Washer, Lock - Spring (M5)	
	249-0365		12	Washer, Flat (M5)	2
2	249-0481		- i	Adapter, "Generator SAE 0	÷
3.	249-0444		8	Screw, Cap - Hex Head (M24 x 75mm)	· .
4	249-0467		1	Plate, Pressure	
5	249-0469		6	Disc, Drive SAE 18	- ,3
6	249-0468		1	Spacer	· · · ·
7	Note 14	κ ₁	1	Rotor, Generator (Includes Exciter, Key, and	Rectifier Assv)
8	249-0503		1	Rotor, Exciter (Does Not Include Rectifier As	
9 '	249-0620		1	Key	
10	249-0237		1	Rectifier Assy (Includes Diodes)	
11	249-0239		3	Diode, Forward Polarity	- s-
12	249-0238		3	Diode, Reverse Polarity	n.
13	249-0566		1	Varister	*

Notes 1 Item not stocked, replacement available only on special order with long lead time likely

62

đ

۰,

擨

Exciter Magnet

00


REF	CPP .	CEC	QTY	PART
NO.	PART NO.	PART NO.	ÛSED	DESCRIPTION
1	249-0497		1	Cover \min
		£.	*	Attaching Parts For Cover
•	249-0294		3	Screw, Cap - Hex Head (M5 x 12mm)
	249-0307		з	Washer, Lock (MS)
2	249-0423		3	Billar, Threaded
3	249-0426		1	Stator, Exciter with Frame
ŝ	2.0 0.20		-	Rotor, Exciter (Select Rotor as Required)
	249-0427		1	Frame 2, 3, 4 Generators
	249-0644		1 1	Frame 5, 6, 7 Generators
6	140 0044		•	Attaching Parts For Rotor (Select Bolt as Required)
	249-0399		1	Bolt - Frame 2, 3, 4 Generators
	249-0495		i	Bolt - Frame 5, 6, 7 Generators
	249.0202		î	Washer, Lock (M10)
5	249-0313		1	Pin, Dowel
2	543 UJIS		*	FIN, DUWEN

a'.

SECTION TRO CON

TABLE OF CONTENTS

		-	
	Control, Generator Set	53	,
	Control Panel, Generator (Sets with LED Indicator Lights)	55	
•	Control Panel, Generator (Sets with Bulb Indicator Lights)	57	
•	Control Panel, Engine (Sets with LED Indicator Lights)	59 _{by}	
	Control Panel, Engine (Sets with Bulb Indicator Lights)	61	ç
	Control Wiring Harnesses (Sets with LED Indicator Lights)	63 _r	
Ļ	Control Wiring Harnesses (Sets with Bulb Indicator Lights)		
	Control Internal Components (Sets with LED Ind Lights)	66	
	Control Internal Components (Sets with Bulb Ind Lights)	67	-
	Control Alarm Module	68	

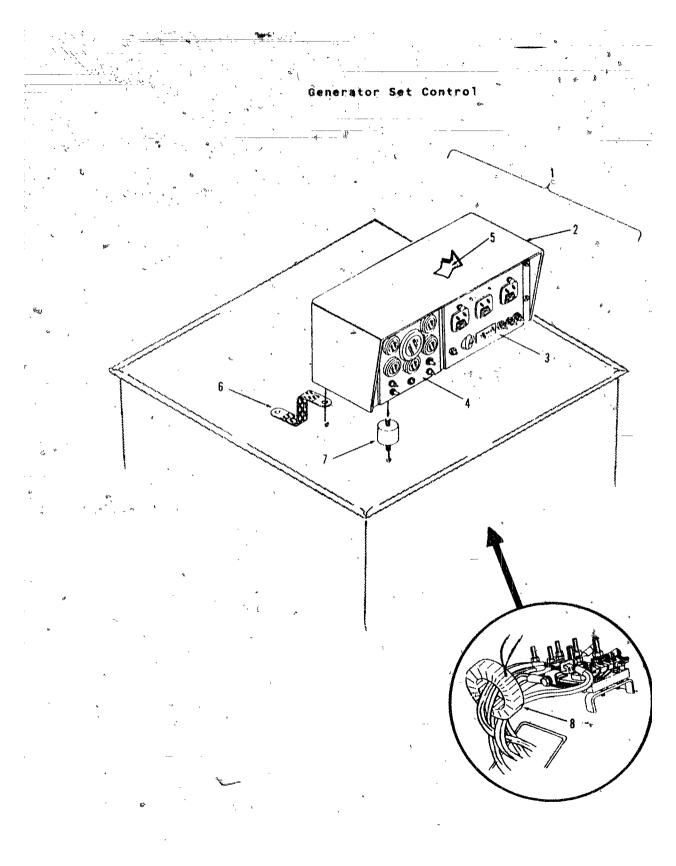

Ge nerator Set Control

5

е

REF NO	CPS PART NO.	CEC PART NO.	USED	PARI
1 -	ь . ,		REF	"Contro], Generator Set (See Items 3 Thru 5 for Components)"
				Attaching Parts for Control
	862-1001	70299	8 8 *	Nuc. Hex (1/4-20)
	850-1040	20189		Washer, Lock Spring (1/4")
2	Note 1		I.	Cover, Control
				Attaching Part for Cover
	815-0701	3016086	6	Screw, Machine - Round Head (1/4 20 x 1/2")
3'			REF	Control Panel, Generator (See Separate Pages for Components)
4			REF	Control Panel Engine (See Separate Pages for Components)
<u>5</u> *_			REI	 Internal Components and Wiring Harnésses (See Separate Pages - Selection) — Section - Section
6	3.37 2402	3016849	1	Lead, Electrical Ground
7	402-0610	204493	4	Mount, Vibration
8				Inanaformer Current (Select as Required)
	302-1866-05	3011674	đ	400.5 Ratio [Used with 200/400 AMP Ammuter]
	302 1866 09		3	600 5 Ratio (Used with 300/600 AMP Ammeter)
	302 1866-13		3	800 5 Ratio (Used with 400/800 AMP Ammeter)
-	302 1866-15	3011684	ł	1000 5 Ratio (Used with 500/1000 AMP Ammeter)
	302 1866 - 17		۰.i	1200 5 Ratio (Used with 600/1200 AMP Ammeter and 1200 AMP
-				Single Scale Ammeter)
	302-1866-21	3011690	36	"1600.5 Ratio (Used with 800/1600 AMP Ammeter)
	302-1866 24		3	2000:5 Ratio (Used with 1000/2000 AMP Ammoter)
	302-1868-27		3	2500 5 Ratio (Used with 2500 AMP Single Scale Ammeter)
	302 1866-28		.i	3000 5 Ratio (Used with 1500/3000 AMP & 3000 AMP single Scale Ammeters)

Notes 1 Item not stucked replacement avgulable only on special order with long lead time likely.

Ъ.

\$:*


Į

ę.

*;*78

c

•]

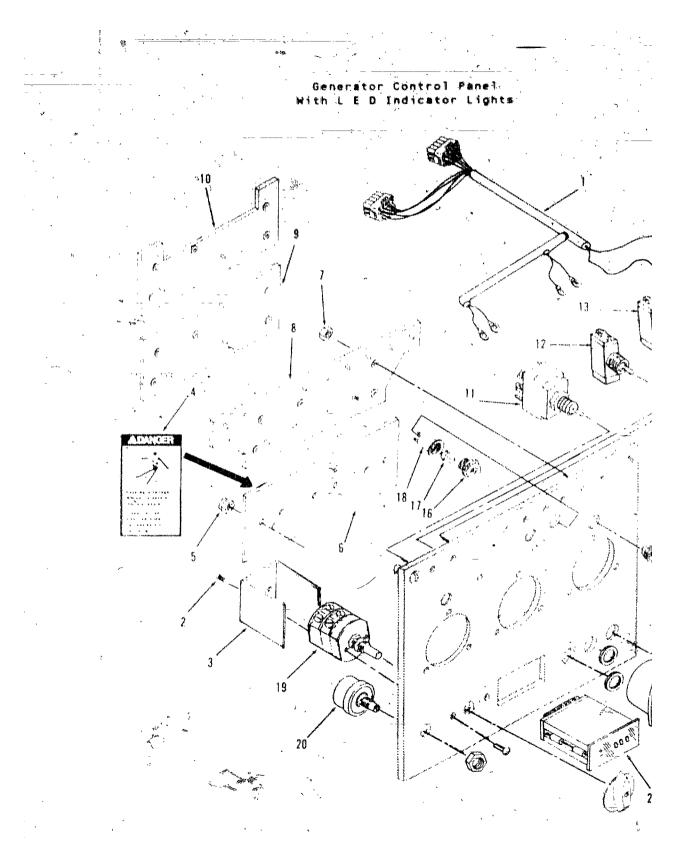


Generator Control Panel With L E D Indicator Lights

٤

j.

••			· · ·	
ref Ho	CHE PART NO.	CEC PART NO.	OTY USED	DESCRIPTION
	· 7	1		Harbess, Wiring (See Separate Pages for Selection
1				and Applications)
2	812-0075		2	Screw, Machine - Round Hend (18-37 x 1/4")
3	306-3523		i	Shield Switch
4	98~5387		i .	Decal (Warning)
5	870 0437		i	Nut Acorn Plantic
8	306 3522		1	Shield Metern
7	870-0451	20646	4	Nue Self-locking Han (#8 32)
	200-3383	3053064	1	Printed Concust Board 10 LED Lighte
9	900-3262	.5053663	1	Printed Christe Board 4 LID Lights
10	300-3281	3053062	1	Printed Circuit Board 2 LLD Lights
Ĩ.				Switch loggle
		9015057	1	(AUTOSTART ON/OFF/STANDBY)
	- · · · ·	3015058	i •	(SYNCHRON 121NG)
12		3055138	i	Switch Toggle (ALARM STITNGE)
13	· .	3035149	1	Switch Toggle (PANEL LIGHTS)
14	- 322-0398	3035016	2	(ight Panel (tess Bulb)
15	321 0397-01		÷	Bulb Incandescent
16		3056064	2	tens Clear (SYNCHRONIZING)
17		3056065	2	Bulb_ Incandescent
19		3056063		Socket Light
19	308-0894	3015860	1	Switch Selector (Includes Knob)
26	303-0288	3058451	1	Rheostat
22	302 1860	3056071	1	Wattmeter
2.2	,			Motor (TYPÍCAL)
	302 1856	3015041	1	Voltmeter ,
	302-1858	3015044	1	Erequency/RPM
				Ammeter (Select as Required)
				DUAL SCALE
	302 1871 05	30 195.40	. 1	200/400 AMP
	301-1862	3015035	- 1	300/600 AMI
	302 200 4	3015036	ŀ •	400/800 AMP
	302-1871-06	3051478	1	S00/1000 AMP
	307 1864	3015037	1	. 600/1200 AMP
•	307-1865	3015038	1	1 800/1600 AMP
	302-1871 01	3015039	1	1000/2000 AMP
	302-1871-09	3059965	1	1500/3000 AMP
	302-1871-10	3059966	1	2000/4000 AMP
				SINGLE SCALE
	302-1871-02	3015040	1.	1200 AMP
	302-1871-03		1	1600 AHP
	<u>302~1871-04</u>		1	2000 AMP
	302-1871-07		1	2500 AMP
	302-1871-08	3051480	_ 1	3000 AMP ~
			•	a
			_	`

 \mathcal{S}^{*}

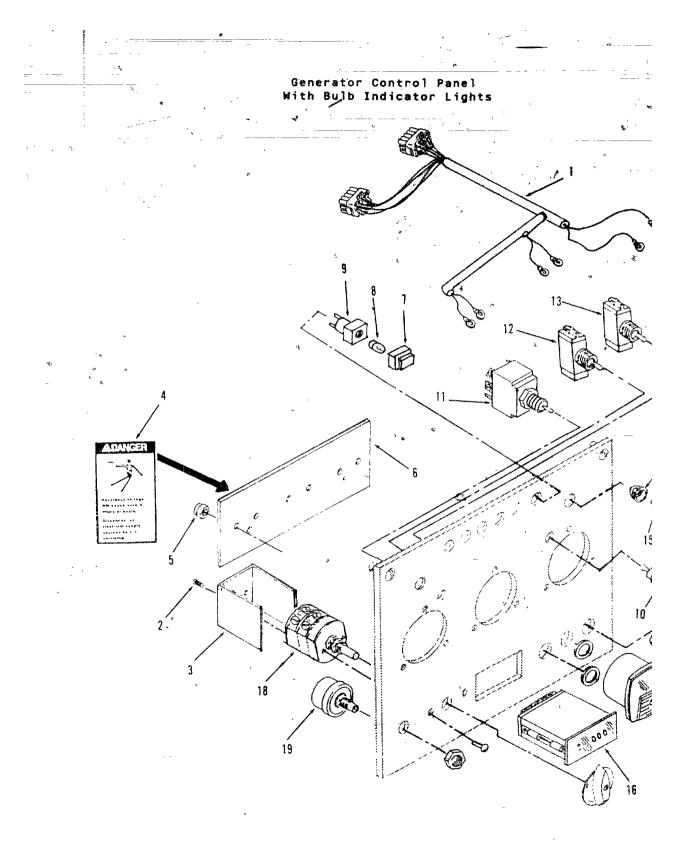

Generator Control Panel With Bulb Indicator Lights


QTY PART REF CPS CEC PART NO. USED DESCRIPTION NO. PART NO. Harness, Wiring (See Separate Pages for Selection and Applications) 1 Screw, Machine - Round Head (#8-32 x 1/4") 2 812-0075 2 Shield, Switch Decal (Warning) 306~3523 .1 з 4 98-5887 1 870-0437 Nut, Acorn - Plastic 5 7 Shield, Meters 6 306-3522 1 Lens, Indicator Light 7 3018795 ۸ Orange 3018796 Red 1 3018797 1 Green 3018798 2 White (SYNCHRONIZING) 8 3018799 8 Bulb, Incandescent Socket & Socket with Switch 9 3018800 7 Socket, Light 3014667 1 Socket, Light with Push Switch 3015133 Light, Indicator - Red Lens (UPPER/LOWER SCALE INDICATING) 10 2 Switch, Toggle 11 3015057 (AUTOSTART-ON/OFF/STANDBY) 1 3015058 1 (SYNCHRONIZING) Switch, Toggle (ALARM SILENCE) Switch, Toggle (PANEL LIGHTS) 3055738 12 1 3035149 13 1 Light, Panel (Less Bulb) Bulb, Incandescent 3035016 2 14 322~0398 15 322-0397-01 3035018 Ê 3015018 Wattmeter 16 1 17 Meter Voltmeter 302-1856 3015043 1 Frequency/RPM 302-1858 3015044 1 Ammeter (Select as Required) ٧ DUAL SCALE 302-1871-05 3039530 200/400 AMP 1 300/600 AMP 302-1862 3015035 1 400/800 AMP 302-1863 3015036 1 302-1871-06 3051478 1 500/1000 AMP 600/1200 AMP 302-1864 3015037 1 800/1600 AMP 302-1865 3015038 1 1000/2000 AMP 302-1871-01 3015039 1 302-1871-09 3059965 1500/3000 AMP 1 302-1871-10 3059966 1 2000/4000 AMP SINGLE SCALE 1200 AMP 302-1871-02 3015040 1 1600 AMP 302-1871-03 3015041 1 302-1871-04 3015042 2000 AMP 1 2500 AMP 302-1871-07 3051479 1 302-1871-08 3051480 3000 AMP 1 3015860 Switch, Selector(Includes Knob) 308-0884 1 18 " 1 19 303-0288 3058451 Rheostat

-

يريجن شروب

17

er al

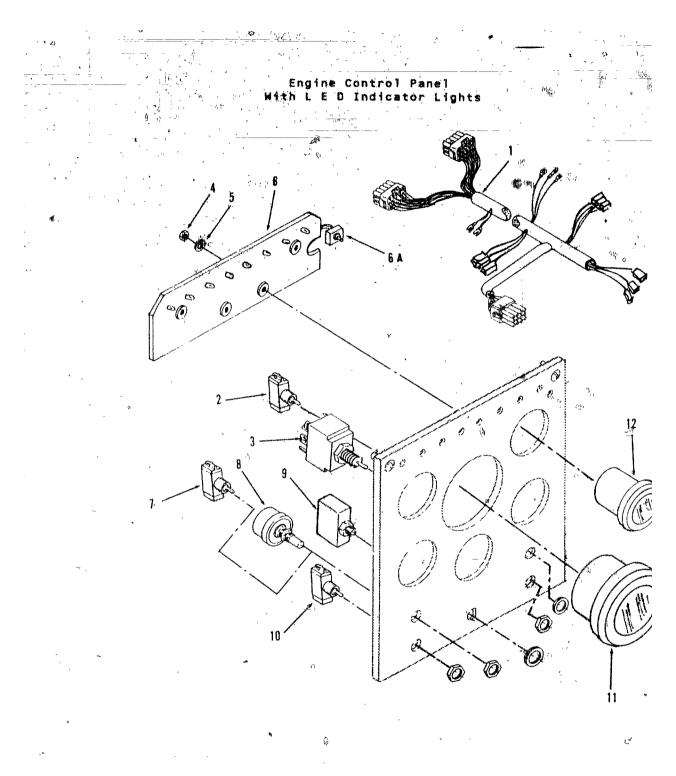

÷.

Engine Control Panel With L E D Indicator Lights

ŧ.,


E

	REF ^{all}	CPS PART NO.	CEC PART NO.	OTY	PART Description
`	i	338-2252	3053044	1	Harness, Wiring (Includes items 2 & 3)
	2		3055486	1	Switch, Toggle (CRANK)
	3		102057	1	Switch, Toggle (START/RUN/OFF)
	4	870-0451	70646	4	Nut, Self-gocking - Hex (#8-32)
	-5	526-0352	128006	-4	Washer, Flat (3/16")
	6	1		•	Printed Circuit Board (Includes Test Lamp Switch)
		300-3279	3053060	1,	5 L E D Indicator Lights 🦾 💡 🦯
		300~3280	3053061	1	8 L E D Indicator Lights
	-6A		3055498	1	Switch, Toggle (LAMP TÉST) -
	7		3015055	1	Switch, Toggle (RAISE/LOWER)
	8	303-0290	3015105	1	Potentiometer (SPEED ADJUST)
	9	320-1616	3034953	1	Circuit Breaker
	10	308-0885-02	104215	- 1.	Switch, Toggle (RUN/IDLE)
	11 .	302-1855	3031734	1	Tachometer
	12	· •			Gauge/Meter
		193-0400-01	3015232	1	Gauge, Pressure - Oil
-		193-0401-01	3015233	1	Gauge, Temperature - Oil
		193-0402-01	3015234	- 1	Gauge, Temperature - Water
		302-1857-01		1	Voltmeter
		302-1859-01	3035766	1	Hourmeter

5

a

5.

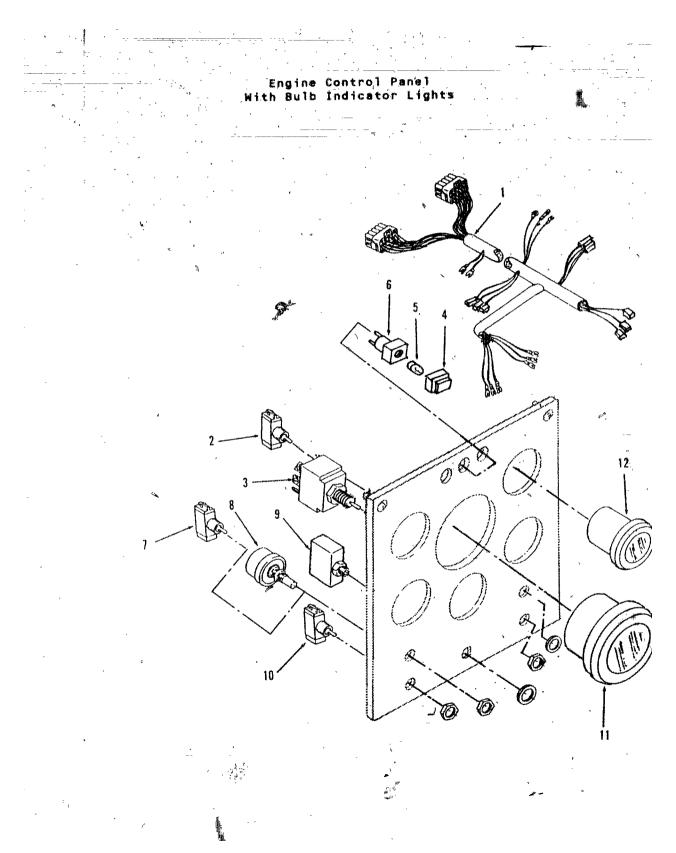

Engine Control Panel With Bulb Indicator Lights

PART OTY. REF CPS CEC PART NO. DESCRIPTION NO. PART NO. Hanness, Wiring (Includes items 2 & 3) Switch, Toggle (CRANK) Switch, Toggle (START/RUN/OFF) 3035126 1 1 3055486 1 2 102057 1 Lens, Light (ORANGE) Bulb, Light з 3018795 3 4 3018799 3 5 Socket, Light Switch, Toggle (RAISE/LOWER) (SPEEN AD.WST) 3018800 3 6 3015055. 1 7 Potentiometer (SPEED ADJUST) 303-0290 3015105 1 8 Circuit Breaker Switch, Toggle (RUN/IDLE) 320 1616 3034953 1 9 308-0885-02 104215 1 10 Tachometer 11 302-1855 3031734 1 Gauge or Meter Gauge; Pressure - 011 Gauge; Temperature - 013 Gauge; Temperature - Water 12 1 193-0400-01 3015232 193-0401-01 3015233 1 193-0402-01 3015234 1 Voltmeter 302-1857-01 3015235 1 Hourmeter 302-1859-01 3035766 1


12

e.eo

ą

ł

1

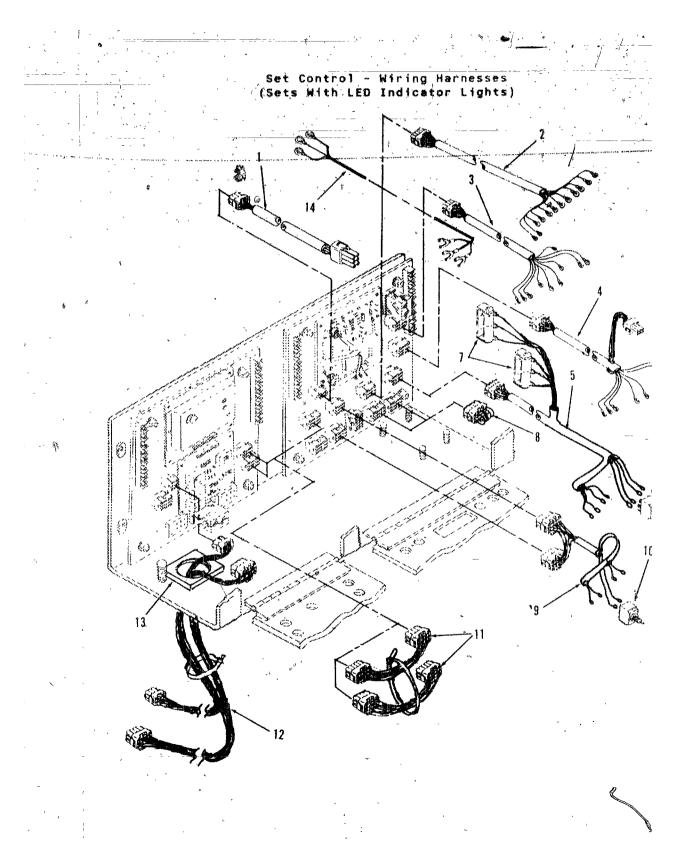


Set Control - Wiring Harnesses (Sets With LED Indicator Lights)

8,5

3

52

		and the second sec	ty opposition	annetisilar - Anephritani	· · · · · · · · · · · · · · · · · · ·
£2	111				No. Weine State St
`	<u>_</u>	N	• • •	~	1. *** *
1. 1	REF NO.	CPP PART NO.	CEC PART NO.	USED.	PART DESCRIPTION
	· • •				Whenever Wining (CCD TO LCD DCD)
•	- 1-	338-2255	3053048 3056066	1	Harness, Wiring (PCB TO LED PCB) Harness, Wiring, (PCB TO WATTMETER)
,	· 2	338-2258	3035147	1	Harness, Wiring (PCB TO VOLT/AMP SELECTOR SWITCH)
	3	338-2250 338-2253	3053046	1	Harness, Wiring (PCB TO AC METER)
	4	338-2383	3053033	, 1 - a	Harness, Wiring (PCB TO RESISTORS AND SYNCHRONIZING SWITCH;
	.5	338-2383	3033035	, 1 'a	Includes The Resistors and Switch)
	6		3015058	1	Switch, Toggle (SYNCHRONIZING)
	7		3055739	2	Resistor, Wirewound with Mounting Bracket
					Attaching Parts for Resistor
	,	860-0003	3043636	4	Nut, Hex
		850-0010	3043637	4,	Washer, Lock - Spring
	· 8	338-2312	3056,089	2	Harness, Wiring (HIGH/LOW WYE ADAPIER)
•	9	338-2256	3056061	1	Harness, Wiring (PCB TO PANEL LIGHTS AND SWITCH, Includes The Switch)
	10		3035149	1	Switch, Toggle (PANEL LIGHTS)
	11	338-2248 _x	3035132	1	Harness Assembly, Wiring (ENGINE CONTROL PCB TO GENERATOR CONTROL PCB)
+•	12			- "	Harness Assembly, Wiring - With Shielded Leads (ENGINE WIRING HARNESS TO ENGINE CONTROL PCB, Select Length as Applicable)
		338-2301-01	3053037	1	5 3 Feet
		338-2301-02	3053038	1	7.3 Feet
	,	338-2301-03	3053039	1	9,3 Feet
<i>,</i>	: .	338-2301-04	3053040	1	11 3 Feet "
		338-2301-05	3053041	1	15 3 Feet
		338-2301-06	3053042	1	25 3 Feet
		338-2301-07	3053043	1	50 O Feet
	-	338-2301-08	3057046	1	1 3 Feet
	13	331-0525	204494	1	Gasket, Conduit
	14	338-2251	3044442	1	Harness, Wiring (PCB'TO GEN TERMINAL BLOCK)

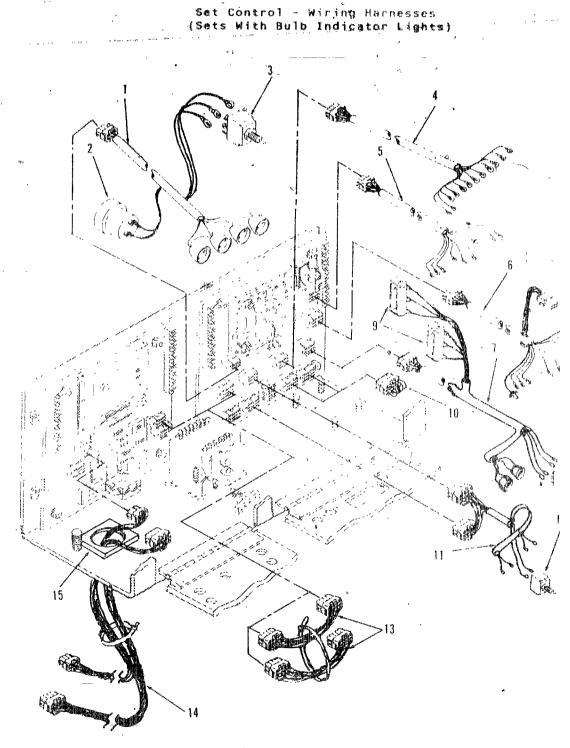


Set Control - Wiring Harnesses (Sets With Bulb Indicator Lights)

1


.


- 45

	REF NO.	CPS PART NO.	CEC PART NO.	OTY USED	PART DESCRIPTION
• • •	1	,	3035145	1	Harness, Wiring (PCB TO HORN, SWITCH AND INDICATOR LIGHTS; Includes The Horn and Switch)
	4 3	-	3015118	1	Horn, Electrical - 24 VDC
	â	a	3015056	1	Switch, Toggle (ALARM SILENCE)
	Ă		3035142	1	Harness, Wiring (PCB TO WATT TRANSDUCER)
	5	-338-2250	3035147	1	Harness, Wiring (PCB TO VOLT/AMP SELECTOR SWITCH)
	6		3035144	1	Harness, Wiring (PCB TO AC METER AND RED INDICATOR LIGHTS, Includes Red Indicator Lights)
	7	•	3035146	1	Harness, Wiring (PCB TO RESISTORS, SYNCHRONIZING LIGHTS AND SWITCH: Includes The Resistors and Switch)
		,	3015058	1	Switch_ Toggle (SYNCHRONIZING)
`,	ă	•	3015109	2	Resistor, Wirewound with Mounting Bracket
	Ň				Attaching Parts for Resistor
5	Į.	860-0003	3043636	4	Nut, Hex (#\$-40)
	4	850-0010	3043637	4	Washer, Lock - Spring (#4)
	10 .	338-2249	3035140	2	Harpass Wiring (HIGH/LOW WYE ADAPTER)
	11	338-2256	3056061	1	Harness, Wiring (PCB TO PANEL LIGHTS AND SWITCH, Includes The Switch)
• • •	12	•	3035149	1	Switch, Toggle (PANEL LIGHTS)
	13	338-2248	3035132	1	Harness Assembly, Wiring (ENGINE CONTROL PCB TO GENERATOR
	14				Harness Assembly, Wiring (EMGINE WIRING HARNESS TO ENGINE CONTROL PCB, Select Length as Applicable)
		338-2276-01	3035127	1	5.3 Feet
		338-2276-02	3035128	ī	7.3 Feet
		338-2276-03		ī	1.3 Feet
		338-2276-04		1	11 3 Feet
·		. 338-2276-05		î	5 3 Feet
	13	331-0525	204494	ĩ	Gasket, Conduit

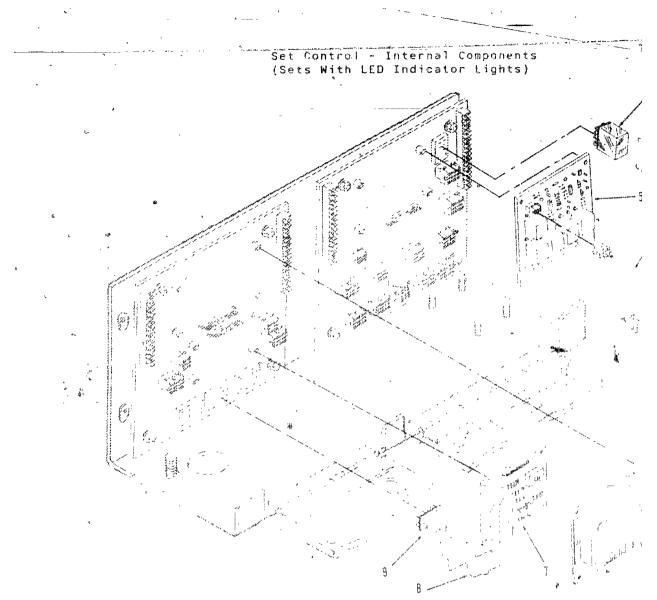

REF	CPP	CEC		PART
NU	PAR" NO	PART NO	J58U	DESCRIPTION
1	367-2523	3634657	,	HO-21-0- 4011.
2	307-2622	3034956	•	free i espi
3	:38-2254	3053047	•	Harness Wining - AutoStarr It 1917 Decuder Switch
		3013057		"witch long'e (Autostari)
4	500-3217	318 4 3 4 1	۱.	Board Menines Concurs Antibutint
				Attaching Parts for Board
	815-0802	10310	4	Screw, Machine - Pan Head Active by,
	850-1020	70262	4	Washer Lock - Spring (##1
6	151-0683 03		•	tortrol tovernar
0	101 0100 00			Attaching Parts for Board
	815-0802	40210	4	freed was released at the second stands of the
		70262	4	Washer Leer - Spring (#4)
7		3034453		(
· ·		0001-000	-	Attaching Parts for Epard
	815-0802	70310	4	Torew Malrine Par Humb Rt 21 - 3.14 .
	850-1020	70262	3	Nasher ,ock - Spring (#6)
0	307-2623	3634957	1	hetainer, Rola,
8	307-2684	3034962	4	kelav
9	301-2004	2024902	I.	No Tuy

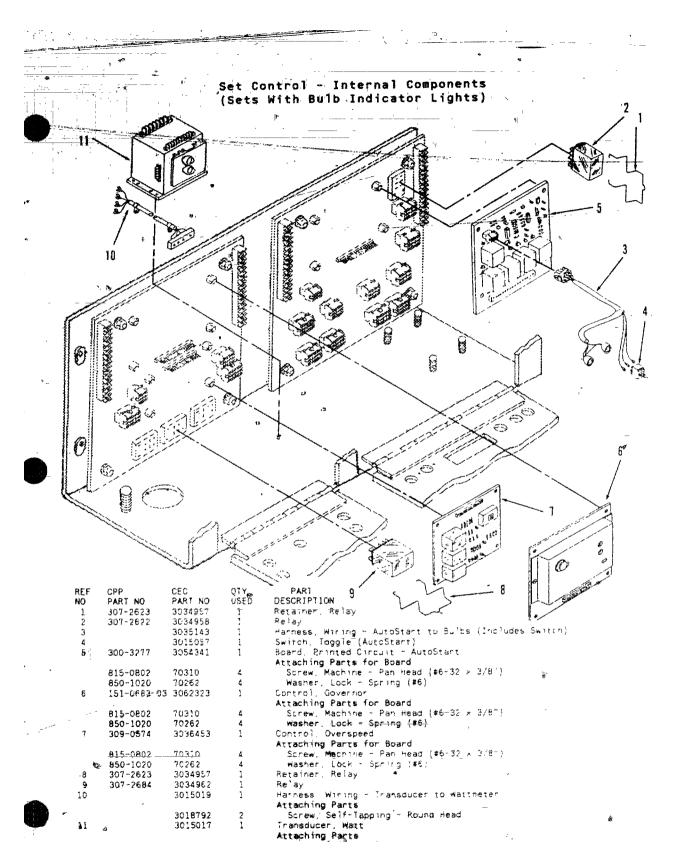

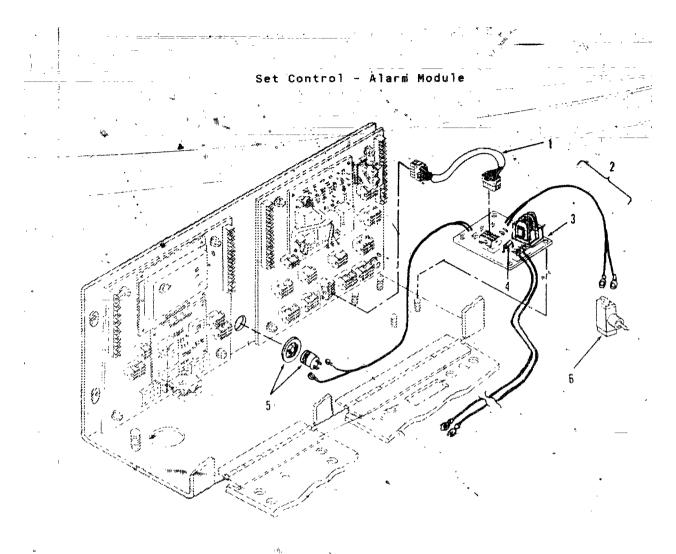

PART CEC QTY CPS REF DESCRIPTION PART NO **USED** PART NO NO. Harness, Wiring - Alarm Board to Gen Control Board Module, Alarm (Includes PC Board, Horn Maritch and Electrical Leads to Horn, Switch and Cenerator Terminal Board) 3056062 1 338-2257 12 Sets with Four Fault Indicators 1. 3054296 300-3286 Sets with Six Fault Indicators 3054297 300-3287 1 Board, Printed Circuit - Alarm Module (Includes Fuse) 5.2 3 Sets with Four Fault Indicators Note 2 1 Note 1 Sets with Six Fault Indicators 1 Note 2 Note 1 Attaching Parts for Board Nut. Self-locking - Hex (#8-32) 70646 870-0451 Washer, Flat (#/16") 526-0352 128006 ٨ Fuse 3062691 1 Note 3 4 norn, Electrical - 24VOC 333-0405-02 149806 5 Switch, loggle 6 Note 3 3055739 1 NOTES: 1. Not stocked as replacement item, order applicable item 2 for replacement

NOTES: 1. Not stocked as replacement item, order applicable item 2 for replacement 2. Not Stocked as replacement item, order applicable item 2 for replacement 3 Not stocked as replacement item.