



1. Place indication light on Pin F (Light Blue/Black Stripe) to Pin G (Light Green/Red Stripe).
2. Jump Pin A (pink) to Pin D (Black/Light Green Stripe).
3. Power Pin A, with battery voltage without cranking engine.
4. Read Fault Code (three digit series) _____ .
5. To erase codes, remove battery power for 15 seconds while jumper is still installed.
6. Remove the light and the jumper.