



Manifold input piping



Purge Solenoid            71426

Flex Hose                    58309

Wire the solenoid to wire 3 with the start relay and wire 9 for the ground.

The flex hose is used to connect the solenoid to the input gas. The fittings are used to make the angle to clear engine harness, sensors and user accessible service needs.