

### 8.1L TIMING INSTRUCTIONS

The connector is located on the right-hand side of the engine, near the foot of the engine. Once you locate the Pin D wire, cut the wire on the backside of the plug, then strip back and splice a new wire and lead to the ground.



Figure 1-11: Available 8.1L Fuel Connections

The 8 pin connector requires ground connection to pin D for LP fuel selection. The Standard set up is NG.



Figure 1-12: 8-Pin LP Fuel Connector