



A) Locate water temperature shutdown switch in one of two locations:

- 1) Facing generator end, on right side of block, between "V" of engine on top, near the fly-wheel housing. Use bushing to reduce 1/2" NPT to 3/8" for sender.
- 2) Remove 1/4" pipe plug on thermostat housing on front of engine between V. Use bushing if necessary.

B) Locate oil pressure shutdown in same location as the sender for the oil pressure gauge. Use a close nipple and pipe "T" as required.

KATOLIGHT CORPORATION

SCALE	DATE	ASSEMBLY OR PART NO.	MANUFACTURED IN
NONE	5-30-72	100-88-18-1	MINNESOTA
DESCRIPTION INT UY 549			MODEL
NO SUB BASE			7545FP14E
BASE 102-519			REV
101-10044-00 BASE 102-519			NYA
			MINNEAPOLIS 102-521

REV: 0AL OF BASE FROM 78 TO 82 (2-11-75)