

LEGEND




AFS	-	AIR/FUEL SOLENOID
AH1	-	ALARM HORN
ALT	-	DC CHARGE ALTERNATOR
ATS	-	AIR TEMP. SENDER
AVR	-	AUTOMATIC VOLTAGE REGULATOR
BCC	-	BATTERY CHARGER CONNECTOR
BCH	-	BATTERY CHARGER
CB	-	CIRCUIT BREAKER, DPE
CO	-	CROSSOVER CONNECTOR
COM	-	COMMUNICATIONS PORT (9 PIN D-SUB)
CT	-	CURRENT TRANSFORMER
DB	-	DIODE BRIDGE
ES1	-	EMERGENCY STOP SWITCH
ESC	-	ELECTRONIC SIGNAL CONDITIONER
F	-	FUSE
FS1	-	FUEL SOLENOID
GA1	-	GOVERNOR ACTUATOR
GD	-	GOVERNOR DRIVER
GFCI	-	GROUND FAULT CURRENT INTERRUPT
GND	-	GROUND BAR CONNECTION
IC	-	IGNITION CONTROL
ICM	-	IGNITION CONTROL MODULE
IFT	-	INTERFACE TRANSFORMER
J	-	ELECTRONIC CONTROL MODULE CONNECTIONS
LFP	-	LOW FUEL PRESSURE SWITCH
MLCB	-	MAIN LINE CIRCUIT BREAKER
MOD	-	MODEM CONNECTOR
MPU	-	MAG. PICK UP
OPS1	-	OIL PRESSURE SENDER
OS	-	OXYGEN SENSOR
OTS1	-	OIL TEMP. SENDER
PME	-	PERMANENT MAGNET EXCITER CONNECTIONS
R	-	RESISTOR
RB	-	RELAY BOARD
RB_A	-	RELAY BOARD CONNECTOR
SC	-	START CONTACTOR
SM	-	STARTER MOTOR CONNECTIONS
SW1	-	AUTO/MANUAL SELECT SWITCH
SWC	-	OPERATOR SWITCH CONNECTOR
TB	-	TERMINAL BLOCKS
WLS1	-	COOLANT LEVEL SENDER
WTS1	-	COOLANT TEMP. SENDER

 
COMPONENTS LOCATED ON ENGINE

NOTE: ALL WIRES 18 AWG
300V UL LISTED UNLESS
SHOWN OTHERWISE



AWG SIZE
12

S1,S2 & S3 ARE 600V UL
LISTED

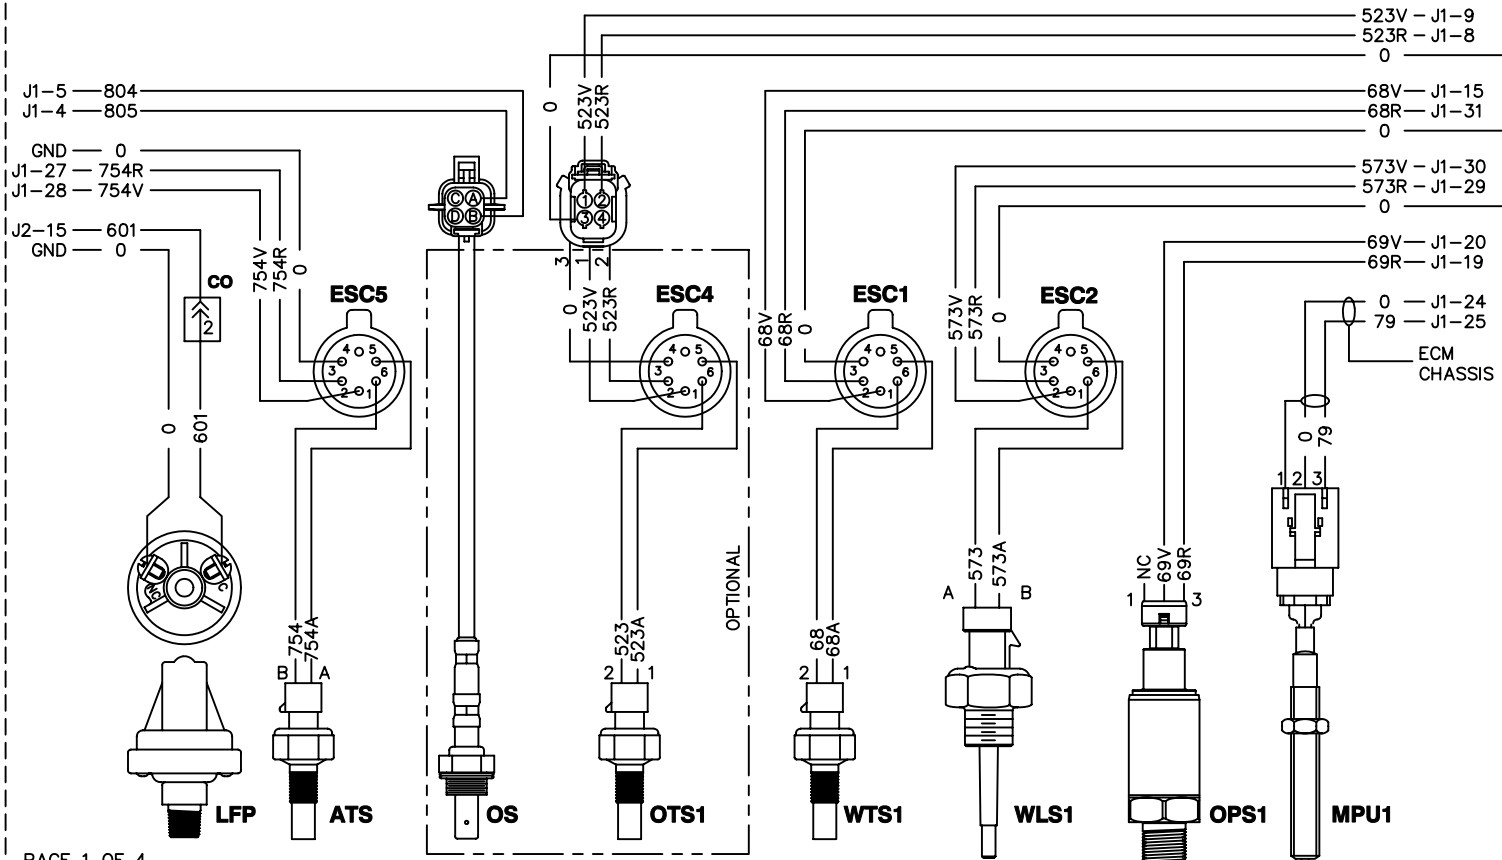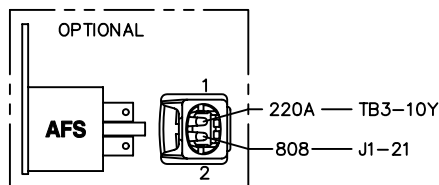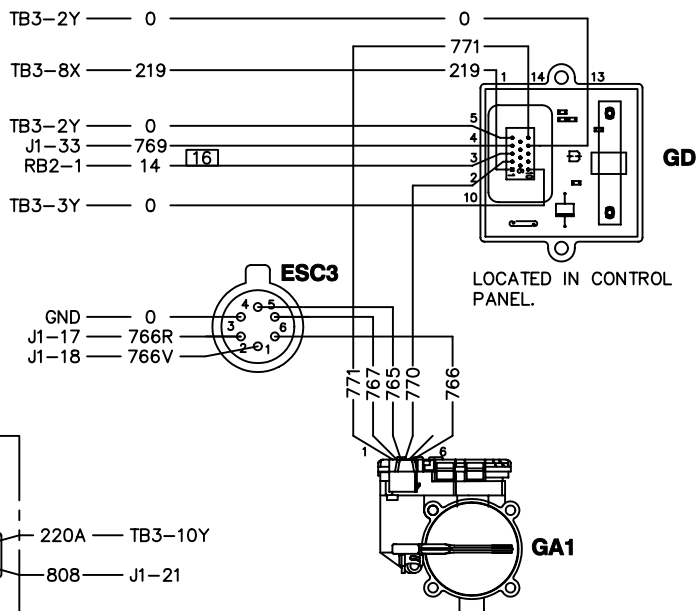





COMPONENTS LOCATED IN ALTERNATOR CONNECTION BOX

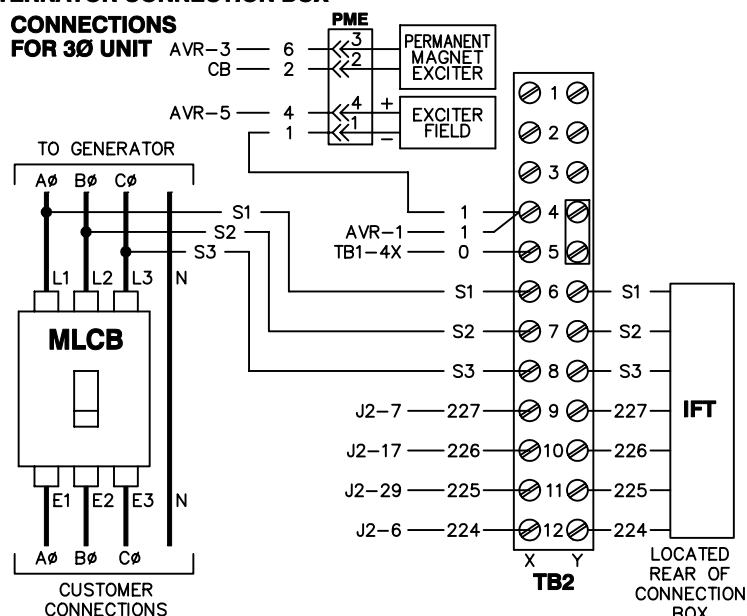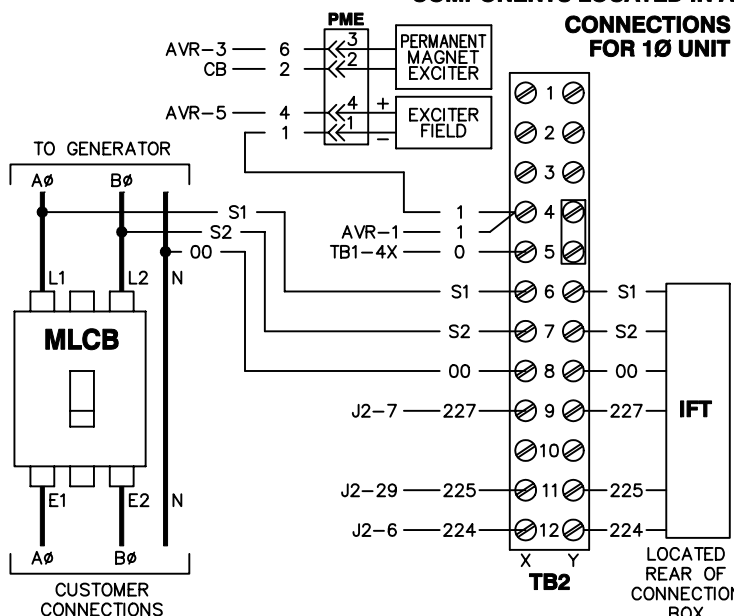

COMPONENTS LOCATED IN ALTERNATOR CONNECTION BOX

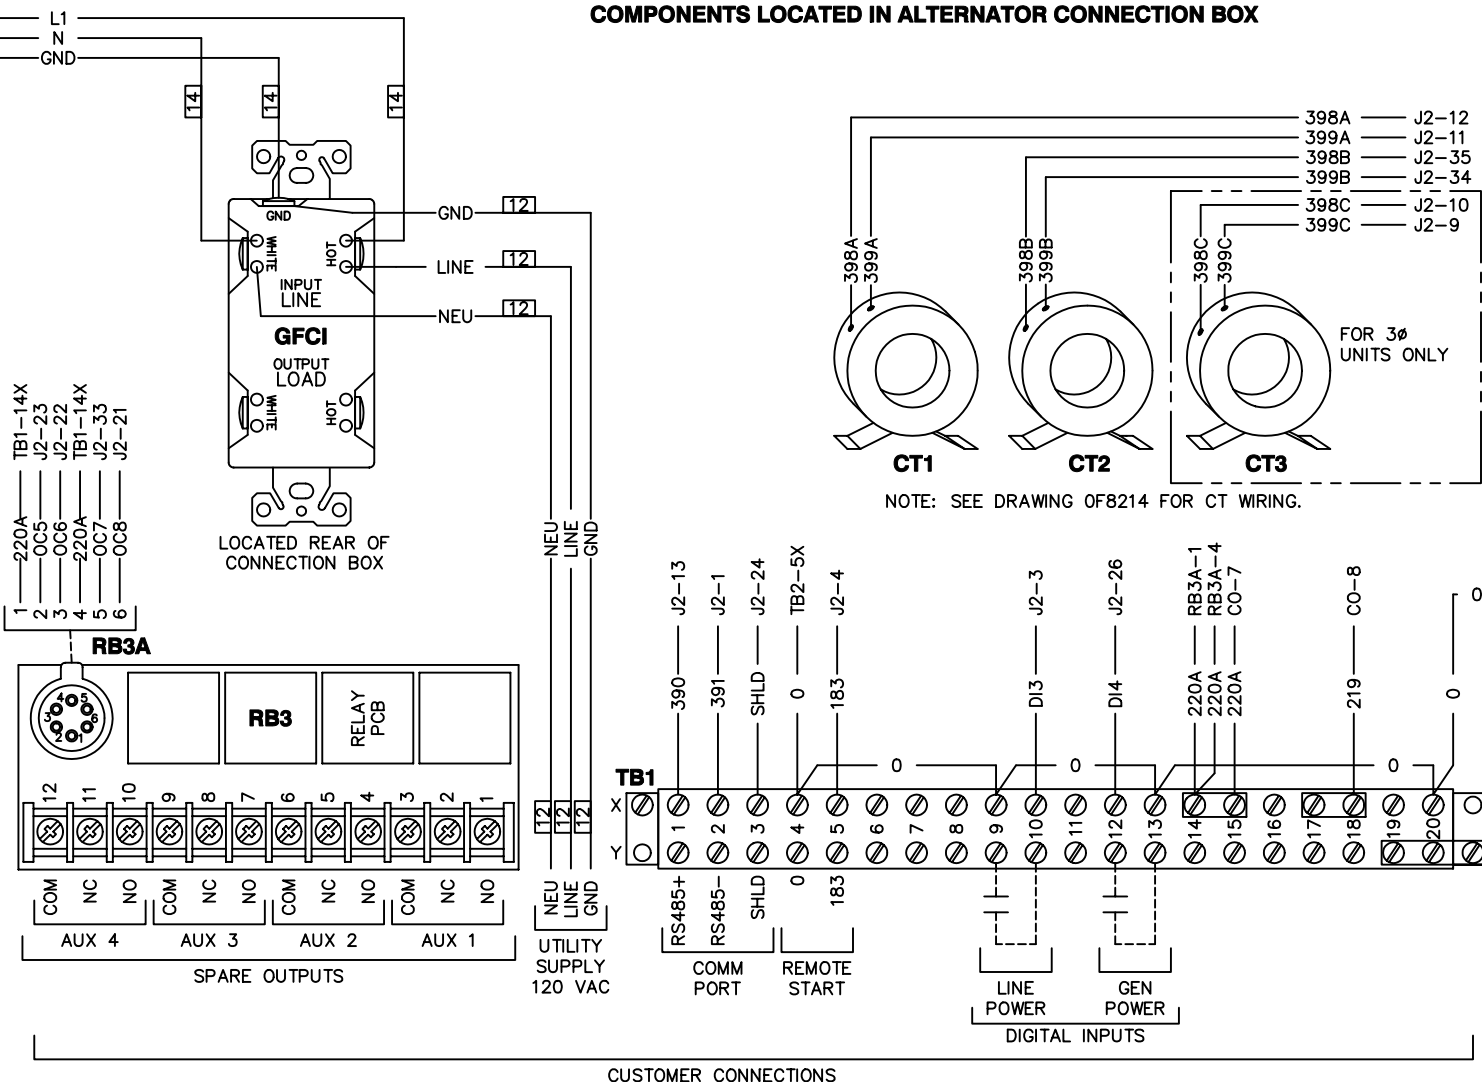

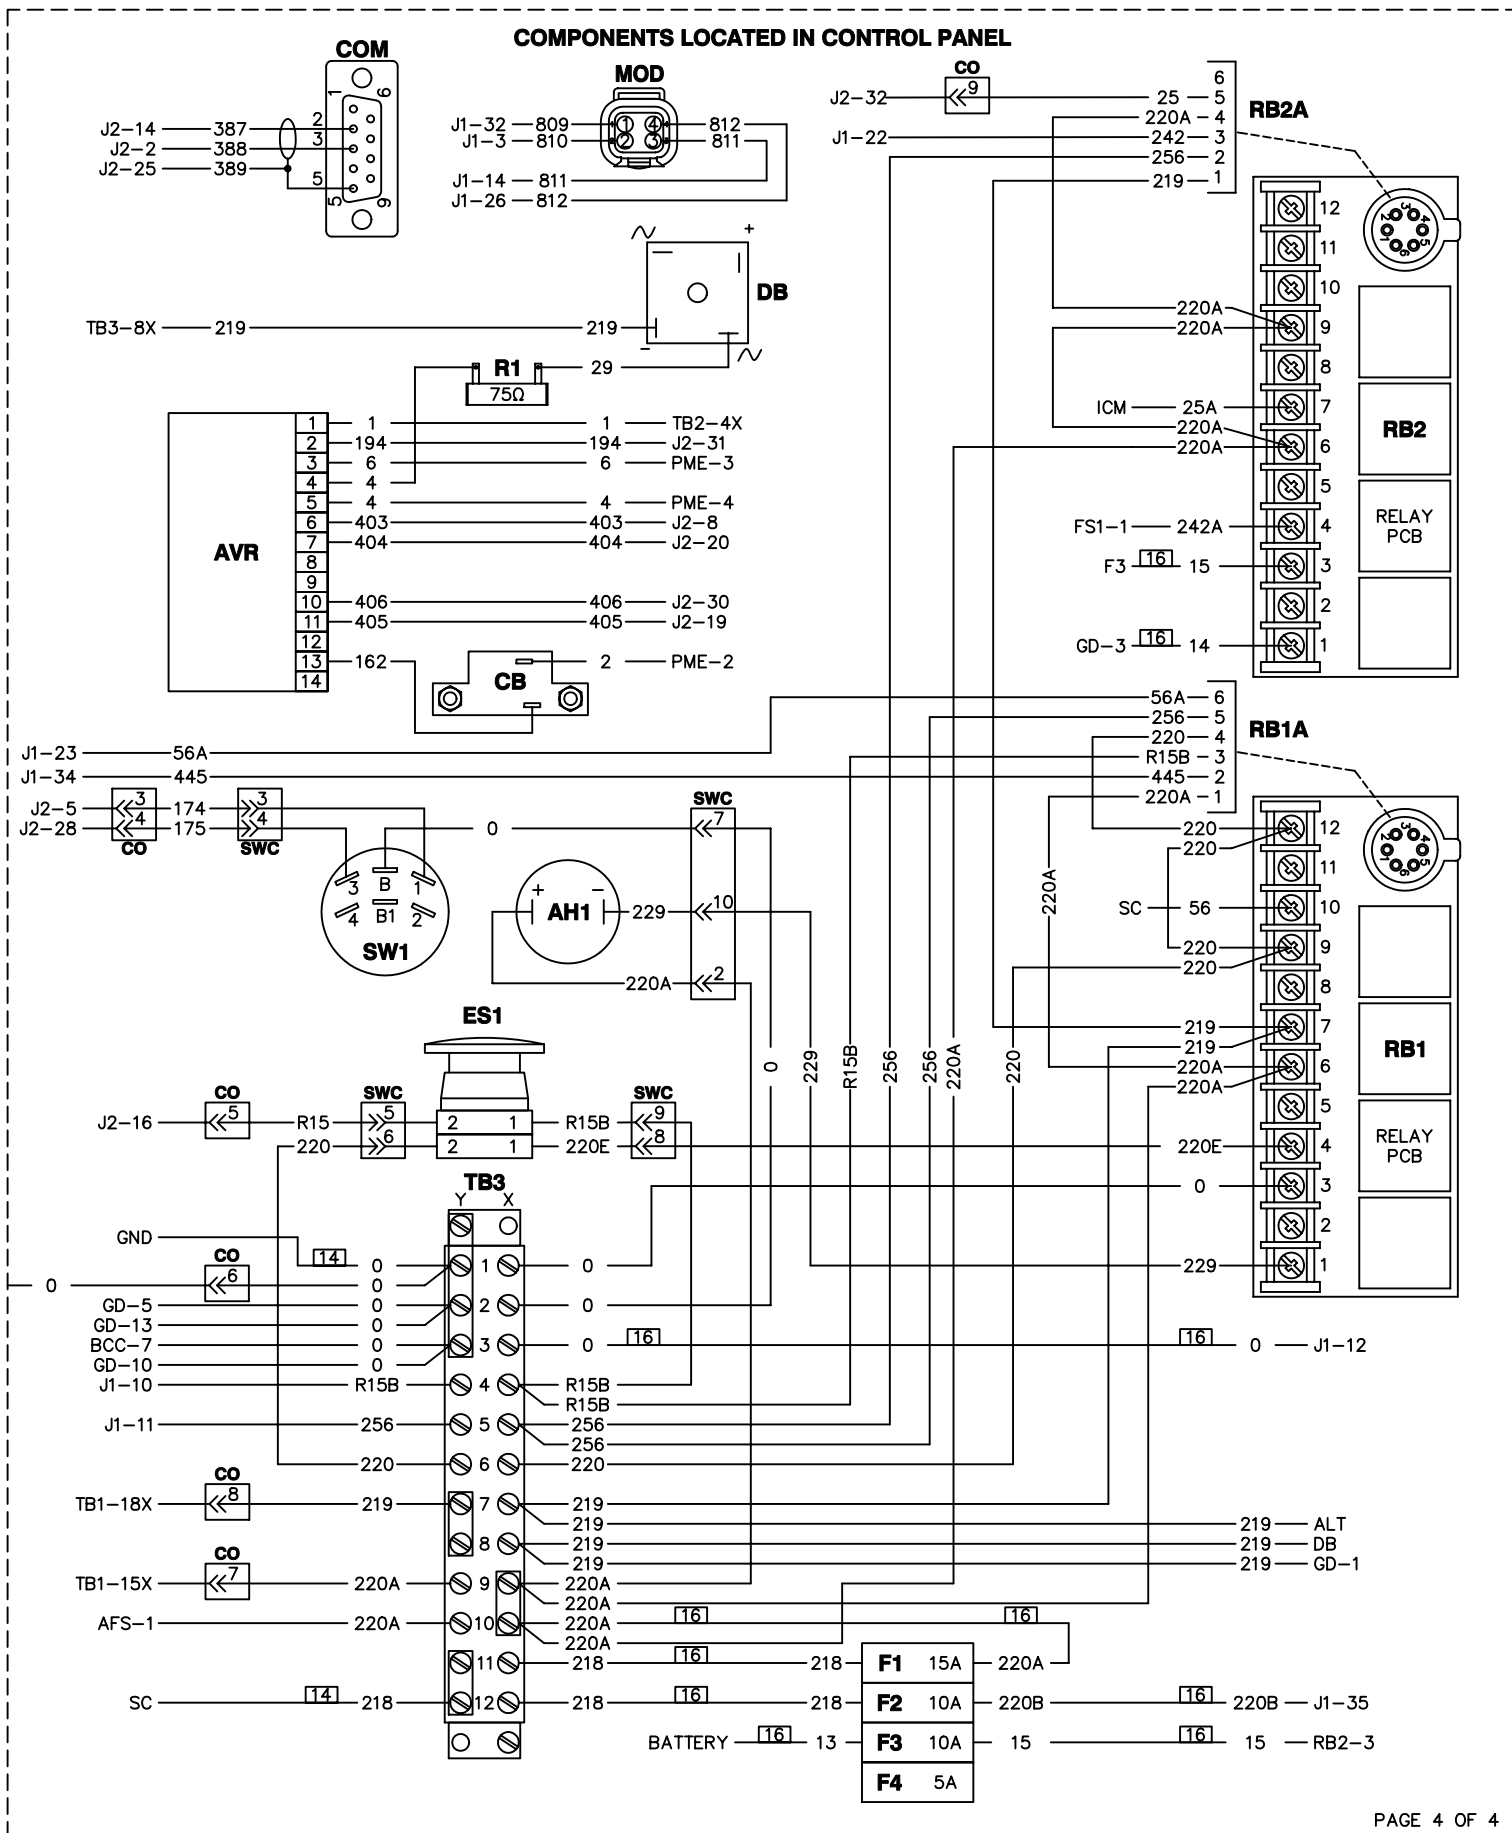

COMPONENTS LOCATED ON ENGINE

