

# DETROIT DIESEL



## MBE4000 Service Information

**NUMBER:** 11-MBE4000-04 **S.M. REF.:** 2.A **ENGINE:** MBE 4000 **DATE:** July 2004

**SUBJECT:** MBE 4000 WIRING DIAGRAMS

### INTRODUCTION

This SIB details wiring diagrams for sensors, proportional valves, and unit pumps for the EPA98 and the EPA04 (EGR) engines.

### DETAILS AND REASON

This SIB impacts Chapter Two, Fuel System, and the attachment pages are to be inserted in Section 2.A, Additional Information section of the EPA-04 MBE 4000 Service Manual (6SE412), dated March 2004.

- Section 2.A, Additional Information – remove pages 2-59 through 2-64 and replace them with the new pages 2-59 through 2-62.

### ADDITIONAL SERVICE INFORMATION

Additional service information is available in the Detroit Diesel *MBE 4000 Service Manual*, 6SE412. The next revision to this manual will include the revised information. As a convenience to holders of the *MBE 4000 Service Manual*, information in service manual format is attached. The page(s) may be inserted into the manual.

### NOTE:

Manual insert pages are numbered for insertion into the current *MBE 4000 Service Manual* dated March 2004. Service manuals are available from authorized Detroit Diesel distributors. If this bulletin was obtained from the Internet, service manual page(s) are available by returning to the screen "SIB Index", selecting attachment pages, and printing the page(s).

---

**DETROIT DIESEL**  
**CORPORATION**



13400 Outer Drive, West / Detroit, Michigan 48239-4001  
Telephone: 313-592-5000  
[www.detroitdiesel.com](http://www.detroitdiesel.com)

---