INSTALLATION INSTRUCTIONS

Original Issue Date: 1/96 Model: 30/40 kW (Detroit Diesel Powered) Market: Industrial Subject: Weather Housing Kits PA-324050-SD, PA-324357-SD, PA-327002, PA-327003

Model		Kit		
	30 kW	PA-324050-SD, PA-327002		
	40 kW	PA-324357-SD, PA-327003		

The weather housing kit provides weather protection for generator sets installed outdoors. Lockable housing panels to prevent unauthorized personnel from tampering with the generator set. When installing the weather housing kit, observe the following safety precautions.



Accidental starting. Can cause severe injury or death.

Disconnect battery cables before working on generator set (disconnect negative lead first and reconnect it last).

Disabling generator set. Accidental starting can cause severe injury or death. Turn generator set master switch to OFF position, disconnect power to battery charger, and remove battery cables (remove negative lead first and reconnect it last) to disable generator set before working on the generator set or connected equipment. The generator set can be started by an automatic transfer switch or remote start/stop switch unless these precautions are followed.



Servicing exhaust system. Hot parts can cause severe injury or death. Do not touch hot engine parts. An engine becomes hot while running and exhaust system components become extremely hot.

Installation


- 1. Place the generator set master switch in the OFF position.
- 2. Disconnect generator set engine starting battery, negative (–) lead first.
- 3. Refer to the assembly drawing in Figure 1 to identify kit components and their relative positions.
- 4. Disconnect exhaust from the generator set if equipped.

NOTE

The generator set skid has been predrilled to accept the weather housing components.

- 5. Secure mounting brackets (225073 and 225074) to the alternator end of the skid with screws (X-125-5), washers (X-25-85), and nuts (X-101-16).
- Position rear housing shroud (324021) on skid and secure to mounting brackets with screws (X-125-5), washers (X-25-85), and nuts (X-101-16).
- 7. Remove generator set radiator guard. Discard radiator guard and save mounting hardware.
- 8. Install radiator shroud (324042) using hardware removed in step 7.

- Position weather housing roof (324043) over top of unit. Secure roof to the radiator shroud and rear shrouds using screws (X-794-4) using holes provided.
- 10. Install plug (253268) into roof hole over radiator.
- 11. Install latches (253373) into openings in doors. See Figure 2.
- 12. Install four plastic plugs (253723) per door to reduce vibration. Locate two plugs on inside edge and two plugs on the bottom of the door in the holes provided.
- 13. Install rear door (254476-BLK or 254476-SD) on weather housing. See Figure 1.
- 14. Install side doors (254475-BLK or 254475-SD, and 273558-BLK or 273558-SD) on weather housing. See Figure 1 for door locations.
- 15. Apply decals to clean dry surfaces as shown in Figure 1.
- 16. Final tighten all mounting hardware.
- 17. Install exhaust silencer kit.
- 18. Reconnect the generator set engine starting battery, negative (–) lead last.

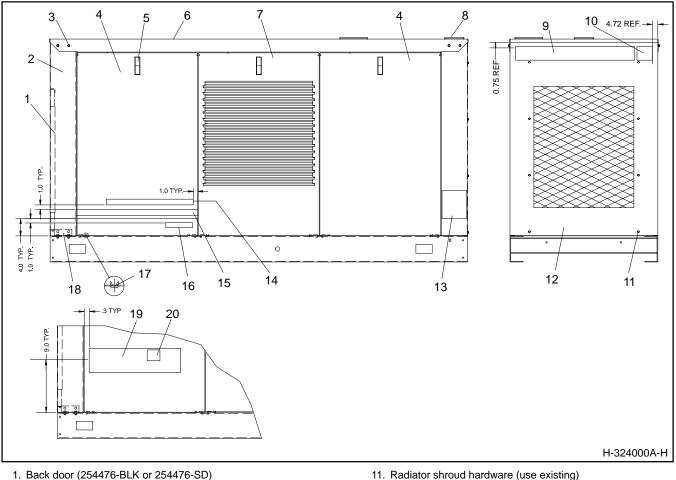


- 2. Rear housing shroud (324021)
- Drill screws (X-794-4)
 Side doors (273258-BLK or 273258-SD)
 Door latch (253373)
 Housing roof (326148)

- 7. Side door vented (254475-BLK or 254475-SD)
- 8. Radiator hole plug (253268) 9. Decal (X-6301-3)
- 10. Decal (X-6302-1)


- 11. Radiator shroud hardware (use existing)
- Radiator shroud (324042)
 Decal (X-6247-2 or X-6247-4)
 - 14. Decal (X-6246-1)
 - 15. Stripes decal (X-6232-2)
 - 16. Decal (273739)

 - Decal (273735)
 Plastic door plug (253723)
 Mounting brackets (225073 and 225074)
 Decal (X-6301-1)
 Decal (X-6299-2 or X-6299-3)

Figure 1. Weather Housing Assembly

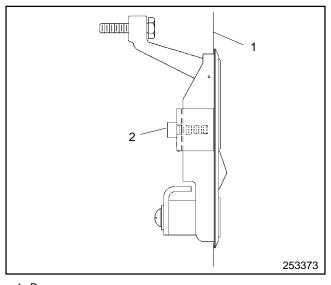

 1. Door 2. Screw



Weather Housing Kit

Parts List									
Kits: PA-324050-SD, PA-324357-SD, PA-327002, PA-327003		Unique Parts							
Qty.	Description	Common Parts	PA-324050-SD	PA-324357-SD	PA-327002	PA-327003			
10	Washer, plain O.D.=0.687 in.	X-25-85							
10	Nut, elastic stop 5/16	X-101-16							
10	Screw, 5/16-18 x 1.0	X-125-5							
8	Screw, drill w/washer	X-794-4							
2	Decal, kW		X-6299-2	X-6299-3	X-6247-2	X-6247-4			
2	Decal, stripes				X-6232-2	X-6232-2			
2	Decal				X-6246-1	X-6246-1			
2	Decal		X-6301-1	X-6301-1					
1	Decal		X-6301-3	X-6301-3					
1	Decal		X-6302-1	X-6302-1					
1	Bracket, housing support (r.h.)	225073							
1	Bracket, housing support (l.h.)	225074							
1	Plug	253268							
7	Latch, door	253373							
28	Plug, plastic door	253723							
2	Door, housing vented		254475-SD	254475-SD	254475-BLK	254475-BLK			
1	Door, rear housing		254476-SD	254476-SD	254476-BLK	254476-BLK			
4	Door, weather housing		273558-SD	273558-SD	273558-BLK	273558-BLK			
2	Decal				273739	273739			
1	Shroud, rear housing	324021							
1	Shroud, radiator	324042							
1	Roof, housing	324043							