

Universal Annunciator Configuration Table

Function	Config LEDs [N3 N2 N1] <S1>	Select Individual Input/LED <S2>	Front Panel LED Selection [Top LED . . . Bottom LED] <S3>	Value
Predefined Configuration Table	○ ○ ○			No Change ! Legacy NFPA 110
Report Battery Voltage in Status LEDs 11, 12, 13	○ ○ ●			** Don't Report ! Report 12 V Report 24 V Report 12V Hi-Low Report 24V Hi-Low
Neg./Pos Input Select	○ ● ○			Positive ! Negative
Network Configuration Address	○ ● ●			! ** 1 (NFPA 110) 2 3 4
Color and Flash for Individual LEDs	● ○ ○	Press <S2> to cycle through each of 20 LEDs		Solid Green Solid Yellow Solid Red Flashing Green Flashing Yellow Flashing Red Disabled
Audible Alert with Individual LEDs	● ○ ●	Press <S2> to cycle through each of 20 LEDs		Disabled Enabled
Invert Active Signal for Individual Inputs (Make one input B+ or B-)	● ● ○	Press <S2> to cycle through each of 20 LEDs		** Don't Invert Invert
Global Horn Enable	● ● ●			Disabled Enabled-Soft ! Enabled-Loud
! Factory Defined * Default when Legacy Predefined Table Selected ** Default when NFPA 110 Predefined Table Selected				