

QAS 330 JD AC

Engine 6090 HF485

Butadienic rubber is an extra layer (Rubber) that was added on the main stator windings to give extra protection against humidity, dust, and environmental conditions. This was designed for PRIME ENERGY only. This is not on standard units.

QAS 330 JD AC

Engine 6090 HF485

Parts Index 5

Warranty and Liability 7

Safety Precautions for Portable Generators..... 9

Ordering Spare Parts..... 13

Parts Lists 17



PARTS INDEX

PART	PAGE
A	
ADAPTER	34
AIR FILTER	28
AIR FILTER ELEMENT	28
AIR FILTER SAFETY CARTRIDGE	28
ALTERNATOR	21
ALTERNATOR ASSEMBLY	21
AMPERE METER	63
ANTIVIBRATION PAD	24
AUXILIARY RELAY	60
B	
BAFFLE	32, 51, 62
BAFFLE/FOAM.....	55, 62
BALL VALVE	30
BATTERY	34
BATTERY CABLE	34
BATTERY SWITCH.....	34
BEAM.....	38
BODYWORK AND MOUNTS	32, 33
BOX	21, 28
BUSHING	30, 36, 41
C	
CABLE CLAMP	60
CABLE CLIP	36
CABLE GLAND	21, 60
CABLE STRIP	32, 34, 36
CAP	32
CIRCUIT BREAKER.....	60, 63
CIRCUIT BREAKER PANEL	60
CIRCUIT BREAKER SUPPORT	60
CLAMP	34
CLAMP V-CLAMP	28
CLIP.....	45, 56
CONTACTOR	60
CONTROL PANEL	60, 63
CONTROLLER.....	63
COOLANT HEATER.....	41
COOLER	30, 47
COOLING	30, 31
COUPLING	20
COVER.....	21, 38, 59
COVER AIR FILTER.....	28
COVER PLATE.....	60
COWL	30
CU STRIPS & ACCESSORIES.....	21
CUBICLE	40, 60
CUBICLE AND ACCESSORIES.....	40
CURRENT TRANSFORMER.....	60
D	
DATA PLATE.....	42
DECAL	42
DOOR	32, 38, 57, 58, 60
DOOR CUBICLE.....	32, 54
DOOR REAR	52, 53
E	
ELBOW	28, 30, 36, 41
ELECTRICAL SYSTEM	34, 35
EMERGENCY STOP.....	60
ENGINE	28
ENGINE & ACCESSORIES.....	28, 29
ENGINE COOLANT	19

PART	PAGE
ENGINE OIL	18
EXHAUST COVER	28
EXTERNAL FUELTANK CONNECTION	36, 37
F	
FAN	30
FAN GUARD.....	30
FOAM ASSEMBLY	62
FRAME.....	59
FRAME AND FUELTANK.....	38, 59
FRAME AND ROOFS	38, 39
FRONT PANEL	32, 49, 50
FUEL HOSE	26, 30, 36
FUEL SYSTEM.....	26, 27
FUEL TANK.....	59
FUELTANK ASSEMBLY	59
FUNNEL.....	32
FUSE	60
FUSE HOLDER.....	60
H	
HANDLE	52, 53, 54
HEXAGON PLUG	28, 30, 59
HINGE	38, 48, 50, 52, 53, 54, 57, 58
HOLDER	32
HOOK.....	45, 46
HOSE	22, 28, 30, 41
HOSE ASSEMBLY	28
HOSE CLAMP	22, 26, 28, 30, 36, 41
HOSE CLIP	24
HOUSE MARK	42
HOUSING.....	60
I	
INDICATOR	28
INFO LABEL	60
INFORMATION LABEL	36, 42, 44
INSTRUCTION LABEL	42
INSULATION.....	28
INTERCOOLER.....	30
J	
JOINT	24
K	
KEY	32
L	
LABEL.....	42, 60, 63
LAMP	63
LEVEL GAUGE	26
LEVEL SWITCH.....	28
LIFTING BEAM MIDDLE.....	24
LIFTING EYE	24
LIFTING SUPPORT	24, 36
M	
MALE CONTACT.....	63
MALE INSERT	63
MARKINGS	42, 43, 44
MOUNTING BAND	28
MOUNTS ON FRAME	24, 25
MUFFLER	28

PARTS INDEX

PART	PAGE
------	------

O

OILPUMP	28
---------------	----

P

PANEL	63
PANELLIGHT	63
PARCOOL EG	19
PAROIL	18
PIPE	28
PIPE CLAMP	22, 26, 28, 30, 36
PIPE IC	30
PIPE RADIATOR	30
PLASTIC BAG	32
PLASTIC TUBE	22, 30
PLATE	21, 30, 32, 36, 59, 60
PLATE FUEL TANK	26
PLUG	24, 59
PLUG KIT	60
POTMETER	63
PROTECTION	30
PROTECTION CAP	34
PROTECTION COVER	60

Q

QUICK COUPLING	36
----------------------	----

R

RADIATOR CAP	30
RAIL	60
RAIN CAP	38
REAR DOOR	32, 52, 53
REAR PANEL	32, 47, 48
RECEPTACLE	60
RELAY	63
RESISTOR	63
RETAINER	38
ROCKWOOL	28
ROOF	36, 45, 46, 55, 56
ROUND BAR	28
RUBBER BUFFER	24

S

SELECTOR SWITCH	62
SERVICE DOOR	32, 36, 51
SERVICE PAK	17
SERVICE PLATE	60
SHIELD	28, 30
SHUNT TRIP	60
SOCKET	62
SOLENOID VALVE	22
SPACER	30
SPINDLE LOCK	63
SPLIT PIN	24
STRIP	61
SUPPORT	22, 24, 28, 34, 60
SUPPORT COOLER	30
SUPPORT ENGINE	24
SWITCH	21

T

TEE	22
TANK	22
TERMINAL	60
TERMINAL BOARD	60, 61

PART	PAGE
------	------

TERMINAL BOARD PANEL	60
TOPTANK	30

V

VALVE	22, 30, 36
VOLTAGE SWITCH	63
VOLTMETER	63

W

WARNING LABEL	42, 44
WINDOW	54
WIRING	34

Warranty and Liability Limitation

Use only authorized parts.

Any damage or malfunction caused by the use of unauthorized parts is not covered by Warranty or Product Liability.

The manufacturer does not accept any liability for any damage arising from modifications, additions or conversions made without the manufacturer's approval in writing.

Copyright 2004, Atlas Copco Airpower n.v., Antwerp, Belgium.

Any unauthorized use or copying of the contents or any part thereof is prohibited.

This applies in particular to trademarks, model denominations, part numbers and drawings.

Garantie- en aansprakelijkheidsbepalingen

Gebruik alleen originele onderdelen.

Beschadiging van defecten die het gevolg zijn van het gebruik van niet originele onderdelen vallen niet onder garantie of productaansprakelijkheid.

De producent is niet aansprakelijk voor enige schade veroorzaakt door modificatie, toevoeging of ombouw, gemaakt zonder de schriftelijke toestemming van de fabrikant.

Copyright 2004, Atlas Copco Airpower n.v., Antwerpen, België.

Het is niet toegestaan om zonder toestemming de inhoud geheel of gedeeltelijk te kopiëren of anderszins te gebruiken.

Dit betreft vooral trademarks, modelbenamingen, onderdeelnummers en tekeningen.

Limitation de garantie et de responsabilité

Utiliser uniquement les pièces homologuées.

Tout dommage ou mauvais fonctionnement dû à l'utilisation de pièces non homologuées n'est pas couvert par la garantie ou la responsabilité des produits défectueux.

Le fabricant décline toute responsabilité en cas de dommage faisant suite à des modifications, des ajouts ou des conversions effectués sans l'accord écrit du fabricant.

Copyright 2004, Atlas Copco Airpower n.v., Antwerp, Belgique.

Toute utilisation ou copie du contenu, ou d'une partie de celui-ci, non autorisée est interdite.

Cette interdiction s'applique en particulier aux marques de commerce, aux dénominations des modèles, aux numéros des pièces et aux schémas.

Garantie- und Haftungseinschränkungen

Nur zugelassene Teile verwenden.

Jede Beschädigung oder Fehlfunktion, die durch die Verwendung von nicht zugelassenen Teilen verursacht wurde, ist nicht durch die Garantie oder Produkthaftung abgedeckt.

Der Hersteller übernimmt keine Haftung für Schäden, die durch Modifizierungen, Ergänzungen oder Funktionsänderungen entstehen, die ohne schriftliche Zustimmung des Herstellers erfolgt sind.

Urheberrecht 2004, Atlas Copco Airpower n.v., Antwerpen, Belgien.

Jede nicht genehmigte Verwendung oder Kopie des Inhaltes oder von Teilen ist untersagt.

Das bezieht sich im Einzelnen auf Warenzeichen, Modellbezeichnungen, Teilenummern und Zeichnungen.

Limitación de garantía y responsabilidad

Use sólo piezas autorizadas.

La garantía o responsabilidad del producto no cubre ningún daño o funcionamiento defectuoso provocado por el uso de piezas no autorizadas.

El fabricante no acepta ninguna responsabilidad por los daños provocados por modificaciones, adiciones o conversiones realizadas sin la aprobación por escrito del fabricante.

Derechos de reproducción 2004, Atlas Copco Airpower n.v., Amberes, Bélgica.

Está prohibida toda utilización o reproducción total o parcial no autorizada de estos contenidos, en especial de las marcas registradas, denominaciones de modelos, números de piezas y planos.

Begränsningar av garanti och ansvarsskyldighet

Använd endast godkända delar.

Den skada eller funktionsoduglighet som förorsakats av att ej godkända delar har använts, täcks inte av garantin eller produktansvaret.

Tillverkaren accepterar ingen ansvarsskyldighet för skador som uppstår efter att ändringar, tillägg eller ombyggnader gjorts utan skriftligt tillstånd från tillverkaren.

Copyright 2004, Atlas Copco Airpower n.v., Antwerpen, Belgien.

Ej auktoriserad användning eller kopiering av innehållet, eller delar av det, är förbjuden.

Detta gäller speciellt varumärken, modellbeteckningar, reservdelsnummer och ritningar.

Limitazione di Garanzia e di Responsabilità

Usare solo componenti autorizzati.

Qualsiasi danno o malfunzione causati dall'uso di componenti non autorizzati non è coperto dalla Garanzia o dalla Responsabilità sul Prodotto.

Il fabbricante non accetta alcuna responsabilità per danni derivanti da modifiche, aggiunte o trasformazioni effettuate senza l'approvazione scritta del fabbricante.

Copyright 2004, Atlas Copco Airpower n.v., Anversa, Belgio.

Sono vietati ogni uso o copia non autorizzati del contenuto o di qualsiasi parte dello stesso.

Ciò si applica in particolare ai marchi, alle denominazioni dei modelli, ai numeri dei componenti ed ai disegni.

Garanti- og ansvarsbegrænsning

Brug kun tilladte reservedele.

Enhver skade eller fejlfunktion, forårsaget af brug af ikke tilladte reservedele, omfattes ikke af garantien eller produktansvaret.

Fabrikanten kan ikke drages til ansvar for nogen skade som følge af ændringer, udvidelser eller ombygninger, der er blevet udført uden fabrikantens skriftlige samtykke.

Copyright 2004, Atlas Copco Airpower n.v., Antwerpen, Belgien.

Enhver uautoriseret brug eller kopiering af indholdet eller dele deraf er forbudt.

Dette gælder især varemærker, modelbenævnelser, delnumre og tegninger.

Εγγύηση και Περιορισμός Ευθύνης

Χρησιμοποιήστε μόνο εγκεκριμένα εξαρτήματα.

Οποιαδήποτε ζημιά ή δυσλειτουργία προκληθεί από τη χρήση μη εγκεκριμένων εξαρτημάτων δεν καλύπτεται από την εγγύηση και την ευθύνη για το προϊόν.

Ο κατασκευαστής δεν αποδέχεται καμία ευθύνη για ζημιές που προκύπτουν από τροποποιήσεις, προσθήκες ή μετατροπές που έγιναν χωρίς τη γραπτή έγκριση του κατασκευαστή.

Copyright 2004, Atlas Copco Airpower n.v., Αμβέρσα, Βέλγιο.

Απαγορεύεται οποιαδήποτε χρήση ή αντιγραφή του περιεχόμενου ή οποιουδήποτε τμήματος του παρόντος χωρίς εξουσιοδότηση.

Αυτό ισχύει συγκεκριμένα για εμπορικά σήματα, ονομασίες μοντέλων, κωδικούς εξαρτημάτων και σχέδια.

Garanti og ansvarsbegrensning

Bruk kun autoriserte deler.

Enhver skade eller funksjonsfeil som skyldes bruk av uautoriserte deler dekkes ikke av garanti eller produktansvar.

Fabrikanten aksepterer intet ansvar for noen skade som oppstår på grunn av modifikasjoner, tilføyelser eller forandringer som er gjort uten fabrikantens skriftlige tillatelse.

Copyright 2004, Atlas Copco Airpower n.v., Antwerpen, Belgia.

All uautorisert bruk eller kopiering av innholdet eller en del av det er forbudt.

Dette gjelder særlig varemerker, modellbenevnelser, delenumre og tegninger.

Takuu ja vastuuvollisuuden rajoitus

Käytä vain valmistajan hyväksymiä varaosia.

Takuu ja tuotevastuu eivät kata vahinkoja tai toimintahäiriöitä, joiden syynä on muiden kuin hyväksytyjen varaosien käyttö.

Valmistaja ei vastaa vahingoista, jotka aiheutuvat ilman valmistajan kirjallista lupaa tehdyistä muutoksista tai lisäyksistä.

Copyright 2004, Atlas Copco Airpower n.v., Antwerpen, Belgia.

Sisällön osittainenkin käyttö tai kopiointi ilman lupaa on kielletty.

Tämä koskee erityisesti tavaramerkkejä, mallien nimiä, osanumeroita ja piirustuksia.

Garantijas un atbildības ierobežojumi

Izmantot tikai ieteiktās rezerves daļas.

Īd garantija nesedz bojājumus vai disfunkciju, kuri ir radušies neatītu rezerves daļu izmantošanas rezultātā.

Raportājs nepieņem pretenzijas par bojājumiem, kas izriet no modifikācijām, papildinājumiem vai pārveidojumiem bez raportāja rakstiskas piekrišanas.

Autortiesības 2004, Atlas Copco Airpower n.v., Antverpene, Beļija.

Jebkura neatītautā īd satura izmantošana vai kopšana ir aizliegta. Tas konkrēti attiecas uz tirdzniecības markām, modeļu denominācijām, daļu numuriem un rasējumiem.

Limites de Garantia e Responsabilidade

Utilize apenas peças autorizadas.
Avarias ou defeitos de funcionamento que sejam causados pelo uso de sobresselentes ou componentes não autorizados não serão cobertos pela Garantia ou pela Responsabilidade de Produto.
O fabricante não aceita qualquer responsabilidade por quaisquer danos resultantes de modificações, adições ou conversões efectuadas sem a aprovação escrita do fabricante.

Copyright 2004, Atlas Copco Airpower n.v., Antuérpia, Bélgica.
Qualquer uso não autorizado ou cópia do conteúdo ou de qualquer parte dele é proibida.
Isto aplica-se em particular a marcas registadas, denominações de modelos, números de peças e desenhos.

有限担保和责任

只允许使用经认可的零件。
因使用未经认可的零件而导致的任何损坏或故障不在本担保或产品责任所保障的范围之内。
未经制造商书面许可，制造商概不负责因擅自对设备进行改动、添加附件或改型而导致的设备损坏。

版权 2004，比利时安特卫普 Atlas Copco Airpower n.v.。
未经许可，禁止使用或复制本手册中所含的全部或任何一部分内容。
本公告特别适用于本手册所含的商标、型号名称、零件代号和图纸。

A garancia és felelősség korlátozása

Csak jóváhagyott alkatrészeket használjon!
A nem jóváhagyott alkatrészek használatából adódó sérülésekre és üzemzavarra nem terjed ki a garancia és a termékfelelősség.
A gyártó semminemű felelősséget nem vállal a gyártó írásos jóváhagyása nélkül végzett bármilyen módosításokból, kiegészítésekől vagy átalakításokból adódó sérülésekért.

Copyright 2004, Atlas Copco Airpower n.v., Antwerp, Belgium.
A kézikönyv tartalma vagy annak egy részének engedély nélküli felhasználása vagy másolása tilos.
Ez vonatkozik különösen a védjegyekre, a típusjelölésekre, cikkszámokra és rajzokra.

Záruka a obmedzenia zodpovednosti výrobcu

Používajte len schválené súčiastky.
Akákoľvek škoda alebo porucha spôsobená použitím neschválených súčiastok nie je zahrnutá v záruke ani zodpovednosti výrobcu za škodu.
Výrobca nepripúšťa žiadnu zodpovednosť za akékoľvek škody vzniknuté úpravou, pridaním alebo prerobením, ktoré boli vykonané bez predchádzajúceho písomného súhlasu výrobcu.

Autorské práva 2004, Atlas Copco Airpower n.v., Antverpy, Belgicko.
Akékoľvek neoprávnené použitie alebo kopírovanie obsahu, alebo jeho časti je zakázané.
Toto sa vzťahuje najmä na obchodné značky, modelové označenia, čísla súčiastok a nákresy.

Garantii ja piiratud vastutus

Kasutage ainult valmistaja poolt aktsepteeritud varuosi.
Mis tahes vigastus või rike, mille on põhjustanud valmistaja poolt aktsepteerimata varuosa kasutamine, ei kuulu toote garantii või tootja vastutuse alla.
Valmistaja ei aktsepteeri ühtegi riket, mis on tekkinud toote modifitseerimisest, lisandustest või ümberehitamisest, mida valmistaja ei ole kirjalikult heaks kiitnud.

Copyright 2004, Atlas Copco Airpower n.v., Antwerp, Belgium.
Käesoleva juhendi mistahes loata kasutamine või kopeerimine on keelatud.
See kehtib nii kaubamärkide, mudeli nimetuste, varuosade numbrite kui ka jooniste kohta.

Ограничение гарантии и ответственности

Используйте компоненты только авторизованных поставщиков.
Не распространяется гарантия и ответственность за продукцию при любых повреждениях или неисправностях в результате использования неавторизованных компонентов.
Производитель не несет никакой ответственности за любые повреждения, возникшие в результате модификации, дополнения или изменения, выполненные без письменного утверждения производителя.

Copyright 2004, Atlas Copco Airpower n.v., Антверпен, Бельгия.
Запрещается любое несанкционированное использование или копирование содержания этих материалов или их части.
В особенности это относится к торговым маркам, обозначениям моделей, номерам деталей и чертежам.

Gwarancja i ograniczenie odpowiedzialności

Stosować jedynie oryginalne części zamienne.
Jakiegokolwiek uszkodzenia lub niesprawności spowodowane stosowaniem niezaprobowanych części zamiennych nie są objęte gwarancją lub odpowiedzialnością za produkt.
Producent nie będzie ponosił żadnej odpowiedzialności za jakiegokolwiek szkody spowodowane modyfikacjami, dodatkami lub zmianami wykonanymi bez pisemnej zgody producenta.

Copyright 2004, Atlas Copco Airpower n.v., Antwerpia, Belgia.
Wszelkie stosowanie lub kopiowanie zawartości lub jakiegokolwiek części publikacji bez zezwolenia jest zabronione.
Dotyczy to szczególnie znaków handlowych, oznaczeń modeli, numerów części oraz rysunków.

Omezení záruky a odpovědnosti

Používejte pouze takové součásti, které jsou schválené výrobcem zařízení.
Jakékoliv poškození nebo závady způsobené použitím součástí, které nebyly schválené výrobcem zařízení, nejsou kryty zárukou, nebo odpovědností za výrobek.
Výrobce nepřijímá žádnou odpovědnost za jakékoliv škody, způsobené modifikacemi, doplňky nebo přestavbami zařízení provedenými bez předchozího písemného svolení.

Copyright 2004, Atlas Copco Airpower n.v., Antverpy, Belgie.
Jakékoliv neoprávněné použití nebo kopírování obsahu tohoto dokumentu nebo kterékoliv jeho částí je zakázáno.
Toto platí obzvláště pro obchodní známky, označení modelů, čísla součástí a výkresovou dokumentaci.

Garancijski pogoji in omejitve

Uporabljajte samo odobrene dele.
Garancija proizvajalca ni veljavna pri poškodbah ali motnjah v delovanju, ki so posledica uporabe neodobrenih delov.
Proizvajalec ne prevzema nikakršne odgovornosti za poškodbe, ki so nastale zaradi sprememb, dodatkov ali prilagoditev na izdelku, ki so bile izvedene brez pisne odobritve proizvajalca.

Copyright 2004, Atlas Copco Airpower n.v., Antwerp, Belgium.
Brez pisnega dovoljenja ni dovoljeno uporabljati ali razmnoževati nobenega dela dokumenta.
To velja še posebej za blagovne znamke, označbe modelov, številke izdelkov in risbe.

Garantijos ir atsakomybės galiojimas

Naudokite tik originalias dalis.
Garantija nebus taikoma tuo atveju, jeigu pala ar sutrikimas atsiranda naudojant neoriginalias dalis.
Gamintojas neprisiima jokios atsakomybės dėl žalos, susijusios su modifikacija, papildymu ar perdirbimu, atlikto be raštinio gamintojo sutikimo.

Autorties teisė 2004, “Atlas Copco Airpower n.v.”, Antverpenas, Belgija.
Neteisėtas viso teksto ar kurios nors jo dalies panaudojimas ar kopijavimas yra draudžiamas.
Viso pirma ši sąlyga taikoma prekiniams ženklams, modeliø pavadinimams, daliø numeriams ir brėžiniams.

1. SAFETY PRECAUTIONS FOR PORTABLE GENERATORS

To be read attentively and acted accordingly before towing, lifting, operating, performing maintenance or repairing the generator

1.1 INTRODUCTION

The policy of Atlas Copco is to provide the users of their equipment with safe, reliable and efficient products. Factors taken into account are among others:

- the intended and predictable future use of the products, and the environments in which they are expected to operate,
- applicable rules, codes and regulations,
- the expected useful product life, assuming proper service and maintenance,
- providing the manual with up-to-date information.

Before handling any product, take time to read the relevant instruction manual. Besides giving detailed operating instructions, it also gives specific information about safety, preventive maintenance, etc.

Keep the manual always at the unit location, easy accessible to the operating personnel.

See also the safety precautions of the engine and possible other equipment, which are separately sent along or are mentioned on the equipment or parts of the unit.

These safety precautions are general and some statements will therefore not always apply to a particular unit.

Only people that have the right skills should be allowed to operate, adjust, perform maintenance or repair on Atlas Copco equipment. It is the responsibility of management to appoint operators with the appropriate training and skill for each category of job.

Skill level 1: Operator

An operator is trained in all aspects of operating the unit with the push-buttons, and is trained to know the safety aspects.

Skill level 2: Mechanical technician

A mechanical technician is trained to operate the unit the same as the operator. In addition, the mechanical technician is also trained to perform maintenance and repair, as described in the instruction manual, and is allowed to change settings of the control and safety system. A mechanical technician does not work on live electrical components.

Skill level 3: Electrical technician

An electrical technician is trained and has the same qualifications as both the operator and the mechanical technician. In addition, the electrical technician may carry out electrical repairs within the various enclosures of the unit. This includes work on live electrical components.

Skill level 4: Specialist from the manufacturer

This is a skilled specialist sent by the manufacturer or its agent to perform complex repairs or modifications to the equipment.

In general it is recommended that not more than two people operate the unit, more operators could lead to unsafe operating conditions. Take necessary steps to keep unauthorized persons away from the unit and eliminate all possible sources of danger at the unit.

When handling, operating, overhauling and/or performing maintenance or repair on Atlas Copco equipment, the mechanics are expected to use safe engineering practices and to observe all relevant local safety requirements and ordinances. The following list is a reminder of special safety directives and precautions mainly applicable to Atlas Copco equipment.

Neglecting the safety precautions may endanger people as well as environment and machinery:

- endanger people due to electrical, mechanical or chemical influences,
- endanger the environment due to leakage of oil, solvents or other substances,
- endanger the machinery due to function failures.

All responsibility for any damage or injury resulting from neglecting these precautions or by non-observance of ordinary caution and due care required in handling, operating, maintenance or repair, also if not expressly mentioned in this instruction manual, is disclaimed by Atlas Copco.

The manufacturer does not accept any liability for any damage arising from the use of non-original parts and for modifications, additions or conversions made without the manufacturer's approval in writing.

If any statement in this manual does not comply with local legislation, the stricter of the two shall be applied.

Statements in these safety precautions should not be interpreted as suggestions, recommendations or inducements that it should be used in violation of any applicable laws or regulations.

1.2 GENERAL SAFETY PRECAUTIONS

- 1 The owner is responsible for maintaining the unit in a safe operating condition. Unit parts and accessories must be replaced if missing or unsuitable for safe operation.
- 2 The supervisor, or the responsible person, shall at all times make sure that all instructions regarding machinery and equipment operation and maintenance are strictly followed and that the machines with all accessories and safety devices, as well as the consuming devices, are in good repair, free of abnormal wear or abuse, and are not tampered with.
- 3 Whenever there is an indication or any suspicion that an internal part of a machine is overheated, the machine shall be stopped but no inspection covers shall be opened before sufficient cooling time has elapsed; this to avoid the risk of spontaneous ignition of oil vapour when air is admitted.
- 4 Normal ratings (pressures, temperatures, speeds, etc.) shall be durably marked.
- 5 Operate the unit only for the intended purpose and within its rated limits (pressure, temperature, speeds, etc.).
- 6 The machinery and equipment shall be kept clean, i.e. as free as possible from oil, dust or other deposits.
- 7 To prevent an increase in working temperature, inspect and clean heat transfer surfaces (cooler fins, intercoolers, water jackets, etc.) regularly. See the maintenance schedule.
- 8 All regulating and safety devices shall be maintained with due care to ensure that they function properly. They may not be put out of action.
- 9 Pressure and temperature gauges shall be checked regularly with regard to their accuracy. They shall be replaced whenever outside acceptable tolerances.
- 10 Safety devices shall be tested as described in the maintenance schedule of the instruction manual to determine that they are in good operating condition.
- 11 Mind the markings and information labels on the unit.
- 12 In the event the safety labels are damaged or destroyed, they must be replaced to ensure operator safety.
- 13 Keep the work area neat. Lack of order will increase the risk of accidents.
- 14 When working on the unit, wear safety clothing. Depending on the kind of activities these are: safety glasses, ear protection, safety helmet (including visor), safety gloves, protective clothing, safety shoes. Do not wear the hair long and loose (protect long hair with a hairnet), or wear loose clothing or jewelry.
- 15 Take precautions against fire. Handle fuel, oil and anti-freeze with care because they are inflammable substances. Do not smoke or approach with naked flame when handling such substances. Keep a fire-extinguisher in the vicinity.
- 16a **Portable generators (with earthing pin):**
Earth the generator as well as the load properly.
- 16b **Portable generators IT:**
Note: This generator is built to supply a sheer alternating current IT network.
Earth the load properly.

1.3 SAFETY DURING TRANSPORT AND INSTALLATION

To lift a unit, all loose or pivoting parts, e.g. doors and towbar, shall first be securely fastened.

Do not attach cables, chains or ropes directly to the lifting eye; apply a crane hook or lifting shackle meeting local safety regulations. Never allow sharp bends in lifting cables, chains or ropes.

Helicopter lifting is not allowed.

It is strictly forbidden to dwell or stay in the risk zone under a lifted load. Never lift the unit over people or residential areas. Lifting acceleration and retardation shall be kept within safe limits.

- 1 Before towing the unit:
 - check the towbar, the brake system and the towing eye. Also check the coupling of the towing vehicle,
 - check the towing and brake capability of the towing vehicle,
 - check that the towbar, jockey wheel or stand leg is safely locked in the raised position,
 - ascertain that the towing eye can swivel freely on the hook,
 - check that the wheels are secure and that the tyres are in good condition and inflated correctly,
 - connect the signalisation cable, check all lights and connect the pneumatic brake couplers,
 - attach the safety break-away cable or safety chain to the towing vehicle,
 - remove wheel chocks, if applied, and disengage the parking brake.
- 2 To tow a unit use a towing vehicle of ample capacity. Refer to the documentation of the towing vehicle.
- 3 If the unit is to be backed up by the towing vehicle, disengage the overrun brake mechanism (if it is not an automatic mechanism).
- 4 Never exceed the maximum towing speed of the unit (mind the local regulations).
- 5 Place the unit on level ground and apply the parking brake before disconnecting the unit from the towing vehicle. Unclip the safety break-away cable or safety chain. If the unit has no parking brake or jockey wheel, immobilize the unit by placing chocks in front of and/or behind the wheels. When the towbar can be positioned vertically, the locking device must be applied and kept in good order.
- 6 To lift heavy parts, a hoist of ample capacity, tested and approved according to local safety regulations, shall be used.
- 7 Lifting hooks, eyes, shackles, etc., shall never be bent and shall only have stress in line with their design load axis. The capacity of a lifting device diminishes when the lifting force is applied at an angle to its load axis.
- 8 For maximum safety and efficiency of the lifting apparatus all lifting members shall be applied as near to perpendicular as possible. If required, a lifting beam shall be applied between hoist and load.
- 9 Never leave a load hanging on a hoist.
- 10 A hoist has to be installed in such a way that the object will be lifted perpendicular. If that is not possible, the necessary precautions must be taken to prevent load-swinging, e.g. by using two hoists, each at approximately the same angle not exceeding 30° from the vertical.
- 11 Locate the unit away from walls. Take all precautions to ensure that hot air exhausted from the engine and driven machine cooling systems cannot be recirculated. If such hot air is taken in by the engine or driven machine cooling fan, this may cause overheating of the unit; if taken in for combustion, the engine power will be reduced.
- 12 Generators shall be stalled on an even, solid floor, in a clean location with sufficient ventilation. If the floor is not level or can vary in inclination, consult Atlas Copco.
- 13 The electrical connections shall correspond to local codes. The machines shall be earthed and protected against short circuits by fuses or circuit breakers.
- 14 Never connect the generator outlets to an installation which is also connected to a public mains.
- 15 Before connecting a load, switch off the corresponding circuit breaker, and check whether frequency, voltage, current and power factor comply with the ratings of the generator.

1.4 SAFETY DURING USE AND OPERATION

- 1 When the unit has to operate in a fire-hazardous environment, each engine exhaust has to be provided with a spark arrestor to trap incendiary sparks.
- 2 The exhaust contains carbon monoxide which is a lethal gas. When the unit is used in a confined space, conduct the engine exhaust to the outside atmosphere by a pipe of sufficient diameter; do this in such a way that no extra back pressure is created for the engine. If necessary, install an extractor. Observe any existing local regulations. Make sure that the unit has sufficient air intake for operation. If necessary, install extra air intake ducts.
- 3 When operating in a dust-laden atmosphere, place the unit so that dust is not carried towards it by the wind. Operation in clean surroundings considerably extends the intervals for cleaning the air intake filters and the cores of the coolers.
- 4 Never remove a filler cap of the cooling water system of a hot engine. Wait until the engine has sufficiently cooled down.
- 5 Never refill fuel while the unit is running, unless otherwise stated in the Atlas Copco Instruction Book (AIB). Keep fuel away from hot parts such as air outlet pipes or the engine exhaust. Do not smoke when fuelling. When fuelling from an automatic pump, an earthing cable should be connected to the unit to discharge static electricity. Never spill nor leave oil, fuel, coolant or cleansing agent in or around the unit.
- 6 All doors shall be shut during operation so as not to disturb the cooling air flow inside the bodywork and/or render the silencing less effective. A door should be kept open for a short period only e.g. for inspection or adjustment.
- 7 Periodically carry out maintenance works according to the maintenance schedule.
- 8 Stationary housing guards are provided on all rotating or reciprocating parts not otherwise protected and which may be hazardous to personnel. Machinery shall never be put into operation, when such guards have been removed, before the guards are securely reinstalled.
- 9 Noise, even at reasonable levels, can cause irritation and disturbance which, over a long period of time, may cause severe injuries to the nervous system of human beings.
When the sound pressure level, at any point where personnel normally has to attend, is:
 - below 70 dB(A): no action needs to be taken,
 - above 70 dB(A): noise-protective devices should be provided for people continuously being present in the room,
 - below 85 dB(A): no action needs to be taken for occasional visitors staying a limited time only,
 - above 85 dB(A): room to be classified as a noise-hazardous area and an obvious warning shall be placed permanently at each entrance to alert people entering the room, for even relatively short times, about the need to wear ear protectors,
 - above 95 dB(A): the warning(s) at the entrance(s) shall be completed with the recommendation that also occasional visitors shall wear ear protectors,
 - above 105 dB(A): special ear protectors that are adequate for this noise level and the spectral composition of the noise shall be provided and a special warning to that effect shall be placed at each entrance.
- 10 Insulation or safety guards of parts the temperature of which can be in excess of 80 °C (175 °F) and which may be accidentally touched by personnel shall not be removed before the parts have cooled to room temperature.
- 11 Never operate the unit in surroundings where there is a possibility of taking in flammable or toxic fumes.
- 12 If the working process produces fumes, dust or vibration hazards, etc., take the necessary steps to eliminate the risk of personnel injury.

- 13 When using compressed air or inert gas to clean down equipment, do so with caution and use the appropriate protection, at least safety glasses, for the operator as well as for any bystander. Do not apply compressed air or inert gas to your skin or direct an air or gas stream at people. Never use it to clean dirt from your clothes.
- 14 When washing parts in or with a cleaning solvent, provide the required ventilation and use appropriate protection such as a breathing filter, safety glasses, rubber apron and gloves, etc.
- 15 Safety shoes should be compulsory in any workshop and if there is a risk, however small, of falling objects, wearing of a safety helmet should be included.
- 16 If there is a risk of inhaling hazardous gases, fumes or dust, the respiratory organs must be protected and depending on the nature of the hazard, so must the eyes and skin.
- 17 Remember that where there is visible dust, the finer, invisible particles will almost certainly be present too; but the fact that no dust can be seen is not a reliable indication that dangerous, invisible dust is not present in the air.
- 18 Never operate the generator in excess of its limits as indicated in the technical specifications and avoid long no-load sequences.
- 19 Never operate the generator in a humid atmosphere. Excessive moisture causes worsening of the generator insulation.
- 20 Do not open electrical cabinets, cubicles or other equipment while voltage is supplied. If such cannot be avoided, e.g. for measurements, tests or adjustments, have the action carried out by a qualified electrician only, with appropriate tools, and ascertain that the required bodily protection against electrical hazards is applied.
- 21 Never touch the power terminals during operation of the machine.
- 22 Whenever an abnormal condition arises, e.g. excessive vibration, noise, odour, etc., switch the circuit breakers to OFF and stop the engine. Correct the faulty condition before restarting.
- 23 Check the electric cables regularly. Damaged cables and insufficient lightening of connections may cause electric shocks. Whenever damaged wires or dangerous conditions are observed, switch the circuit breakers to OFF and stop the engine. Replace the damaged wires or correct the dangerous condition before restarting. Make sure that all electric connections are securely tightened.
- 24 Avoid overloading the generator. The generator is provided with circuit breakers for overload protection. When a breaker has tripped, reduce the concerned load before restarting.
- 25 If the generator is used as stand-by for the mains supply, it must not be operated without control system which automatically disconnects the generator from the mains when the mains supply is restored.
- 26 Never remove the cover of the output terminals during operation. Before connecting or disconnecting wires, switch off the load and the circuit breakers, stop the machine and make sure that the machine cannot be started inadvertently or there is any residual voltage on the power circuit.
- 27 Running the generator at low load for long periods will reduce the lifetime of the engine.

1.5 SAFETY DURING MAINTENANCE AND REPAIR

Maintenance, overhaul and repair work shall only be carried out by adequately trained personnel; if required, under supervision of someone qualified for the job.

- 1 Use only the correct tools for maintenance and repair work, and only tools which are in good condition.
- 2 Parts shall only be replaced by genuine Atlas Copco replacement parts.
- 3 All maintenance work, other than routine attention, shall only be undertaken when the unit is stopped. Steps shall be taken to prevent inadvertent starting. In addition, a warning sign bearing a legend such as "work in progress; do not start" shall be attached to the starting equipment.
On engine-driven units the battery shall be disconnected and removed or the terminals covered by insulating caps.
On electrically driven units the main switch shall be locked in open position and the fuses shall be taken out. A warning sign bearing a legend such as "work in progress; do not supply voltage" shall be attached to the fuse box or main switch.
- 4 Prior to stripping an engine or other machine or undertaking major overhaul on it, prevent all movable parts from rolling over or moving.
- 5 Make sure that no tools, loose parts or rags are left in or on the machine. Never leave rags or loose clothing near the engine air intake.
- 6 Never use flammable solvents for cleaning (fire-risk).
- 7 Take safety precautions against toxic vapours of cleaning liquids.
- 8 Never use machine parts as a climbing aid.
- 9 Observe scrupulous cleanliness during maintenance and repair. Keep away dirt, cover the parts and exposed openings with a clean cloth, paper or tape.
- 10 Never weld on or perform any operation involving heat near the fuel or oil systems. Fuel and oil tanks must be completely purged, e.g. by steam-cleaning, before carrying out such operations. Never weld on, or in any way modify, pressure vessels. Disconnect the alternator cables during arc welding on the unit.
- 11 Support the towbar and the axle(s) securely if working underneath the unit or when removing a wheel. Do not rely on jacks.
- 12 Do not remove any of, or tamper with, the sound-damping material. Keep the material free of dirt and liquids such as fuel, oil and cleansing agents. If any sound-damping material is damaged, replace it to prevent the sound pressure level from increasing.
- 13 Use only lubricating oils and greases recommended or approved by Atlas Copco or the machine manufacturer. Ascertain that the selected lubricants comply with all applicable safety regulations, especially with regard to explosion or fire-risk and the possibility of decomposition or generation of hazardous gases. Never mix synthetic with mineral oil.
- 14 Protect the engine, alternator, air intake filter, electrical and regulating components, etc., to prevent moisture ingress, e.g. when steam-cleaning.
- 15 When performing any operation involving heat, flames or sparks on a machine, the surrounding components shall first be screened with non-flammable material.
- 16 Never use a light source with open flame for inspecting the interior of a machine.
- 17 When repair has been completed, the machine shall be barred over at least one revolution for reciprocating machines, several revolutions for rotary ones to ensure that there is no mechanical interference within the machine or driver. Check the direction of rotation of electric motors when starting up the machine initially and after any alteration to the electrical connection(s) or switch gear, to check that the oil pump and the fan function properly.

-
- 18 Maintenance and repair work should be recorded in an operator's logbook for all machinery. Frequency and nature of repairs can reveal unsafe conditions.
 - 19 When hot parts have to be handled, e.g. shrink fitting, special heat-resistant gloves shall be used and, if required, other body protection shall be applied.
 - 20 When using cartridge type breathing filter equipment, ascertain that the correct type of cartridge is used and that its useful service life is not surpassed.
 - 21 Make sure that oil, solvents and other substances likely to pollute the environment are properly disposed of.
 - 22 Before clearing the generator for use after maintenance or overhaul, submit it to a testrun, check that the AC power performance is correct and that the control and shutdown devices function correctly.

1.6 TOOL APPLICATIONS SAFETY

Apply the proper tool for each job. With the knowledge of correct tool use and knowing the limitations of tools, along with some common sense, many accidents can be prevented.

Special service tools are available for specific jobs and should be used when recommended. The use of these tools will save time and prevent damage to parts.

1.7 SPECIFIC SAFETY PRECAUTIONS

Batteries

When servicing batteries, always wear protecting clothing and glasses.

- 1 The electrolyte in batteries is a sulphuric acid solution which is fatal if it hits your eyes, and which can cause burns if it contacts your skin. Therefore, be careful when handling batteries, e.g. when checking the charge condition.
- 2 Install a sign prohibiting fire, open flame and smoking at the post where batteries are being charged.
- 3 When batteries are being charged, an explosive gas mixture forms in the cells and might escape through the vent holes in the plugs.
Thus an explosive atmosphere may form around the battery if ventilation is poor, and can remain in and around the battery for several hours after it has been charged. Therefore:
 - never smoke near batteries being, or having recently been, charged,
 - never break live circuits at battery terminals, because a spark usually occurs.
- 4 When connecting an auxiliary battery (AB) in parallel to the unit battery (CB) with booster cables: connect the + pole of AB to the + pole of CB, then connect the - pole of CB to the mass of the unit. Disconnect in the reverse order.

ORDERING SPARE PARTS

ORDERING SPARE PARTS

Always quote the part number, the designation and the quantity of the parts required, as well as the type and the serial number of the machine.

EXPLANATION OF THE COLUMNS

REF : REFERENCE CODE

Establishes the connection between a part in the list and a part in the illustration.

"—" means that the part is not shown in the illustration.

PART NUMBER

If no part number is given, the part cannot be obtained as a spare part. Parts marked with a dot are part of the assembly listed right above them.

DESIGNATION

Usually this is the name of the part. For standard parts, in addition to the name, a number of characteristics are given.

QTY : QUANTITY

Indicates the quantity of the part concerned. "AR" stands for "As Required".

BESTELLEN VAN ONDERDELEN

Vermeld steeds het onderdeelnummer, de benaming en het aantal van de gewenste stukken, evenals het type en het serienummer van de machine.

TOELICHTING BIJ DE KOLOMMEN

REF : REFERENTIECODE

Legt het verband tussen een onderdeel uit de lijst en een onderdeel op de tekening. "—" betekent dat het onderdeel niet is getekend.

PART NUMBER : ONDERDEELNUMMER

Indien niet opgegeven is het onderdeel niet als wisselstuk beschikbaar. Onderdelen aangeduid met een stip maken deel uit van het geheel dat boven de betreffende onderdelen staat.

DESIGNATION : BENAMING

Meestal de benaming van het onderdeel. In het geval van standaard onderdelen worden naast de benaming een aantal karakteristieken opgegeven.

QTY : AANTAL

Geeft de hoeveelheid van het betreffende onderdeel weer. De aanduiding "AR" betekent "As Required" (zoals vereist).

COMMANDE DE PIÈCES DETACHEES

Toujours indiquer le numéro de pièce, la désignation, la quantité désirée ainsi que le type et le numéro de série du groupe.

EXPLICATION DES INTITULES DES COLONNES

REF : CODE DE REFERENCE

Réfère à la pièce détachée spécifiée dans la liste et sur l'illustration. "—" implique que la pièce n'est pas indiquée sur l'illustration.

PART NUMBER : NUMERO DE PIECE DETACHEE

Si le numéro n'est pas indiqué, la pièce n'est pas disponible en tant que pièce de rechange.

Les pièces indiquées par un point gras font partie de l'ensemble se trouvant au-dessus des pièces détachées correspondantes.

DESIGNATION

En général, le nom de la pièce. S'il s'agit de pièces standard, outre la désignation, un certain nombre de caractéristiques sont indiquées.

QTY : QUANTITE

Indique la quantité de la pièce détachée. "AR" indique "As required", c'est-à-dire la quantité à déterminer selon le cas.

BESTELLUNG VON ERSATZTEILEN

Stets die Teilenummer, die Bezeichnung, und die Anzahl der gewünschten Teile sowie den Typ und die Seriennummer der Maschine angeben.

INFORMATION ZU DEN SPALTEN

REF : REFERENZCODE

Stellt die Verbindung zwischen einem Teil in der Liste und einem Teil auf der Zeichnung her. "—" bedeutet, daß das Teil nicht in der Zeichnung dargestellt ist.

PART NUMBER : TEILENUMMER

Wenn keine Teilenummer angegeben ist, ist das Teil nicht als Ersatzteil erhältlich.

Mit einem Punkt markierte Teile gehören zu der Einheit, die über den jeweiligen Teilen aufgeführt ist.

DESIGNATION : BEZEICHNUNG

Meistens die Bezeichnung des Teils. Bei Standardteilen werden neben der Bezeichnung einige technische Daten angegeben.

QTY : ANZAHL

Gibt die Anzahl des betreffenden Teils an. Die Angabe "AR" steht für "As Required" (wie erforderlich).

PEDIDO DE PARTES

Siempre comunicar el número de parte, la designación y la cantidad deseada así como el tipo y el número de serie de la máquina.

INFORMACIONES SOBRE LAS COLUMNAS

REF : CODIGO DE REFERENCIA

Establece la conexión entre una parte en la lista y una parte en la ilustración.

"—" quiere decir que la parte no está ilustrada.

PART NUMBER : NUMERO DE PARTE

Si no se da ningún número, quiere decir que la parte no está disponible como parte de recambio.

Partes marcadas con un punto son partes del conjunto indicado más arriba.

DESIGNATION : DESIGNACION

Principalmente el nombre de la parte. En caso de partes estándares, el nombre es seguido por especificaciones.

QTY : CANTIDAD

Indica la cantidad de la parte correspondiente. La indicación "AR" significa "As Required" (como sea requerido).

BESTÄLLNING AV RESERVDLAR

Ange alltid reservdelsnummer, benämning och kvantitet för varje önskad detalj samt maskinens typ och tillverkningsnummer.

TÖRKLARING AV SPALTER

REF : REFERENSNUMMER

Identifierar motsvarande detaljer i listan och illustrationen. "—" betyder att detaljen inte visas i illustrationen.

PART NUMBER : RESERVDLSNUMMER

Om inget reservdelsnummer anges, kan detaljen inte erhållas som reservdel. Detaljer som anges med en punkt ingår i den monteringsats som listas ovanför dessa.

DESIGNATION : BENÄMNING

Detta är vanligen namnet på detaljen. För standarddetaljer anges förutom namnet ett antal specifikationer.

QTY : KVANTITET

Anger den ifrågavarande detaljens kvantitet. "AR" (As Required) betyder enligt behov.

ORDERING SPARE PARTS

ORDINAZIONE DI PARTI DI RICAMBIO

Menzionare sempre il numero della parte, la denominazione e il numero de pezzi desiderati, nonché il tipo e il numero di serie della macchina.

SPIEGAZIONE DELLE COLONNE

REF : CODICE DI RIFERIMENTO

Stabilisce il nesso tra un pezzo nell'elenco e un pezzo nell'illustrazione. "—" significa che il pezzo non è presente nell'illustrazione.

PART NUMBER : NUMERO DELLA PARTE

Nel caso non sia fornito il numero di parte, il pezzo non può essere ordinato come parte di ricambio.

Il componenti indicati con un puntino fanno parte del gruppo elencato immediatamente sopra di essi.

DESIGNATION : DENOMINAZIONE

Generalmente si tratta della denominazione della parte. Per i pezzi standard oltre alla denominazione sono fornite alcune caratteristiche.

QTY : QUANTITA'

Indica la quantità dei pezzi in questione. "AR" significa "As Required" (Come richiesto).

ΠΑΡΑΓΓΕΛΙΑ ΑΝΤΑΛΛΑΚΤΙΚΩΝ

Πάντοτε σημειώνετε τον κωδικό, τον προσδιορισμό και την ποσότητα των απαιτούμενων ανταλλακτικών, καθώς επίσης τον τύπο και τον αύξοντα κωδικό αριθμό παραγωγής του μηχανήματος.

ΕΞΗΓΗΣΗ ΤΩΝ ΣΤΗΛΩΝ

REF : ΚΩΔΙΚΟΣ ΑΝΑΦΟΡΑΣ

Παρουσιάζει τη σχέση μεταξύ ενός εξαρτήματος στη λίστα και ενός εξαρτήματος στη φωτογραφία. Το "—" σημαίνει ότι το εξάρτημα δεν εμφανίζεται στη φωτογραφία.

PART NUMBER : ΚΩΔΙΚΟΣ ΑΡΙΘΜΟΣ

Αν δεν δίνεται κάποιος κωδικός αριθμός, τότε το εξάρτημα δεν μπορεί να ληφθεί ως ανταλλακτικό.

Τα εξαρτήματα που έχουν μαρκαρισθεί με μία τελεία είναι τμήματα του συγροτήματος που παρουσιάζεται ακριβώς πάνω από αυτά.

DESIGNATION : ΠΡΟΣΔΙΟΡΙΣΜΟΣ

Συνήθως αυτό είναι το όνομα του εξαρτήματος. Για τα βασικά εξαρτήματα, επιπροσθέτα στην ονομασία, δίνεται και ένας αριθμός χαρακτηριστικών.

QTY : ΠΟΣΟΤΗΤΑ

Δηλώνει την ποσότητα του υπόψη εξαρτήματος. "AR" σημαίνει "Ως απαιτείται". Για τα βασικά εξαρτήματα, η ποσότητα δίνεται στη φωτογραφία παρά στη λίστα.

BESTÄLLNING AV RESERVDELAR

Ange alltid reservdelsnummer, benämning och kvantitet för varje önskad detalj samt maskinens typ och tillverkningsnummer.

TÖRKLARING AV SPALTER

REF : REFERENSNUMMER

Identifierar motsvarande detaljer i listan och illustrationen. "—" betyder att detaljen inte visas i illustrationen.

PART NUMBER : RESERVDELNUMMER

Om inget reservdelsnummer anges, kan detaljen inte erhållas som reservdel. Detaljer som anges med en punkt ingår i den monteringslistan som listas ovanför dessa.

DESIGNATION : BENÄMNING

Detta är vanligen namnet på detaljen. För standarddetaljer anges förutom namnet ett antal specifikationer.

QTY : KVANTITET

Anger den ifrågavarande detaljens kvantitet. "AR" (As Required) betyder enligt behov.

ONCOMENDAS DE PEÇAS

Refira sempre o número da peça, a designação e a quantidade das peças que pretende encomendar, assim como o tipo e o número de série do aparelho.

EXPLICAÇÃO DAS COLUNAS

REF : CÓDIGO DE REFERÊNCIA

Estabeleça a ligação entre a peça na lista e a peça no desenho. "—" significa que a peça não vem no desenho.

PART NUMBER : NÚMERO DA PEÇA

Se não vier referido o número da peça, a peça não pode ser adquirida como peça sobressalente.

As peças marcadas com pontos são peças de um conjunto listado acima dessa peça.

DESIGNATION : DESIGNAÇÃO

Geralmente é o nome da peça. Para peças normalizadas, além do nome da peça, vem também referido um número.

QTY : QUANTIDADE

Indica a quantidade da peça em questão. "AR" (As Required) quer dizer "Como solicitado".

BESTILLING AV RESERVEDELER

Oppgi alltid delenummer, betegnelse og antall på de delene du trenger, samt maskintype og serienummer.

FORKLARING TIL SPALTENE

REF: REFERANSEKODE

Viser hvor en del i listen er vist på illustrasjonen. "-" betyr at delen ikke er vist på illustrasjonen.

DELENUMMER

Hvis delenummer ikke er oppgitt, kan delen ikke bestilles som reservedel. Deler merket med en prikk er del av enheten som er oppgitt like ovenfor de aktuelle delene.

BETEGNELSE

Dette er vanligvis delens navn. Ved standarddeler blir enkelte karakteristika oppgitt i tillegg til navnet.

QTY: ANTALL

Oppgir antallet av den aktuelle delen. "EB" betyr "Etter behov".

VARAOSIEN TILAAMINEN

Tilauksessa tulee aina mainita osanumero, nimike ja määrä sekä kompressorin tyyppi ja sarjanumero.

SARAKKEIDEN SELITYKSET

REF: VIITE: VIITEKOODI

Viitekoodi yhdistää luettelossa mainitun osan kuvassa olevaan. "—" tarkoittaa, että osaa ei ole merkitty kuvaan.

PART NUMBER: OSANUMERO

Ellei osanumeroa ole mainittu, osaa ei ole saatavana varaosana. Pisteellä merkityt osat kuuluvat niiden edellä mainittuun asennelmaan.

DESIGNATION: NIMIKE

Nimikkeenä käytetään tavallisesti osan nimeä. Vakio-osien ollessa kyseessä mainitaan nimen lisäksi osan joitakin ominaisuuksia.

QTY: MÄÄRÄ

Tarkoittaa kyseisten osien lukumäärää. "AR" tarkoittaa "tarpeen mukaan".

ORDERING SPARE PARTS

ZAMAWIANIE CZĘŚCI ZAMIENNYCH

Należy zawsze podawać numery, nazwy i ilości potrzebnych części, a także typ i numer seryjny maszyny.

WYJAŚNIENIE PRZEZNACZENIA KOLUMN

REF: KOD REFERENCYJNY

Kojarzy część na liście z częścią na ilustracji.
Symbol “-” oznacza, że część nie jest przedstawiona na ilustracji.

PART NUMBER (NUMER CZĘŚCI)

Brak numeru oznacza, że dana część nie jest dostępna jako część zamienna.
Części oznaczone kropką należą do zespołu wymienionego bezpośrednio nad nimi.

DESIGNATION (NAZWA)

Zwykle jest to nazwa części. W przypadku części standardowych oprócz nazwy podano szereg właściwości.

QTY (IL.): ILOŚĆ

Ilość części danego rodzaju. “AR” (“OP”) oznacza “odpowiednio do potrzeb”.

Заказ запасных частей

Необходимо всегда указывать номер детали, наименование и количество заказываемых запчастей, а также тип и серийный номер устройства.

Расшифровка столбцов

ИЛЛ. : код сноски

Показывает ссылку детали в списке на ее соответствующую иллюстрацию.

“-” означает, что к данной детали нет иллюстраций.

НОМЕР ДЕТАЛИ

Отсутствие номера детали означает, что данная деталь как запчасть не поставляется.

Детали, помеченные точкой, являются частями сборного механизма, который указан над этими деталями.

НАИМЕНОВАНИЕ

Обычно, название детали. К стандартным деталям, кроме названия, могут быть даны некоторые их характеристики.

КОЛ-ВО: Количество

Показывает количество деталей. «По тр.» означает «по требованию».

OBJEDNÁVÁNÍ NÁHRADNÍCH DÍLŮ

V objednávce vždy uveďte číslo dílu, jeho označení a požadované množství. Rovněž tak udejte typ a výrobní číslo zařízení.

VYSVĚTLIVKY K JEDNOTLIVÝM SLOUPCŮM

REF : REFERENČNÍ KÓD

Udává spojitost mezi dílem v seznamu a dílem na obrázku.
“-” znamená, že díl není na obrázku uveden.

ČÍSLO DÍLU

Pokud není číslo dílu uvedeno, nelze tuto součást objednat jako náhradní díl.
Díly označené tečkami jsou součástí konstrukčního celku, který je uveden přímo nad nimi.

OZNAČENÍ

Ve sloupci označení bývá obvykle uveden název dílu. U standardních součástí je vedle názvu uváděna též řada dalších charakteristik.

POČET : MNOŽSTVÍ

Označuje množství uvedených dílů. Zkratka “PP” znamená “Podle požadavku”.

PÓTALKAKTRÉSZ-RENDELÉS

Mindig jelezze a szükséges alkatrész számát, megnevezését és mennyiségét, valamint a gép típusát és sorozatszámát.

AZ OSZLOPOK MAGYARÁZATA

REF: REFERENCIAKÓD

Ez teremt kapcsolatot a listán szereplő alkatrész és az ábrán látható alkatrész között.

“-”: azt jelenti, hogy az adott alkatrész nem szerepel az ábrán.

ALKATRÉSZ-SZÁM

Ha nincsen megadva alkatrész-szám, akkor az adott alkatrész nem rendelhető meg pótalkatrészként.

A ponttal jelölt alkatrészek a közvetlenül fölöttük felsorolt szerelvény részét képezik.

MEGNEVEZÉS

Rendszerint ez az alkatrész neve. Az alapfelszereltséghez tartozó alkatrészek esetében a név mellett néhány jellemző adat is szerepel.

QTY: MENNYISÉG

Az adott alkatrész mennyiségét jelzi. “SZ” jelentése “Szükség szerint”

订购备件

请务必提供所需部件的部件号、名称和数量，以及设备型号和序列号。

表格各列说明

REF: 参考代码

确立列表内部件与插图内部件间的联系。

“-”表示插图内未显示此部件。

部件号

如果未给出部件号，则表明无法通过备件方式购买此部件。
标有圆点的部件是其上一行所列配件的一部分。

名称

通常为部件的名称。对于标准件，除了名称外，还会列出它的一些特性。

QTY: 数量

表明可供部件的数量。“AR”代表“根据需要”

OBJEDNÁVANIE NÁHRADNÝCH SÚČIASTOK

Uvádzajte vždy číslo súčiastky, označenie a množstvo požadovaných súčiastok, ako aj typ a výrobné číslo stroja.

VYSVETLENIE STĺPCOV

REF : REFERENČNÝ KÓD

Stanovuje spojitost medzi súčiastkou v zozname a súčiastkou na obrázku.
“-” znamená, že súčiastka nie je zobrazená na obrázku.

ČÍSLO SÚČIASTKY

Ak nie je uvedené žiadne číslo súčiastky, táto súčiastka nie je k dispozícii ako náhradná.
Súčiastky označené bodkou sú časťou zostavy uvedenej hneď nad nimi.

OZNAČENIE

Obyčajne je to názov súčiastky. U normalizovaných súčiastok sa okrem názvu uvádza aj niekoľko charakteristík

QTY : MNOŽSTVO

Označuje množstvo danej súčiastky. "AR" je skratka pre "Podľa potreby".

ORDERING SPARE PARTS

NAROČEVANJE NADOMESTNIH DELOV

Zmeraj navedite številko nadomestnega dela, označbo in količino potrebnih delov ter tip in serijsko številko stroja.

RAZLAGA STOLPCEV

REF : REFERENČNA ŠIFRA

Predstavlja povezavo med delom na seznamu in delom na ilustraciji. "–" predstavlja del, ki ni prikazan na ilustraciji.

ŠTEVILKA DELA

Če številka dela ni podana potem je ne morete dobiti kot nadomestni del. Deli označeni s piko so sestavni del montaže, navedene nad njimi.

OZNAČBA

Običajno je to ime nadomestnega dela. Pri standardnih delih je poleg imena podano še število značilnosti.

QTY : KOLIČINA

Označuje količino nadomestnih delov. "AR" pomeni "kot je bilo zahtevano".

VARUOSADE TELLIMINE

Alati viidake osa numbrile, tähisele ja vajalikule osade kogusele, samuti masina tüübile ja seerianumbrile.

SELGITUS VEERGUDE KOHTA

REF : VIITENUMBER

Loob seose nimekirjas toodud osa ja illustratsioonil esitatud osa vahel. "–" tähendab, et illustratsioonil ei ole seda osa kujutatud.

OSA NUMBER

Kui osa numbrit ei ole toodud, pole seda osa võimalik varuosana soetada. Punktiga tähistatud osad on nende kohal toodud koostu osaks.

TÄHIS

Tavaliselt on see osa nimetus. Standardosadel on lisaks nimetusele toodud ka tunnusnumber.

QTY : KOGUS

Osutab vastava osa kogusele. "AR" tähendab vajadusel ("As Required").

ATSARGINIØ DALIØ UPSAKYMAS

Visuomet nurodykite dalies numerá, pavadinimà ir reikiamà daliø kieká, taip pat ir maðinos tipà bei serijinà numerá.

STULPELIØ PAAIÞKINIMAI

NRD.: NUORODOS KODAS

Susieja sàraðe nurodytà dalá su jos atvaizdu iliustracijoje. "–" reiðkia, jog dalis iliustracijoje nepavaizduota.

DALIES NUMERIS

Jei numerio nenurodyta, detalès negalima ásigyti kaip atsarginès dalies. Taðku paþymètos dalys yra prieð jas sàraðe nurodyto mazgo sudètinè dalis.

PAVADINIMAS

Paprastai tai dalies pavadinimas. Standartinèms dalims kartu su pavadinimu nurodomos ir kelios charakteristikos.

KIEK.: KIEKIS

Nurodo susijusio daliø kieká. "AR" reiðkia "As required" (pagal poreiká).

REZERVES DAÏU PASÛTIPANA

Vienmçr miniet daïas numuru, apzîmçjumu un nepiecieðamo detaïu daudzumu, kà arî maðînas tipu un sçrijas numuru.

AIÏU IZSKAIDROJUMS

REF : ATSAUKSMES KODS

Izveido saikni starp detaïu sarakstâ un detaïu uz attçla. "–" nozîmç, ka detaïa nav attçlota ilustrâcijâ.

DETAÏAS NUMURS

Ja detaïas numurs nav minçts, tad detaïu nevar iegût kà rezerves daïu. Ar punktu apzîmçtâs detaïas ir mezgla sastâvdaïas, kurð ir attçlots tieði virs tâm.

APZÎMÇJUMS

Parasti tas ir detaïas nosaukums. Standarta detaïâm, papildus nosaukumam, tiek minçta virkne raksturojumu \ specifikâciju.

QTY : DAUDZUMS

Norâda domâtâs detaïas daudzumu. "AR" nozîmç "As Required" – "kà nepiecieðams".

SERVICE PAK


“IN PREPARATION - FOR INFO CONTACT LOCAL DEALER”

REF	PART NUMBER	DESIGNATION	QTY	REF	PART NUMBER	DESIGNATION	QTY
-	2912 6073 04	SERVICE PAK 250H OR YEARLY		-	2912 6074 05	SERVICE PAK 500H OR 24 MONTHS	

“IN PREPARATION - FOR INFO CONTACT LOCAL DEALER”

ENGINE OIL

PAROIL 5W40

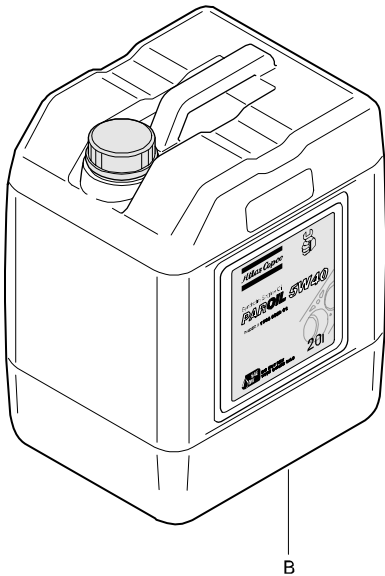


REF	PART NUMBER	DESIGNATION	QTY
A	1604 6060 01	PAROIL 5W40 5 LITER CAN	1
B	1604 6059 01	PAROIL 5W40 20 LITER CAN	1

REF	PART NUMBER	DESIGNATION	QTY
-----	-------------	-------------	-----

ENGINE COOLANT




PARCOOL EG

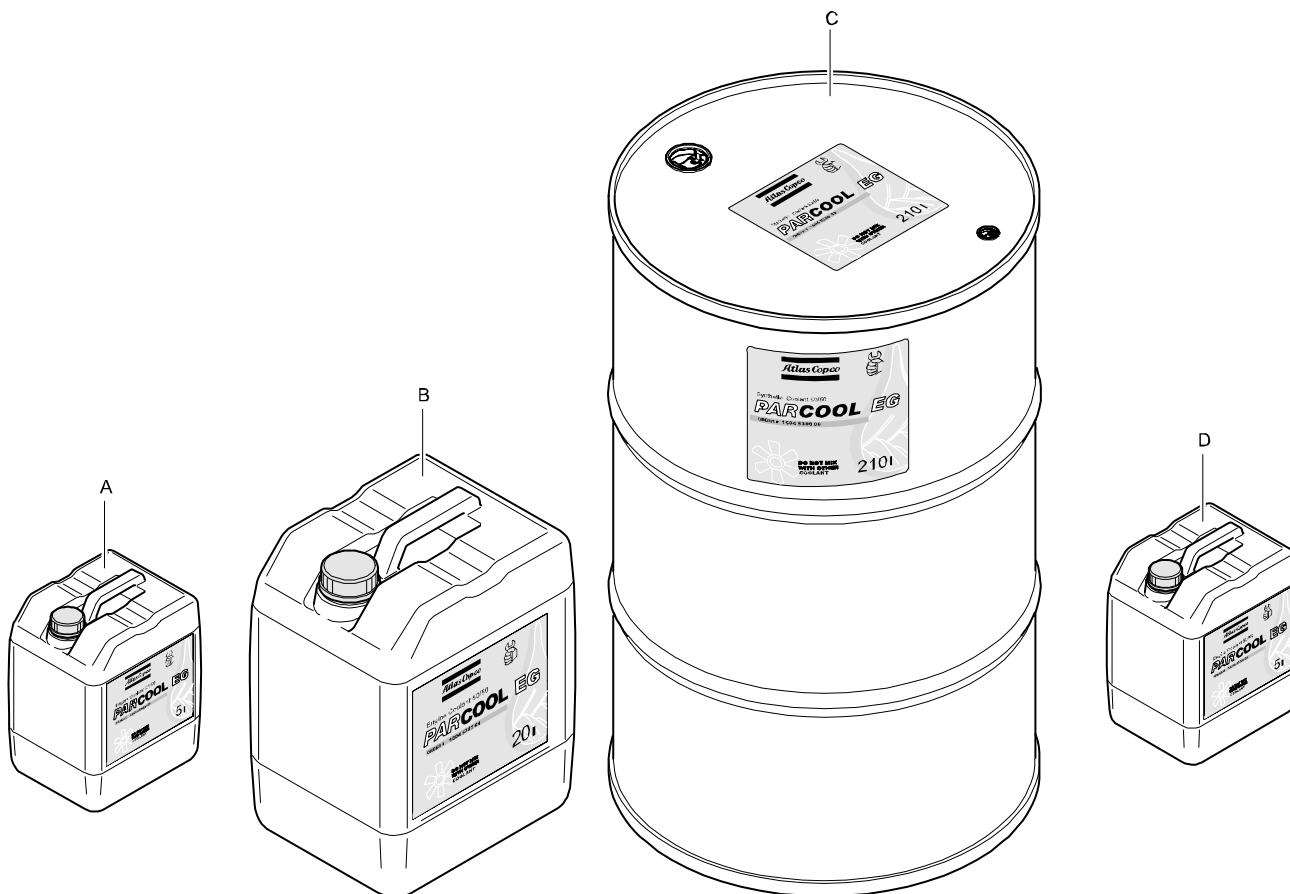

REF	PART NUMBER	DESIGNATION	QTY	REF	PART NUMBER	DESIGNATION	QTY
A	1604 5308 00	PARCOOL EG 5 LITER CAN	1				
B	1604 5307 01	PARCOOL EG 20 LITER CAN	1				
C	1604 5306 00	PARCOOL EG 210 LITER BARREL	1				
D	1604 8159 00	PARCOOL EG CONCENTRATE 5 LITER CAN	1				

STANDARD

COUPLING

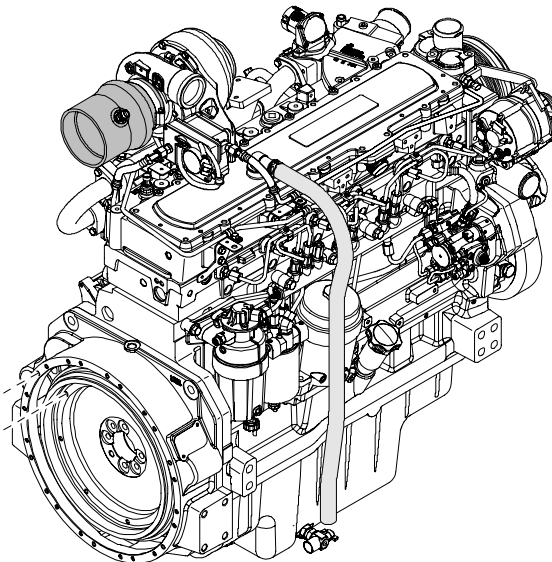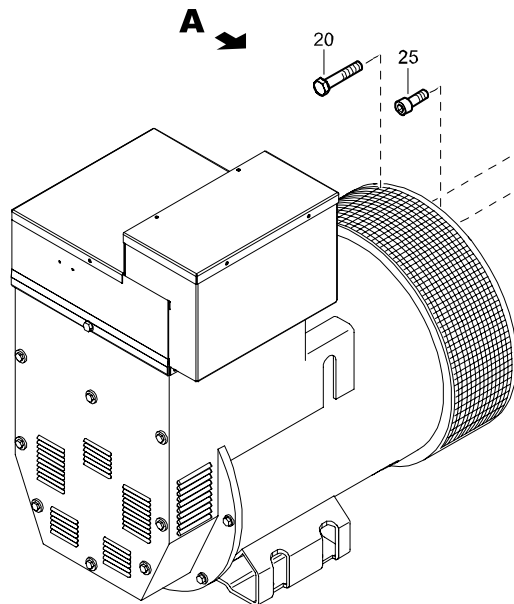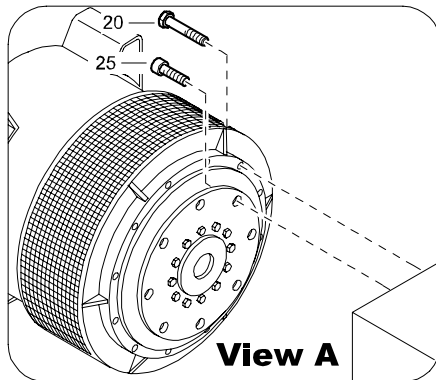


REF	PART NUMBER	DESIGNATION	QTY
20	0147 1368 03	HEX. HEAD SCREW	12
25	0211 5287 00	HEX SOCK. SCREW	8

REF	PART NUMBER	DESIGNATION	QTY
-----	-------------	-------------	-----

STANDARD


ALTERNATOR

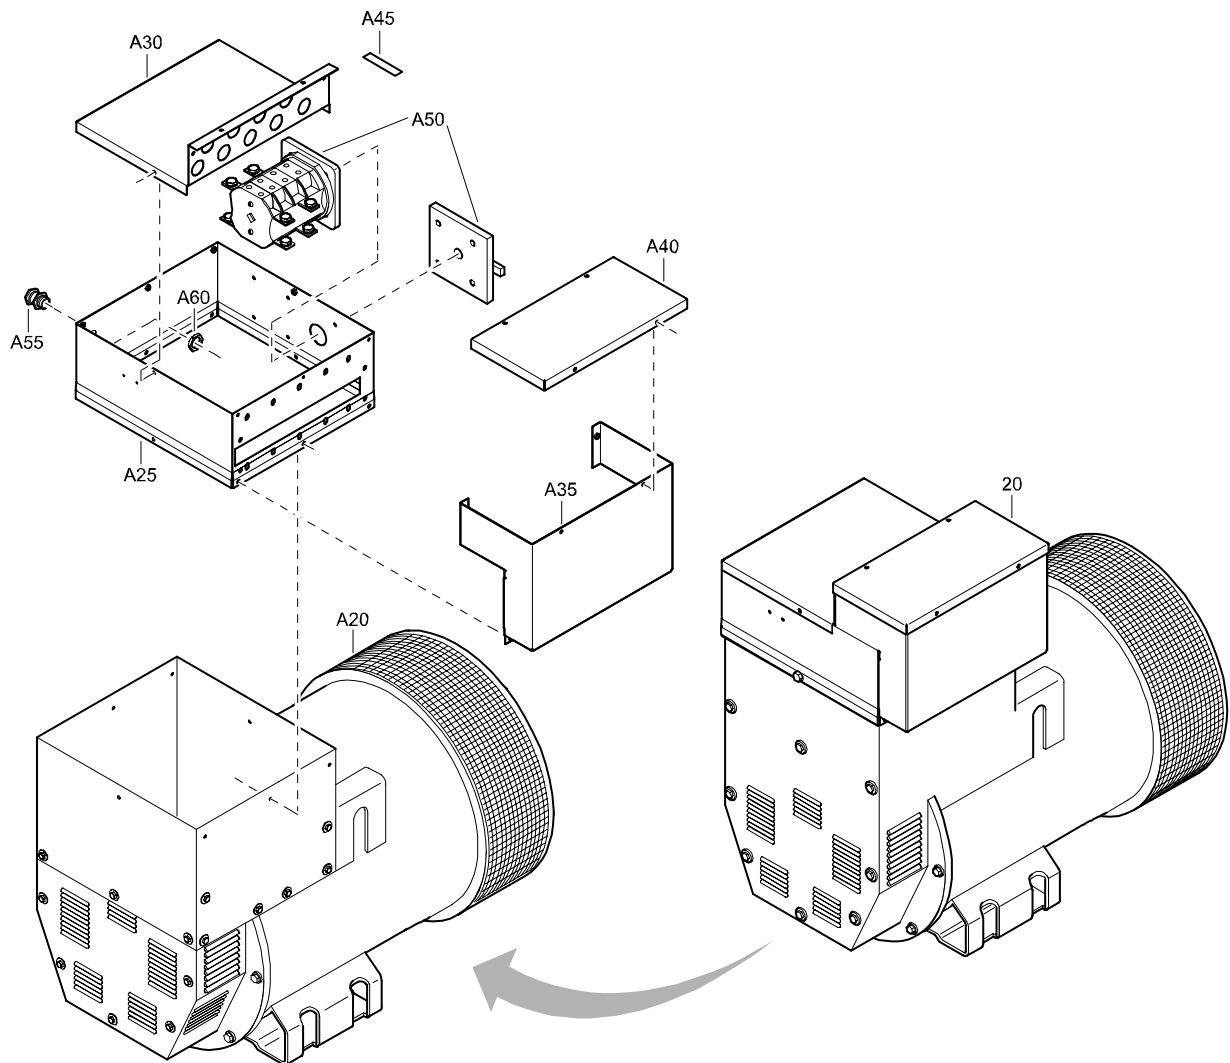

REF	PART NUMBER	DESIGNATION	QTY	REF	PART NUMBER	DESIGNATION	QTY
20	1626 0654 80	ALTERNATOR ASSY	1				
•A20	1626 0654 00	ALTERNATOR	1				
•A25	1604 1466 00	BOX	1				
•A30	1604 1467 00	PLATE	1				
•A35	1604 1468 00	PLATE	1				
•A40	1604 1469 00	COVER	1				
•A45	1604 1477 80	CU STRIPS & ACC	1				
•A50	1089 9082 38	SWITCH	1				
•A55	1088 0256 10	CABLE GLAND	1				
•A60	1088 0302 04	NUT	1				

STANDARD

AUTOMATIC OILER

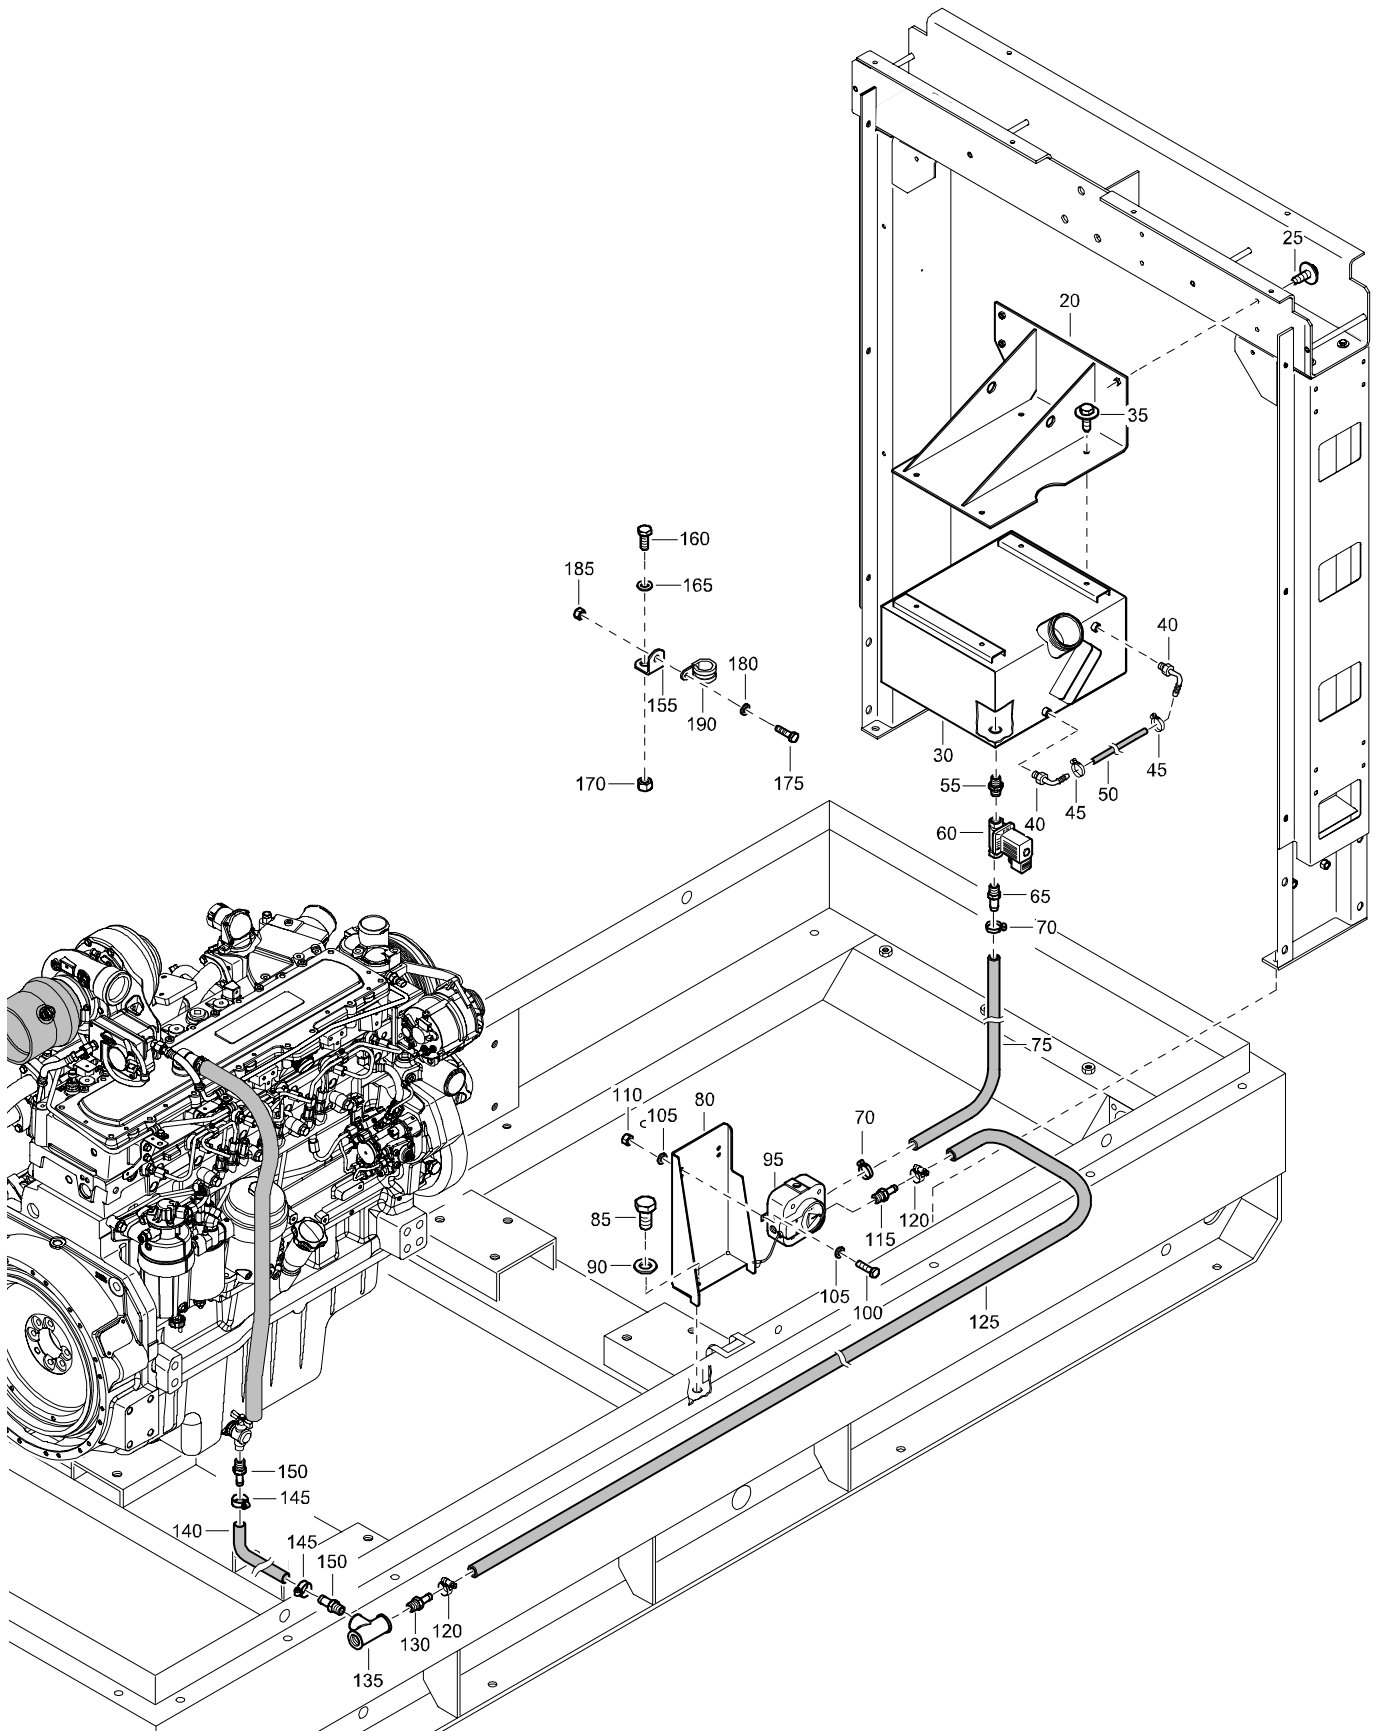


STANDARD

AUTOMATIC OILER

REF	PART NUMBER	DESIGNATION	QTY	REF	PART NUMBER	DESIGNATION	QTY
20	1626 0476 00	SUPPORT	1				
25	1615 5664 00	HEX. HEAD SCREW	4				
30	1626 0475 00	TANK	1				
35	1615 5664 00	HEX. HEAD SCREW	4				
40	1615 9589 00	NIPPLE	2				
45	0347 6102 00	HOSE CLAMP	2				
50	0099 9910 29	PLASTIC TUBE	AR				
55	0603 4104 03	HEXAGON NIPPLE	1				
60	1089 0624 21	SOLENOID VALVE	1				
65	9000 0244 00	HOSE NIPPLE	1				
70	0347 6107 00	HOSE CLAMP	2				
75	0072 8403 16	HOSE	AR				
80	1626 0400 01	SUPPORT	1				
85	0147 1400 03	HEX. HEAD SCREW	1				
90	0301 2358 00	PLAIN WASHER	1				
95	1604 6771 00	VALVE	1				
100	0147 1247 03	HEX. HEAD SCREW	2				
105	0301 2321 00	PLAIN WASHER	4				
110	0266 2108 00	HEXAGON NUT	2				
115	0571 0020 40	HOSE NIPPLE	1				
120	0347 6105 00	HOSE CLAMP	2				
125	0072 8402 90	HOSE	AR				
130	9000 0243 00	HOSE NIPPLE	1				
135	0564 0000 25	TEE	1				
140	0072 8403 16	HOSE	AR				
145	0347 6106 00	HOSE CLAMP	2				
150	9000 0244 00	HOSE NIPPLE	2				
155	1615 1789 00	BRACKET	2				
160	0147 1322 03	HEX. HEAD SCREW	2				
165	0301 2335 00	PLAIN WASHER	4				
170	0266 2110 00	HEXAGON NUT	2				
175	0147 1247 03	HEX. HEAD SCREW	2				
180	0301 2321 00	PLAIN WASHER	4				
185	0266 2108 00	HEXAGON NUT	2				
190	1613 0803 02	PIPE CLAMP	2				

STANDARD

MOUNTS ON FRAME

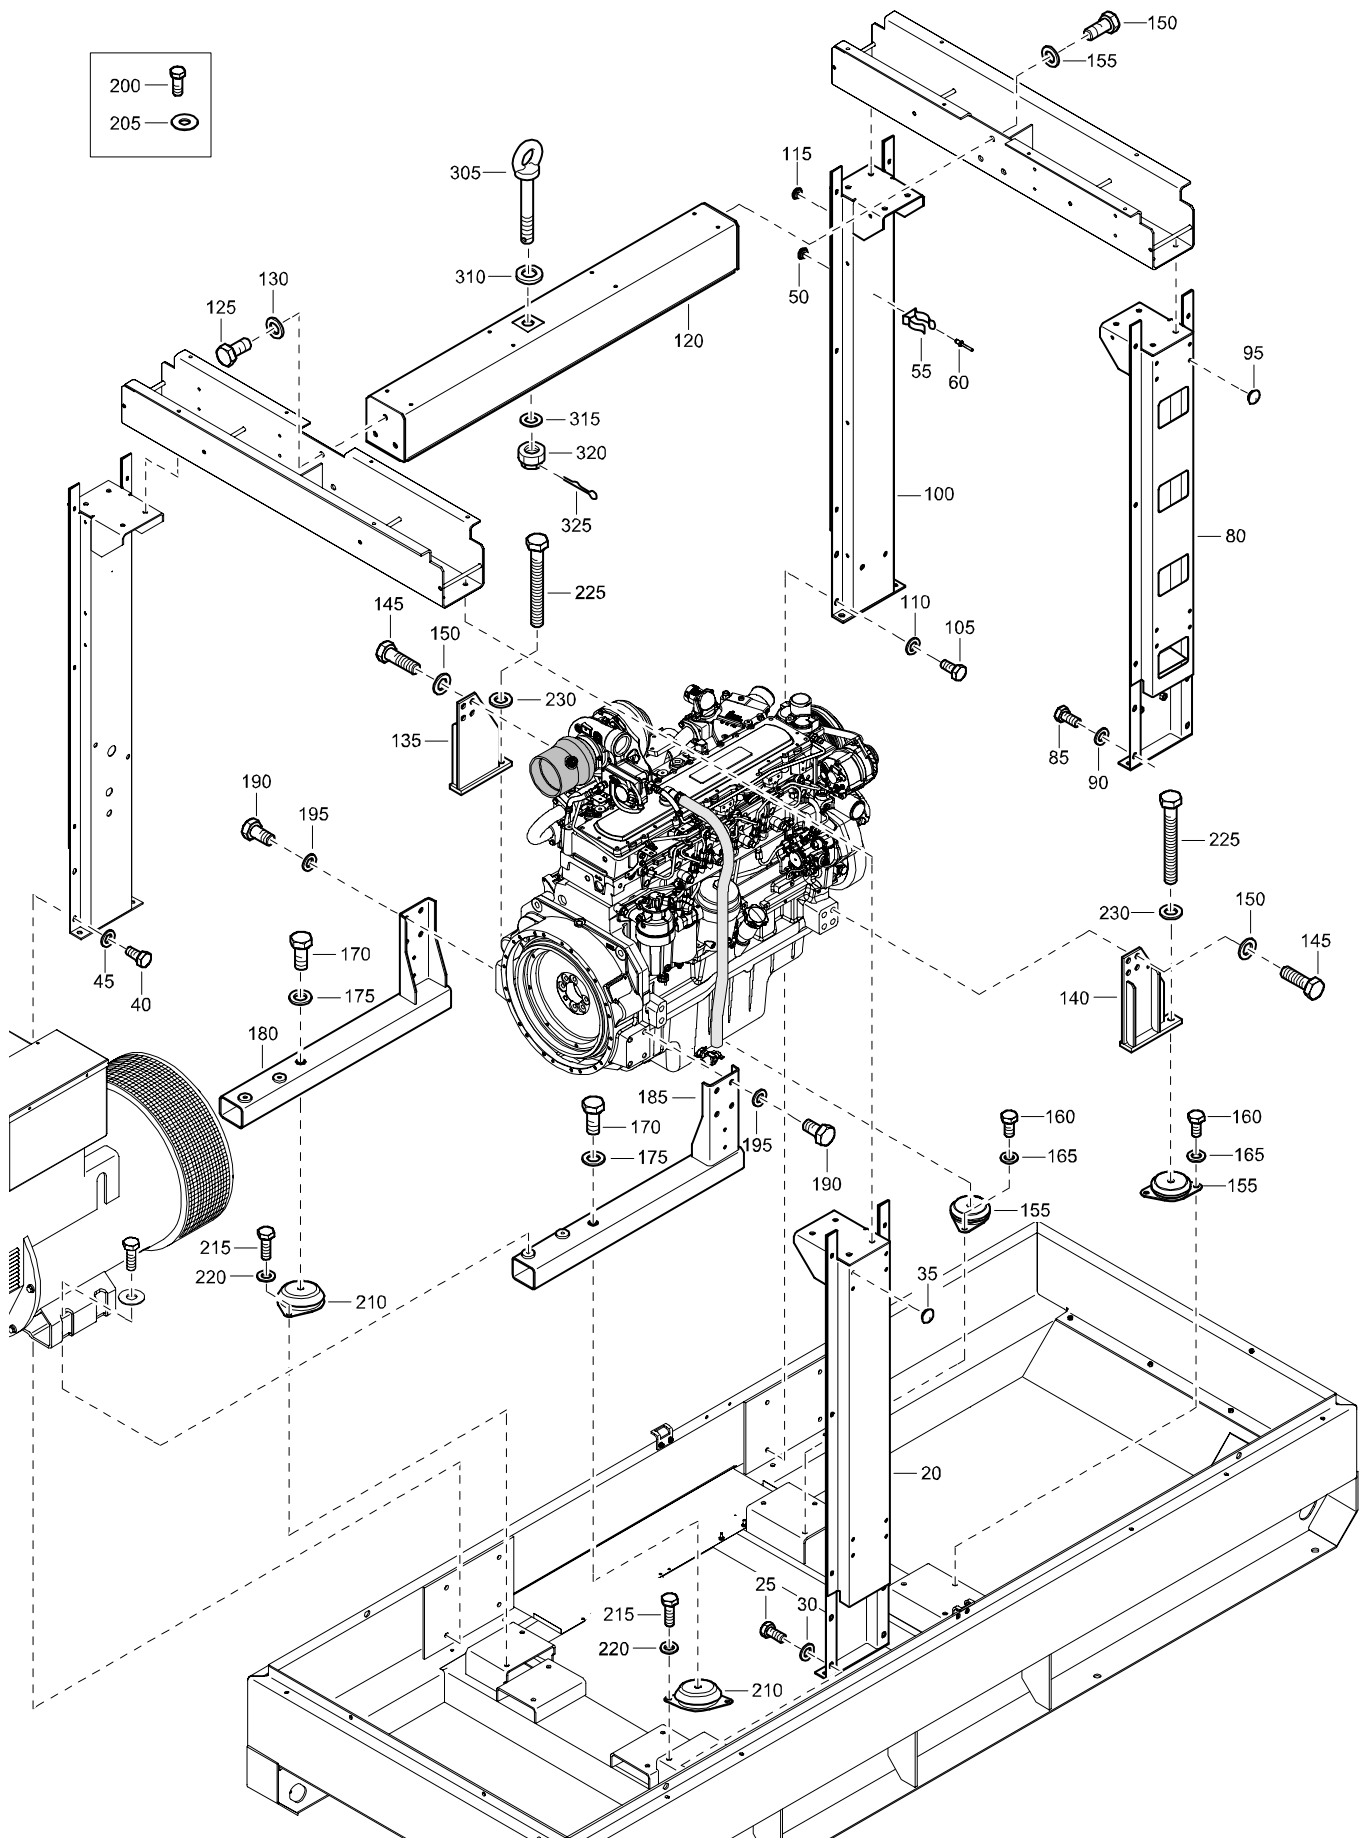


STANDARD

MOUNTS ON FRAME

REF	PART NUMBER	DESIGNATION	QTY	REF	PART NUMBER	DESIGNATION	QTY
20	1615 8057 01	LIFTING SUPPORT	1				
25	0147 1400 03	HEX. HEAD SCREW	5				
30	0301 2358 00	PLAIN WASHER	5				
35	1616 2987 00	PLUG	4				
40	0147 1400 03	HEX. HEAD SCREW	5				
45	0301 2358 00	PLAIN WASHER	5				
50	1616 2987 00	PLUG	4				
55	1079 3461 02	HOSE CLIP	1				
60	0129 3108 00	BLIND RIVET	1				
80	1615 8075 03	LIFTING SUPPORT	1				
85	0147 1400 03	HEX. HEAD SCREW	6				
90	0301 2358 00	PLAIN WASHER	6				
95	1616 2987 00	PLUG	4				
100	1615 8075 03	LIFTING SUPPORT	1				
105	0147 1400 03	HEX. HEAD SCREW	6				
110	0301 2358 00	PLAIN WASHER	6				
115	1616 2987 00	PLUG	4				
120	1615 8053 01	LIFTING BEAM MIDDLE	1				
125	0147 1476 03	HEX. HEAD SCREW	6				
130	0301 2378 00	PLAIN WASHER	6				
135	1604 9600 01	SUPPORT ENGINE	1				
140	1604 9626 02	SUPPORT ENGINE	1				
145	0147 1479 03	HEX. HEAD SCREW	8				
150	0301 2378 00	PLAIN WASHER	8				
155	1615 5509 00	RUBBER BUFFER	2				
160	0147 1400 15	HEX. HEAD SCREW	4				
165	0301 2358 00	PLAIN WASHER	4				
170	0147 1476 03	HEX. HEAD SCREW	2				
175	0301 2378 00	PLAIN WASHER	2				
180	1626 0137 02	SUPPORT	1				
185	1626 0138 02	SUPPORT	1				
190	0147 1475 03	HEX. HEAD SCREW	8				
195	0301 2378 00	PLAIN WASHER	8				
200	0147 1401 03	HEX. HEAD SCREW	4				
205	0300 8008 00	WASHER	4				
210	1619 5318 02	ANTIVIBRATION PAD	2				
215	0147 1400 15	HEX. HEAD SCREW	4				
220	0301 2358 00	PLAIN WASHER	4				
225	0147 1493 03	HEX. HEAD SCREW	2				
230	0301 2378 00	PLAIN WASHER	2				
305	1615 8039 01	LIFTING EYE	1				
310	1011 1327 00	JOINT	1				
315	0301 2434 00	PLAIN WASHER	1				
320	0281 1328 01	HEXAGON SL. CASTLE NUT	1				
325	0111 1453 00	SPLIT PIN	1				

STANDARD

FUEL SYSTEM

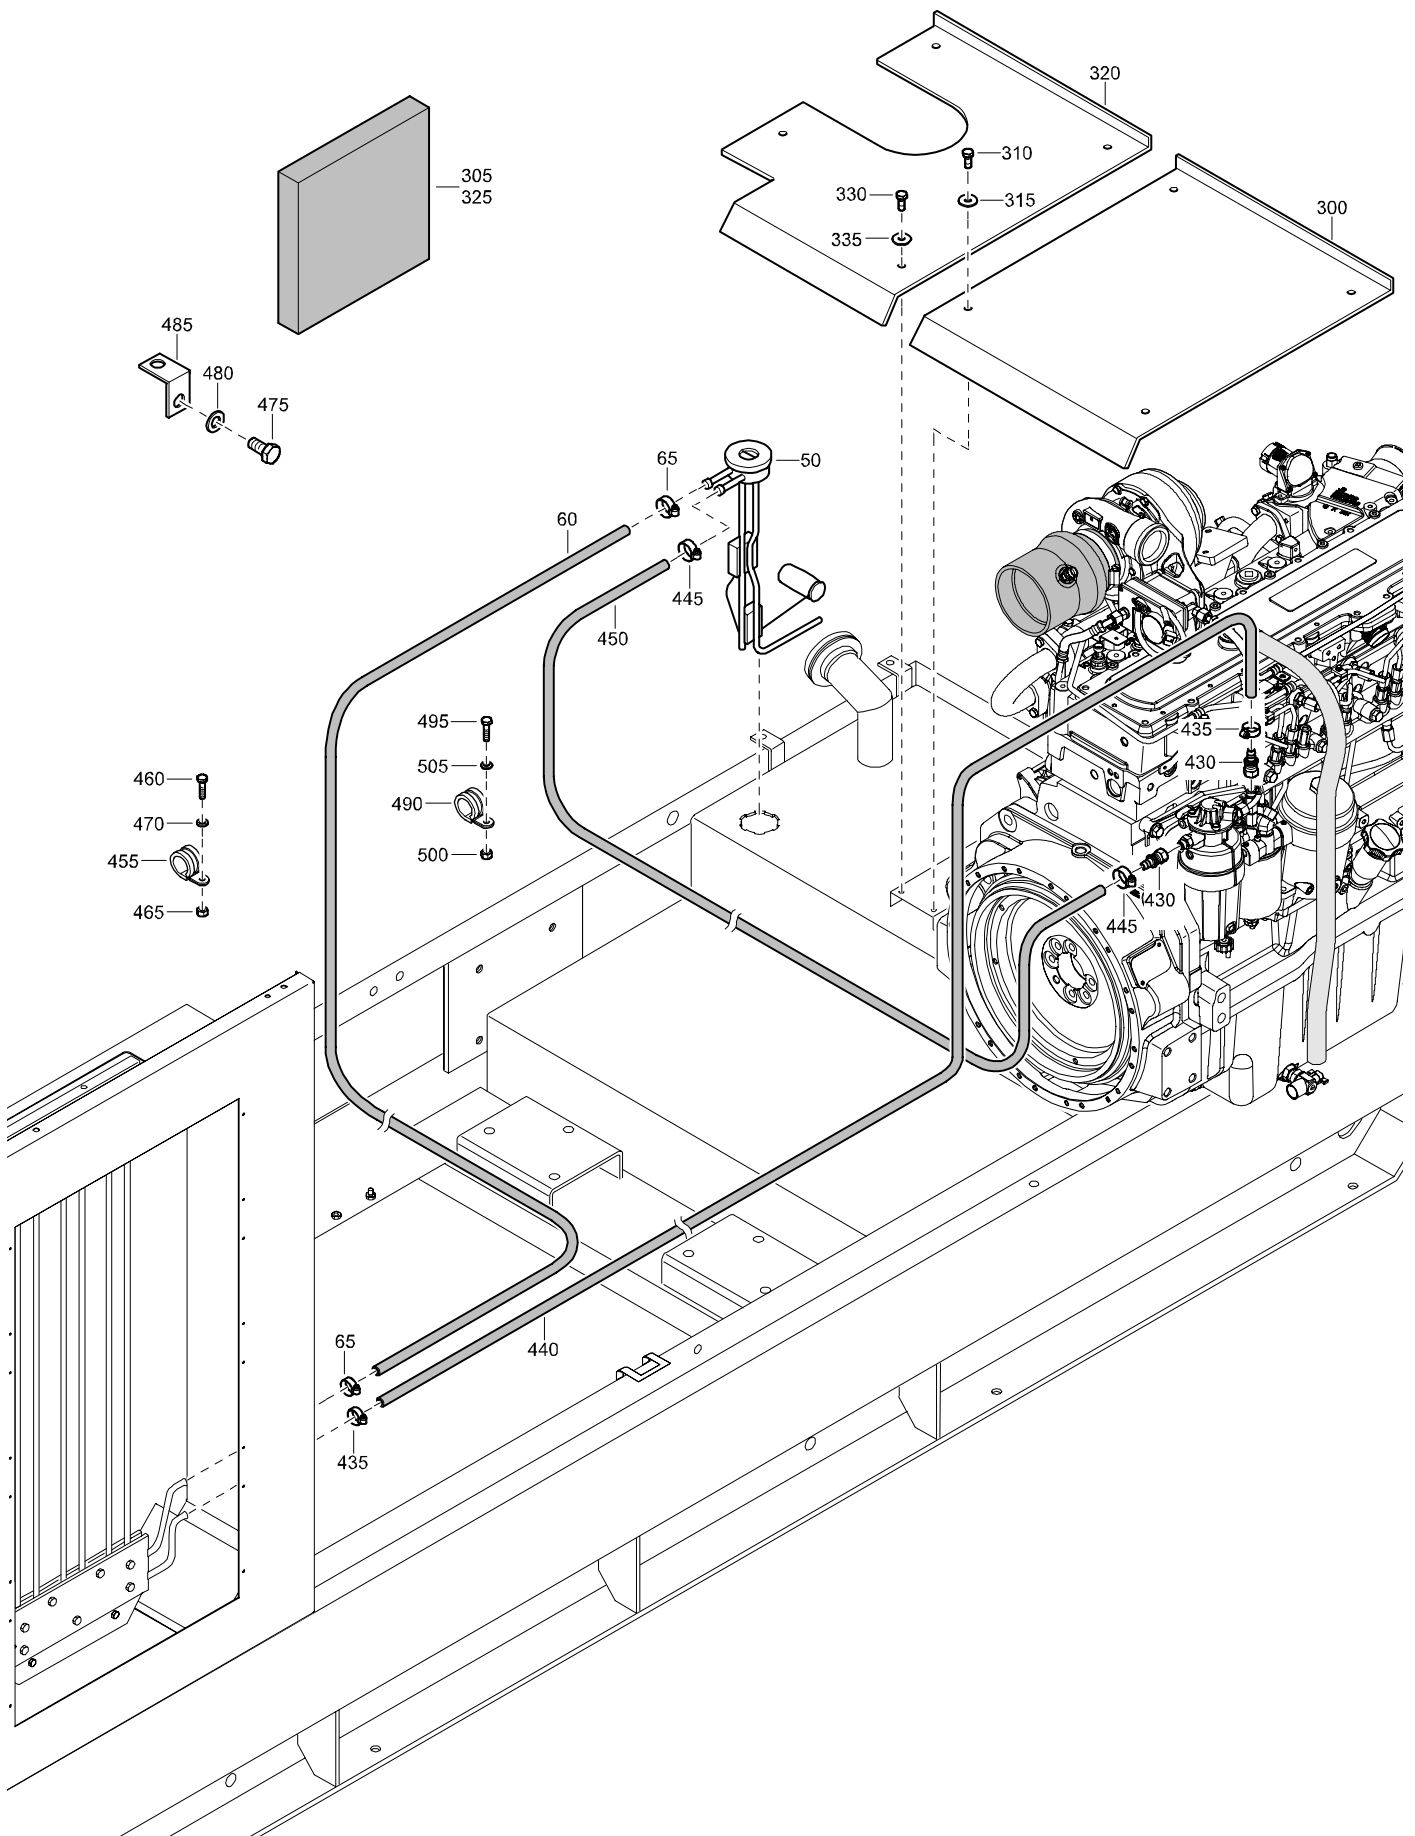


STANDARD

FUEL SYSTEM

REF	PART NUMBER	DESIGNATION	QTY	REF	PART NUMBER	DESIGNATION	QTY
50	1615 8641 00	LEVEL GAUGE + O-RING	1				
60	0071 8402 90	FUEL HOSE	AR				
65	0347 6104 00	HOSE CLAMP	2				
300	1615 8033 00	PLATE FUEL TANK	1				
305	-	SILENCING FOAM (50 mm)	1				
310	0147 1322 03	HEX. HEAD SCREW	4				
315	0300 8019 00	PLAIN WASHER	4				
320	1615 8032 00	PLATE FUEL TANK	1				
325	-	SILENCING FOAM (50 mm)	1				
330	0147 1322 03	HEX. HEAD SCREW	4				
335	0300 8019 00	PLAIN WASHER	4				
430	0571 0020 77	HOSE NIPPLE	2				
435	0347 6103 00	HOSE CLAMP	2				
440	0071 8402 90	FUEL HOSE	AR				
445	0347 6103 00	HOSE CLAMP	2				
450	0071 8402 90	FUEL HOSE	AR				
455	1613 0803 02	PIPE CLAMP	4				
460	0147 1247 03	HEX. HEAD SCREW	4				
465	0266 2108 00	HEXAGON NUT	4				
470	0301 2321 00	PLAIN WASHER	4				
475	0147 1400 03	HEX. HEAD SCREW	2				
480	0301 2358 00	PLAIN WASHER	2				
485	2252 2529 00	BRACKET	3				
490	1613 0803 02	PIPE CLAMP	9				
495	0147 1247 03	HEX. HEAD SCREW	9				
500	0266 2108 00	HEXAGON NUT	9				
505	0301 2321 00	PLAIN WASHER	9				
-	1079 0003 33	SILENCING FOAM 2000 mm x 1500 mm x 50 mm					

ENGINE & ACCESSORIES




STANDARD

ENGINE & ACCESSORIES

REF	PART NUMBER	DESIGNATION	QTY	REF	PART NUMBER	DESIGNATION	QTY
15	1626 0299 00	ENGINE	1				
17	1604 9633 00	PIPE	1				
19	1626 0339 00	PIPE	1				
20	1615 8050 03	BOX	1				
25	1615 8056 05	MUFFLER	1				
30	1615 8817 00	EXHAUST COVER	1				
35	1615 8612 00	ROCKWOOL	1				
40	1615 8613 00	ROCKWOOL	1				
45	1604 2009 00	INSULATION	1				
47	1626 1394 00	CLAMP V-CLAMP	1				
50	0050 0300 06	ROUND BAR	AR				
54	0346 3001 03	PIPE CLAMP	1				
56	0346 3001 10	PIPE CLAMP	1				
57	1626 0522 00	SHIELD	1				
60	0147 1360 03	HEX. HEAD SCREW	4				
62	0301 2344 00	PLAIN WASHER	4				
64	1626 0341 00	SUPPORT	1				
66	0147 1360 03	HEX. HEAD SCREW	4				
68	0301 2344 00	PLAIN WASHER	4				
69	1615 8425 00	MOUNTING BAND	2				
70	0147 1362 03	HEX. HEAD SCREW	4				
75	0301 2335 00	PLAIN WASHER	4				
80	0333 3232 00	LOCK WASHER	4				
85	0266 2110 00	HEXAGON NUT	4				
100	1604 0120 01	AIR FILTER	1				
•A10	2914 5017 00	AIR FILTER ELEMENT	1				
•A20	2914 5018 00	AIR FILTER SAFETY CARTRIDGE	1				
•A30	2914 8662 00	COVER AIR FILTER	1				
105	0347 6121 00	HOSE CLAMP	1				
110	1615 7933 00	ELBOW	1				
115	1615 6960 00	NIPPLE	1				
120	1613 7912 01	INDICATOR	1				
125	0347 6120 00	HOSE CLAMP	2				
130	1604 9740 00	PIPE	1				
175	1615 8393 00	OILPUMP	1				
180	0147 1326 03	HEX. HEAD SCREW	2				
185	0300 8019 00	PLAIN WASHER	2				
190	1615 8421 00	HOSE ASSEMBLY	1				
195	0661 1030 00	SEALING WASHER	1				
200	0686 3716 02	HEXAGON PLUG	1				
205	9000 0244 00	HOSE NIPPLE	2				
210	0347 6106 00	HOSE CLAMP	2				
215	0072 8403 16	HOSE	AR				
217	1626 1151 00	NIPPLE LUBRIC.	1				
220	1089 0659 52	LEVEL SWITCH	1				
225	0075 4025 36	HOSE	AR				

COOLING




STANDARD

COOLING

REF	PART NUMBER	DESIGNATION	QTY	REF	PART NUMBER	DESIGNATION	QTY
20	1615 8040 03	SUPPORT COOLER	1	340	0347 6104 00	HOSE CLAMP	4
25	0147 1400 03	HEX. HEAD SCREW	4				
30	0301 2358 00	PLAIN WASHER	4				
35	-	SILENCING FOAM (50 mm)	4				
45	-	SILENCING FOAM (30 mm)	AR				
50	1604 4110 01	PLATE	1				
55	1615 5664 00	HEX. HEAD SCREW	8				
60	1604 4108 00	PLATE	1	-	1079 0003 32	SILENCING FOAM	
65	1604 4109 00	PLATE	1			2000 mm x 1500 mm x 30 mm	
70	0147 1360 03	HEX. HEAD SCREW	14	-	1079 0003 33	SILENCING FOAM	
75	0301 2344 00	PLAIN WASHER	14			2000 mm x 1500 mm x 50 mm	
80	0333 3232 00	LOCK WASHER	14				
85	1626 0336 00	SPACER	1				
90	0147 1382 03	HEX. HEAD SCREW	6				
95	0301 2344 00	PLAIN WASHER	6				
100	1615 8321 00	FAN	1				
101	1626 0665 00	PROTECTION	1				
102	1626 0666 00	PROTECTION	1				
103	1626 1155 00	SHIELD	1				
104	1619 2766 00	HEX. HEAD SCREW	2				
105	0605 8505 04	BUSHING	2				
110	1615 7072 00	VALVE	1				
115	0099 9910 29	PLASTIC TUBE	AR				
130	1604 4573 01	FAN GUARD	2				
135	1619 2766 00	HEX. HEAD SCREW	8				
175	1626 0326 00	COWL	1				
180	1604 4123 03	PLATE (FANCOWL)	1				
185	1615 5664 00	HEX. HEAD SCREW	8				
190	1604 4115 00	COOLER	1				
195	1626 0149 01	PIPE RADIATOR	1				
200	1626 0150 01	PIPE RADIATOR	1				
205	1604 5868 00	HOSE	4				
210	0347 6100 21	HOSE CLAMP	8				
215	0852 0010 34	BALL VALVE	1				
220	0661 1038 00	SEALING WASHER	2				
225	0686 3716 35	HEXAGON PLUG	1				
230	0099 9910 29	PLASTIC TUBE	AR				
245	1604 4116 00	INTERCOOLER	1				
246	1626 1398 00	PLATE	1				
247	0346 2900 07	PIPE CLAMP	1				
250	1626 0147 01	PIPE IC	1				
252	0147 1329 03	HEX. HEAD SCREW	1				
253	0301 2335 00	PLAIN WASHER	1				
254	0346 2900 07	PIPE CLAMP	1				
255	1626 0148 02	PIPE IC	1				
260	1604 2785 00	HOSE	2				
265	0347 6100 23	HOSE CLAMP	4				
270	1604 2114 00	HOSE	2				
275	0347 6100 21	HOSE CLAMP	4				
280	1604 3698 01	TOPTANK	1				
285	1615 5451 02	RADIATOR CAP	1				
290	1619 2766 00	HEX. HEAD SCREW	4				
295	1615 9589 00	NIPPLE	2				
300	0099 9910 29	PLASTIC TUBE	AR				
305	0099 9910 29	PLASTIC TUBE	AR				
310	0075 4025 36	HOSE	AR				
315	1503 1056 00	SEAL	AR				
320	0347 6110 00	HOSE CLAMP	2				
325	9000 0540 00	HOSE NIPPLE	1				
330	0560 0307 03	ELBOW	1				
335	0071 8402 90	FUEL HOSE	AR				

BODYWORK AND MOUNTS




STANDARD

BODYWORK AND MOUNTS

REF	PART NUMBER	DESIGNATION	QTY	REF	PART NUMBER	DESIGNATION	QTY
20	1604 4383 80	REAR PANEL (For details see page 47)	1				
22	1615 8920 02	BAFFLE	4				
23	0129 3175 00	BLIND RIVET	16				
45	1619 2766 00	HEX. HEAD SCREW	7				
50	1604 8427 80	SERVICE DOOR (For details see page 51)	1				
52	1615 8920 02	BAFFLE	2				
53	0129 3175 00	BLIND RIVET	8				
60	1619 2766 02	HEX. HEAD SREW	8				
90	1604 8417 80	REAR PANEL LEFT (For details see page 48)	1				
110	1604 8418 81	FRONT PANEL (For details see page 49)	1				
125	1619 2766 00	HEX. HEAD SCREW	7				
140	1619 2766 02	HEX. HEAD SREW	4				
150	1604 8419 81	FRONT PANEL LEFT (For details see page 50)	1				
170	1619 2766 00	HEX. HEAD SCREW	7				
175	1604 8455 85	DOOR (For details see page 58)	1				
180	1604 8455 80	DOOR (For details see page 57)	1				
203	1619 2766 00	HEX. HEAD SCREW	4				
204	1613 3672 00	CAP	4				
205	0216 1324 03	HEX SOCK. SCREW	12				
225	1604 8429 85	REAR DOOR (For details see page 53)	1				
230	1604 8429 80	REAR DOOR (For details see page 52)	1				
258	1619 2766 00	HEX. HEAD SCREW	4				
259	1613 3672 00	CAP	4				
260	0216 1324 03	HEX SOCK. SCREW	12				
280	1604 8430 80	DOOR CUBICLE (For details see page 54)	1				
330	0301 2321 00	PLAIN WASHER	6				
335	0266 2108 00	HEXAGON NUT	6				
380	1619 2766 00	HEX. HEAD SCREW	4				
400	1615 8079 05	BAFFLE	1				
405	-	SILENCING FOAM (30 mm)	1				
455	1619 2766 02	HEX. HEAD SREW	4				
495	1619 2766 02	HEX. HEAD SREW	6				
530	1615 6972 01	FUNNEL	1				
532	1619 5188 00	SEAL	AR				
535	1604 2270 00	PLATE (FUNNEL)	1				
540	1615 5664 00	HEX. HEAD SCREW	4				
545	1604 0994 02	BRACKET	1				
546	0129 3175 00	BLIND RIVET	2				
550	1604 2206 00	HOLDER (DOCUMENT)	1				
555	1615 5556 00	RIVET	2				
570	0017 9861 53	PLASTIC BAG	1				
575	1615 7271 00	KEY	2				
580	1088 1301 03	CABLE STRIP	1				
-	1079 0003 32	SILENCING FOAM 2000 mm x 1500 mm x 30 mm					

STANDARD

ELECTRICAL SYSTEM

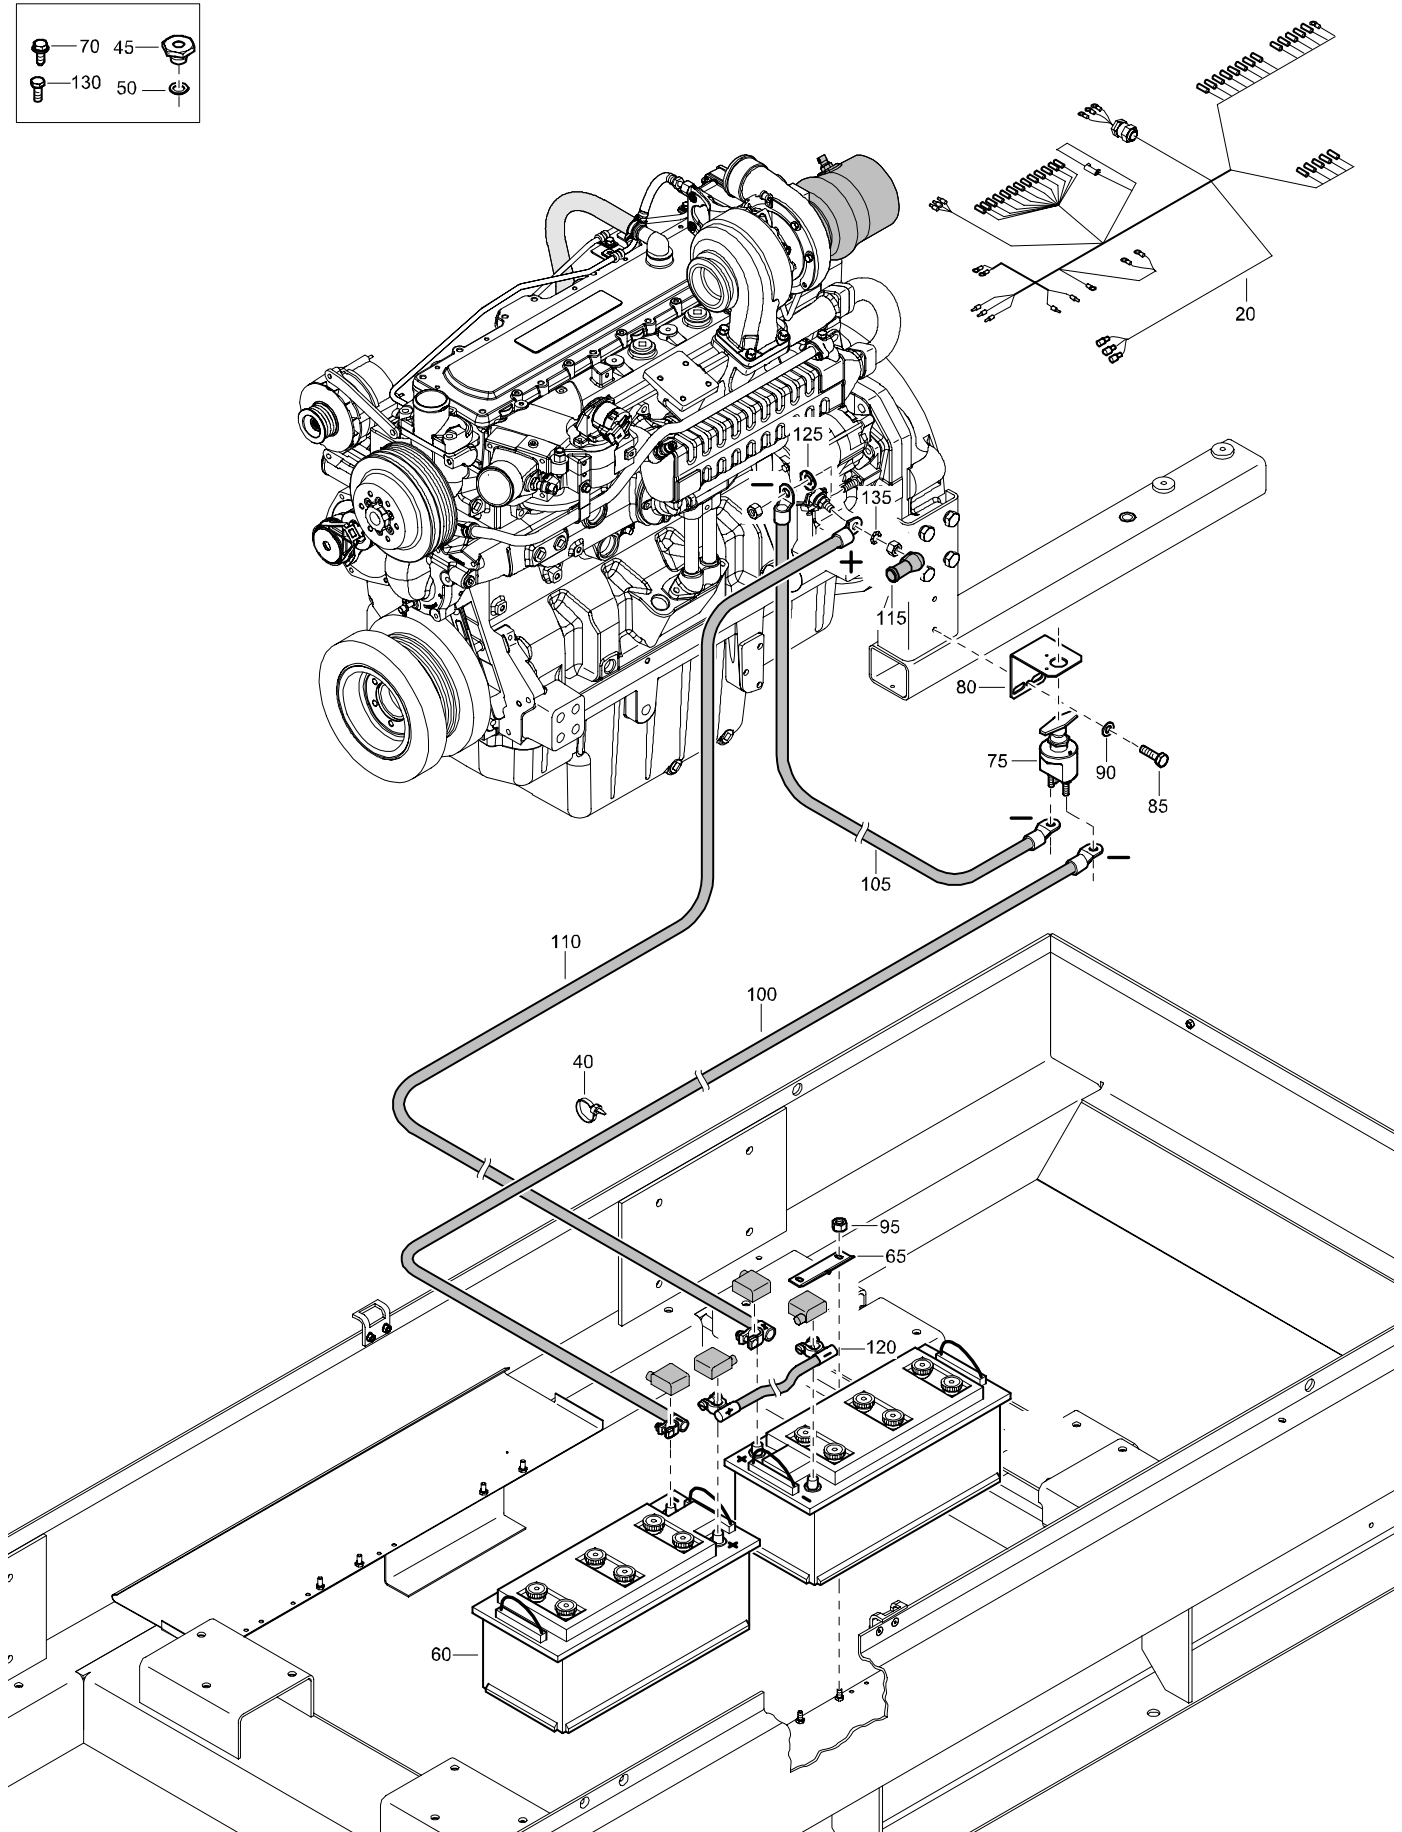


STANDARD

ELECTRICAL SYSTEM


REF	PART NUMBER	DESIGNATION	QTY	REF	PART NUMBER	DESIGNATION	QTY
20	1626 0639 00	WIRING	1				
40	1088 1301 03	CABLE STRIP	10				
45	1604 4762 00	ADAPTER	1				
50	0653 1056 00	FLAT GASKET	1				
60	0975 8300 16	BATTERY	2				
65	1615 6067 01	CLAMP	2				
70	1619 2766 00	HEX. HEAD SCREW	4				
75	1089 0584 01	BATTERY SWITCH	1				
80	1604 3473 02	SUPPORT	1				
85	0147 1325 03	HEX. HEAD SCREW	2				
90	0301 2335 00	PLAIN WASHER	2				
95	0266 2110 00	HEXAGON NUT	4				
100	1615 8125 00	BATTERY CABLE	1				
105	1615 8127 00	BATTERY CABLE	1				
110	1615 8126 00	BATTERY CABLE	1				
115	1604 3329 00	PROTECTION CAP	1				
120	1604 8147 00	BATTERY CABLE	1				
125	1088 0019 03	CONTACT WASHER	1				
130	0147 1322 03	HEX. HEAD SCREW	1				
135	0333 3227 00	LOCK WASHER	1				

STANDARD

EXTERNAL FUELTANK CONNECTION

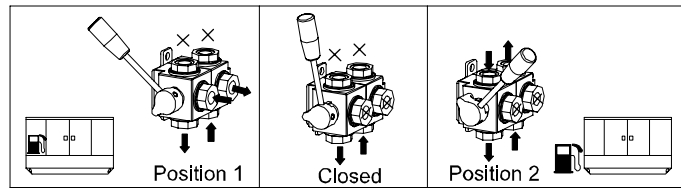

300

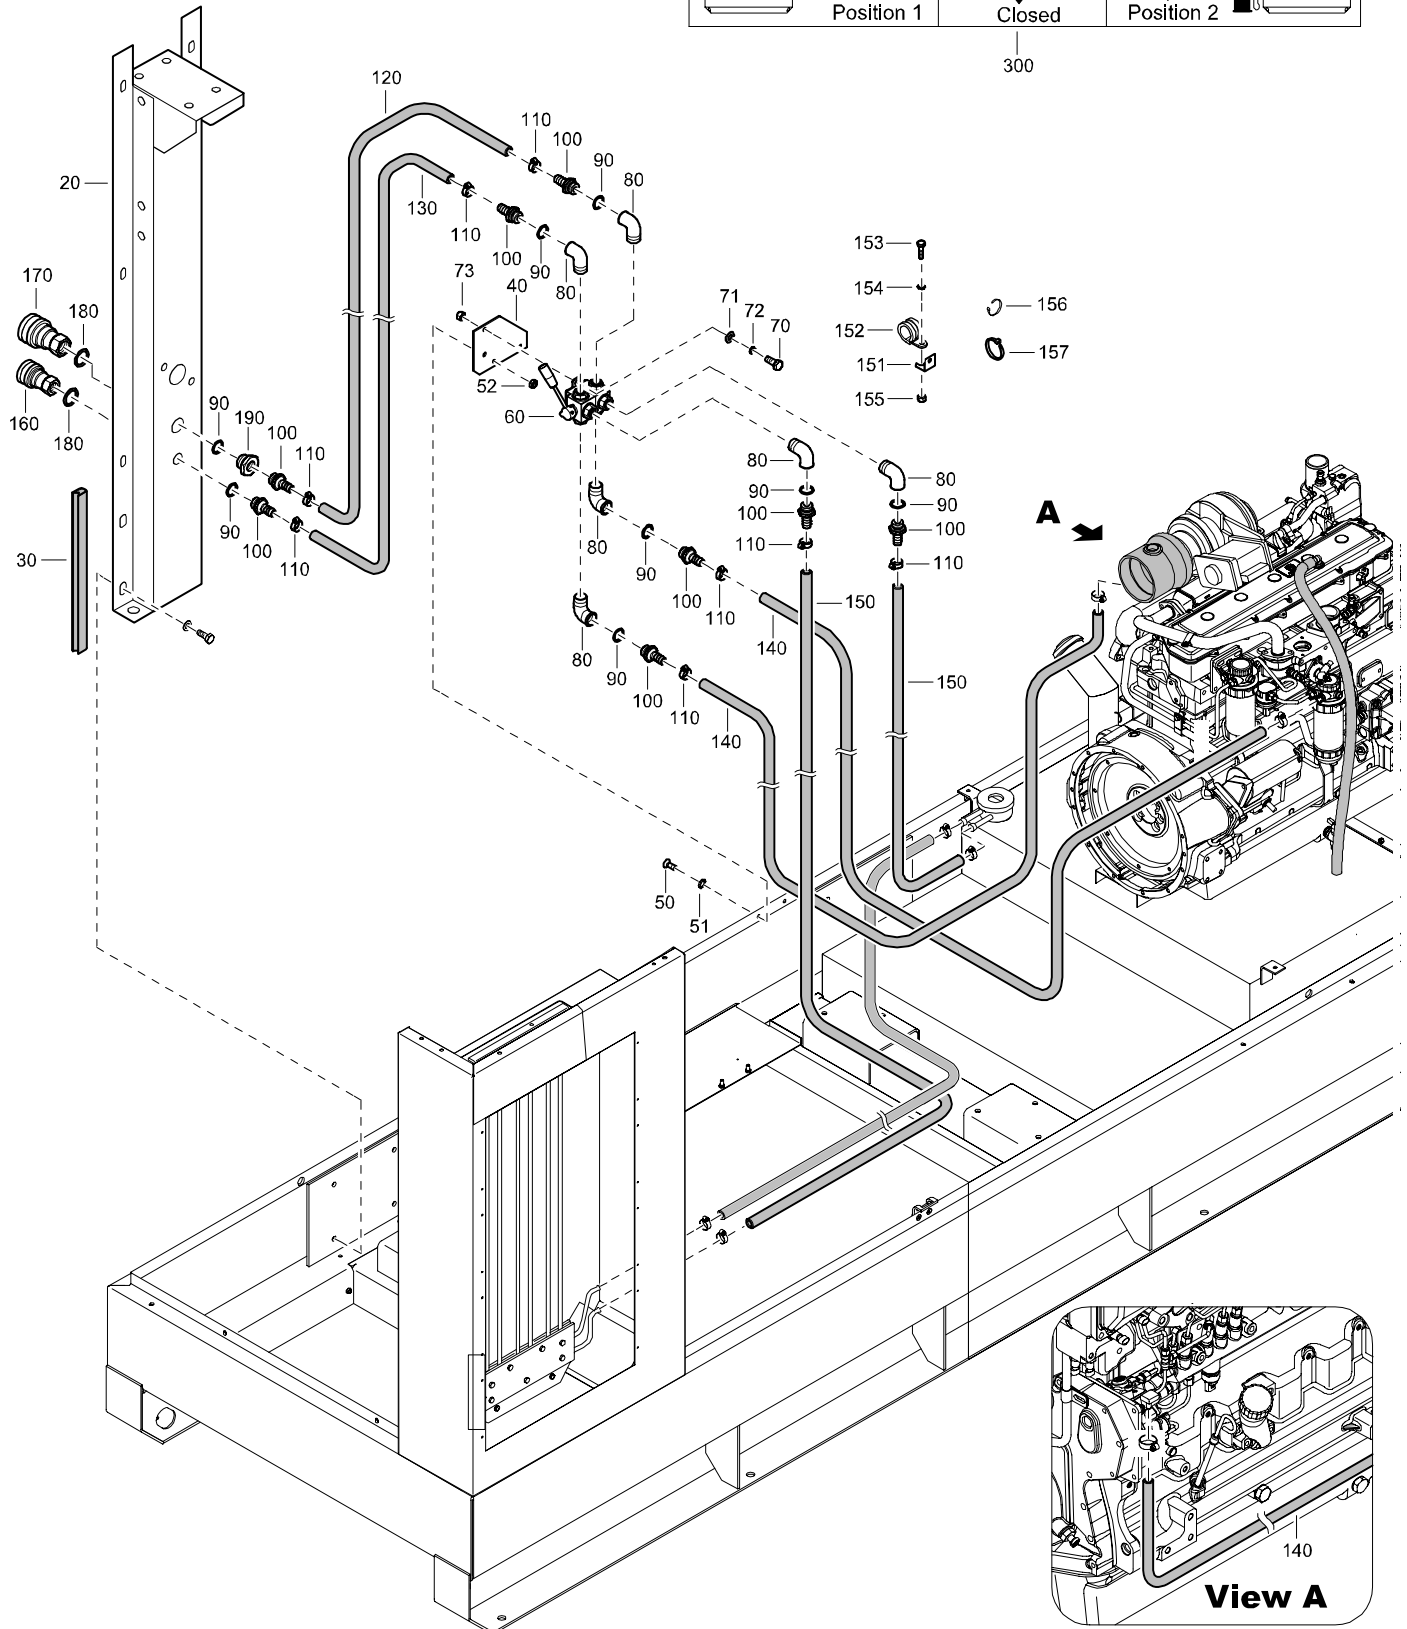


STANDARD

EXTERNAL FUELTANK CONNECTION

REF	PART NUMBER	DESIGNATION	QTY	REF	PART NUMBER	DESIGNATION	QTY
20	1604 0993 01	LIFTING SUPPORT	1				
30	1503 1056 00	SEAL	AR				
40	1604 6998 00	PLATE	1				
50	0216 1324 03	HEX SOCK. SCREW	2				
51	0333 3227 00	LOCK WASHER	2				
52	0266 2110 00	HEXAGON NUT	2				
60	1604 6111 00	VALVE	1				
70	0147 1360 03	HEX. HEAD SCREW	2				
71	0301 2344 00	PLAIN WASHER	2				
72	0333 3232 00	LOCK WASHER	2				
73	0266 2111 00	HEXAGON NUT	2				
80	0560 0200 23	ELBOW	6				
90	0653 1124 00	FLAT GASKET	10				
100	0571 0020 15	HOSE NIPPLE	8				
110	0347 6103 00	HOSE CLAMP	8				
120	0071 8402 90	FUEL HOSE	AR				
130	0071 8402 90	FUEL HOSE	AR				
140	0071 8402 90	FUEL HOSE	AR				
150	0071 8402 90	FUEL HOSE	AR				
151	1613 0809 01	BRACKET	3				
152	1613 0803 02	PIPE CLAMP	8				
153	0147 1247 03	HEX. HEAD SCREW	8				
154	0333 3220 00	LOCK WASHER	8				
155	0266 2108 00	HEXAGON NUT	8				
156	1088 1301 03	CABLE STRIP	25				
157	1088 1301 06	CABLE CLIP	7				
160	1615 8744 01	QUICK COUPLING	1				
170	1615 8745 01	QUICK COUPLING	1				
180	0653 1165 00	FLAT GASKET	2				
190	0605 8700 37	BUSHING	1				
300	1079 9925 00	INFORMATION LABEL	3				

STANDARD

FRAME AND ROOFS

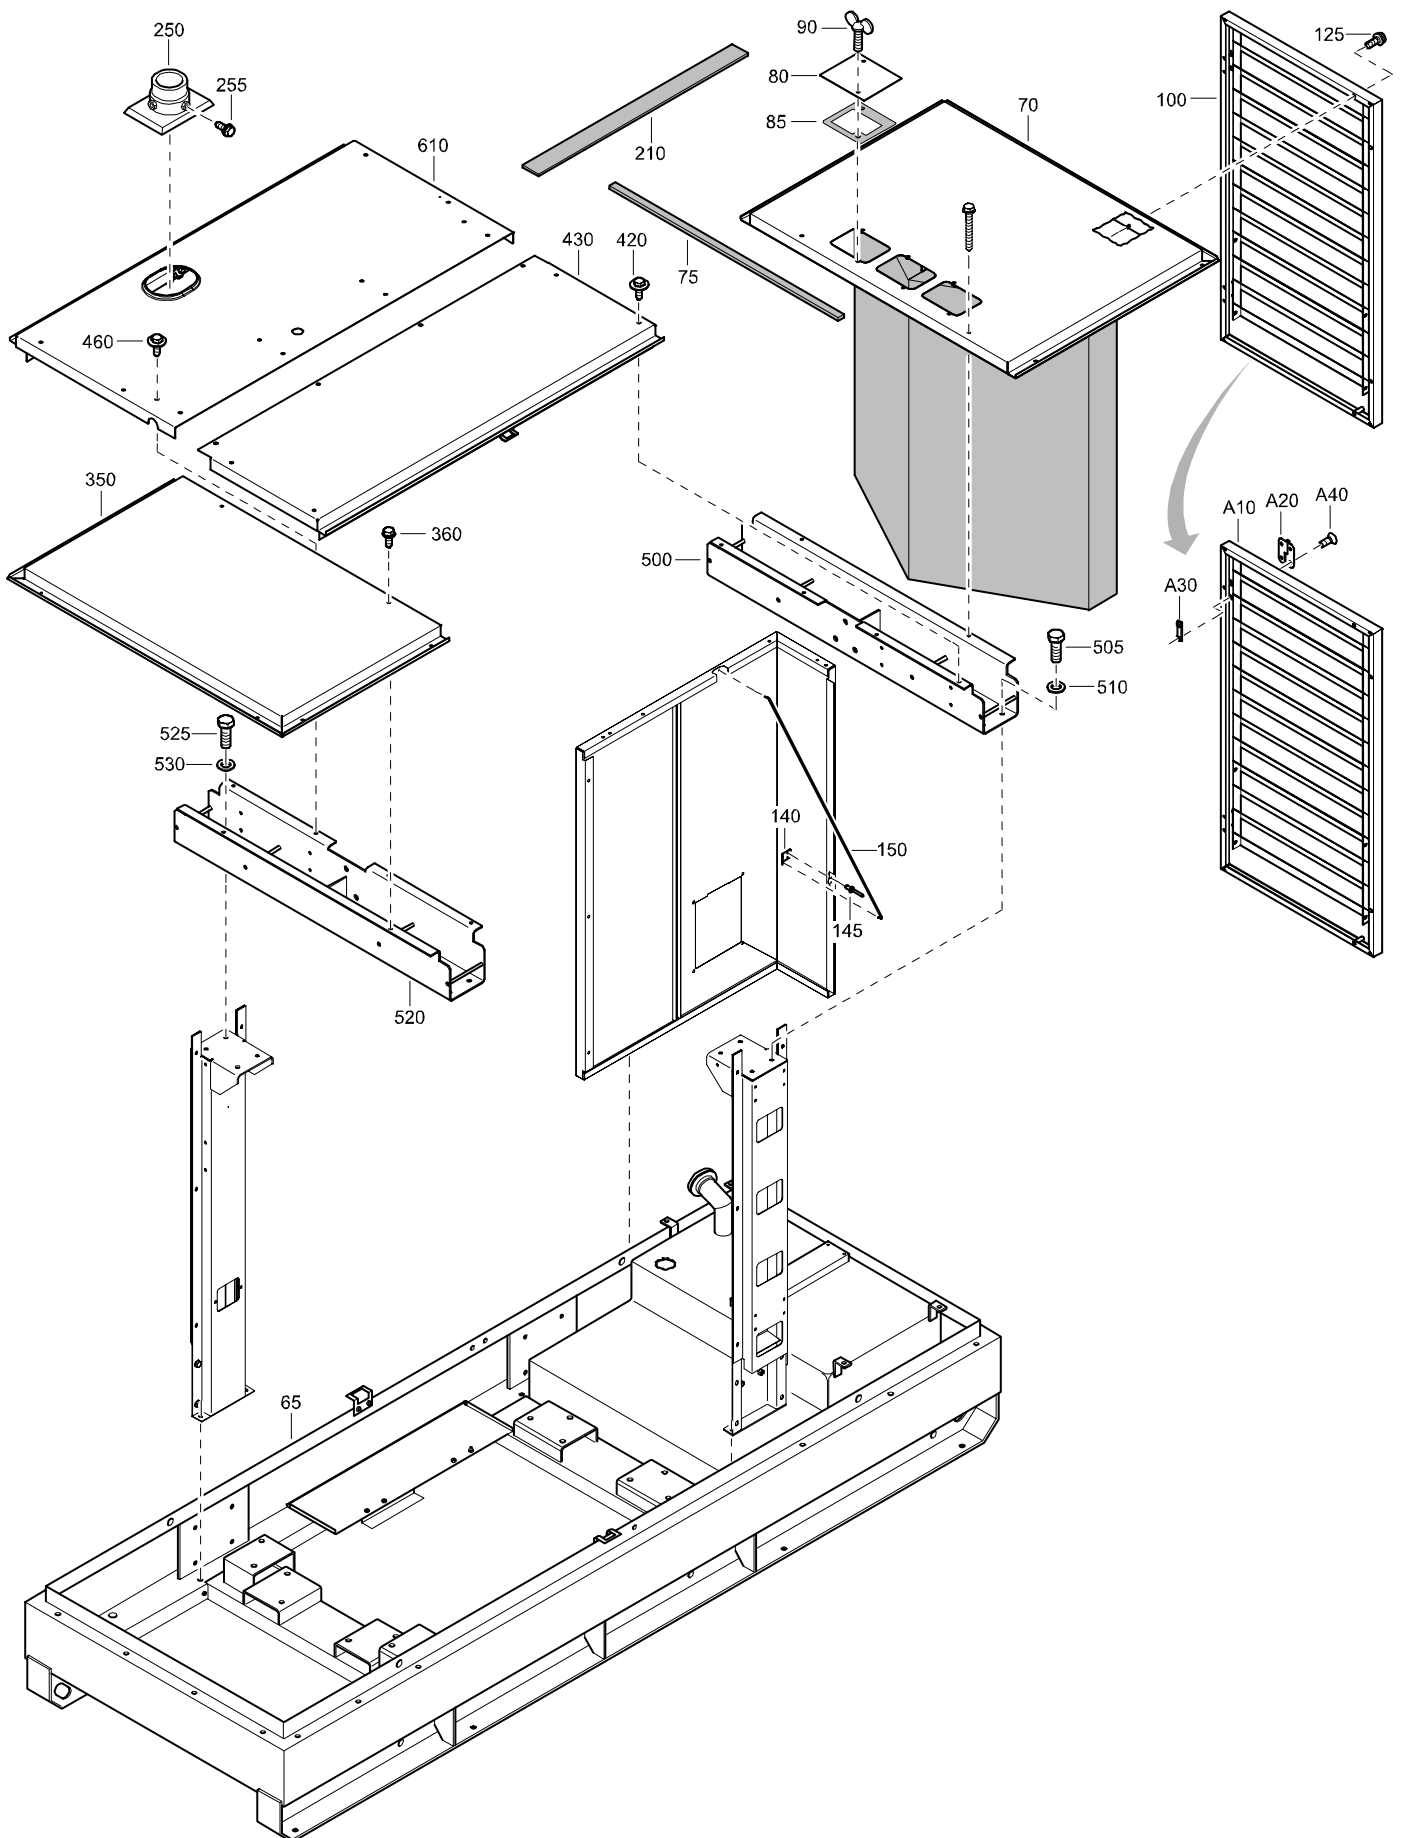



STANDARD

FRAME AND ROOFS

REF	PART NUMBER	DESIGNATION	QTY	REF	PART NUMBER	DESIGNATION	QTY
65	1615 9045 92	FRAME/FUELTANK (For details see page 59)	1				
70	1604 8437 81	ROOF (For details see page 55)	1				
75	1615 7057 00	SEAL	AR				
80	1626 1320 00	COVER	3				
85	1604 3296 00	SEAL	3				
90	0223 1957 11	WING SCREW	6				
100	1604 8438 91	SERVICE DOOR	1				
•A10	1626 1338 00	DOOR	1				
•A20	1615 5685 01	HINGE (LH)	2				
•A30	1615 5684 00	BRACKET	2				
•A40	0216 1324 03	HEX SOCK. SCREW	4				
125	1619 2766 00	HEX. HEAD SCREW	2				
140	1604 5857 00	BRACKET	2				
145	0129 3175 00	BLIND RIVET	4				
150	1604 7003 00	RETAINER	2				
210	0030 6001 04	SEAL	AR				
250	1604 1409 00	RAIN CAP	1				
255	1619 2766 00	HEX. HEAD SCREW	3				
350	1604 8439 80	ROOF REAR (For details see page 56)	1				
360	1619 2766 00	HEX. HEAD SCREW	12				
420	1615 5664 00	HEX. HEAD SCREW	8				
430	1604 1412 80	ROOF (For details see page 45)	1				
460	1615 5664 00	HEX. HEAD SCREW	8				
500	1604 1491 01	BEAM	1				
505	0147 1400 03	HEX. HEAD SCREW	8				
510	0301 2358 00	PLAIN WASHER	8				
520	1604 1491 01	BEAM	1				
525	0147 1400 03	HEX. HEAD SCREW	8				
530	0301 2358 00	PLAIN WASHER	8				
610	1604 3507 80	ROOF RIGHT (For details see page 46)	1				

STANDARD

CUBICLE AND ACCESSORIES

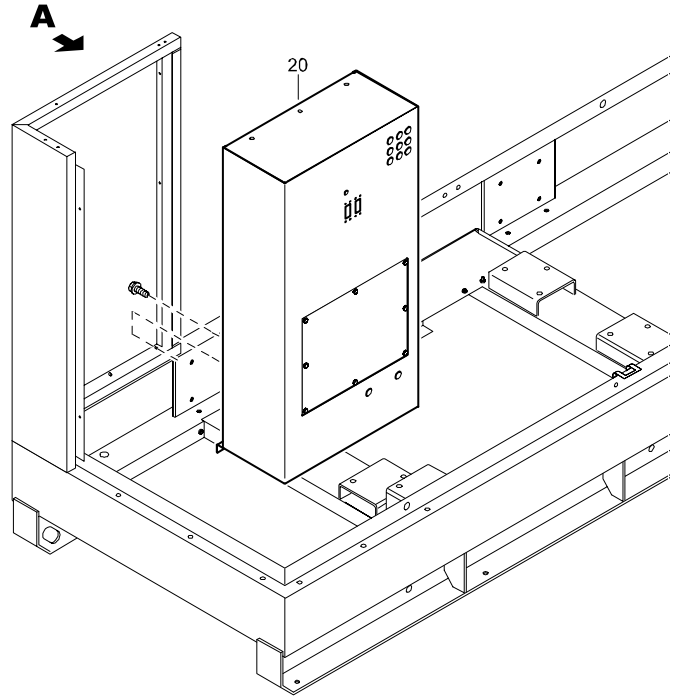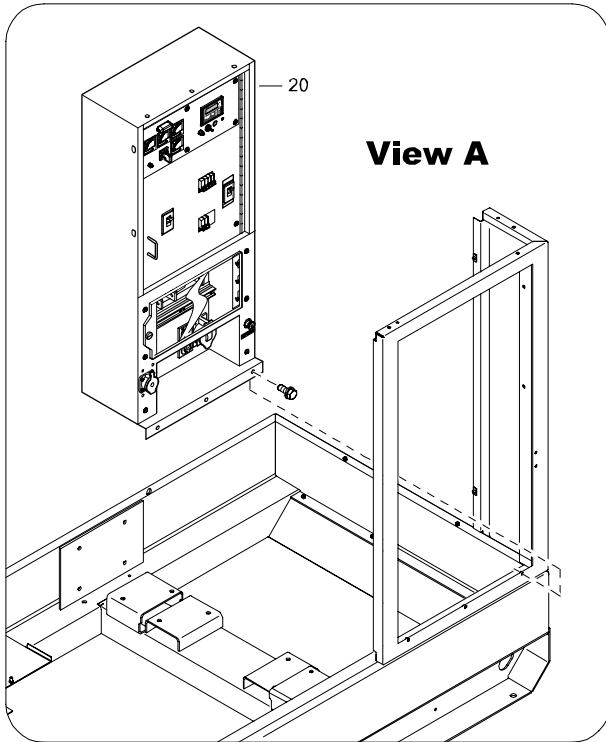


REF	PART NUMBER	DESIGNATION	QTY
20	1900 1020 79	CUBICLE (For details see page 60)	1

REF	PART NUMBER	DESIGNATION	QTY
-----	-------------	-------------	-----


STANDARD

COOLANT HEATER

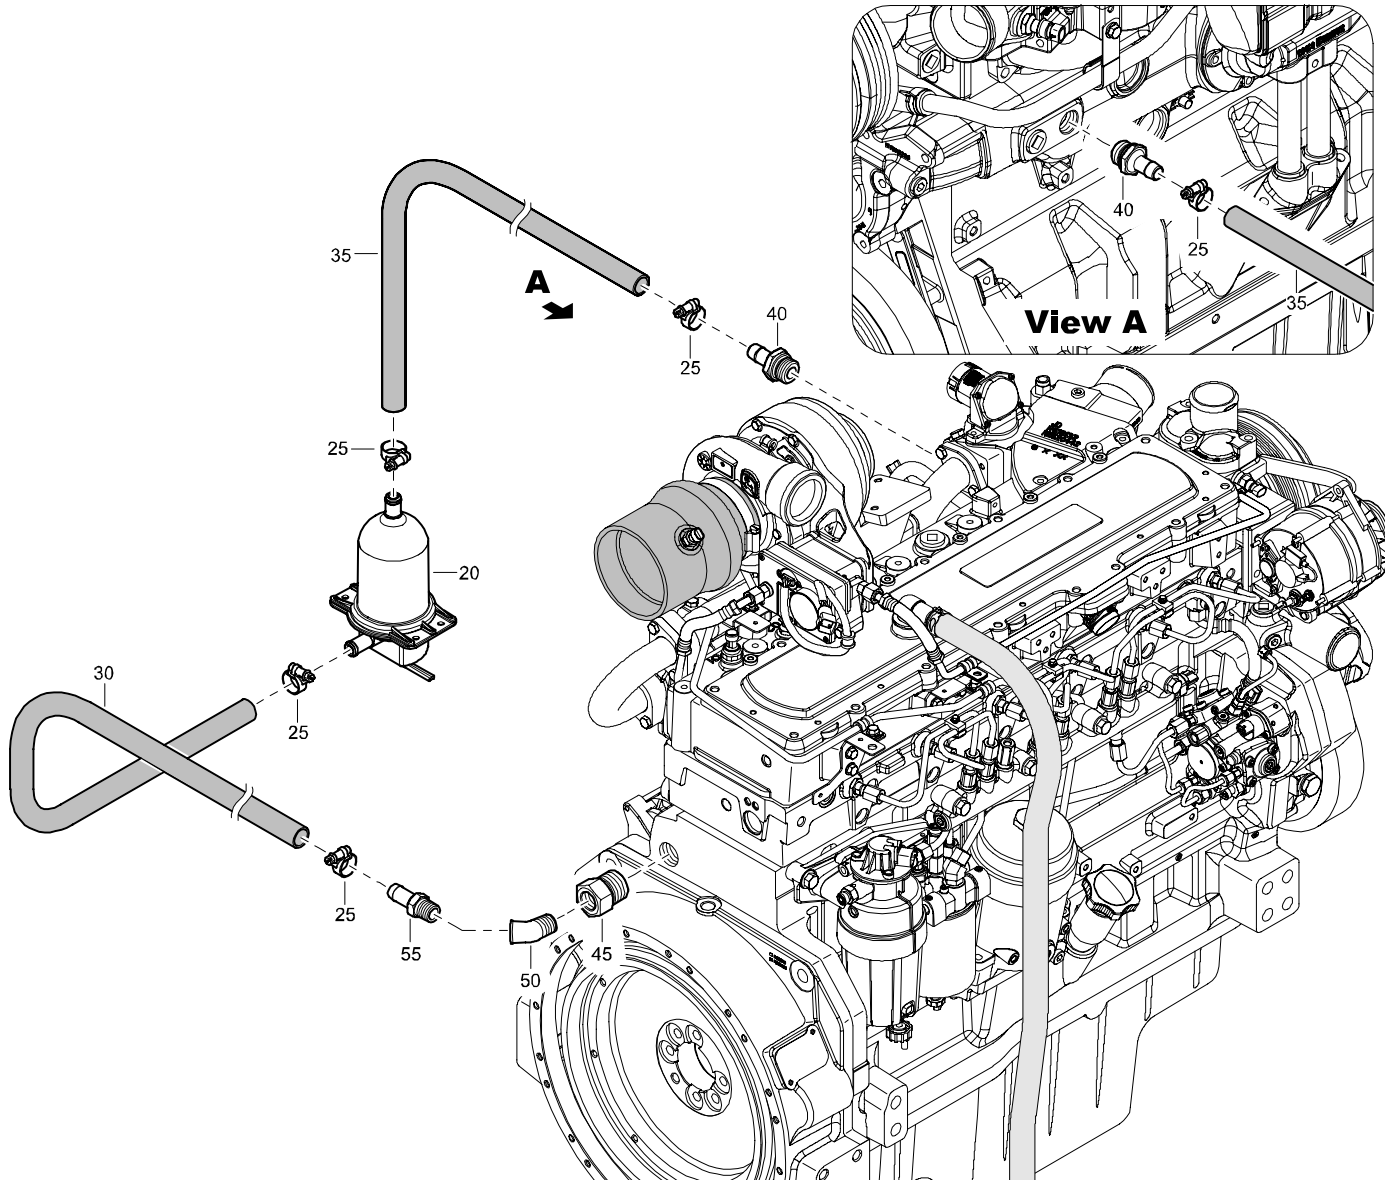

REF	PART NUMBER	DESIGNATION	QTY	REF	PART NUMBER	DESIGNATION	QTY
20	1089 9403 02	COOLANT HEATER	1				
25	0347 6105 00	HOSE CLAMP	4				
30	0072 8403 16	HOSE	AR				
35	0072 8403 16	HOSE	AR				
40	1626 1151 00	NIPPLE LUBRIC.	1				
45	1626 1152 01	BUSHING	1				
50	0560 0200 34	ELBOW	1				
55	9000 0244 00	HOSE NIPPLE	1				

MARKINGS




STANDARD

MARKINGS

REF	PART NUMBER	DESIGNATION	QTY	REF	PART NUMBER	DESIGNATION	QTY
20	1079 9902 63	WARNING LABEL	1				
30	1626 0642 00	DECAL	2				
35	0690 1150 00	HOUSE MARK	4				
40	1079 9921 42	INFORMATION LABEL	1				
55	1604 3303 00	DATA PLATE	1				
60	0129 3270 35	BLIND RIVET	4				
65	1079 9901 87	LABEL	1				
75	1079 9905 41	INSTRUCTION LABEL	1				
80	1079 9903 61	LABEL	2				
85	1079 9902 55	LABEL	1				
90	1079 9926 75	INFORMATION LABEL	1				
95	1079 9920 45	INFORMATION LABEL	1				
100	1079 9926 87	INFORMATION LABEL	1				

STANDARD


MARKINGS

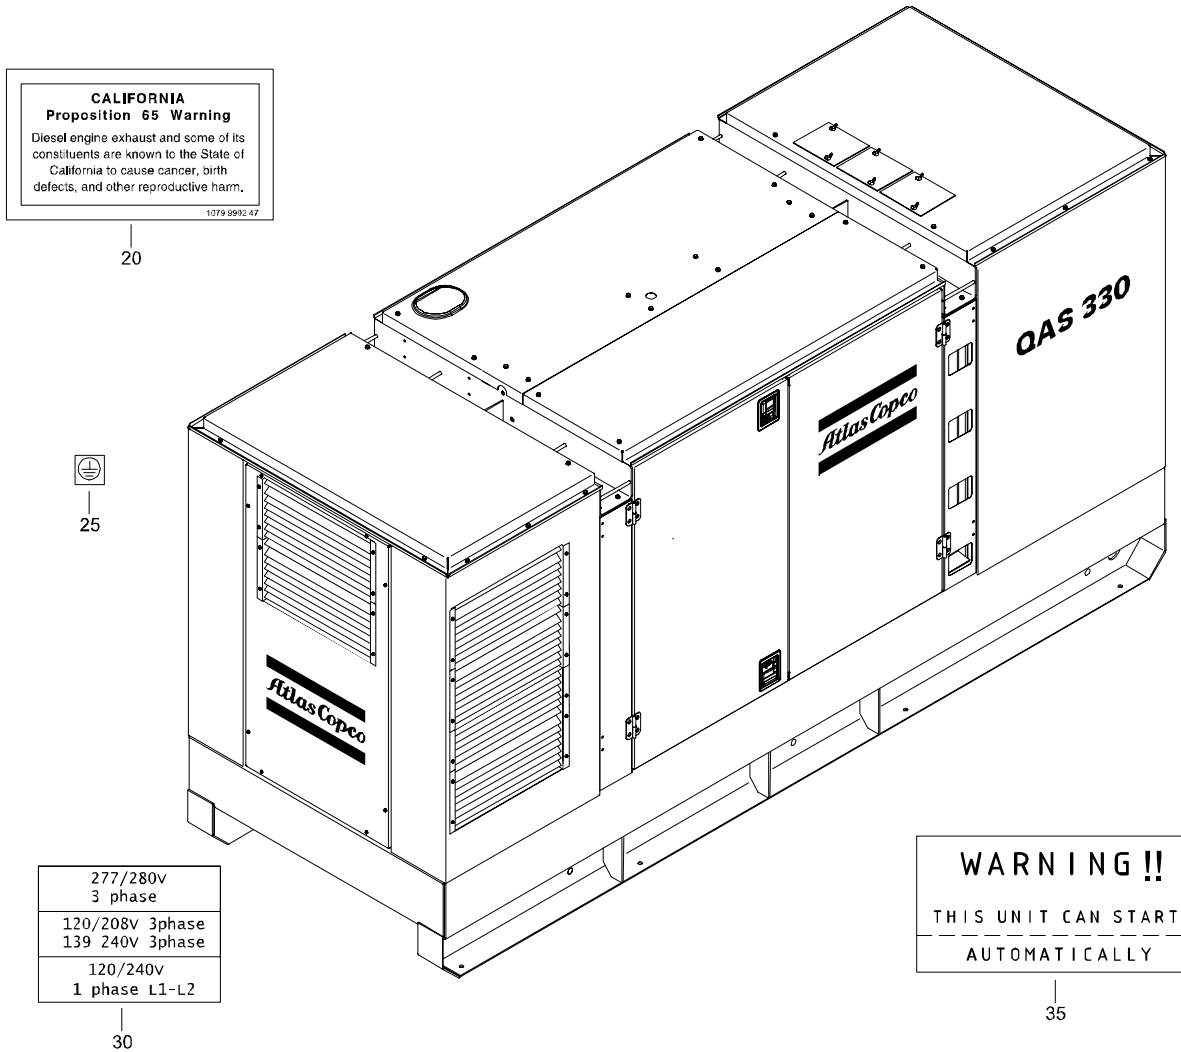

REF	PART NUMBER	DESIGNATION	QTY	REF	PART NUMBER	DESIGNATION	QTY
20	1079 9902 47	WARNING LABEL	1				
25	1079 9916 68	INFORMATION LABEL	1				
30	1079 9909 44	INFORMATION LABEL	1				
35	1079 9903 16	WARNING LABEL	1				

STANDARD


ROOF

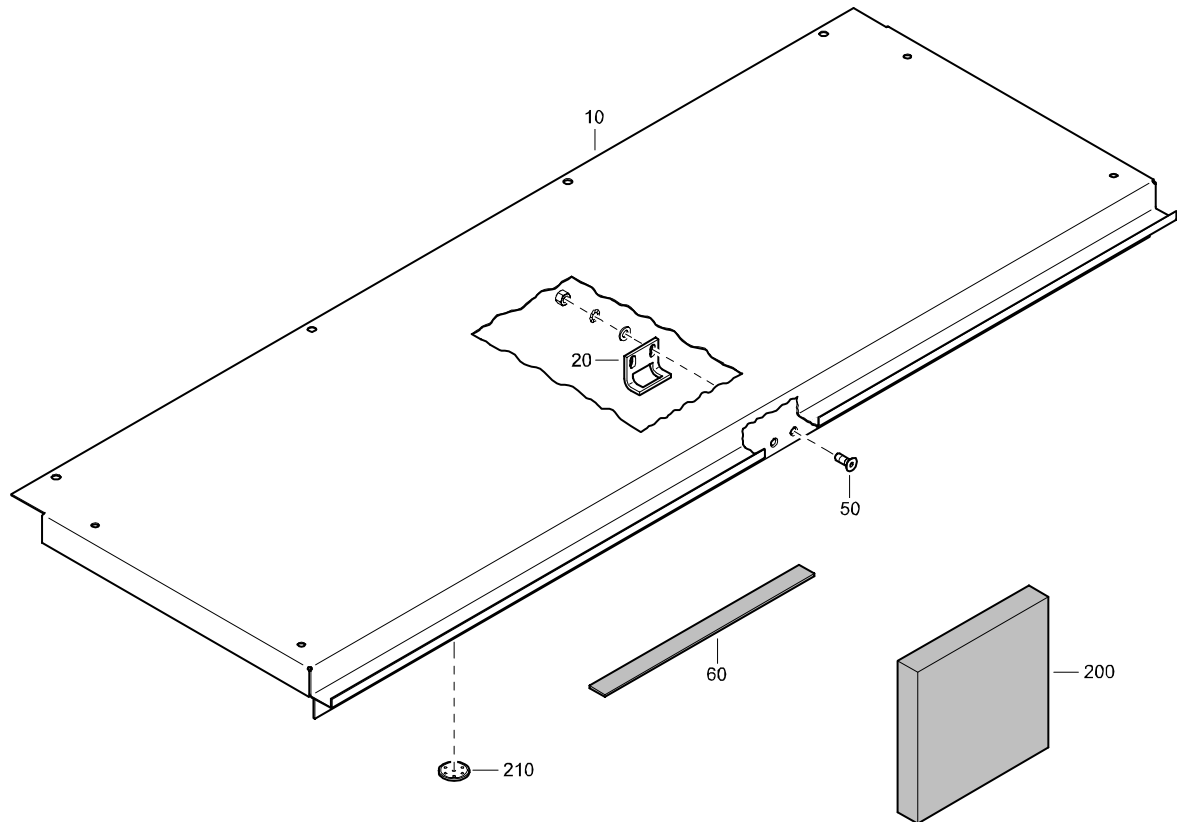

REF	PART NUMBER	DESIGNATION	QTY	REF	PART NUMBER	DESIGNATION	QTY
-	1604 1412 80	ROOF	(From page 38)				
•10	1604 1412 03	ROOF	1				
•20	1615 8572 00	HOOK	1				
•50	0216 1324 03	HEX SOCK. SCREW	2				
•60	0030 6001 04	SEAL	AR				
•200	-	SILENCING FOAM (30 mm)	1				
•210	1615 7884 00	CLIP	5				
-	1079 0003 32	SILENCING FOAM 2000 mm x 1500 mm x 30 mm					

STANDARD


ROOF
RIGHT

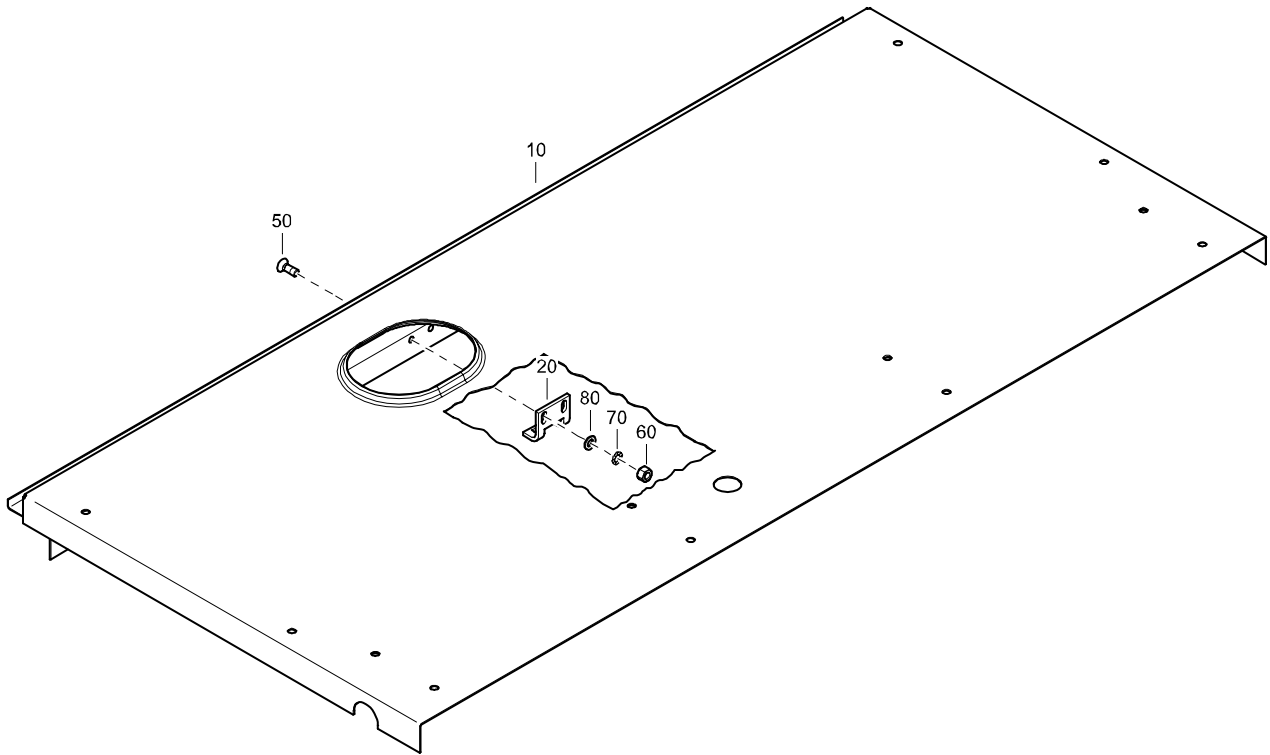

REF	PART NUMBER	DESIGNATION	QTY	REF	PART NUMBER	DESIGNATION	QTY
-	1604 3507 80	ROOF RIGHT	(From page 38)				
•10	1604 3507 00	ROOF RIGHT	1				
•20	1615 8572 00	HOOK	1				
•50	0216 1324 03	HEX SOCK. SCREW	2				
•60	0266 2110 00	HEXAGON NUT	2				
•70	0333 3227 00	LOCK WASHER	2				
•80	0301 2335 00	PLAIN WASHER	2				

STANDARD


REAR PANEL

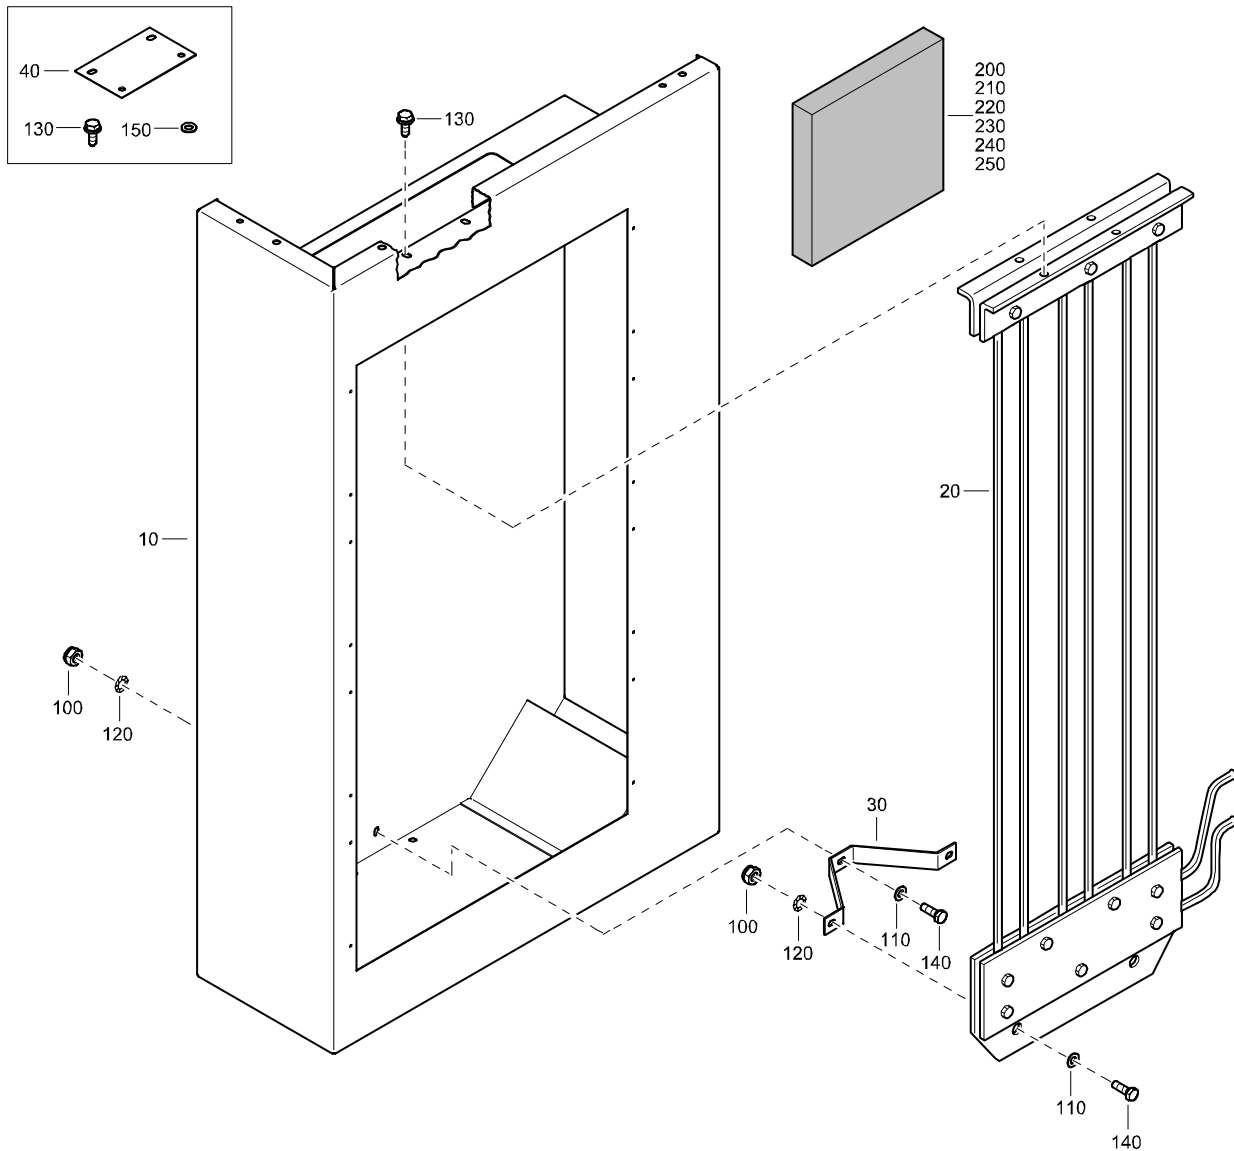

REF	PART NUMBER	DESIGNATION	QTY	REF	PART NUMBER	DESIGNATION	QTY
-	1604 4383 80	REAR PANEL	(From page 32)				
•10	1604 4383 00	REAR PANEL	1				
•20	1615 5573 00	COOLER	1				
•30	1615 5574 00	BRACKET	1				
•40	1604 1555 00	BRACKET	1				
•100	0266 2110 00	HEXAGON NUT	3				
•110	0301 2335 00	PLAIN WASHER	5				
•120	0333 3227 00	LOCK WASHER	5				
•130	1619 2766 00	HEX. HEAD SCREW	4				
•140	0147 1323 03	HEX. HEAD SCREW	3				
•150	0300 8019 00	PLAIN WASHER	1				
•200	-	SILENCING FOAM (30 mm)	1				
•210	-	SILENCING FOAM (30 mm)	1				
•220	-	SILENCING FOAM (30 mm)	1				
•230	-	SILENCING FOAM (30 mm)	1				
•240	-	SILENCING FOAM (30 mm)	1				
•250	-	SILENCING FOAM (30 mm)	1				
-	1079 0003 32	SILENCING FOAM					
		2000 mm x 1500 mm x 30 mm					

STANDARD


REAR PANEL LEFT

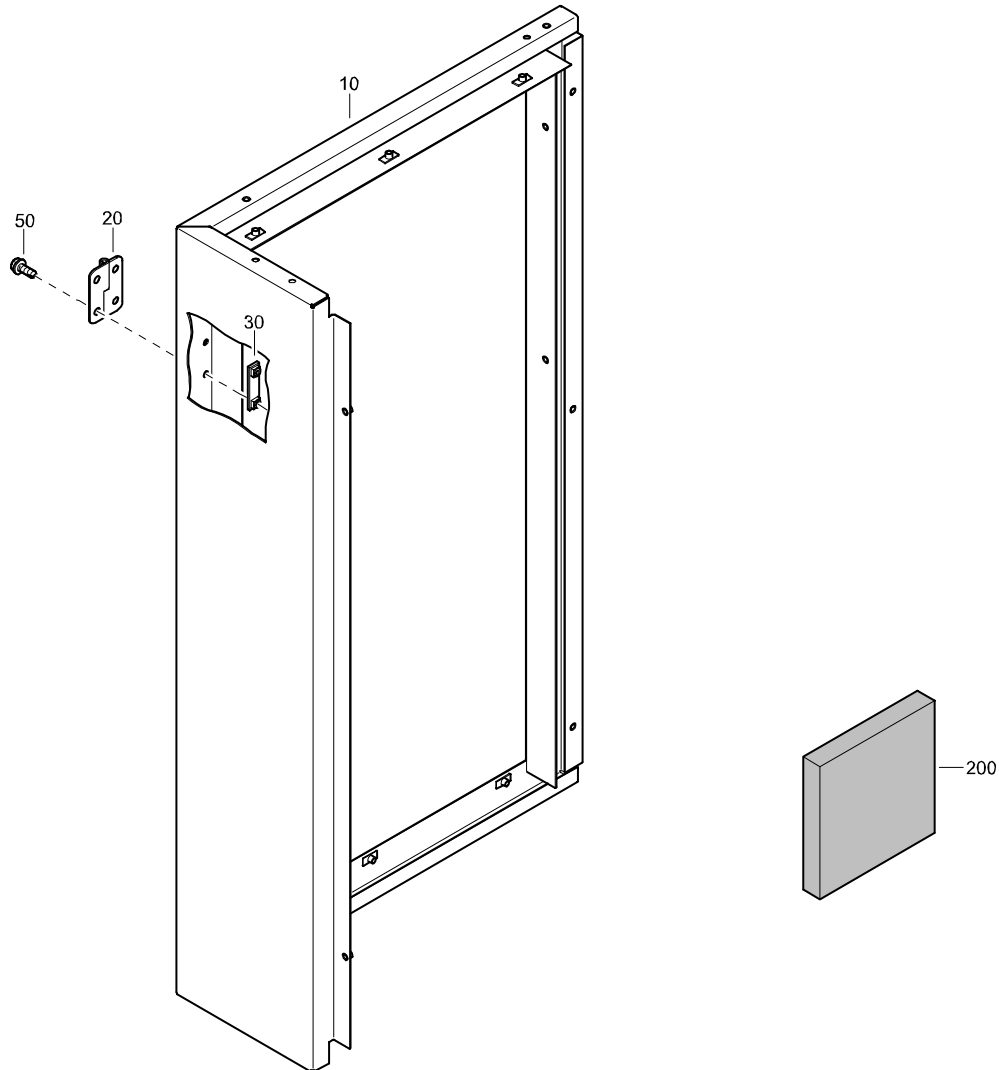

REF	PART NUMBER	DESIGNATION	QTY	REF	PART NUMBER	DESIGNATION	QTY
-	1604 8417 80	REAR PANEL LEFT	(From page 32)				
•10	1615 8064 01	REAR PANEL LEFT	1				
•20	1615 5685 01	HINGE (LH)	2				
•30	1615 5684 00	BRACKET	2				
•50	0216 1324 03	HEX SOCK, SCREW	4				
•200	-	SILENCING FOAM (30 mm)	1				
-	1079 0003 32	SILENCING FOAM					
		2000 mm x 1500 mm x 30 mm					

STANDARD


FRONT PANEL

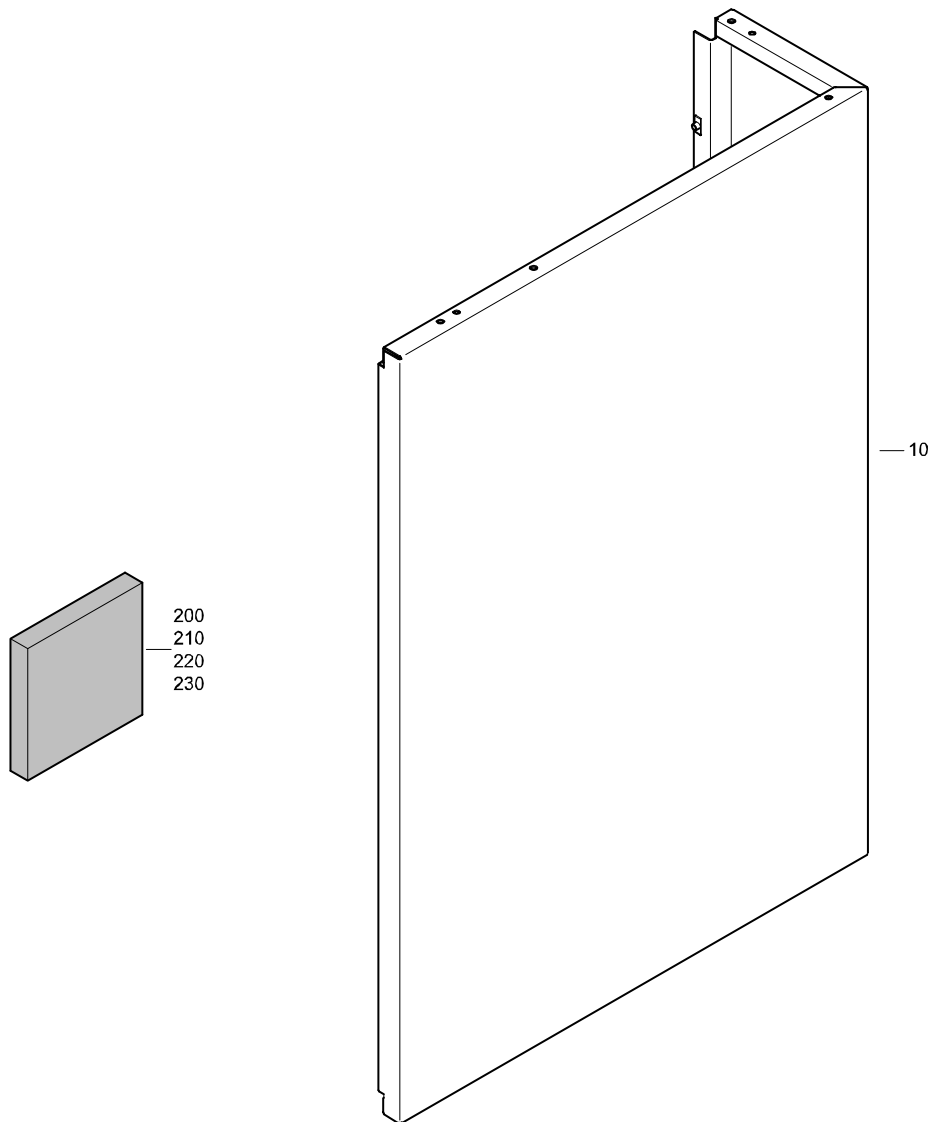

REF	PART NUMBER	DESIGNATION	QTY	REF	PART NUMBER	DESIGNATION	QTY
-	1604 8418 81	FRONT PANEL	(From page 32)				
•10	1615 8066 02	FRONT PANEL RIGHT	1				
•200	-	SILENCING FOAM (50 mm)	1				
•210	-	SILENCING FOAM (50 mm)	1				
•220	-	SILENCING FOAM (50 mm)	1				
•230	-	SILENCING FOAM (50 mm)	1				
-	1079 0003 33	SILENCING FOAM 2000 mm x 1500 mm x 50 mm					

STANDARD


FRONT PANEL LEFT

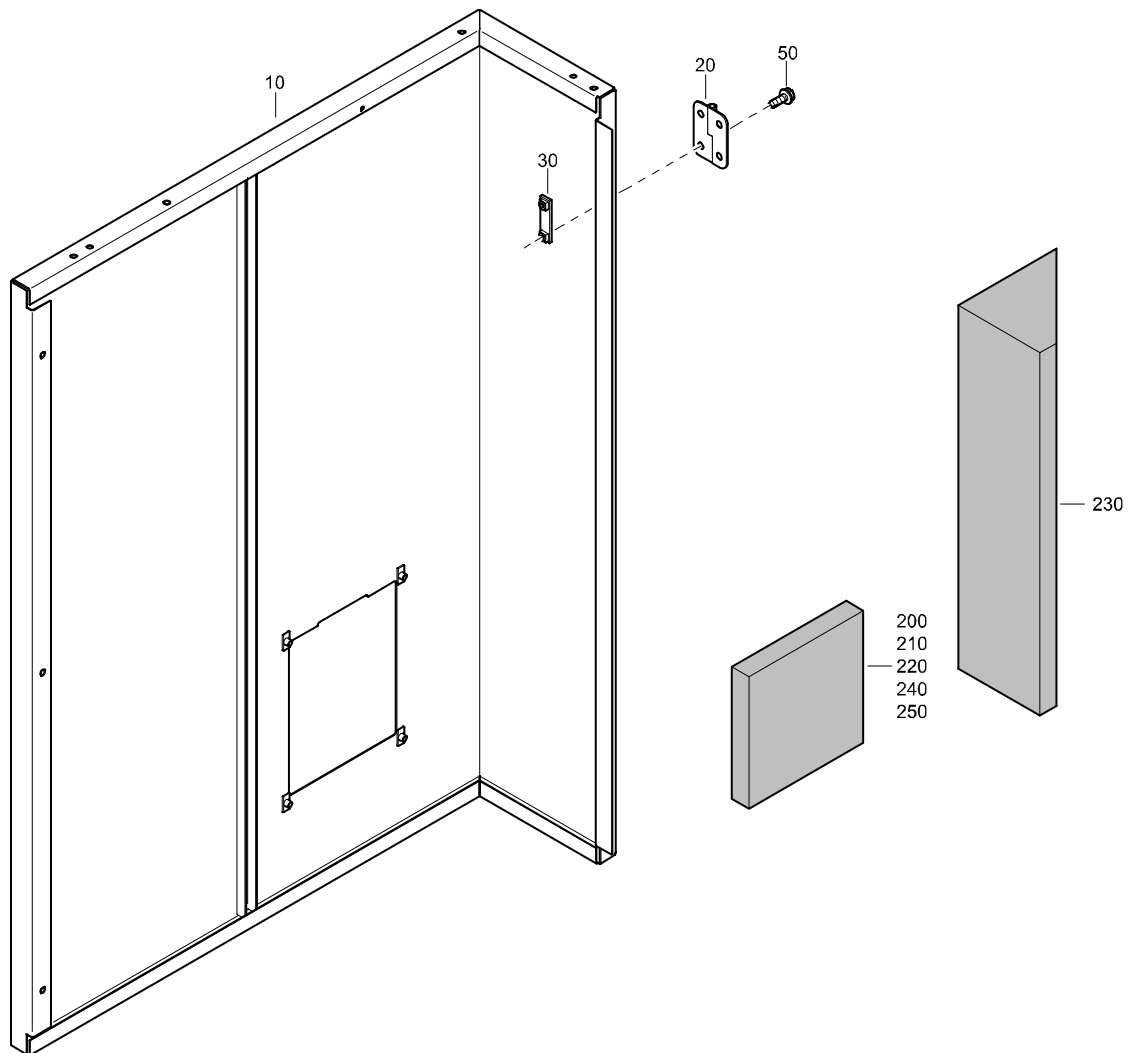

REF	PART NUMBER	DESIGNATION	QTY	REF	PART NUMBER	DESIGNATION	QTY
-	1604 8419 81	FRONT PANEL LEFT (From page 32)					
•10	1615 8067 02	FRONT PANEL LEFT	1				
•20	1615 5685 01	HINGE (LH)	2				
•30	1615 5684 00	BRACKET	2				
•50	0216 1324 03	HEX SOCK, SCREW	2				
•200	-	SILENCING FOAM (50 mm)	1				
•210	-	SILENCING FOAM (50 mm)	1				
•220	-	SILENCING FOAM (50 mm)	1				
•230	1615 9677 01	SILENCING FOAM	1				
•240	-	SILENCING FOAM (50 mm)	1				
•250	-	SILENCING FOAM (50 mm)	2				
-	1079 0003 33	SILENCING FOAM 2000 mm x 1500 mm x 50 mm					

STANDARD


SERVICE DOOR

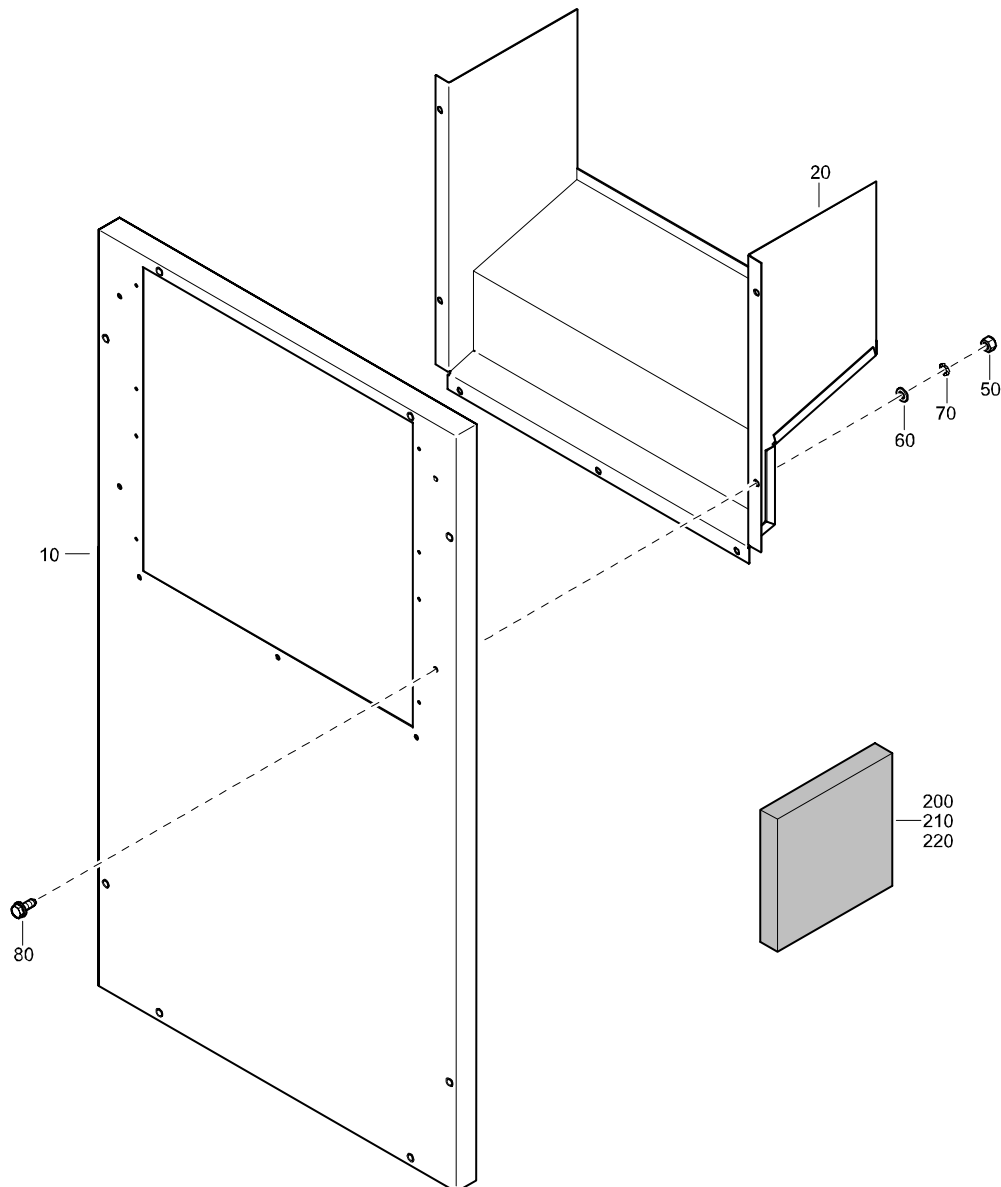

REF	PART NUMBER	DESIGNATION	QTY	REF	PART NUMBER	DESIGNATION	QTY
-	1604 8427 80	SERVICE DOOR	(From page 32)				
•10	1615 8074 02	SERVICE DOOR	1				
•20	1615 8065 04	BAFFLE	1				
•50	0266 2110 00	HEXAGON NUT	7				
•60	0301 2335 00	PLAIN WASHER	7				
•70	0333 3227 00	LOCK WASHER	7				
•80	1619 2766 00	HEX. HEAD SCREW	7				
•200	-	SILENCING FOAM (30 mm)	1				
•210	-	SILENCING FOAM (30 mm)	1				
•220	-	SILENCING FOAM (30 mm)	1				
-	1079 0003 32	SILENCING FOAM					
		2000 mm x 1500 mm x 30 mm					

STANDARD


REAR DOOR

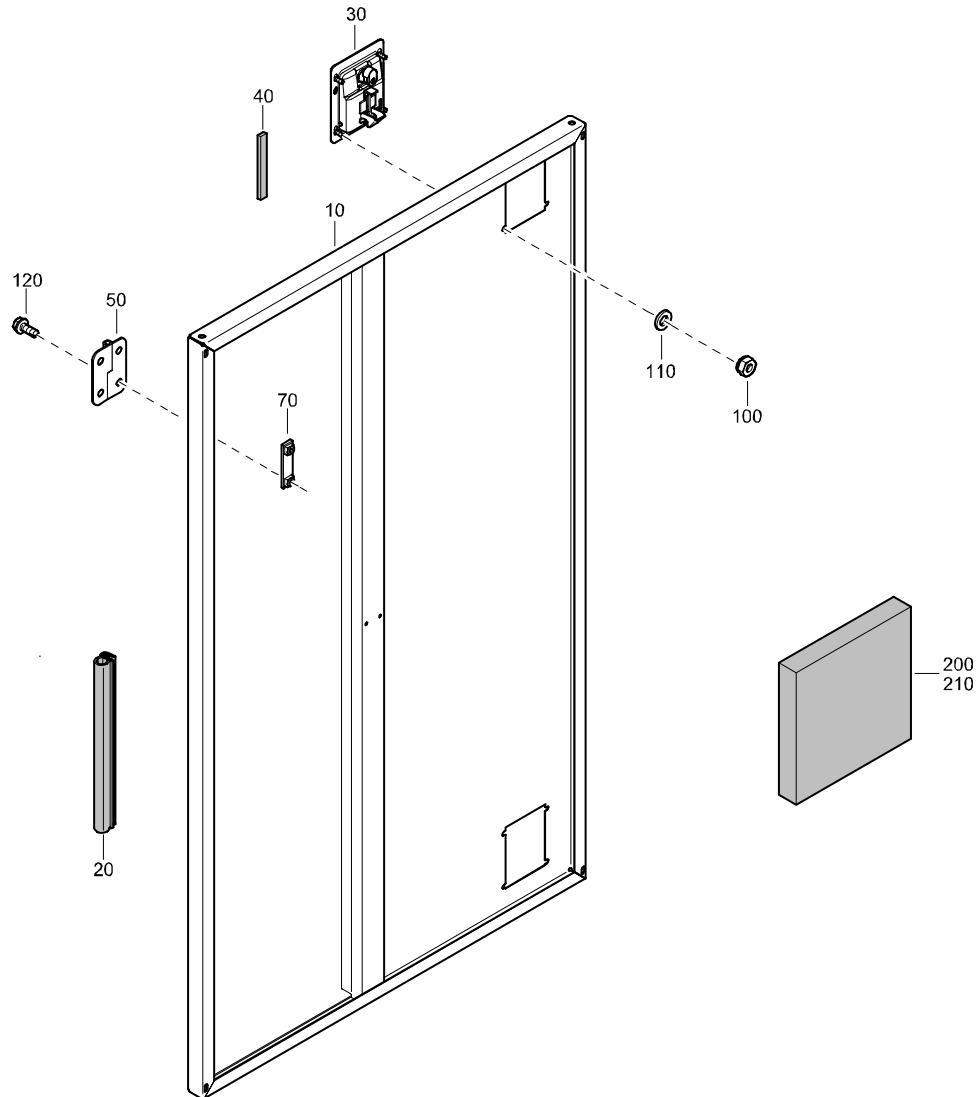

REF	PART NUMBER	DESIGNATION	QTY	REF	PART NUMBER	DESIGNATION	QTY
-	1604 8429 80	REAR DOOR	(From page 32)				
•10	1615 8051 02	DOOR REAR	1				
•20	1604 4317 00	SEAL	AR				
•30	1615 6967 03	HANDLE	2				
•40	1615 7057 00	SEAL	AR				
•50	1615 5685 01	HINGE (LH)	2				
•70	1615 5684 00	BRACKET	2				
•100	0291 1108 00	LOCKNUT	8				
•110	0301 2321 00	PLAIN WASHER	8				
•120	0216 1324 03	HEX SOCK. SCREW	4				
•200	-	SILENCING FOAM (30 mm)	1				
•210	-	SILENCING FOAM (30 mm)	1				
-	1079 0003 32	SILENCING FOAM					
		2000 mm x 1500 mm x 30 mm					

STANDARD


REAR DOOR

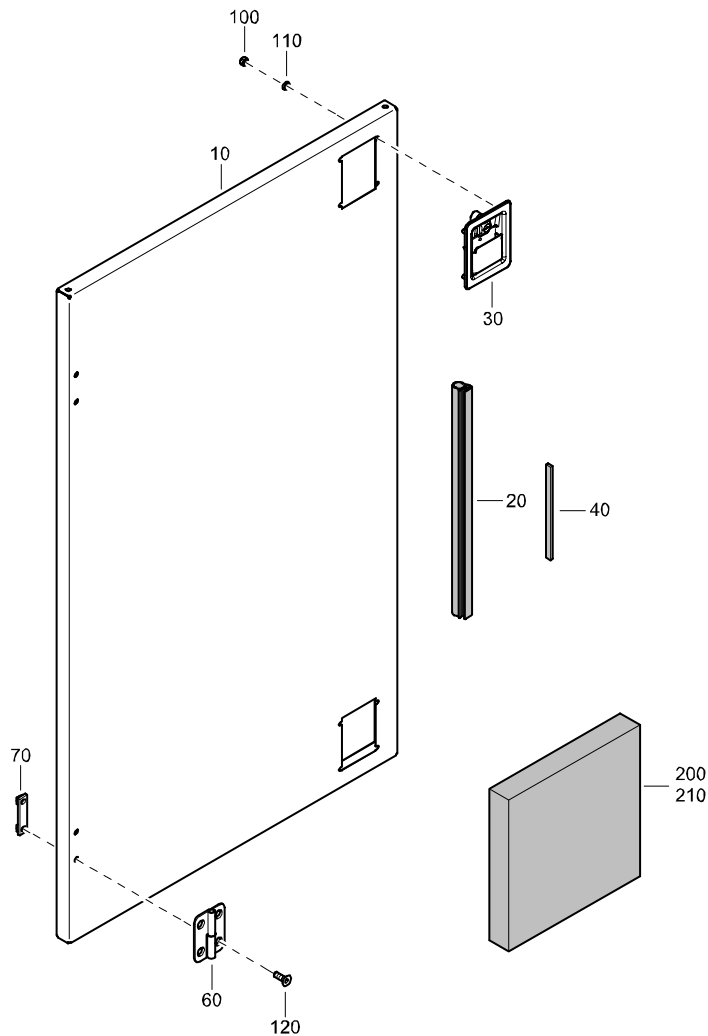

REF	PART NUMBER	DESIGNATION	QTY	REF	PART NUMBER	DESIGNATION	QTY
-	1604 8429 85	REAR DOOR	(From page 32)				
•10	1615 8051 02	DOOR REAR	1				
•20	1604 4317 00	SEAL	AR				
•30	1615 6967 03	HANDLE	2				
•40	1615 7057 00	SEAL	AR				
•60	1615 5686 01	HINGE (RH)	2				
•70	1615 5684 00	BRACKET	2				
•100	0291 1108 00	LOCKNUT	8				
•110	0301 2321 00	PLAIN WASHER	8				
•120	0216 1324 03	HEX SOCK. SCREW	4				
•200	-	SILENCING FOAM (30 mm)	1				
•210	-	SILENCING FOAM (30 mm)	1				
-	1079 0003 32	SILENCING FOAM					
		2000 mm x 1500 mm x 30 mm					

STANDARD


DOOR CUBICLE

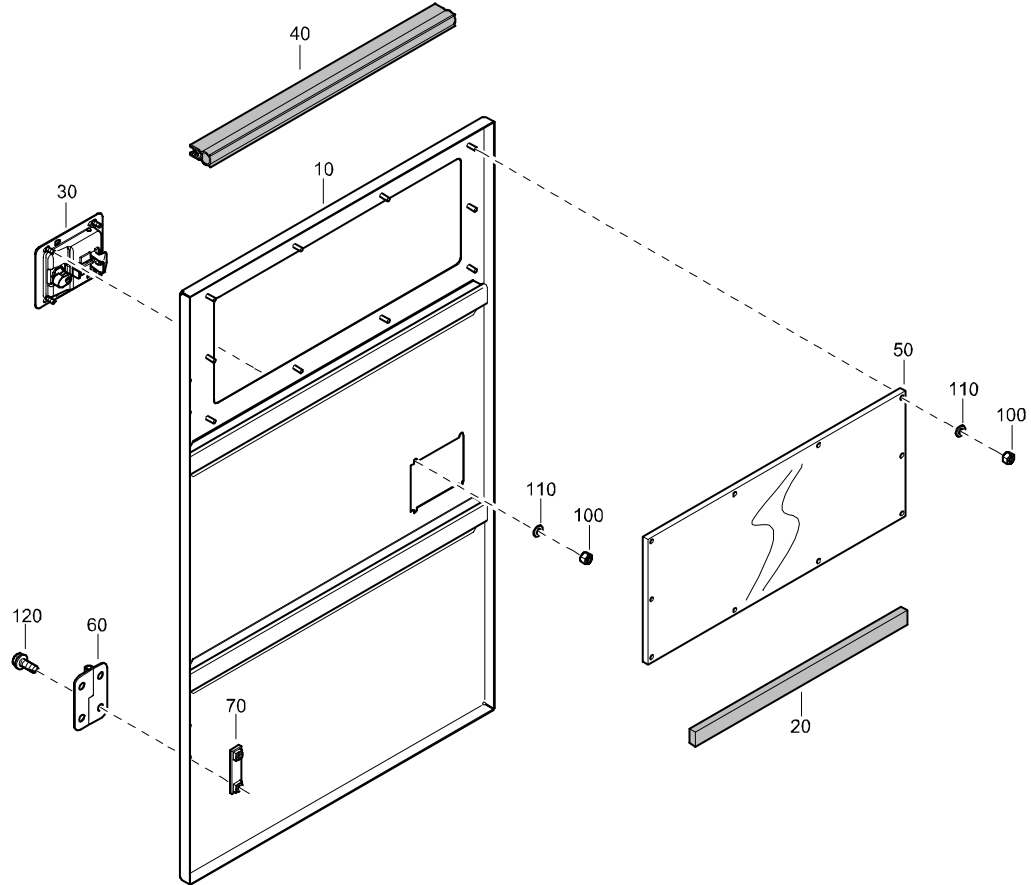

REF	PART NUMBER	DESIGNATION	QTY	REF	PART NUMBER	DESIGNATION	QTY
-	1604 8430 80	DOOR CUBICLE	(From page 32)				
•10	1615 8121 02	DOOR (CUBICLE)	1				
•20	1615 7057 00	SEAL	AR				
•30	1615 6967 03	HANDLE	1				
•40	1202 6584 00	SEAL	AR				
•50	1615 8120 00	WINDOW	1				
•60	1615 5685 01	HINGE (LH)	2				
•70	1615 5684 00	BRACKET	2				
•100	0291 1108 00	LOCKNUT	14				
•110	0301 2321 00	PLAIN WASHER	14				
•120	0216 1324 03	HEX SOCK. SCREW	4				

STANDARD


ROOF

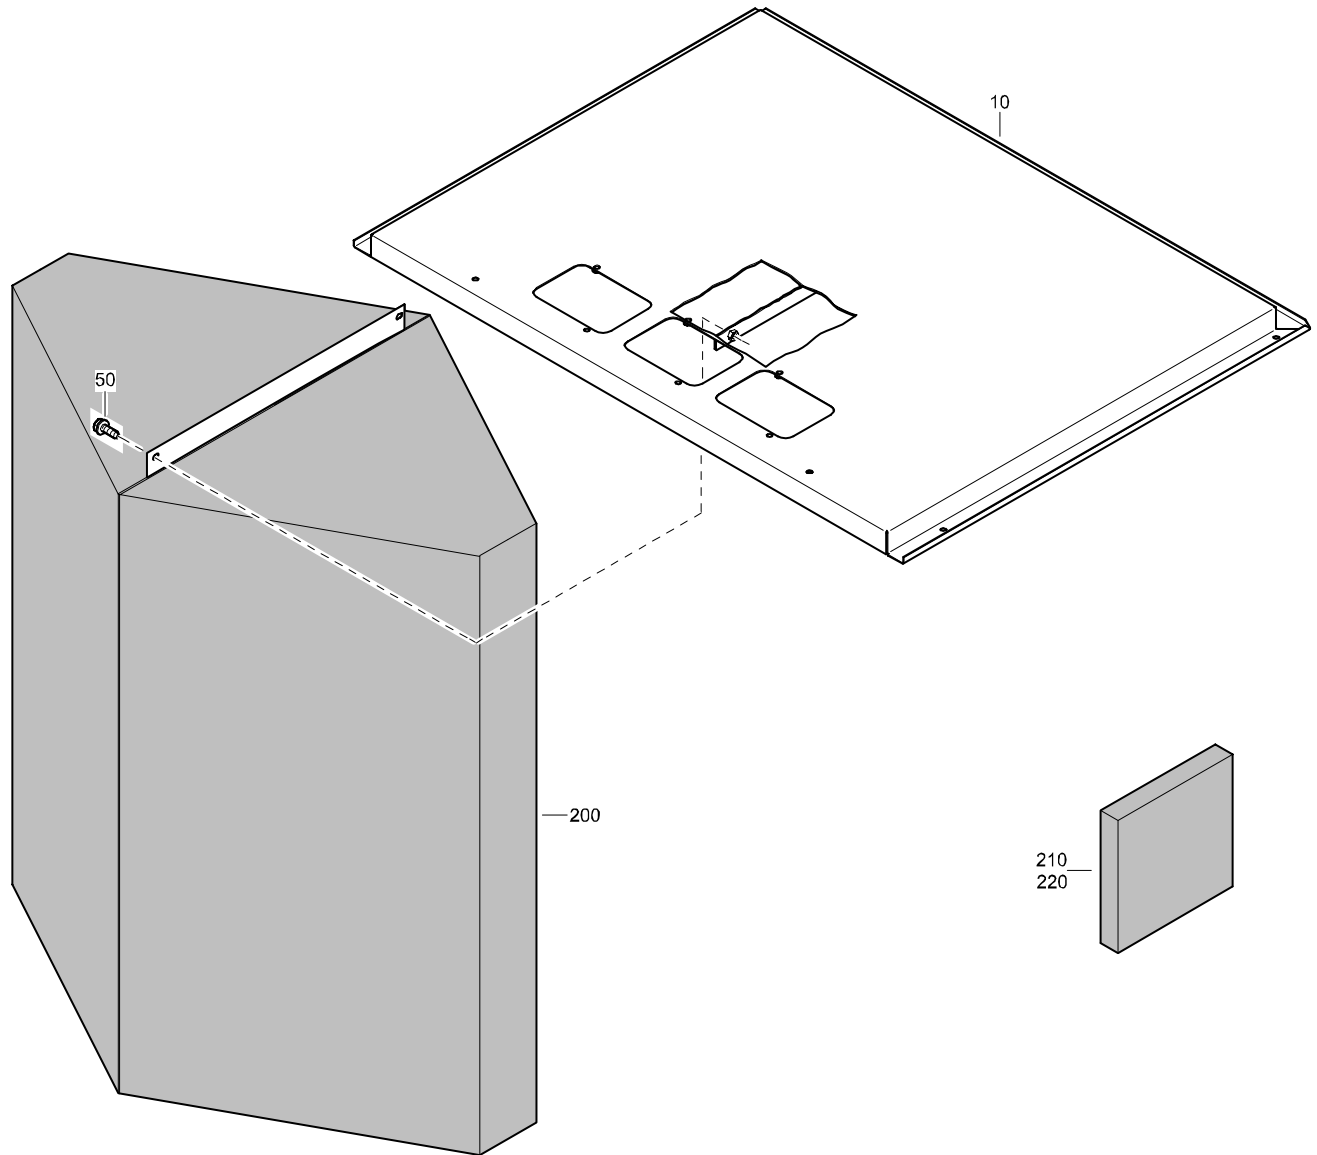

REF	PART NUMBER	DESIGNATION	QTY	REF	PART NUMBER	DESIGNATION	QTY
-	1604 8437 81	ROOF (From page 38)					
•10	1615 9664 06	ROOF	1				
•50	1619 2766 00	HEX. HEAD SCREW	2				
•200	1615 9670 80	BAFFLE/FOAM	1				
		(For details see page 62)					
•210	-	SILENCING FOAM (50 mm)	2				
•220	-	SILENCING FOAM (50 mm)	2				
-	1079 0003 33	SILENCING FOAM 2000 mm x 1500 mm x 50 mm					

STANDARD


ROOF
REAR

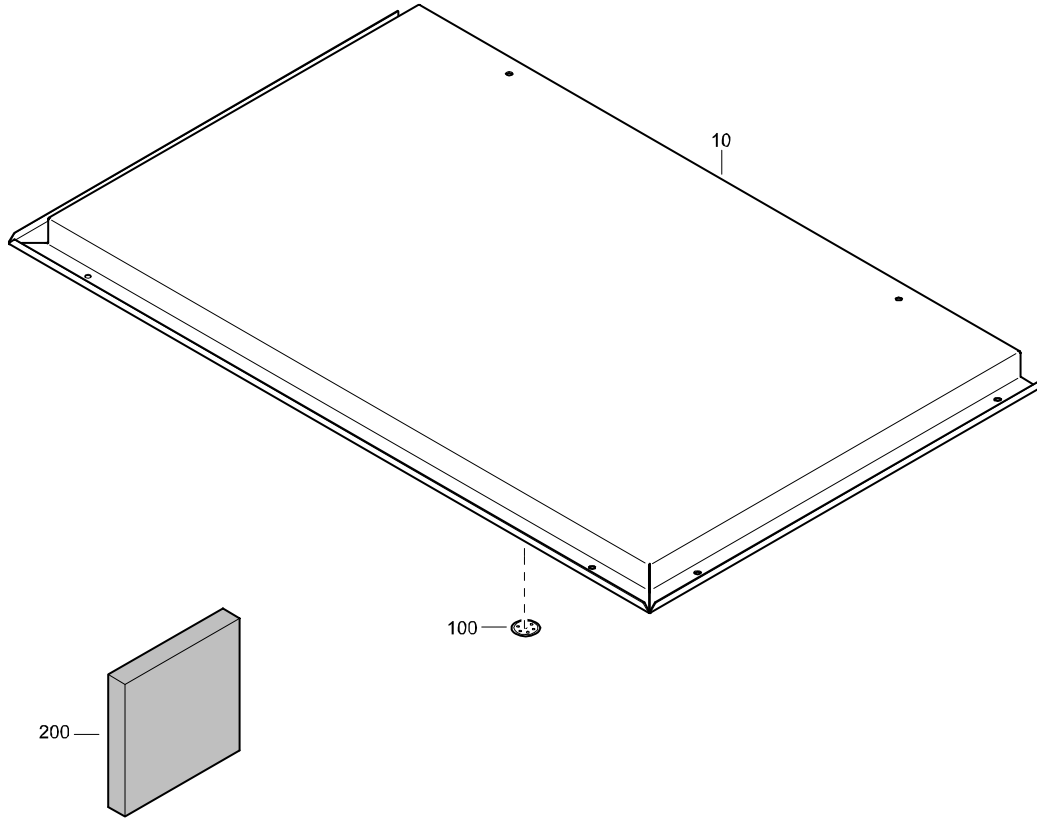

REF	PART NUMBER	DESIGNATION	QTY	REF	PART NUMBER	DESIGNATION	QTY
-	1604 8439 80	ROOF REAR	(From page 38)				
•10	1604 1410 03	ROOF (REAR)	1				
•100	1615 7884 00	CLIP	4				
•200	-	SILENCING FOAM (30 mm)	2				
-	1079 0003 32	SILENCING FOAM 2000 mm x 1500 mm x 30 mm					

STANDARD


DOOR

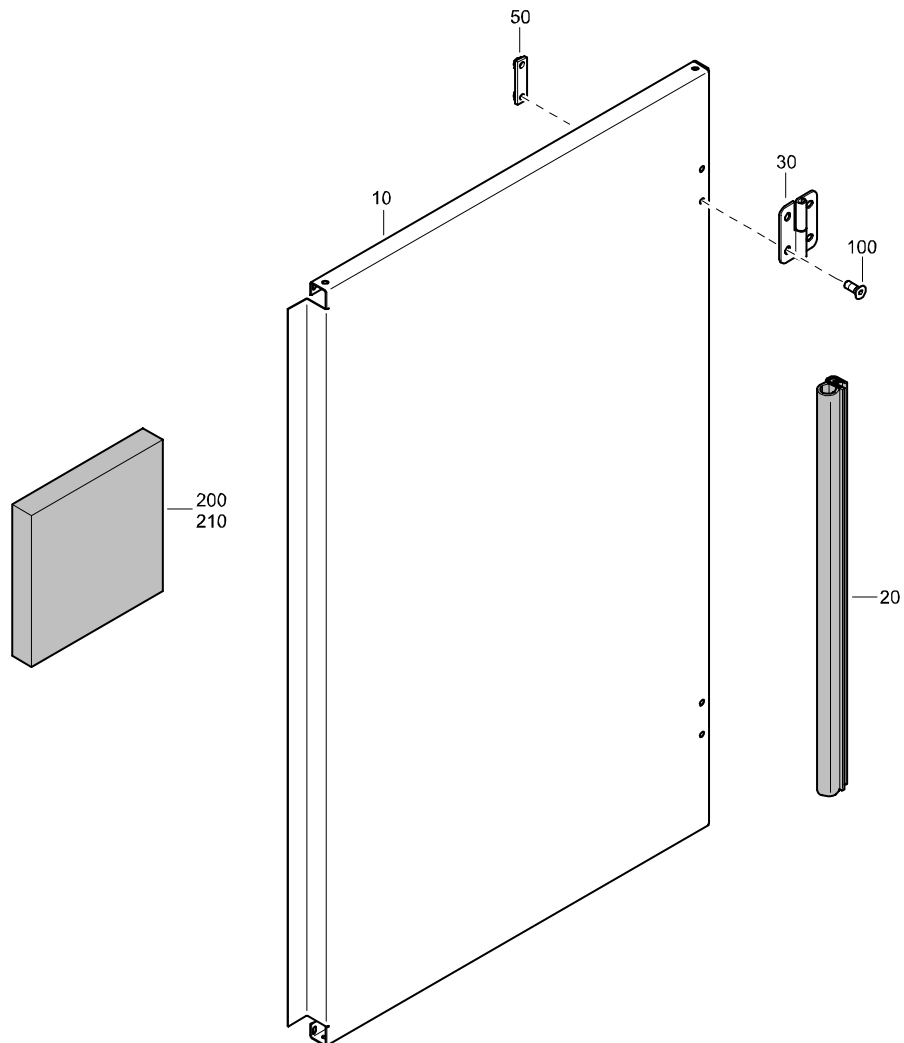

REF	PART NUMBER	DESIGNATION	QTY	REF	PART NUMBER	DESIGNATION	QTY
-	1604 8455 80	DOOR	(From page 32)				
•10	1615 8052 01	DOOR	1				
•20	1604 4317 00	SEAL	AR				
•30	1615 5685 01	HINGE (LH)	2				
•50	1615 5684 00	BRACKET	2				
•100	0216 1324 03	HEX SOCK. SCREW	4				
•200	-	SILENCING FOAM (30 mm)	1				
•210	-	SILENCING FOAM (30 mm)	1				
-	1079 0003 32	SILENCING FOAM					
		2000 mm x 1500 mm x 30 mm					

STANDARD


DOOR

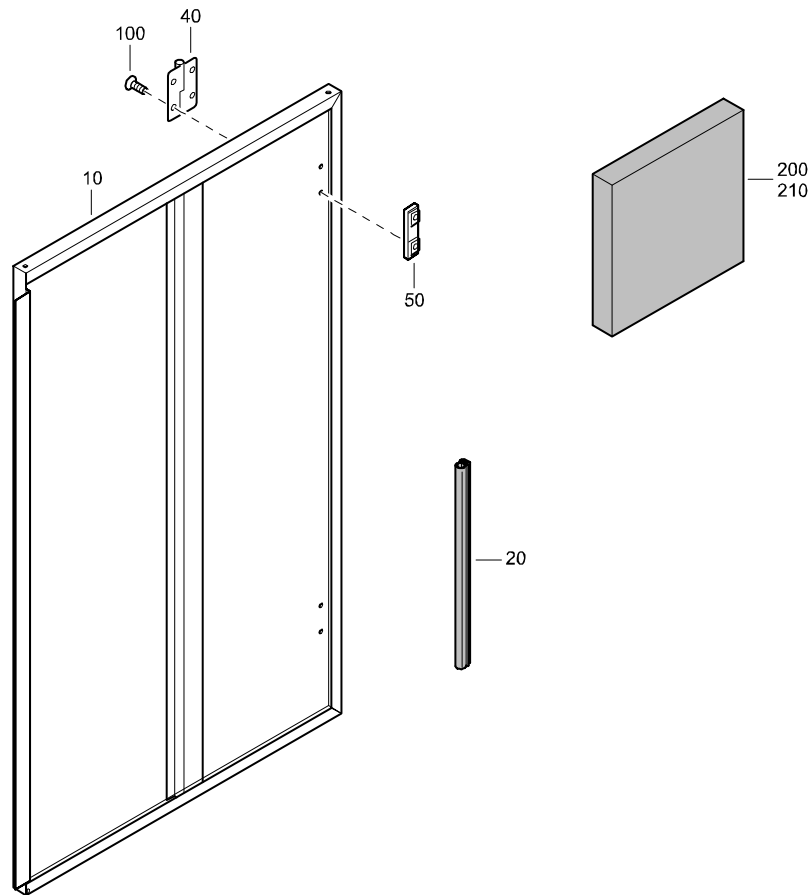

REF	PART NUMBER	DESIGNATION	QTY	REF	PART NUMBER	DESIGNATION	QTY
-	1604 8455 85	DOOR	(From page 32)				
•10	1615 8052 01	DOOR	1				
•20	1604 4317 00	SEAL	AR				
•40	1615 5686 01	HINGE (RH)	2				
•50	1615 5684 00	BRACKET	2				
•100	0216 1324 03	HEX SOCK. SCREW	4				
•200	-	SILENCING FOAM (30 mm)	1				
•210	-	SILENCING FOAM (30 mm)	1				
-	1079 0003 32	SILENCING FOAM					
		2000 mm x 1500 mm x 30 mm					

STANDARD


FRAME AND FUELTANK

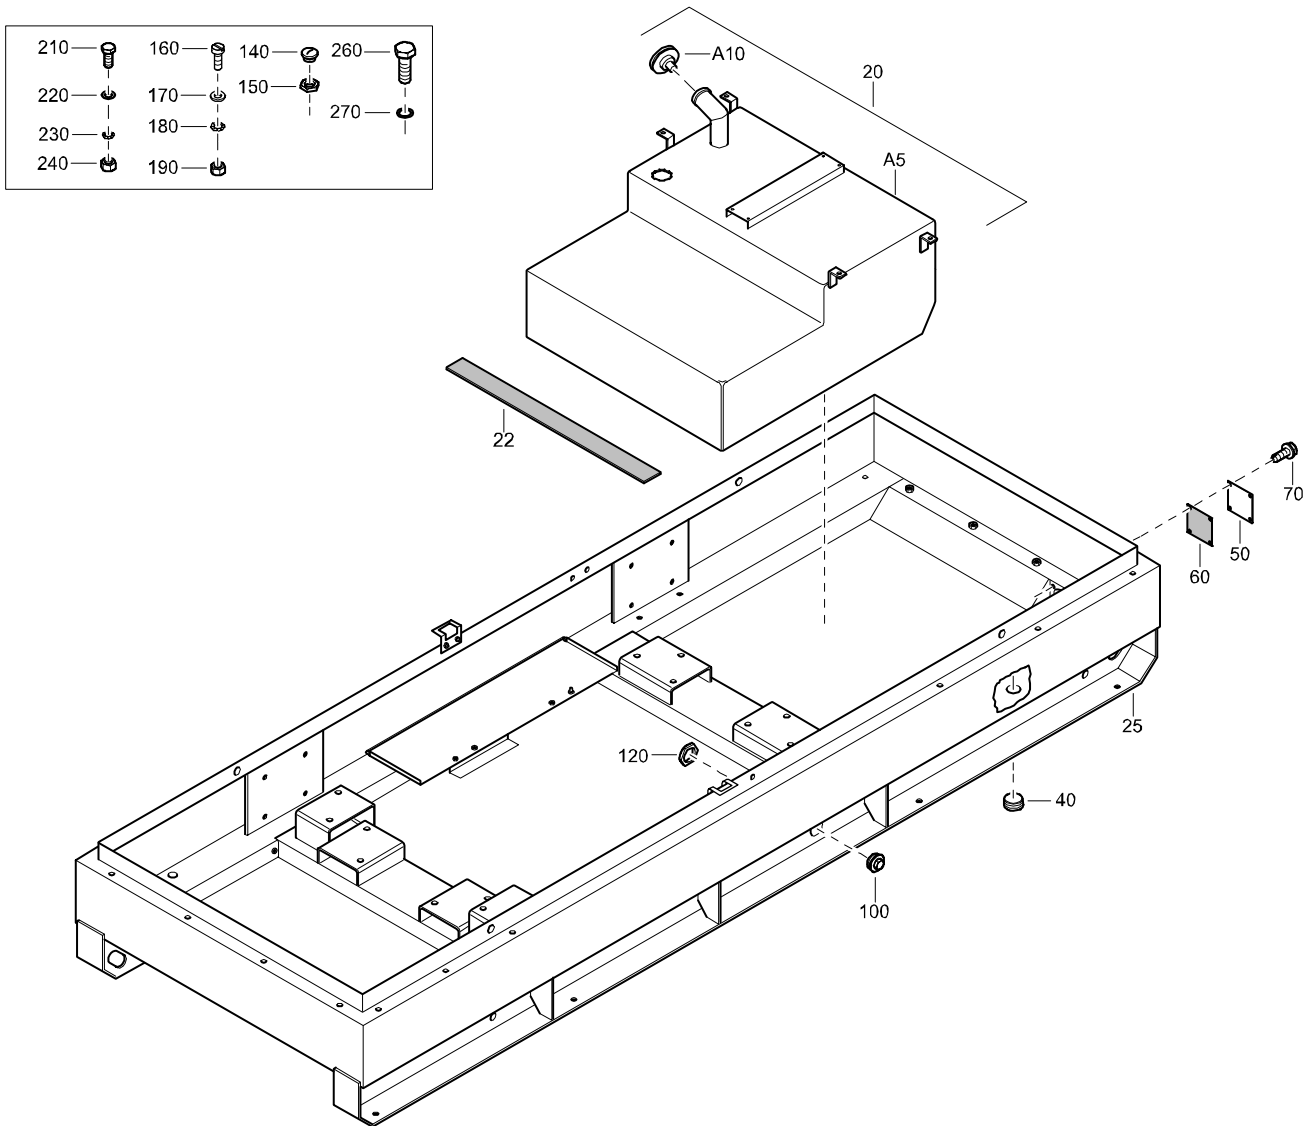

REF	PART NUMBER	DESIGNATION	QTY	REF	PART NUMBER	DESIGNATION	QTY
-	1615 9045 92	FRAME/FUELTANK	(From page 38)				
•20	1604 2105 80	FUELTANK ASS'Y	1				
••A5	1604 2105 01	FUEL TANK	1				
••A10	1615 6947 01	COVER	1				
•22	1619 5188 00	SEAL	AR				
•25	1615 9045 06	FRAME	1				
•40	0686 6132 00	PLUG	3				
•50	1604 3315 00	PLATE	1				
•60	1604 3316 00	SEAL	1				
•70	1619 2766 00	HEX. HEAD SCREW	4				
•100	0686 3716 29	HEXAGON PLUG	1				
•120	0623 2100 09	BACKNUT	1				
•140	1088 0524 02	PLUG	2				
•150	0697 9809 01	LOCK NUT	2				
•160	0160 6040 00	SLOTTED SCREW	2				
•170	0653 1003 00	FLAT GASKET	2				
•180	0333 3214 00	LOCK WASHER	2				
•190	0266 2106 00	HEXAGON NUT	2				
•210	0147 1322 03	HEX. HEAD SCREW	6				
•220	0653 1033 00	FLAT GASKET	6				
•230	0333 3227 00	LOCK WASHER	6				
•240	0266 2110 00	HEXAGON NUT	6				
•260	0147 1401 03	HEX. HEAD SCREW	2				
•270	0653 1059 00	FLAT GASKET	2				

STANDARD


CUBICLE

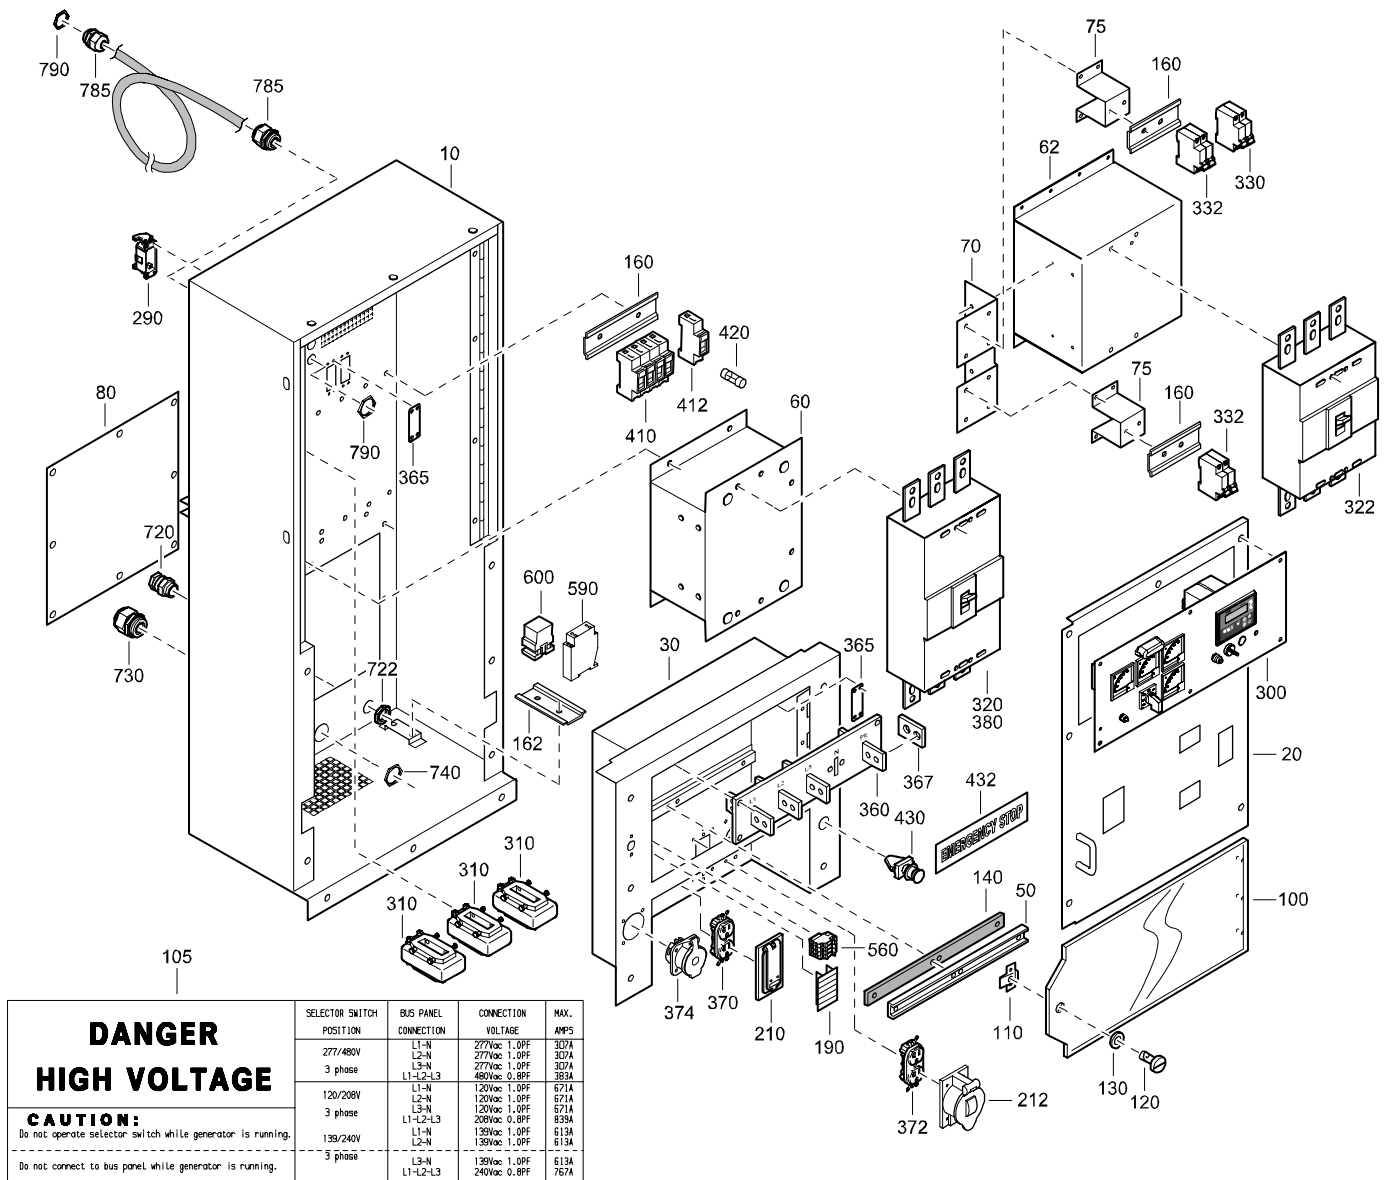

REF	PART NUMBER	DESIGNATION	QTY	REF	PART NUMBER	DESIGNATION	QTY
-	1900 1020 79	CUBICLE	(From page 40)	•322	1089 9474 26	CB 3P 315-630A	1
•10	1604 1296 03	CUBICLE	1	•330	1089 9472 21	CIRCUIT BREAKER	1
•20	1604 1921 00	C.B.PANEL	1	•332	1089 9472 25	CIRCUIT BREAKER	2
•30	1615 9316 04	T.B. PANEL	1	•360	1604 0983 81	TERMINAL BOARD	1
•50	1604 2010 00	CABLE CLAMP	1			(For details see page 61)	
•60	1604 1927 01	C.B.SUPPORT	1	•365	1604 1964 00	COVER PLATE	2
•62	1604 1922 00	C.B.SUPPORT	1	•367	1089 0651 05	TERMINAL	5
•70	1604 1923 00	SUPPORT	1	•370	1089 9412 02	RECEPTACLE	2
•75	1604 1917 00	SUPPORT	2	•372	1089 9412 01	RECEPTACLE	1
•80	1615 8110 01	SERVICE PLATE	1	•374	1089 9434 01	PLUG KIT	1
•100	1615 8109 01	DOOR	1	•380	1089 9474 41	SHUNT TRIP 24VDC	1
•105	1626 1064 00	LABEL	1	•410	1089 9356 11	FUSE HOLDER	1
•110	1615 6728 00	PLATE	1	•412	1089 9356 13	FUSE HOLDER	2
•120	1615 7166 00	STUD	1	•420	1089 9332 01	FUSE	5
•130	1615 6727 00	WASHER	1	•430	1089 9422 01	EMERGENCY STOP	1
•140	1604 2011 00	SEAL	1	•432	1079 9910 05	INFO LABEL	0
•160	0090 1400 02	RAIL	AR	•560	1088 0027 02	TERMINAL	4
•162	0090 1400 02	RAIL	AR	•590	1089 9384 01	AUXILIARY RELAY	2
•190	1088 0027 01	COVER PLATE	6	•600	1089 9400 08	CONTACTOR	1
•210	1089 9412 12	PROTECTION COVER	2	•720	1088 0256 16	CABLE GLAND	1
•212	1089 9412 11	PROTECTION COVER	1	•722	1088 0302 06	NUT	1
•290	1088 0029 50	HOUSING	1	•730	0698 5121 00	CABLE GLAND	1
•300	1900 1020 99	CONTROL PANEL	1	•740	0697 9807 00	NUT	1
		(For details see page 63)		•785	0698 5125 00	CABLE GLAND	18
•310	1089 9470 01	CURRENT TRANSFO	3	•790	0697 9807 00	NUT	18
•320	1089 9474 13	CB 3P 630-1250A	1				

STANDARD


TERMINAL BOARD

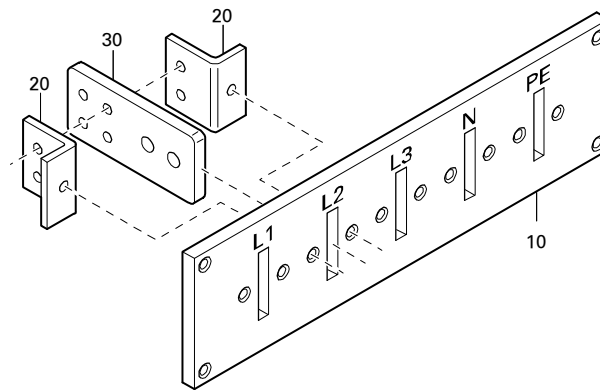

REF	PART NUMBER	DESIGNATION	QTY	REF	PART NUMBER	DESIGNATION	QTY
-	1604 0983 81	TERMINAL BOARD	(From page 60)				
•10	1604 0983 01	TERMINAL BOARD	1				
•20	1604 0981 00	BRACKET	10				
•30	1604 0982 01	STRIP	5				

STANDARD

FOAM ASSEMBLY

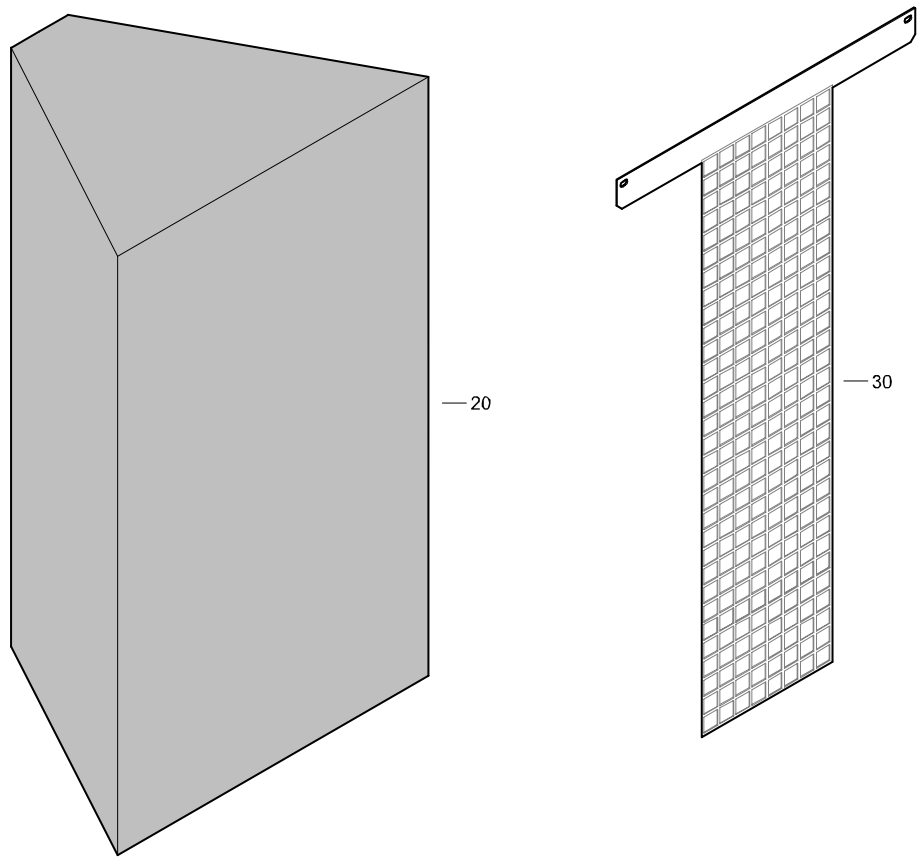


REF	PART NUMBER	DESIGNATION	QTY
-	1615 9670 80	BAFFLE/FOAM	(From page 55)
•20	1615 9670 01	SILENCING FOAM	2
•30	1615 9669 00	BAFFLE	1

REF	PART NUMBER	DESIGNATION	QTY
-----	-------------	-------------	-----

STANDARD

CONTROL PANEL

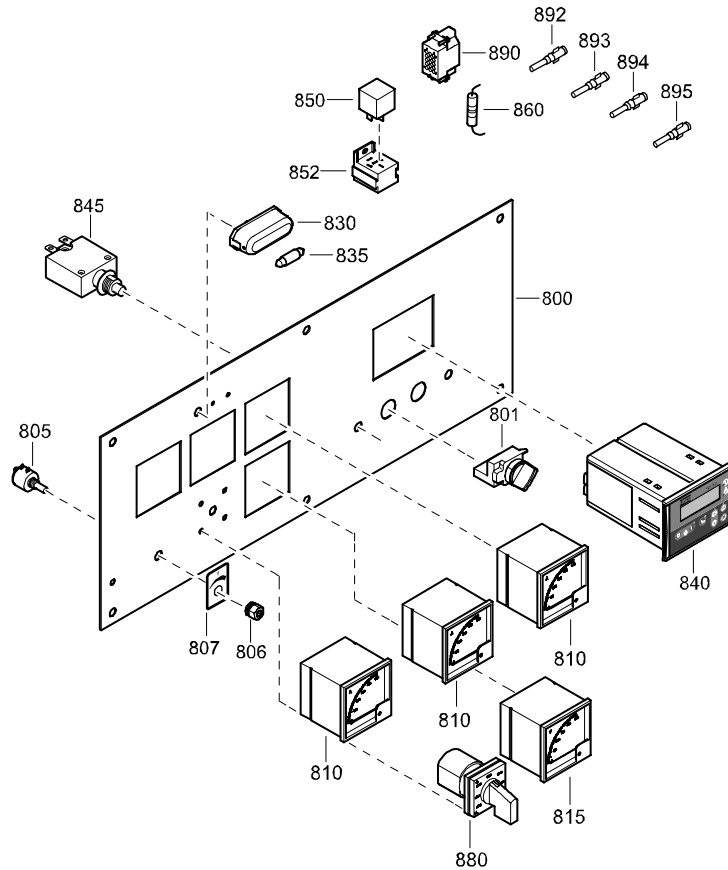

REF	PART NUMBER	DESIGNATION	QTY	REF	PART NUMBER	DESIGNATION	QTY
-	1900 1020 99	CONTROL PANEL	(From page 60)				
•800	1604 7249 00	PANEL	1				
•801	1089 0263 27	SELECTOR SWITCH	1				
•805	1089 9371 20	POTMETER	1				
•806	1089 9371 50	SPINDLE LOCK	1				
•807	1079 9909 20	LABEL	1				
•810	1089 9381 21	AMPERE METER	3				
•815	1089 9383 01	VOLTMETER	1				
•830	1089 9354 01	PANELLIGHT	1				
•835	1089 0374 01	LAMP	1				
•840	1604 9418 00	CONTROLLER	1				
•845	1089 9423 01	CIRCUIT BREAKER	1				
•850	1089 0341 08	RELAY	2				
•852	1089 0358 01	SOCKET	2				
•860	1089 0310 29	RESISTOR	1				
•880	1089 9082 22	VOLTAGE SWITCH	1				
•890	1088 0029 45	MALE INSERT	1				
•892	1088 0029 57	MALE CONTACT	2				
•893	1088 0029 61	MALE CONTACT	6				
•894	1088 0029 56	MALE CONTACT	3				
•895	1088 0029 55	MALE CONTACT	2				

