

GM 7.4

77762

77761

PRO
FAB


Adjust bracket back so
belts are running
parallel.

77761

Install new bracket
with heat shield.
(Use existing
manifold bolt.)

77762

GM 7.4

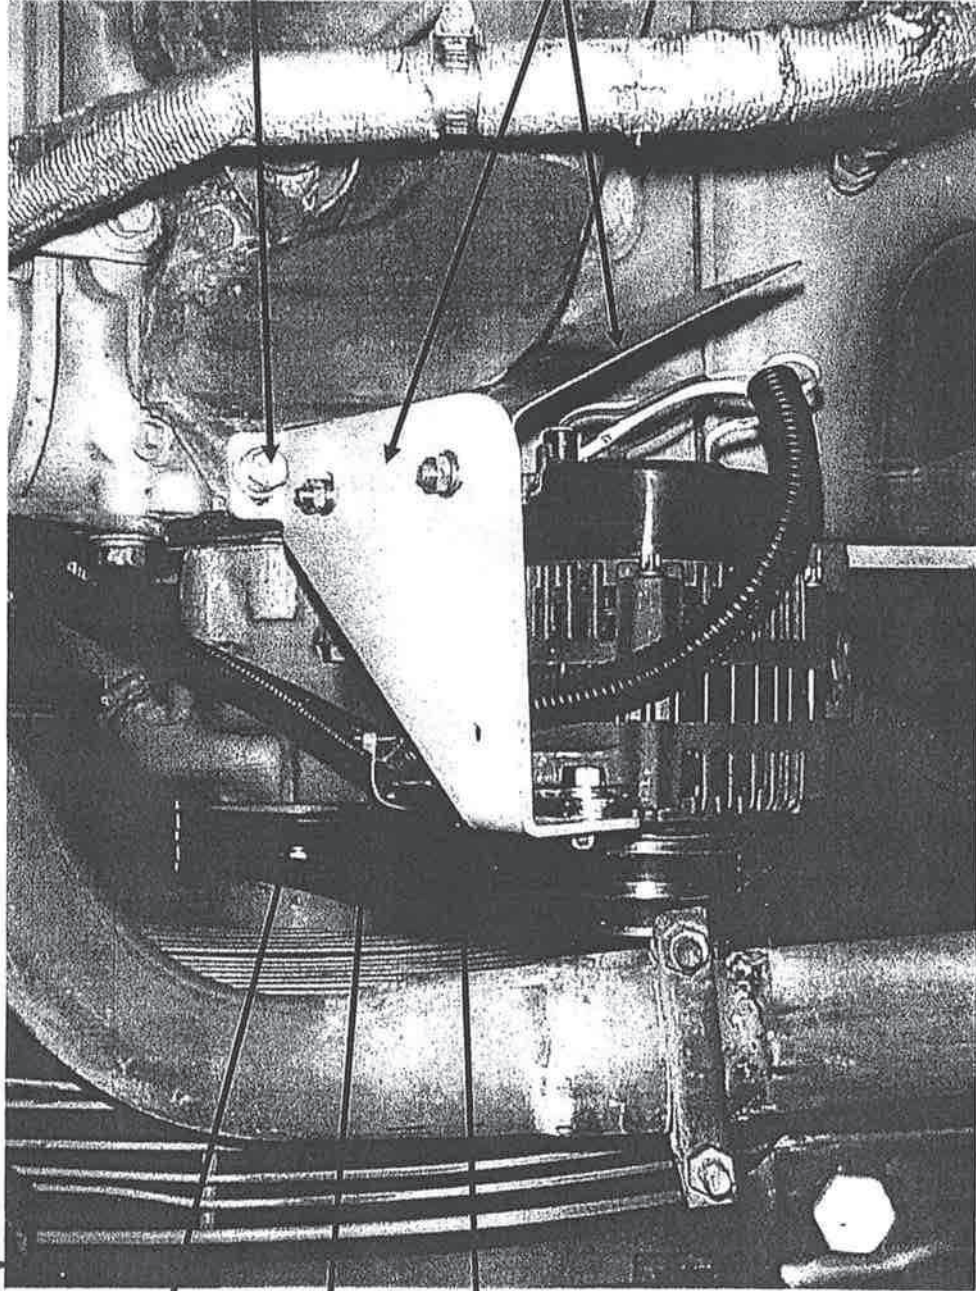

GM 7.4
TURBO
DODGE

CARQUEST

7430

77705

CARQUEST
#430

Remove existing
belt guard and
discard it.

Remove existing
belts and discard

Install and tighten
new shorter belts.