


Nissan Relay Solution March 2004

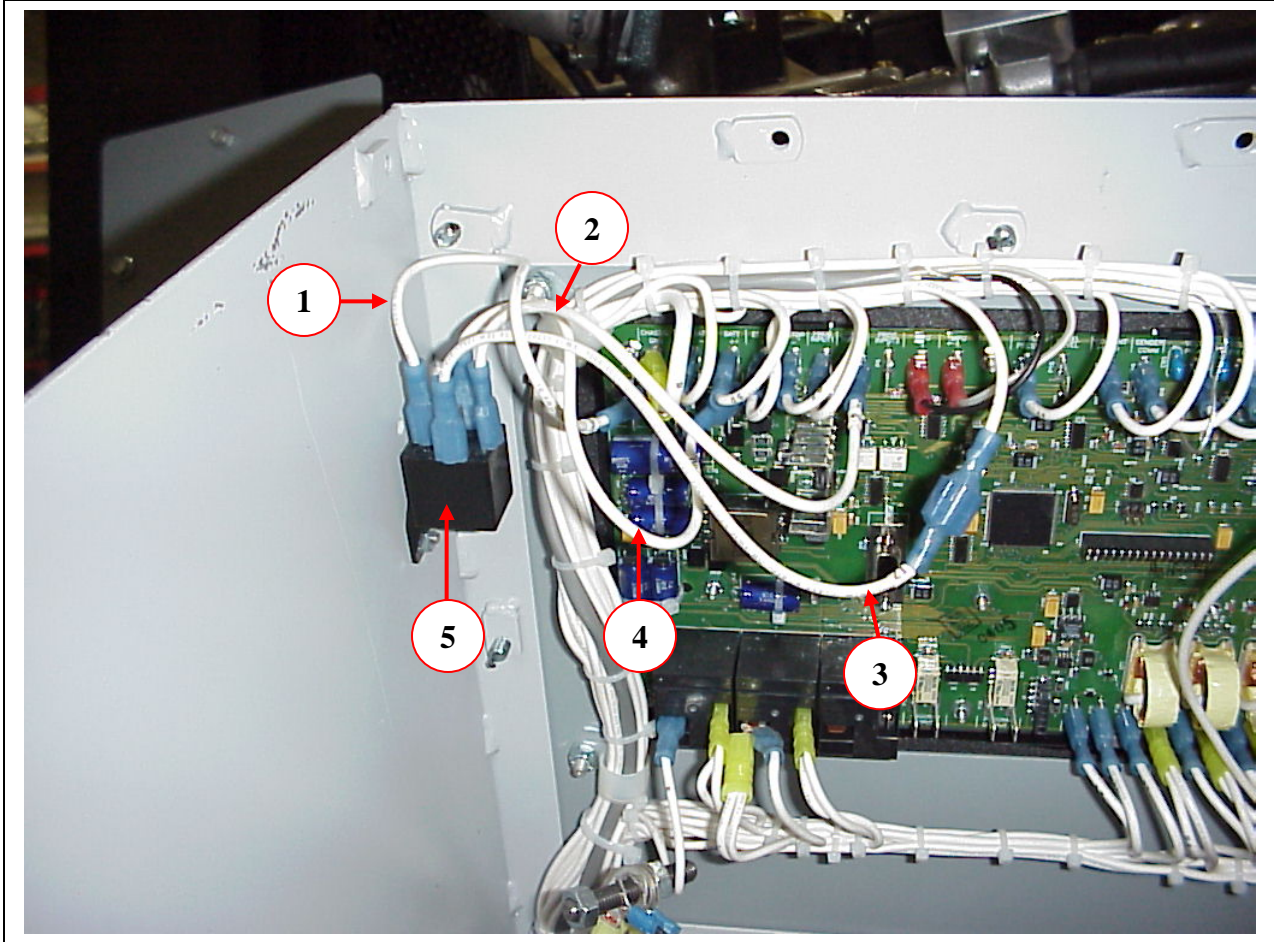

1. Add ground wire, use spade splitter provided.
2. Add wire #221.
3. Wire #21 is extended to relay.
4. Add positive wire (#50), use spade splitter provided.
5. Relay with mounting tab. Katolight P/N 78958.