



WKT-HD Wheel Kit

For Use On GA-3.6 HZ, GA-6HZR, and
GA-6HZ Portable Generators

P/N: 29593

Installation Instructions

The following instructions are intended to assist the user in the assembly of the WKT-HD Wheel Kit for use on MultiQuip portable generators. Please read the entire assembly instructions before assembling the wheel kit.

TOOLS:

- Ratchet Set with 7/16, 9/16, 3/8 inch socket
- Adjustable Wrench or 7/16, 9/16, 3/8 inch open end wrench

PARTS:

NO.	P/N	PART NAME	QTY.
1	1729	Pin, Roll 3/16 x 1-1/4	2
2	8158	Pin, Cotter 3/16 x 1-1/2	2
3	19850	Wheel, Gleason	2
4	29586	Axle, Generator	1
5	163878-005	U-Bolt 1/4-20 x 1 x 1-1/2	4
6	0948	Washer, Flat 1/4	20
7	10024	Nut, Nylock 1/4-20	14
8	5277	Screw 1/4-20 x 1-1/2	2
9	1623	Screw 10-24 x 3/4	4
10	2203	Washer, Flat #10	8
11	29595	Clamp, 1/2	2
12	1618	Nut, Nylock #10-24	4
13	29590	Frame, Left Side Handle	1
14	29591	Frame, Right Side Handle	1
15	29588	Handle Bar, Generator	2
16	20463	Grip, Handle Bar	2
17	29593	Instructions, Assembly	1
18	25438	Decal, MQ Logo	2

PROCEDURE:

1. Assemble the Generator Axle - Push the roll pin through the inner axle hole. Push the wheel on the axle and then insert the cotter pin through the outer axle hole. Bend the cotter pin to secure the wheel in place (Figure 1).

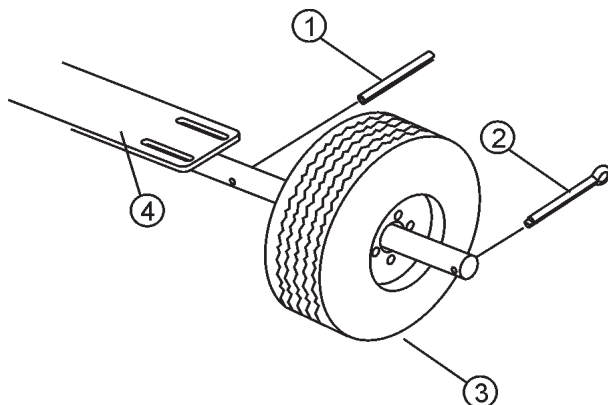


Figure 1. Generator Axle Assembly

2. Place the Generator Axle under the heaviest end of the generator. Insert the U-bolts over the pipe frame and through the axle. Place a washer and nut on the U-bolt ends and tighten until the axle is secured to the pipe frame (Figure 2).

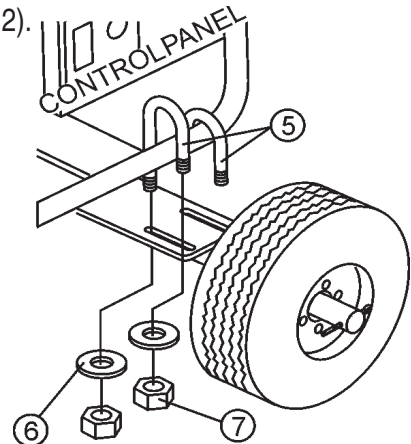


Figure 2. Securing the Generator Axle

3. Place the left side handle frame against the generator pipe frame. Insert a washer and bolt through the bolt holes at the top of the frame. Push the frame support bracket onto the bolts and place a washer and nut on the bolt. Tighten the nut until the handle frame is secured to the generator frame (Figure 3).

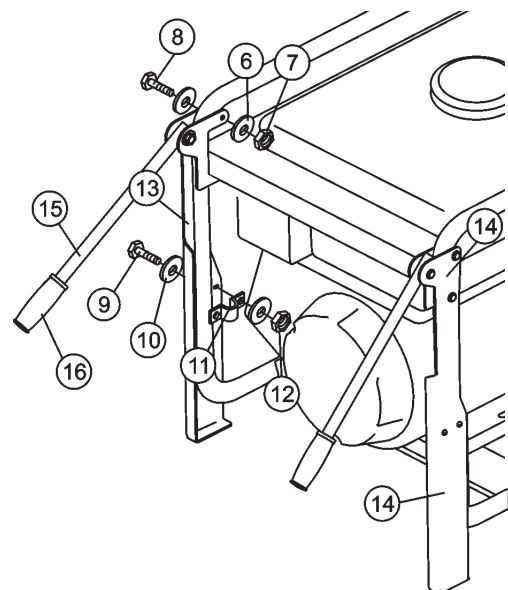


Figure 3. Handle Assembly



WKT-HD Wheel Kit

For Use On GA-3.6 HZ, GA-6HZR, and
GA-6HZ Portable Generators

P/N: 29593

4. Insert a washer and bolt through the bolt holes at the bottom of the frame. Place the clamp over the pipe frame and onto the bolts. Place a washer and nut on the bolt. Tighten the nut until the handle frame is secured to the generator frame (Figure 3).

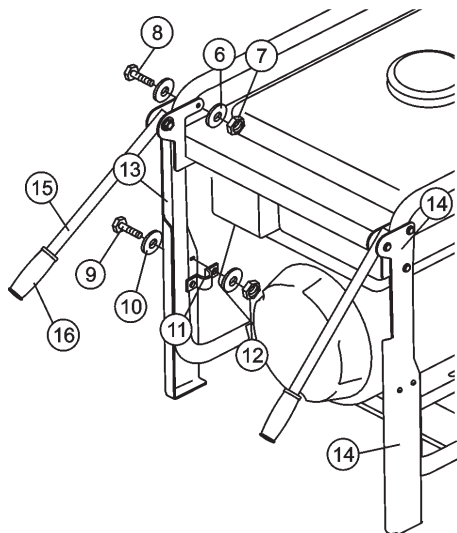


Figure 3 (continued). Handle Assembly

5. Place the end of the handle bar between the handle frame and support bracket. Insert a bolt and washer through the frame, handle bar and support bracket. Place a washer and nut on the end of the bolt and tighten the nut.
6. Repeat steps 3 through 5 for right side handle bar.

HERE'S HOW TO GET HELP:

Parts Department - 800-427-1244

Service Department - 800-421-1244

Technical Assistance - 800-478-1244

Warranty Department - 888-661-4279



MULTIQUIP INC.

POST OFFICE BOX 6254 • CARSON, CA 90749
310-537-3700 • 800-421-1244 • FAX: 310-537-3927
E-MAIL: mq@multiquip.com • www.multiquip.com

Atlanta • Boise • Dallas • Houston • Newark
Montreal, Canada • Manchester, UK
Rio De Janeiro, Brazil • Guadalajara, Mexico

© COPYRIGHT 2003, MULTIQUIP INC.