





# Operation and Maintenance Manual K38 and K50 Engine Series

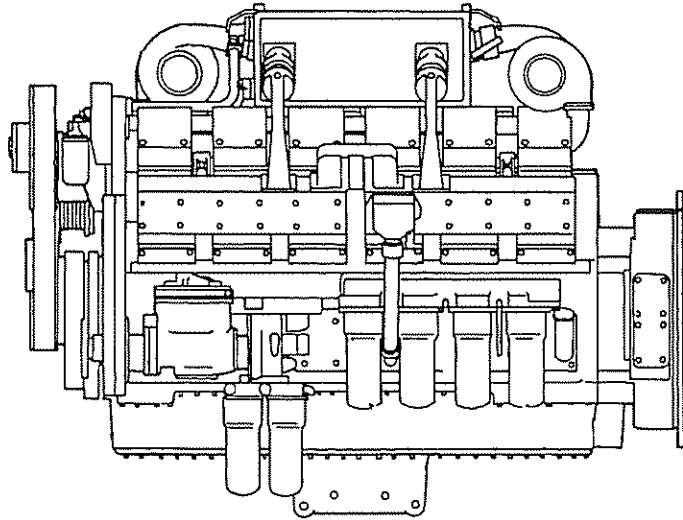

ew600gx

KTA38

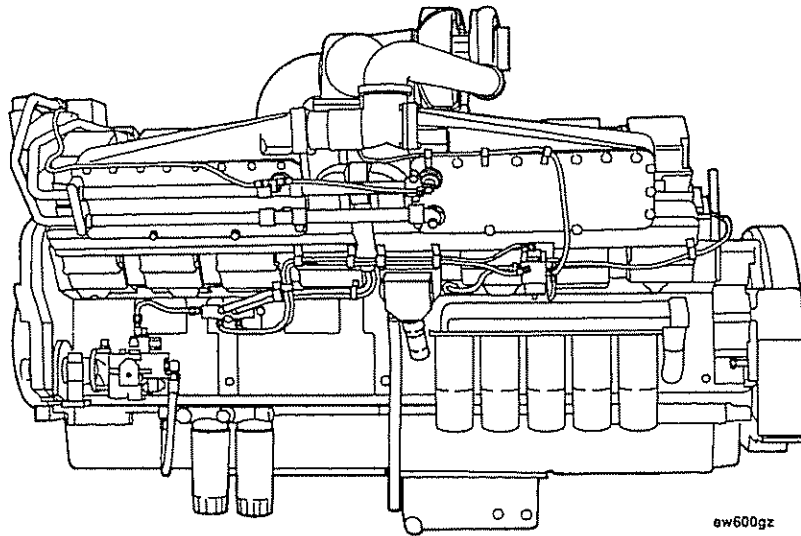

ew600gz

KTA50

## Foreword

This manual contains information for the correct operation and maintenance of your Cummins engine. It also includes important safety information, engine and systems specifications, troubleshooting guidelines, and listings of Cummins Authorized Repair Locations and component manufacturers.

Keep this manual with the equipment. If the equipment is traded or sold, give the manual to the new owner.





















The information, specifications, and recommended maintenance guidelines in this manual are based on information in effect at the time of printing. Cummins Engine Company, Inc. reserves the right to make changes at any time without obligation. If you find differences between your engine and the information in this manual, contact your local Cummins Authorized Repair Location.

The latest technology and the highest quality components were used to produce this engine. When replacement parts are needed, we recommend using only genuine Cummins or ReCon® exchange parts. These parts can be identified by the following trademarks:



**Note:** Warranty information is located in Section W. Make sure you are familiar with the warranty or warranties applicable to your engine.

# Table of Contents

	Section	
Introduction .....	i	
Engine Identification.....	E	
Operating Instructions.....	1	
Maintenance Guidelines .....	2	
Daily Maintenance Guidelines .....	3	
Weekly Maintenance Guidelines .....	4	
Maintenance Procedures Every 250 Hours or 6 Months .....	5	
Maintenance Procedures Every 1500 Hours or 1 Year .....	6	
Maintenance Procedures Every 6000 Hours or 2 Years .....	7	
Other Maintenance Procedures.....	8	
System Diagrams.....	D	
Troubleshooting.....	T	
Adjustment, Repair, and Replacement .....	A	
Specifications and Torque Values .....	V	
Service Assistance .....	S	
Component Manufacturers.....	C	
Warranty.....	W	
Additional Service Literature.....	L	
Index .....	X	
CAP Program .....	M	

# Important Reference Numbers

Fill in the part name and number in the blank spaces provided below. This will give you a reference whenever service or maintenance is required.

Engine Model \_\_\_\_\_

Engine Serial Number \_\_\_\_\_

Engine Specification Number (Control  
Parts List) \_\_\_\_\_

Fuel Pump Part Number \_\_\_\_\_

Filter Part Numbers:

• Air Cleaner Element \_\_\_\_\_

• Oil (Full-Flow) \_\_\_\_\_

• Oil (Bypass) \_\_\_\_\_

• Fuel \_\_\_\_\_

• Fuel Water Separator (Marine) \_\_\_\_\_

Belt Part Numbers \_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

Clutch or Marine Gear

• Model \_\_\_\_\_

• Serial Number \_\_\_\_\_

• Part Number \_\_\_\_\_

• Oil Type \_\_\_\_\_

Raw Water Pump

• Model \_\_\_\_\_

• Part Number \_\_\_\_\_

# Section i - Introduction

## Section Contents

	Page
About the Manual .....	i-2
Definition of Terms .....	i-9
General Safety Instructions .....	i-8
Important Safety Notice.....	i-8
How to Use the Manual .....	i-2
Illustrations.....	i-7
Symbols .....	i-3
To the Owner and Operator .....	i-2

## To the Owner and Operator

Preventative maintenance is the easiest and least expensive type of maintenance. Follow the maintenance schedule recommendations outlined in Maintenance Guidelines (Section 2).

Keep records of regularly scheduled maintenance.

Use the correct fuel, oil, and coolant in your engine as specified in Engine Specifications, Section V.

Cummins uses the latest technology and the highest quality components to produce its engines. Cummins recommends using only genuine Cummins parts and ReCon® exchange parts.

Personnel at Cummins authorized repair locations have been trained to provide expert service and parts support. If you have a problem that can **not** be resolved by a Cummins authorized repair location, follow the steps outlined in the Cummins Service Assistance section of this manual (Section S).

## About the Manual

This manual contains information needed to correctly operate and maintain your engine as recommended by Cummins Engine Company, Inc. Additional service literature (Shop Manual, Troubleshooting and Repair Manual, etc.) can be ordered by filling out and mailing the Literature Order Form located in Additional Service Literature, Section L.

This manual does **not** cover vehicle or equipment maintenance procedures. Consult the vehicle or equipment manufacturer for specific maintenance recommendations.

Both metric and U.S. customary values are listed in this manual. The metric value is listed first, followed by the U.S. customary in brackets.

Numerous illustrations and symbols are used to aid in understanding the meaning of the text. Refer to page i-3 for a complete listing of symbols and their definitions.

Each section is preceded by a Section Contents to aid in locating information more quickly.

## How to Use the Manual

This manual is organized according to the maintenance intervals that are to be performed. A table that states the required intervals and the checks to be made is located in Section 2. Locate the maintenance interval that you are performing and follow all the procedure steps given in that section. In addition, all the previous maintenance interval procedures **must** also be performed.

Keep a record of all the checks and inspections made. A record form for recording date, mileage/kilometer or hours, and what maintenance checks were performed is located in Section 2.

Refer to Section T for a troubleshooting guide to your engine. Follow the Troubleshooting Section Contents for locating and correcting engine problems.

Refer to Section V for specifications recommended by Cummins Engine Company, Inc., for your engine. Specifications and torque values for each engine system are given in that section.

## Symbols

The following symbols have been used in this manual to help communicate the intent of the instructions. When one of the symbols appears, it conveys the meaning defined below:



**WARNING** - Serious personal injury or extensive property damage can result if the warning instructions are **not** followed.



**CAUTION** - Minor personal injury can result or a part, an assembly, or the engine can be damaged if the caution instructions are **not** followed.



Indicates a **REMOVAL** or **DISASSEMBLY** step.



Indicates an **INSTALLATION** or **ASSEMBLY** step.



**INSPECTION** is required.



**CLEAN** the part or assembly.



**PERFORM** a mechanical or time **MEASUREMENT**.



**LUBRICATE** the part or assembly.



Indicates that a **WRENCH** or **TOOL SIZE** will be given.



**TIGHTEN** to a specific torque.



**PERFORM** an electrical **MEASUREMENT**.



Refer to another location in this manual or another publication for additional information.



The component weighs 23 kg [50 lb] or more. To avoid personal injury, use a hoist or get assistance to lift the component.

## Simbolos

Los símbolos siguientes son usados en este manual para clarificar el proceso de las instrucciones. Cuando aparece uno de estos símbolos, su significado se especifica en la parte inferior.



**ADVERTENCIA** - Serios daños personales o daño a la propiedad puede resultar si las instrucciones de Advertencia **no** se consideran.



**PRECAUCION** - Daños menores pueden resultar, o de piezas del conjunto o el motor puede averiarse si las instrucciones de Precaución **no** se siguen.



Indica un paso de **REMOCION** o **DESMONTAJE**.



Indica un paso de **INSTALACION** o **MONTAJE**.



Se requiere **INSPECCION**.



**LIMPIESE** la pieza o el montaje.



**EJECUTESE** una **MEDICION** mecánica o del tiempo.



**LUBRIQUESE** la pieza o el montaje.



Indica que se dará una **LLAVE DE TUERCAS** o el **TAMAÑO DE HERRAMIENTA**.



**APRIETESE** hasta un par torsor específico.



**EJECUTESE** una **MEDICION** eléctrica.



Para información adicional refiérase a otro emplazamiento de este manual o a otra publicación anterior.



El componente pesa 23 kg [50 lb] o mas. Para evitar dano corporal empleen una cabria u obtengan ayuda para elevar el componente.

## Symbole

In diesem Handbuch werden die folgenden Symbole verwendet, die wesentliche Funktionen hervorheben. Die Symbole haben folgende Bedeutung:



**WARNUNG** - Wird die Warnung **nicht** beachtet, dann besteht erhöhte Unfall- und Beschädigungsgefahr.



**VORSICHT** - Werden die Vorsichtsmassnahmen **nicht** beachtet, dann besteht Unfall- und Beschädigungsgefahr.



**AUSBAU** bzw. **ZERLEGEN**.



**EINBAU** bzw. **ZUSAMMENBAU**.



**INSPEKTION** erforderlich.



Teil oder Baugruppe **REINIGEN**.



**DIMENSION** - oder **ZEITMESSUNG**.



Teil oder Baugruppe **ÖLEN**.



**WERKZEUGGRÖSSE** wird angegeben.



**ANZUG** auf vorgeschriebenes Drehmoment erforderlich.



Elektrische **MESSUNG DURCHFÜHREN**.



Weitere Informationen an anderer Stelle bzw. in anderen Handbüchern.



Das teil weigt 23 kg [50 lb] oder mehr. Zur vermeidung von koerperverletzung winde benutzen oder hilfe beim heben des teils in anspruch nehmen.

## Symboles

Les symboles suivants sont utilisés dans ce manuel pour aider à communiquer le but des instructions. Quand l'un de ces symboles apparaît, il évoque le sens défini ci-dessous:



**AVERTISSEMENT** - De graves lésions corporelles ou des dommages matériels considérables peuvent survenir si les instructions données sous les rubriques "Avertissement" **ne sont pas** suivies.



**ATTENTION** - De petites lésions corporelles peuvent survenir, ou bien une pièce, un ensemble ou le moteur peuvent être endommagés si les instructions données sous les rubriques "Attention" **ne sont pas** suivies.



Indique une opération de **DEPOSE**.



Indique une opération de **MONTAGE**.



**L'INSPECTION** est nécessaire.



**NETTOYER** la pièce ou l'ensemble.



**EFFECTUER** une **MESURE** mécanique ou de temps.



**GRAISSER** la pièce ou l'ensemble.



Indique qu'une **DIMENSION DE CLE** ou **D'OUTIL** sera donnée.



**SERRER** à un couple spécifique.



**EFFECTUER** une **MESURE** électrique.




Se reporter à un autre endroit dans ce manuel ou à une autre publication pour obtenir des informations plus complètes.




Le composant pèse 23 kg [50 lb] ou davantage. Pour éviter toute blessure, employer un appareil de levage ou demander de l'aide pour le soulever.

## Illustrations

The illustrations used in the "Repair Sections" of this manual are intended to give an example of a problem, and to show what to look for and where the problem can be found. Some of the illustrations are "generic" and might **not** look exactly like the engine or parts used in your application. The illustrations can contain symbols to indicate an action required, and an acceptable or **not** acceptable condition.

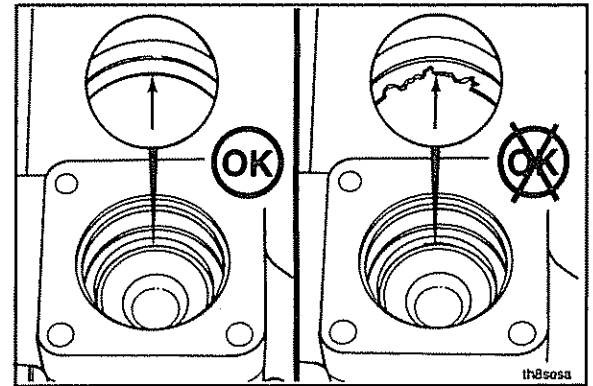

The illustrations are intended to show repair or replacement procedures. The illustration can differ from your application, but the procedure given will be the same.

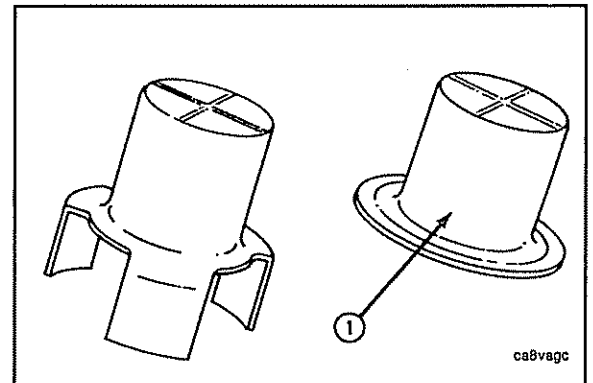

## General Safety Instructions

### Important Safety Notice



### WARNING



Read and understand all of the safety precautions and warnings before performing any repair. This list contains the general safety precautions that **must** be followed to provide personal safety. Special safety precautions are included in the procedures when they apply.

- Make sure the work area surrounding the product is safe. Be aware of hazardous conditions that can exist.
- **Always** wear protective glasses and protective shoes when working.
- Do **not** wear loose-fitting or torn clothing. Remove all jewelry when working.
- Disconnect the battery and discharge any capacitors before beginning any repair work. Disconnect the air starting motor if equipped to prevent accidental engine starting. Put a "Do **Not** Operate" tag in the operator's compartment or on the controls.
- Use **ONLY** the proper engine barring techniques for manually rotating the engine. Do **not** attempt to rotate the engine by pulling or prying on the fan. This practice can cause serious personal injury, property damage, or damage to the fan blade(s) causing premature fan failure.
- If an engine has been operating and the coolant is hot, allow the engine to cool before you slowly loosen the filler cap and relieve the pressure from the cooling system.
- Do **not** work on anything that is supported **ONLY** by lifting jacks or a hoist. **Always** use blocks or proper stands to support the product before performing any service work.
- Relieve all pressure in the air, oil, and the cooling systems before any lines, fittings, or related items are removed or disconnected. Be alert for possible pressure when disconnecting any device from a system that utilizes pressure. Do **not** check for pressure leaks with your hand. High pressure oil or fuel can cause personal injury.
- To prevent suffocation and frostbite, wear protective clothing and **ONLY** disconnect liquid refrigerant (freon) lines in a well ventilated area.
- To avoid personal injury, use a hoist or get assistance when lifting components that weigh 23 kg [50 lb] or more. Make sure all lifting devices such as chains, hooks, or slings are in good condition and are of the correct capacity. Make sure hooks are positioned correctly. **Always** use a spreader bar when necessary. The lifting hooks **must not** be side-loaded.
- Corrosion inhibitor contains alkali. Do **not** get the substance in your eyes. Avoid prolonged or repeated contact with skin. Do **not** swallow internally. In case of contact, immediately wash skin with soap and water. In case of contact, immediately flood eyes with large amounts of water for a minimum of 15 minutes. **IMMEDIATELY CALL A PHYSICIAN. KEEP OUT OF REACH OF CHILDREN.**
- Naptha and Methyl Ethyl Ketone (MEK) are flammable materials and **must** be used with caution. Follow the manufacturer's instructions to provide complete safety when using these materials. **KEEP OUT OF REACH OF CHILDREN.**
- To avoid burns, be alert for hot parts on products that have just been turned OFF, and hot fluids in lines, tubes, and compartments.
- **Always** use tools that are in good condition. Make sure you understand how to use them before performing any service work. Use **ONLY** genuine Cummins or Cummins Recon® replacement parts.
- **Always** use the same fastener part number (or equivalent) when replacing fasteners. Do **not** use a fastener of lesser quality if replacements are necessary.

## Definition of Terms

<b>AFC</b>	Air Fuel Control	<b>kg</b>	Kilograms
<b>API</b>	American Petroleum Institute	<b>km</b>	Kilometers
<b>ASA</b>	Air Signal Attenuator	<b>km/l</b>	Kilometers per Liter
<b>ASTM</b>	American Society of Testing and Materials	<b>kPa</b>	Kilopascal
<b>A.C.</b>	Alternating Current	<b>l</b>	Liter
<b>C</b>	Celsius	<b>lb</b>	Pounds
<b>CCA</b>	Cold Cranking Amps	<b>lbf</b>	Pounds Force
<b>CFM</b>	Cubic Feet Per Minute	<b>LTA</b>	Low Temperature Aftercooling
<b>CARB</b>	California Air Resources Board	<b>m</b>	Meter
<b>C.C.</b>	Cubic Centimeter	<b>mm</b>	Millimeter
<b>C.I.</b>	Cubic Inch	<b>MPa</b>	Megapascal
<b>C.I.D.</b>	Cubic Inch Displacement	<b>MPH</b>	Miles Per Hour
<b>Cm</b>	Centimeter	<b>MPQ</b>	Miles Per Quart
<b>CPL</b>	Control Parts List	<b>N</b>	Newton
<b>cSt</b>	Centistokes	<b>N•m</b>	Newton-meter
<b>DCA</b>	Diesel Coolant Additive	<b>NPTF</b>	National Pipe Thread Fine
<b>D.C.</b>	Direct Current	<b>OD</b>	Outside Diameter
<b>E.C.S.</b>	Emission Control System	<b>OEM</b>	Original Equipment Manufacturer
<b>EPA</b>	Environmental Protection Agency	<b>ppm</b>	Parts Per Million
<b>E.S.N.</b>	Engine Serial Number	<b>psi</b>	Pounds Per Square Inch
<b>F</b>	Fahrenheit	<b>PTD</b>	PT (type D)® (Pressure Timed (type D) Injector)
<b>ft-lb</b>	Foot Pound	<b>PTG</b>	Pressure Time Governing
<b>GVW</b>	Gross Vehicle Weight	<b>RPM</b>	Revolutions Per Minute
<b>Hg</b>	Mercury	<b>S.A.E.</b>	Society of Automotive Engineers
<b>HP</b>	Horsepower	<b>ST</b>	Service Tools
<b>HVT</b>	Hydraulic Variable Timing	<b>STC</b>	Step Timing Control
<b>H<sub>2</sub>O</b>	Water	<b>TDC</b>	Top Dead Center
<b>ID</b>	Inside Diameter	<b>V</b>	Volts
<b>In</b>	Inch	<b>VS</b>	Valve Set
<b>in-lb</b>	Inch Pound		



## Section E - Engine and Component Identification

### Section Contents



	Page
<b>Engine Diagram - KT38</b> .....	E-9
Left Bank View .....	E-9
Rear and Front View .....	E-11
Right Bank View .....	E-8
Top View .....	E-10
<b>Engine Diagram - KTA38 Center Mount Aftercooler (K50 Similar)</b> .....	E-15
Rear and Front View .....	E-15
Top View .....	E-14
<b>Engine Diagram - KTA38 Center Mount Aftercooler (KTA50 Similar)</b> .....	E-13
Left Bank View .....	E-13
Right Bank View .....	E-12
<b>Engine Diagram - KTA38 Outboard Aftercoolers (KTA50 Similar)</b> .....	E-21
Left Bank View .....	E-21
Rear and Front View .....	E-23
Right Bank View .....	E-20
Top View .....	E-22
<b>Engine Diagram - KTTA38 (KTTA50 Similar)</b> .....	E-17
Left Bank View .....	E-17
Rear and Front View .....	E-19
Right Bank View .....	E-16
Top View .....	E-18
<b>Engine Identification</b> .....	E-2
Cummins Engine Nomenclature .....	E-2
Engine Dataplate .....	E-2
Fuel Pump Dataplate .....	E-2
<b>Engine Weight</b> .....	E-7
<b>General Specifications</b> .....	E-3
Air Induction System .....	E-5
Cooling System .....	E-5
Electrical System .....	E-6
Exhaust System .....	E-6
Fuel System .....	E-6
Lubricating Oil System .....	E-5

## Engine Identification

### Cummins Engine Nomenclature

The model name provides the following data:

K T T A 38 or 50 -    (  )

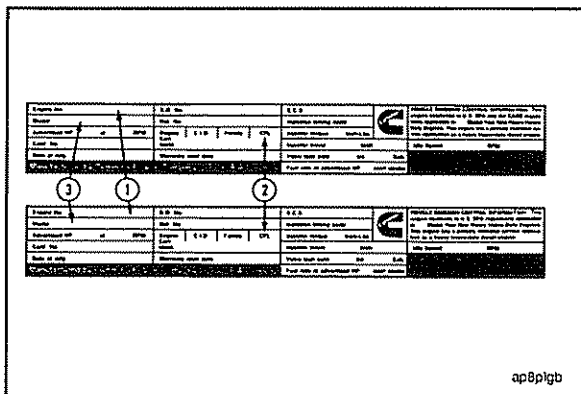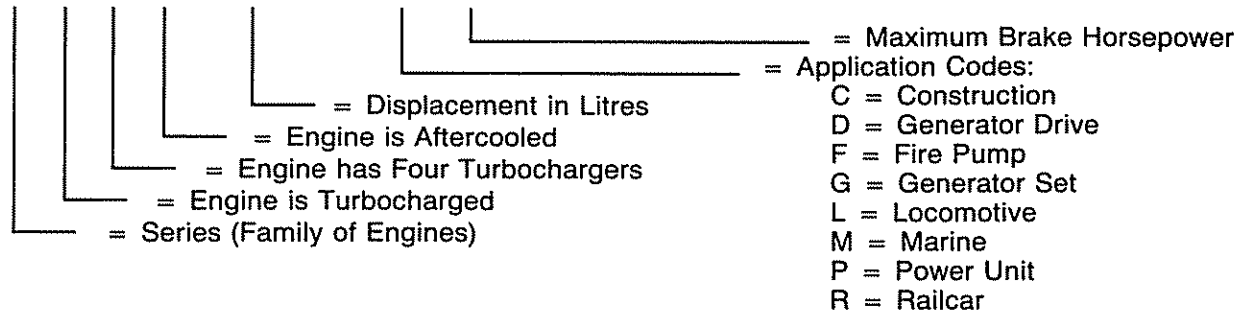


### Engine Dataplate

The engine dataplate shows specific information about your engine. The engine serial number (E.S.N.) (1), Control Parts List (CPL) (2), Model (3), and Horsepower and RPM rating provide information for ordering parts and service needs.

**NOTE:** The engine dataplate **must not** be changed unless approved by Cummins Engine Company, Inc.

The engine dataplate for the older K38 and K50 engines is located on the rear, right bank side of the engine. The engine dataplate on the present K38 and K50 engines is located on the left bank side of the front gear cover. Refer to Engine Diagrams in this section.

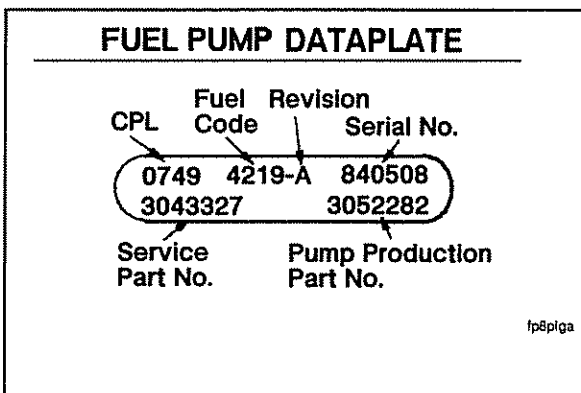

### Fuel Pump Dataplate

The fuel pump dataplate is located on the top of the fuel pump. It provides information for fuel pump calibration.

## General Specifications

Metric [U.S. Customary]

### Valve and Injector Settings:

Intake Valve Adjustment .....	0.36 mm [0.014 in]
Exhaust Valve Adjustment .....	0.69 mm [0.027 in]
PTD Non-Top Stop Injector Travel Adjustment.....	7.82 mm [0.308 in]
HVT Non-Top Stop Injector Travel Adjustment.....	10.234 mm [0.403 in]
STC Top Stop Injector Adjustment (in engine).....	0.6 to 0.7 N•m [5 to 6 in-lb]
Premium K STC Injector Adjustment (in engine).....	0.6 to 0.7 N•m [5 to 6 in-lb]

### Specifications - K38 General Engine

#### Aspiration:

KT	=	One Stage Turbocharged
KTA	=	One Stage Turbocharged and Aftercooled
KTТА	=	Two Stage Turbocharged and Aftercooled

Bore and Stroke: 159 mm x 159 mm [6.25 in x 6.25 in]

Compression Ratio:	KTТА-GS/GC	14.5:1
	KTТА	13.5:1
	KTA-P(1350)	13.5:1
	KTA-G3	13.9:1
	KTA	14.5:1 or 15.5:1 or 13.8:1
	KT	15.5:1


Displacement: 38 Liters [2300 cu in]

Firing Order: 1R-6L-5R-2L-3R-4L-6R-1L-2R-5L-4R-3L

Type: 4 Cycle, 60 Degree Vee, 12 Cylinder


Weight: Refer to the Engine Weight in this section

Crankshaft Rotation  
(Viewed from the  
front of the engine): Clockwise

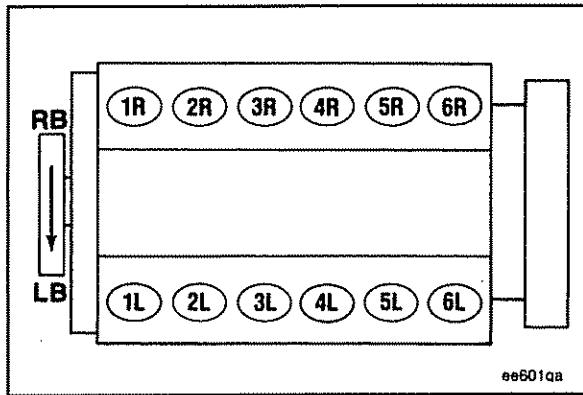

**Cylinder Numbering Sequence:**

**RB** = Right Bank of Cylinders  
**LB** = Left Bank of Cylinders

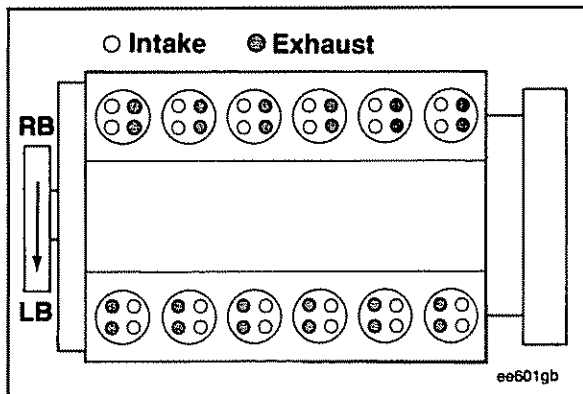

**Intake and Exhaust Valve locations.**

**Specifications - K50 General Engine**

Aspiration:           KTA       = One Stage Turbocharged and Aftercooled  
                          KTTA      = Two Stage Turbocharged and Aftercooled

Bore and Stroke:               159 mm x 159 mm [6.25 in x 6.25 in]

Compression Ratio:           KTTA               13.5:1 or 13.8:1 or 13.9:1  
                                      KTA                13.8:1 or 13.9:1 or 14.5:1 or 15.5:1

Displacement:               50 Liters [3067 cu in]

Firing Order (original standard): 1R-1L-3R-3L-7R-7L-5R-5L-8R-8L-6R-6L-2R-2L-4R-4L

**Note:** Some KTTA50 engines manufactured after September, 1986, and KTA50-G3 and G4, will have a different firing order. These engines have decals on the rocker lever covers that stipulate the REVISED FIRING ORDER. They also have REVISED FIRING ORDER on the engine Dataplate.

Revised Firing Order:           1R-1L-3R-3L-2R-2L-5R-4L-8R-8L-6R-6L-7R-7L-4R-5L


Type:                       4 Cycle, 60 Degree Vee, 16 Cylinder

Weight:                   Refer to the Engine Weight in this section.


Crankshaft Rotation  
(Viewed from the front  
of the engine):               Clockwise

Cylinder Numbering Sequence:

RB = Right Bank of Cylinders  
LB = Left Bank of Cylinders

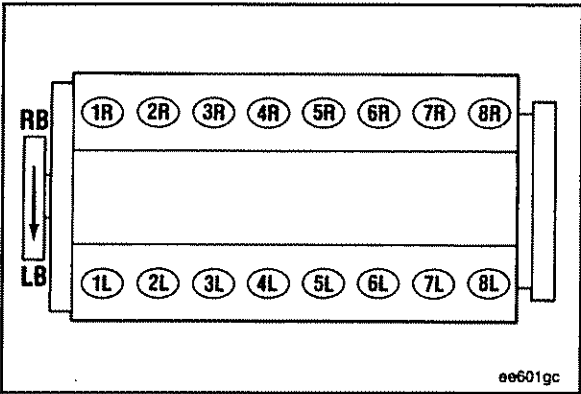

Intake and Exhaust Valve locations.

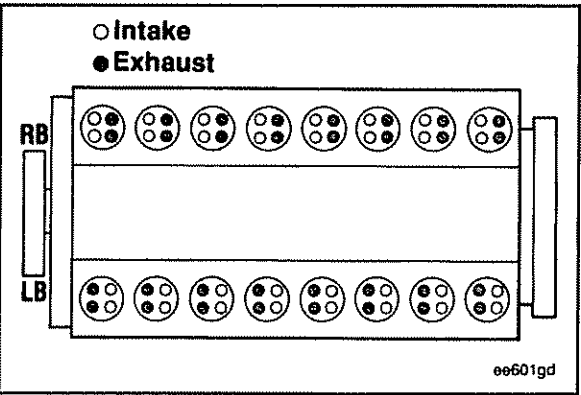

Air Induction System

Maximum Allowable Intake Restriction:

- With Clean Filter Element .....380 mm H<sub>2</sub>O [15 in H<sub>2</sub>O]
- With Dirty Filter Element .....635 mm H<sub>2</sub>O [25 in H<sub>2</sub>O]

Lubricating Oil System

Oil Pressure, Main Oil Rifle (15W oil at 107°C [225°F]):

- Maximum at Rated RPM: 483 kPa [70 psi]
- Minimum at Rated RPM: 310 kPa [45 psi]
- Minimum at Idle RPM: 138 kPa [20 psi]

Oil Temperature - Maximum .....120°C [250°F]

Oil Pan Capacity .....Refer to Section V

Cooling System

Coolant Capacity (Engine ONLY)	KT38	104 Liters [110 Quarts]
Standard Thermostat Modulating Range		80°C to 90°C [175°F to 195°F]
LTA Modulating Thermostat		74°C to 86°C [165°F to 187°F]
Coolant Pressure Cap - Minimum		48 kPa [7 psi]
Coolant Temperature - Minimum Top Tank		70°C [160°F]
- Maximum Top Tank		95°C [203°F]

## Exhaust System

Back Pressure - Maximum (at rated speed and load) .....75 mm Hg [3 in Hg]

Exhaust Pipe Size (Normally Acceptable Inside Diameter)

- KT38 .....127 mm [5 in]
- KTA38 .....127 mm [5 in]
- KTTA38 .....152 mm [6 in]
- KTA50 .....152 mm [6 in]
- KTTA50 .....203 mm [8 in]

## Fuel System

**NOTE:** For performance and fuel rate values, refer to the engine data sheet, or the fuel pump code for the particular model involved.

Maximum Allowable Restriction to Pump (at rated power):

- With Clean Filter .....100 mm Hg [4 in Hg]
- With Dirty Filter .....200 mm Hg [8 in Hg]

Maximum Allowable Return Line Restriction .....63 mm Hg [2.5 in Hg]

Maximum Allowable Return Line Restriction

with Check Valves and/or Overhead Tanks .....165 mm Hg [6.5 in Hg]

## Electrical System

Minimum Recommended Battery Capacity

Engine Model	Temperature Range	System Voltage	Cold Cranking Ampere	Ampere Hours	Reserve Capacity
K38	-18 to 0°C [0 to 32°F]	24	1800	400	640
		32	1560	340	550
K38	0°C [32°F]	24	1280	260	480
		32	1040	240	390
K50	All	24	1800	400	640
		32	1560	340	550

**NOTE:** The number of plates within a given battery size determines reserve capacity. Reserve capacity is the length of time sustained cranking can occur.

**NOTE:** CCA ratings are based on two 12 volt batteries in series.

Batteries (Specific Gravity)

Battery State of Charge	Specific Gravity @ 27°C [80°F]
100%	1.260-1.280
75%	1.230-1.250
50%	1.200-1.220
25%	1.170-1.190
Discharged	1.110-1.130

ea800ka


## Engine Weight

Model and Package	Dry Weight	
	kg	[lbs]
KTTA38 with Aluminum Oil Pan Adapter	4,200	[9,260]
KTTA50 with Aluminum Oil Pan Adapter	5,200	[11,465]
KTA38-M with Heat Exchanger, Front PTO, and Base Rails	5,143	[11,430]
KTTA50-M with Heat Exchanger, Front PTO, and Base Rail	6,186	[13,640]
KTA38-M on Base Rails with Marine Gear and Front PTO	7,018	[15,475]
KTTA38-P on Base Rails with Radiator and Heavy Duty Air Cleaner	5,753	[12,685]
KTTA50-P on Base Rails with Radiator and Heavy Duty Air Cleaner	6,753	[14,890]
KTTA38-GS/GC on Base Rails with Generator	7,864	[17,340]
KTTA50-GS/GC on Base Rails with Generator	9,016	[19,880]
Typical KTA38 Electric Drive Truck Module	7,978	[17,600]
Typical KTA50 Electric Drive Truck Module	9,066	[20,000]
Lift Capacity, Engine Lifting Fixture, Part No. 3375109	5,443	[12,000]

## Engine Diagram - KT38

### Right Bank View

- |                              |                                  |
|------------------------------|----------------------------------|
| 1. Housing, Air Transfer     | 11. Adapter, Oil Pan             |
| 2. Turbocharger              | 12. Plate, Oil Pan Adapter Cover |
| 3. Connection, Air Crossover | 13. Pan, Oil                     |
| 4. Cover, Rocker Lever       | 14. Connection, Water Inlet      |
| 5. Bracket, Lifting          | 15. Pump, Water                  |
| 6. Connection, Air Intake    | 16. Drive, Water Pump            |
| 7. Manifold, Intake          | 17. Tube, Water Bypass           |
| 8. Cover, Cam Follower       | 18. Pulley, Fan Belt Idler       |
| 9. Housing, Flywheel         | 19. Breather, Crankcase          |
| 10. Cover, Hand Hole         | 20. Idler Assembly, Fan Belt     |
|                              | 21. Housing, Thermostat          |
|                              | 22. Connection, Water Outlet     |

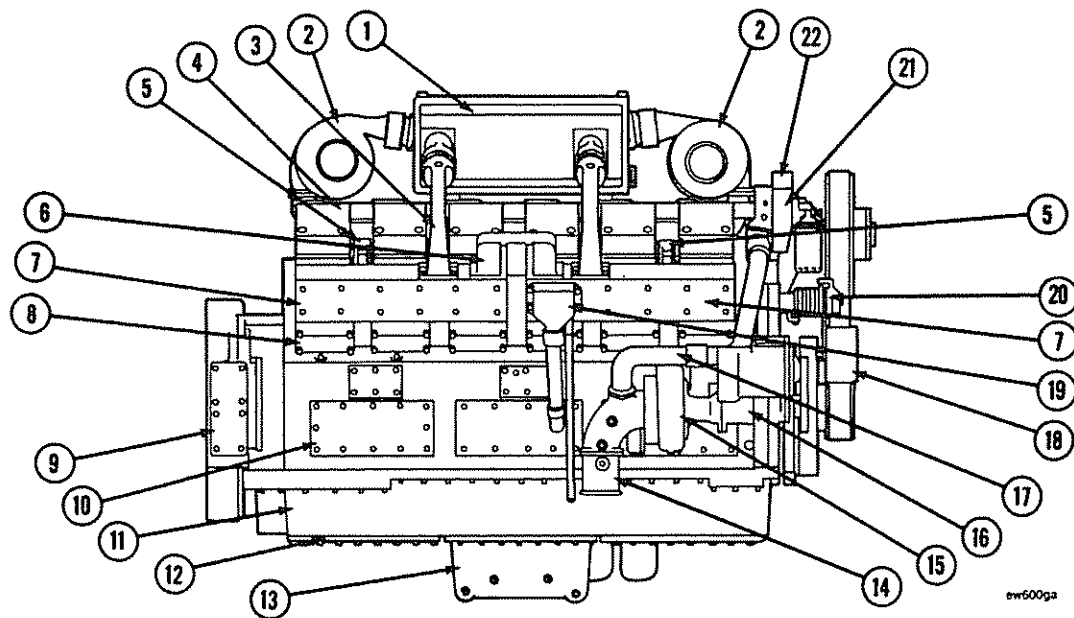


ew600ga

## Engine Diagram - KT38

### Left Bank View

- |                                |   |
|--------------------------------|---|
| 1. Turbocharger                | 13. Filter, Full-Flow Lubricating Oil (4 shown) |
| 2. Support, Thermostat Housing | 14. Breather, Crankcase                         |
| 3. Housing, Thermostat         | 15. Gauge, Oil Level                            |
| 4. Support, Fan Hub            | 16. Tube, Oil Fill                              |
| 5. Cover, Front Gear           | 17. Head, Lubricating Oil Filter                |
| 6. Housing, Front Gear         | 18. Housing, Flywheel                           |
| 7. Dataplate, Engine           | 19. Cover, Cam Follower                         |
| 8. Drive, Air Compressor       | 20. Manifold, Intake                            |
| 9. Compressor, Air             | 21. Bracket, Lifting                            |
| 10. Pump, Fuel                 | 22. Manifold, Exhaust                           |
| 11. Head, Fuel Filter          | 23. Housing, Air Transfer                       |
| 12. Filter, Fuel (2 shown)     |   |

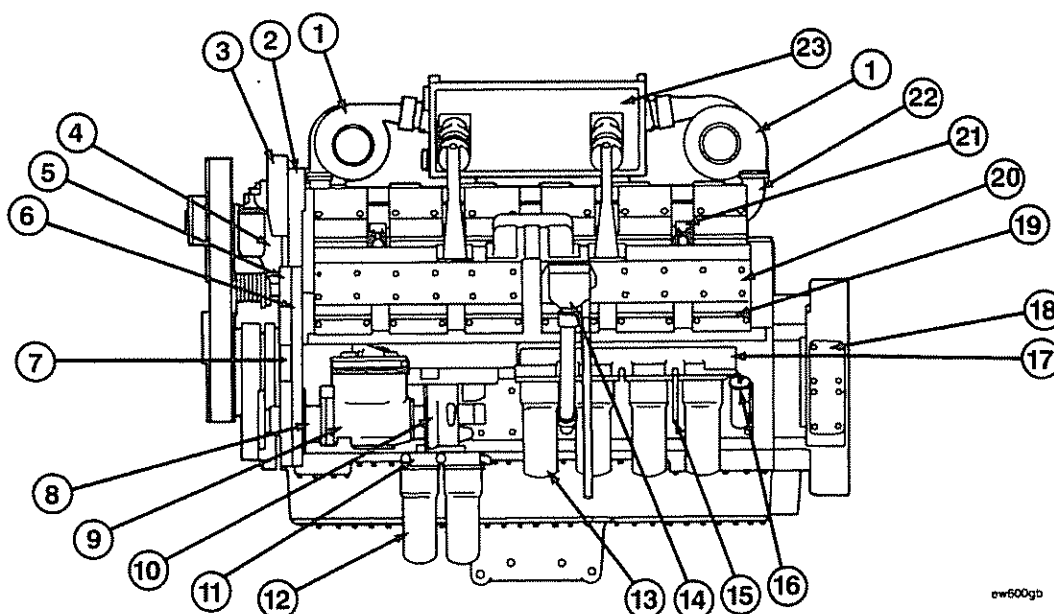


ew500gb

## Engine Diagram - KT38

### Top View


- |                                   |                                  |
|-----------------------------------|----------------------------------|
| 1. Alternator                     | 11. Cover, Rocker Lever          |
| 2. Outlet, Right Bank Water       | 12. Housing, Air Transfer        |
| 3. Housing, Right Bank Thermostat | 13. Manifold, Intake             |
| 4. Bracket, Fan Hub               | 14. Tube, Water Transfer         |
| 5. Shaft, Fan Hub                 | 15. Manifold, Right Bank Exhaust |
| 6. Support, Thermostat Housing    | 16. Housing, Rear Gear           |
| 7. Housing, Left Bank Thermostat  | 17. Housing, Flywheel            |
| 8. Outlet, Left Bank Water        | 18. Housing, Rocker Lever        |
| 9. Turbocharger                   | 19. Crossover, Air               |
| 10. Manifold, Left Bank Exhaust   |                                  |

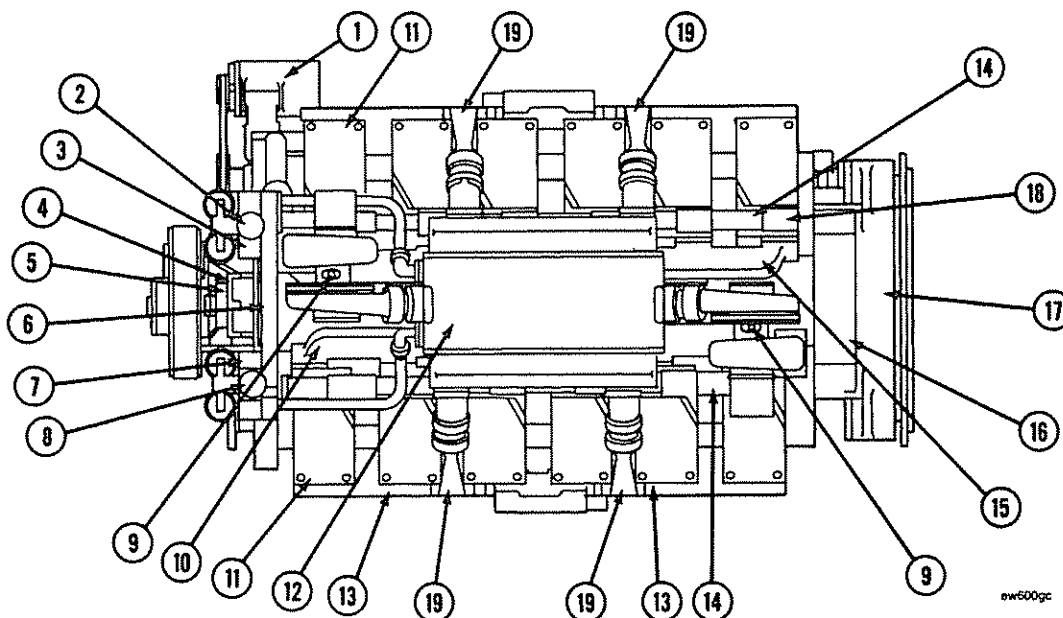

## Engine Diagram - KT38

### Rear and Front View


- |                                  |                                    |
|----------------------------------|------------------------------------|
| 1. Housing, Air Transfer         | 17. Pulley, Alternator Drive       |
| 2. Turbocharger                  | 18. Pulley, Fan Idler              |
| 3. Crossover, Air                | 19. Pulley, Crankshaft             |
| 4. Passage, Water Outlet         | 20. Damper, Vibration              |
| 5. Cover, Rocker Lever           | 21. Direction of Rotation          |
| 6. Housing, Rocker Lever         | 22. Pulley, Accessory Drive        |
| 7. Head, Cylinder                | 23. Cover, Front Gear              |
| 8. Manifold, Fuel                | 24. Pulley, Fan                    |
| 9. Block, Cylinder               | 25. Hub, Fan                       |
| 10. Cooler, Oil                  | 26. Head, Water Filter             |
| 11. Housing, Flywheel            | 27. Housing, Left Bank Thermostat  |
| 12. Flywheel                     | 28. Outlet, Left Bank Water        |
| 13. Adapter, Oil Pan             | 29. Outlet, Right Bank Water       |
| 14. Pan, Oil                     | 30. Housing, Right Bank Thermostat |
| 15. Manifold, Right Bank Exhaust | 31. Filter, Water (4 required)     |
| 16. Manifold, Left Bank Exhaust  |                                    |

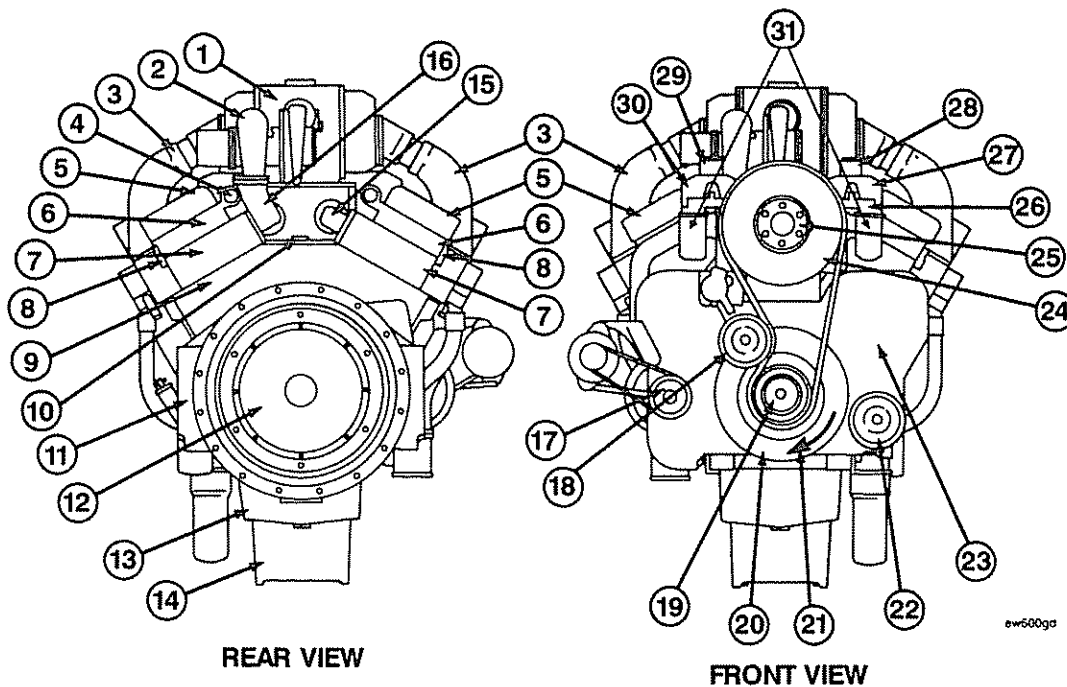

## Engine Diagram - KTA38 Center Mount Aftercooler (KTA50 Similar)

### Right Bank View

- |                              |                                    |
|------------------------------|------------------------------------|
| 1. Assembly, Aftercooler     | 13. Pan, Oil                       |
| 2. Turbocharger              | 14. Connection, Water Inlet        |
| 3. Connection, Air Crossover | 15. Pump, Water                    |
| 4. Cover, Rocker Lever       | 16. Drive, Water Pump              |
| 5. Bracket, Lifting          | 17. Tube, Water Bypass             |
| 6. Connection, Air Intake    | 18. Pulley, Fan Belt Idler         |
| 7. Manifold, Intake          | 19. Breather, Crankcase            |
| 8. Cover, Cam Follower       | 20. Assembly, Fan Belt Idler       |
| 9. Housing, Flywheel         | 21. Housing, Thermostat            |
| 10. Cover, Hand Hole         | 22. Connection, Water Outlet       |
| 11. Adapter, Oil Pan         | 23. Tube, Aftercooler Water Inlet  |
| 12. Cover, Oil Pan Adapter   | 24. Tube, Aftercooler Water Outlet |

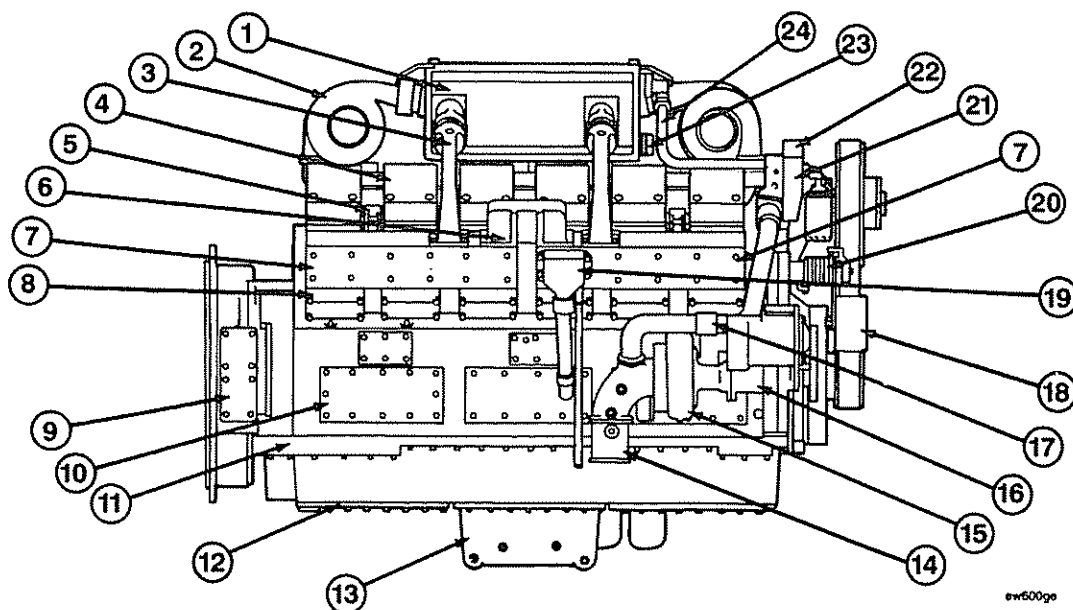


ew500ge

## Engine Diagram - KTA38 Center Mount Aftercooler (KTA50 Similar)

### Left Bank View

- |                                |   |
|--------------------------------|---|
| 1. Turbocharger                | 14. Filter, Fuel (2 shown)                      |
| 2. Outlet, Aftercooler Water   | 15. Filter, Full-Flow Lubricating Oil (4 shown) |
| 3. Inlet, Aftercooler Water    | 16. Breather, Crankcase                         |
| 4. Support, Thermostat Housing | 17. Gauge, Oil Level                            |
| 5. Housing, Thermostat         | 18. Tube, Oil Fill                              |
| 6. Support, Fan Hub            | 19. Head, Lubricating Oil Filter                |
| 7. Cover, Front Gear           | 20. Housing, Flywheel                           |
| 8. Housing, Rear Gear          | 21. Cover, Cam Follower                         |
| 9. Dataplate, Engine           | 22. Manifold, Intake                            |
| 10. Drive, Air Compressor      | 23. Bracket, Lifting                            |
| 11. Compressor, Air            | 24. Manifold, Exhaust                           |
| 12. Pump, Fuel                 | 25. Assembly, Aftercooler                       |
| 13. Head, Fuel Filter          |   |

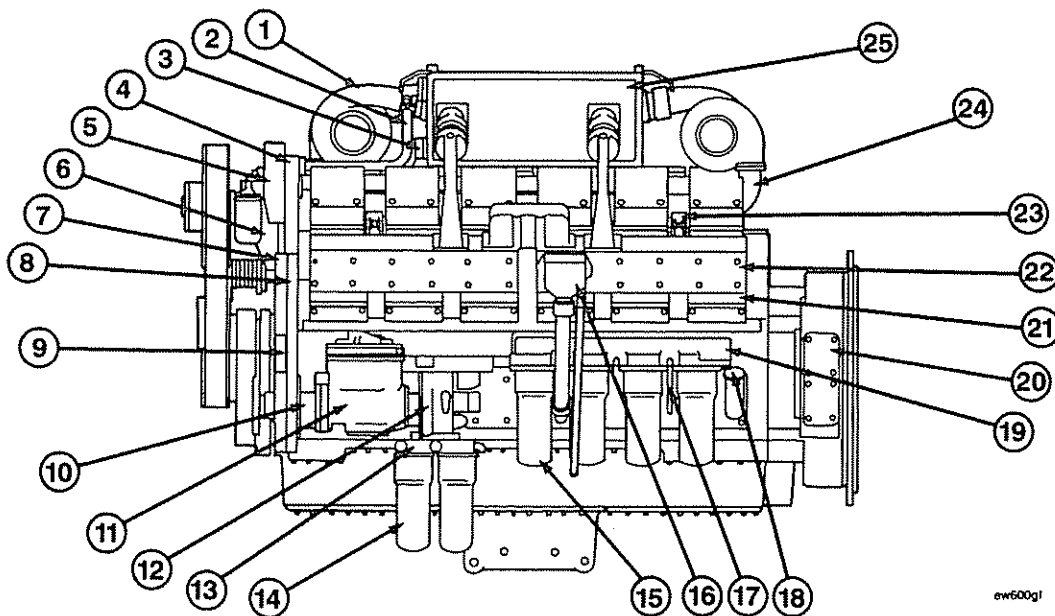


ew600g1

## Engine Diagram - KTA38 Center Mount Aftercooler (K50 Similar)

### Top View


- |                                   |                                  |
|-----------------------------------|----------------------------------|
| 1. Assembly, Aftercooler          | 12. Manifold, Left Bank Exhaust  |
| 2. Tube, Aftercooler Water Outlet | 13. Cover, Rocker Lever          |
| 3. Alternator                     | 14. Manifold, Intake             |
| 4. Outlet, Right Bank Water       | 15. Tube, Water                  |
| 5. Housing, Right Bank Thermostat | 16. Manifold, Right Bank Exhaust |
| 6. Support, Fan Hub               | 17. Plate, Oil Cooler            |
| 7. Shaft, Fan Hub                 | 18. Housing, Rear Gear           |
| 8. Support, Thermostat Housing    | 19. Housing, Flywheel            |
| 9. Housing, Left Bank Thermostat  | 20. Housing, Rocker Lever        |
| 10. Outlet, Left Bank Water       | 21. Crossover, Air               |
| 11. Turbocharger                  | 22. Connection, Air Intake       |

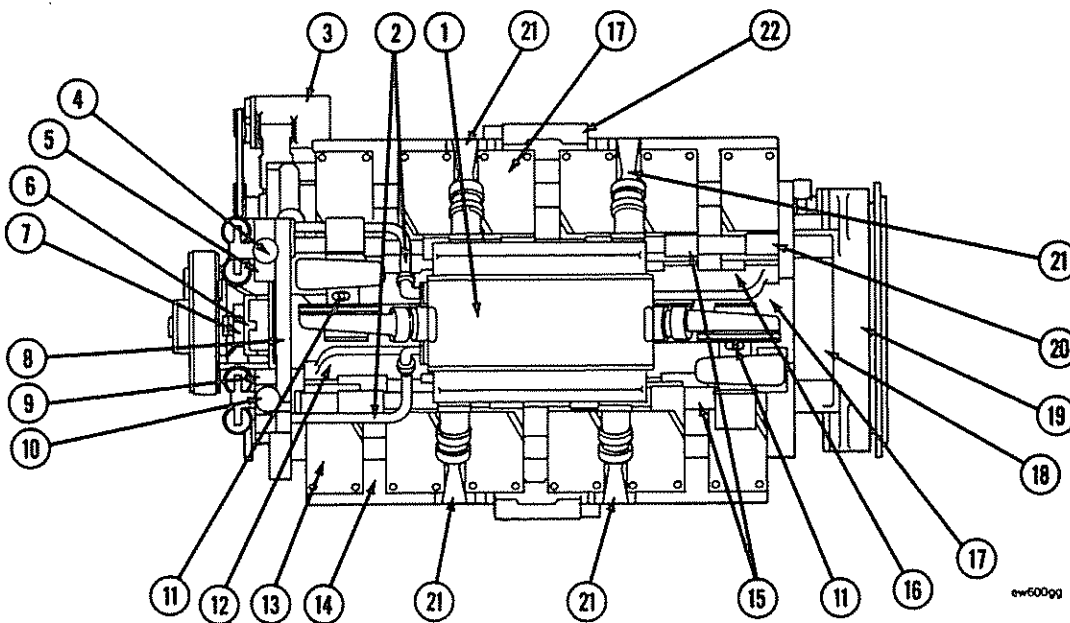

## Engine Diagram - KTA38 Center Mount Aftercooler (K50 Similar)

### Rear and Front View


- |                                  |                                    |
|----------------------------------|------------------------------------|
| 1. Assembly, Aftercooler         | 18. Pulley, Alternator Drive       |
| 2. Turbocharger                  | 19. Pulley, Fan Idler              |
| 3. Tube, Aftercooler Water Inlet | 20. Pulley, Crankshaft             |
| 4. Plate, Oil Cooler             | 21. Damper, Vibration              |
| 5. Crossover, Air                | 22. Direction of Rotation          |
| 6. Passage, Water Outlet         | 23. Pulley, Accessory Drive        |
| 7. Cover, Rocker Lever           | 24. Cover, Front Gear              |
| 8. Housing, Rocker Lever         | 25. Pulley, Fan                    |
| 9. Manifold, Fuel                | 26. Hub, Fan                       |
| 10. Head, Cylinder               | 27. Head, Water Filter             |
| 11. Block, Cylinder              | 28. Housing, Left Bank Thermostat  |
| 12. Housing, Flywheel            | 29. Outlet, Left Bank Water        |
| 13. Flexplate                    | 30. Outlet, Aftercooler Water      |
| 14. Adapter, Oil Pan             | 31. Outlet, Right Bank Water       |
| 15. Pan, Oil                     | 32. Housing, Right Bank Thermostat |
| 16. Manifold, Left Bank Exhaust  | 33. Filter, Water (4 required)     |
| 17. Manifold, Right Bank Exhaust |                                    |

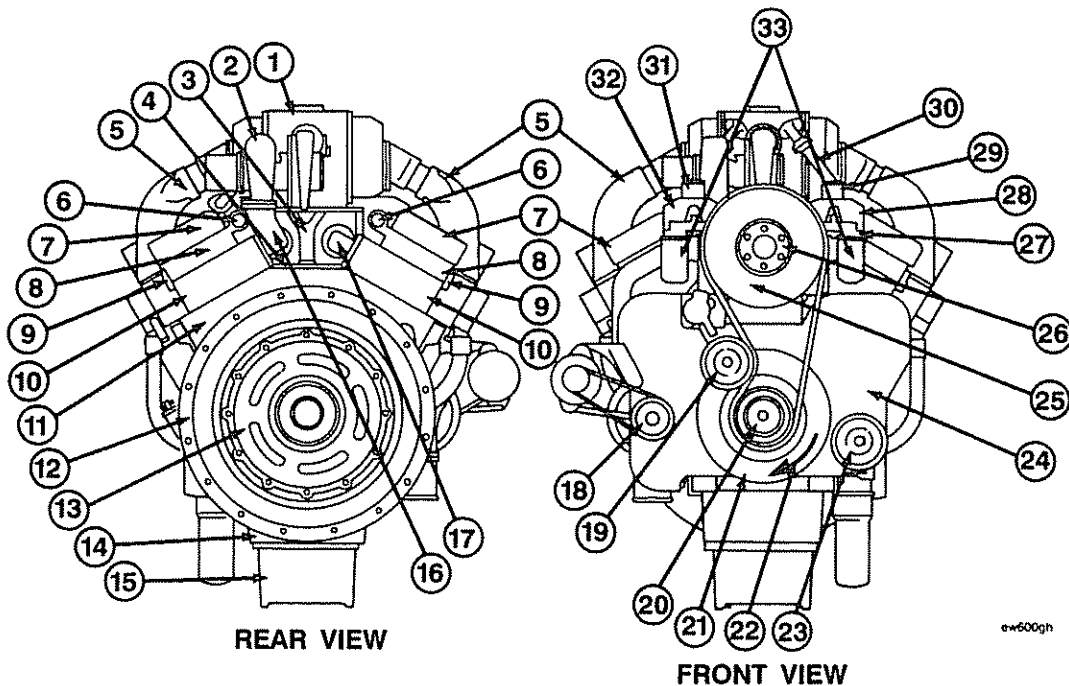

## Engine Diagram - KTTA38 (KTTA50 Similar)

### Right Bank View


- |                                   |                                   |
|-----------------------------------|-----------------------------------|
| 1. Turbocharger, High Stage       | 13. Adapter, Oil Pan              |
| 2. Turbocharger, Low Stage        | 14. Plate, Oil Pan Cover          |
| 3. Connection, Air Crossover      | 15. Pan, Oil                      |
| 4. Pipe, Exhaust Outlet           | 16. Connection, Water Inlet       |
| 5. Support, Turbocharger          | 17. Breather, Crankcase           |
| 6. Cover, Rocker Lever            | 18. Pump, Water                   |
| 7. Tube, Aftercooler Water Outlet | 19. Tube, Water Bypass            |
| 8. Assembly, Aftercooler          | 20. Drive, Water Pump             |
| 9. Tube, Aftercooler Water Inlet  | 21. Pulley, Fan Belt Idler        |
| 10. Cover, Cam Follower           | 22. Assembly, Fan Belt Idler Arm  |
| 11. Housing, Flywheel             | 23. Housng, Right Bank Thermostat |
| 12. Cover, Hand Hole              | 24. Outlet, Right Bank Water      |

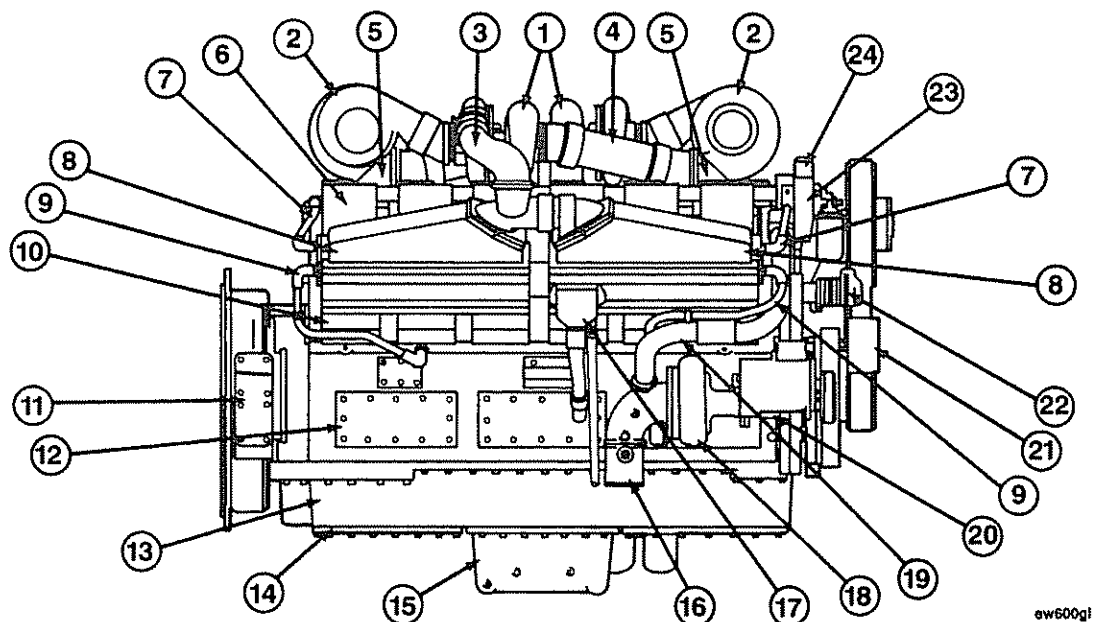

## Engine Diagram - KTTA38 (KTTA50 Similar)

### Left Bank View

- |                                   |   |
|-----------------------------------|---|
| 1. Turbocharger, High Stage       | 15. Drive, Air Compressor                       |
| 2. Turbocharger, Low Stage        | 16. Compressor, Air                             |
| 3. Connection, Air Crossover      | 17. Cover, Front Gear                           |
| 4. Pipe, Exhaust Outlet           | 18. Pump, Fuel                                  |
| 5. Support, Turbocharger          | 19. Head, Fuel Filter                           |
| 6. Outlet, Left Bank Water        | 20. Filter, Fuel (2 shown)                      |
| 7. Support, Thermostat Housing    | 21. Adapter, Oil Pan                            |
| 8. Housing, Left Bank Thermostat  | 22. Filter, Full-Flow Lubricating Oil (4 shown) |
| 9. Tube, Aftercooler Water Outlet | 23. Breather, Crankcase                         |
| 10. Assembly, Aftercooler         | 24. Gauge, Oil Level                            |
| 11. Tube, Aftercooler Water Inlet | 25. Head, Lubricating Oil Filter                |
| 12. Cover, Cam Follower           | 26. Port, Oil Fill                              |
| 13. Dataplate, Engine             | 27. Housing, Flywheel                           |
| 14. Housing, Front Gear           | 28. Cover, Rocker Lever                         |

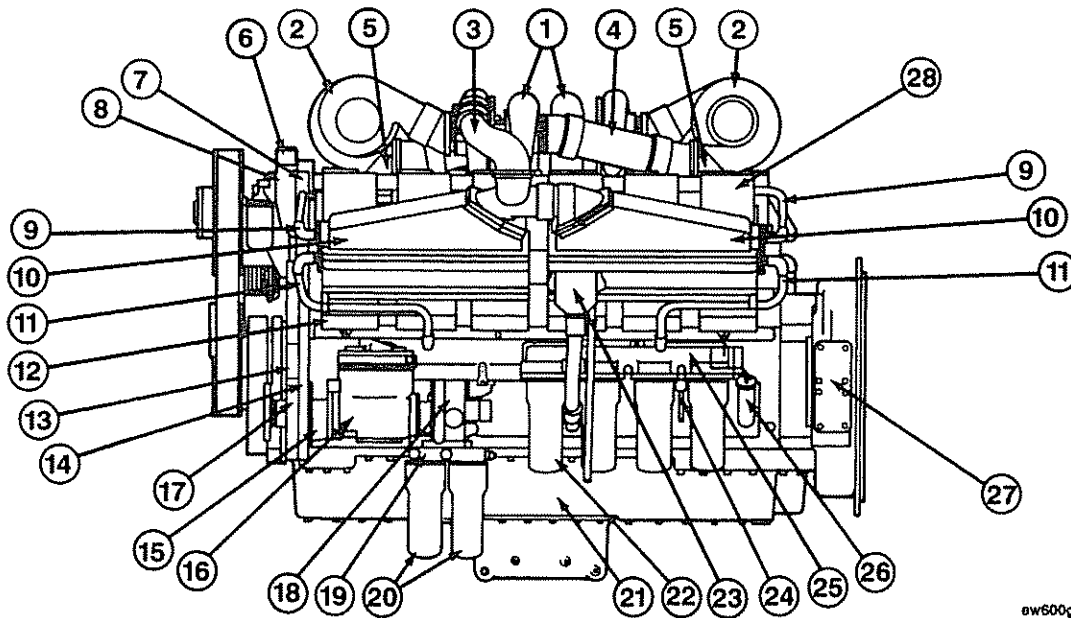


ew600g]

## Engine Diagram - KTTA38 (KTTA50 Similar)

### Top View


- |                                    |                                   |
|------------------------------------|-----------------------------------|
| 1. Connection, Air Crossover       | 12. Support, Thermostat Housing   |
| 2. Turbocharger, High Stage        | 13. Support, Fan Hub              |
| 3. Connection, Air                 | 14. Shaft, Fan Hub                |
| 4. Assembly, Aftercooler           | 15. Housing, Left Bank Thermostat |
| 5. Tube, Water Transfer            | 16. Outlet, Left Bank Water       |
| 6. Bracket, Lifting                | 17. Support, Turbocharger         |
| 7. Cover, Rocker Lever             | 18. Pipe, Exhaust Outlet          |
| 8. Turbocharger, Low Stage         | 19. Housing, Rear Seal            |
| 9. Tube, Aftercooler Water Outlet  | 20. Housing, Flywheel             |
| 10. Housing, Right Bank Thermostat | 21. Housing, Rocker Lever         |
| 11. Outlet, Right Bank Water       |                                   |

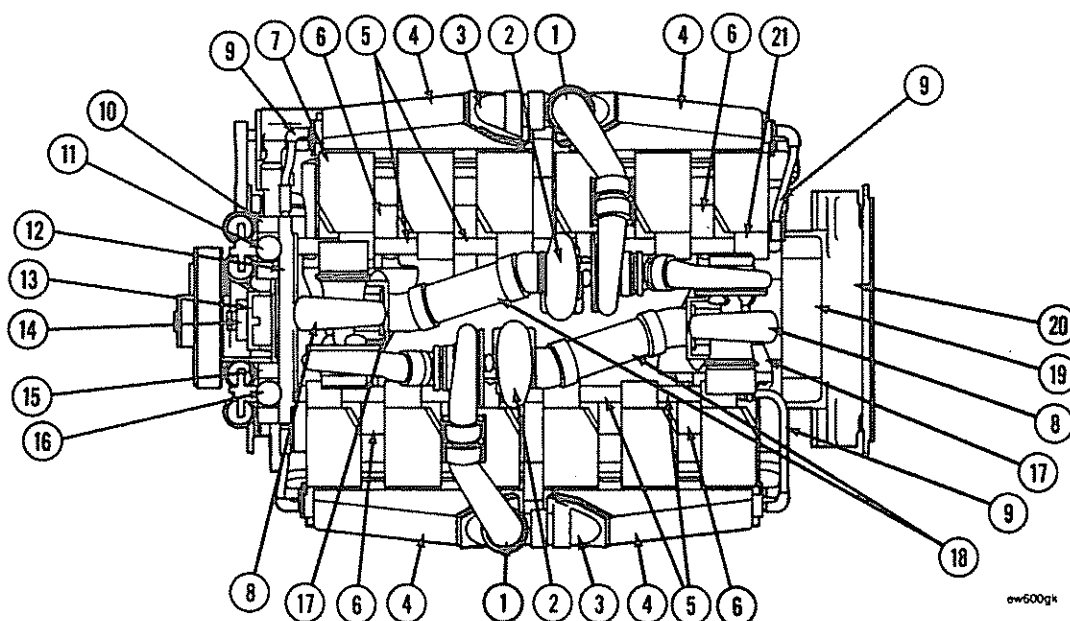

## Engine Diagram - KTTA38 (KTTA50 Similar)

### Rear and Front View


- |                              |                                    |
|------------------------------|------------------------------------|
| 1. Turbocharger, Low Stage   | 16. Pulley, Fan Idler              |
| 2. Turbocharger, High Stage  | 17. Pulley, Crankshaft             |
| 3. Manifold, Exhaust         | 18. Damper, Vibration              |
| 4. Support, Turbocharger     | 19. Direction of Rotation          |
| 5. Cover, Rocker Lever       | 20. Pulley, Accessory Drive        |
| 6. Housing, Rocker Lever     | 21. Cover, Front Gear              |
| 7. Head, Cylinder            | 22. Pulley, Fan                    |
| 8. Manifold, STC Oil         | 23. Hub, Fan                       |
| 9. Manifold, Fuel            | 24. Filter, Water (4 required)     |
| 10. Block, Cylinder          | 25. Head, Water Filter             |
| 11. Housing, Flywheel        | 26. Housing, Left Bank Thermostat  |
| 12. Flexplate                | 27. Outlet, Left Bank Water        |
| 13. Adapter, Oil Pan         | 28. Outlet, Right Bank Water       |
| 14. Pan, Oil                 | 29. Housing, Right Bank Thermostat |
| 15. Pulley, Alternator Drive |                                    |

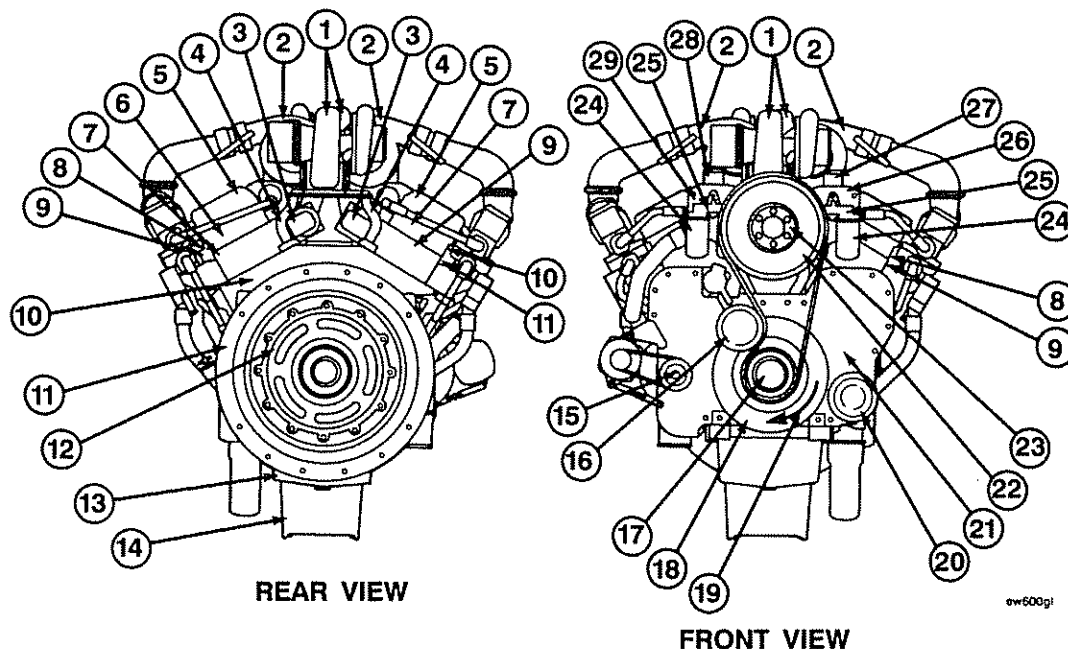

## Engine Diagram - KTA38 Outboard Aftercoolers (KTA50 Similar)

### Right Bank View


- |                                   |                                    |
|-----------------------------------|------------------------------------|
| 1. Turbocharger                   | 13. Pan, Oil                       |
| 2. Connection, Air Crossover      | 14. Plate, Oil Jumper              |
| 3. Connection, Air                | 15. Connection, Water Inlet        |
| 4. Assembly, Aftercooler          | 16. Breather, Crankcase            |
| 5. Cover, Rocker Lever            | 17. Tube, Water Bypass             |
| 6. Tube, Aftercooler Water Outlet | 18. Pump, Water                    |
| 7. Tube, Aftercooler Water Inlet  | 19. Drive, Water Pump              |
| 8. Cover, Cam Follower            | 20. Alternator                     |
| 9. Cover, Hand Hole               | 21. Pulley, Fan Belt Idler         |
| 10. Housing, Flywheel             | 22. Assembly, Fan Belt Idler       |
| 11. Adapter, Oil Pan              | 23. Housing, Right Bank Thermostat |
| 12. Plate, Oil Pan Adapter        | 24. Outlet, Right Bank Thermostat  |

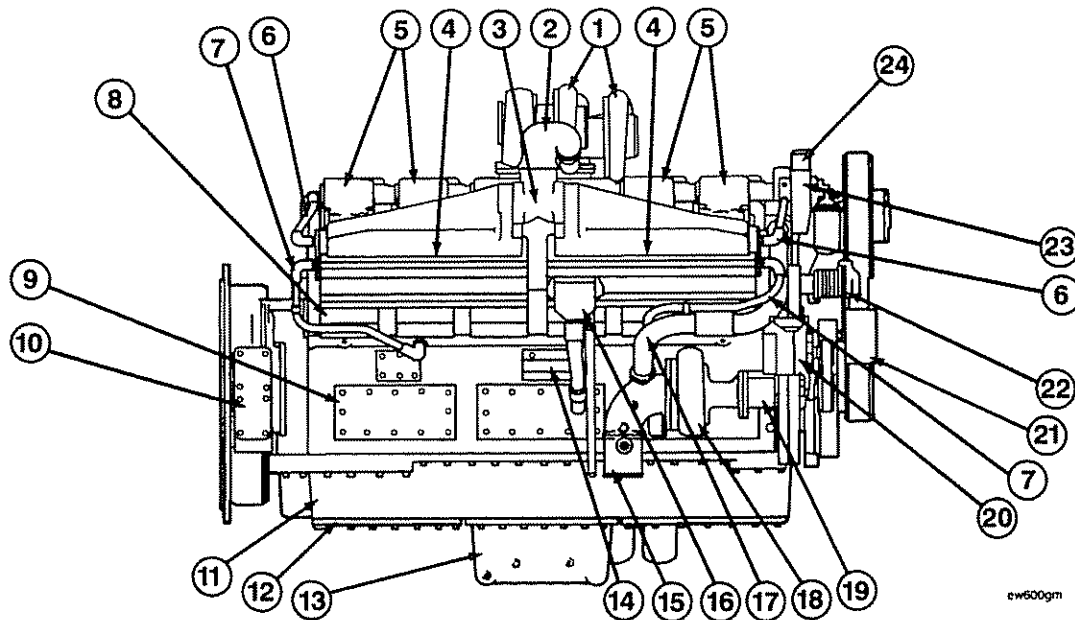

## Engine Diagram - KTA38 Outboard Aftercoolers (KTA50 Similar)

### Left Bank View

- |                                   |   |
|-----------------------------------|---|
| 1. Turbocharger                   | 14. Drive, Air Compressor                       |
| 2. Connection, Air                | 15. Compressor, Air                             |
| 3. Connection, Air Crossover      | 16. Dataplate, Engine                           |
| 4. Assembly, Aftercooler          | 17. Pump, Fuel                                  |
| 5. Cover, Rocker Lever            | 18. Head, Fuel Filter                           |
| 6. Tube, Aftercooler Water Outlet | 19. Filter, Fuel (2 shown)                      |
| 7. Outlet, Left Bank Water        | 20. Filter, Full-Flow Lubricating Oil (4 shown) |
| 8. Support, Thermostat Housing    | 21. Breather, Crankcase                         |
| 9. Housing, Thermostat            | 22. Gauge, Oil Level                            |
| 10. Tube, Aftercooler Water Inlet | 23. Head, Lubricating Oil Filter                |
| 11. Cover, Cam Follower           | 24. Port, Oil Fill                              |
| 12. Housing, Front Gear           | 25. Housing, Flywheel                           |
| 13. Cover, Front Gear             |   |

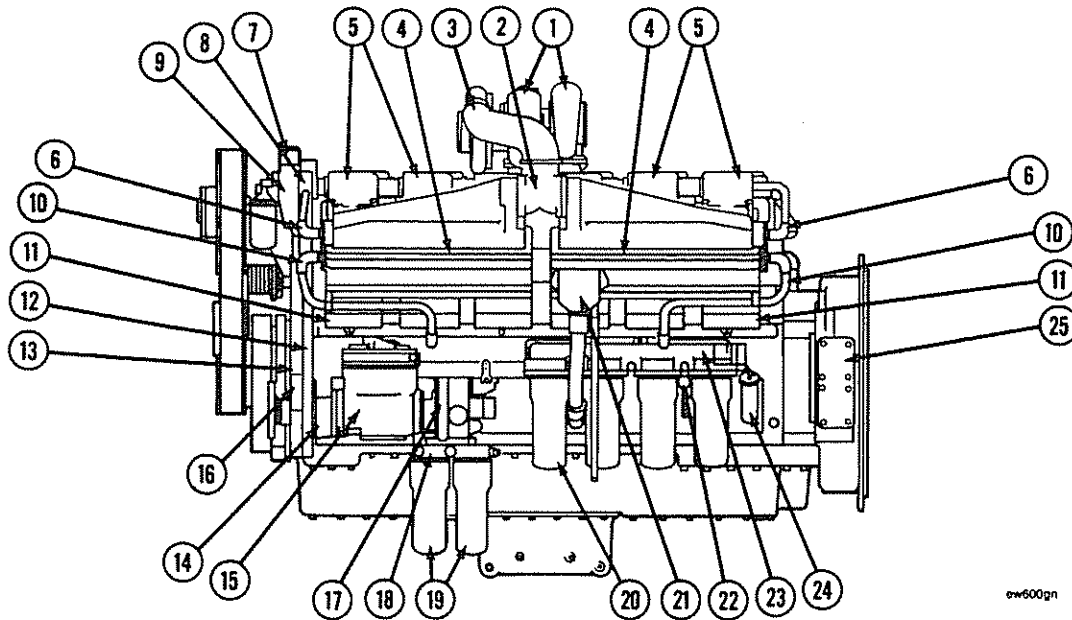


0w600gn

## Engine Diagram - KTA38 Outboard Aftercoolers (KTA50 Similar)

### Top View


- |                                   |                                   |
|-----------------------------------|-----------------------------------|
| 1. Turbocharger                   | 9. Outlet, Right Bank Water       |
| 2. Connection, Air Crossover      | 10. Support, Thermostat Housing   |
| 3. Assembly, Aftercooler          | 11. Support, Fan Hub              |
| 4. Tube, Water                    | 12. Shaft, Fan Hub                |
| 5. Manifold, Exhaust              | 13. Housing, Left Bank Thermostat |
| 6. Cover, Rocker Lever            | 14. Outlet, Left Bank Water       |
| 7. Tube, Aftercooler Water Outlet | 15. Housing, Flywheel             |
| 8. Housing, Right Bank Thermostat | 16. Plate, Oil Cooler Cover       |

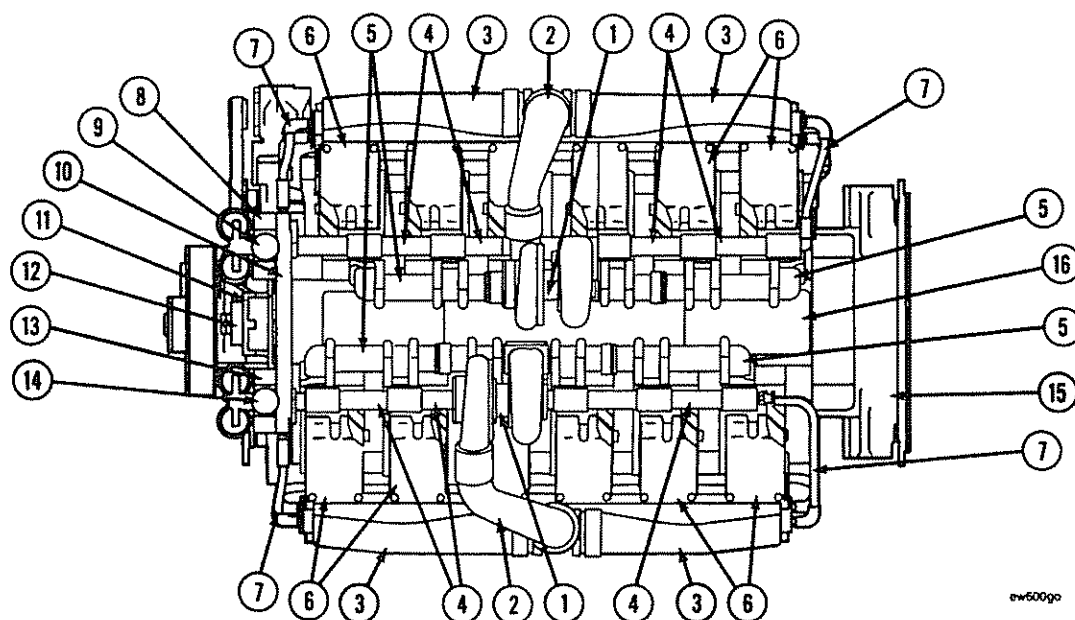

## Engine Diagram - KTA38 Outboard Aftercoolers (KTA50 Similar)

### Rear and Front View

- |                              |                                    |
|------------------------------|------------------------------------|
| 1. Plate, Oil Cooler Cover   | 16. Pulley, Fan Idler              |
| 2. Turbocharger              | 17. Pulley, Crankshaft             |
| 3. Manifold, Exhaust         | 18. Damper, Vibration              |
| 4. Cover, Rocker Lever       | 19. Direction of Engine Rotation   |
| 5. Housing, Rocker Lever     | 20. Pulley, Accessory Drive        |
| 6. Head, Cylinder            | 21. Cover, Front Gear              |
| 7. Connection, Air Crossover | 22. Pulley, Fan Hub                |
| 8. Manifold, STC (HVT)       | 23. Hub, Fan                       |
| 9. Manifold, Fuel            | 24. Filter, Water (4 required)     |
| 10. Block, Cylinder          | 25. Head, Water Filter             |
| 11. Housing, Flywheel        | 26. Housing, Left Bank Thermostat  |
| 12. Flexplate                | 27. Outlet, Left Bank Water        |
| 13. Adapter, Oil Pan         | 28. Outlet, Right Bank Thermostat  |
| 14. Pan, Oil                 | 29. Housing, Right Bank Thermostat |
| 15. Pulley, Alternator Drive |                                    |

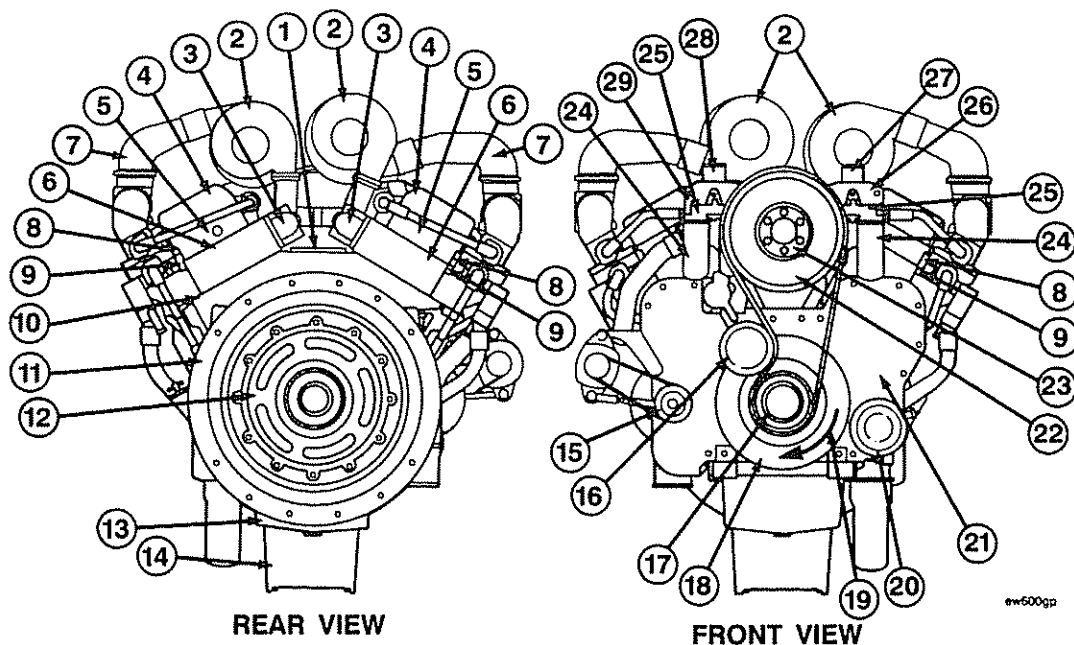



## Section 1 - Operating Instructions

### Section Contents

	Page
<b>Cold Weather Engine Operation</b> .....	1-5
<b>Cold Weather Starting</b> .....	1-4
Using Starting Fluid With Mechanical or Electrical Metering Equipment.....	1-4
Using Starting Fluid Without Metering Equipment .....	1-5
<b>Cold Weather Starting Aids</b> .....	1-6
Electrically Operated Ether Valve.....	1-7
Ether Starting Aids.....	1-6
Installation Recommendations.....	1-7
Manually Operated Ether Valve.....	1-7
<b>Engine Operating Range</b> .....	1-10
<b>Engine Shut-down</b> .....	1-11
<b>Fuel Control Valve - Single Bank</b> .....	1-13
<b>General Information</b> .....	1-2
<b>Normal Starting Procedure (Above 0°C [32°F])</b> .....	1-2
<b>Operating the Engine</b> .....	1-9
<b>Power Takeoff Application with Variable Speed Controls</b> .....	1-11
<b>Starting Procedure - After Extended Shutdown or Oil Change</b> .....	1-8
<b>Step Timing Control (STC)</b> .....	1-11

01801vu

Correct care of your engine will result in longer life, better performance and more economical operation.

- 



- 




- Disengage the driven unit, or if equipped, put the transmission in neutral.
- Start the engine with the throttle in the idle position.




To prevent damage to the starter, do **not** engage the starting motor more than 30 seconds. Wait two (2) minutes between each attempt to start (electrical starting motors only).

**Caution:** When using jumper cables to start the engine, make sure to connect the cables in parallel: positive (+) to positive (+) and negative (-) to negative (-). When using an external electrical source to start the engine, turn the disconnect switch to the OFF position. Remove the key before attaching the jumper cables.


The accompanying illustration shows a typical parallel battery connection. This arrangement doubles the cranking amperage.

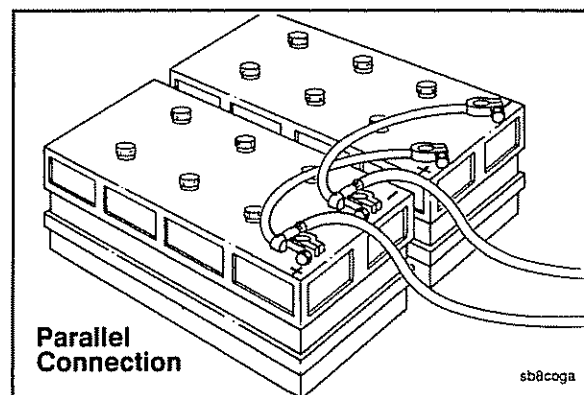


This illustration shows a typical series battery connection. This arrangement, positive to negative, doubles the voltage.

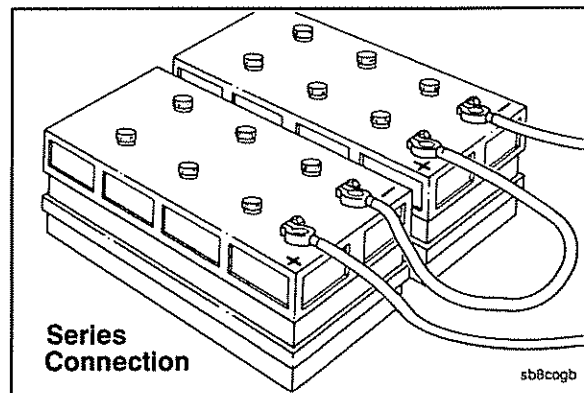


- Engine oil pressure **must** be indicated on the gauge within 15 seconds after starting. If oil pressure is **not** registered within 15 seconds, shut off the engine immediately to avoid engine damage. Confirm the correct oil level in the oil pan.

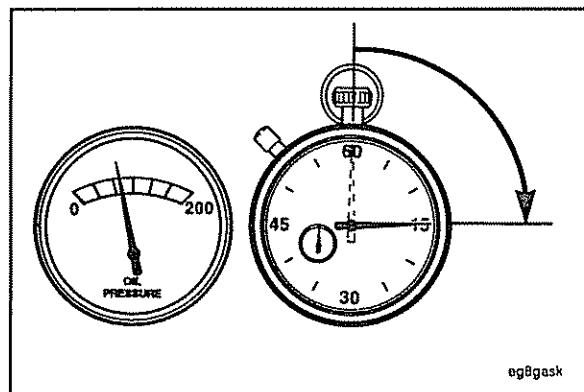


- Idle the engine three (3) to five (5) minutes at approximately 1,000 RPM before operating with a load.

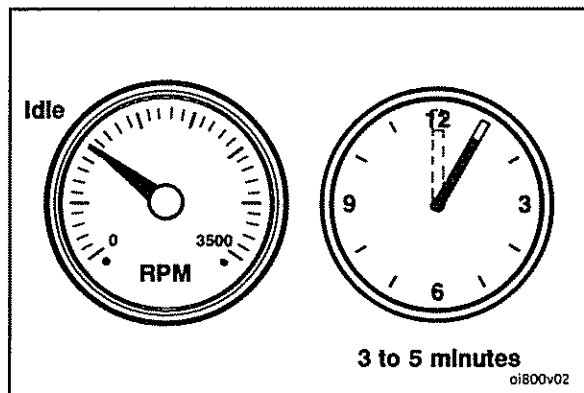


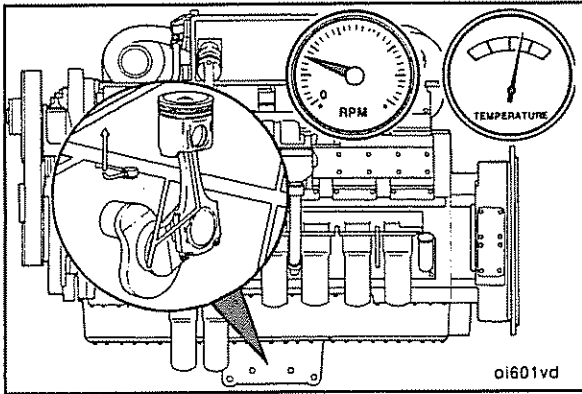


- When starting a cold engine, increase the engine speed (RPM) slowly to provide adequate lubrication to the bearings, and to allow the oil pressure to stabilize.

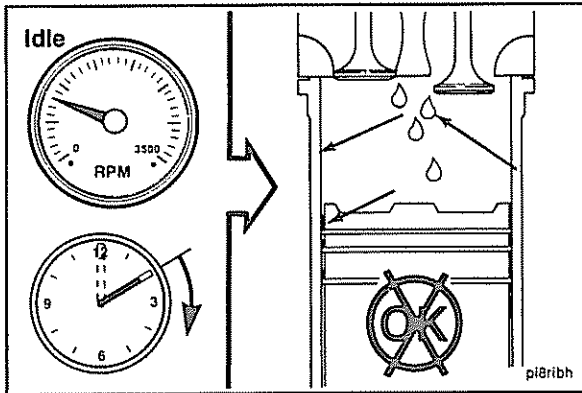

Do **not** idle the engine for excessively long periods. Long periods of idling, more than 10 minutes, can damage an engine because combustion chamber temperatures drop so low the fuel will **not** burn completely. This will cause carbon to clog the injector spray holes and piston rings, and can cause the valves to stick.

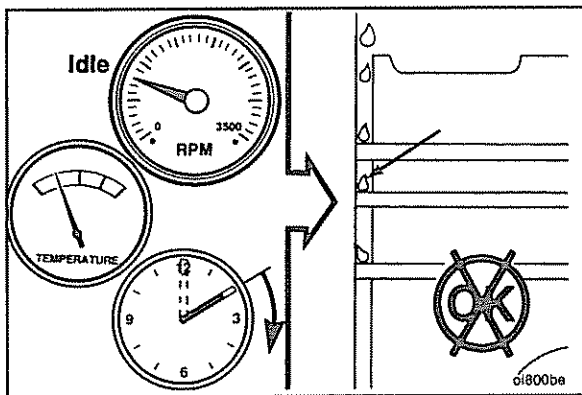

If the engine coolant temperature becomes too low, 60°C [140°F], raw fuel will wash the lubricating oil off the cylinder walls and dilute the crankcase oil; therefore, all moving parts of the engine will **not** receive the correct amount of lubrication.

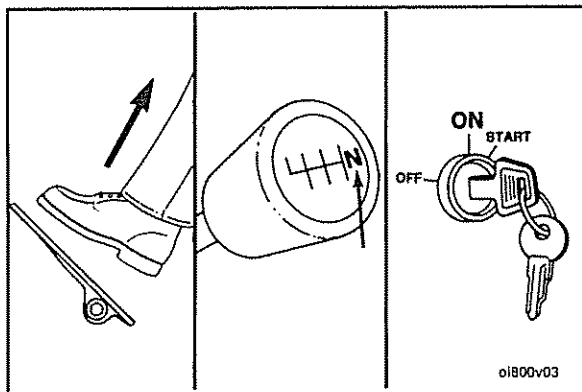


## Cold Weather Starting

### Using Starting Fluid With Mechanical or Electrical Metering Equipment

- Set the throttle at idle.
- Disengage the driven unit, or if equipped, put the transmission in neutral.
- Activate the switch to open the fuel pump shutoff valve.

- While cranking the engine, inject a metered amount of starting fluid.
- Engine oil pressure **must** be indicated on the gauge within 15 seconds after starting.

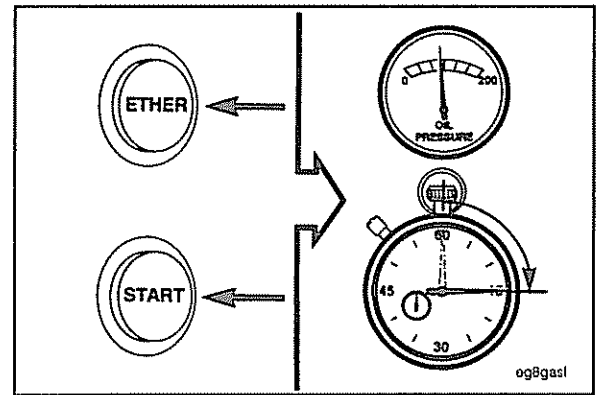


### Using Starting Fluid Without Metering Equipment

**Warning:** Do not use volatile cold starting aids in underground mine or tunnel operations due to the potential of an explosion. Check with the local U.S. Bureau of Mines Inspector for instructions.

**Caution:** Do not use excessive amounts of starting fluid when starting an engine. The use of too much starting fluid will cause engine damage.

Due to increased safety hazards and potential for engine damage, Cummins Engine Company, Inc. does **NOT** recommend the use of starting fluid without metering equipment.

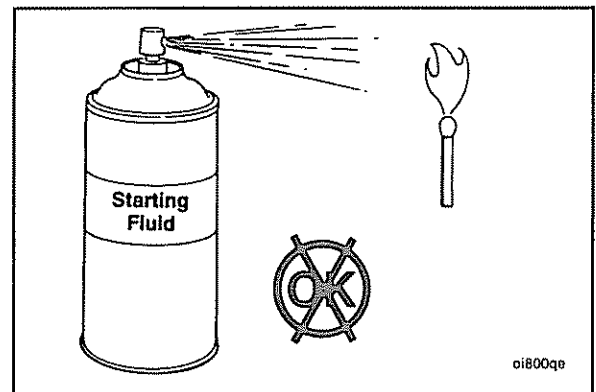

## Cold Weather Engine Operation

Satisfactory performance of a diesel engine operating in low ambient temperature conditions requires modification of the engine, surrounding equipment, operating practices and maintenance procedures. The colder the temperatures encountered, the greater the amount of modification required and yet with the modifications applied, the engines **must** still be capable of operation in warmer climates without extensive changes. The following information is provided to engine owners, operators and maintenance personnel on how the modifications can be applied to get satisfactory performance from their diesel engines.

There are three basic objectives to be accomplished:

1. Reasonable starting characteristics followed by practical and dependable warm-up of the engine and equipment.
2. A unit or installation which is as independent as possible from external influences.
3. Modifications which maintain satisfactory operating temperatures with a minimum increase in maintenance of the equipment and accessories.

If satisfactory engine temperature is **not** maintained, higher maintenance cost will result due to the increased engine wear, poor performance and formation of excessive carbon, varnish and other deposits. Special provisions to overcome low temperatures are definitely necessary, whereas a change to warmer climate normally requires only a minimum of revision. Most of the accessories will be designed in such a way that they can be disconnected so there is little effect on the engine when they are **not** in use.

The two most commonly used terms associated with preparation of equipment for low temperature operation are **Winterization** and **Arctic Specifications**.

**Winterization** of the engine and/or components so starting and operation are possible in the lowest temperature to be encountered requires:


1. Use of correct materials.
2. Proper lubrication, low temperature lubricating oils. Refer to Lubricating Oil Specifications, Section V.
3. Protection from the low temperature air. The metal temperature does **not** change, but the rate of heat dissipation is affected.
4. Fuel of the proper grade for the lowest temperature.
5. Heating to be provided to increase the engine block and component temperature to a minimum of -32°C [-25°F] for starting in lower temperatures.
6. Proper external heating source available.
7. Electrical equipment capable of operating in the lowest expected temperature.

**Arctic** specifications refer to the design material and specifications of the components necessary for satisfactory engine operation in extreme low temperatures -54°C [-65°F]. Contact Cummins Engine Company, Inc. or the equipment manufacturer to obtain the special items required.

For additional information on cold weather operation, obtain Service Bulletin No. 3379009, Engine Operation in Cold Weather, from the nearest Cummins Distributor or dealer.

It is possible to operate diesel engines in extremely cold environments if they are properly prepared and maintained. The correct lubricants, fuels and coolant **must** be used for the cold weather range for which the vehicle is being operated. Refer to the chart below for recommendations in different operating ranges.

Winterize 0° to -23°C [32° to -10°F]	Winterize -23° to -32°C [-10° to -25°F]	Arctic Specifications -32° to -54°C [-25° to -65°F]
Use ethylene glycol antifreeze to protect to -29°C [-20°F]	Use 50 percent ethylene glycol antifreeze, 50 percent water mixture.	Use 60 percent ethylene glycol antifreeze, 40 percent water mixture.
Use multi viscosity oils meeting API, CE or CF4 specifications.	Use multi viscosity oil meeting API CE or CF4 specifications.	Use Arctic oil meeting API CE or CF4 specifications.
Fuel to have maximum cloud and pour points 6°C [10°F] lower than ambient temperature in which engine operates.	Fuel to have maximum cloud and pour points 6°C [10°F] lower than ambient temperatures in which engine operates.	Fuel to have maximum cloud and pour points 6°C [10°F] lower than ambient temperature in which engine operates.

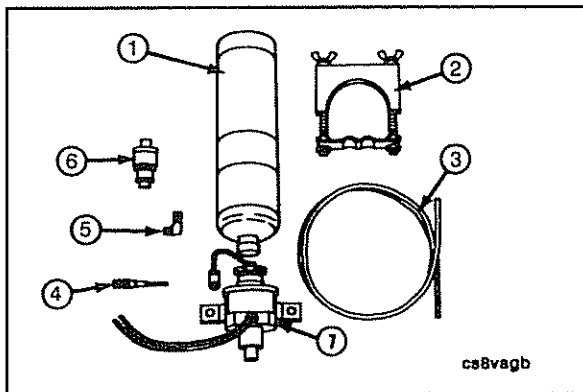

## Cold Weather Starting Aids

### Ether Starting Aids



**Warning:** Starting fluid contains ether and is extremely flammable. Misuse or mishandling can cause an explosion. **NEVER** handle starting fluid near an open flame. **NEVER** use starting fluid with a preheater, glow plug, flame thrower or other type of electrical starting equipment. Do **NOT** breathe the fumes as serious injury to the human respiratory system will result. Fuel oil or volatile fuel cold starting aids are **NOT** to be used in underground mine or tunnel operations.




**Caution:** Using too much starting fluid will cause extremely high pressures and detonation in the engine cylinders, resulting in damage to the cylinder parts and bearings. Too much starting fluid can also cause damage from engine overspeed.

### Manually Operated Ether Valve


The manually operated ether valve includes the valve body assembly (5), clamp (2), and nylon tube (3). The fuel cylinder (1), atomizer fitting (4) and pull control (6) **must** be ordered separately.

Standard pull or throttle control cables can be used to actuate the manual valve, if desired.

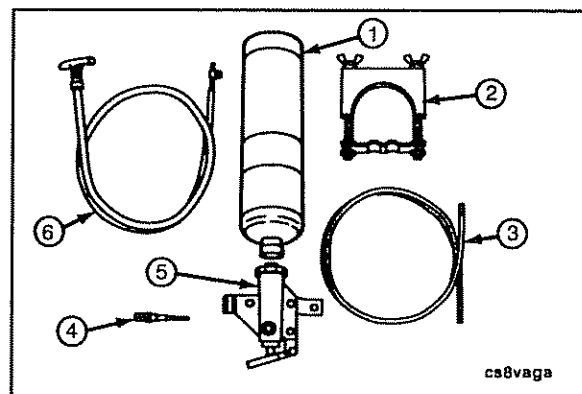


### Electrically Operated Ether Valve

The electrically operated ether valve includes the valve body (7), 90 degree elbow (5), clamp (2), push button switch (6), and nylon tube (3). A thermostat is mounted to the cylinder block or coolant passage and stops electrical power to the atomizer solenoid when the engine is warm. See the Parts Catalog for fuel cylinder (1) and fuel atomizer fittings (4). These fittings **must** be ordered separately, as required.

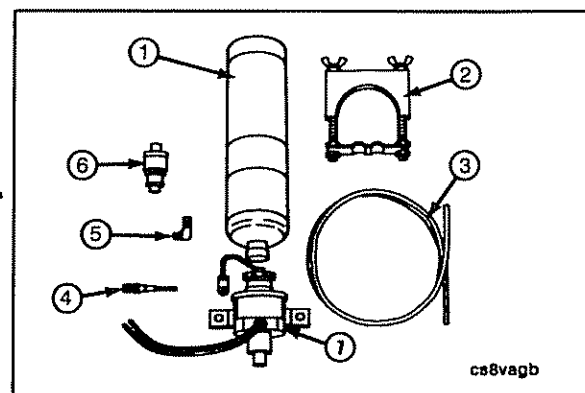

### Installation Recommendations

The atomizer fittings **must** be mounted in the engine air intake manifold to provide an equal distribution of starting fuel to each cylinder. The atomizer holes are 180 degrees apart and **must** be mounted so the spray is injected the long way of the manifold. If incorrectly installed, the spray goes crosswise of the manifold.

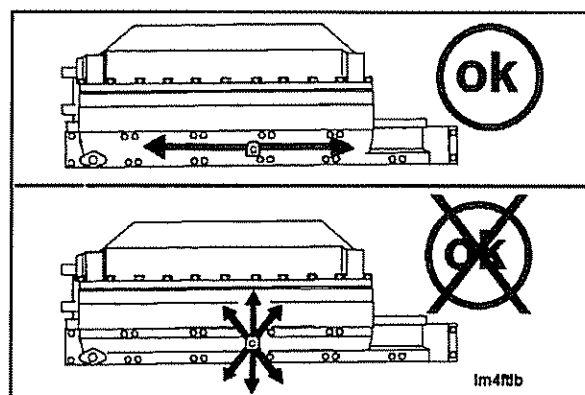


The following cold weather operating aids are required for cold weather situations:

Cold Weather Operating Aids										
Temperature	Starting Aid	Coolant Heater	Oil Heater	Under-hood Air	Fuel Heater	Battery Heater	Radiator Shutters	Engine Enclosure	Winter Front	Thermatic Fan
50 to 32° F 10 to 0° C	↑									
32 to -10° F 0 to -23° C	↑	↑	↑	↑	↑	↑	↑	↑	↑	Suggested
-10 to -25° F -23 to -32° C	Required	Required	Required	Required	Required	Required	Required	Required	Required	Required
-25 to -65° F -32 to -54° C	↓	↓	↓	↓	↓	↓	↓	↓	↓	↓

\* Required dependent upon viscosity/pour point.

oi201vt

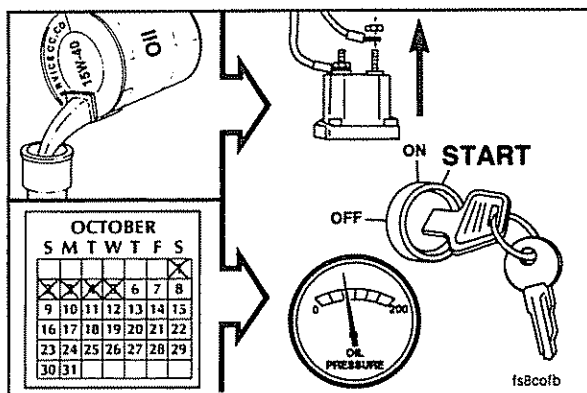


## Starting Procedure - After Extended Shutdown or Oil Change

Complete the following steps after each oil change, or after the engine has been shut off for more than five (5) days to make sure the engine receives the correct oil flow through the lubricating oil system:


- Disconnect the electrical wire from the fuel pump solenoid valve.
- Rotate the crankshaft, using the starting motor, until oil pressure appears on the gauge or the warning light goes out.

- Connect the electrical wire to the fuel pump solenoid valve.
- Start the engine. Refer to Normal Starting Procedures in this section.

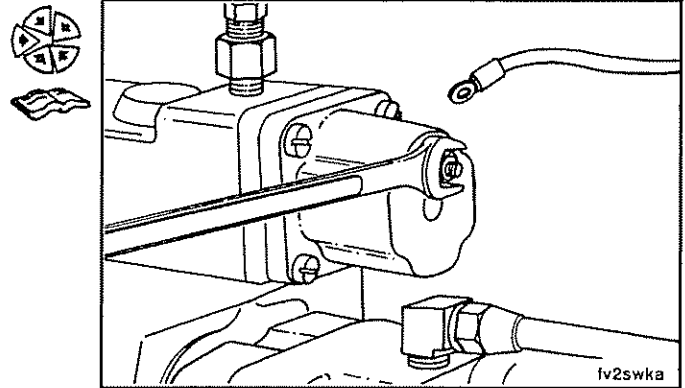


## Operating the Engine

- Allow the engine to idle three (3) to five (5) minutes before shutting it off after a full load operation. This allows adequate cool down of pistons, cylinder liners, bearings and turbocharger components.

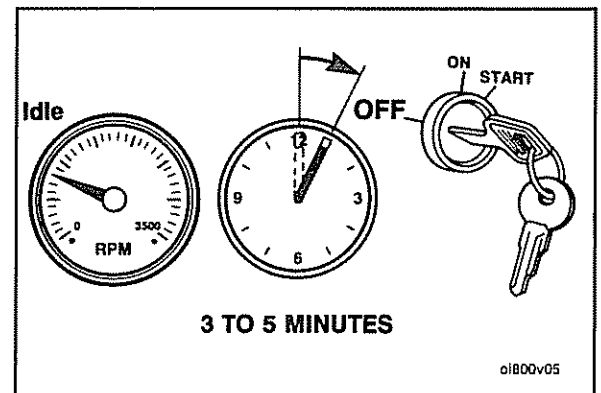



**NOTE:** Continuous operation with low coolant temperature, below 60°C [140°F], or high coolant temperature, above 100°C [212°F], can damage the engine.

- Monitor the oil pressure and coolant temperature gauges frequently. Refer to Lubricating Oil System Specifications or Cooling System Specifications, Section V, for recommended operating pressures and temperatures. Shut off the engine if any pressure or temperature does **not** meet the specifications.

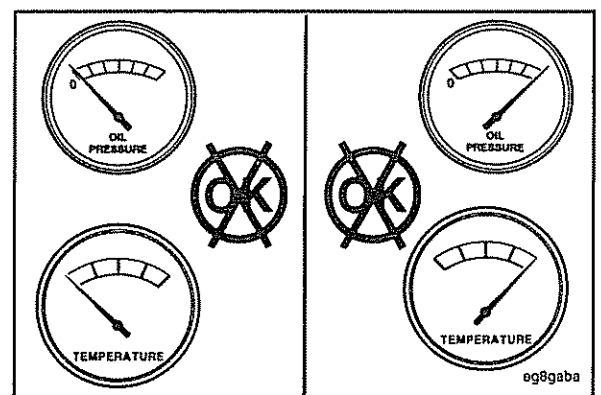


- If an overheating condition starts to occur, reduce the power output of the engine by releasing the throttle pressure or shifting the transmission to a lower gear or both until the temperature returns to normal operating range. If engine temperature does **not** return to normal, shutoff the engine and refer to Troubleshooting, Section T, or contact a Cummins Authorized Repair Location.

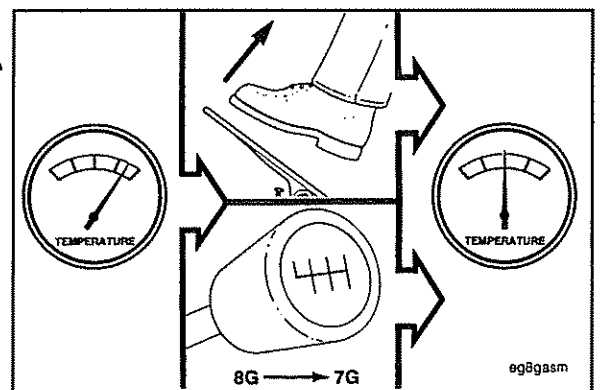

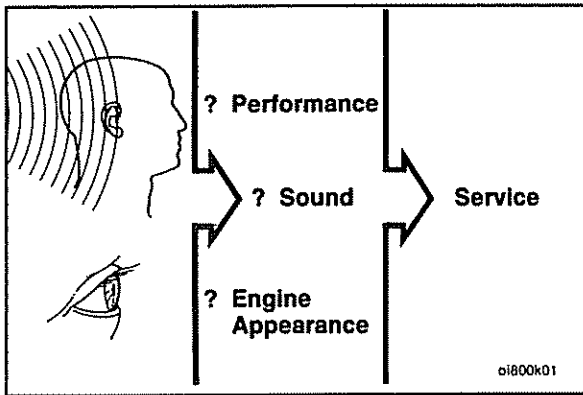


- Most failures give an early warning. Look and listen for changes in performance, sound or engine appearance that can indicate service or engine repair is needed. Some changes to look for are as follows:
  - Engine misfires
  - Vibration
  - Unusual engine noises
  - Sudden changes in engine operating temperature or pressure
  - Excessive smoke
  - Loss of power
  - An increase in oil consumption
  - An increase in fuel consumption
  - Fuel, oil or coolant leaks

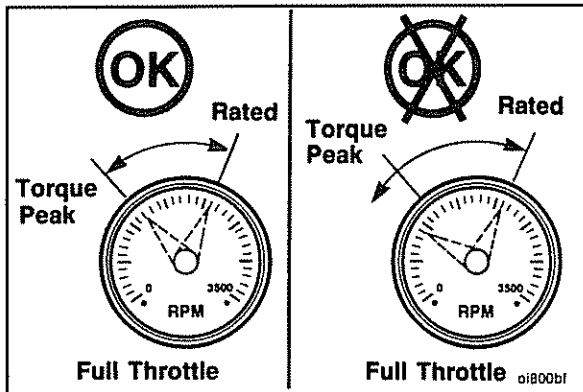


## Engine Operating Range

Excessive full throttle operation below peak torque RPM (lugging) will shorten engine life to overhaul, can cause serious engine damage and is considered engine abuse. Cummins engines are designed to operate successfully at full throttle under transient conditions down to peak torque engine speed.

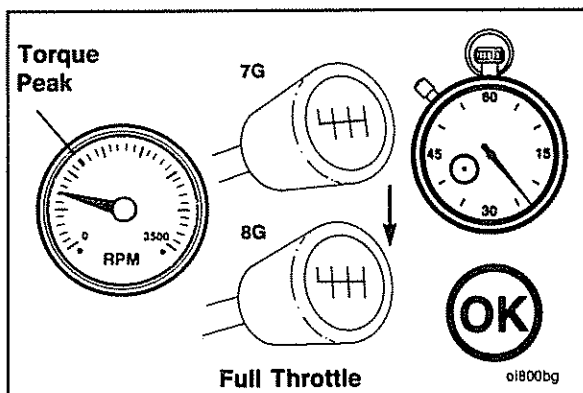


Operation of the engine below peak torque RPM can occur during gear shifting due to the difference of ratios between transmission gears, but engine operation **must not** be sustained more than 30 seconds at full throttle below peak torque RPM.

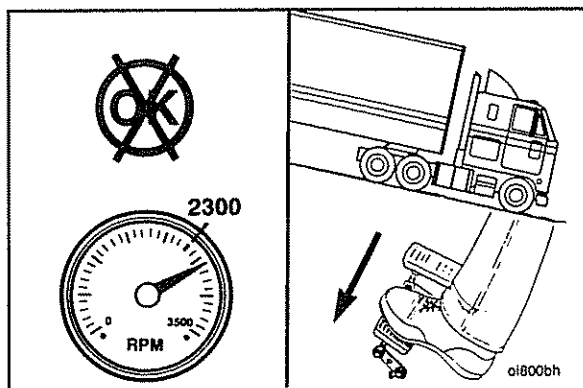

**Caution:** Operating the engine beyond high idle speed can cause severe engine damage. The engine speed **MUST NOT** exceed 2,400 RPM under any circumstances. When descending a steep grade, use a combination of transmission gears or vehicle braking systems to control the vehicle and engine speed.

## Engine Shut-down

- Allow the engine to idle three (3) to five (5) minutes after a full load operation before shutting it off. This allows the engine to cool gradually and uniformly.
- Turn the ignition key switch to the OFF position. If the engine fails to stop running, rotate the manual fuel shutoff thumb screw **counterclockwise** to make sure the valve is **not** being held open by the manual override screw.

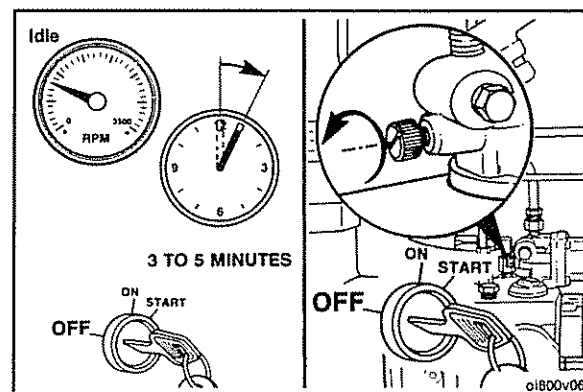


## Power Takeoff Application with Variable Speed Controls

The variable speed governor on power takeoff applications is used to control engine speed at the desired RPM.


To engage the variable speed governor with the engine idling on standard throttle:

- Put the variable speed control lever (2) in the idle position.
- Lock the standard throttle lever (1) in the full open position.
- Adjust the variable speed control lever (2) to the speed desired.

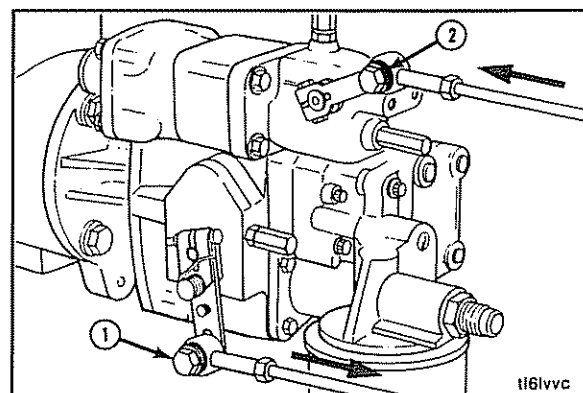

To return to standard throttle operation:

- Return the standard throttle lever (1) to the idle position.
- Lock the variable speed control lever (2) in the maximum speed position.

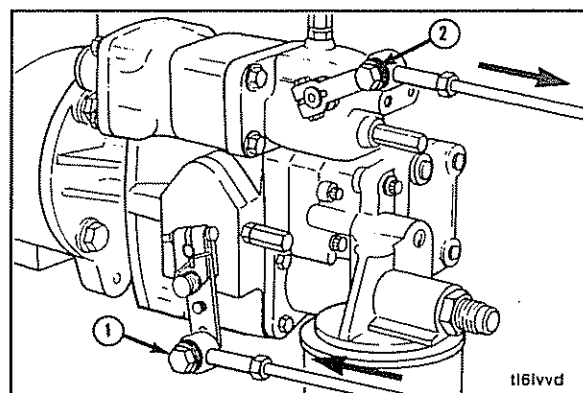


## Step Timing Control (STC)

Some engine models are equipped with step timing control (STC), formerly called HVT (Hydraulic Variable Timing). STC allows the engine to operate in advanced injection timing immediately after start-up and light duty engine load conditions, and to return to normal timing during medium and high engine load conditions.


Benefits include:

- Improved cold weather idling characteristics.
- Reduced cold weather white smoke.
- Improved light load fuel economy.


STC	
Advanced	Normal
Starting and Light Load	High Load

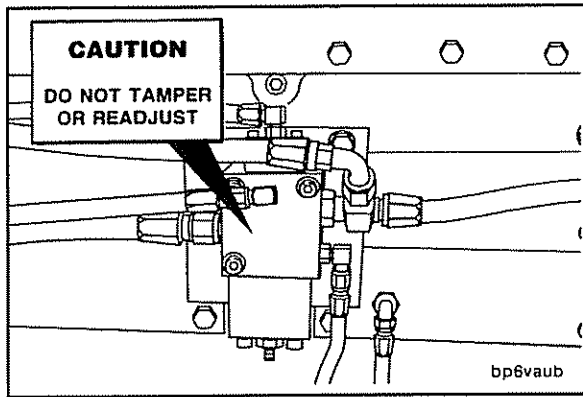

Do **not** attempt to bypass or otherwise tamper with the STC oil control valve or plumbing. This will result in the loss of both fuel economy and engine durability. Correct valve operation is necessary to maintain acceptable cylinder pressures and temperatures, and to yield optimal fuel economy during high-load operation. Correct operation is also necessary to control white smoke at idle.

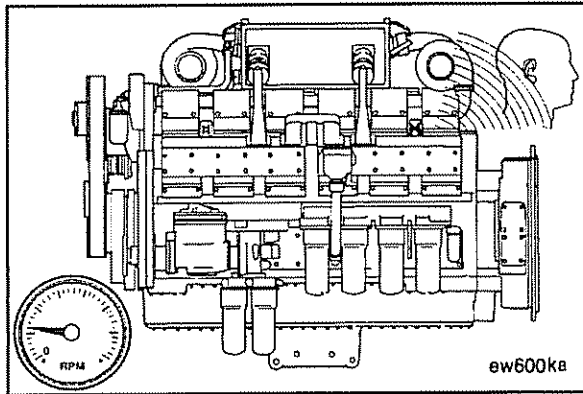

When operating in the advanced mode, a light ticking noise can be noted at the overhead. This sound is normal, and is caused by the actuation of the STC hydraulic tappets during each injection cycle.

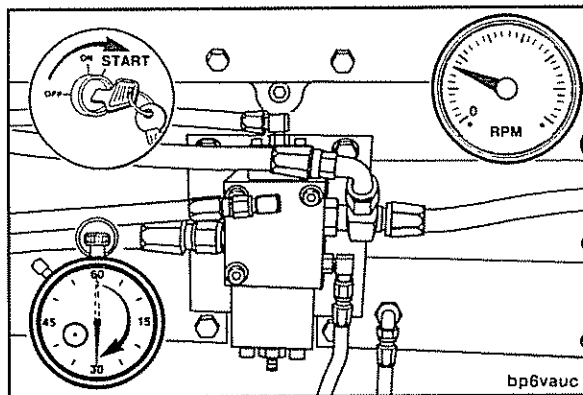

For optimal white smoke control on STC-equipped engines, do **not** increase engine speed above idle during engine start-up until sufficient oil pressure reaches the STC tappets to shift all injectors into the advanced timing mode.

## Fuel Control Valve - Single Bank

Some engine models are equipped with a fuel control single bank idle valve. These engines will **not** be equipped with step timing control (STC). The single bank idle valve allows the engine to **only** operate on the **right** bank of cylinders during start-up and idle conditions and to return the engine to all cylinder operation during normal loaded conditions. Engine idle operation on one bank of cylinders ensures that the firing cylinders are at a temperature sufficient for proper combustion.

Benefits include:

- Improved cold weather idling characteristics.
- Reduced cold weather white smoke.
- Improved idle fuel consumption.
- Reduced injector carboning.



The single bank idle valve is adjusted with internal shims. Refer to the K38 and K50 Engine Series Troubleshooting and Repair Manual Procedure Nos. 05-38 and 05-39, Bulletin No. 3810432, for the proper procedures.



## Section 2 - Maintenance Guidelines

### Section Contents

	Page
Engine Maintenance Schedule.....	2-3
Page References for Maintenance Instructions .....	2-4
General Information .....	2-2
Tool Requirements.....	2-2



## General Information

Cummins Engine Company, Inc. recommends that the engine be maintained according to the Maintenance Schedule on page 2-3.

If the engine is operating in ambient temperatures consistently below -18°C [0°F] or above 38°C [100°F], perform maintenance at shorter intervals. Shorter maintenance intervals are also required if the engine is operated in a dusty environment or if frequent stops are made. See your Cummins Authorized Repair Location for recommended intervals.

**NOTE:** Some of these maintenance procedures require special tools or **must** be done by qualified personnel. These procedures are outlined in the specific manuals as follows:

Procedure	Bulletin No.	Description
• Adjust the Valves and Injectors	3810304 3810432	K38 and K50 Shop Manual K38 and K50 Troubleshooting & Repair Manual
• Clean and Calibrate the Injectors	3379071 3810313	Injector PT Rebuild Manual PT (type D) STC Injector Shop Manual
• Clean and Calibrate the Fuel Pump	3379084	Fuel Pump (PT type G) Rebuild and Calibrate
• Repair and Rebuild Components*	3810304	K38 and K50 Shop Manual

\*If your engine is equipped with a component or an accessory **not** manufactured by Cummins Engine Company, Inc., refer to the component manufacturer's maintenance recommendations. A listing of suppliers' addresses and telephone numbers is provided in Component Manufacturers, Section C.

Use the chart provided on page 2-6 as a convenient way to keep a record of maintenance performed.

## Tool Requirements

Most of the maintenance operations described in this manual can be performed with common hand tools (S.A.E. wrenches, sockets, and screwdrivers).

The following is a list of special service tools required for some maintenance operations:

Tool Part No.	Description
3375049	Oil Filter Wrench
3376592	Inch Pound Torque Wrench
3376807	Water/Fuel Filter Wrench
3822524	Belt Tension Gauge (Click-Type)
3822525	Belt Tension Gauge (Click-Type)
3822648/3823348	Top Stop Tappet Setting Tool (STC equipped engines only)
ST-1293	Belt Tension Gauge (v-belts)
ST-1274	Belt Tension Gauge (Kriket)

Refer to the appropriate sections for a description of the tools and how to use them.

Contact your nearest Cummins Authorized Repair Location for the required service tools.

## Engine Maintenance Schedule

<h1 style="margin: 0;">Maintenance Schedule</h1>					
K38 and K50 Series Cummins Diesel Engines			Equipment No. _____ Mechanic _____ Time Spent _____ Parts Order No. _____		Engine Serial No. _____ Hours, Calendar _____ Check Performed _____ Date _____
Check each operation as performed.					
Daily (Section 3)	Weekly (Section 4)	250 Hours or 6 Mos. (Section 5)	1500 Hours or 1 Year (Section 6)	6000 Hours or 2 Years (Section 7)	Other (Section 8)
<input type="checkbox"/> Check operator's report <input type="checkbox"/> Check engine: • Oil Level • Coolant level (If make-up coolant is required, DCA4 concentration must be checked.) <input type="checkbox"/> Visually check engine for damage, leaks, loose or frayed belts and listen for unusual noises <input type="checkbox"/> Drain water/sediment from fuel tanks and fuel filters <input type="checkbox"/> Check/Clean air cleaner pre-cleaner and dust pan <input type="checkbox"/> Clean raw water strainer <input type="checkbox"/> Check Engine Monitor System	Repeat Daily Check <input type="checkbox"/> Check air cleaner: • Check piping, hoses, and clamps • Check restriction indicator • Replace air cleaner element as required <input type="checkbox"/> Drain air tanks	Repeat (Daily/Weekly) <input type="checkbox"/> *Change engine oil <input type="checkbox"/> Change filters • Oil full flow • Oil by-pass • Fuel filter • Water filter • Air compressor air cleaner element <input type="checkbox"/> Check/Clean • Crankcase breather tube/hose • Air compressor air filter <input type="checkbox"/> Check belt <input type="checkbox"/> Check belt tension <input type="checkbox"/> Check Cooling System Additives <input type="checkbox"/> Check all belts <input type="checkbox"/> Check cooling fan condition	Repeat Previous Intervals <input type="checkbox"/> Steam clean engine <input type="checkbox"/> **Adjust valves and injectors <input type="checkbox"/> Adjust Fan Idler Pulley Tensioner <input type="checkbox"/> Check engine protection system <input type="checkbox"/> Grease • Fan idler pivot arm • Front engine support <input type="checkbox"/> Check/replace hoses as required <input type="checkbox"/> Check cold start aids (seasonal) <input type="checkbox"/> Check batteries <input type="checkbox"/> Tighten mounting bolts <input type="checkbox"/> Inspect crankshaft end clearance <input type="checkbox"/> Check heat exchanger zinc plugs annually or as required (marine only) <input type="checkbox"/> Clean/replace Crankcase breather element	Repeat Previous Intervals <input type="checkbox"/> Clean and calibrate injectors and fuel pump <input type="checkbox"/> Inspect the following assemblies: • Turbocharger • Vibration damper • Water pump <input type="checkbox"/> Clean and flush cooling system <input type="checkbox"/> Calibrate engine protection system <input type="checkbox"/> Rebuild • Fan hub • Fan idler pulley • Air compressor	<input type="checkbox"/> + Alternator <input type="checkbox"/> + Generator <input type="checkbox"/> + Starter <input type="checkbox"/> + Air compressor (Non-Cummins) <input type="checkbox"/> + Electrical connections <input type="checkbox"/> + Batteries <input type="checkbox"/> + Fan Shaft Bearings <input type="checkbox"/> + Clutch or Marine Gear <input type="checkbox"/> + Freon compressor <input type="checkbox"/> + Hydraulic governor + On these components follow the manufacturer's recommended maintenance procedure

Note: Under circumstances where hours of operation are not accumulated at a fast rate, use calendar time. In other words, use hours, or calendar time, whichever comes first.

\*Cummins Engine Company, Inc., recommends the use of dry type air cleaners.

\* Refer to Section V for alternate method of determining safe oil drain intervals.

\*\* Cummins has found that engines in most applications will not experience significant valve/injector train wear after an initial adjustment is made at 1500 hours. After this adjustment, it is recommended that the valves and injectors not be adjusted again previous to injector calibration at the 6000 hour or 2 year interval. Because injector train hardware is typically mixed between cylinders during injector replacement, it is recommended to adjust valves and injectors 1500 hours after all injector replacements.

## Page References for Maintenance Instructions

For your convenience, listed below are the page numbers that contain specific instructions for performing the maintenance checks listed in the maintenance schedule.

	Section
<b>Daily</b> .....	<b>3</b>
• Air Cleaner Precleaner and Dust Pan - Checking/Cleaning .....	3-4
• Coolant Level - Checking .....	3-3
• Engine Monitor System - Checking .....	3-5
• Engine Operation Report .....	3-2
• Fuel-Water Separator .....	3-2
• Oil Level - Checking .....	3-3
• Raw Water Strainer - Cleaning .....	3-4
• Unusual Engine Noise - Checking .....	3-2
<b>Weekly</b> .....	<b>4</b>
• Air Cleaner Element - Replacement .....	4-4
• Air Intake Hoses, Pipes, and Clamps - Inspection .....	4-6
• Drain Air Tanks .....	4-6
• Inlet Air Restriction Indicators - Mechanical/Vacuum .....	4-2
<b>Every 250 Hours or 6 Months</b> .....	<b>5</b>
• Air Compressor Air Cleaner Element - Replacement .....	5-10
• Belt Tension - Checking .....	5-11
• Belts - Checking .....	5-11
• Bendix-Westinghouse Paper Element - Replacement .....	5-10
• Bendix-Westinghouse Sponge Element - Replacement .....	5-10
• Coolant Filter - Replacement .....	5-8
• Cooling Fan - Checking .....	5-11
• Crankcase Breather Tube/Hose - Checking/Cleaning .....	5-6
• Cummins Two Cylinder Only - Replacement .....	5-10
• Cooling System Additives - Checking .....	5-6
• Fuel Filter - Replacement .....	5-2
• Lubricating Oil and Oil Filter - Changing/Replacement .....	5-3
<b>Every 1500 Hours or 1 Year</b> .....	<b>6</b>
• Batteries - Checking .....	6-22
• Cold Start Aids - Checking .....	6-23
• Crankshaft End Clearance - Inspection .....	6-21
• Engine Mounting Bolts - Checking .....	6-24
• Engine Protection System - General Information .....	6-23
• Fan Idler Pivot Arm .....	6-20
• Fan Idler Pulley Tensioner - Adjustment .....	6-20
• Front Engine Support .....	6-24
• Heat Exchanger Zinc Plugs (Marine Only) - Checking .....	6-21
• Hoses - Checking/Replacement .....	6-20
• Steam Clean Engine .....	6-2
• Valves and Injectors - Adjustment/Checking .....	6-2

<b>Every 6000 Hours or Two Years .....</b>	<b>7</b>
• Air Compressor - Checking .....	7-23
• Cooling System - Cleaning System and Changing Antifreeze .....	7-15
• Engine Protection System - Calibration .....	7-29
• Fan Hub - Inspection .....	7-17
• Fan Idler Pulley Assembly - Rebuild/Replacement .....	7-18
• Fuel Pump - Cleaning/Installation/Removal/Calibration .....	7-2
• Injectors - Cleaning/Calibration/Checking/Installation/Removal .....	7-9
• Thermostats and Seals - Replacement .....	7-19
• Throttle Travel/Throttle Air Cylinder - Checking .....	7-6
• Turbocharger - Inspection .....	7-21
• Vibration Damper - Inspection .....	7-28
• Water Pump - Inspection .....	7-19
<b>Other .....</b>	<b>8</b>
• + Air Compressor (non-Cummins) .....	8-2
• + Alternator .....	8-2
• + Batteries .....	8-2
• + Clutch and Marine Gear .....	8-2
• + Electrical Connections .....	8-2
• + Fan Shaft Bearings .....	8-2
• + Freon Compressor .....	8-2
• + Generator .....	8-2
• + Hydraulic Governor .....	8-2
• + Starter .....	8-2
+ Follow the manufacturer's recommended maintenance procedures on these components. Refer to Section C, Component Manufacturers.	

Engine Serial No. \_\_\_\_\_ Engine Model \_\_\_\_\_  
Owner's Name \_\_\_\_\_ Equipment Name/Number \_\_\_\_\_

[illegible]

## Section 3 - Daily Maintenance Procedures

### Section Contents

	Page
<b>Air Cleaner Pre-Cleaner and Dust Pan</b> .....	3-4
Checking/Cleaning .....	3-4
<b>Coolant Level</b> .....	3-3
Checking .....	3-3
<b>Engine Monitor System</b> .....	3-5
Checking .....	3-5
<b>Engine Operation Report</b> .....	3-2
<b>Fuel-Water Separator</b> .....	3-2
<b>General Information</b> .....	3-2
<b>Oil Level</b> .....	3-3
Checking .....	3-3
<b>Raw Water Strainer</b> .....	3-4
Cleaning .....	3-4
<b>Unusual Engine Noise</b> .....	3-2
Checking .....	3-2

## General Information

Preventative maintenance begins with day-to-day awareness of the condition of the engine and its systems.

Before starting the engine, check the oil and coolant levels. Look for:

- Leaks
- Loose or damaged parts
- Worn or damaged belts
- Any change in engine appearance


## Engine Operation Report

The engine **must** be maintained in top mechanical condition if the operator is to get optimum satisfaction from its use. The maintenance department needs daily running reports from the operator to make necessary adjustments in the time allotted and to make provisions for more extensive maintenance work as the reports indicate the necessity.

Comparison and intelligent interpretation of the daily report along with a practical follow-up action will eliminate most failures and emergency repairs.

Report to the Maintenance Department any of the following conditions:


- Low lubricating oil pressure
- Low power
- Abnormal water or oil temperature
- Unusual engine noise
- Excessive smoke
- Excessive use of coolant, fuel or lubricating oil
- Any fuel, coolant or lubricating oil leaks.

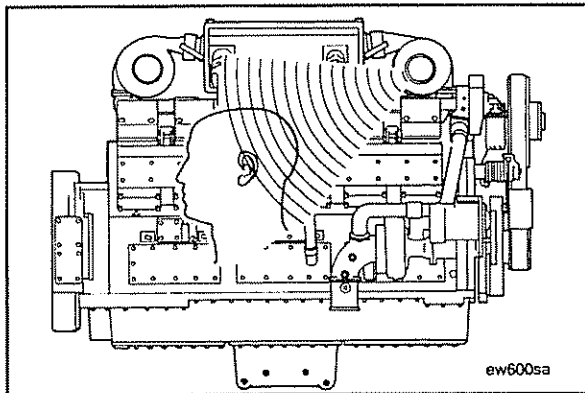

## Unusual Engine Noise

### Checking

During the daily maintenance check, listen for any unusual engine noise which can indicate that service is required.

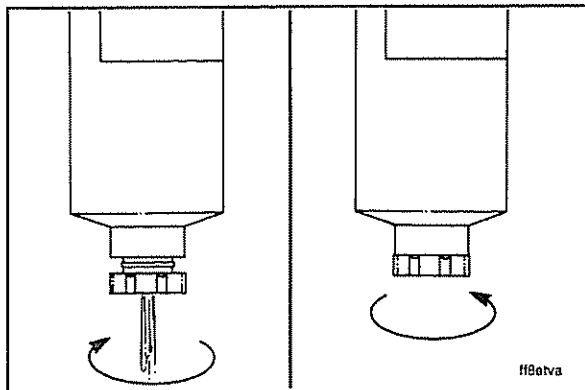

## Fuel-Water Separator

If the engine is equipped with a fuel-water separator, drain the water and sediment from the separator daily.

Shut off the engine. Use your hand to open the drain valve. Turn the valve **counterclockwise** approximately 1- 1/2 to 2 turns until draining occurs. Drain the filter sump of water until clear fuel is visible.



**Caution: Do not overtighten the valve. Overtightening can damage the threads.**

Turn the valve **clockwise** approximately 1-1/2 to 2 turns to close the drain valve.


## Oil Level

### Checking


Check the oil level daily.

**Never** operate the engine with the oil level below the L (Low) mark or above the H (High) mark. Wait at least 5 minutes after shutting off the engine to check the oil. This allows time for the oil to drain to the oil pan.

The vehicle **must** be level when checking the oil level to make sure the measurement is correct.

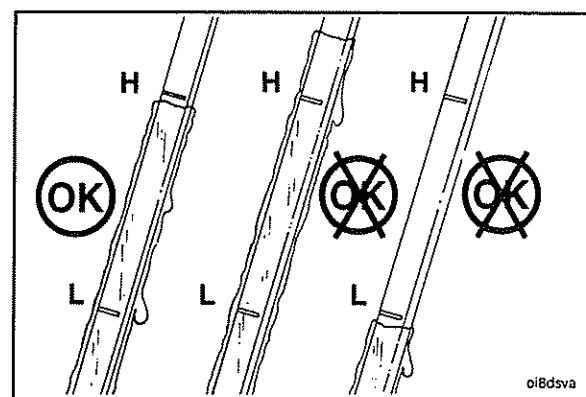

With a fill to the high oil level, oil will just start to flow from the pipe plug near the center of the pan adapter.

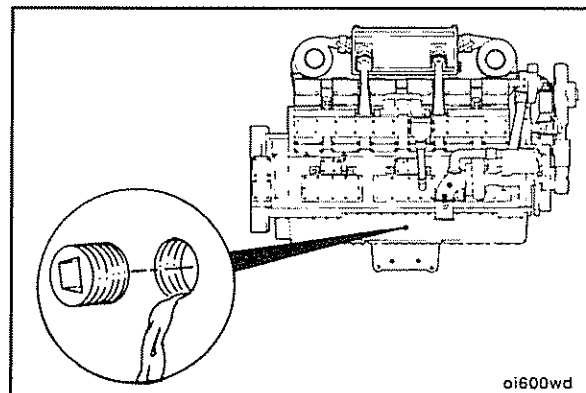


## Coolant Level

### Checking

**Warning:** Do not remove the radiator cap from a hot engine. Wait until the temperature is below 50°C [120°F] before removing the pressure cap. Failure to do so can result in personal injury from heated coolant spray or steam. Remove the filler cap slowly to relieve coolant system pressure.


**Never** use a sealing additive to stop leaks in the cooling system. This can result in the cooling system plugging and inadequate coolant flow.


The coolant level **must** be checked daily.

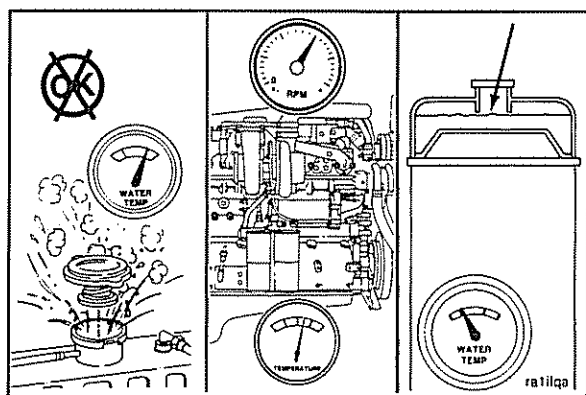


Cummins Engine Co., Inc. does **not** recommend the use of water and DCA without anti-freeze.

Refer to Coolant Recommendations/Specifications in Section V for anti-freeze, water, and DCA specifications.

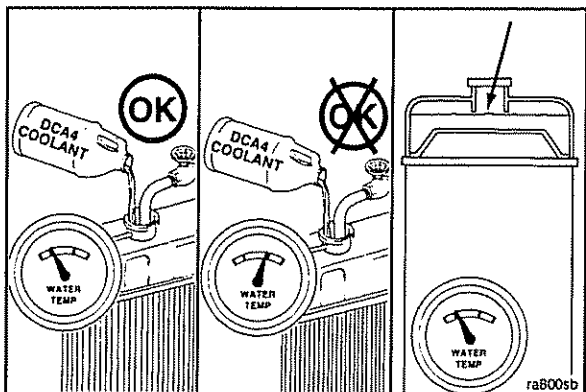

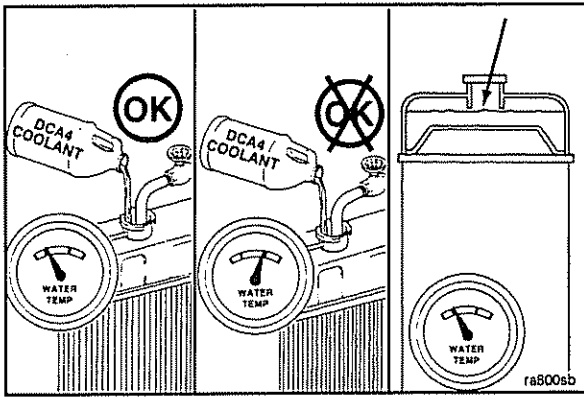

**Caution:** Do NOT add cold coolant to a hot engine. Engine castings can be damaged. Allow the engine to cool to below 50°C [120°F] BEFORE adding coolant.

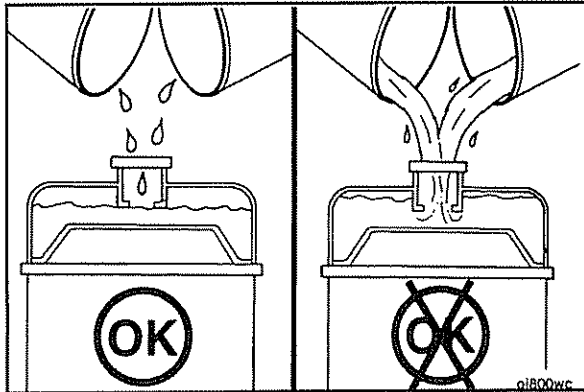


Fill the cooling system with coolant to the bottom of the fill neck in the radiator fill or expansion tank.

**NOTE:** Some radiators have two fill necks, both of which must be filled when the cooling system is drained.

**Caution:** Any time a significant amount of coolant is added, the Diesel Coolant Additive concentration MUST be checked. If the concentration is low, engine damage will result.

## Air Cleaner Pre-Cleaner and Dust Pan Checking/Cleaning

Under extremely dirty conditions an air pre-cleaner can be used. Clean the pre-cleaner jar and dry-type air cleaner dust pans daily or more often, as necessary, depending on operating conditions.

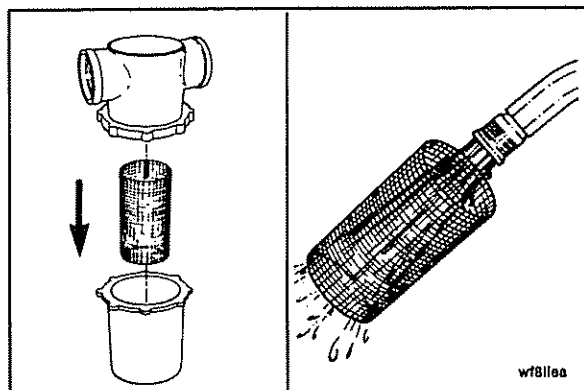

## Raw Water Strainer Cleaning




This picture illustrates a typical raw water strainer.



Depending on the operating environment, clean the raw water strainer daily or as required. Some units can be operated up to, but no longer than 6 months, before cleaning.

**Caution:** A restricted or clogged strainer will result in hotter than normal, or over heated, engine coolant and marine gear oil temperatures.

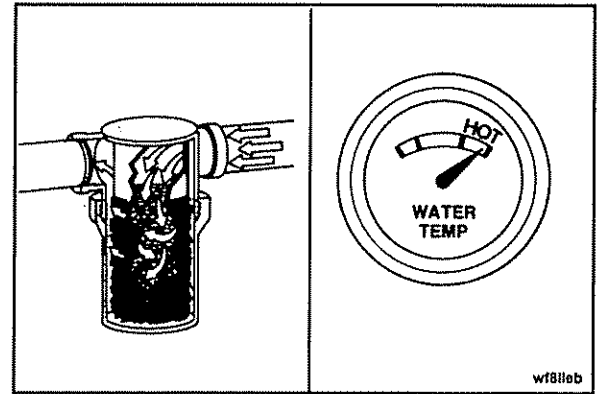

## Engine Monitor System

### Checking

Check the Engine Monitor System daily (push button to test) per the manufacturer's recommendation to verify proper operation.





## Section 4 - Weekly Maintenance Procedures

### Section Contents

	Page
<b>Air Cleaner Element - Replacement</b> .....	4-3
Cartridge Type Element - Cleaning .....	4-5
Dual - Heavy Duty Dry-Type Element - Replacement .....	4-4
Single - Heavy Duty Dry-Type Element - Replacement .....	4-3
<b>Air Intake Hoses, Pipes, and Clamps</b> .....	4-6
Checking .....	4-6
<b>Air Tanks</b> .....	4-6
<b>General Information</b> .....	4-2
<b>Inlet Air Restriction Indicators</b> .....	4-2
Mechanical Indicator .....	4-2
Vacuum Indicator .....	4-2

## General Information

All checks or inspections listed under the daily maintenance interval **must** also be performed at this time in addition to those listed under this maintenance interval.

Engine Maintenance Schedule (1) (2)				
Daily or Scheduled	Every 1,000 km (620 miles) or 1 week (3)	Every 10,000 km (6,200 miles) or 1 year (4)	Every 20,000 km (12,500 miles) or 2 years (4)	Every 40,000 km (25,000 miles) or 4 years (4)
<ul style="list-style-type: none"> <li>Check operator's report</li> <li>Check and bring to correct level: <ul style="list-style-type: none"> <li>Oil</li> <li>Water</li> </ul> </li> <li>Visually inspect engine for damage, wear, loose or frayed parts and correct as needed for future action</li> <li>Check turbocharger separator</li> </ul>	<ul style="list-style-type: none"> <li>Lubricating Oil</li> <li>Lubricating Oil Filter</li> <li>Fuel Filter</li> <li>Check Filter</li> <li>Replace element on Cummins 2 cylinder air compressor if equipped with an air cleaner</li> <li>Check hoses at system and charge as needed for damage or loose connections</li> <li>Check engine coolant DCA4 concentration level. Add if needed. DCA4 is required</li> <li>Check air intake system for wear, parts or damage to piping, loose clamps, and leaks</li> <li>Check air cleaner restriction</li> <li>Check carburetor bracket and chain if necessary</li> </ul>	<ul style="list-style-type: none"> <li>Adjust valve and injectors</li> <li>Stream clean engine</li> <li>Check torque on turbocharger mounting nuts</li> <li>Check torque on engine mounting bolts</li> <li>Replace hoses as required</li> <li>Check shuttles and the weak type if required</li> </ul>	<ul style="list-style-type: none"> <li>Clean cooling system and charge coolant and antifreeze</li> <li>Check and calibrate injectors, fuel pump</li> <li>Turbocharger</li> <li>Water pump</li> <li>Fan Clutch</li> <li>Fan belt</li> <li>Fan drive pulley assembly</li> <li>Engine Vibration Damper</li> <li>Clean and calibrate 3TC hydraulic lockers</li> <li>Clean and calibrate 3TC air control valve</li> </ul>	<ul style="list-style-type: none"> <li>Check and calibrate injectors, fuel pump</li> <li>Turbocharger</li> <li>Water pump</li> <li>Fan Clutch</li> <li>Fan belt</li> <li>Fan drive pulley assembly</li> <li>Engine Vibration Damper</li> <li>Clean and calibrate 3TC hydraulic lockers</li> <li>Clean and calibrate 3TC air control valve</li> </ul>


NOTE: Refer to the appropriate sections for complete inspection and maintenance procedures.

1. The lubricating oil and lubricating oil filter element can be adjusted based on the fuel and oil consumption rates of the engine. See Section V for the Check Method.

2. Follow the manufacturer's recommended maintenance procedures for the starter, alternator, generator, batteries, electrical components, engine brake, exhaust brake, air compressor, front compressor, and fan clutch. Refer to 5-2-1-1 for address and telephone numbers.

3. At each scheduled maintenance interval, perform all previous checks in addition to the ones specified.

01801vu

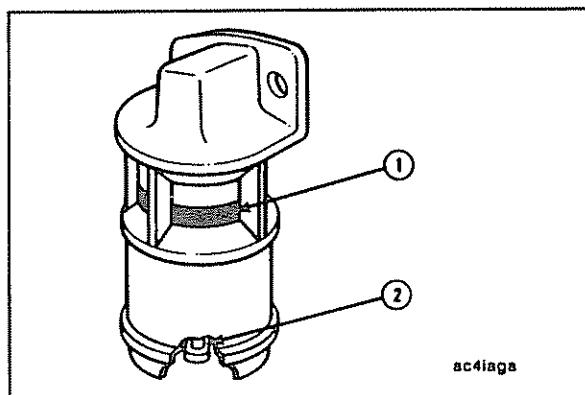

## Inlet Air Restriction Indicators

### Mechanical Indicator



A mechanical restriction indicator is available to indicate excessive air restriction through a dry-type air cleaner. This instrument can be mounted in the air cleaner outlet or on the vehicle instrument panel. The red flag (1) in the window gradually rises as the cartridge loads with dirt. After changing or replacing the cartridge, reset the indicator by pushing the reset button (2).

Restriction or vacuum indicators are to be installed as close as possible to the turbocharger air inlet in order to obtain a true indication of restrictions.


**NOTE:** Never remove the felt washer from the indicator. The felt washer absorbs moisture.

### Vacuum Indicator



Vacuum switches actuate a warning light on the instrument panel when the air restriction becomes excessive.

Air restriction on turbocharged engines **must not** exceed 635 mm [25 inches] or 46 mm [1.8 inches] of water under full power conditions.

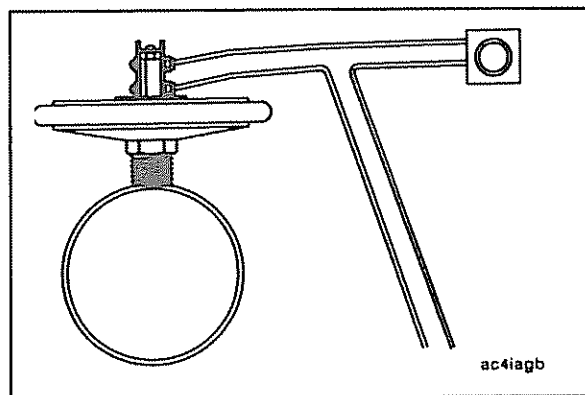

## Air Cleaner Element - Replacement



**NOTE:** The illustrations in this section show typical dry type air cleaner parts. The particular engine parts can vary.

Replace the element if the inlet restriction or vacuum at full power is found to exceed 25 inches of water. Changing filters or breaking the seal on the intake system more than necessary will result in excess dirt in the engine and **must** be avoided.

**NOTE:** Cummins Engine Co., Inc. does **not** recommend cleaning paper type air cleaner elements.

Elements that have been cleaned will clog and air flow to the engine will be restricted.

**Caution:** Holes, loose end seals, dented sealing surfaces and other forms of damage render the cleaner inoperative and require immediate element replacement.

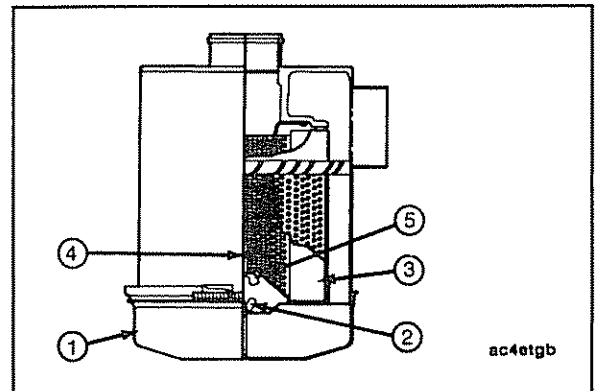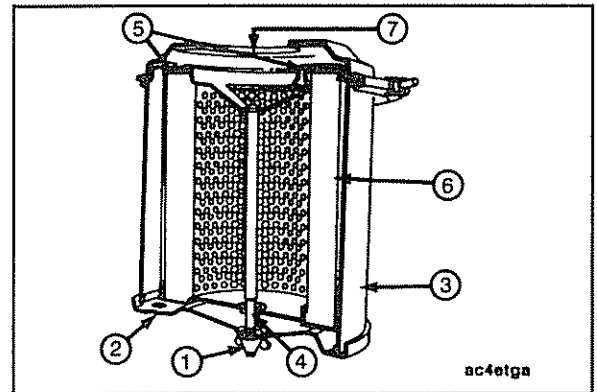


Remove the wing nut (1) that secures the bottom cover (2) to the cleaner housing (3). Remove the cover.

Pull the element (6) down from the center bolt (4).

**Caution:** Pull the cover and the element straight out when removing them from the housing to avoid damage to the element.

Remove the gasket (5) from the outlet end (7) of the housing. Inspect the gasket. Replace the gasket if necessary. Assemble the bottom cover to the cleaner housing.

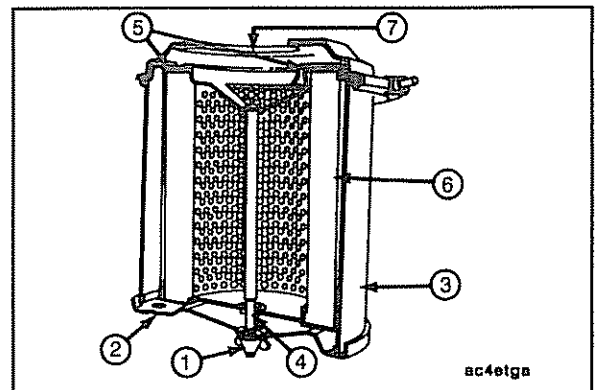



## Single - Heavy Duty Dry-Type Element - Replacement

Heavy duty air cleaners combine centrifugal cleaning with element filtering before air enters the engines.

Before disassembly, wipe dirt from the cover and the upper portion of the air cleaner.

Loosen the wing bolt, remove the band clamp securing the dust pan (1).

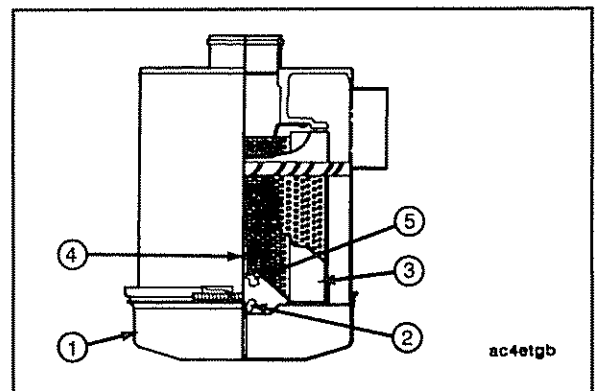

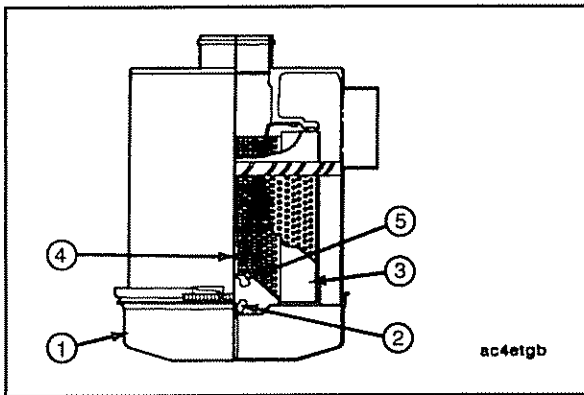

Loosen the wing nut (2). Remove the dust shield (3) from the dust pan (1). Clean the dust pan and shield.



Remove the wing nut (5) that secures the air cleaner primary element in the air cleaner housing. Inspect the rubber sealing washer under the wing nut (4). Remove the dirty cleaner element.




Install the new primary element.



Make sure the rubber sealing washer is in place under the wing nut before tightening.

Assemble the dust shield and dust pan again. Position them to the air cleaner housing and secure with the band clamp.

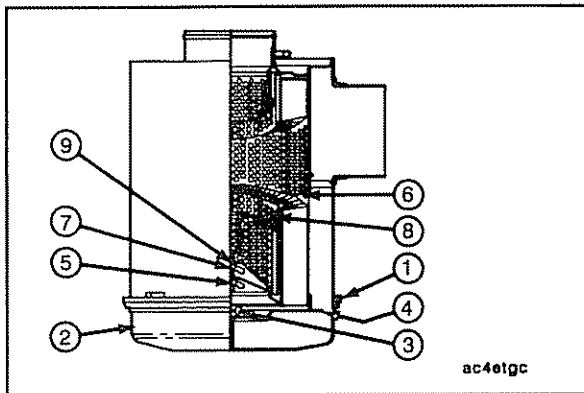


### **Dual - Heavy Duty Dry-Type Element - Replacement**

Heavy duty air cleaners combine centrifugal cleaning with element filtering before air enters the engines.

Before disassembly, wipe dirt from the cover and the upper portion of the air cleaner.


Loosen the wing nut (3), remove the band clamp (1) securing the dust pan (2).

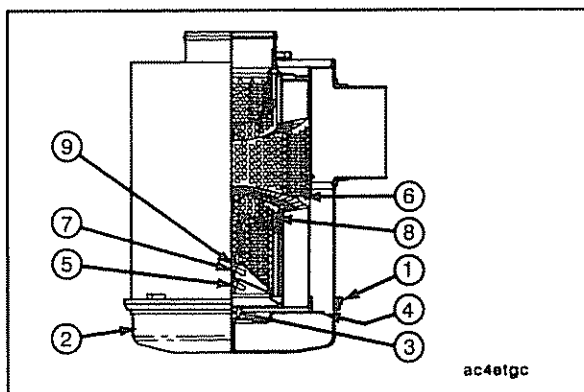

Loosen the wing nut (3). Remove the dust shield (4) from the dust pan (2). Clean the dust pan and shield.



Remove the wing nut (5) that secures the air cleaner primary element (6) in the air cleaner housing. Inspect the rubber sealing washer on the wing nut.

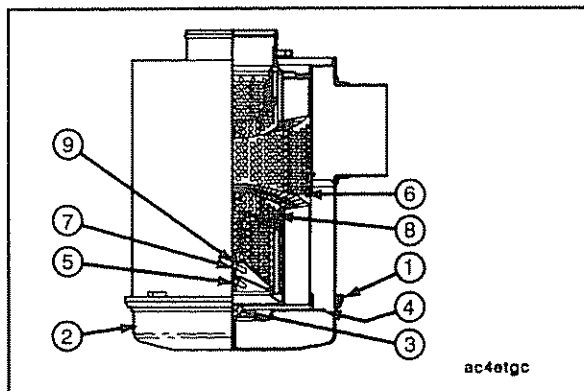

Remove the dirty primary cleaner element (6). If the inner safety element (8) is being replaced based on high intake restriction, remove the wing nut (7) and replace the inner safety element.



Install the inner safety element (8) and secure with the wing nut (7). Check the seals.


Install the dust plan (2) and band clamp (1). Operate the engine at rated speed and power and record the intake restriction.

## Cartridge Type Element - Cleaning

Loosen the wing nuts (4) on the air cleaner housing (5) to remove the pre-cleaner panel with the dust bin (6). To remove the pre-cleaner panel (2) equipped with an exhaust aspirator, loosen the U bolt clamp securing the pre-cleaner to the aspirator tubing.

Remove the dirty Pamic cartridge (3), by inserting your fingers in the cartridge opening (loosen all four corners of the cartridge, one at a time) and pulling it straight out.

With the larger cartridge, it can be necessary to break the seal along the edges of the cartridge. After the seal has been broken, pull the cartridge straight out and slightly up so the cartridge will clear the sealing frame and edges of the air cleaner housing.

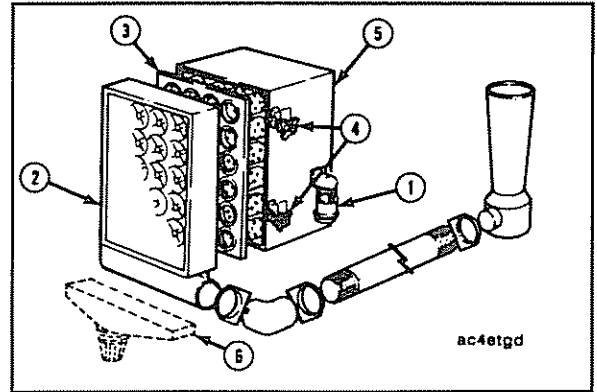


## Cleaning and Inspection

Clean the pre-cleaner openings (2) of all soot, oil film and any other objects that can become lodged in the openings. Remove any dust or dirt in the lower portion of the pre-cleaner and aspirator tubing. Inspect the inside of the air cleaner housing for foreign material.



Inspect the dirty cartridge for soot or oil. If there is soot inside the Pamic tubes, check for leaks in the engine exhaust system, exhaust blow-back into the air intake and exhaust from other equipment. If the cartridge appears oily, check for fumes escaping from the crankcase breather. Excessive oil mist shortens the life of any dry-type cartridge. Troubleshooting at this point can appreciably lengthen new cartridge life.

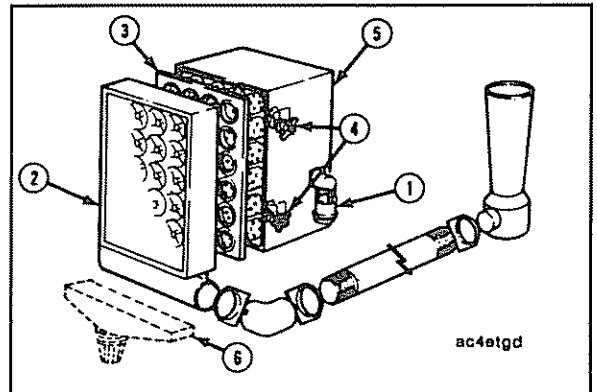


It is **not** recommended to clean and reuse the cartridge. When returned to service, life expectancy of a cleaned cartridge will be only a fraction of the original service life.

Inspect clamps and flexible hose or tubing to make sure all fittings are air tight on cleaners with exhaust aspirators.




The pre-cleaner dust (6) bin is self-cleaning.

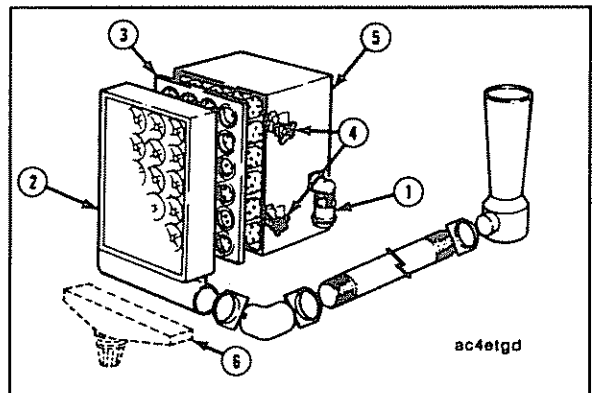


## Assembly

Inspect the new filter cartridge for shipping damage before installing.

To install a new cartridge, hold the cartridge (3) in the same manner as when removing it from the housing. Insert the clean cartridge into the housing, avoiding hitting the cartridge tubes against the sealing flange on the edges of the air cleaner housing.

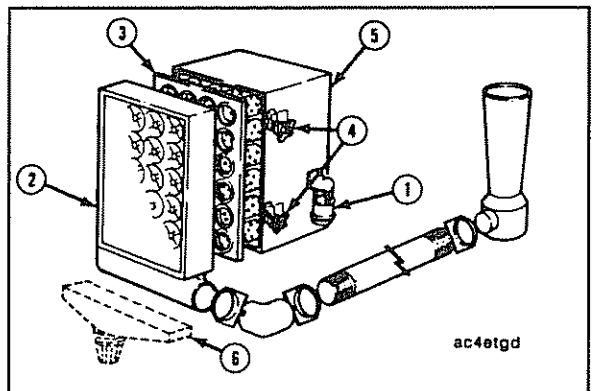


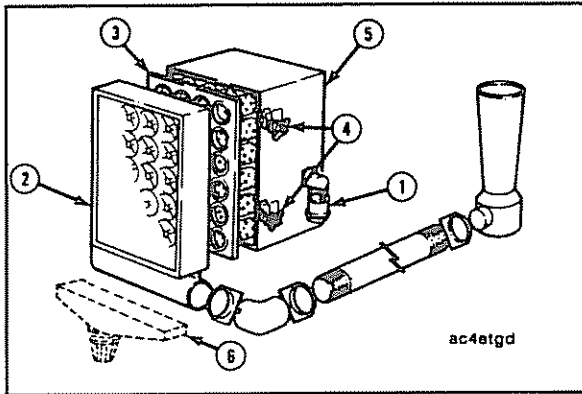

As the cleaner requires no separate gaskets for seals, care **must** be taken when inserting the cartridge to insure a proper seat within the cleaner housing. Firmly press all edges and corners of the cartridge with your fingers to effect a positive air seal against the sealing flange of the housing. The cartridge **must not** be pounded or pressed in the center to seal.

Replace the pre-cleaner panel (2) and tighten the wing nuts (4) by hand. For final tightness turn the wing nuts 1 to 1 1/2 turns with a small adjustable wrench. Do **not** tighten too much. On a pre-cleaner with an exhaust aspirator, assemble the aspirator tube to the pre-cleaner panel and tighten the U bolt.

Care **must** be taken to keep the cleaner face unobstructed.

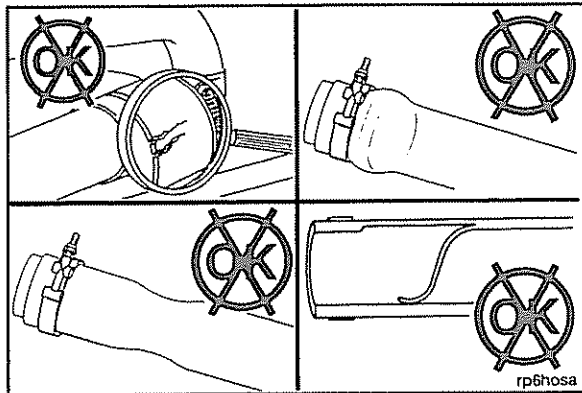

## Air Intake Hoses, Pipes, and Clamps

### Checking



Inspect the intake piping for cracked hoses, loose clamps, or punctures which can damage the engine.




Tighten or replace parts as necessary to make sure the air intake system does **not** leak.

Check for corrosion of the intake system piping under the clamps and hoses. Corrosion can allow corrosive products and dirt to enter the intake system. Disassemble and clean as required.

All hoses on the intake piping **must** be double clamped or use t-bolt type clamps.

## Air Tanks

Drain the moisture from the air system wet tank weekly.

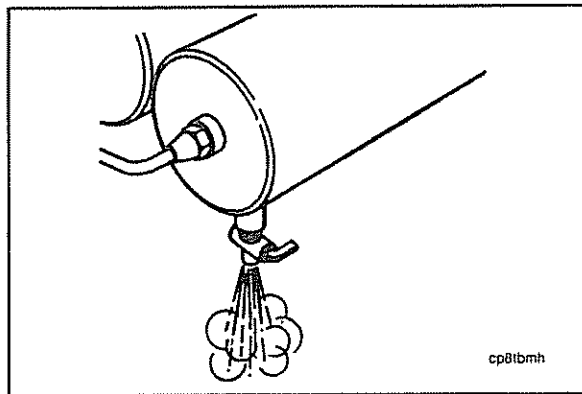

## Section 5 - Maintenance Procedures Every 250 Hours or 6 Months

### Section Contents

	Page
<b>Air Compressor Air Cleaner Element</b> .....	5-10
Bendix-Westinghouse Paper Element - Replacement .....	5-10
Bendix-Westinghouse Sponge Element - Replacement .....	5-10
Cummins Two-Cylinder Only - Replacement.....	5-10
<b>Belt Tension</b> .....	5-11
Checking.....	5-11
<b>Belts</b> .....	5-11
Checking.....	5-11
<b>Coolant Filter</b> .....	5-8
Replacement.....	5-8
<b>Cooling Fan</b> .....	5-11
Checking.....	5-11
<b>Cooling System Additives</b> .....	5-6
Checking .....	5-6
<b>Crankcase Breather Tube/Hose</b> .....	5-6
Checking/Cleaning.....	5-6
<b>Fuel Filter(s)</b> .....	5-2
Replacement.....	5-2
<b>General Information</b> .....	5-2
<b>Lubricating Oil and Oil Filter</b> .....	5-3
Changing/Replacement.....	5-3



01801v3



All checks or inspections listed under the previous maintenance intervals **must** also be performed at this time in addition to those listed under this maintenance interval.


Every 250 hours or 6 months clean the area around the fuel filter head and replace the fuel filter(s).

**NOTE:** The illustrations in this section show typical parts. The parts on your engine can look slightly different but the instructions given will apply.

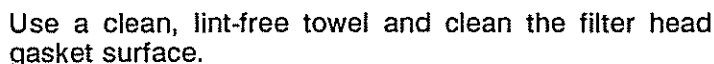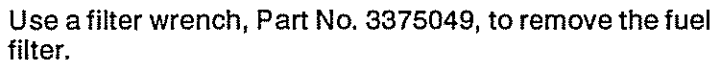

Use the correct filters for your engine.


Cummins Part No. 3315844 (without draincock)  
Cummins Part No. 3315847 (with draincock)  
Fleetguard® Part No. FF105D (with draincock)  
Fleetguard® Part No. FF105 (without draincock)

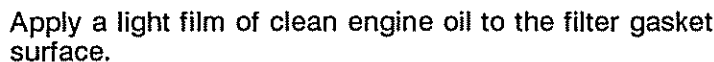

Fill the filter with clean fuel.

Install the filter on the filter head. Tighten the filter until the gasket contacts the filter head surface.

Tighten the filter per the filter manufacturer's instructions.

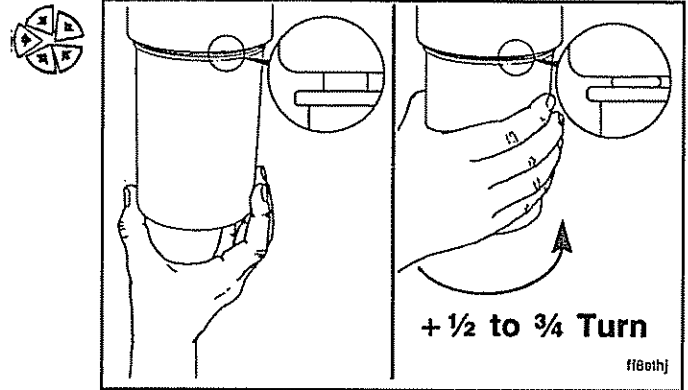


## Lubricating Oil and Oil Filter

### Changing/Replacement

**Caution:** Avoid direct contact of hot oil with your skin. Hot oil can cause personal injury.


Change the lubricating oil and oil filters at every oil change interval.


Operate the engine until the water temperature reaches 60°C [140°F]. Shut off the engine. Remove the oil drain plug. Drain the oil immediately to make sure all the oil and suspended contaminants are removed from the engine.

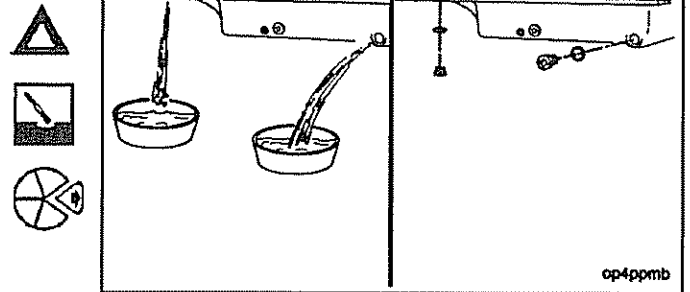

The external appearance of the full flow (1) and the bypass (2) filters is the same. The accompanying picture identifies the difference between the two filters.

**NOTE:** The full flow filter contains 1-1/2 16 inch threads. The bypass filter contains 1-3/8 16 inch threads.

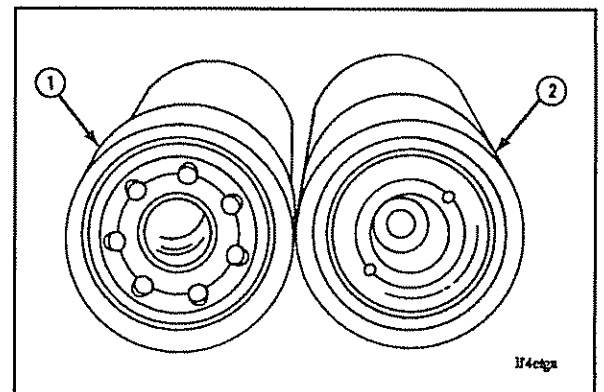

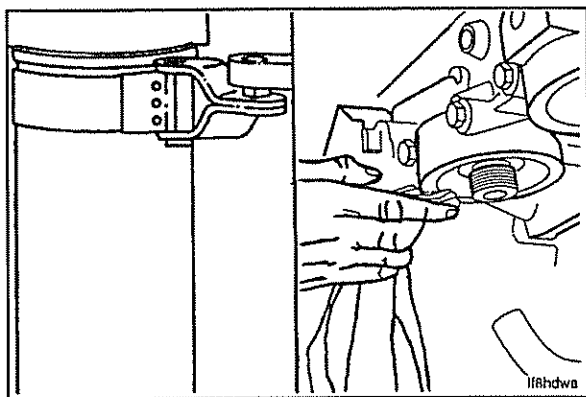

The following illustrations show the full flow oil filter. Use the same procedure when changing the bypass oil filters. Clean the area around the lubricating oil filter head. Clean the gasket surface of the filter head.

**NOTE:** The o-ring can stick on the filter head. Make sure the o-ring is removed.

Cut all the way around the top of a full flow filter using a pipe cutter or hack saw. Inspect the pleated paper element for metal debris. Metal debris in the filter can reveal impending engine failure. If debris is found, find the reason for the debris and make the needed repairs.

Use an oil filter wrench, Part No. 3375049, or equivalent. Remove the full flow oil filters.

Discard the filters if they are **not** needed for a failure analysis.

Use the correct oil filter for your engine.



#### Full Flow Filter

K38 (4 required)  
Cummins Part No. 3313279  
Fleetguard® LF-670

K50 (5 required)  
Cummins Part No. 3313287  
Fleetguard® LF-3325

#### Bypass Filter

K38 and K50 (2 required)  
Cummins Part No. 3313283  
Fleetguard® Part No. LF-777

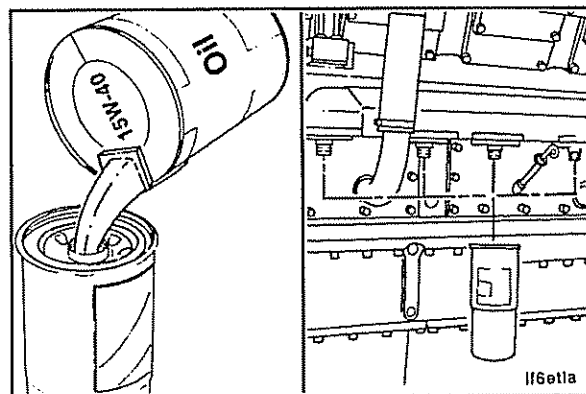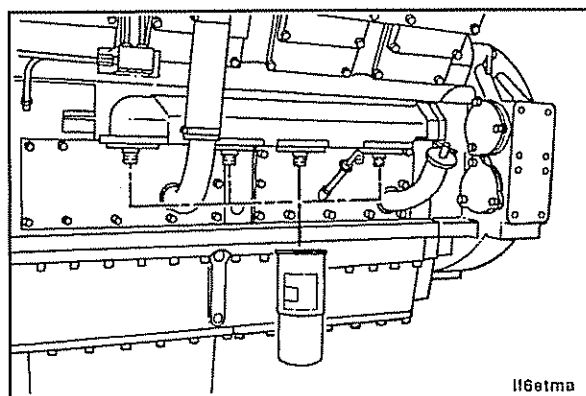


**Caution:** Fill the oil filters with clean lubricating oil. The lack of lubrication during the delay until the filters are pumped full of oil is harmful to the engine.



Apply a light film of lubricating oil to the gasket sealing surface **before** installing the new filters.

**Caution:** Mechanical overtightening can distort the threads or damage the filter element seal.


Install the filter as specified by the filter manufacturer. The tightening instructions are normally printed on the outside of the filter.

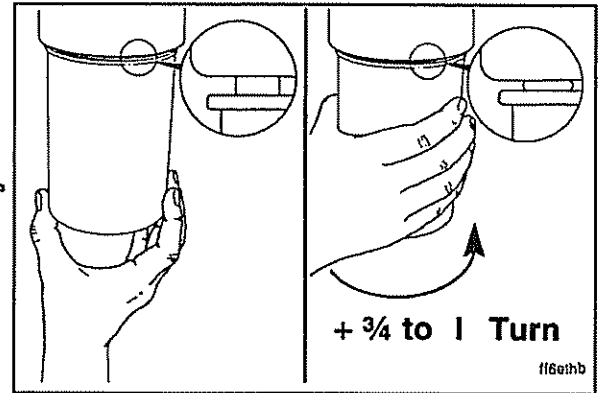

Check and clean the oil drain plug threads and the seal surface.

Install and tighten the oil drain plug.


**Torque Value:** 100 N•m [75 ft-lbs]

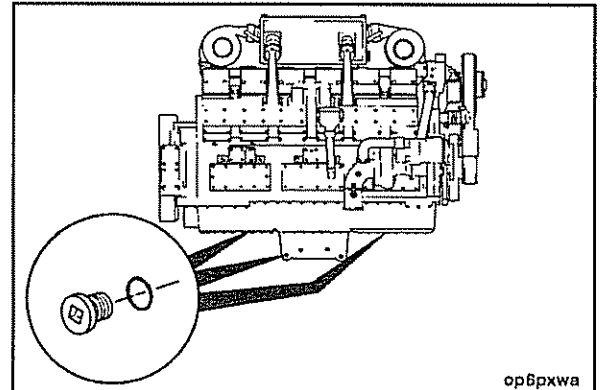


**NOTE:** Use a high quality 15W-40 multi-viscosity oil such as Cummins Premium Blue, or its equivalent in Cummins engines. Choose the correct oil for your operating climate as outlined in Section V of this manual.



Fill the engine with clean oil to the correct level. Total system capacity including filters is listed in Section V of this manual.

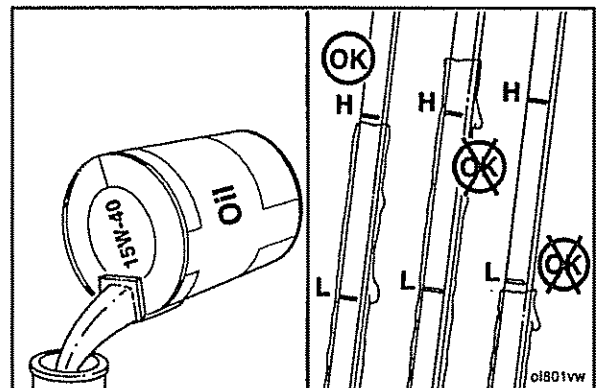


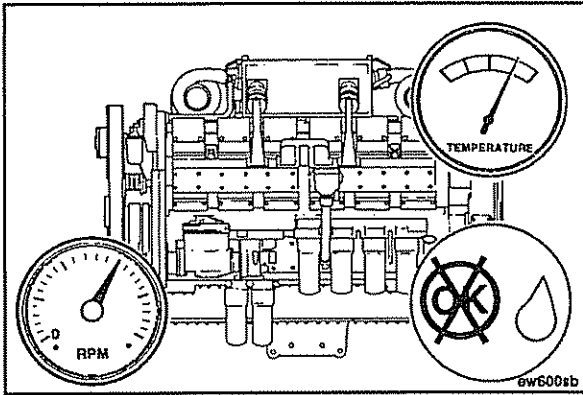

**Caution:** Before starting the engine, complete the steps given in Starting Procedure After Extended Shutdown in Section 1 to make sure the engine receives correct lubrication. Lack of lubrication will damage the engine.




Operate the engine at idle speed to inspect for leaks at the filters and the drain plug.

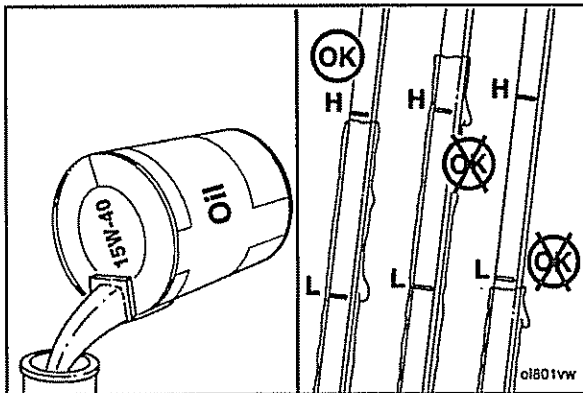

Shut off the engine. Wait approximately 5 minutes to let the oil drain from the upper parts of the engine. Check the oil level again.

Add oil as necessary to bring the oil level to the high mark (H) on the dipstick.

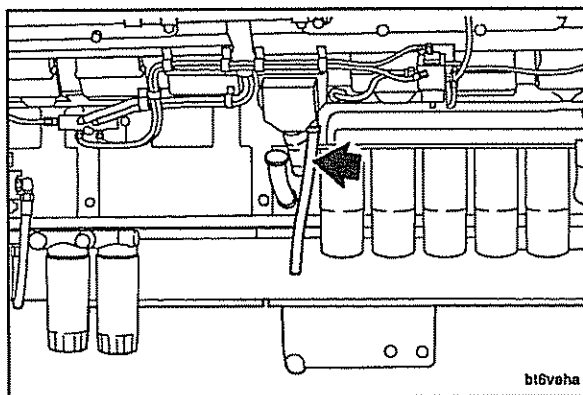

## Crankcase Breather Tube/Hose Checking/Cleaning




Every 250 hours or 6 months, check and clean the crankcase breather tube/hose.

The tube/hose is to be removed and checked internally for obstructions or sludge buildup.



If the tube/hose is blocked, it is to be cleaned or replaced to prevent excess crankcase pressure buildup.

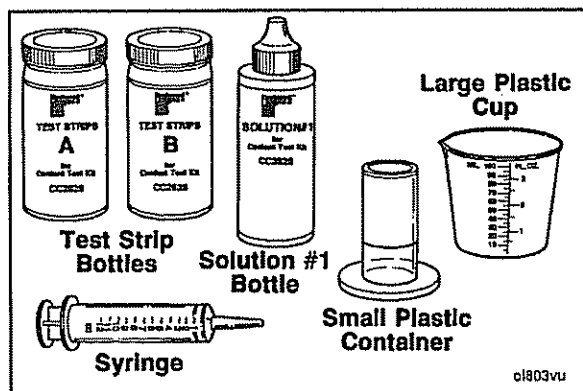

## Cooling System Additives Checking




Check the DCA4 concentration level whenever coolant is added to the cooling system between filter changes.

Use Fleetguard® coolant test kit, CC2626, to check the concentration level. Instructions are included with the test kit.


**Warning:** Check the coolant level **ONLY** when the engine is stopped. Wait until the coolant temperature is below 50°C [120°F] **BEFORE** removing the pressure cap. Failure to do so can cause personal injury from heated coolant spray.

Operate the engine and check for coolant leaks.

After the air has been purged from the system, check the coolant level again.

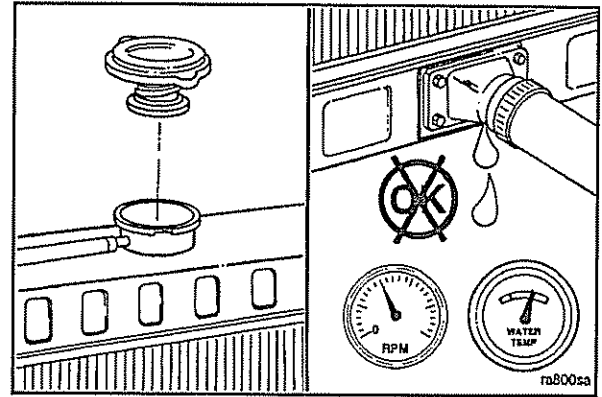


Cooling system additives (DCA4 or equivalent) are used to prevent the buildup of corrosion and scale deposits in the cooling system.

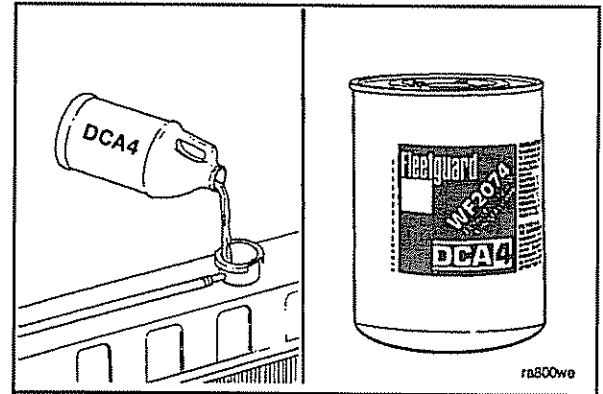



**Caution:** Under-concentration of coolant additives can result in liner pitting and system corrosion. Over-concentration can result in water pump seal leakage.

The recommended concentration level of supplemental coolant additives is 1.5 per U.S. gallon of coolant. The additive level **must never** drop below 1.2 units or exceed 3 units per gallon of coolant.

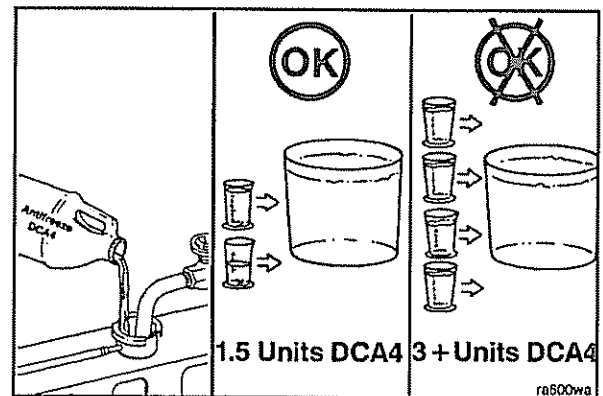

**NOTE:** DCA4 is compatible with all permanent-type anti-freeze except Methoxy Propanol. If Methoxy Propanol anti-freeze is used, reduce the amount of DCA4 by one-third. This will prevent inhibitor loss due to precipitation, caused by chemical incompatibility.

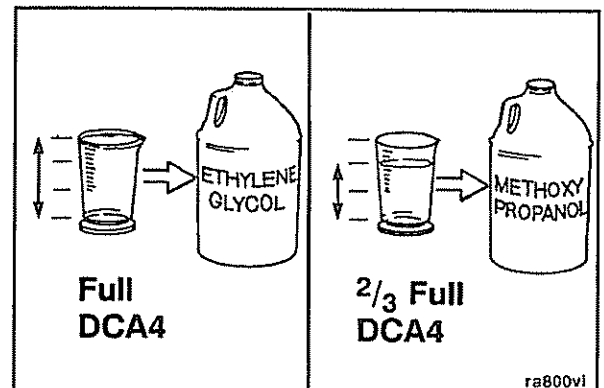

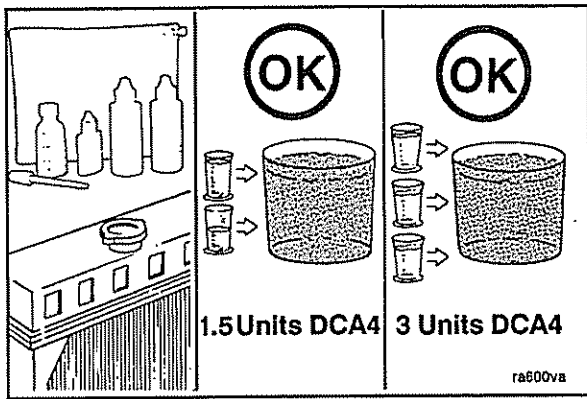


When changing the coolant, the initial DCA4 (or equivalent) concentration **must** be between 1.5 and 3 units per 3.8 liters [1 U.S. gallon] of coolant (initial charge).

**NOTE:** The cooling system **must** be clean before adding DCA4 (or equivalent).

Refer to Section V for cleaning instructions.

If coolant is added between drain intervals, additional DCA4 (or equivalent) will be required unless the added coolant is precharged with additives as described in this section.

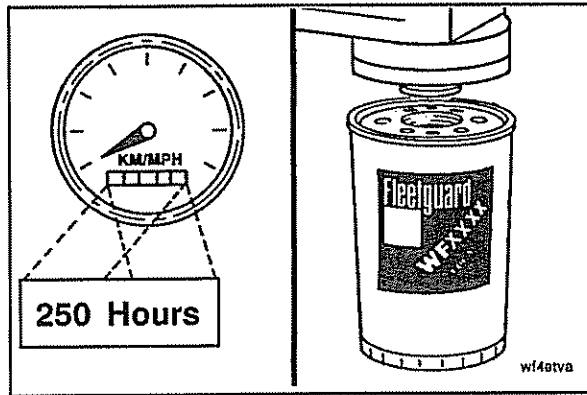


## Coolant Filter

Use the correct Fleetguard® coolant filter to maintain the correct DCA4 concentration in the system.

Maintain the correct concentration by changing the service coolant filter at each oil drain interval.

Refer to Coolant Recommendations/Specifications in Section V for the Fleetguard® Coolant Filter listing.

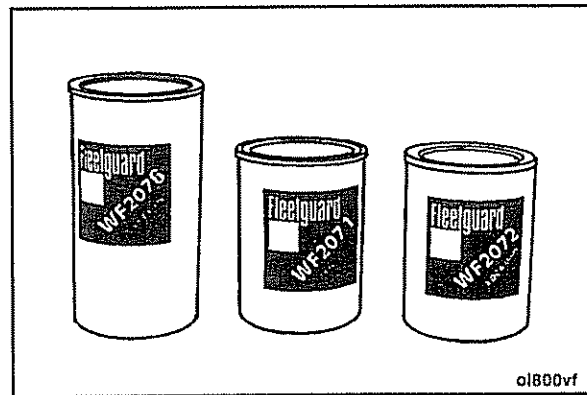


## Replacement

Change the service coolant filter at every oil and filter change interval.


The correct service coolant filter to be used is determined by the total cooling system capacity and other operational factors.

Refer to the DCA4 Maintenance Guide in Section V for the correct filter selection.

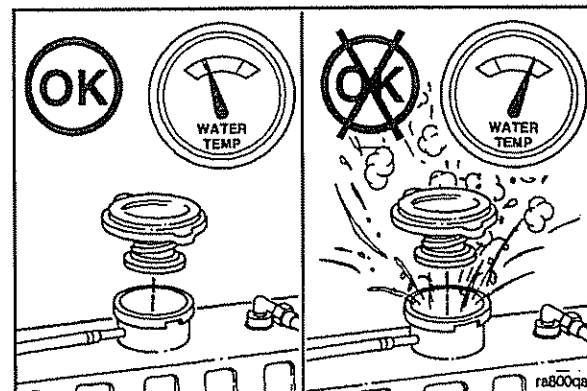


**Warning:** Do NOT remove the radiator cap from a hot engine. Hot steam will cause serious personal injury. Remove the coolant system pressure cap and close the shutoff valve(s), if equipped, before removing the coolant filter. Failure to do so can result in personal injury from heated coolant spray.

Push in the knob on the filter head or close the gate valve (1) if so equipped.

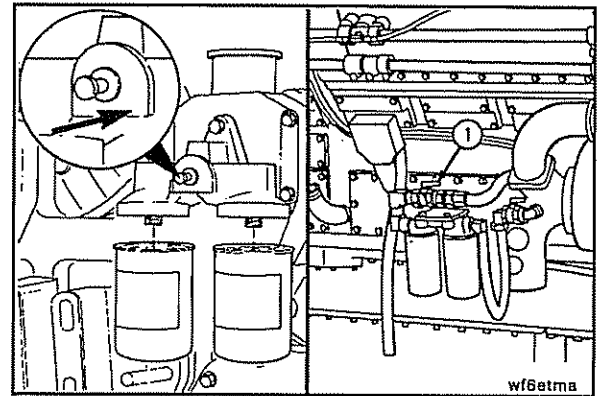


Use engine oil and lubricate the seal on the new filter.


**NOTE:** Do **not** allow oil to get in the filter, it will adversely affect the DCA.

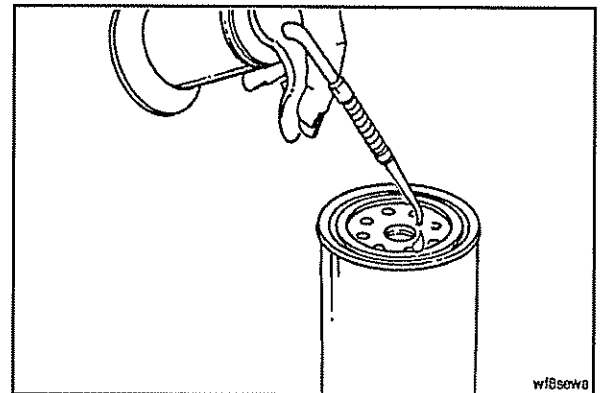


Install the new coolant filter. Turn the filter until the seal touches the filter head. Turn the filter an additional 1/2 to 3/4 of a turn after contact.

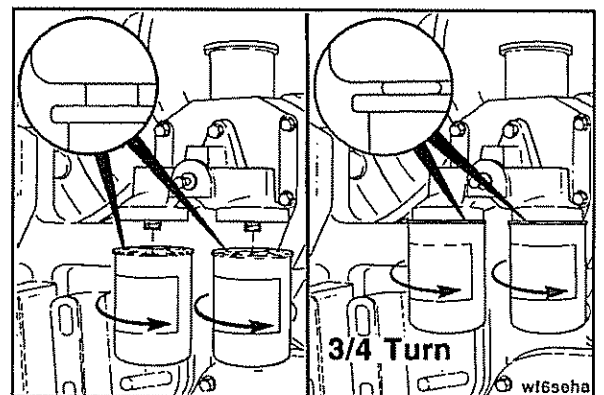

Pull the knob on the filter head out or open the gate valve (1).

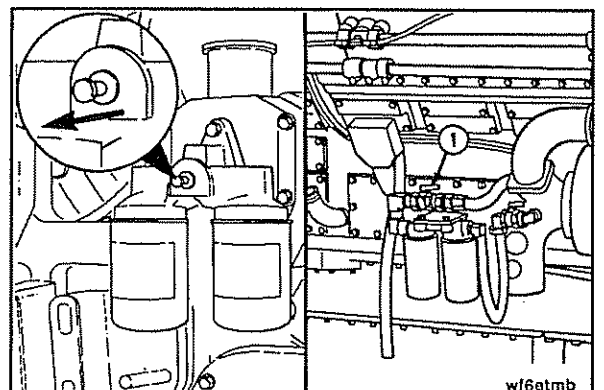

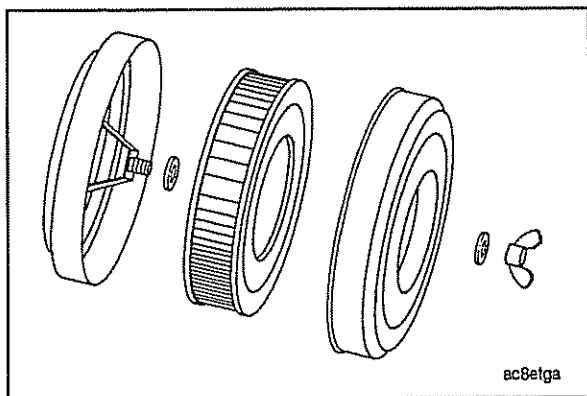


## Air Compressor Air Cleaner Element

**NOTE:** If the air compressor inlet is plumbed to the engine intake air system downstream of engine intake air filter, an air compressor air cleaner element will **not** be present.

### Cummins Two-Cylinder Only - Replacement


Every 250 hours or 6 months replace the air compressor air cleaner element. Remove the wing nut, the cover, the housing, and the element. Clean the cover and the housing with a clean cloth. Inspect the rubber gasket on the center bolt. Replace if damaged.

Install a new element, Fleetguard® Part No. AF-251 or Cummins Part No. 256837, in the front cover and assemble over the center bolt. Use your fingers to install and tighten the wing nut.

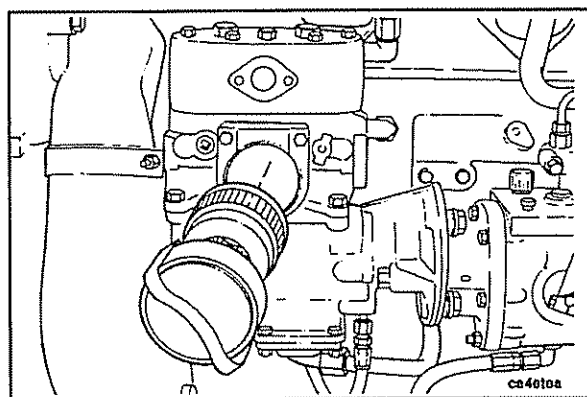

### Bendix-Westinghouse Paper Element - Replacement

Remove the breather cover and element. Clean by reverse flushing with compressed air. Assemble on the compressor. Discard the element if it is damaged or can **not** be cleaned.

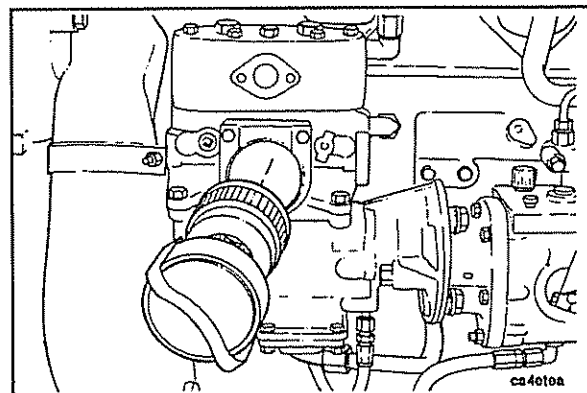

### Bendix-Westinghouse Sponge Element - Replacement

Remove the breather from the air compressor. Disassemble the breather, wash all metal parts in solvent and blow dry with compressed air. Wash the element in solvent. Remove all solvent from the element. Dip the element in clean engine oil and squeeze excess oil from the element.



**NOTE:** If other compressors are used, follow the manufacturer's service requirements.


## Belts

### Checking

Visually check the belts every 250 hours or 6 months. Replace the belts that are cracked or frayed. Adjust belts that have a glazed or shiny surface which indicates belt slippage. Correctly installed and tensioned belts will show even pulley and belt wear.

Belt damage can be caused by:

- Incorrect tension
- Incorrect size or length
- Pulley misalignment
- Incorrect installation
- Severe operating environment
- Oil or grease on the belts

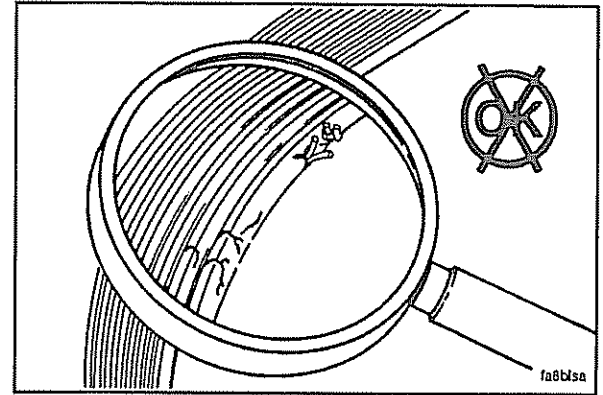

### Belt Tension


#### Checking

Measure the belt tension in the center span of the pulleys. Refer to the manufacturer's recommendations for the use of the belt tension gauge. Refer to Section V in this manual for the gauge and tension information.

Refer to the Drive Belt Tension, Section V, for the correct gauge and tension value for the belt width used.

The tension of the fan belt on an engine with a fan idler pulley (refer to Section E, page 11) need **not** be measured. The spring loaded idler used on this design maintains the correct belt tension.

An engine with a two pulley fan drive (one which does **not** have an idler pulley) **must** have the fan belt tension measured.

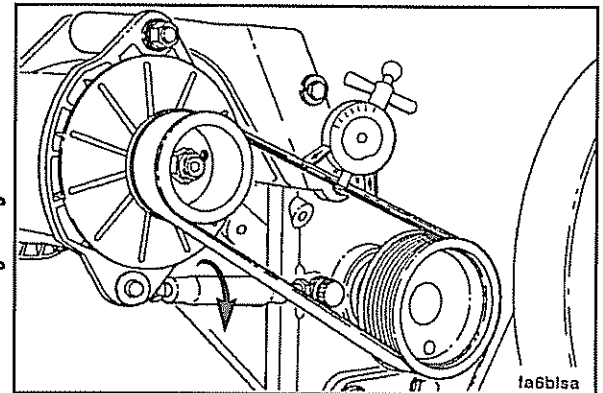


### Cooling Fan

#### Checking

**Warning: Personal Injury can result from a fan blade failure. Never pull or pry on the fan. This can damage the fan blade(s) and cause fan failure.**

**NOTE:** Rotate the crankshaft by using the engine barring gear only.

Check the cooling fan every 250 hours or 6 months. Check for cracks, loose rivets, and bent or loose blades. Check the fan to make sure it is securely mounted. Tighten the capscrews if necessary. Replace any fan that is damaged.

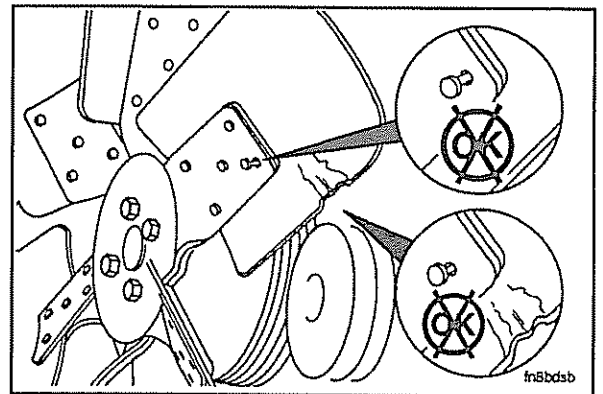

Refer to Section A, Fan Belt, of this manual for adjustment procedures.




## Section 6 - Maintenance Procedures Every 1500 Hours

### Section Contents

	Page
<b>Batteries</b> .....	6-22
Checking.....	6-22
<b>Cold Start Aids</b> .....	6-23
Checking.....	6-23
<b>Crankshaft End Clearance</b> .....	6-21
Inspection .....	6-21
<b>Engine Mounting Bolts and Nuts</b> .....	6-24
Checking.....	6-24
<b>Engine Protection System</b> .....	6-23
General Information .....	6-23
<b>Fan Idler Pivot Arm</b> .....	6-20
<b>Fan Idler Pulley Tensioner Adjustment</b> .....	6-20
Engines With Control Rod Spring.....	6-21
Engines With Shock Absorber.....	6-21
Engines With Solid Control Rod.....	6-20
<b>Front Engine Support</b> .....	6-24
<b>General Information</b> .....	6-2
<b>Heat Exchanger Zinc Plugs (Marine Only)</b> .....	6-21
Checking.....	6-21
<b>Hoses</b> .....	6-20
Checking/Replacement .....	6-20
<b>Steam Clean the Engine</b> .....	6-2
<b>Valves and Injectors</b> .....	6-2
General Information - Checking and Adjustment .....	6-2
PT (type D) Injector and Valve Set Procedures .....	6-4
STC or HVT OBC Valve and Injector Set Procedure .....	6-12

## General Information

All checks or inspections listed under the previous maintenance intervals **must** also be performed at this time in addition to those listed under this maintenance interval.

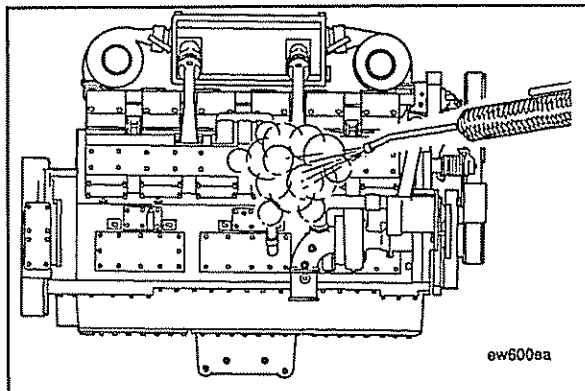

### Steam Clean the Engine



**Caution:** Cover all engine openings and electrical equipment to prevent water damage.



Steam clean the engine **before** conducting any 1500 hour maintenance. Steam is the best method of cleaning a dirty engine or a piece of equipment. If steam is **not** available, use a solvent to wash the engine.

Protect all electrical components, openings, and wiring from the full force of the cleaner spray nozzle.


## Valves and Injectors

### General Information - Checking and Adjustment


Valves and injectors **must** be correctly adjusted for the engine to operate efficiently. Valve and injector adjustment **must** be performed using the values listed in this section.

Cummins engines in most applications will **not** experience significant valve and/or injector train wear after an initial adjustment is made at 1500 hours. After this adjustment, Cummins recommends the valves and injectors **not** be adjusted again until the 6000 hour or 2 year injector calibration interval. Because injector train hardware is typically mixed between cylinders during injector replacement, Cummins recommends to adjust valves and injectors 1500 hours after all injector replacements.


1. Engine firing order:  
K38                                      1R-6L-5R-2L-3R-4L-6R-1L-2R-5L-4R-3L  
K50 Standard                        1R-1L-3R-3L-7R-7L-5R-5L-8R-8L-6R-6L-2R-2L-4R-4L  
K50 Revised                         1R-1L-3R-3L-2R-2L-5R-4L-8R-8L-6R-6L-7R-7L-4R-5L
2. Cylinders are numbered from the front gear cover end of the engine. To determine the right and left banks on a K38 and K50 engine, stand at the rear of the engine and face the front. (The left bank of these engines is the fuel pump side.)
3. Two crankshaft revolutions are required to adjust all of the valves and the injectors.
4. Each cylinder has three rocker levers. On the left bank (fuel pump side of the engine), the lever nearest to the rear of the engine is the intake lever. On the right bank, the exhaust valve is nearest to the rear. The center lever is the injector lever.
5. One pair of valves and one injector are adjusted at each pulley index mark before rotating the engine to the next index mark.
6. There are two methods for adjusting the injectors on K38 and K50 engines. If the engine has STC (Stepped Timing Control) or HVT injectors, the outer base circle (OBC) method is used. If the engine has PT (type D) injectors, the injectors are set by adjusting the travel.
7. If the engine contains PT (type D) injectors, the valves and injectors on the same cylinder are adjusted at the same index mark.
8. All KTTA38 and 50 engines have STC injectors. Some KTA38 and 50 engines have STC injectors.
9. All KT38 and most KTA38 and 50 engines have PT (type D) injectors.
10. The KTA38-G3, KTA50-G3, KTA50-G4, and KTTA50-G2 all use Premium K STC injectors. Premium K STC injectors are similar in appearance to Full Top Stop STC injectors, but the total plunger travel is different. Both the Premium K STC injector and the Full Top Stop STC injector are adjusted by the OBC Injector set method.
11. Instructions for adjusting both types of injectors (PT (type D) and STC or HVT) are included in the Injector, Adjust

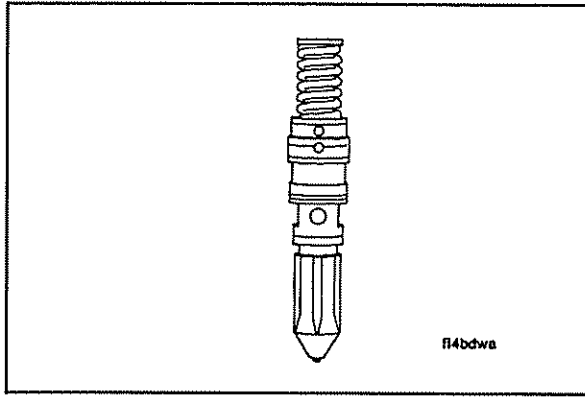


PT (type D) Injector

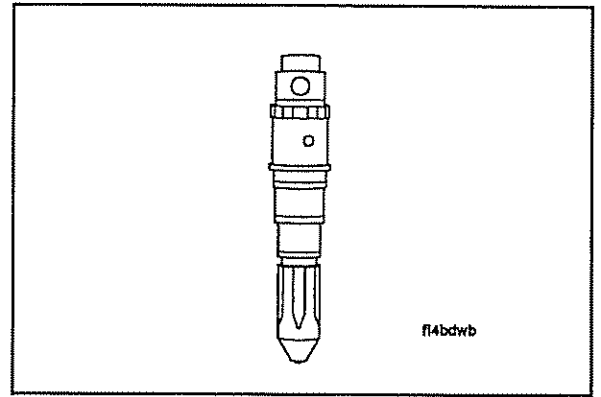

Early STC/HVT Injector

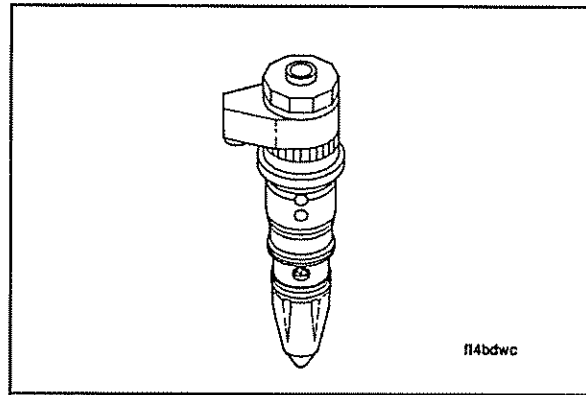


Full Top Stop STC Injector  
(Premium K Injector is similar.)

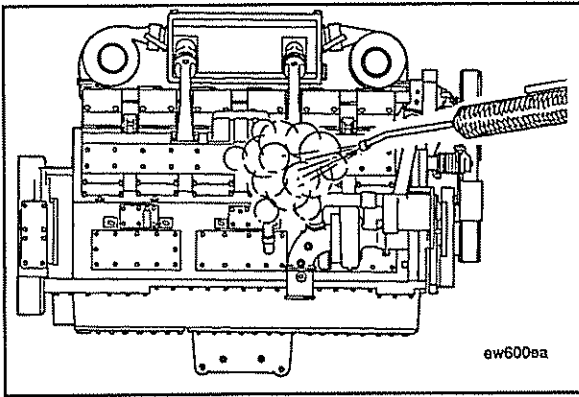


### PT (type D) Injector and Valve Set Procedures



If you have **not** previously cleaned the engine, steam clean the engine now to prevent dirt from entering the engine when the valve covers are removed. Refer to Steam Clean the Engine in this section of the manual.

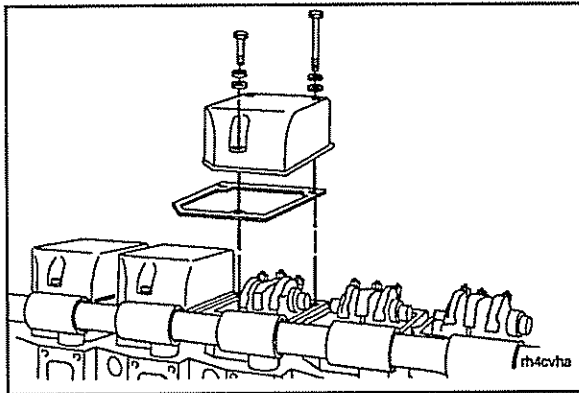


Remove the rocker lever covers and all related components.

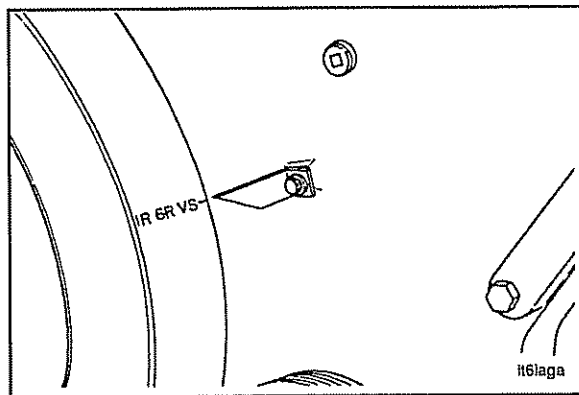

K38 and K50 engines have valve and injector adjustment marks in **three** locations.

Valve and injector adjustment marks are on the vibration damper. The marks **must** be aligned with the pointer.

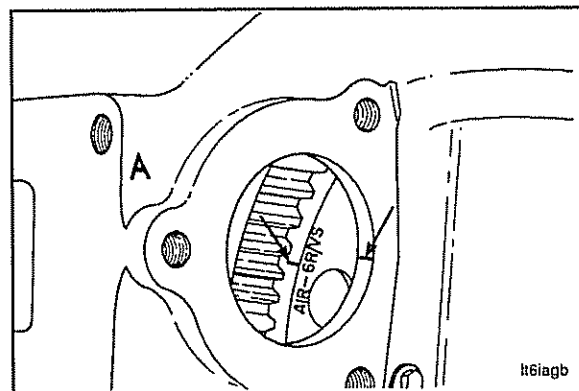

For valve and injector adjustment marks on the flywheel with the engine barring device located on the **right** bank:

The starter bore cover **must** be removed to see the marks.




**Caution:** When using this index mark, the marks on the flywheel that begin with an A must be used or the valves and injectors will not be adjusted correctly, causing damage to the push rods.

For valve and injector adjustment marks on the flywheel with the engine barring device located on the **left** bank:

The starter bore cover **must** be removed to see the marks.

**Caution:** When using this Index mark, the marks on the flywheel that begin with a C must be used or the valves and injectors will not be adjusted correctly, causing damage to the push rods.

This illustration also shows the engine barring device. To use the device, remove the clip and push the device shaft **toward** the flywheel. The barring device **must** be rotated **counterclockwise** to turn the flywheel and crankshaft in the direction of normal rotation.

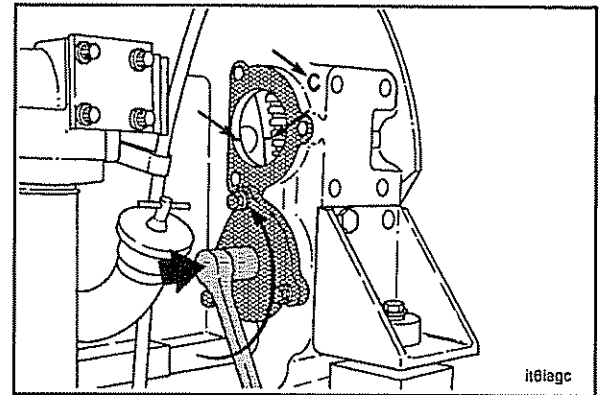

This artwork displays the Firing Order for ALL K38 engines.



### K38 Firing Order

1R-6L-5R-2L-3R-4L  
→ 6R-1L-2R-5L-4R-3L

ci600wa

This artwork displays the standard Firing Order for all K50 engines which use PT (type D) injectors.



### K50 Firing Order

1R-1L-3R-3L-7R-7L-5R-5L  
→ 8R-8L-6R-6L-2R-2L-4R-4L

ci600wb


Direction of normal rotation for K38 and K50 engines is **clockwise** when viewing the **front** of the engine.


VS represents the valve set. Ignore any TC (top center) marks while setting the valves and injectors.

#### Determine the Cylinder In Position for Valve Set

The crossheads and valves are ready to be adjusted on the cylinder that has all the valves closed.

Check the two cylinders shown on the VS mark.

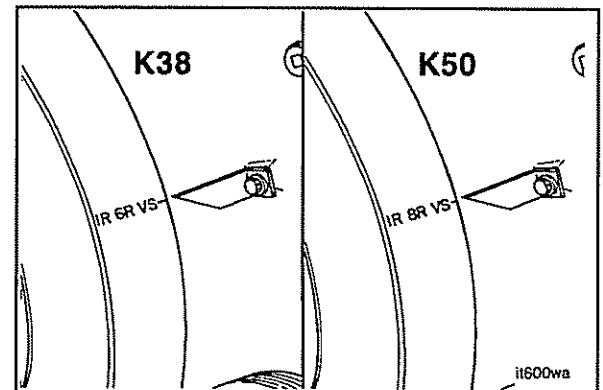

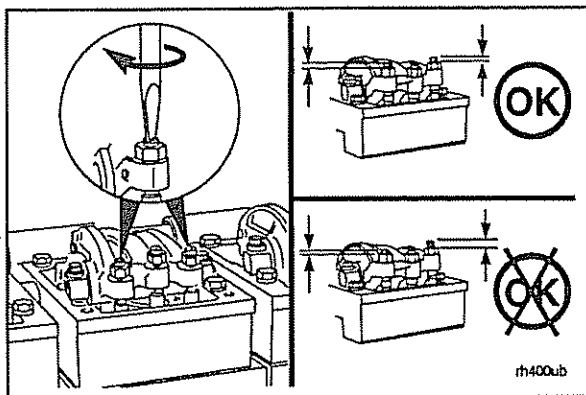

If the rocker lever assemblies have been removed, use this step to determine the cylinder to set.


All adjusting screws **must** be loose on all cylinders, and the push rod **must** remain in alignment.

**NOTE:** Perform this step on both cylinders to be checked.

Hold both rocker levers against the crossheads. Turn the adjusting screws until they touch the push rods. Turn the locknuts until they touch the levers.

The cylinder with the adjusting screws that are nearly the same height (intake screw can be up to two threads above the exhaust) is ready for valve adjustment. The second cylinder that is **not** ready for adjustment will have the adjusting screw for the exhaust valves more than five threads above the intake screw.

The push rods will be close to the same height above the top of the rocker lever housing on the cylinder ready for valve adjustment.

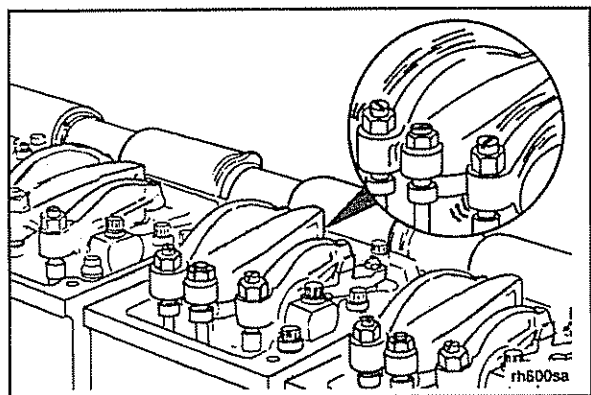

If the rocker levers have **not** been removed, wiggle the valve rocker levers on the two cylinders in question. The crossheads and valves on the cylinder where both levers feel loose are ready to adjust.

**Caution:** Use the correct chart for the engine being serviced or the parts will be damaged.

After identifying the cylinder with the valves ready to be adjusted, use the following charts for the sequence. The procedure and specifications for adjusting the crossheads, valves and injectors are after the charts.

The following charts give the crosshead, valve and injector adjustment sequence.


**NOTE:** Adjustment can begin on any valve set mark. In our example, assume the **1R-6R** or **1R-8R** marks are aligned and the adjusting screw height for the valves on the cylinder No. 1 **right** bank are closed and ready to adjust.

**K38 PT (type D) Valve and Injector Adjustment Chart**

<b>VS MARK</b>	<b>VALVES CLOSED ON CYLINDER NUMBER</b>	<b>ADJUST VALVES AND INJECTORS ON CYLINDER NUMBER</b>
1R-6R VS	1 RB	1 RB
6L-1L VS	6 LB	6 LB
5R-2R VS	5 RB	5 RB
2L-5L VS	2 LB	2 LB
3R-4R VS	3 RB	3 RB
4L-3L VS	4 LB	4 LB
1R-6R VS	6 RB	6 RB
6L-1L VS	1 LB	1 LB
5R-2R VS	2 RB	2 RB
2L-5L VS	5 LB	5 LB
3R-4R VS	4 RB	4 RB
4L-3L VS	3 LB	3 LB

**K50 PT (type D) Valve and Injector Adjustment Chart**

<b>VS MARK</b>	<b>VALVES CLOSED ON CYLINDER NUMBER</b>	<b>ADJUST VALVES AND INJECTORS ON CYLINDER NUMBER</b>
1R-8R VS	1 RB	1 RB
1L-8L VS	1 LB	1 LB
3R-6R VS	3 RB	3 RB
3L-6L VS	3 LB	3 LB
2R-7R VS	7 RB	7 RB
2L-7L VS	7 LB	7 LB
4R-5R VS	5 RB	5 RB
4L-5L VS	5 LB	5 LB
1R-8R VS	8 RB	8 RB
1L-8L VS	8 LB	8 LB
3R-6R VS	6 RB	6 RB
3L-6L VS	6 LB	6 LB
2R-7R VS	2 RB	2 RB
2L-7L VS	2 LB	2 LB
4R-5R VS	4 RB	4 RB
4L-5L VS	4 LB	4 LB

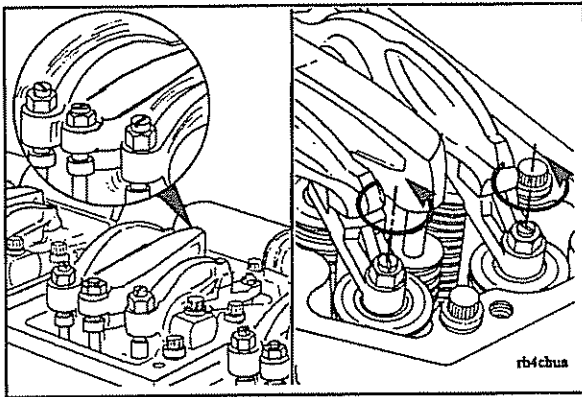


### Crossheads - Adjustment

**NOTE:** Crosshead adjustment **must** always be made before attempting to adjust the valves.

Adjust the crossheads on the cylinder that has both valves closed.

Loosen the crosshead adjusting screw locknuts on the intake and exhaust valve crossheads.

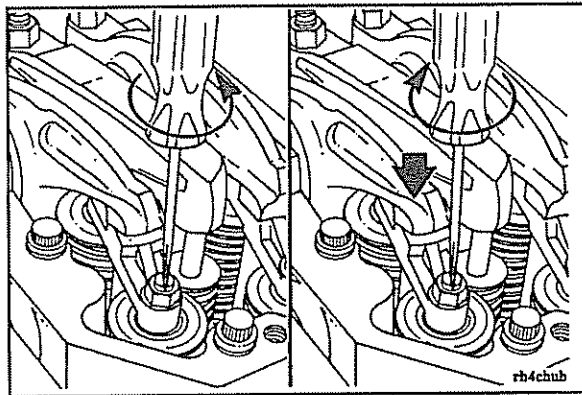


Use the following procedure to adjust both the intake and the exhaust crossheads.

Turn the adjusting screw out at least one turn.

Hold the crosshead down against its guide.


Turn the adjusting screw in until it touches the top of the valve stem but does **not** raise the crosshead.

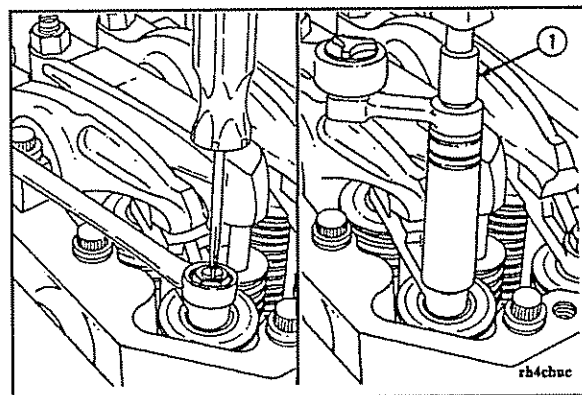

Hold the adjusting screw in this position. The adjusting screw **must not** turn when the lock nut is tightened to its torque value. Tighten the lock nut. The following torque values are given with and without Part No. ST-669 Torque Wrench Adapter (1):



	Torque Values	
	N•m	ft-lb
With Adapter	35	25
Less Adapter	40	30

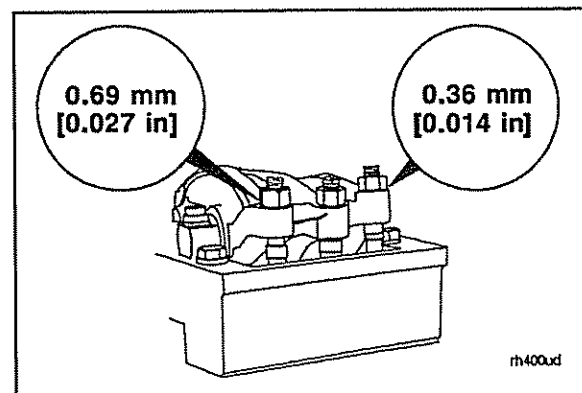


### Valves - Adjustment




Valve Adjustment (Initial Set)		
mm		In
0.69	Exhaust	0.027
0.36	Intake	0.014

Select a feeler gauge for the correct valve lash specification. Insert the gauge (2) between the rocker lever and the crosshead.

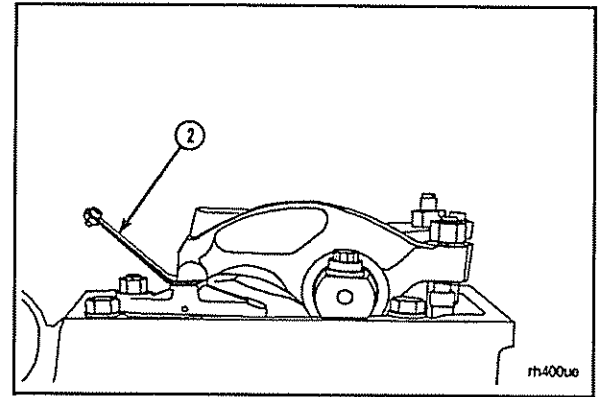

Two different methods for establishing valve lash clearance are described below. Either method can be used; however, the torque wrench method has proven to be the most consistent.

- a. **Torque Wrench Method:** Use Part No. 3376592 Inch Pound Torque Wrench and tighten the adjusting screw to 0.68 N•m [6 in-lb] torque.
- b. **Feel Method:** Use a screwdriver and turn the adjusting screw ONLY until the lever touches the feeler gauge.

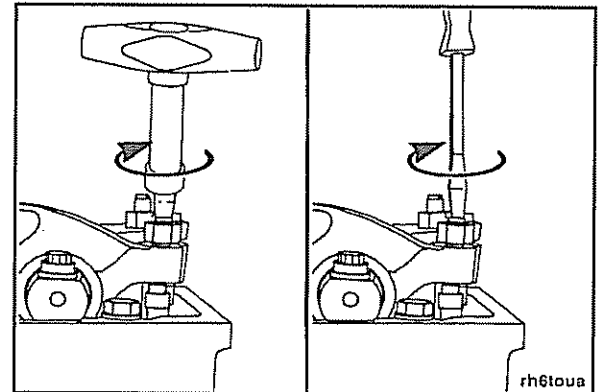

The adjusting screw **must not** turn when the locknut is tightened.

Tighten the locknut to the value indicated below.

With Torque Wrench  
Adapter, Part No.  
ST-669 (1)

45 N•m [35 ft-lb]


Without Adapter




60 N•m [45 ft-lb]

The feeler gauge **must** slide backward and forward with only a slight drag.

Attempt to insert a feeler gauge that is 0.03 mm [0.001 inch] thicker. The valve lash is **not** correct when the thicker gauge will fit.

Repeat the adjustment process until the clearance is correct on both the intake and the exhaust valves on the cylinder being adjusted.

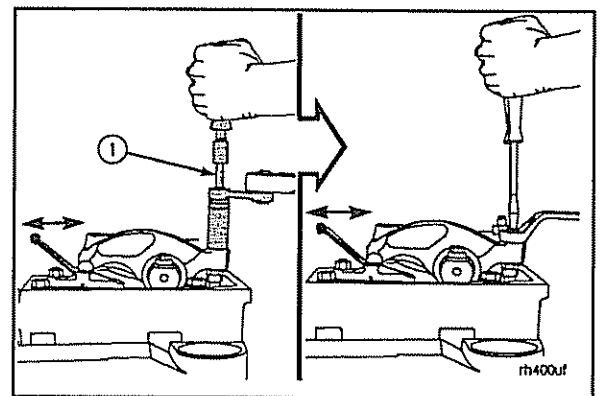

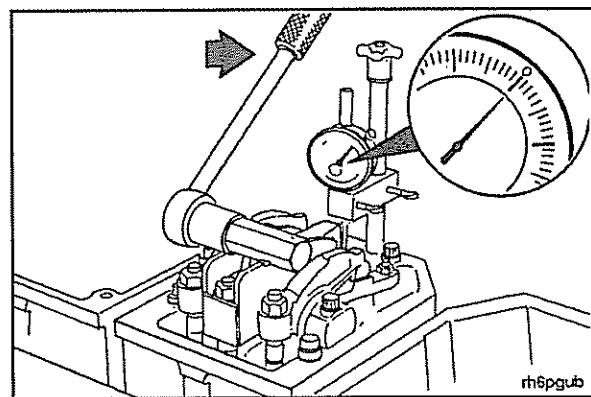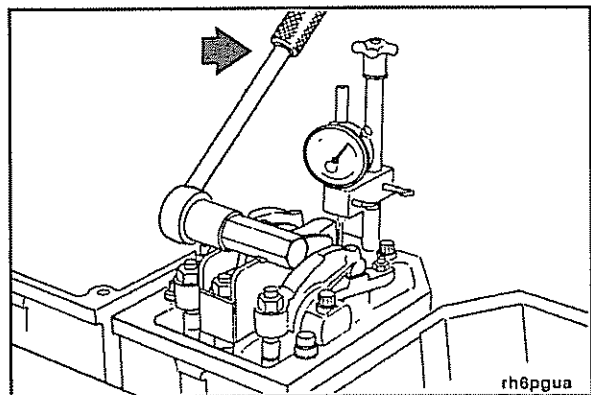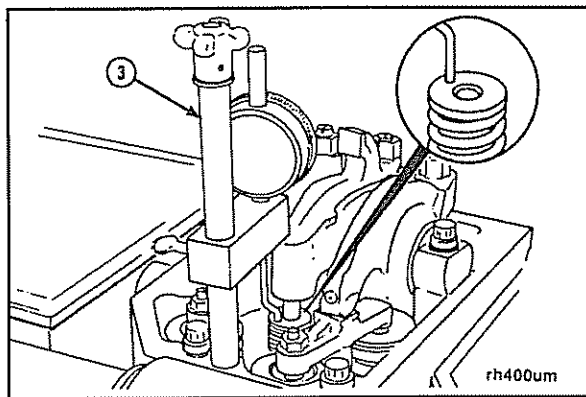

### PT Injector (type D) - Adjustment

**NOTE:** All KT38 and some KTA38 and 50 engines have PT (type D) injectors. To determine if the engine being serviced contains PTD injectors, refer to the engine dataplate. The Injector Travel section will specify 0.3075 inch.



1. Assemble the parts of an injector and valve adjustment kit (3), Part No. 3822575, or equivalent. Install the adjustment kit on the cylinder to be adjusted as shown.
2. Adjust the indicator so that the tip is touching the top of the injector plunger.
3. Lower the indicator 12.25 mm [0.5 inch] to allow for travel. Lock the indicator support to the post.



**Caution:** The injector plunger is under spring tension. Do NOT allow the tool to slip. Personal injury can result.

**NOTE:** Prevent damage to the indicator by allowing the lever to return slowly.

4. Use a rocker lever actuator, Part No. 3822574, or equivalent. Depress the lever until the injector bottoms two or three times. This will remove fuel from the cup.

### Check Existing Setting

1. Hold the lever with the injector plunger firmly bottomed in the cup. Set the indicator to ZERO.

Raise and lower the lever a few times to confirm the ZERO.



2. Slowly release the lever and observe the travel of the gauge. Press down or tap lightly on the adjusting screw to confirm the reading.


#### PTD INJECTOR TRAVEL VERIFICATION SPECIFICATION

mm		[in]
7.80	MIN	[0.307]
7.82	MAX	[0.308]

## Reset

1. Turn the adjusting screw until the indicator reads the specified travel.


PT (type D) Injector Travel Specifications		
mm	Model	In
7.81		0.308

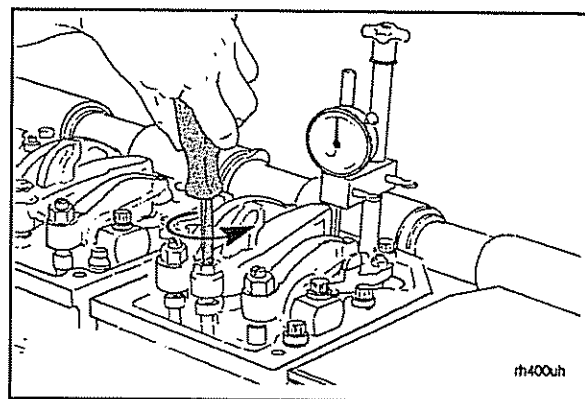

**NOTE:** The adjusting screw **must not** turn when the locknut is tightened.

2. Tighten the locknut to the value indicated below:

<b>With Torque Wrench</b>	
Adapter, Part No. ST-669 (1)	45 N•m [35 ft-lb]
<b>Without Adapter</b>	60 N•m [45 ft-lb]

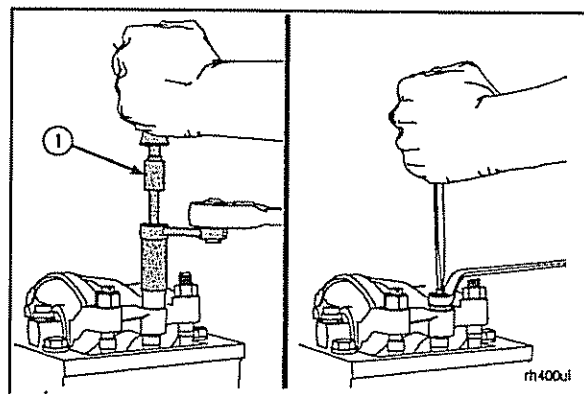


## Check New Setting

**Caution:** The Injector plunger is under spring tension. Do NOT allow the tool to slip. Personal injury can result.



**NOTE:** Prevent damage to the indicator by allowing the lever to return slowly.

1. Check the injector adjustment. Use the rocker lever actuator. Bottom the injector plunger. Confirm the ZERO on the indicator.

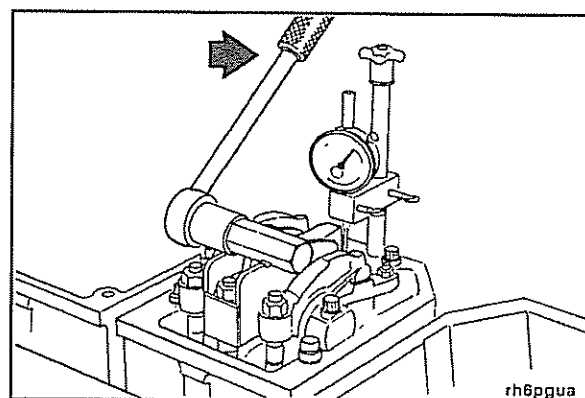


2. Allow the rocker lever to return slowly. Check the injector setting. Repeat the adjustment process if it is **not** within specification.
3. Rotate the engine. Align the next mark. Adjust the appropriate valves and injectors. Repeat the process to adjust all of the valves and the injectors correctly. Refer to Adjust the Valves in this section.



If the barring device was used, allow the spring to push the shaft and clear the ring gear. Install the clip.

### PTD INJECTOR TRAVEL VERIFICATION SPECIFICATION

mm		[in]
7.80	MIN	[0.307]
7.82	MAX	[0.308]

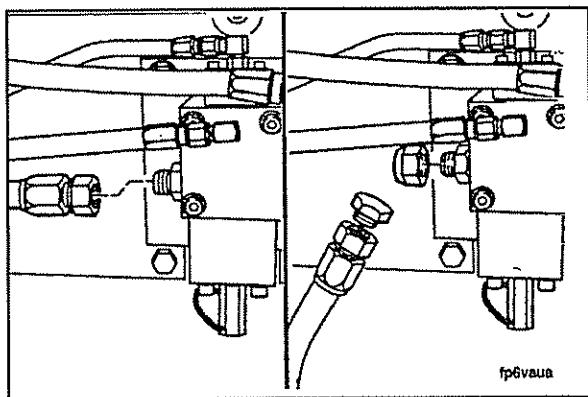


### STC or HVT OBC Valve and Injector Set Procedure




Run the engine in the retard mode **before** setting the OBC method. This removes oil from the tappets which can cause an improper set.

K38 and K50 engines are equipped with a hydromechanical STC valve. Remove the oil supply hose from the oil control valve. Plug the hose and cap the fitting. This prevents the engine from going into advance timing.

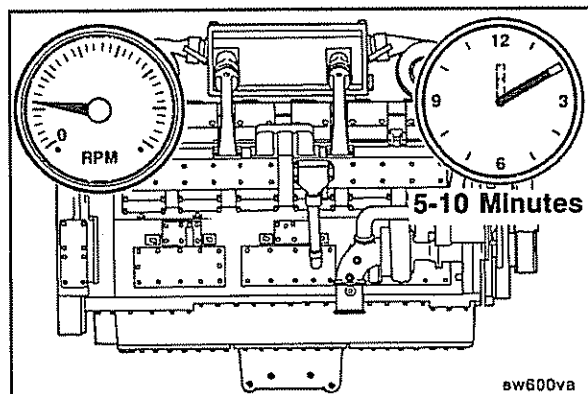


Operate the engine at high idle for 5 minutes (in retard timing mode). This will allow all of the oil to pump out of the injector tappets so a correct injector adjustment can be made.

Shut the engine off.

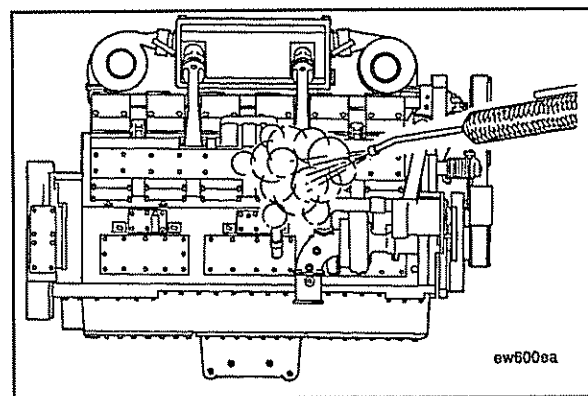


If you have **not** previously cleaned the engine, steam clean the engine now to prevent dirt from entering the engine when the rocker lever covers are removed.

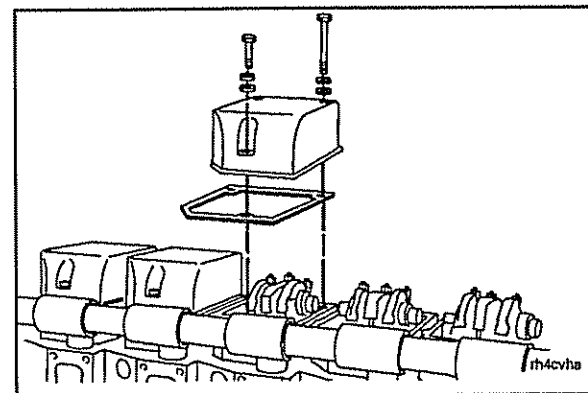

Remove the rocker lever covers. Discard the gasket.

K38 and K50 engines have valve and injector adjustment marks on the vibration damper and on **both** sides of the flywheel housing.


Valve and injector adjustment marks are on the vibration damper. The marks **must** be aligned with the pointer.

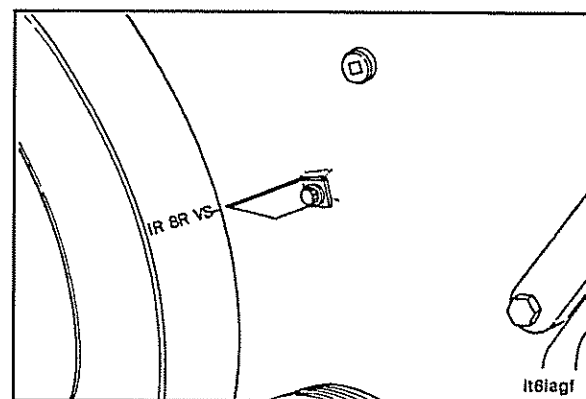

For valve and injector adjustment marks on the flywheel with the engine barring device located on the **right** bank:

The starter bore cover **must** be removed to see the marks.

**Caution:** When using this Index mark, the marks on the flywheel that begin with an A **must** be used or the valves and injectors will not be adjusted correctly, causing damage to the push rods.

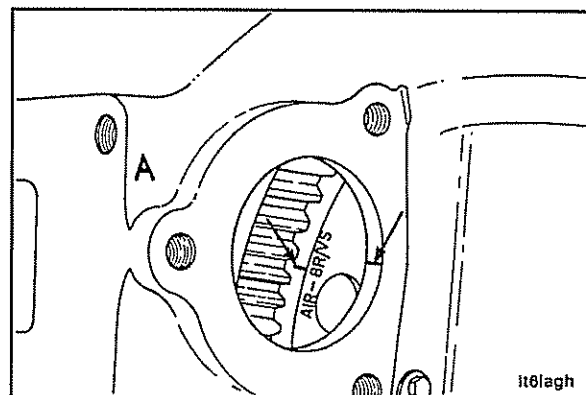


For valve and injector adjustment marks on the flywheel with the engine barring device located on the **left** bank:

The starter bore cover **must** be removed to see the marks.

**Caution:** When using this index mark, the marks on the flywheel that begin with a C **must** be used or the valves and injectors will not be adjusted correctly, causing damage to the push rods.

This illustration also shows the engine barring device. To use the device, remove the clip and push the device shaft **toward** the flywheel. The barring device **must** be rotated **counterclockwise** to turn the flywheel and crankshaft in the direction of normal rotation.

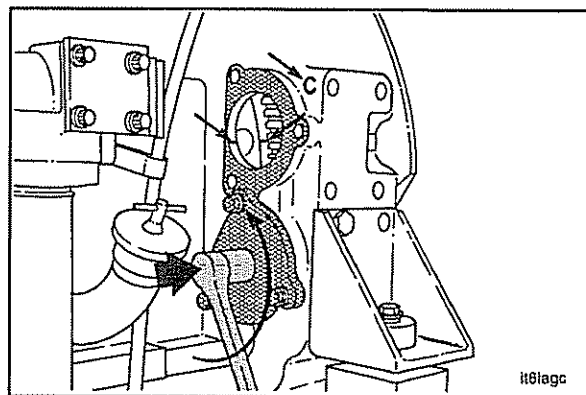


**Caution:** Not all K50 engines have the same firing order. Some K50 engines manufactured after September, 1986, have a revised firing order. These engines have decals on the rocker lever covers and the engine dataplate is stamped with the words REVISED FIRING ORDER.



### K50 REVISED Firing Order

1R-1L-3R-3L-2R-2L-5R-4L

8R-8L-6R-6L-7R-7L-4R-5L

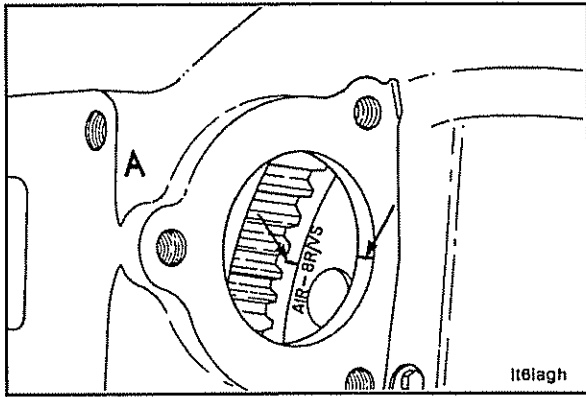


Direction of normal rotation for K38 and K50 engines is **clockwise** when viewing the **front** of the engine.

VS represents the valve set. Ignore any TC (top center) marks while setting the valves and injectors.

#### Determine Cylinder In Position for Valve Set

The crossheads and valves are ready to be adjusted on the cylinder that has all the valves closed.

Check the two cylinders shown on the VS mark.

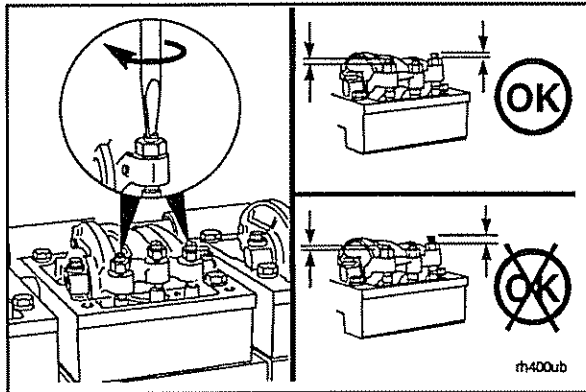


If the rocker lever assemblies have been removed, use this step to determine the cylinder to set.

All adjusting screws **must** be loose on all cylinders, and the push rod **must** remain in alignment.

**NOTE:** Perform this step on both cylinders to be checked.

Hold both rocker levers against the crossheads. Turn the adjusting screws until they touch the push rods. Turn the lock nuts until they touch the levers.

The cylinder with the adjusting screws that are nearly the same height (intake screw can be up to three threads above the exhaust) is ready for valve adjustment. The second cylinder that is **not** ready for adjustment will have the adjusting screw for the exhaust valves more than five threads above the intake screw.

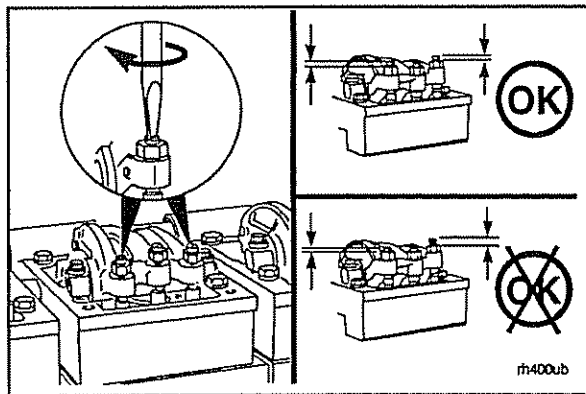

The push rods will be close to the same height above the top of the rocker lever housing on the cylinder ready for valve adjustment.


**NOTE:** K2000E and K1800E engines contain a unique camshaft that creates a noticeable difference in the height of the valve adjusting screws. When the valves are properly adjusted on these engines, the exhaust valve adjusting screw will have approximately one thread visible **above** the top of the tightened locknut. The intake valve adjusting screw will have approximately three threads visible **above** the top of the tightened locknut.

If the rocker levers have **not** been removed, wiggle the valve rocker levers on the two cylinders in question. The crossheads and valves on the cylinder where both levers feel loose are ready to adjust.

After identifying the cylinder with the valves ready to be adjusted, use the following chart for the sequence. The procedure and specifications for adjusting the crossheads, valves and injectors are shown after the charts.

The following charts give the crosshead, valve and injector adjustment sequence.

**NOTE:** Adjustment can begin on any valve set mark. In our example, assume the **1R-8R** marks are aligned and the adjusting screw height for the valves on the cylinder no. 1 right bank are closed and ready to adjust.

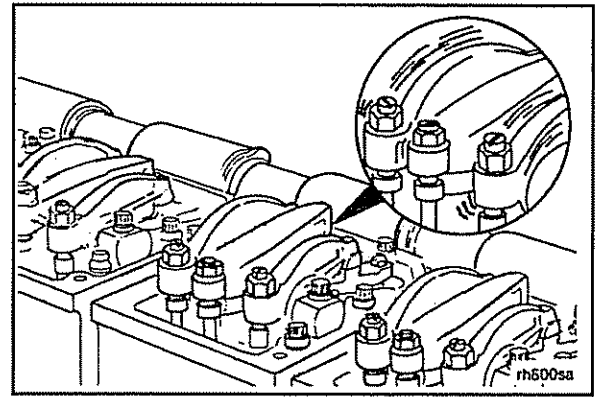

K38 OUTER BASE CIRCLE SET PROCEDURE With STC Valve and Injector Adjustment Chart			
VS MARK	VALVES CLOSED ON CYLINDER NUMBER	ADJUST VALVES ON CYLINDER NUMBER	ADJUST INJECTORS ON CYLINDER NUMBER
1R-6R VS	1R	1R	2R
6L-1L VS	6L	6L	5L
5R-2R VS	5R	5R	4R
2L-5L VS	2L	2L	3L
3R-4R VS	3R	3R	1R
4L-3L VS	4L	4L	6L
1R-6R VS	6R	6R	5R
6L-1L VS	1L	1L	2L
5R-2R VS	2R	2R	3R
2L-5L VS	5L	5L	4L
3R-4R VS	4R	4R	6R
4L-3L VS	3L	3L	1L

**Caution:** For K50 engines, it is important to know if the engine has the Standard Firing Order or the REVISED FIRING ORDER. Do NOT use the Standard Firing Order sequence for uprate engines manufactured after September, 1986 that have REVISED FIRING ORDER. All engines that have the REVISED FIRING ORDER have STC injectors and are identified as Revised on the engine dataplate. These engines also have decals on the rocker lever covers.

K50 OUTER BASE CIRCLE SET PROCEDURE - REVISED FIRING ORDER With STC or HVT Valve and Injector Adjustment Chart			
VS MARK	VALVES CLOSED ON CYLINDER NUMBER	ADJUST VALVES ON CYLINDER NUMBER	ADJUST INJECTORS ON CYLINDER NUMBER
1R-8R VS	1R	1R	6R
1L-8L VS	1L	1L	6L
3R-6R VS	3R	3R	7R
3L-6L VS	3L	3L	7L
2R-7R VS	2R	2R	4R
2L-7L VS	2L	2L	5L
4R-5R VS	5R	5R	1R
4L-5L VS	4L	4L	1L
1R-8R VS	8R	8R	3R
1L-8L VS	8L	8L	3L
3R-6R VS	6R	6R	2R
3L-6L VS	6L	6L	2L
2R-7R VS	7R	7R	5R
2L-7L VS	7L	7L	4L
4R-5R VS	4R	4R	8R
4L-5L VS	5L	5L	8L


K50 OUTER BASE CIRCLE SET PROCEDURE - STANDARD FIRING ORDER With STC or HVT Valve and Injector Adjustment Chart			
VS MARK	VALVES CLOSED ON CYLINDER NUMBER	ADJUST VALVES ON CYLINDER NUMBER	ADJUST INJECTORS ON CYLINDER NUMBER
1R-8R VS	1R	1R	6R
1L-8L VS	1L	1L	6L
3R-6R VS	3R	3R	2R
3L-6L VS	3L	3L	2L
2R-7R VS	7R	7R	4R
2L-7L VS	7L	7L	4L
4R-5R VS	5R	5R	1R
4L-5L VS	5L	5L	1L
1R-8R VS	8R	8R	3R
1L-8L VS	8L	8L	3L
3R-6R VS	6R	6R	7R
3L-6L VS	6L	6L	7L
2R-7R VS	2R	2R	5R
2L-7L VS	2L	2L	5L
4R-5R VS	4R	4R	8R
4L-5L VS	4L	4L	8L

### Crossheads - Adjustment

**NOTE:** Crosshead adjustment **must always** be made before attempting to adjust the valves.

Adjust the crossheads on the cylinder that has both valves closed.

Loosen the crosshead adjusting screw lock nuts on the intake and exhaust valve crossheads.

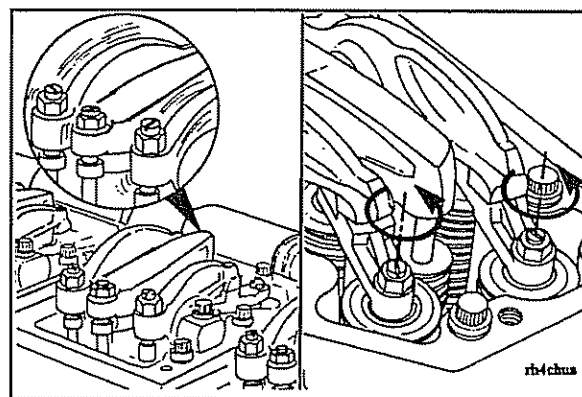


Use the following procedure to adjust both the intake and the exhaust crossheads.

Turn the adjusting screw out at least one turn.


Hold the crosshead down against its guide.

Turn the adjusting screw in until it touches the top of the valve stem but does **not** raise the crosshead.

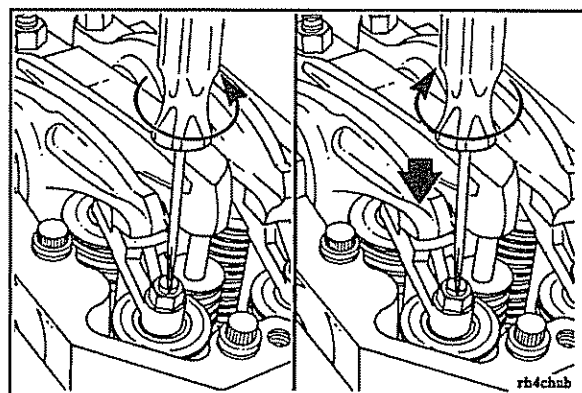

Hold the adjusting screw in this position. The adjusting screw **must not** turn when the lock nut is tightened to its torque value. Tighten the lock nut. The following torque values are given with and without Part No. ST-669, Torque Wrench Adapter (1):


	Torque Values	
	Nom	ft-lb
With Adapter	35	25
Without Adapter	40	30

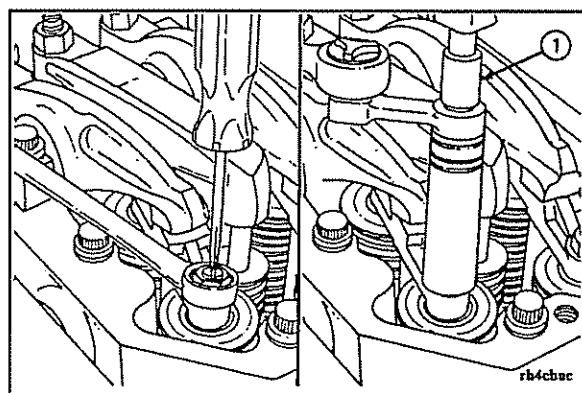


### Valves - Adjustment

If valve and injector adjustment is checked during troubleshooting or before the recommended maintenance interval, adjustment is **not** required if measurements are within the recheck limits.


VALVE ADJUSTMENT - RECHECK LIMITS				
OBC				
INTAKE VALVE	mm		[in]	
	0.28	MIN	[0.011]	
EXHAUST VALVE	0.43	MAX	[0.017]	
	0.06	MIN	[0.024]	
	0.76	MAX	[0.030]	

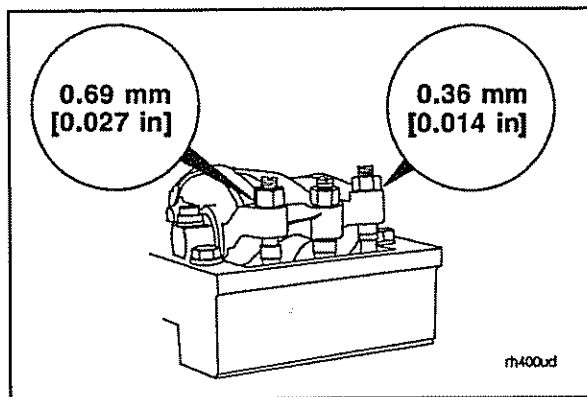

Valve Adjustment (Initial Set)		
mm		In
0.69	Exhaust	0.027
0.36	Intake	0.014

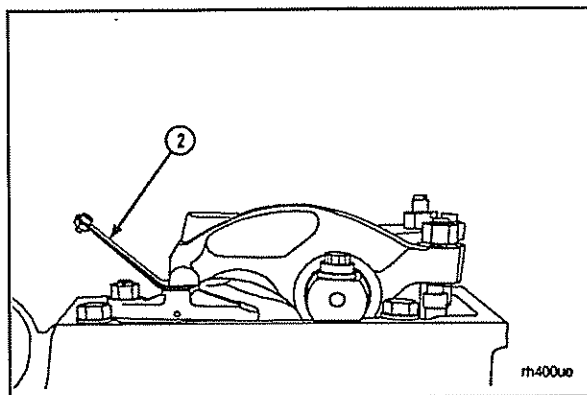


Select a feeler gauge for the correct valve lash specification. Insert the gauge (2) between the rocker lever and the crosshead.

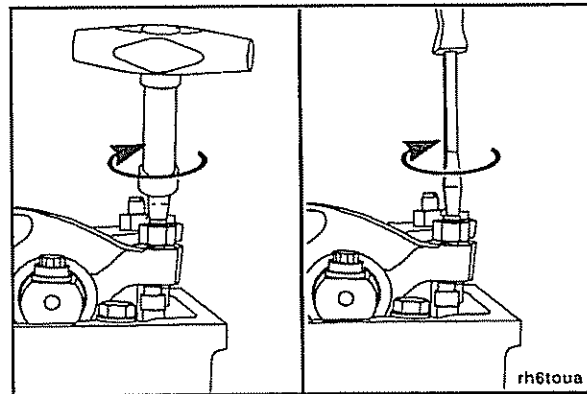

Two different methods for establishing valve lash clearance are described below. Either method can be used; however, the torque wrench method has proven to be the most consistent.

- Torque Wrench Method:** Use Part No. 3376592, Inch Pound Torque Wrench, and tighten the adjusting screw to 0.68 N•m [6 in-lb] torque.
- Feel Method:** Use a screwdriver and turn the adjusting screw ONLY until the lever touches the feeler gauge.

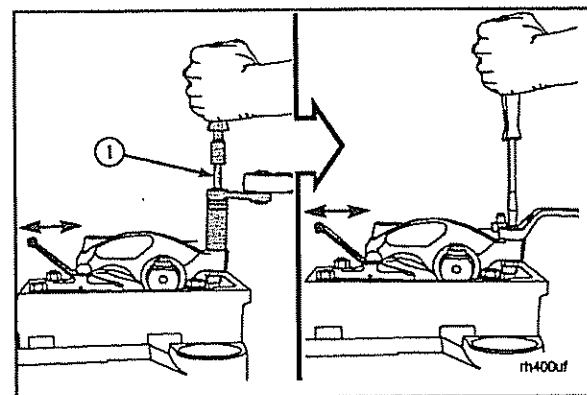

The adjusting screw **must not** turn when the lock nut is tightened.

Tighten the lock nut to the value indicated below.

**WITH Torque Wrench Adapter**  
Part No. ST-669:45 N•m [35 ft-lb]

**WITHOUT Adapter**  
Part No. ST-669:60 N•m [45 ft-lb]



The feeler gauge **must** slide backward and forward with only a slight drag.

Attempt to insert a feeler gauge that is 0.03 mm [0.001 in] thicker. The valve lash is **not** correct when the thicker gauge will fit.

Repeat the adjustment process until the clearance is correct on both the intake and the exhaust valves on the cylinder being adjusted.

**Caution:** Valves and Injectors on a cylinder are NOT adjusted at the same engine position. Incorrect adjustment by the sequence or procedure will result in engine damage.




Check the valve and injector adjustment chart to determine which injector is in position to adjust.



Use a dial type torque wrench and 7/16 inch socket to tighten the injector rocker lever adjusting screw. If the screw causes chattering during setting, repair the screw and lever as required.

Hold the torque wrench in a position that allows you to look in a direct line at the dial. This is to make sure the dial will be read accurately.

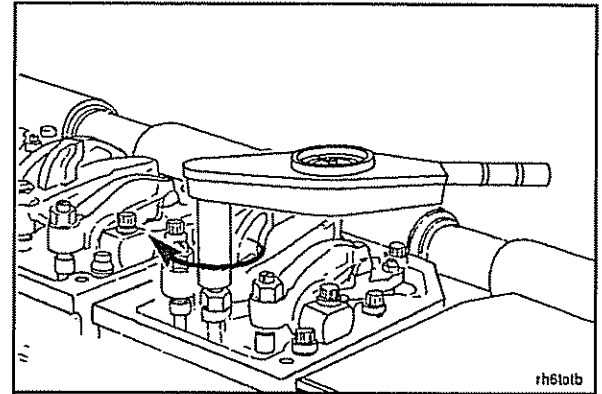


Tighten the adjusting screw to 11 N•m [100 in-lb] to make sure the parts are in alignment and to squeeze the oil out of the valve train.



Loosen the adjusting screw at least one turn.

Tighten the adjusting screw to 10 N•m [90 in-lb].

The torque wrench **must** be calibrated, have a resolution of 0.28 N•m [2.5 in-lb], and have a range of 17 to 23 N•m [150 to 200 in-lb]. Do **not** use a clicker-type torque wrench.

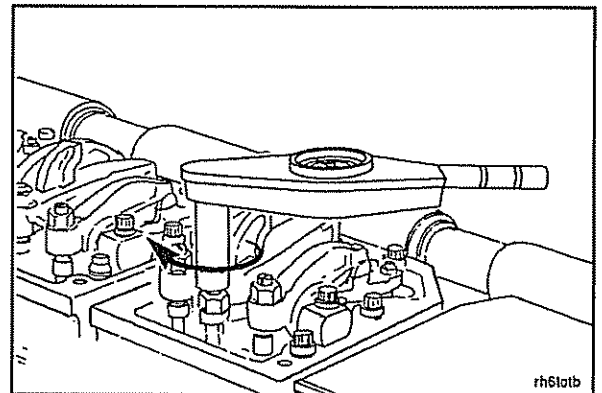

The adjusting screw **must not** turn when the lock nut is tightened.

Tighten the lock nut to the following values:

**WITH Torque Wrench Adapter**

**Part No. ST-669:** 45 N•m [35 ft-lb]

**WITHOUT Adapter**

**Part No. ST-669:** 60 N•m [45 ft-lb]





3. Rotate the engine. Align the next mark. Adjust the appropriate valves and injectors. Repeat the process to adjust all of the valves and the injectors correctly. Refer to Adjust the Valves in this section.


If the barring device was used, allow the spring to push the shaft and clear the ring gear. Install the clip.

If the barring device was used, allow the spring to push the shaft and gear outward to clear the ring gear. Install the clip.

Install the rocker lever covers and all related components.

**Torque Value:** 40 N•m [30 ft-lb]

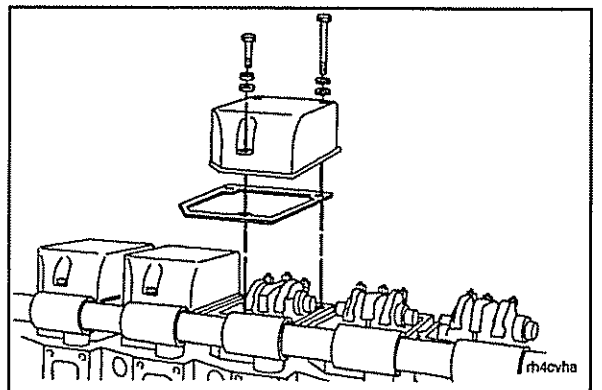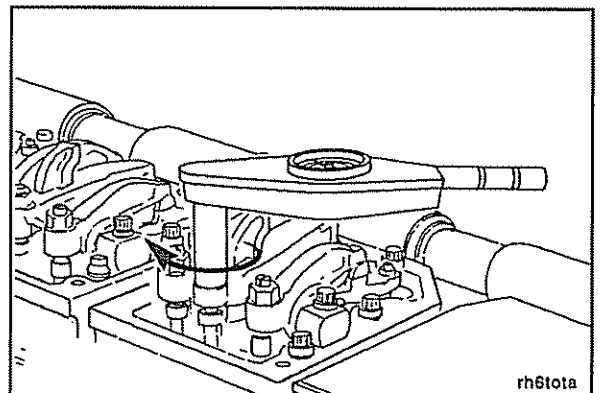

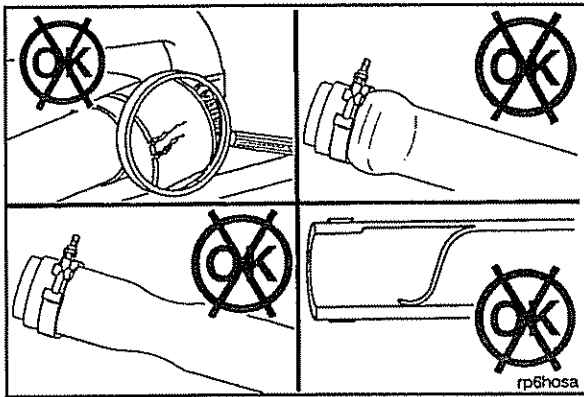


## Hoses

### Checking/Replacement




Annually inspect the bypass oil filter and cooling system hoses and hose connections for leaks or deterioration. Particles of deteriorated hose can be carried through the cooling system or lubricating system and restrict or clog small passages, especially radiator core, and lubricating oil cooler, and partially stop circulation. Replace as necessary.

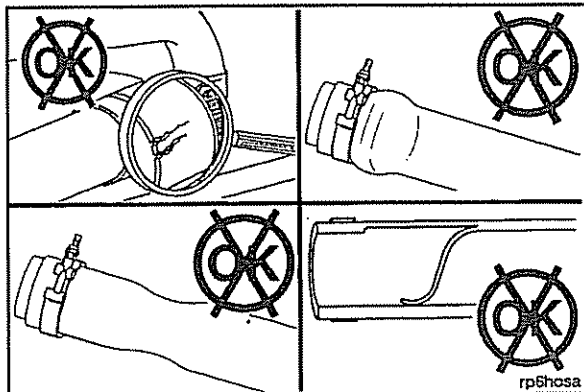

Water line hoses can balloon when a remote, high mounted radiator is used. The maximum permitted radiator height is 18.3 m [60 ft] above the crankshaft centerline.

Water hoses do **not** normally collapse, but this can occur if the radiator tubes become clogged with scale or debris.

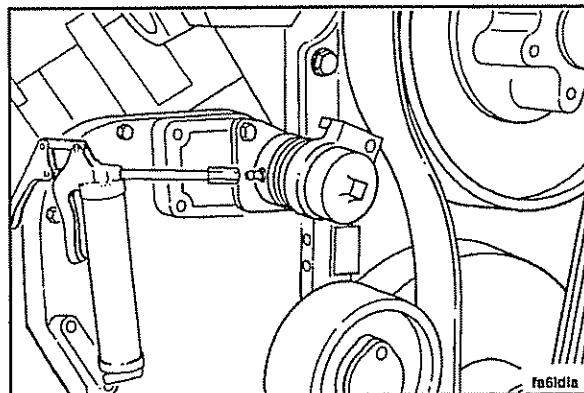


### Fan Idler Pivot Arm



Use water pump type grease listed below, or **its equivalent**, to lubricate the pivot arm assembly. Lubricate the pivot arm until grease appears from under the cap.

Supplier	Compound
Amoco Oil Company	Rykon Premium No. 2 Rykon Premium No. 2 EP
Chevron U.S.A., Inc.	SRI
Exxon Company, U.S.A.	Unirex N2
Shell Oil Company	Dolium R
Texaco Inc.	Premium RB

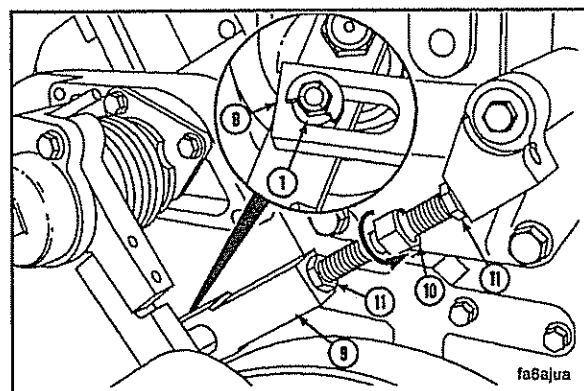

### Fan Idler Pulley Tensioner Adjustment Engines With Solid Control Rod

The fan belt **must** be installed and under the tension of the fan idler arm spring to adjust the control rod. The fan belt and a portion of the flat washer is **not** shown for clarity.

Turn the adjusting screw (10) until the end of the slot on the **lower** control rod end (9) is touching the spacer (1).

**NOTE:** One of the nuts has left-hand threads.


Hold the adjusting screw and tighten the two jam nuts (11).

## Engines With Control Rod Spring

**Caution:** Do not tighten the inner jam nut excessively. If the jam nut is too tight, the spring retainer will bend, causing the control rod to fail.




Turn the inner jam nut until the spring retainer washer (24) touches the cylinder on the lower control rod end (27). Hold the inner jam nut and tighten the outer jam nut.

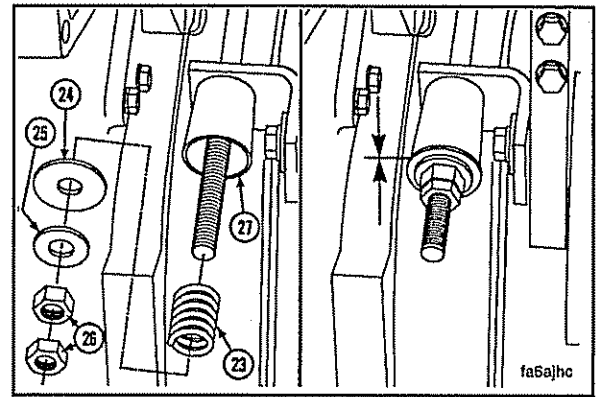

## Engines With Shock Absorber

There is **no** adjustment required for engines with a shock absorber.

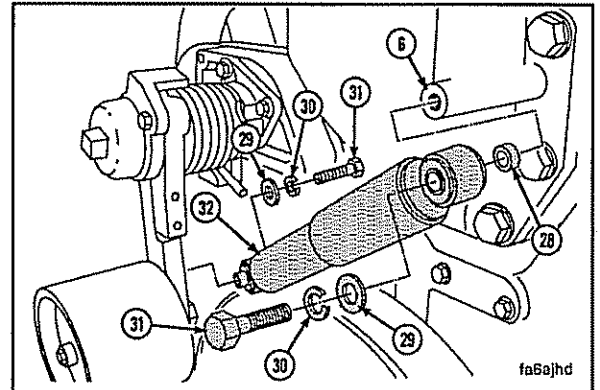

## Heat Exchanger Zinc Plugs (Marine Only)

### Checking


Check the length of all zinc plugs in the heat exchanger and change if they are 50 percent eroded. Frequency of change depends upon the chemical reaction of raw water circulated through the heat exchanger.

Erosion Limits  
REPLACE

NEW

A = Approximately 19 mm [0.75 in] 51 mm [2 in]

B = Approximately 6.4 mm [0.25 in] 16 mm [0.625 in]

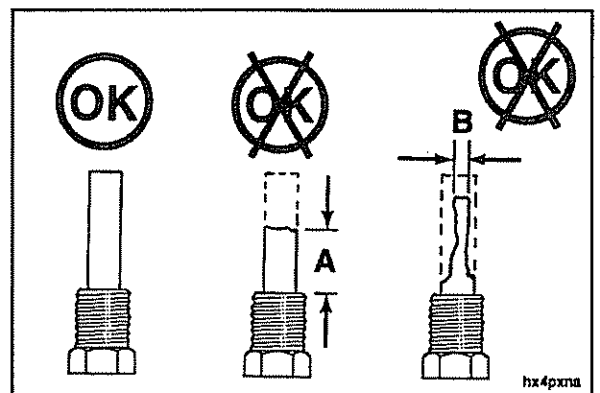


## Crankshaft End Clearance


### Inspection

Measure the crankshaft end clearance with a dial indicator. Measure the clearance.



Crankshaft End Clearance		
mm		in
0.13	MIN	0.005
0.51	MAX	0.020

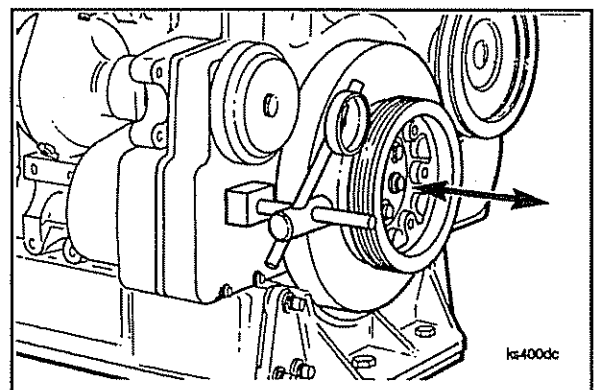


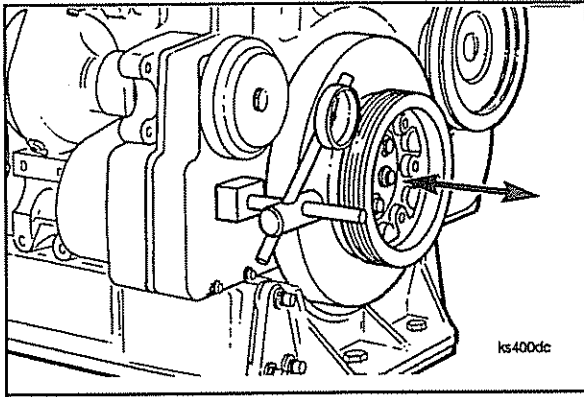

The check can be made by attaching an indicator to rest against the damper or pulley, while prying against the front cover and inner part of the pulley or damper. End clearance **must** be present with the engine mounted in the unit and assembled to the transmission or converter.

**Caution:** Extreme care **MUST** be used in prying against the viscous damper. Sharp pry bars can damage the damper casing, resulting in a leak of the viscous fluid and ultimate failure of the damper.

If the clearance is **not** within specifications, contact your Cummins Repair Location.

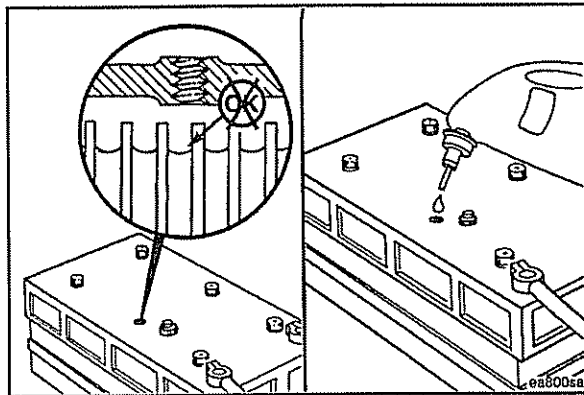

## Batteries

### Checking




If conventional batteries are used, remove the cell caps or covers and check the electrolyte (water and sulfuric acid solution) level.

Maintenance-free batteries are sealed and do **not** require the addition of water.




Fill each battery cell with distilled water. Refer to the manufacturer's specifications.

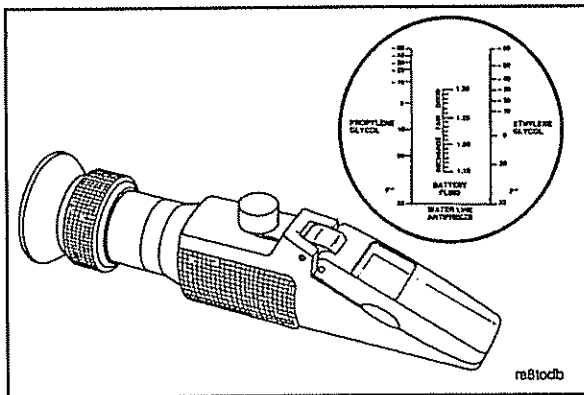

Use the Fleetguard® refractometer, Part No. CC-2800, to check the condition of the battery.

Refer to the battery fluid column in the refractometer to determine the state-of-charge of each battery cell.

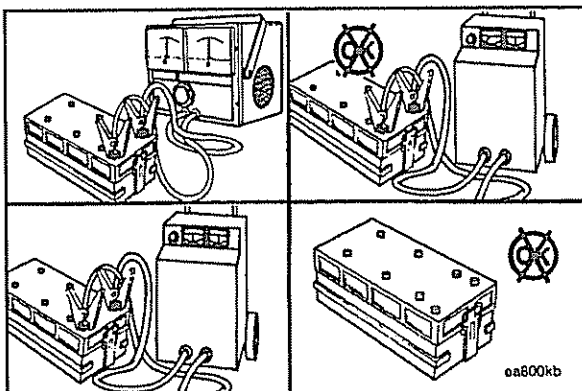

Use battery tester, Part No. 3377193, to test the state-of-charge of maintenance-free batteries.



If the state-of-charge is low, use a battery charger to charge the battery. Refer to the manufacturers instructions. Refer to Section A for battery connection information.

Replace the battery if it will **not** charge to the manufacturer's specifications or will **not** maintain a charge.


## Engine Protection System

### General Information

If an Engine Protection System is present, it **must** be checked every 1500 hours or yearly. Follow the manufacturer's recommended maintenance procedures.

If the Compusave unit is in use, refer to the Operations and Maintenance Manual for the Flight Systems 9560 Test Set.

If the Flight Systems Engine Saver is in use, refer to the Engine Saver Level 7 Manual, Flight Systems, Bulletin No. 57-ASSO-26. For more information, call Flight Systems 1-800-333-1194.

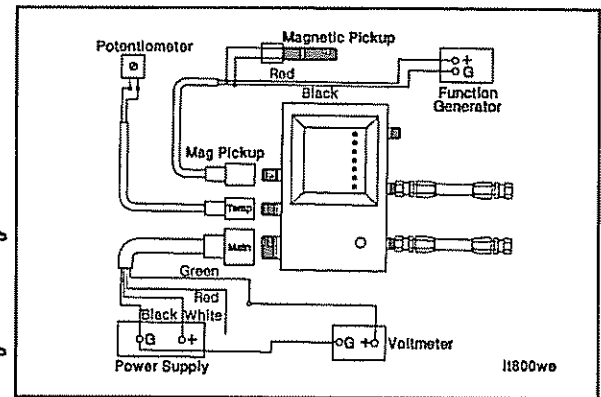


## Cold Start Aids

### Checking

- Oil pan heater

Check for proper operation. If operating properly, the oil pan will be warm. Inspect for loose connections, frayed wires, and oil leaks. Repair or replace as needed.

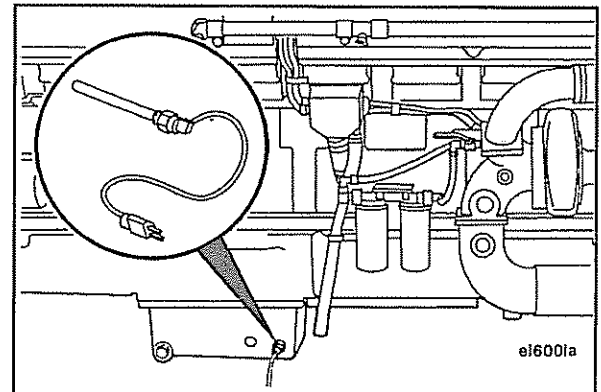

- Engine Coolant Preheater


Check for proper operation. Check for loose connections, frayed wires, and coolant leaks. Clean the alkali and sludge from the unit.


Check the lines which take coolant from the coolant heater to the engine block to determine that they are flexible. These lines normally consist of steel tubing connected with silicone hose.

Do **not** replace the silicone hose with normal radiator hose as it becomes too brittle and breaks.

**NOTE:** The outlet connection from the coolant heater will experience a large number of thermal cycles and thus **must** be of high quality with specific operating capabilities.

Replacement hose material for the coolant heater to the block hose connection **must** be a polyester reinforced silicone rubber material, capable of 120°C [250°F] temperatures and a minimum working pressure rating of 689 kPa [100 psi].

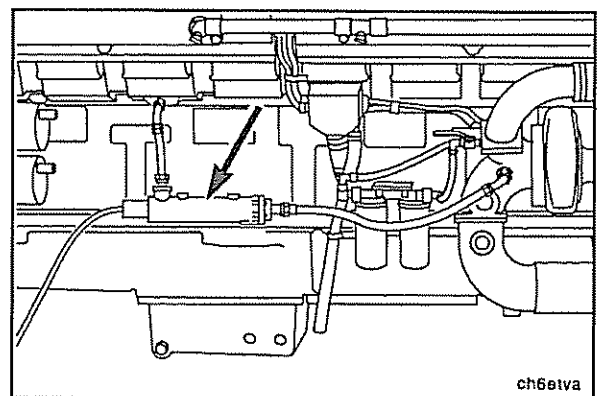


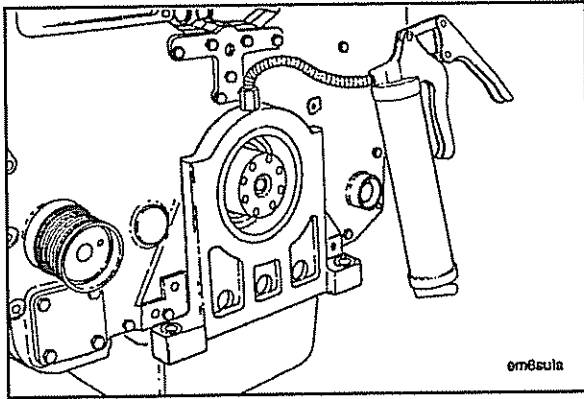

## Front Engine Support



Use water pump type grease, Chevron SRI grease or its equivalent, to lubricate the front engine support. Lubricate the support until grease appears at the outside of the support.

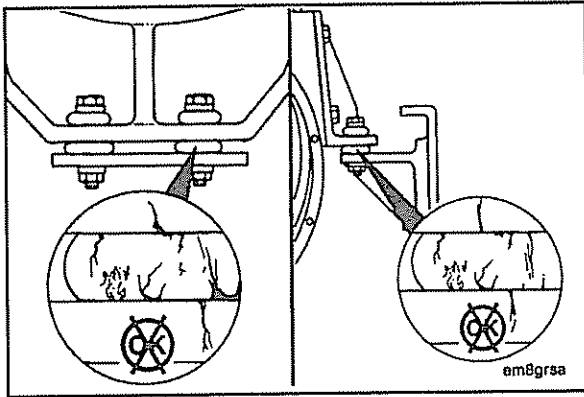

## Engine Mounting Bolts and Nuts

### Checking



Check the torque on the nuts and bolts annually. Tighten any that are loose. Inspect the rubber for deterioration and age hardening. Replace any broken or lost bolts, capscrews or damaged rubber.



Capscrew size and grade vary with the flywheel housing and mounting arrangement. Determine the size and grade of the mounting bolts. Refer to the capscrew torque values in Section V of this manual.

## Section 7 - Maintenance Procedures Every 6,000 Hours or 2 Years

### Section Contents

	Page
<b>Air Compressor</b> .....	7-23
Air Compressor Discharge-Checking .....	7-23
Air Compressor Intake-Checking .....	7-24
Checking .....	7-23
<b>Cooling System</b> .....	7-15
Cleaning System and Changing Antifreeze .....	7-15
<b>Engine Protection System</b> .....	7-29
Calibration .....	7-29
<b>Fan Hub</b> .....	7-17
Inspection .....	7-17
<b>Fan Idler Pulley Assembly</b> .....	7-18
Installation .....	7-18
Rebuild .....	7-18
Rebuild/Replacement .....	7-18
<b>Fuel Pump</b> .....	7-2
Calibration .....	7-4
Checking .....	7-4
Installation .....	7-5
Removal .....	7-2
<b>General Information</b> .....	7-2
<b>Injectors</b> .....	7-9
Calibration .....	7-12
Checking .....	7-11
Installation .....	7-12
Removal .....	7-9
<b>Thermostats and Seals</b> .....	7-19
Replacement .....	7-19
<b>Throttle Travel/Throttle Air Cylinder</b> .....	7-6
Checking .....	7-6
Variable Speed (VS) Throttle Linkage Adjustment .....	7-6
<b>Turbocharger</b> .....	7-21
Inspection .....	7-21
<b>Vibration Damper</b> .....	7-28
Checking .....	7-28
Damper Leakage Detection .....	7-29
Thickness Measurement .....	7-28
<b>Water Pump</b> .....	7-19
Rebuild/Replacement .....	7-19

01801vu

All checks or inspections listed under the previous maintenance intervals **must** also be performed at this time in addition to those listed under this maintenance interval.



Refer to Calibration in this section for calibration information.




Disconnect the (-) negative battery cable first, then disconnect the (+) positive cable.




Clean the fuel pump and the surrounding area **before** removing it from the engine.

Disconnect the wires to the fuel shutoff valves.  
Disconnect the linkage from the throttle lever.

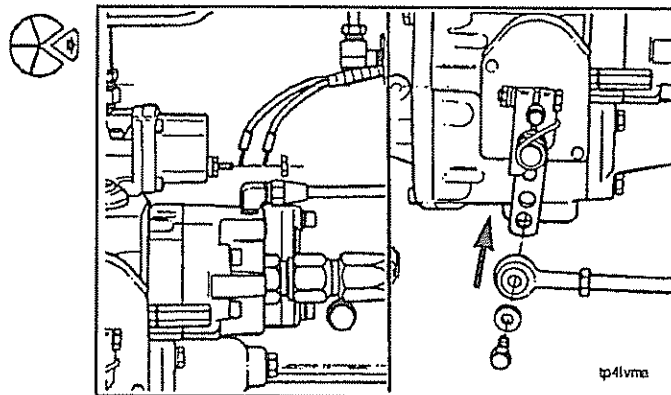


On engines with the throttle air cylinders mounted on a bracket on the fuel pump, remove the throttle cylinder air inlet (2), the braking cylinder air inlet (3), the vent line (4) and bracket mounting capscrews (5).

The throttle cylinder assembly is removed with the fuel pump as a unit.

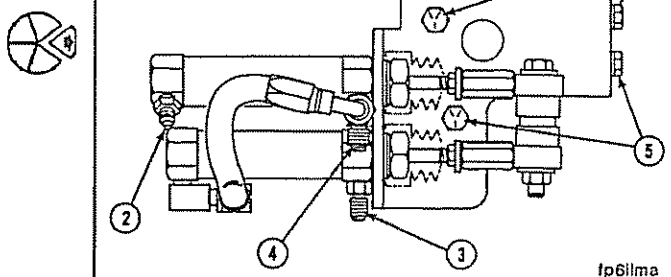



The newer engines will have the air throttle cylinders mounted to the cam follower covers. Inspect the throttle cylinders for shaft wear and seal leakage. If there is significant wear or leakage, refer to the K38 and K50 Shop Manual, Bulletin No. 3810304, or contact your Cummins Distributor for repair.

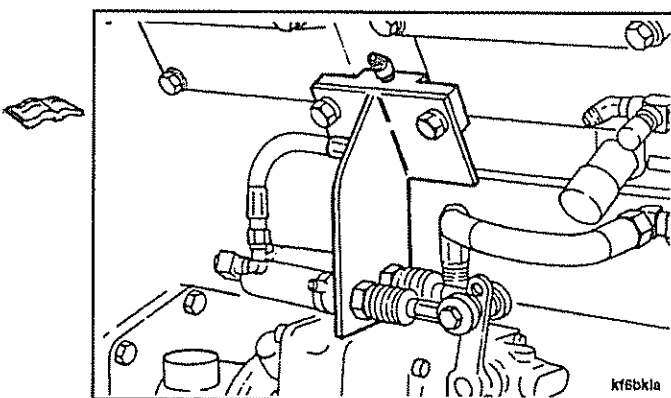


Disconnect the fuel tubing and air hose.

- Gear pump cooling drain (2)
- Gear pump suction line (3)
- AFC fuel drain (4)
- Fuel supply to injectors (5)
- AFC air hose (6)
- Tachometer cable (7)

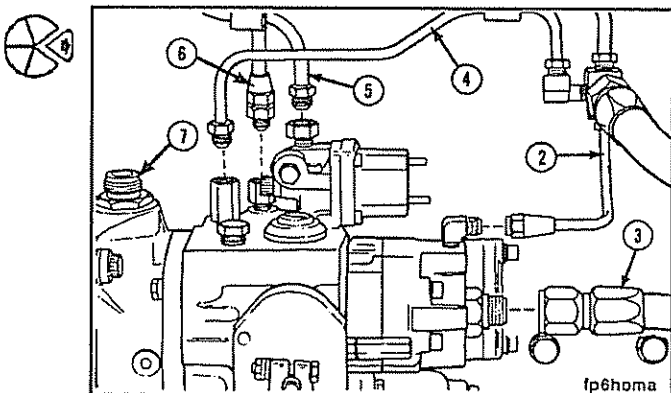

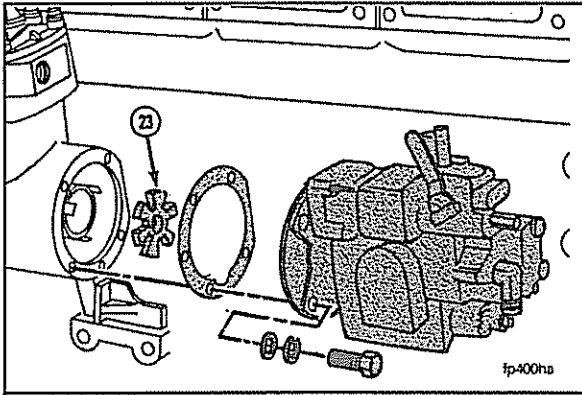

Remove the four mounting capscrews and the fuel pump. Remove the drive coupling (23). Remove and discard the gasket.

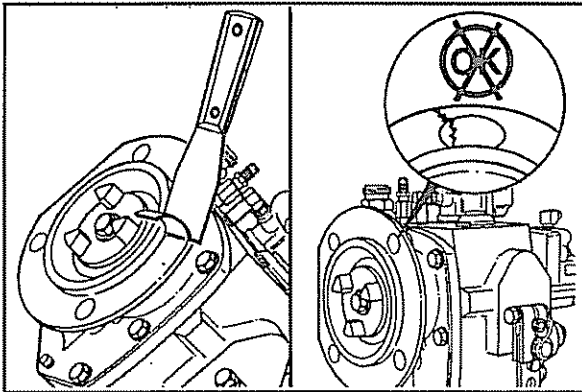


### Checking


Clean the fuel pump and the air compressor or accessory drive mounting surfaces.



Inspect the mounting surfaces for damage. Replace if cracked or distorted.

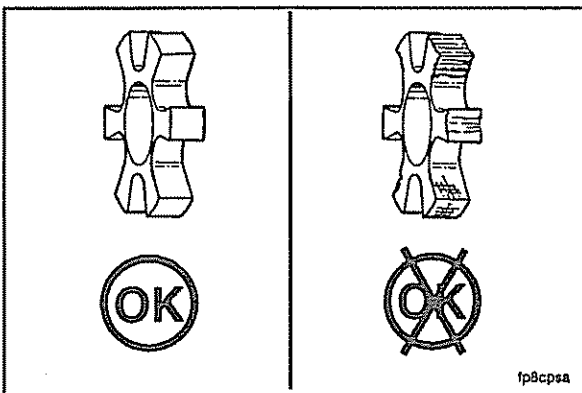

Visually inspect the spider coupling for damage. Replace if cracked or distorted.

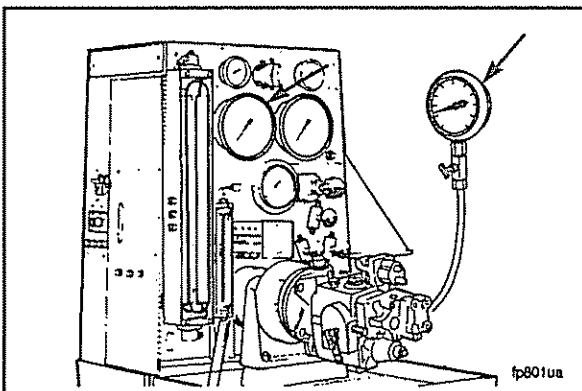


### Calibration

Calibrate the fuel pump. The procedure **must** be done at a Cummins Authorized Repair location. Refer to the PT Fuel Pump Rebuild and Calibrate Manual, Bulletin No. 3379084.

## Installation


All K38 and K50 engines use a white nylon or light green fuel pump drive coupling.

Install the drive coupling (23), gasket, fuel pump, and four capscrews. Tighten the capscrews to 45 N•m [35 ft-lb].

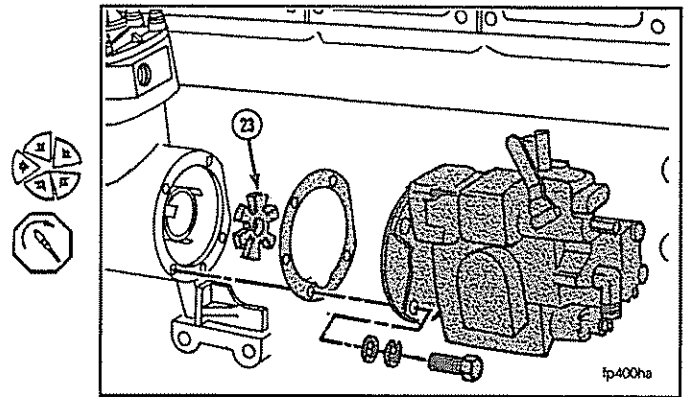

Connect the fuel tubing and air hose.

- Fuel drain (1)
- Gear pump cooling drain (2)
- AFC air hose (4)
- Fuel supply to injectors (5)
- AFC fuel drain (6)
- Tachometer cable (7)

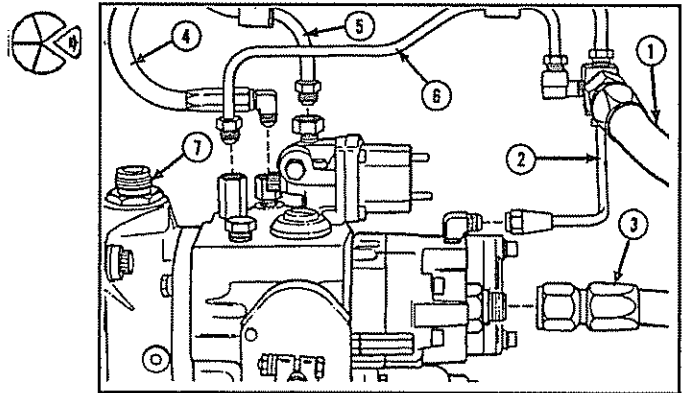

On engines equipped with throttle air cylinders mounted on a bracket on the fuel pump:


Install the bracket mounting capscrew (5).

Install throttle cylinder (2) and brake cylinder (3) air lines.

Install vent line (4).

Refer to Throttle Travel/Throttle Air Cylinder in this section for more information.


The newer engines will have the air throttle cylinders mounted to the cam follower covers.

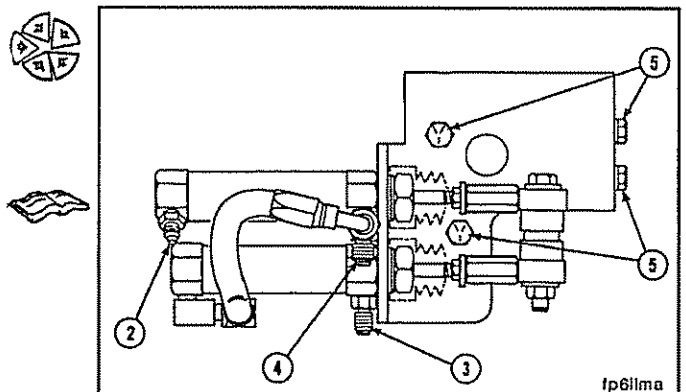


Connect the electric wires to the fuel shutoff valve.


**NOTE:** The wire connection nut and the ground post nut **must** be clean and tight.

Install the linkage to the throttle lever.

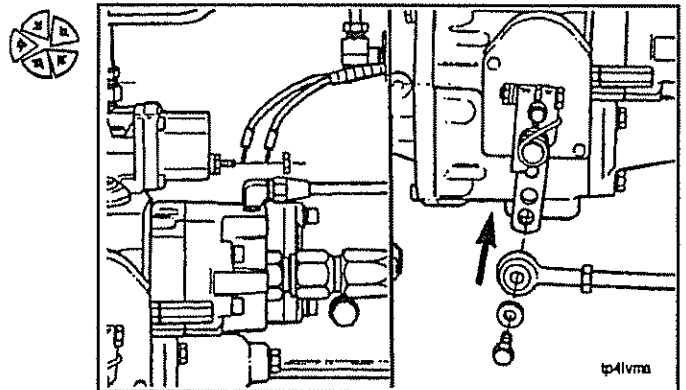


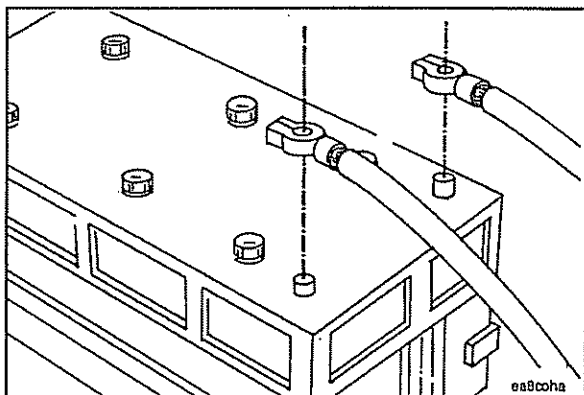

Connect the (+) positive battery cable first, then connect the (-) negative cable.

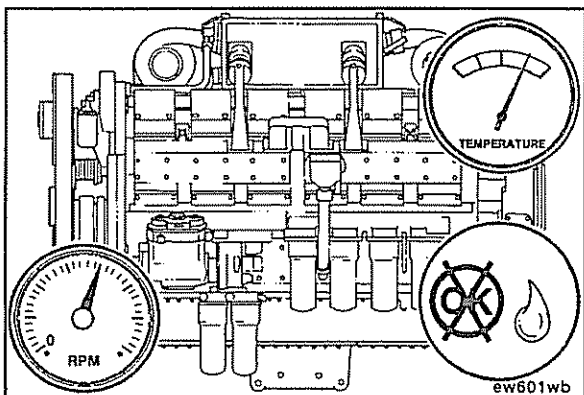


Operate the engine to normal operating temperature and check for leaks.

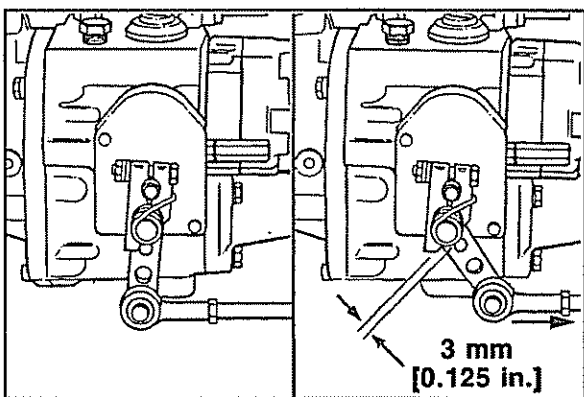

## Throttle Travel/Throttle Air Cylinder Checking

### Throttle Lever Breakover - Checking

- Make sure the throttle linkage is adjusted so the throttle lever breaks over 3 to 6 mm [0.125 to 0.250] (1/8 to 1/4 inch) when the lever is in the full throttle position.
- The throttle lever stop must contact the rear throttle stop screw.

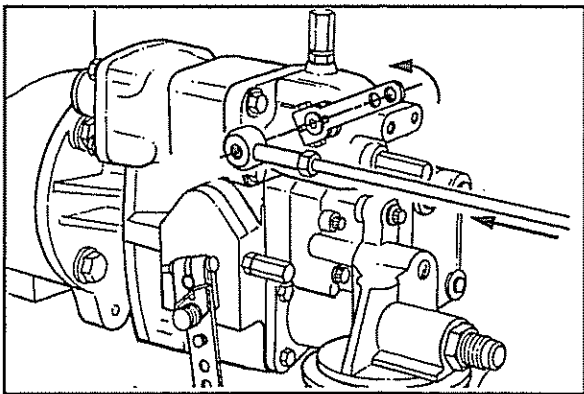


### Variable Speed (VS) Throttle Linkage Adjustment


- Remove the throttle linkage from the VS throttle lever.
- Hold the VS lever in the idle position. Move the linkage to the idle position.
- With the VS lever in idle position, adjust the linkage.

- Move the VS lever and linkage to the maximum speed position.
- If the lever and the linkage are not aligned, adjust the linkage.

**NOTE:** Throttle travel on a VS lever is not adjustable. The pump may be recalibrated with a stiffer VS Governor spring to reduce throttle travel.

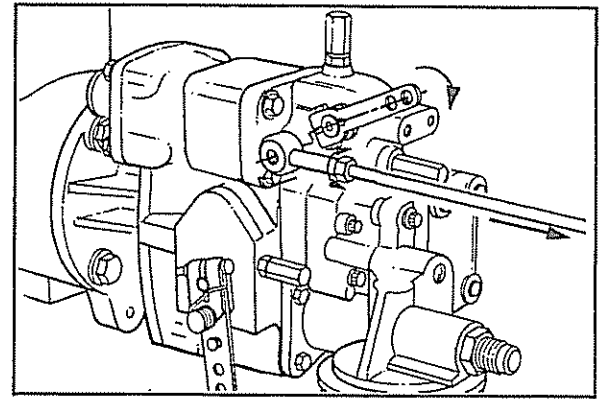


- Install the linkage on the lever.

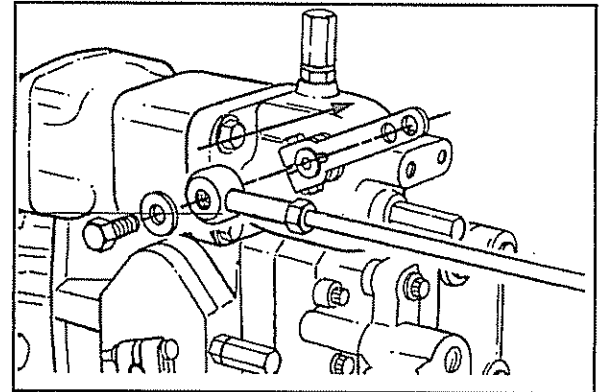


This section applies only to air cylinder equipped engines:


- (1) Braking cylinder
- (2) Throttle cylinder
- (3) Throttle cylinder air inlet
- (4) Cylinder vent jumper hose
- (5) Vent to the engine air intake or breather
- (6) Throttle cylinder extension rod
- (7) Boot
- (8) Roller tappet and bushing
- (9) Throttle lever
- (10) Braking cylinder extension rod
- (11) Braking cylinder air inlet

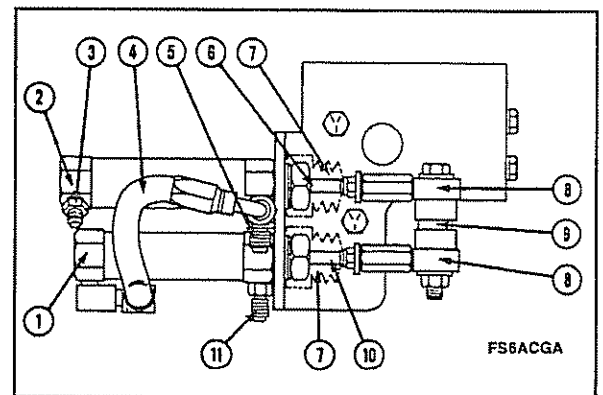

Using your hand, push the throttle lever (9) toward the cylinders (low idle position). The braking cylinder extension rod (10) **must** move smoothly to the retracted position. The cylinder spring **must** push the throttle lever from the air cylinders approximately 1/2 of the distance between the **idle** and **full fuel** positions.


If the cylinder does **not** move smoothly or does **not** push the throttle lever, the cylinder **must** be replaced.

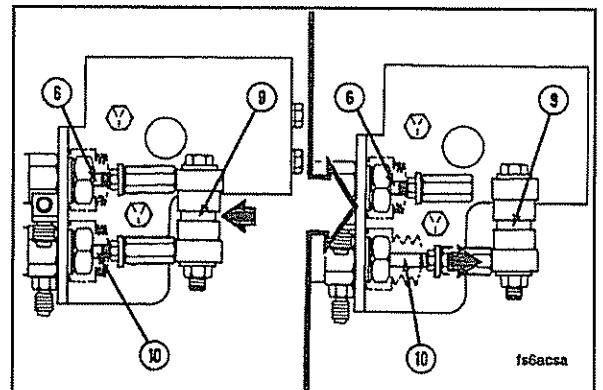

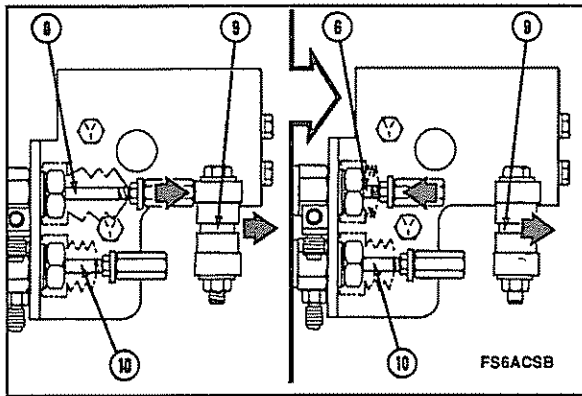

Use your hand, pull the throttle lever (9) **away** from the air cylinder (full fuel position). Pull the throttle cylinder extension rod (6) **toward** the throttle lever. The extension rod cap **must** touch the roller tappet on the throttle lever. Release the throttle cylinder extension rod. The rod **must** move **toward** the cylinder.


If the rod does **not** move smoothly or does **not** return to the retracted position, the cylinder **must** be replaced.

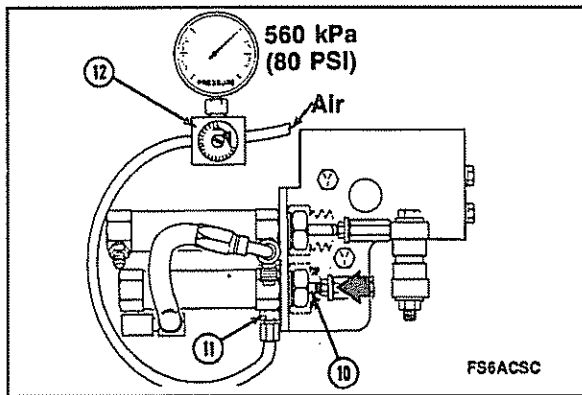

Connect a source of compressed air to a pressure gauge and a regulator (12). Connect a hose from the regulator to the braking cylinder air inlet (11).




Adjust the regulator until 560 kPa [80 psi] air pressure is applied to the air cylinder. The braking cylinder extension rod (10) **must** be in the retracted position completely when the pressure is applied.

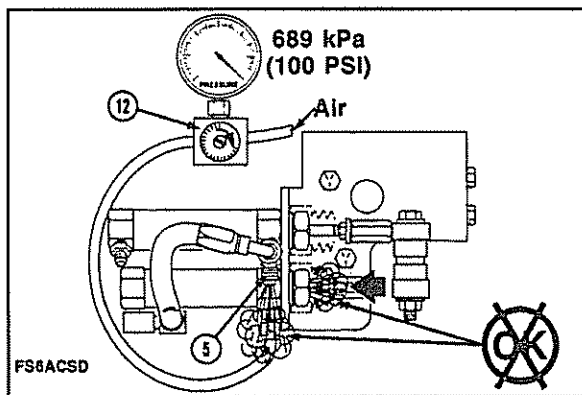

**Increase the regulator pressure to 689 kPa [100 psi].** There **must** be **no** air leaking from the vent (5) or around the extension rod.

**Reduce the air pressure to "0".** The extension rod **must** move approximately 1/2 of its distance of travel.

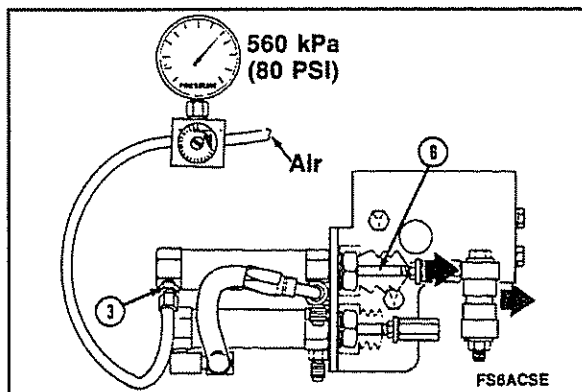

Connect the compressed air supply to the throttle cylinder air inlet (3).


Adjust the regulator until 560 kPa [80 psi] is applied to the air cylinder. The cylinder extension rod (6) **must** move the throttle lever to the full fuel position. Pull the throttle lever to be sure the lever is in the full fuel position.

Increase the **regulator pressure** to 689 kPa [100 psi]. There **must** be **no** air leaking from the vent (5) or around the throttle air cylinder.

Reduce the **regulator pressure** to 0. The extension rod **must** move to the retracted position.

If a cylinder is **not** within the air test specifications, the cylinder **must** be replaced. Refer to the following Procedure, Throttle Air Cylinder - Remove and Install in the K38 and K50 Shop Manual, Bulletin No. 3810304.

Disconnect the air supply from the air cylinder.

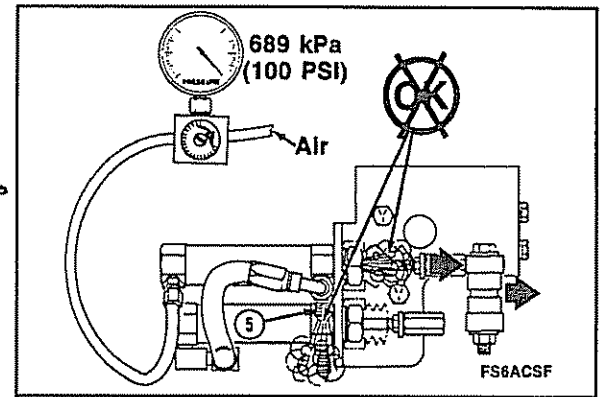


Pull the boots (7) off the cylinder jam nuts.

Apply grease to both of the cylinder extension rods (6) and (10). Apply grease to the side of the roller tappets (8) to lubricate the tappets and the bushings.


Install the boots on the jam nuts.

Connect the air supply line.

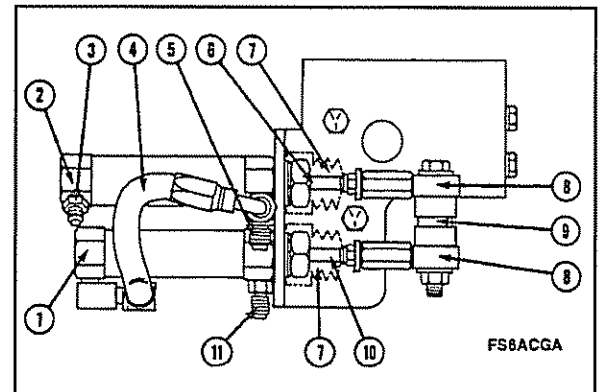

## Injectors


Every 6,000 hours or 2 years clean and calibrate the injectors. This procedure **must** be done at a Cummins Authorized Repair Location.

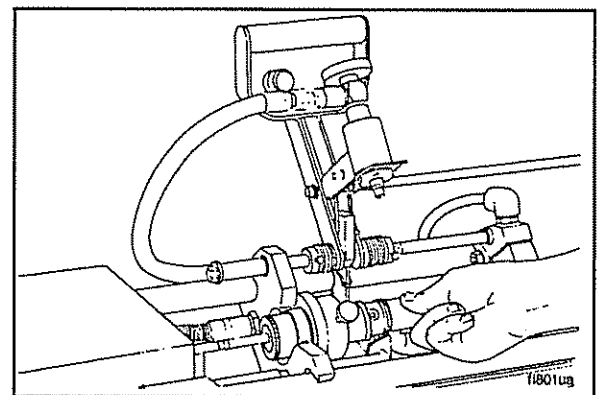


## Removal


Steam clean the engine. Steam is the best method of cleaning a dirty engine or a piece of equipment. If steam is **not** available, use a solvent to wash the engine.

Protect all electrical components, openings, and wiring from the full force of the cleaner spray nozzle.

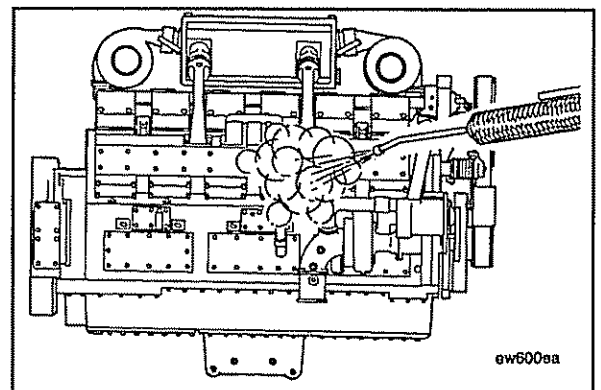


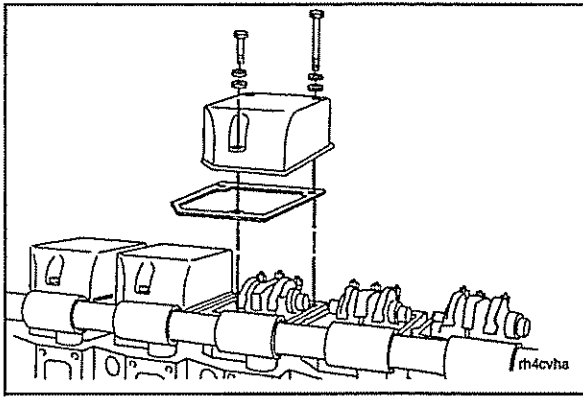

Remove the rocker lever cover.

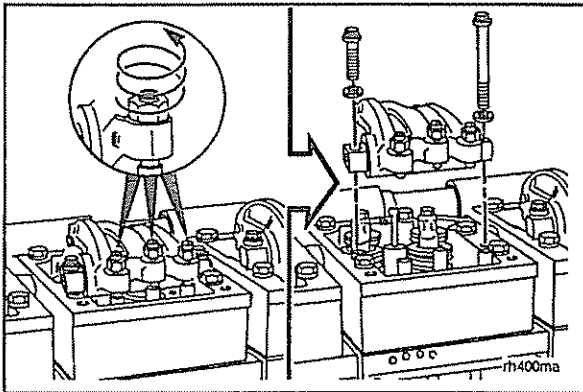


Remove the rocker lever assembly.

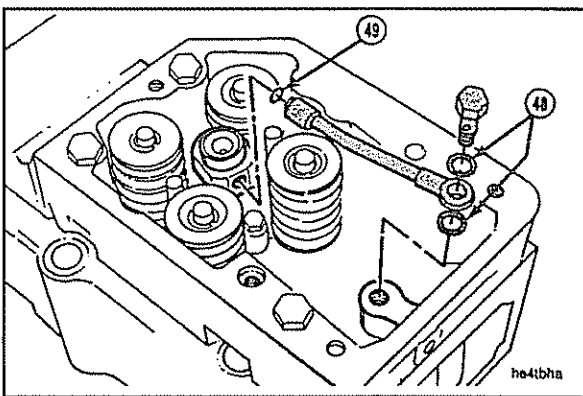

**NOTE:** This step applies **only** to engines equipped with STC or HVT injectors.

Remove the banjo connector mounting screw. Remove the oil transfer tube. Remove and discard the sealing washers (48) and the o-ring (49).

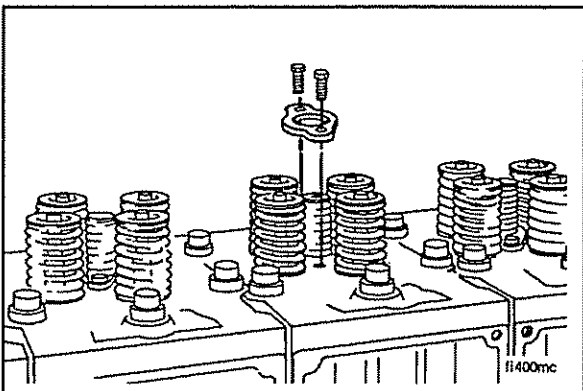


**NOTE:** The rocker housing has been removed from the illustration for clarity.


Remove the injector hold down capscrews. Remove the clamp.

**NOTE:** Do not let the tappet fall out of the HVT injector. Damage can result.

For STC or HVT injectors, use an injector puller, Part No. 3376497. Be sure the puller arms are firmly under the top stop screw. Tighten the clamping ring (1). Use the slide hammer to remove the injector.

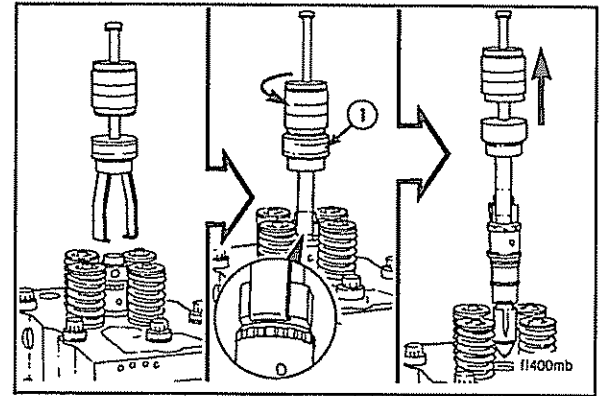

For standard injectors, use injector puller, Part No. 3376000 or 3376497. Put the split collar over the injector. Slide the locking collar over the split collar. Use the slide hammer to remove the injector.

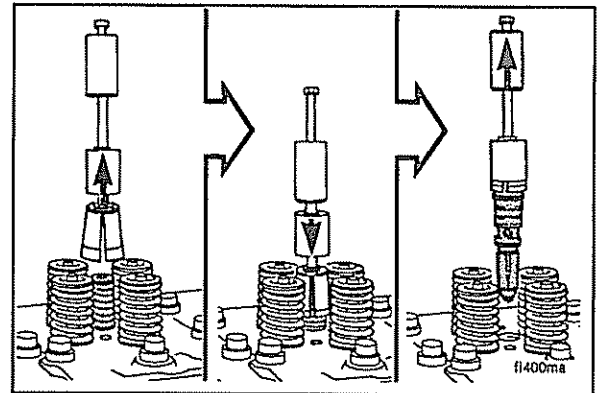

## Checking


**NOTE:** Injector plungers and barrels have a very precise fit and are damaged easily. Do not remove the plungers unless you have been trained using the proper techniques. Do not allow the plunger to fall out of the injector.

Remove the o-rings (1, 2, and 3). Discard the o-rings.

**NOTE:** Sealing rings are available in different thicknesses to adjust the injector protrusion.


Remove the sealing ring (4), and note the cylinder location.

Use a lint free cloth and clean the exterior of the injector. Carefully check the area where the sealing ring makes contact with the injector.

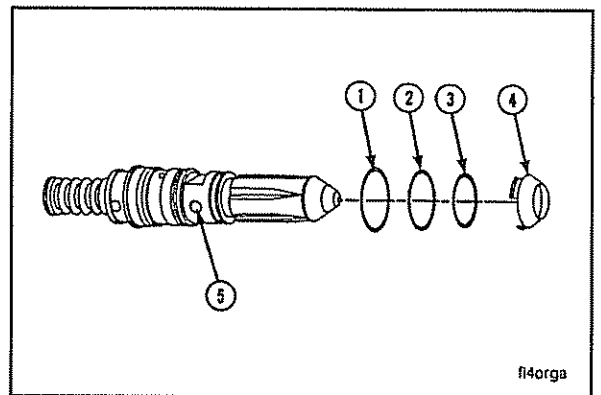


Check the orifice screen (5). It **must** be clean. If there is debris on the screen, remove the retaining clip and the screen for cleaning. Clean the screen in solvent and dry with compressed air. Install the screen and retaining clip.



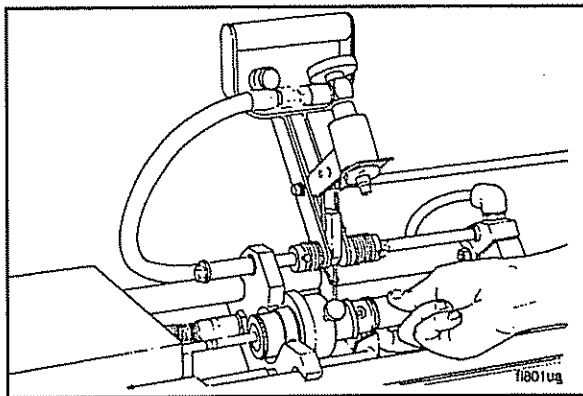

## Calibration

Calibrate the injectors. This procedure requires special equipment and **must** be done at a Cummins Authorized Repair Location. For PTD injectors, refer to the Injector PT Rebuild Manual, Bulletin No. 3379071. For HVT/STC injectors, refer to the PT (Type D) STC Injector Shop Manual, Bulletin No. 3810313.

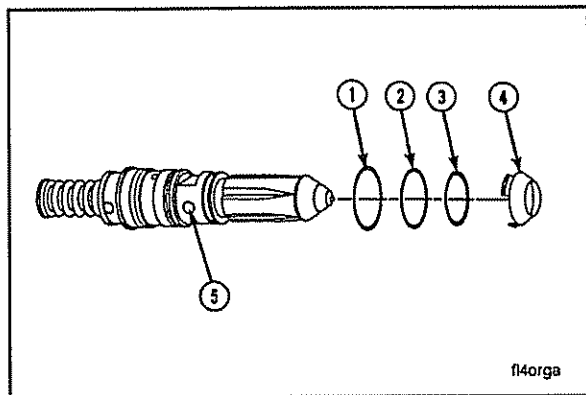

## Installation

Identify the o-rings so they can be installed in the correct injector groove.

O-ring (1), Part No. 3010510, has a red dot or stripe. The o-ring is a dull gray in appearance.


O-ring (2), Part No. 205216, has no markings.

O-ring (3), Part No. 193736, has a green dot or stripe. The ring is shiny black in appearance. Lubricate the o-rings with vegetable oil and install them on the injector.



Install the proper size seal ring (4).

**NOTE:** Premium K injectors use the same o-ring, Part No. 193736, in all three locations, (1,2,3). Premium K injectors can be identified by the presence of two balance orifices (5) in the injector body. Standard STC injectors have only one orifice.

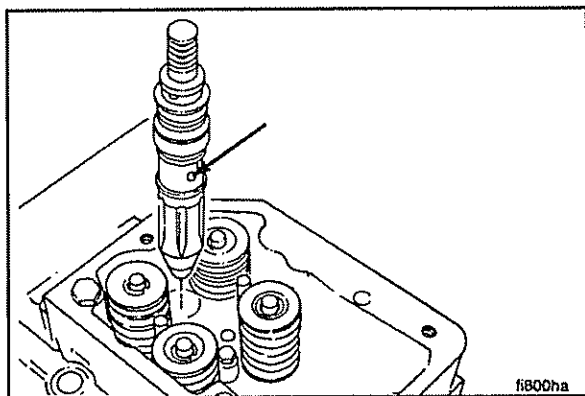


Position the standard injector in the bore. Turn the injector so that the injector screen points toward the hold down capscrew hole on the intake side of the head.

**NOTE:** Do **not** let the tappet fall out of the HVT injector. Damage can result.

The tappet **must** be installed correctly. The large holes in the side **must** be near the rocker lever assembly.


The tappet can **not** fall out of the STC Top Stop injector.

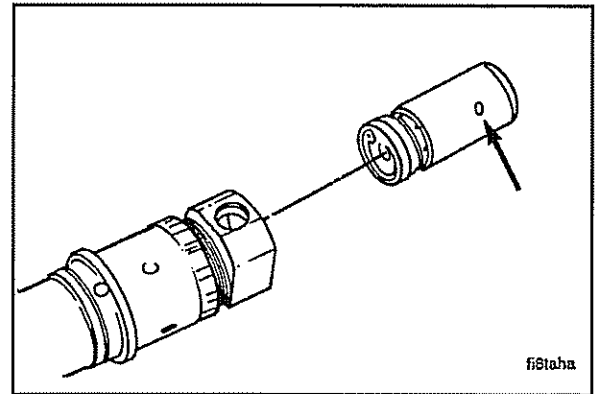

**NOTE:** Do **not** push the injector on the seat until it is correctly aligned.


Position the STC or HVT injector in the bore. Turn the injector so that the hole in the top stop screw points to the oil supply hole in the rocker lever housing.

Use the oil jumper tube and the connector screw as tools. Turn the injector until the holes are aligned. Remove the connector screw and the tube.

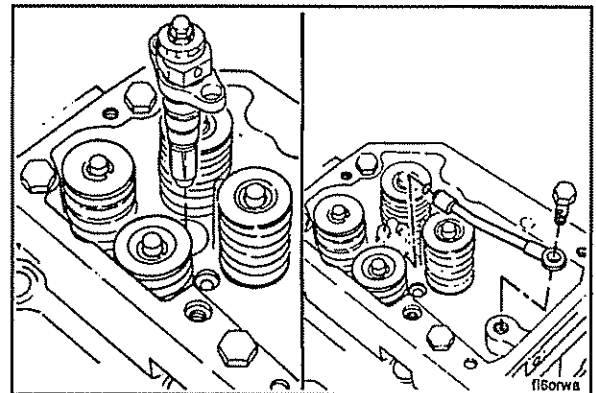


**Caution:** Do **NOT** use a wooden tool to push the injector on the seat. Failure can result due to splinters falling into the tappet. Use a socket size of 1-1/4 inch or 27 mm to seat the injector


Use a blunt object that touches the top stop screw. Use a quick, hard push with your hands to seat the injector. A single snapping sound will be heard when the injector is seated properly.

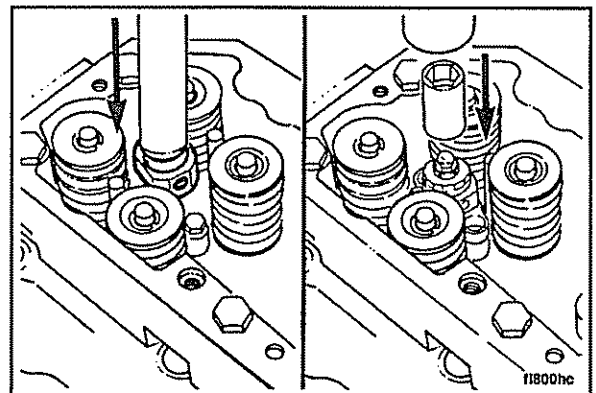

**NOTE:** The injector hold down clamp that is used on engines with STC or HVT requires capscrews that are 3 mm [1/8 inch] longer than those on other K38 and K50 engines.


Install the hold down clamp and the self-locking capscrews. Tighten the capscrews alternately and evenly so the clamp will be centered on the injector body. Tighten the capscrews to 16 N•m [145 in-lb].

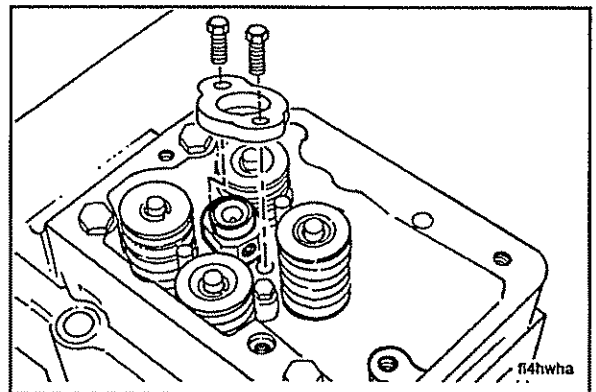

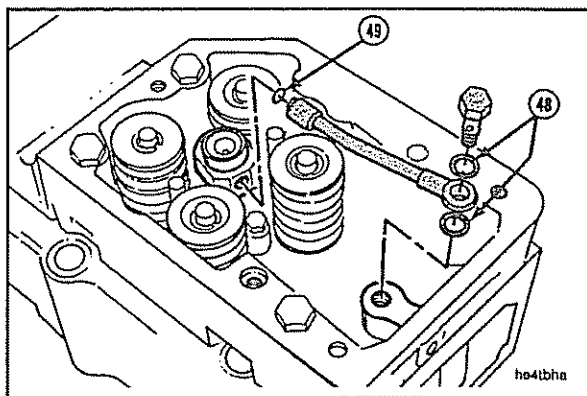


Install the o-ring (49) on the jumper tube. Lubricate the o-ring with engine oil. Install the jumper tube and the copper sealing washers (48). Install the connector screw. Tighten the screw to 25 N•m [20 ft-lb].

**NOTE:** The oil jumper tube for full top stop STC injectors is 8 mm [5/16 in] shorter than the tube used with the early HVT injectors. The tubes can **not** be mixed.

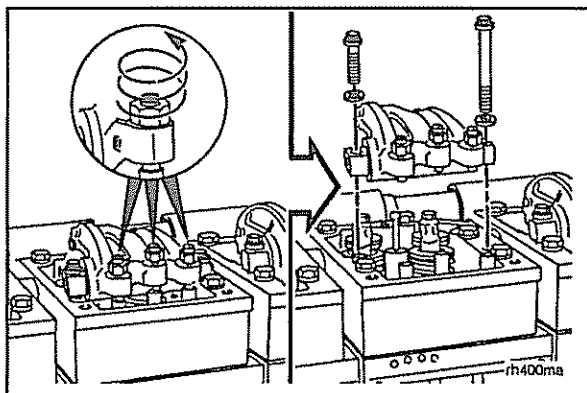


Install the rocker lever assembly and STC injector link, if applicable.

**Torque Value:** 90 N•m [65 ft-lb]

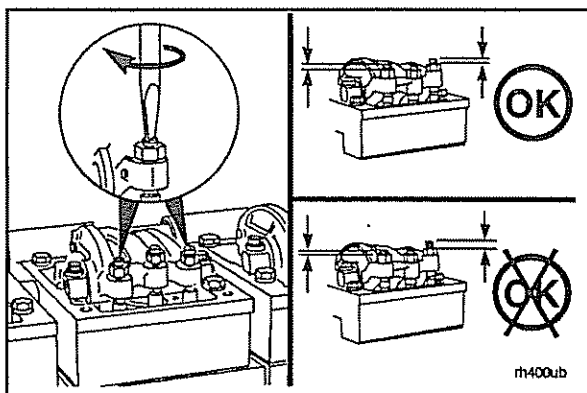

Adjust the rocker levers. Refer to Section 6 for this procedure.

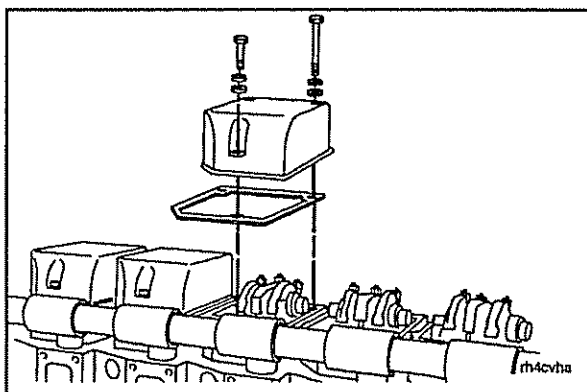

Install the rocker lever cover.

**Torque Value:** 40 N•m [30 ft-lb]

## Cooling System


### Cleaning System and Changing Antifreeze

**Caution:** Do not use caustic cleaners in the cooling system. Aluminum components will be damaged.


**NOTE:** Read Section V, Coolant Recommendations/Specifications, before attempting cooling system maintenance.

Every 2 years or 6,000 hours of operation (whichever comes first), change the coolant.

The cooling system **must** be clean to work correctly.

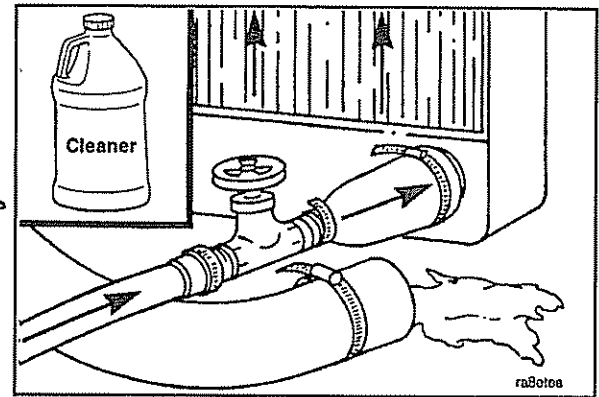

**Warning:** Wait until the temperature is below 50°C [120°F] before removing the coolant system pressure cap. Failure to do so can cause personal injury from heated coolant spray.

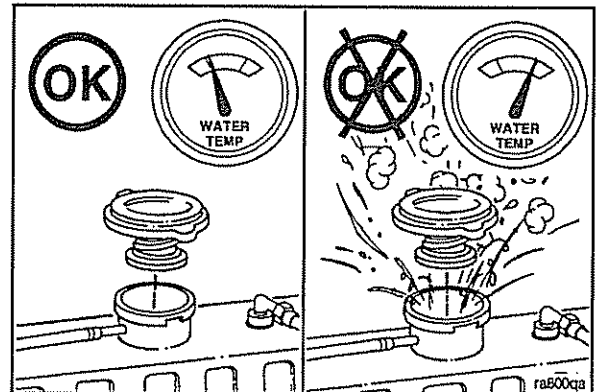


**NOTE:** The performance of RESTORE is dependent on time, temperature, and concentration levels. An extremely scaled or flow restricted system, for example, may require higher concentrations of cleaners, higher temperatures, or longer cleaning times or the use of RESTORE PLUS. RESTORE can be safely used up to twice the recommended concentration levels. RESTORE PLUS **must** be used only at its recommended concentration level. Extremely scaled or fouled systems may require more than one cleaning.


RESTORE	CC2610	(1 gallon)
RESTORE	CC2611	(5 gallons)
RESTORE	CC2612	(55 gallons)
RESTORE PLUS	CC2638	(1 gallon)



Drain the cooling system. Do **not** allow the cooling system to dry out. RESTORE will **not** be as effective if the cooling system is allowed to dry.

Do **not** remove the coolant filter.

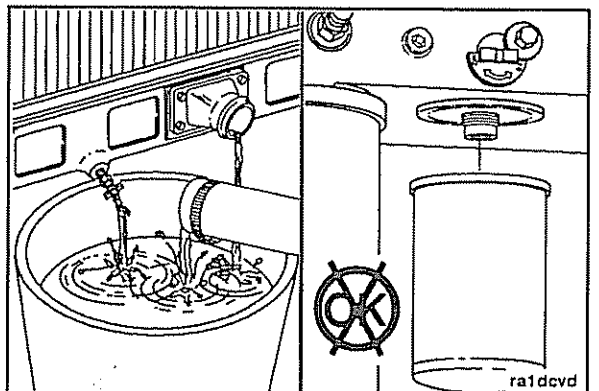


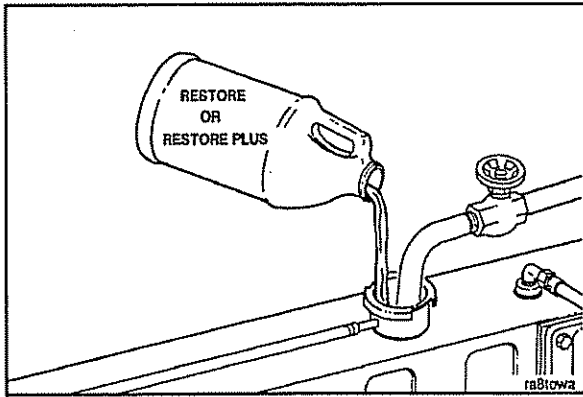

**Caution:** Fleetguard® RESTORE contains no antifreeze. Do not allow the cooling system to freeze during the cleaning operation.


Immediately add 3.8 liters [1 U.S. gallon] of Fleetguard® RESTORE, RESTORE PLUS, (or equivalent) for each 38 to 57 liters [10 to 15 gallons] of cooling system capacity, and fill the system with plain water.

Turn the heater temperature switch to high to allow maximum coolant flow through the heater core. The blower does **not** have to be on.

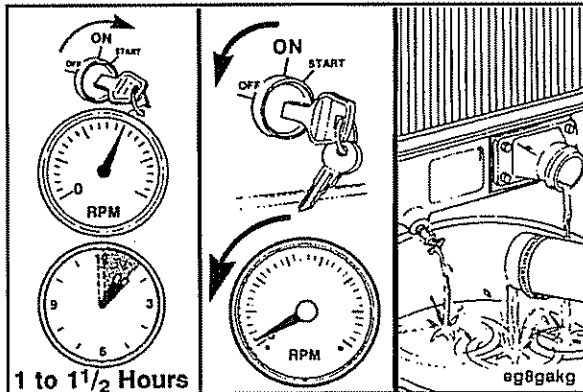


Operate the engine at normal operating temperatures (at least 85°C [185°F]) for 1 to 1 1/2 hours.

Shut the engine off, and drain the cooling system.

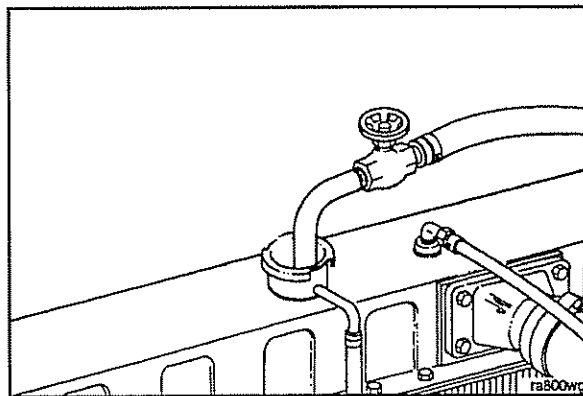

Fill the cooling system with clean water to flush the cooling system.

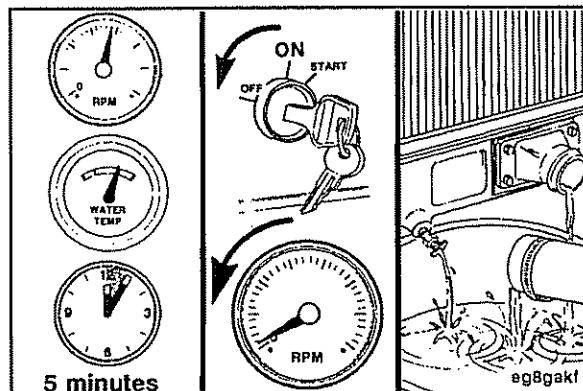

Operate the engine at high idle for 5 minutes with the coolant temperature above 85°C [185°F].

Shut the engine off, and drain the cooling system.

**NOTE:** If the water being drained is still dirty, the system **must** be flushed again until the water is clean.


Refill system with new heavy duty coolant and SCA as earlier described.

## Fan Hub


### Inspection

Every 6,000 hours or 2 years inspect the fan hub for proper end clearance and grease leakage.

Remove the fan belt. Refer to Section A for this procedure.

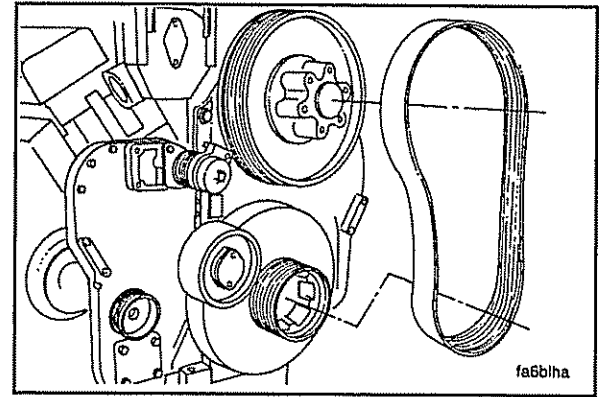


Rotate the fan hub pulley to check for rough or damaged bearings. Inspect the pulley grooves for excessive wear. Check for grease leakage. Use a dial indicator to check the bearing end clearance.

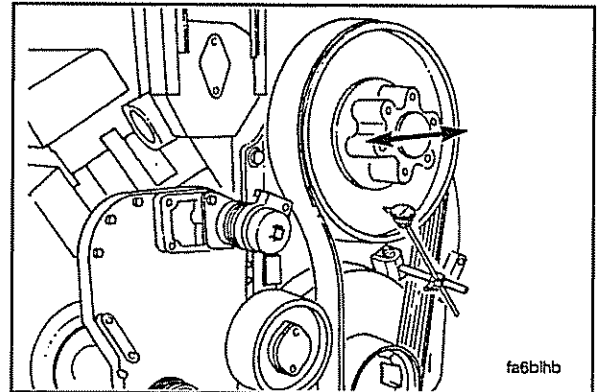



Bearing End Clearance		
mm		In
0.03	MIN	0.001
0.15	MAX	0.006

Replace a fan hub with a new or rebuilt unit as necessary. Refer to the Troubleshooting and Repair Manual, K38 and K50 Series Engines, Bulletin No. 3810432, for removal and replacement instructions.

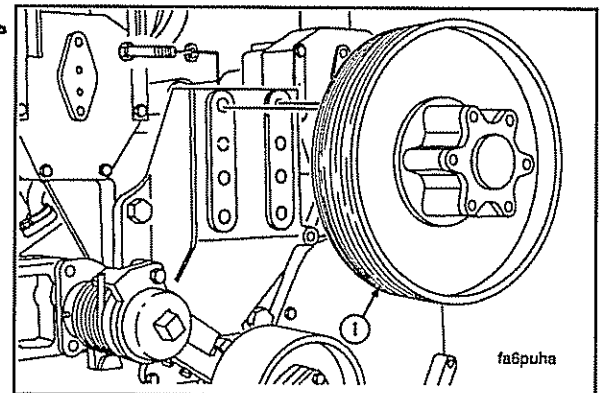

Install the fan belt. Refer to Section A for the installation procedures.

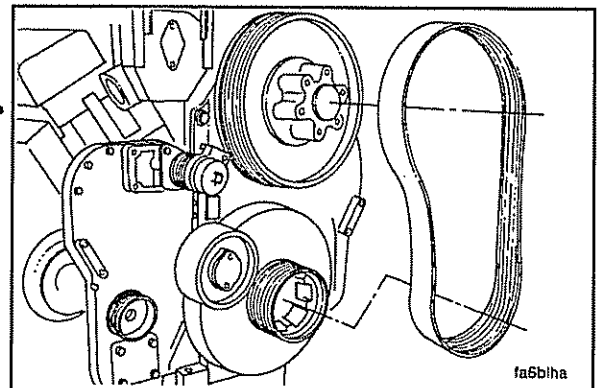

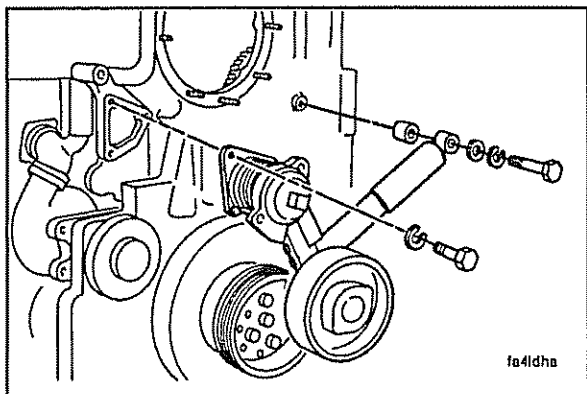


## Fan Idler Pulley Assembly

### Rebuild/Replacement




Every 6,000 hours or 2 years inspect the idler pulley assembly. Rebuild or replace the idler pulley as necessary. Refer to the Troubleshooting and Repair Manual, K38 and K50 Series Engines, Bulletin No. 3810432, for rebuild and replacement procedures.

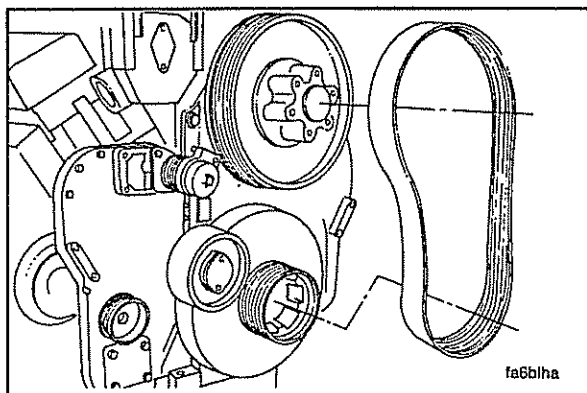

### Rebuild



Remove the fan belt. Refer to Section A for the removal procedures.

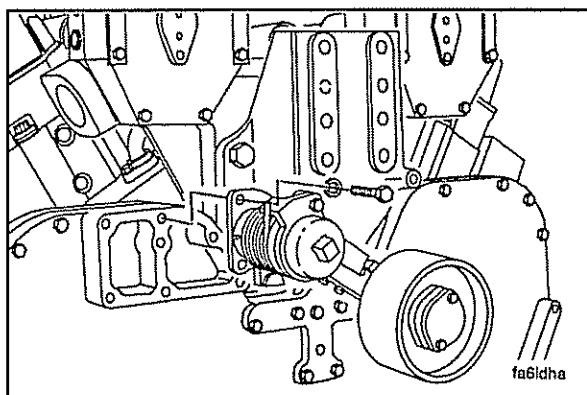

Remove the three capscrews. Remove the idler assembly.




**NOTE:** Engines with a 457 mm [18 in] fan center have an adapter plate between the idler and the front gear cover.



Remove the adapter plate.

Refer to the Shop Manual, K38 and K50 Series Engines, Bulletin No. 3810304, for rebuild procedures of the fan idler pulley and pivot arm.

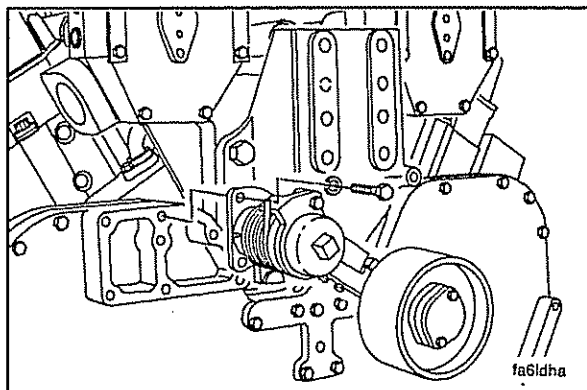

### Installation

**NOTE:** If the engine has two vibration dampers, a longer idler arm than shown is required.

If the engine has a fan hub with 457 mm [18 in] center (low mount fan), an adapter plate is required between the idler arm and the front gear cover.



Check to make sure the spring on the idler arm is **not** under tension. This will aid the future installation of the fan hub.




Install the fan belt idler assembly, the three lock washers and capscrews.



**Torque Value:** 60 N•m [45 ft-lb]

Install the fan belt. Refer to Section A.

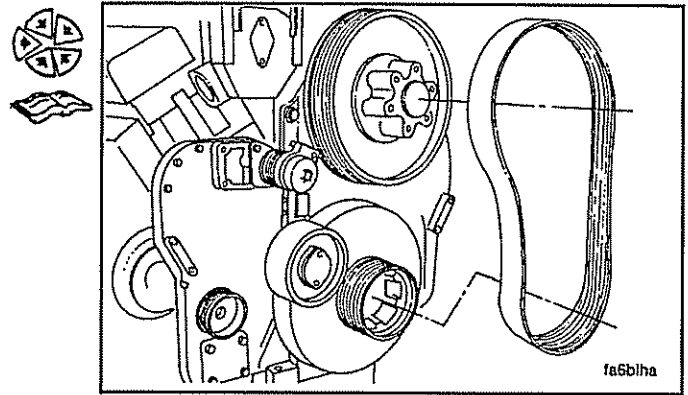


## Water Pump

### Rebuild/Replacement

Every 6,000 hours or 2 years rebuild or replace the water pump.

**NOTE:** A minor chemical build up or streaking at the water pump weep hole is normal. Do **not** repair or replace the water pump unless an actual leak is confirmed. Refer to the Troubleshooting and Repair Manual, K38 and K50 Series Engines, Bulletin No. 3810432.

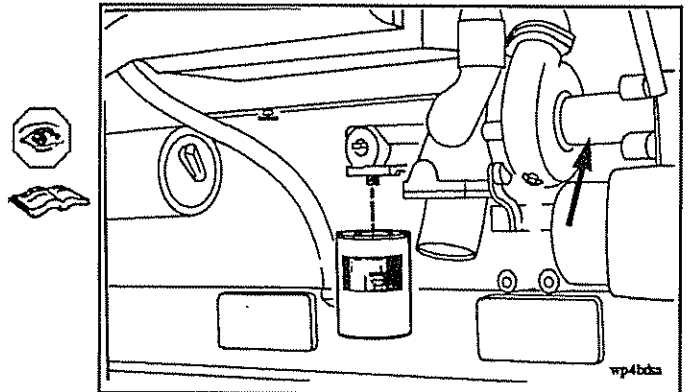


## Thermostats and Seals


### Replacement

Remove the:

- (1) Capscrews and lock washer (two each)
- (2) Plate, cover (or water filter head)
- (3) Seals, o-ring (two each)
- (4) Capscrews and lock washers (four each)
- (5) Shield, heat (right bank only)
- (6) Capscrews and lock washers (two each)
- (7) Housing, thermostat
- (8) Gasket

Check the support. For further information, refer to Procedure No. 08-15, Thermostat Support - Clean and Check for Reuse, in the K38 and K50 Shop Manual, Bulletin No. 3810304.

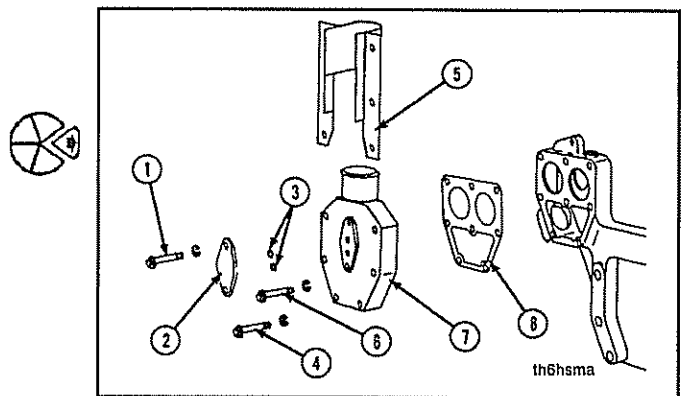

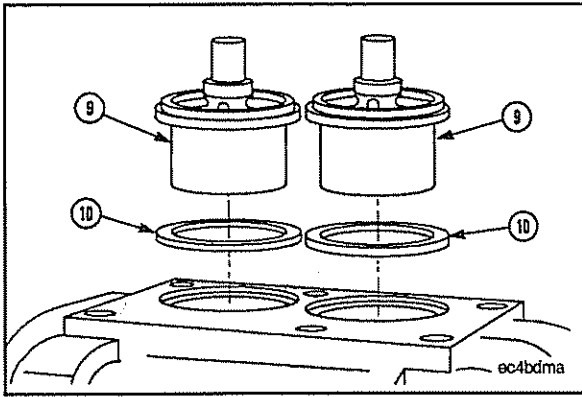


Remove the thermostats. Remove the seals (10) from the housing. Discard the seals.



Check the thermostats for wear. If the barrel of the thermostat is worn or fretted, it must be discarded.

Clean all gasket surfaces and bores.


Use solvent or steam. Clean the parts.

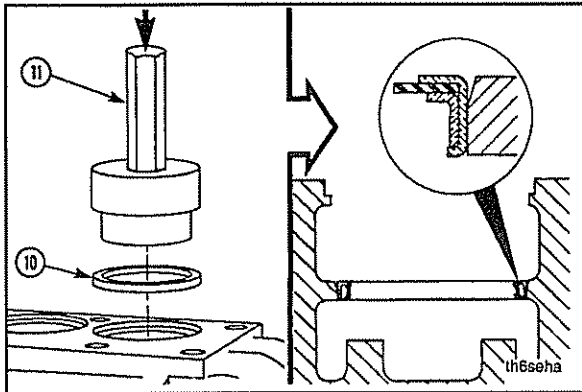

The seal must be installed with the part number positioned up.

Use a mallet and thermostat seal driver, Part No. 3375411, or equivalent, to install the thermostat seal. Install the seal.


**NOTE:** Install the seal no more than 0.51 mm [0.020 in] below the top of the cast edge.

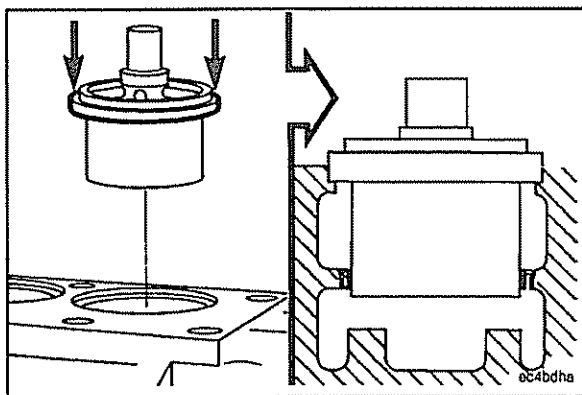

Install the thermostat by pushing on the outer rim.

**NOTE:** If the engine being serviced is a K50, make sure the correct thermostat is installed. Thermostats for the K38 and K50 engines are different.

The K50 thermostats contain a nitrile rubber seat vulcanized to the brass collar at the barrel seat. This seat prevents coolant leakage and wear. The thermostat with the rubber seat must be on K50 engines. The thermostat with the rubber seat is not required for the K38 engine, but can be installed.

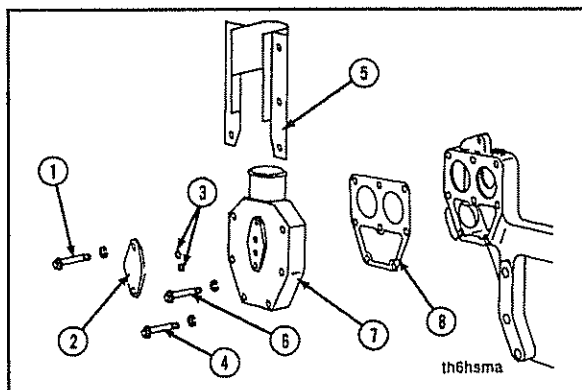

**NOTE:** Do not tighten the capscrews until assembly is complete.

Install the:

- (8) Gasket
- (7) Housing, thermostat
- (6) Capscrews and lock washers (two each)
- (5) Shield, heat (right bank only)
- (4) Capscrews and lock washers (four each)
- (3) Seals, o-ring (two)
- (2) Plate, cover (or filter head)
- (1) Capscrews and lock washers

Tighten the capscrews.

**Torque Value:** 45 N•m [35 ft-lb]


# Turbocharger

## Inspection

Inspect the turbocharger every 6,000 hours or 2 years. Remove the air intake and the exhaust piping. Check the turbocharger as follows:


Look for damaged or cracked compressor or turbine blades. Check to see that the turbocharger shaft spins freely.

**NOTE:** If visual inspections or dimensional checks indicate a problem, contact a Cummins Authorized Repair Location for assistance. Refer to the model number on the turbocharger dataplate.

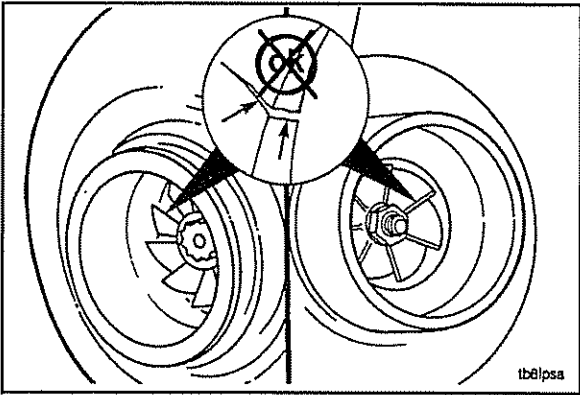

## Holset Model HC5 and AIREsearch Model T-18A


Measure the axial clearance (end to end). Rebuild or replace the turbocharger if axial motion (end play) is greater than specified below. Refer to the Troubleshooting and Repair Manual, K38 and K50 Series Engines, Bulletin No. 3810432, for removal procedures and to the Turbocharger Rebuild Manual, Bulletin Nos. 3379091 (T-18A), 3810243 (HC5), or 3810386 HT100 Shop Manual, for rebuild procedures.

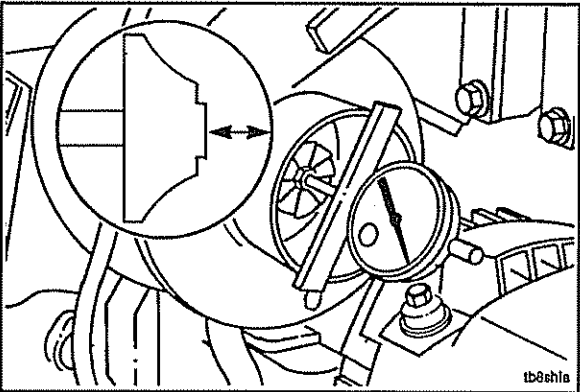


Model	End Play Dimension	
	Min	Max
HC5A	0.05 mm [0.002 in]	0.13 mm [0.005 in]
T18A	0.10 mm [0.004 in]	0.23 mm [0.009 in]
HT100	0.06 mm [0.002 in]	0.16 mm [0.006 in]

Measure the radial clearance (side to side).


**NOTE:** Hold the shaft toward the feeler gauge to check this dimension.

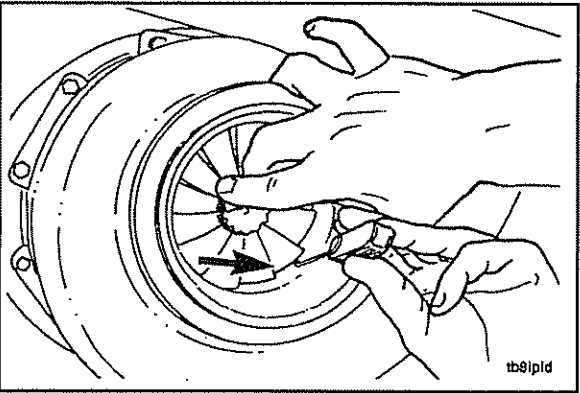

Model HC5A	
Compressor Impeller	
Min	Max
0.15 mm [0.006 in]	0.45 mm [0.018 in]
Turbine Wheel	
Min	Max
0.20 mm [0.008 in]	0.55 mm [0.021 in]
Model T18A	
Compressor Impeller	
Min	Max
0.08 mm [0.003 in]	0.18 mm [0.007 in]

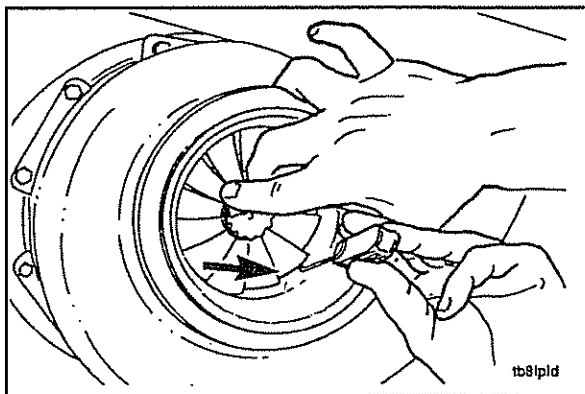

Model HT100 Compressor Impeller	
Min	Max
0.25 mm [0.010 in]	0.46 mm [0.018 in]
Turbine Wheel	
Min	Max
0.38 mm [0.015 in]	0.53 mm [0.021 in]

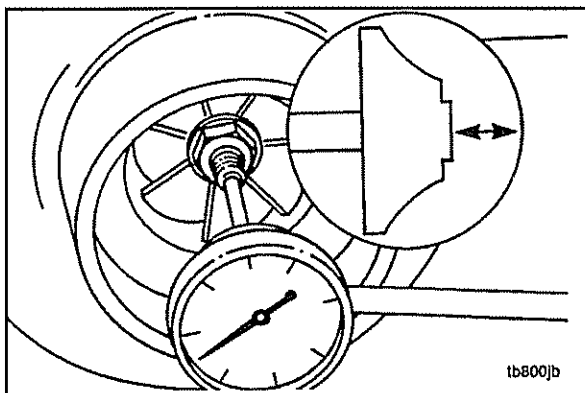


#### Brown Boveri®, Model RR-153 and RR-151

To measure axial clearance, use Part No. ST-537 Dial Depth Gauge, or a dial indicator. Measure the axial motion.

BBC (RR-151) and (RR-153) End Clearance			
mm		In	
0.09	MIN	0.004	
0.13	MAX	0.005	

If the end clearance exceeds the specifications, the part **must** be replaced or rebuilt. Refer to Bulletin No. 3810235, Exhaust Gas Turbocharger, RR-153, Instructions for Operation and Maintenance or Bulletin No. 3810325, Exhaust-Gas Turbocharger, RR151-12, Instructions for Operation and Maintenance.

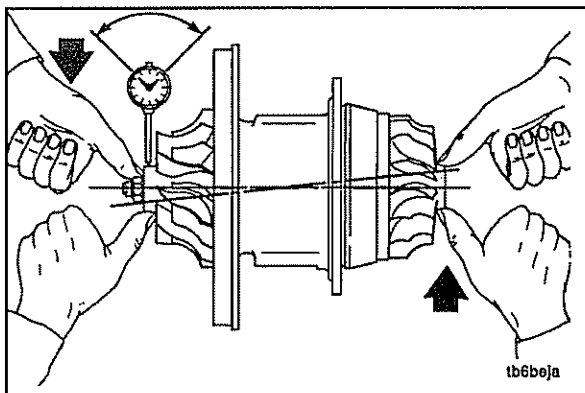

**NOTE:** The compressor and turbine casings do **not** require removal to measure the radial clearance. The parts are shown removed for clarity.

Use a dial indicator. Measure the clearance.

BBC (RR-151) and (RR-153) Bearing Radial Clearance			
	mm		In
RR-153	0.55	MAX	0.021
RR-151	0.75	MAX	0.030


If the clearance exceeds the specifications, the part **must** be replaced or rebuilt. Refer to Bulletin No. 3810235, Exhaust-Gas Turbocharger, RR-153, Instructions for Operation and Maintenance or Bulletin No. 3810315, Exhaust-Gas Turbocharger, RR151-12, Instructions for Operation and Maintenance

## Air Compressor

### Checking


Complete air compressor inspection is required every 6,000 hours or 2 years.

**NOTE:** All air compressors have a small amount of oil carryover which lubricates the piston rings and moving parts. When this oil is exposed to normal air compressor operating temperatures over a period of time, it will form varnish or carbon deposits. If the following inspections are **not** done, the air compressor piston rings will be affected by high operating temperatures and pressures, and will **not** seal correctly.

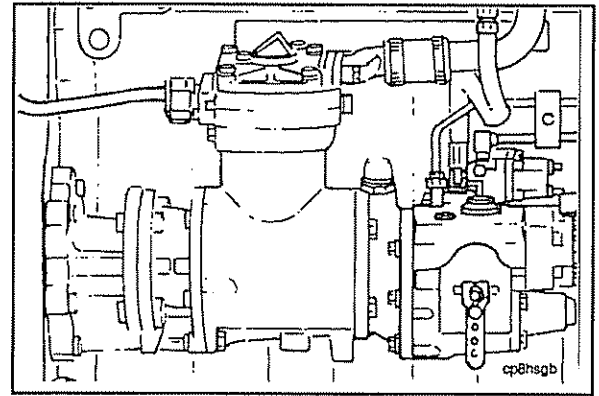

### Air Compressor Discharge-Checking


Drain the air system wet tank to release the system air pressure. Remove the air discharge line from the air compressor.

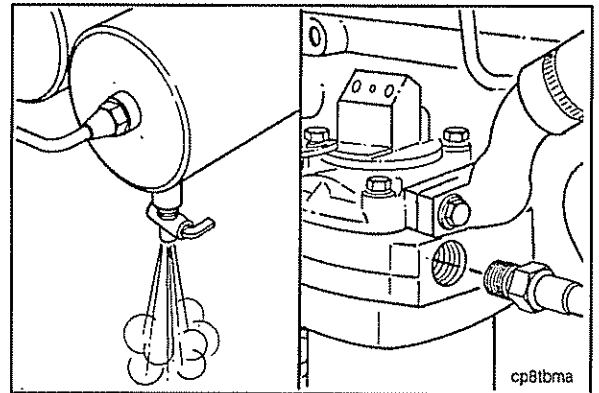


Measure the total carbon deposit thickness inside the air discharge line as shown. If the total carbon deposit (X) exceeds 2 mm [1/6 inch], clean and inspect the cylinder head, the valve assembly, and the discharge line. Replace if necessary. Refer to the appropriate Air Equipment Manual listed below for procedures, or contact your Cummins Authorized Repair Location:




- Single Cylinder, Bulletin No. 3810242
- Twin Cylinder, Bulletin No. 3379056

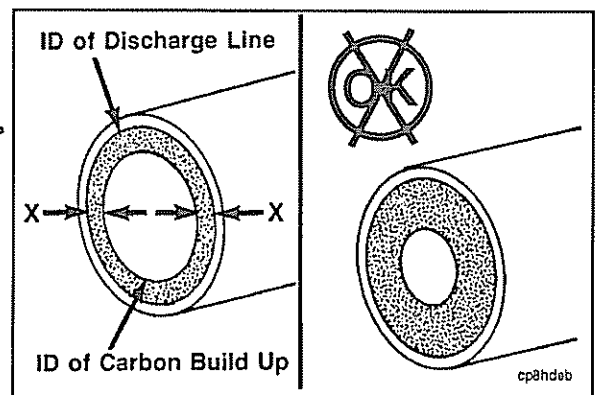


If the total carbon deposit exceeds specifications, continue checking the air discharge line connections, up to the first tank, until total carbon deposit is less than 2 mm [1/16 inch]. Clean or replace any lines or connections that exceed this specification.

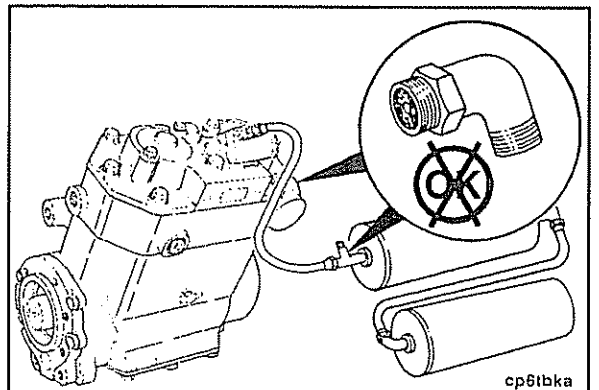

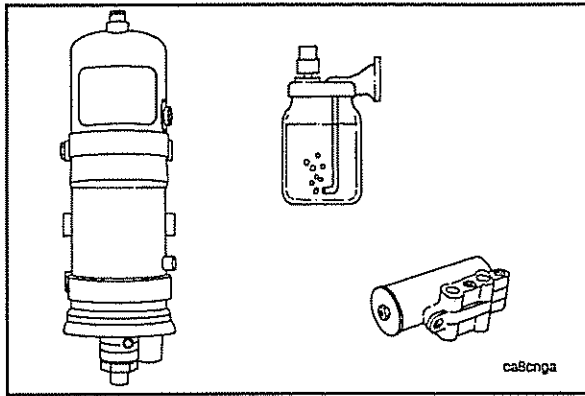


Inspect any air driers, spitter valves, pressure relief valves, and alcohol injectors for carbon deposits or malfunctioning parts. Inspect for air leaks. Maintain and repair the parts according to the manufacturer's specifications.

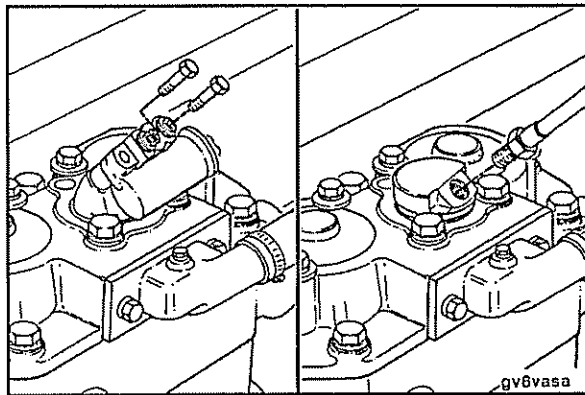


### **Air Compressor Intake-Checking**

Remove the air governor or air governor signal line from the air compressor unloader body.

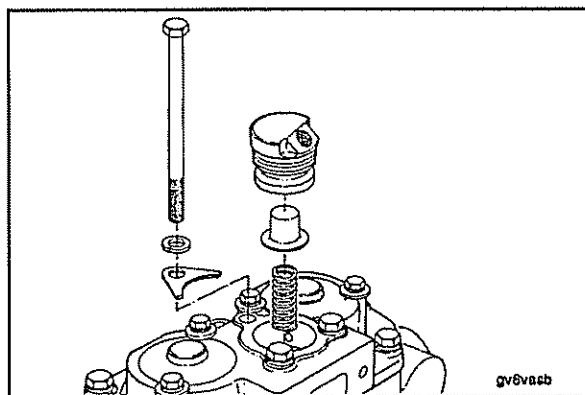

Remove the center unloader valve.

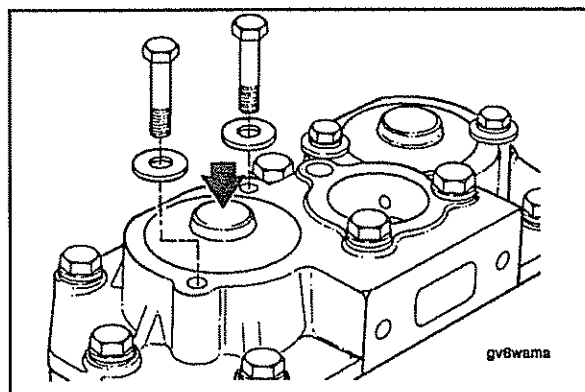


**Caution:** The unloader valve body is installed with spring tension. To avoid personal injury, hold unloader body down while removing the capscrews.




Hold the unloader body down and remove the two capscrews and washers.

- Remove the two unloader assemblies. One is above each cylinder. Discard the o-rings and seals.


Clean the unloader valves with solvent and a non-metallic brush to remove carbon. Do **not** use a sharp object. The sealing surfaces can be damaged.

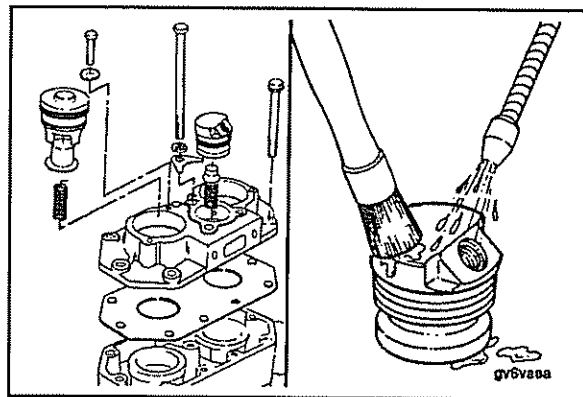

Inspect the upper part of the center unloader valve cap where the rectangular ring seal seats for scoring. Replace if scored.

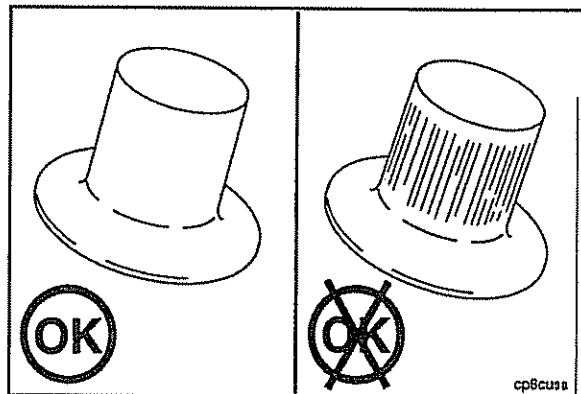


Visually inspect the unloader valves for deep scratches or cracks. Replace if scratched or cracked.

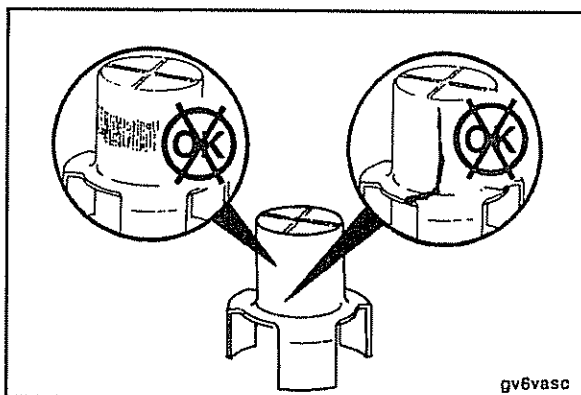


Visually inspect the unloader valves for carbon buildup. If carbon or heavy varnish is present, remove, clean, and inspect the compressor head and the valve assembly. Replace the parts as necessary. Refer to the appropriate Air Equipment Manual listed below for procedures, or contact your nearest Cummins Authorized Repair Location:



- Single Cylinder, Bulletin No. 3810242.
- Twin Cylinder ST676, Bulletin No. 3810257
- Twin Cylinder, ST773, Bulletin No. 3810347

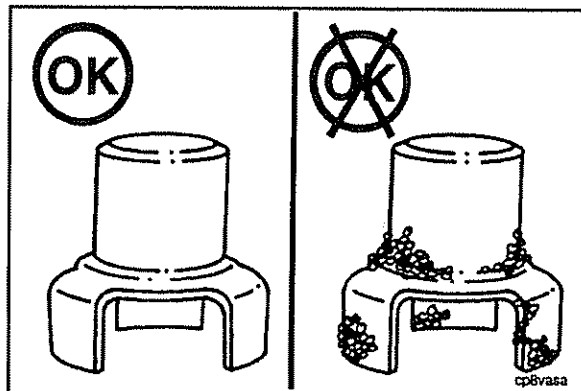

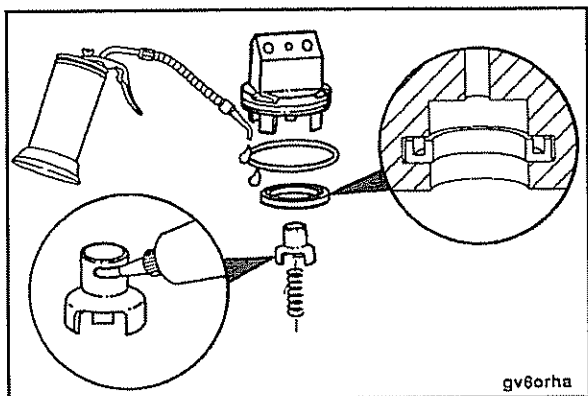

Install the unloader valve cap spring in the air compressor.



**NOTE:** Some unloader bodies require 2 yellow o-rings. Lubricate the unloader body o-ring with engine oil.

**NOTE:** The rectangular ring seal must be installed with the grooved side up.




Install the rectangular ring seal as shown.




Use anti-seize compound to lubricate the outside diameter of the cap.



Install the unloader valve cap in the unloader body.

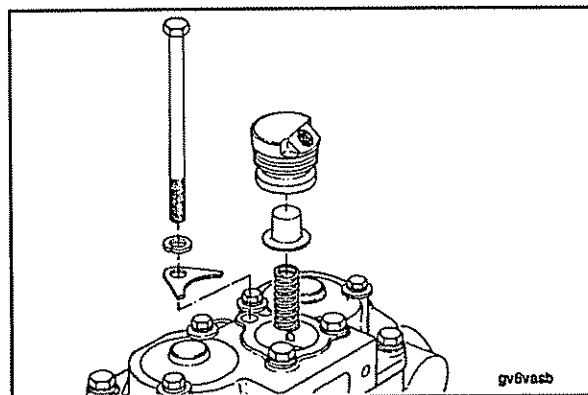


Install the center unloader. Tighten the capscrew to 40 N•m [30 ft-lb].

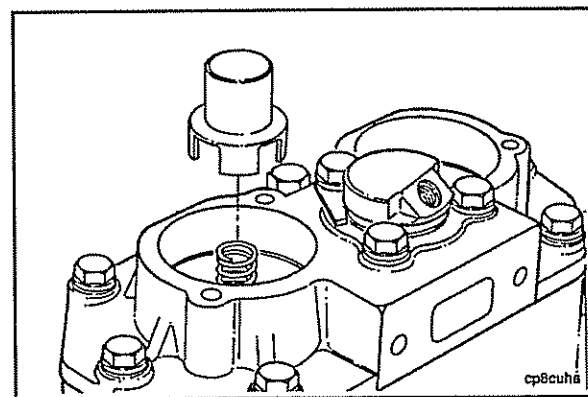

Install the cap into the cover and make sure the three tangs are in the three slots of the intake valve seat.



Lubricate the unloader valve with anti-seize compound.

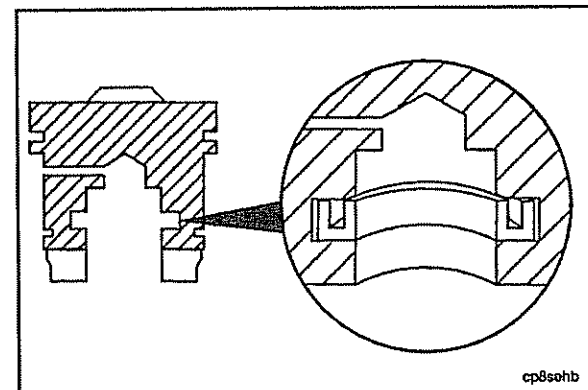


**Caution:** The rectangular ring seal **MUST BE** installed with the grooved side up; failure to do so will result in air system damage and brake failure.




Install a new rectangular seal inside the unloader body cavity.

Install new top and bottom o-ring seals.

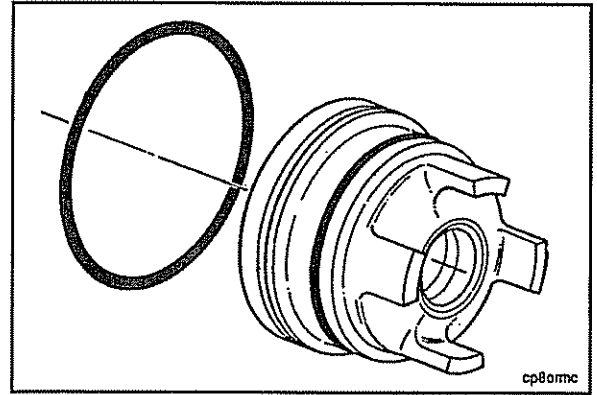

Use clean engine oil to lubricate the seals.  
Install the unloading body into the cover.

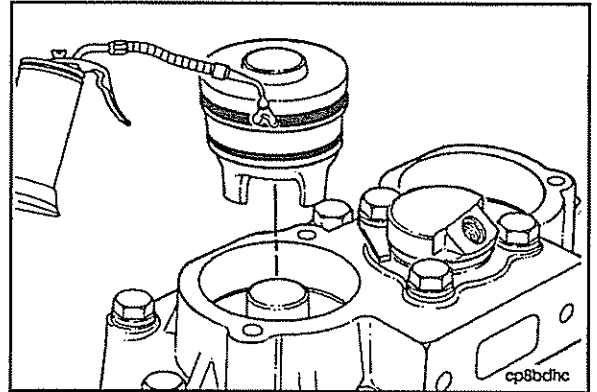


Install the unloading valve body.


**NOTE:** Press the unloading valve body down to be sure the tangs of the unloader valve cap are in the three slots of the intake valve seat. If the parts are not aligned, the compressor will not function properly.


Hold the unloading body down and install the two plain washers and captive washer capscrews.

Tighten the capscrews to 15 N•m [120 in-lb] torque.

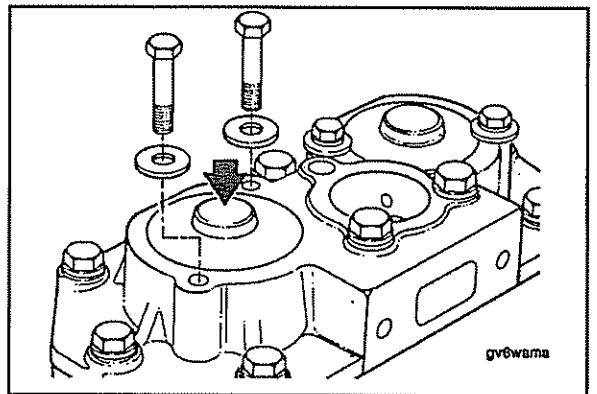


Install the air governor or air governor signal line to the unloader body.

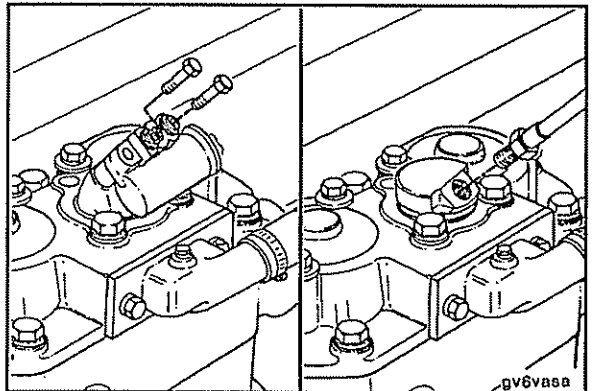

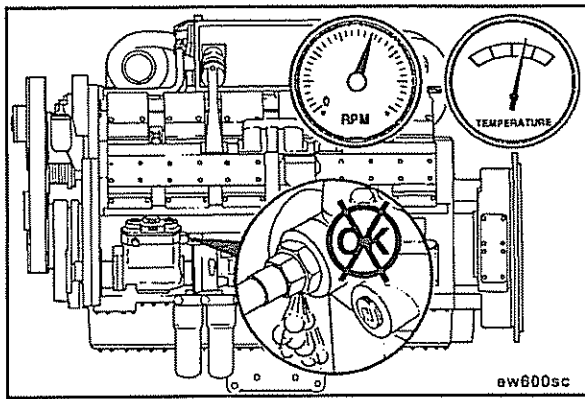

Operate the engine and check for air leaks.

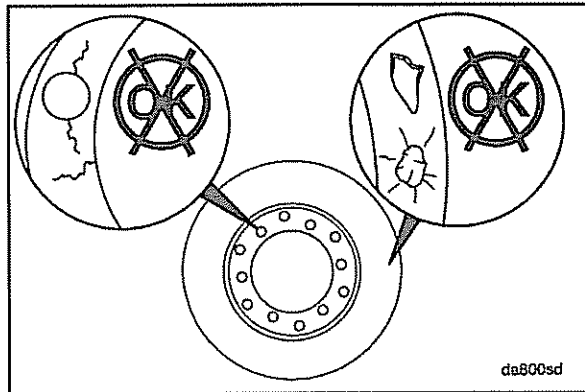


## Vibration Damper

### Checking

**NOTE:** Vibration dampers have a limited service life. The dampers **must** be inspected every 6,000 hours of service, and **must** be replaced after 24,000 hours in service. K2000 engine dampers are replaced every 12,000 hours.

**NOTE:** Do **not** repair or balance a viscous damper in the field.

- Use solvent. Clean the exterior of the damper.
- Inspect the mounting flange for cracks.
- Inspect the housing for dents, bulges, or leaks.
- Replace the damper if it is damaged.

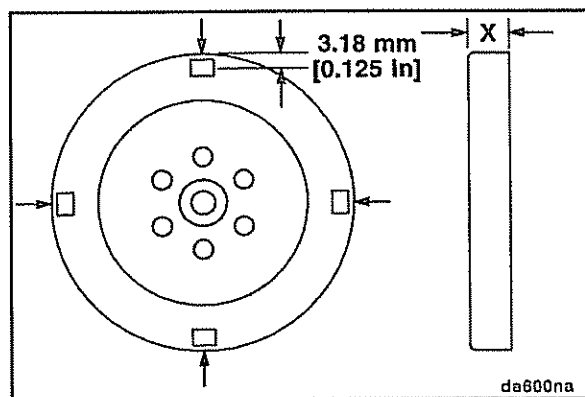

### Thickness Measurement

Use a paint solvent and a fine emery cloth. Remove paint from the front and back of the housing at the four areas as shown in the drawing.

Measure the damper thickness no less than 3 mm [1/8 inch] from the outside circumference to be sure readings are taken on a flat surface.

Measure the thickness (x) at four locations around the damper, 90 degrees apart. The readings **must not** vary more than 0.25 mm [0.010 inch]. Refer to the Maximum Vibration Damper Thickness table for the thickness. If the thickness exceeds these specifications, the damper **must** be replaced.

Maximum Vibration Damper Thickness		
Vendor	mm	in
Houdaille®	65.38	2.574
Made in England F-82 and After	65.66	2.585
Made in England Before F-82	65.91	2.595


**NOTE:** If the damper has been in service for 24,000 hours or more, it **must** be replaced, regardless of the thickness measurement. Dampers on K2000 engines **must** be replaced after 12,000 hours of service.

## Damper Leakage Detection

If visual inspection found signs of leaks, thorough leakage detection is required.

Use crack detection developer, Part No. 3375434 or equivalent. Spray the rolled lip of the damper.


**NOTE:** The crack detection kit, Part No. 3375432, contains the necessary cleaner, the penetrant and the developer to check for cracks using the dye penetrant method.

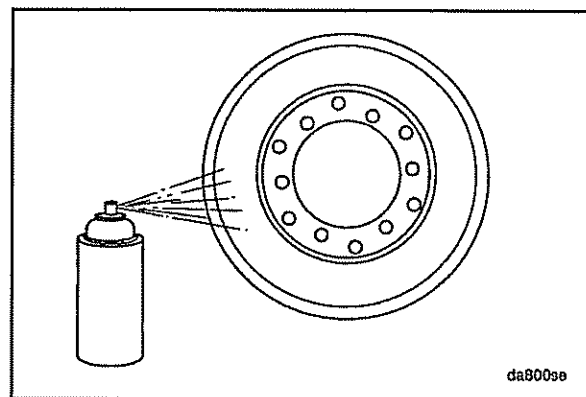

**Caution: Wear protective clothing to prevent personal injury from burns.**


Place the damper in an oven with the rolled lip **toward** the bottom.

Adjust the temperature of the oven to 93°C [200°F] and allow the damper to remain in the oven for 2 hours.

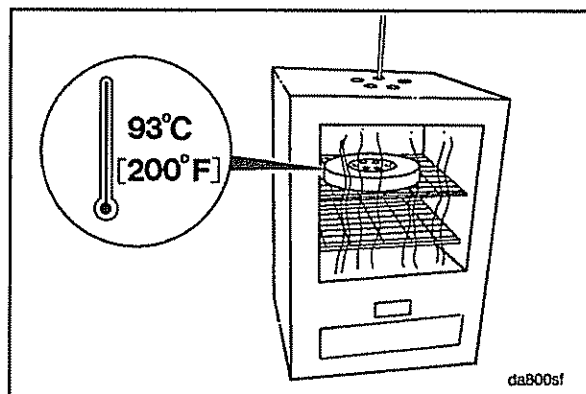

**Caution: Wear protective clothing to prevent personal injury from burns.**

Remove the damper and look for fluid leakage around the rolled lip. The damper **must** be replaced if there is any fluid leakage.

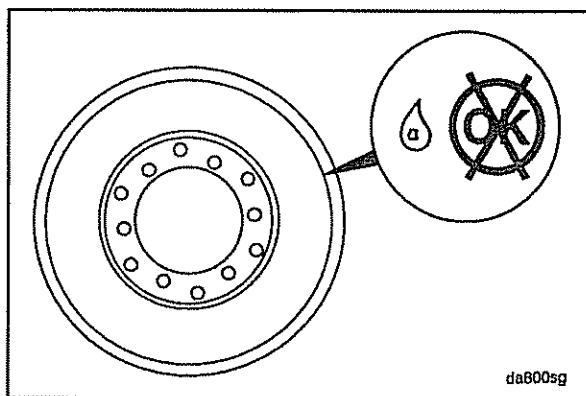


## Engine Protection System

### Calibration

The engine protection system **must** be calibrated every 6,000 hours or 2 years. Follow the manufacturer's recommended maintenance procedures.

If the CompuSave unit is in use, refer to the Operations and Maintenance Manual for the Flight Systems 9560 Test Set, Bulletin No. 57-9560-01.

If the Flight Systems Engine Saver is in use, refer to the Engine Saver Level 7 Manual, Bulletin No. 57-A550-26.

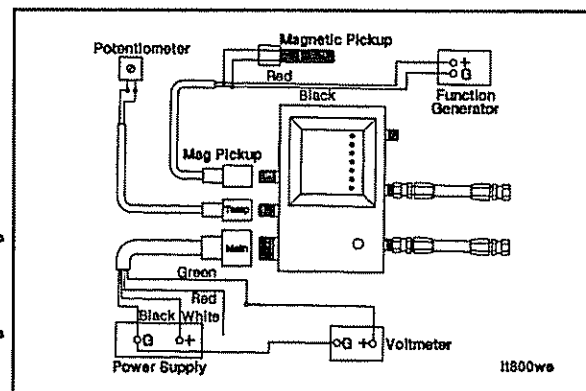



**Section 8 - Other Maintenance Procedures**  
**Section Contents**

	Page
Miscellaneous .....	8-2

## Miscellaneous



On the following components follow the manufacturer's recommended maintenance procedures.

- Alternator
- Generator
- Starter
- Air Compressor (non-Cummins)
- Electric Connections
- Batteries
- Freon Compressor
- Hydraulic Governor
- Fan Shaft Bearings
- Clutch or Marine Gear

## Section D - Systems Diagrams

### Section Contents

	Page
<b>Air System Flow Diagrams</b> .....	D-16
Exhaust System - Center Mount Aftercooler .....	D-16
Exhaust System - KTTA Engines .....	D-17
Intake System - Center Mount Aftercooler .....	D-16
Intake System - KTTA Engines .....	D-17
<b>Compressor Air System Flow Diagram</b> .....	D-18
<b>Coolant System Flow Diagrams</b> .....	D-11
Cooling System - Top Mounted Aftercooler .....	D-11
Cooling System Flow (LTA) - K2000, KTTA50-G2, KTA50-G3/G4 .....	D-13
Cooling System Flow (LTA)-K2000, KTTA50-G2, KTA50-G3/G4 .....	D-14
Cooling System Flow (Outboard Aftercoolers) .....	D-12
Thermostat Housing Flow .....	D-15
<b>Fuel System</b> .....	D-3
<b>Fuel Systems Flow Diagram</b> .....	D-3
<b>General Information</b> .....	D-2
<b>Lubricating Oil Flow Diagrams</b> .....	D-4
<b>Lubricating Oil System</b> .....	D-4
Front Gear Train .....	D-6
Full Flow Lubricating Oil Filter Head .....	D-8
Piston Cooling, Connecting Rod, Overhead .....	D-5
Rear Gear Train, Turbocharger .....	D-7
STC Lubricating Oil Flow (Advanced Timing) Hydromechanically Controlled .....	D-9
STC Lubricating Oil Flow (Normal Timing) Hydromechanically Controlled .....	D-10


## General Information

The following drawings display the flow through the engine systems. Although parts can change between different applications and installations, the flow remains the same. The systems shown are:

- Fuel System
- Lubricating Oil System
- Coolant System
- Intake Air System
- Exhaust Air System
- Compressed Air System

Knowledge of the engine systems can help you in troubleshooting, service and general maintenance of your engine.

## Fuel Systems Flow Diagram

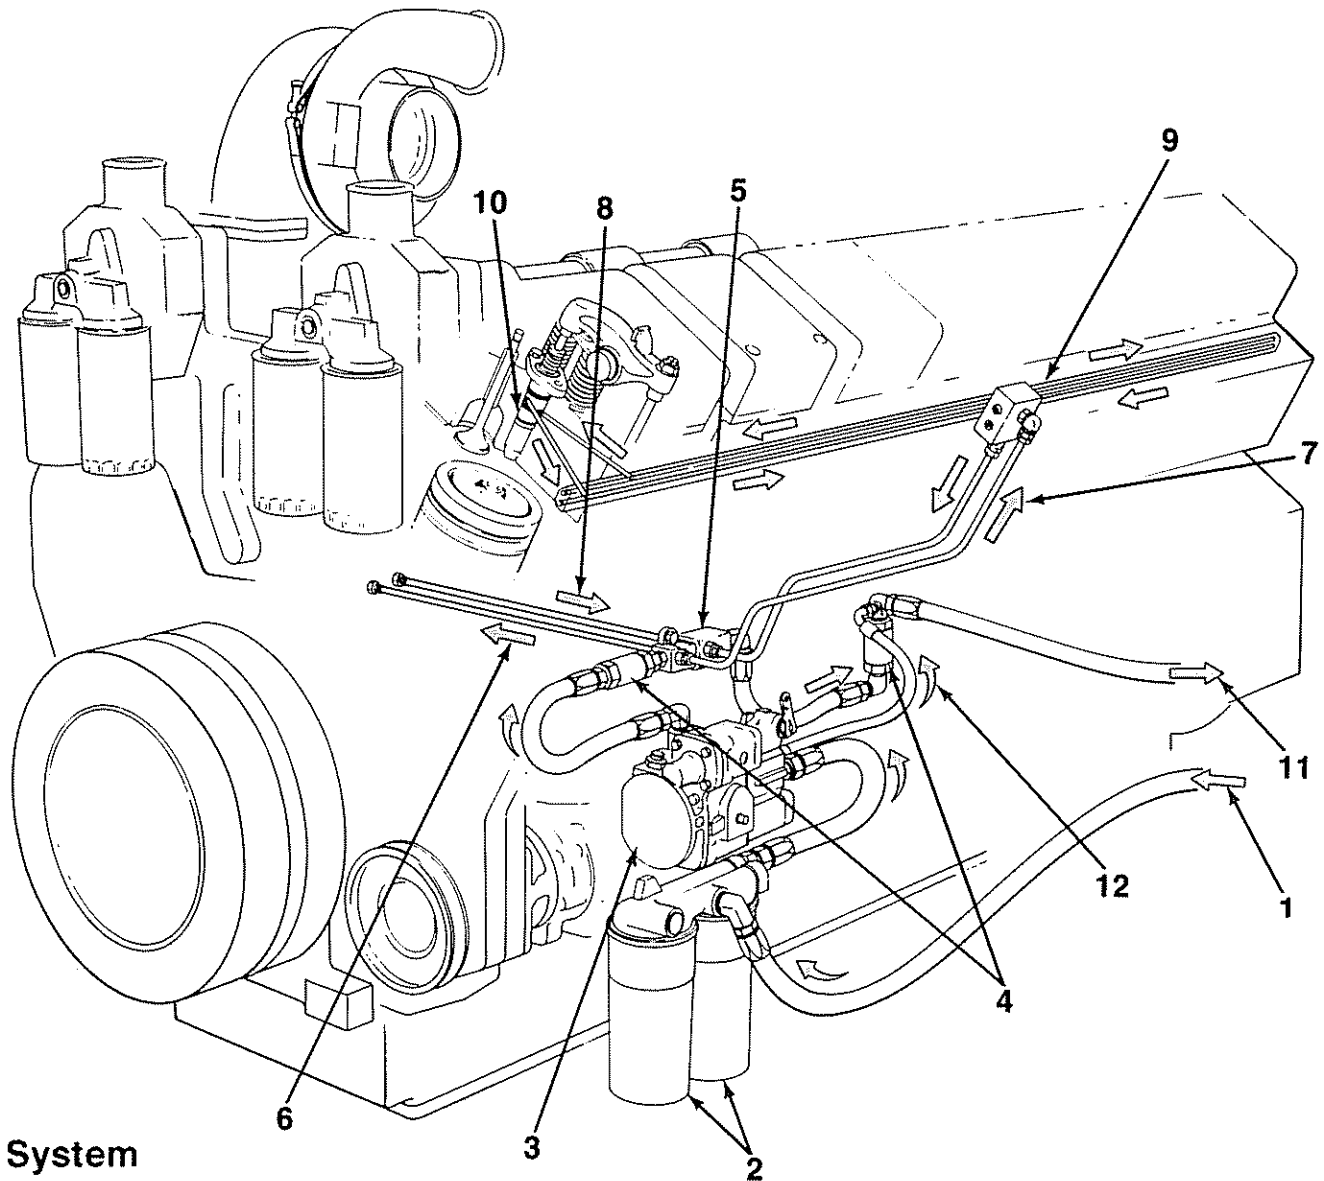

### Fuel System


1. Fuel Inlet
2. Fuel Filters
3. Fuel Pump
4. Check Valve
5. Fuel Block
6. Fuel Supply to Right Bank Fuel Manifold
7. Fuel Supply to Left Bank Fuel Manifold
8. Fuel Return from Right Bank
9. Fuel Manifold
10. Injector
11. Fuel Return to Tank
12. Gear Pump Coolant Drain

The PT fuel system is used exclusively on Cummins Diesels. The identifying letters, PT, are an abbreviation of pressure-time.

The PT Fuel System consists of the fuel pump, supply lines, drain lines, fuel passages and injectors.

**NOTE:** Some engines built after 1986 will have the fuel supply and return check valves (4) contained within the fuel block (5).


## Lubricating Oil Flow Diagrams

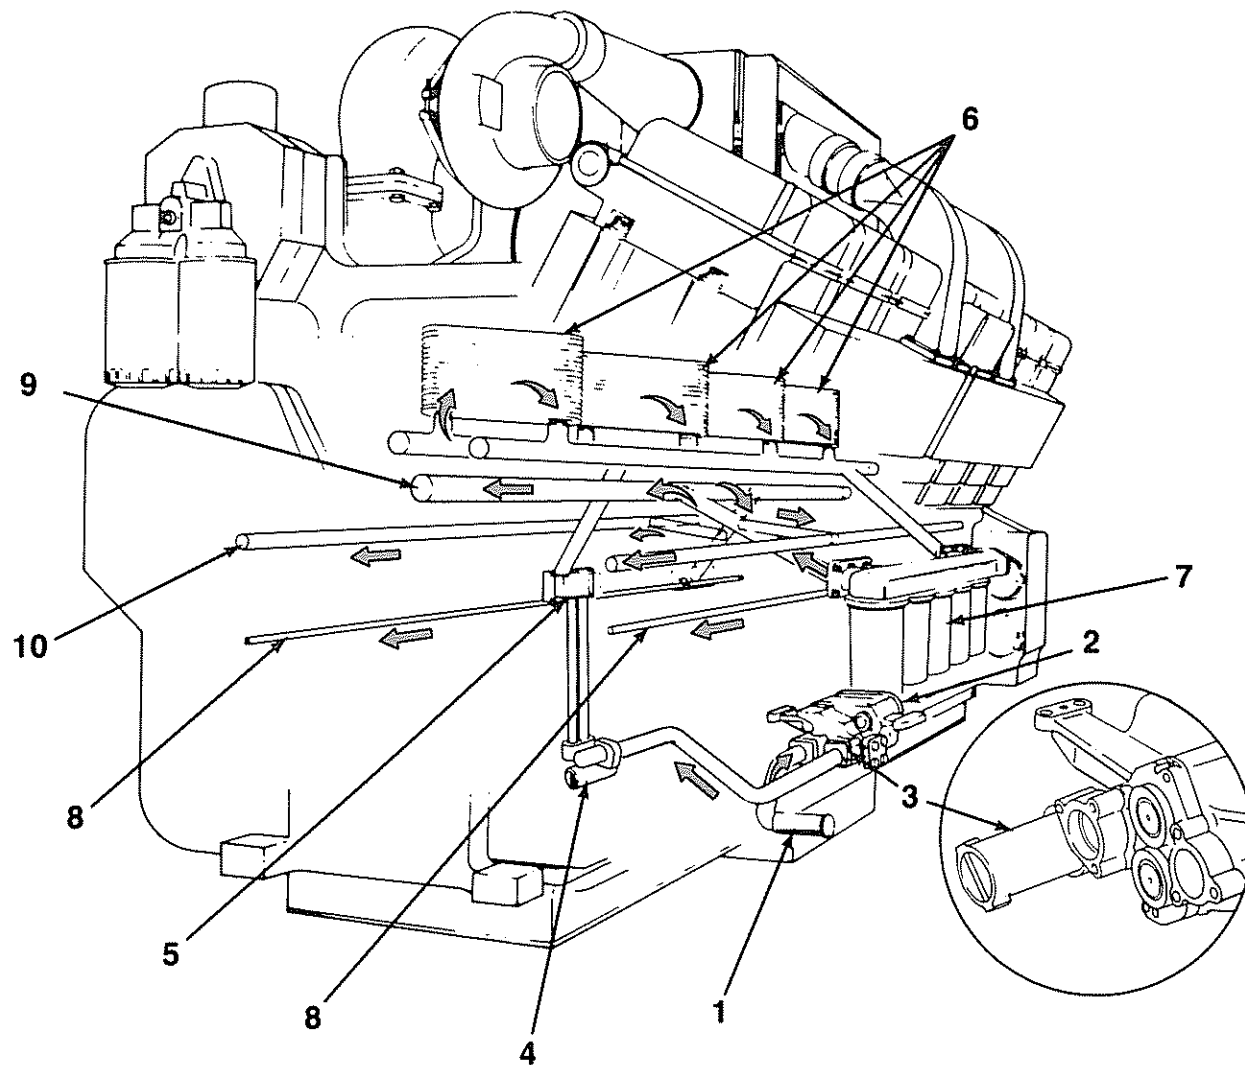

### Lubricating Oil System

1. Oil Inlet Tube
2. Lubricating Oil Pump
3. High Pressure Relief Valve - K38
4. High Pressure Relief Valve - K50
5. Jumper Cover
6. Oil Cooler
7. Oil Filter
8. Piston Cooling Rifle (Outboard)
9. Main Oil Rifle
10. Cam Oil Rifle

**NOTE:** Older K50 engines possessed a high pressure relief valve attached to the lubricating oil pump front cover.

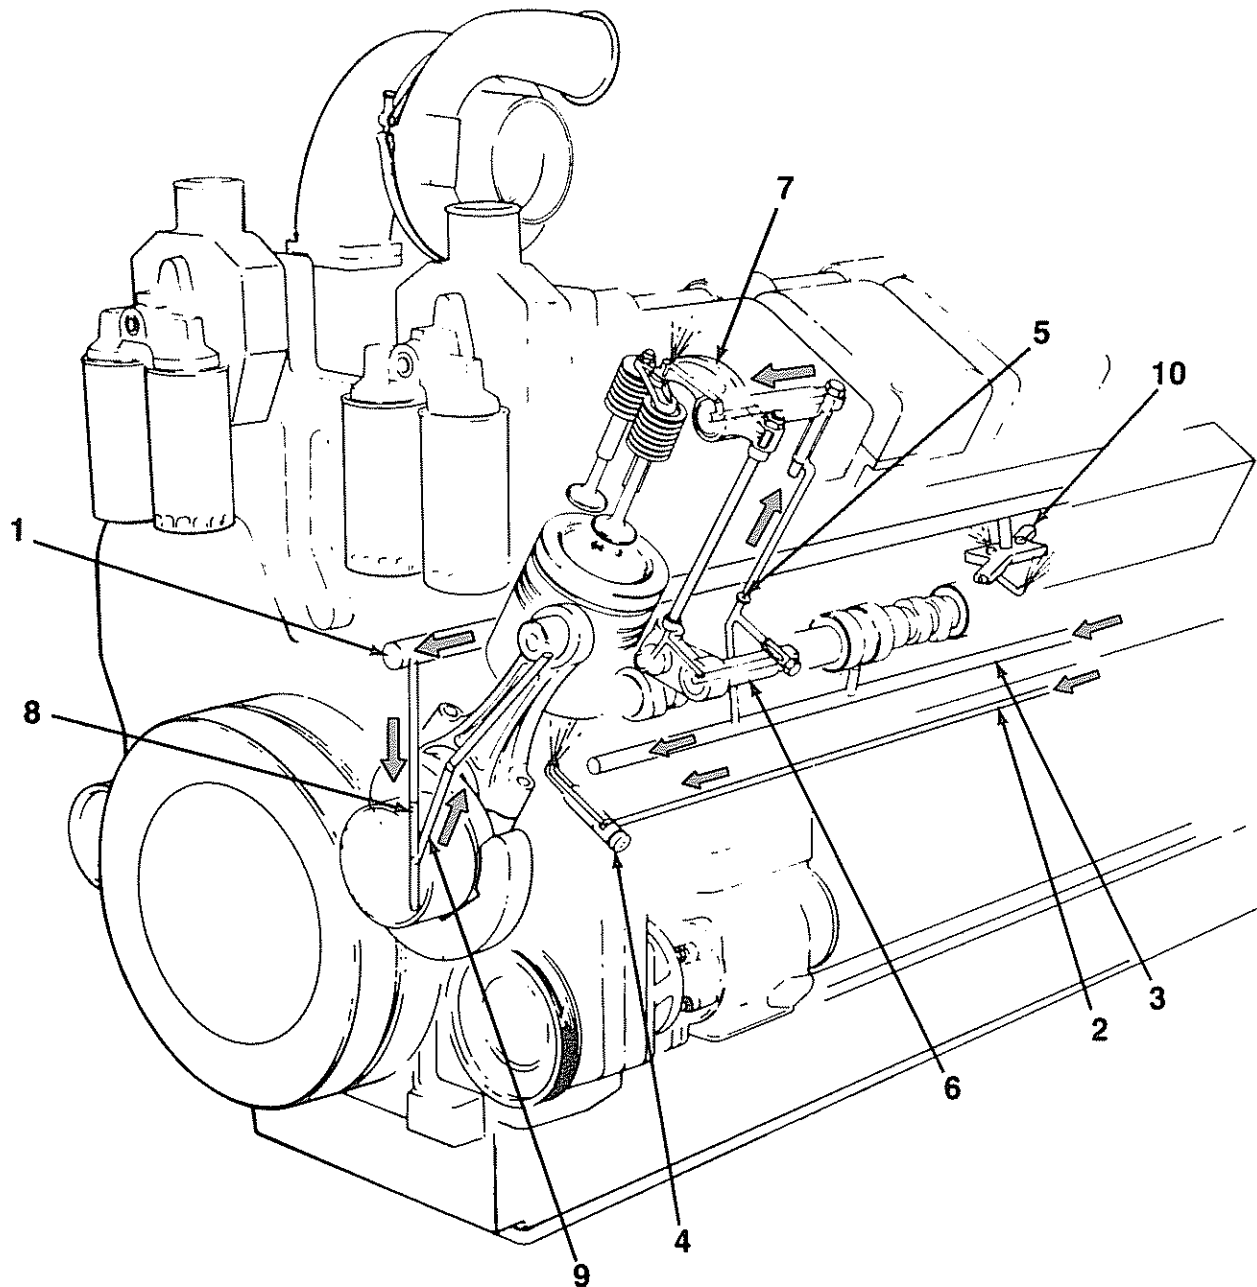


### Piston Cooling, Connecting Rod, Overhead

1. Main Oil Rifle
2. Piston Cooling Rifle (Outboard)
3. Cam Oil Rifle
4. Piston Cooling Nozzle (Outboard)
5. Orifice
6. Cam Follower
7. Rocker Lever (Exhaust)
8. Oil Supply to Main Bearings
9. Oil Supply to Connecting Rod
10. Piston Cooling Nozzle (Inboard)

**Note:** Engines with inboard piston cooling nozzles will **not** possess items 2 and 4.


Older engines with outboard piston cooling nozzles will **not** possess item 10.

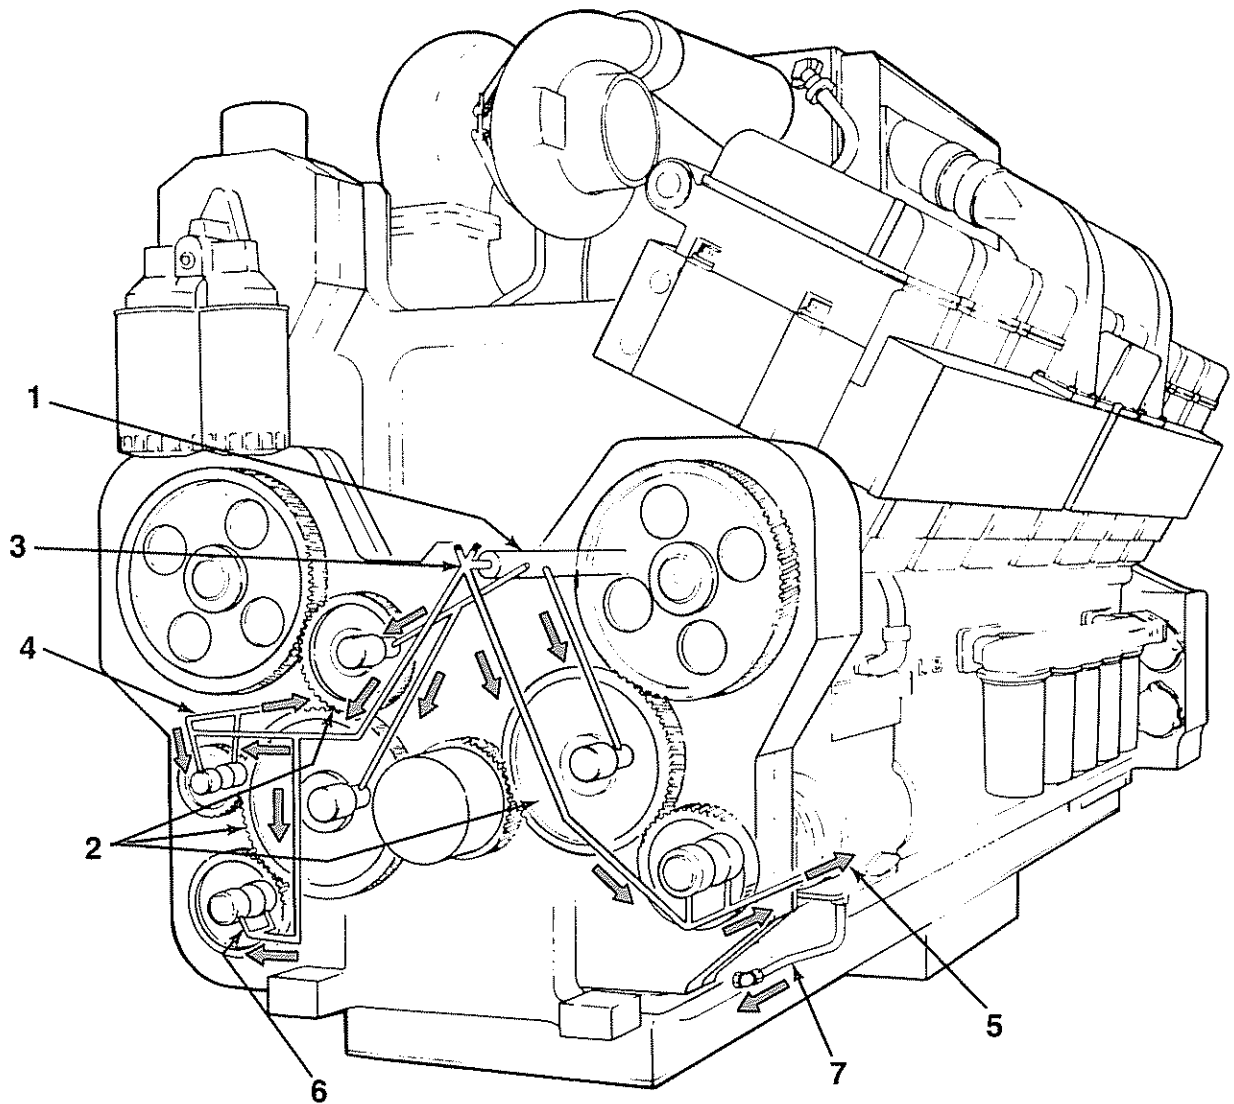

### Front Gear Train


1. Main Oil Rifle
2. Idler Gear
3. Oil Flow through Gear Housing into Front Cover
4. Oil to Water Pump
5. Oil to Air Compressor
6. Oil to Hydraulic Pump Drive
7. Air Compressor Oil Drain (Cummins 2 Cylinder)

**NOTE:** Oil flow to the idler gears (2) is through the cylinder block.

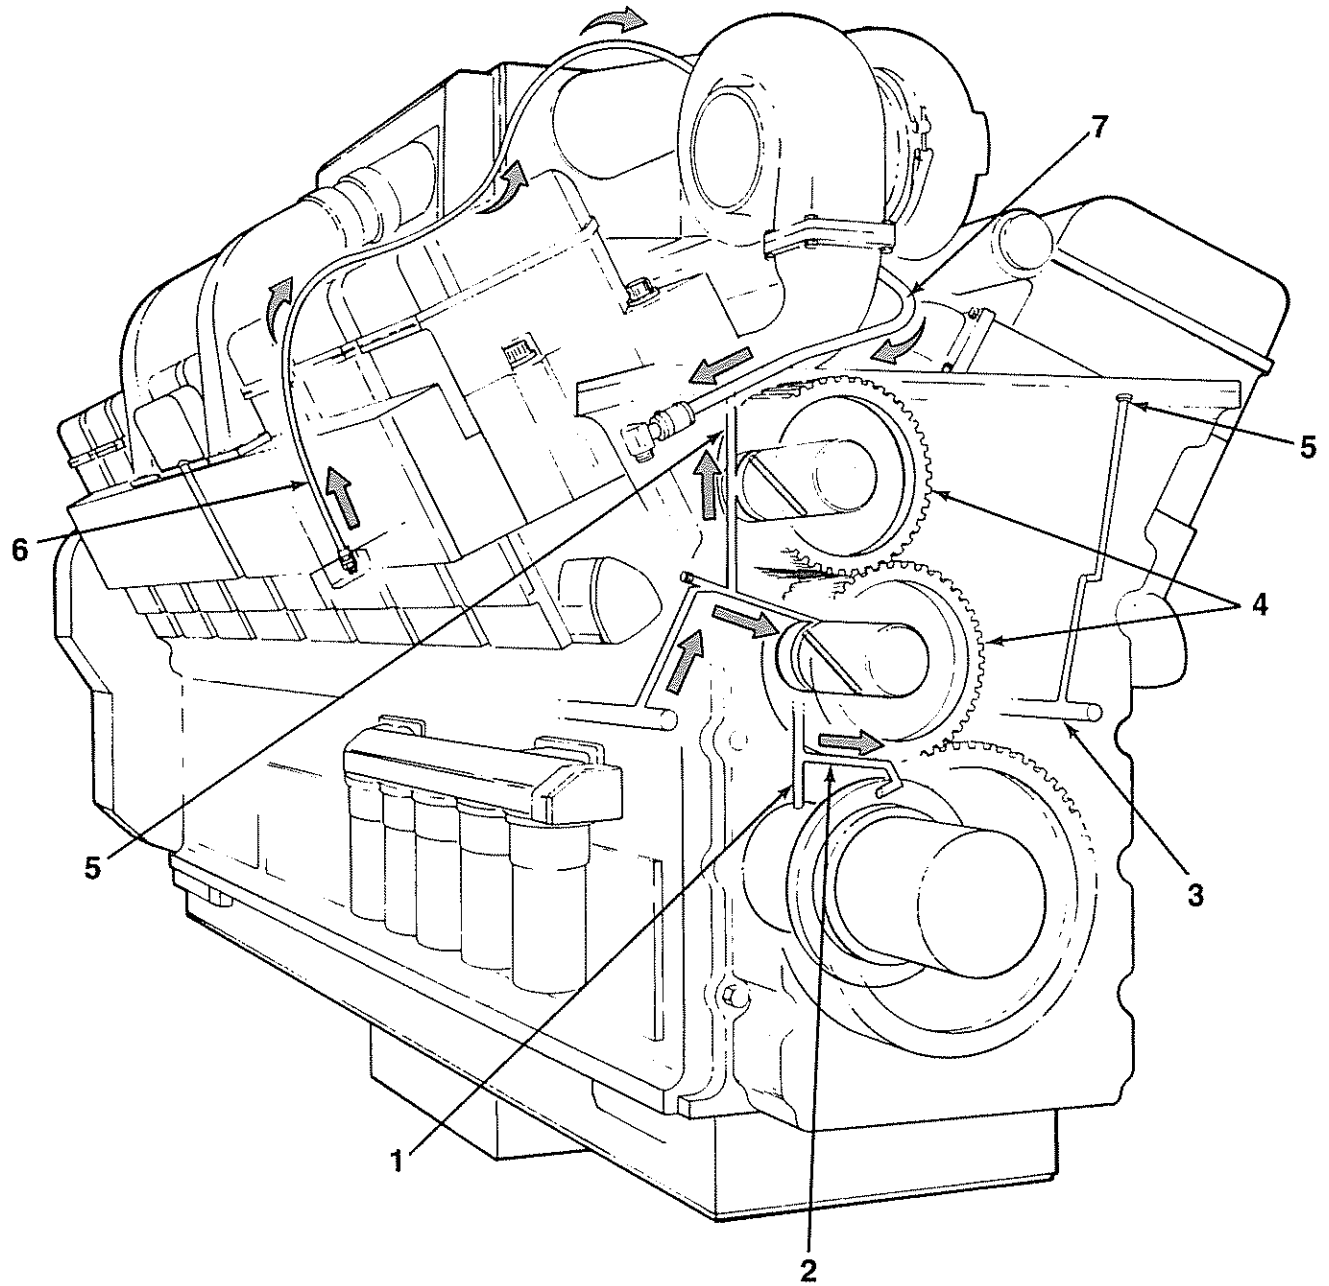

### Rear Gear Train, Turbocharger

1. From Main Oil Rifle
2. Oil Supply to Thrust Bearing
3. Cam Oil Rifle
4. Idler Gear
5. Oil Supply to Upper Output Housing
6. Turbocharger Oil Supply
7. Turbocharger Oil Drain

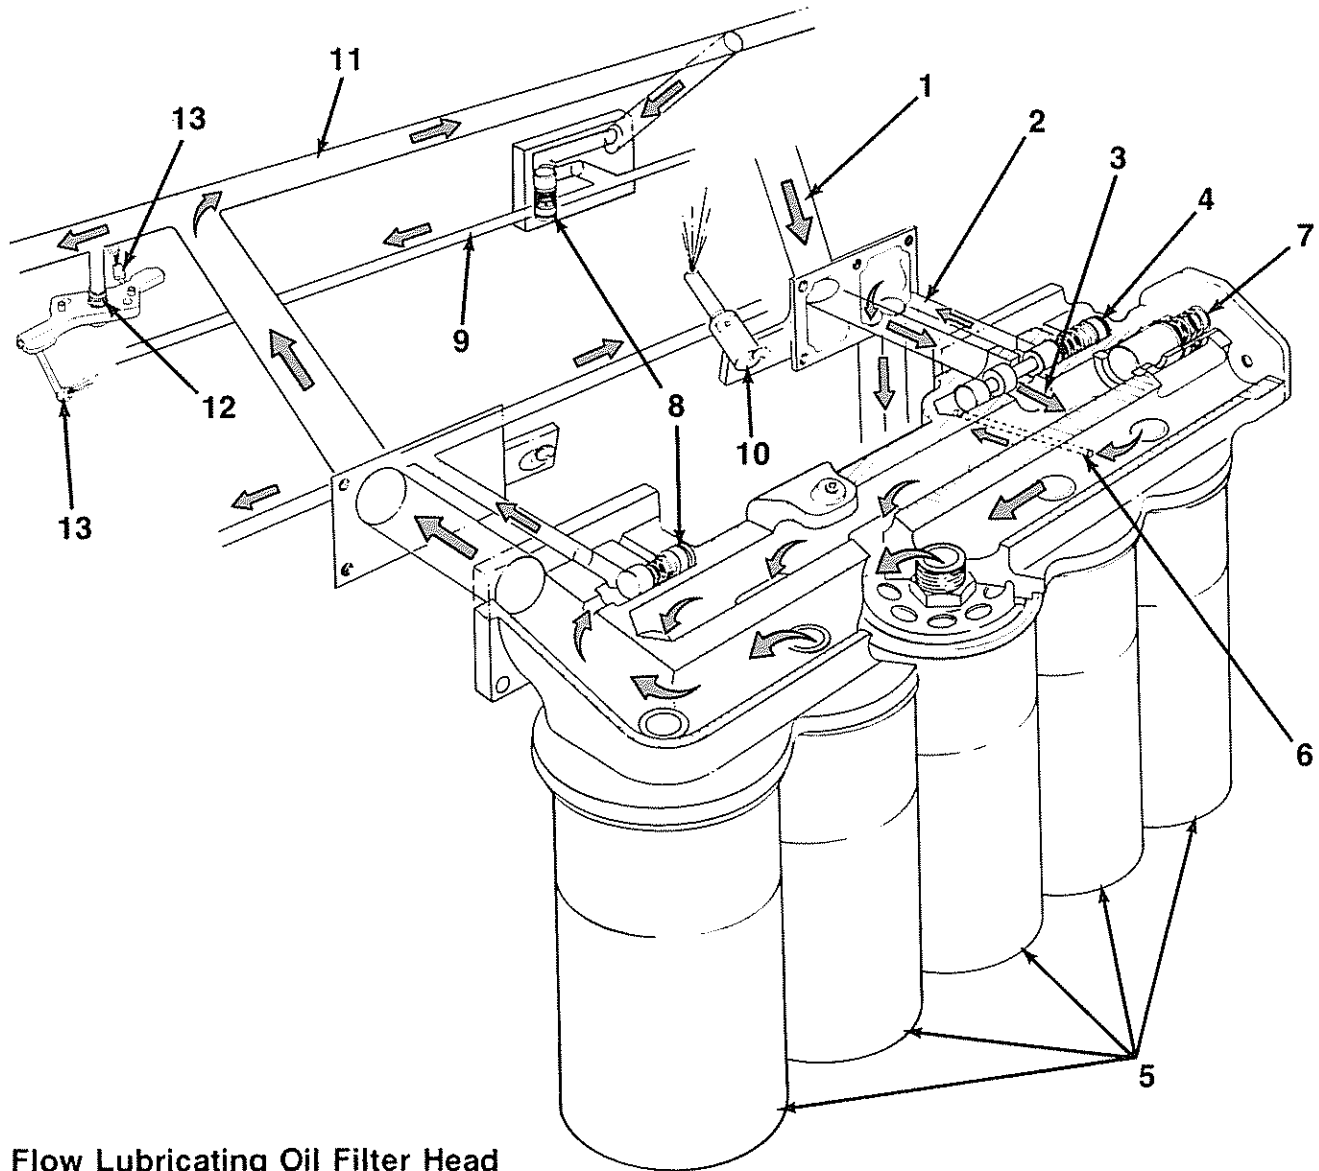


### Full Flow Lubricating Oil Filter Head

1. Oil Supply to Filterhead
2. Oil Return to Pan
3. Oil Supply to Filters
4. Oil Pressure Regulator
5. Oil Filter
6. Control Rifle
7. Filter Bypass Valve
8. Piston Cooling Control Valve (Outboard)
9. Piston Cooling Rifle (Outboard)
10. Piston Cooling Nozzle (Outboard)
11. Main Oil Rifle
12. Piston Cooling Control Valve (Center Mount)
13. Piston Cooling Nozzle (Center Mount)

**NOTE:** Engines with center mount piston cooling nozzles will not possess Item Nos. 8, 9, or 10.




1. Oil Supply to Oil Control Valve
2. Oil Filter Head
3. Oil Control Valve Cutaway
4. Fuel Pressure Signal to Oil Control Valve
5. Fuel Supply to Injectors
6. Oil Control Valve Plunger
7. Oil Manifold
8. STC Tappet
9. Oil Transfer Connection
10. Oil Supply to Tappets

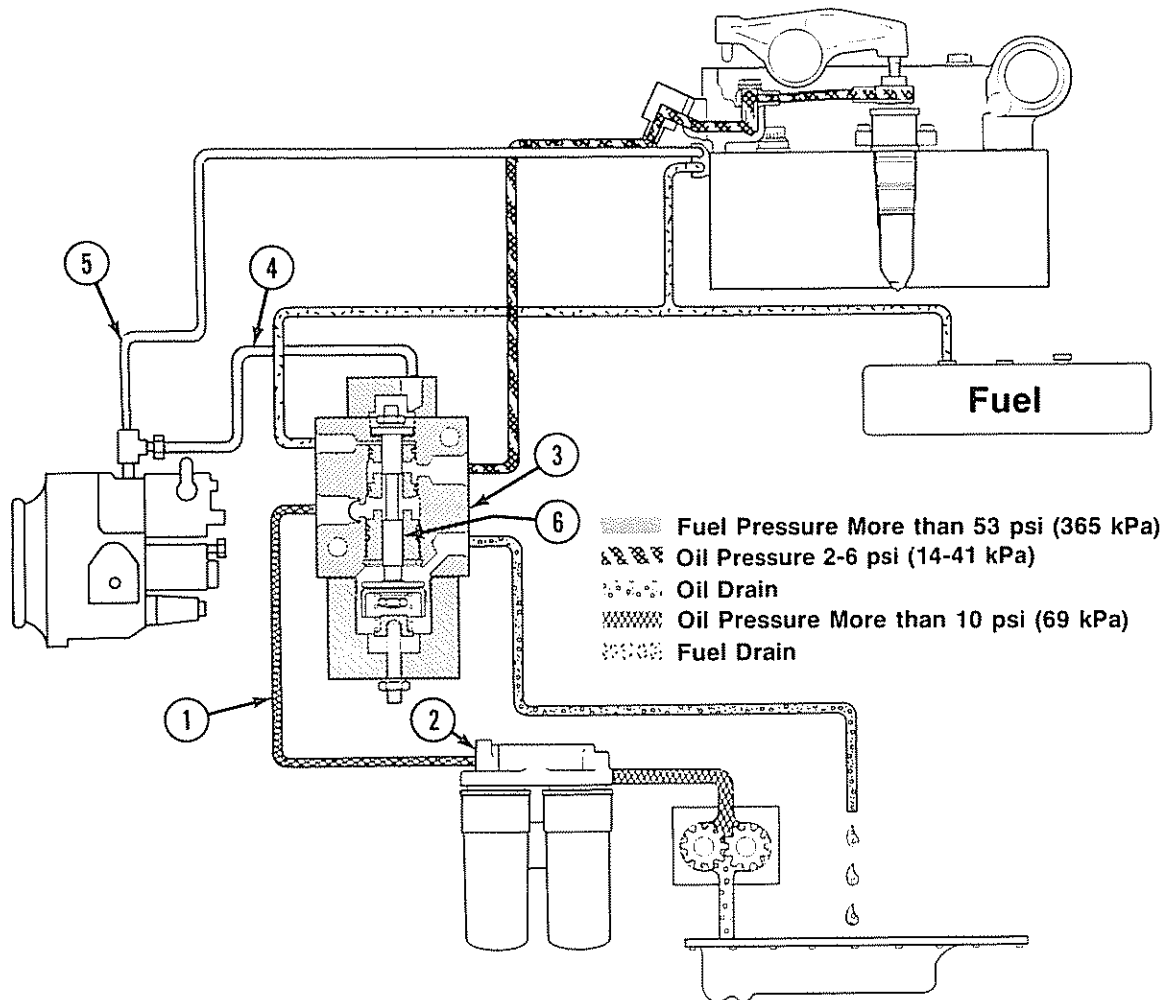

### STC Lubricating Oil Flow (Normal Timing) Hydromechanically Controlled

1. Oil Supply to Oil Control Valve
2. Oil Filter Head
3. Oil Control Valve (Hydromechanical) Cutaway
4. Fuel Pressure to Oil Control Valve
5. Fuel Supply to Injectors
6. Oil Control Valve Plunger


## Coolant System Flow Diagrams

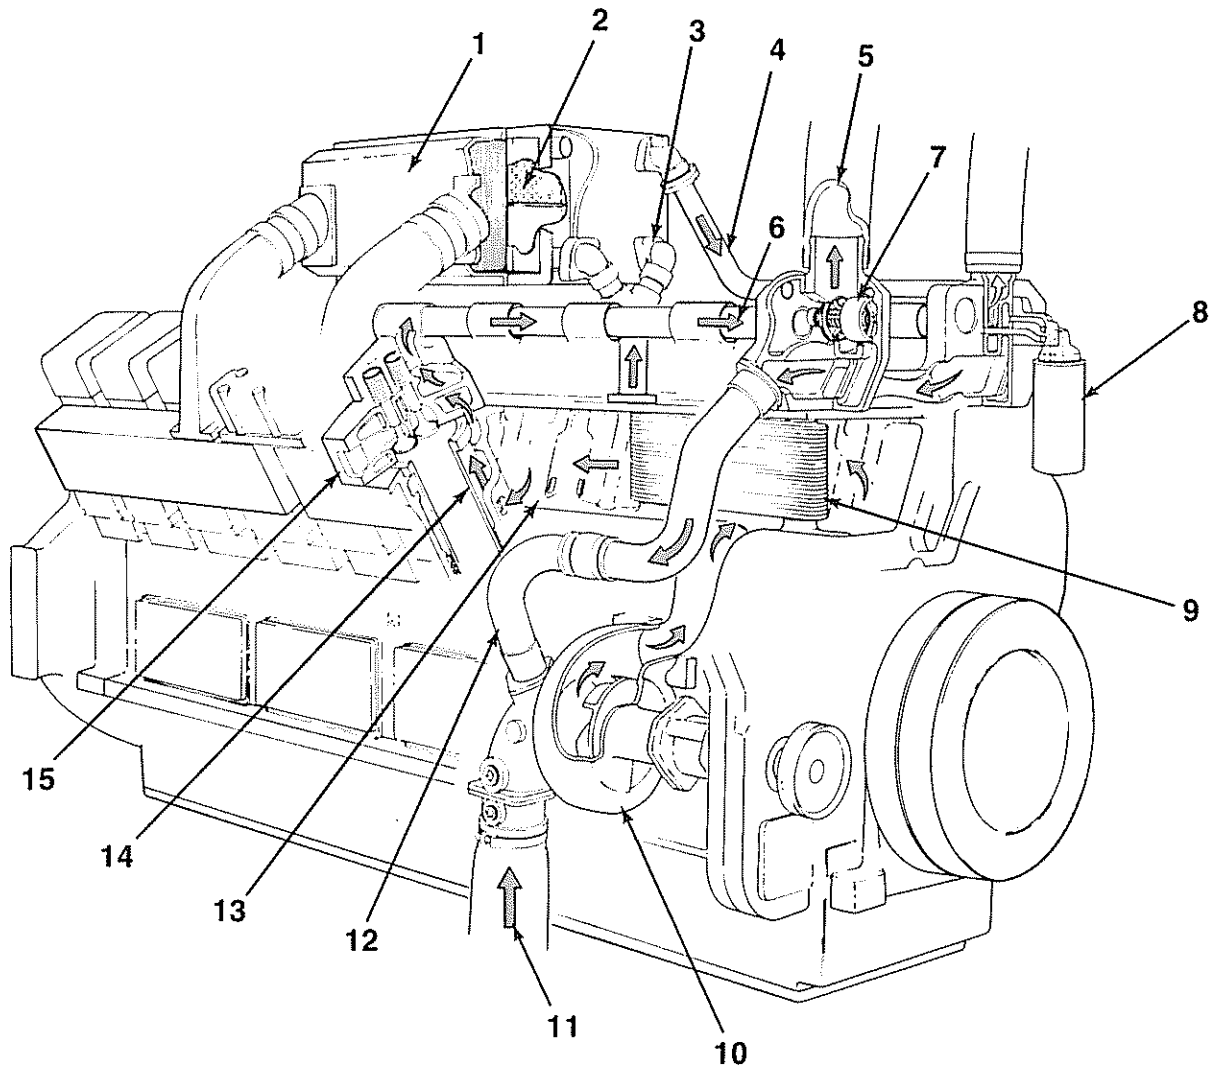

### Cooling System - Top Mounted Aftercooler

1. Aftercooler Housing
2. Aftercooler Core
3. Aftercooler Coolant Supply
4. Aftercooler Coolant Return
5. Coolant Return to Radiator
6. Coolant Transfer Tube (Head to Head)
7. Thermostat
8. Coolant Filters
9. Oil Cooler
10. Water Pump
11. Coolant Supply from Radiator
12. Bypass Tube
13. Coolant to Block V
14. Cylinder Liner
15. Cylinder Head


### Cooling System Flow (Outboard Aftercoolers)

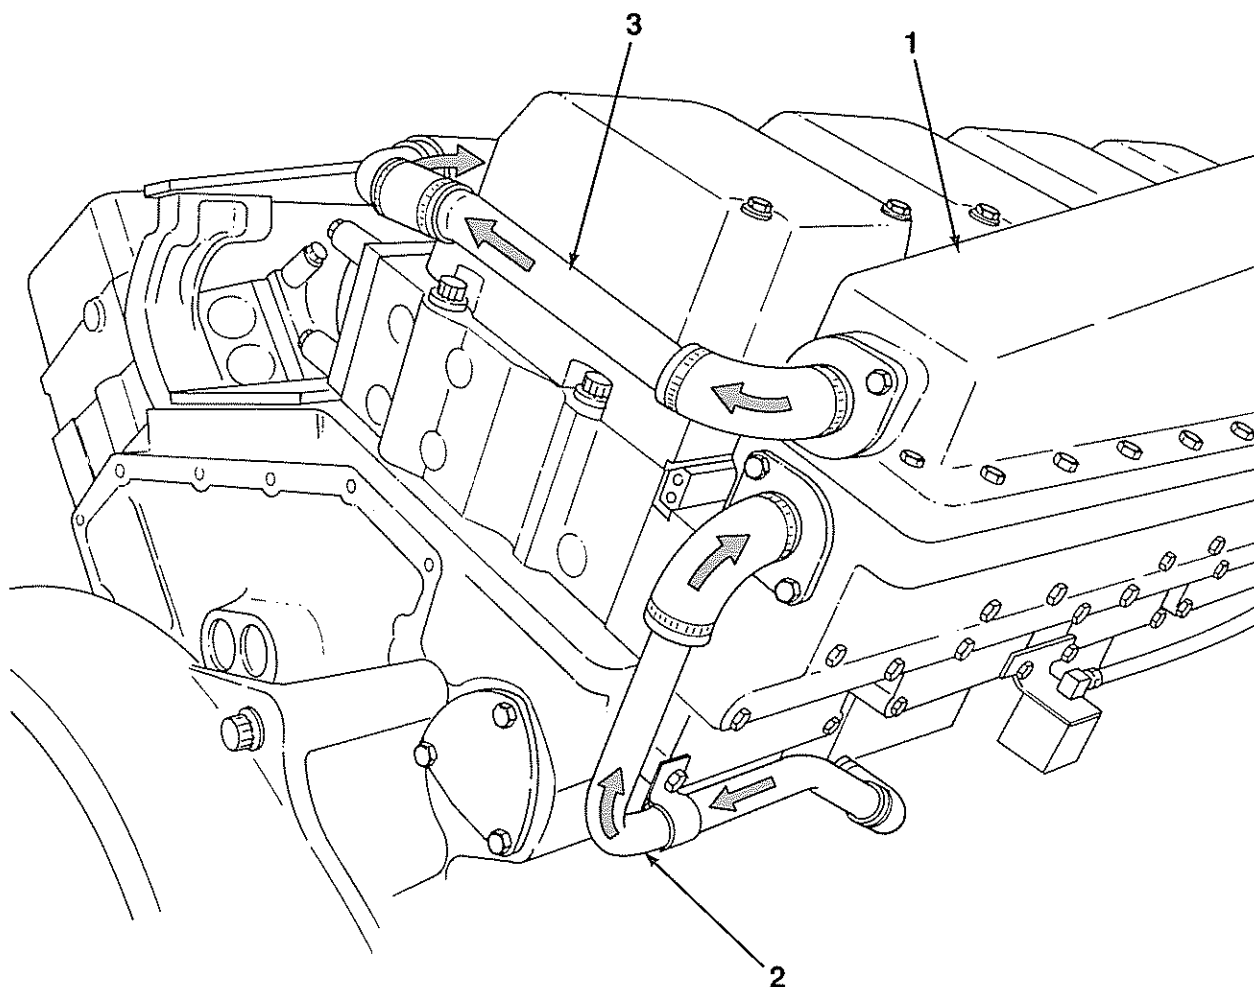

#### Outboard (Side Mounted) Aftercooler

1. Aftercooler Housing
2. Aftercooler Supply
3. Aftercooler Return


Cooling System Flow (LTA) - K2000, KTTA50-G2, KTA50-G3/G4

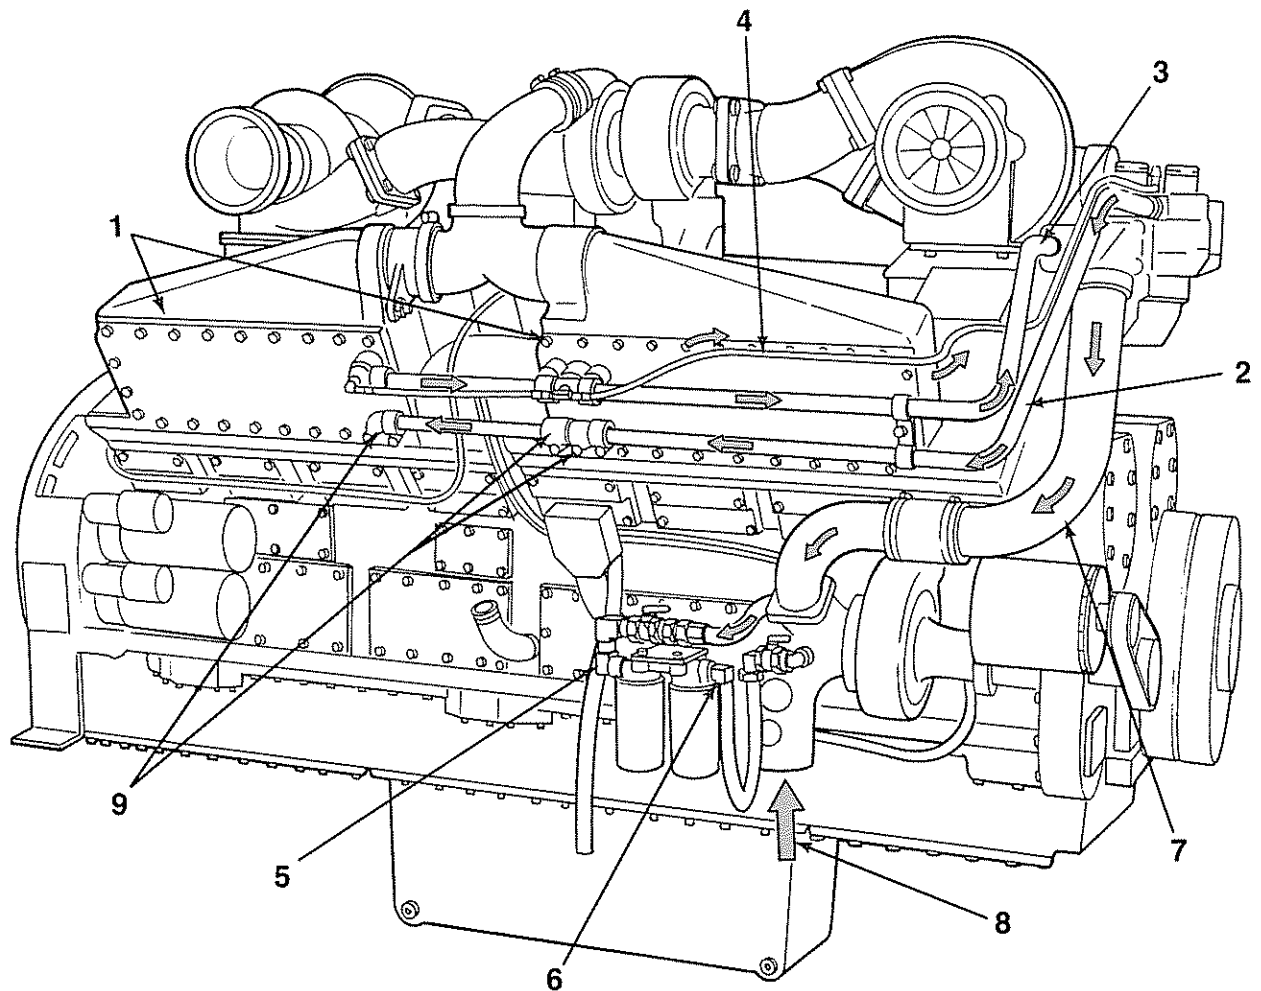

**Low Temperature Aftercooler**

1. Aftercooler Housing
2. Aftercooler Supply
3. Aftercooler Core Return
4. Aftercooler Core Vent
5. Coolant Filter Inlet
6. Coolant Filter Outlet
7. Bypass Tube
8. Coolant Supply from Radiator
9. Aftercooler Core Drain

### Cooling System Flow (LTA)-K2000, KTTA50-G2, KTA50-G3/G4

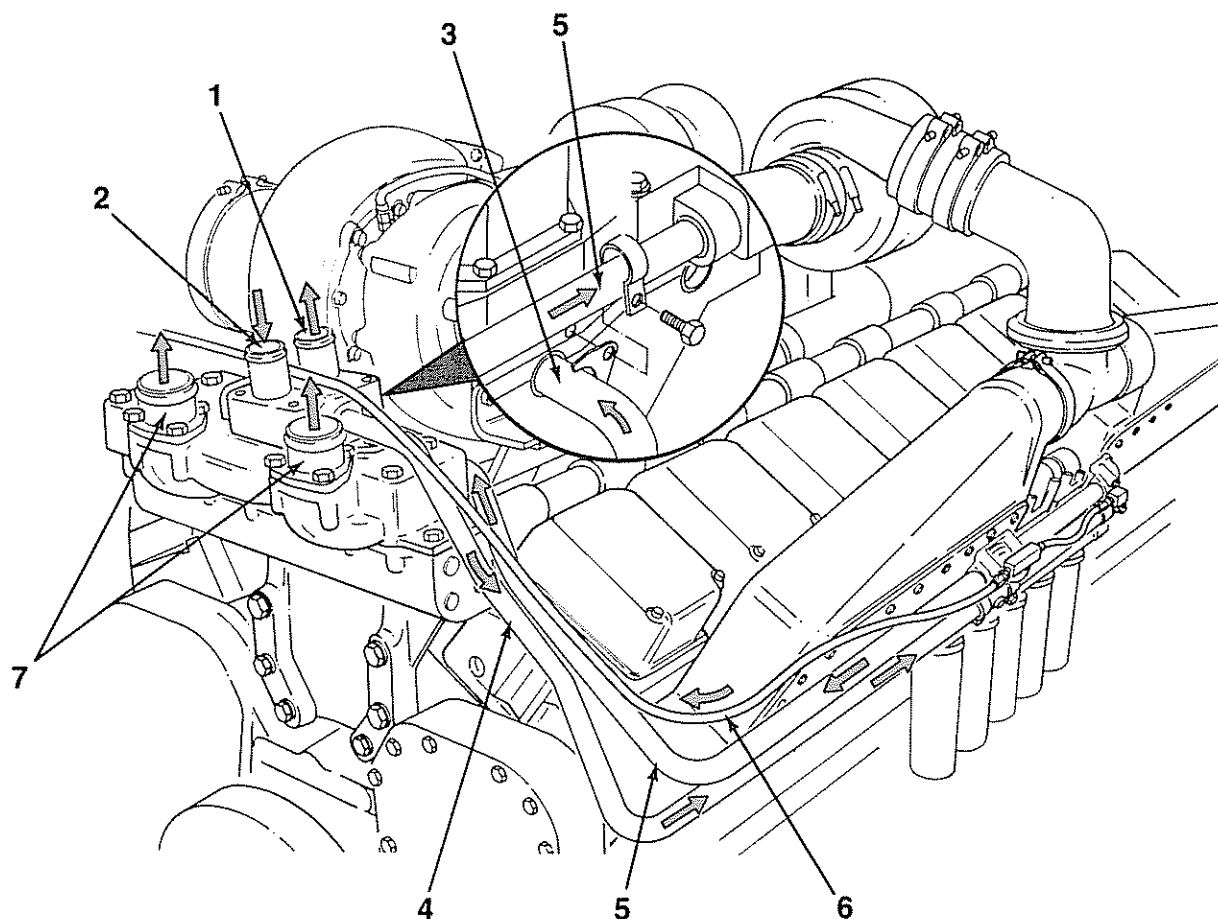

#### Thermostat Housing Flow


1. To LTA Radiator
2. From LTA Radiator
3. To LTA Thermostat
4. Aftercooler Supply
5. Aftercooler Return
6. Aftercooler Core Vent
7. Coolant Return to Radiator

**NOTE:** The KTA50-G3/G4 and KTTA50-G2 contain LTA hardware, but are **not** low temperature after-cooled. These engines do **not** flow coolant to or from an LTA radiator (1 or 2).

## Thermostat Housing Flow


### Non-LTA

1. From Coolant Manifold
2. Thermostat
3. Coolant to Radiator
4. Bypass Coolant
5. Coolant Filter

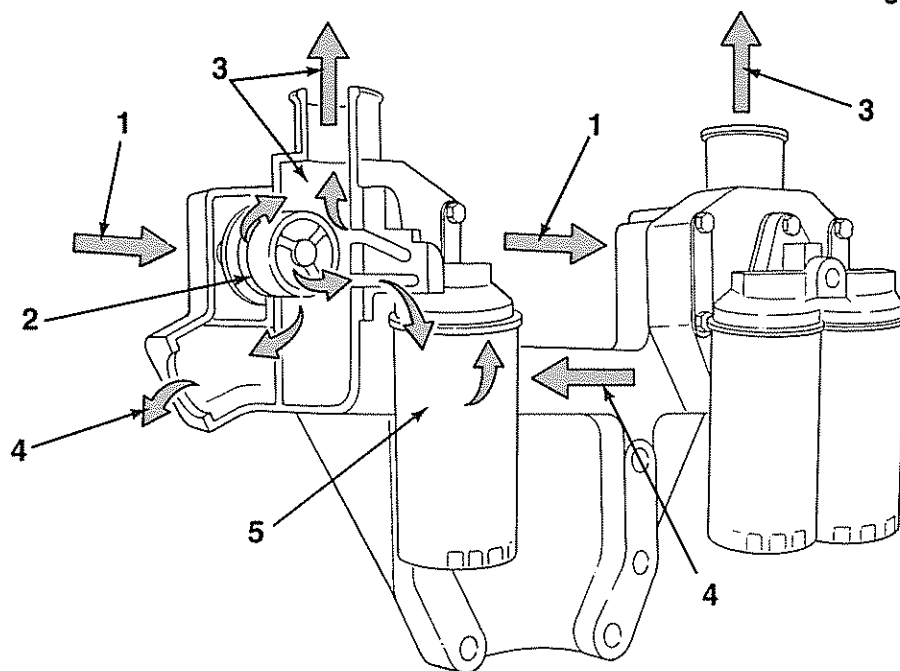

### LTA

1. From Coolant Manifold
2. Main Engine Thermostats
3. Bypass Coolant
4. Coolant to Main Radiator
5. Coolant Bypass Coolant
6. LTA Thermostat
7. Block Coolant
8. To LTA Radiator
9. To Aftercoolers
10. From LTA Radiator
11. From Aftercoolers
12. Vent to Radiator Top Tank


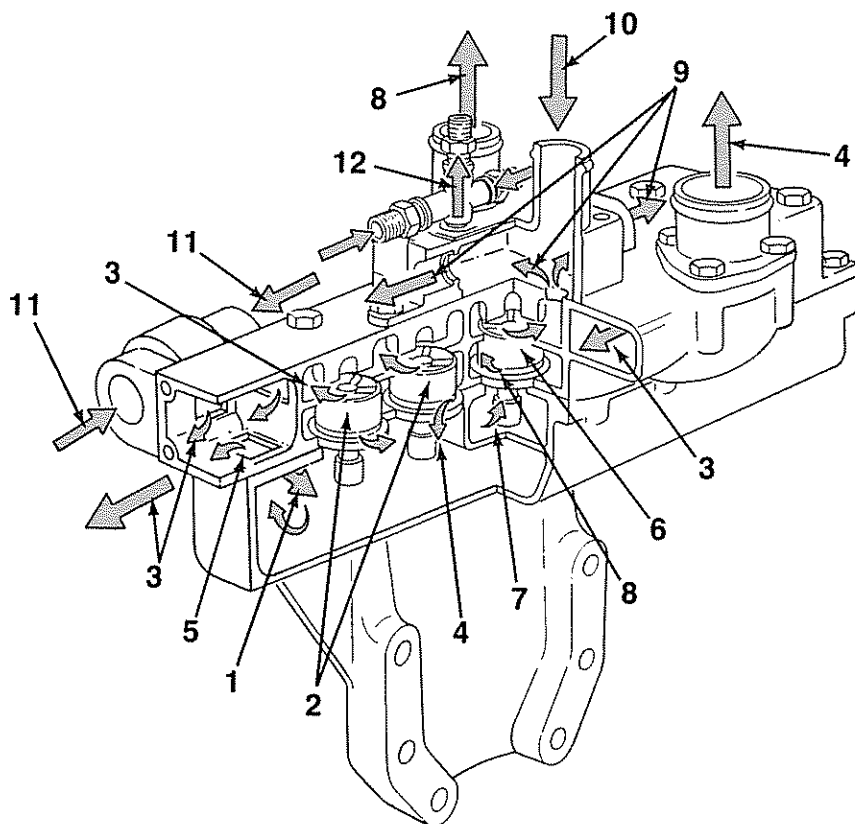


**NOTE:** The KTA50-G3, KTA50-G4, and KTTA50-G2 have LTA cooling system hardware, but are **NOT** low temperature aftercooled. In this situation, the LTA thermostat is **NOT** installed and an LTA radiator is **NOT** used. Coolant flows directly from the block (7) to the aftercoolers (9).

## Air System Flow Diagrams

### Intake System - Center Mount Aftercooler

1. Intake Air Inlet to Turbocharger
2. Turbocharger
3. Turbocharged Air to Aftercooler
4. Intake Air to Cylinders

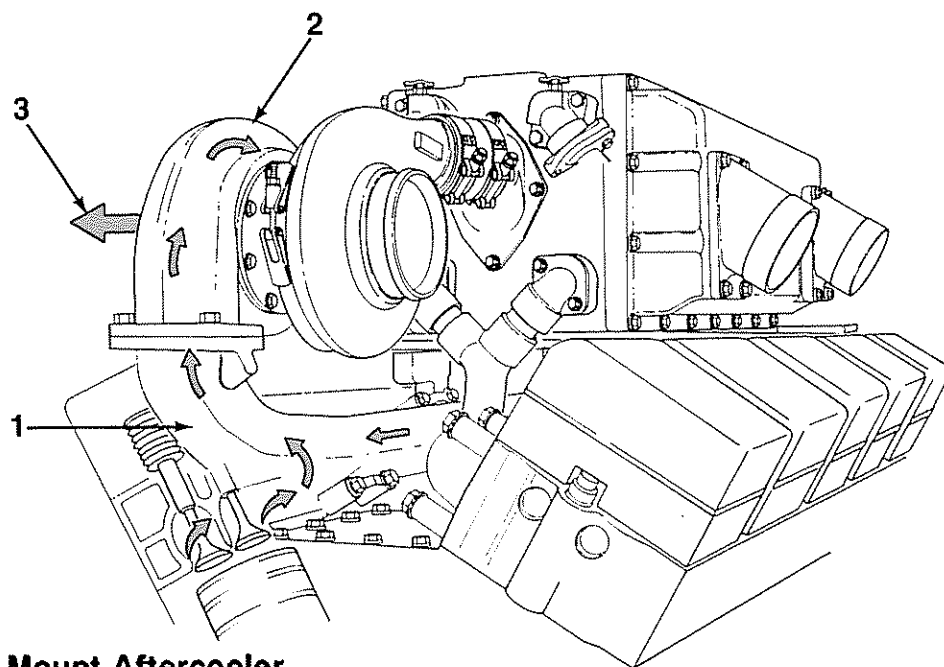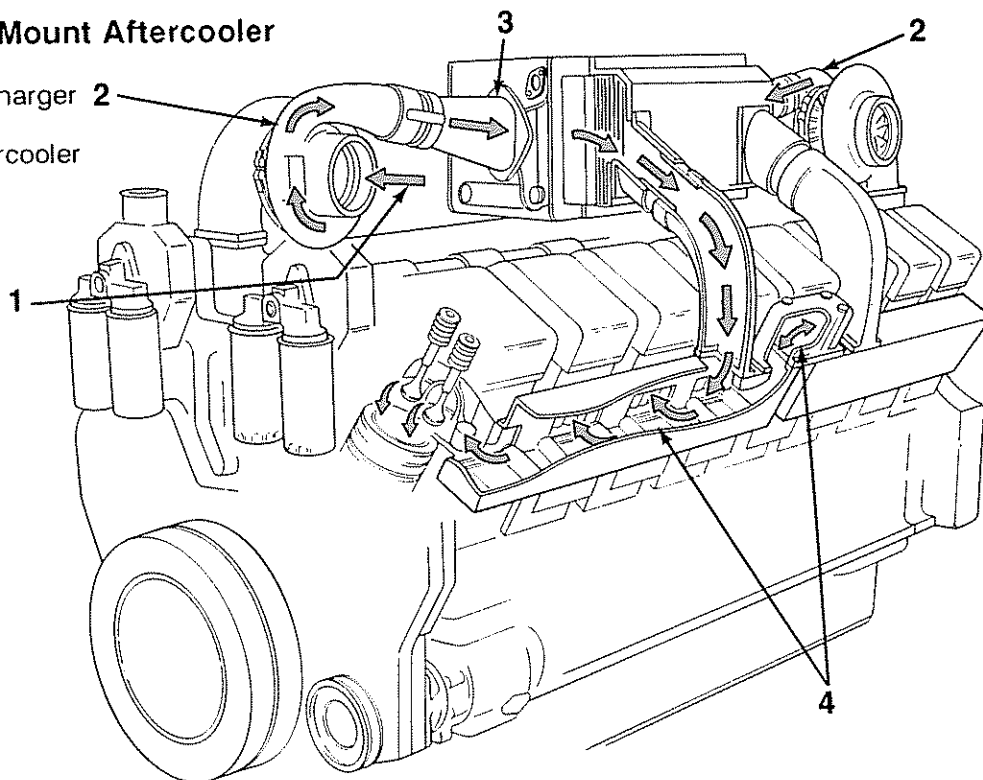


### Exhaust System - Center Mount Aftercooler

1. Exhaust Manifold
2. Turbocharger
3. Turbocharger Exhaust Outlet


### Intake System - KTTA Engines

1. Intake Air Inlet to Turbocharger
2. Low Stage Turbocharger
3. High Stage Turbocharger
4. Turbocharged Air to Aftercooler


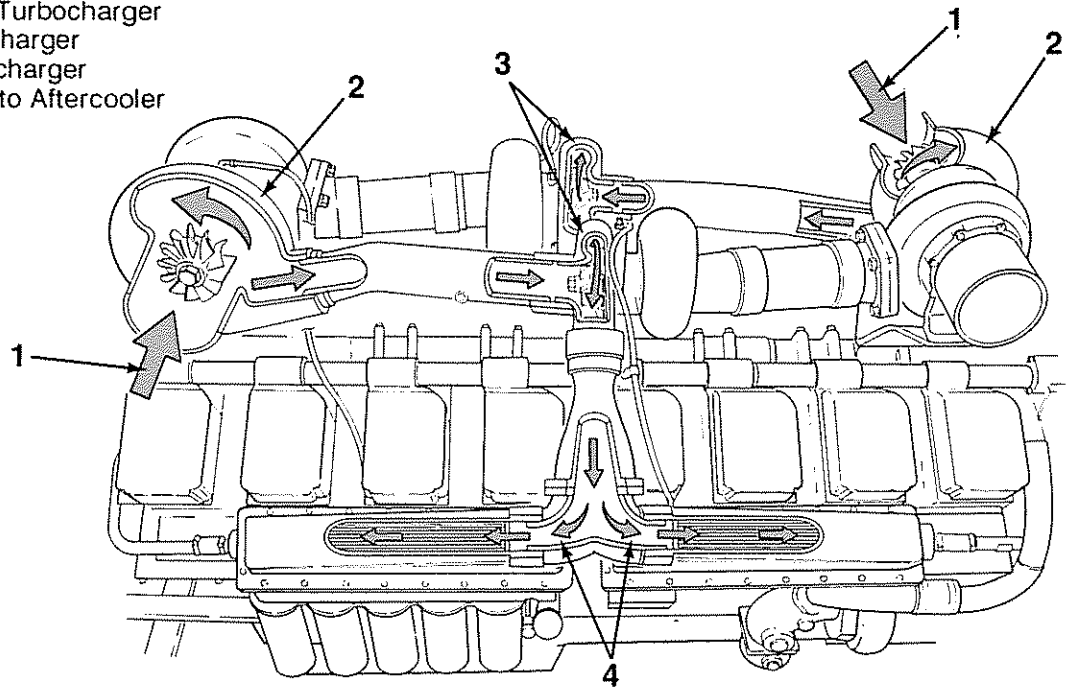


### Exhaust System - KTTA Engines

1. Exhaust Manifold
2. High Stage Turbocharger
3. Low Stage Turbocharger
4. Turbocharger Exhaust Outlet

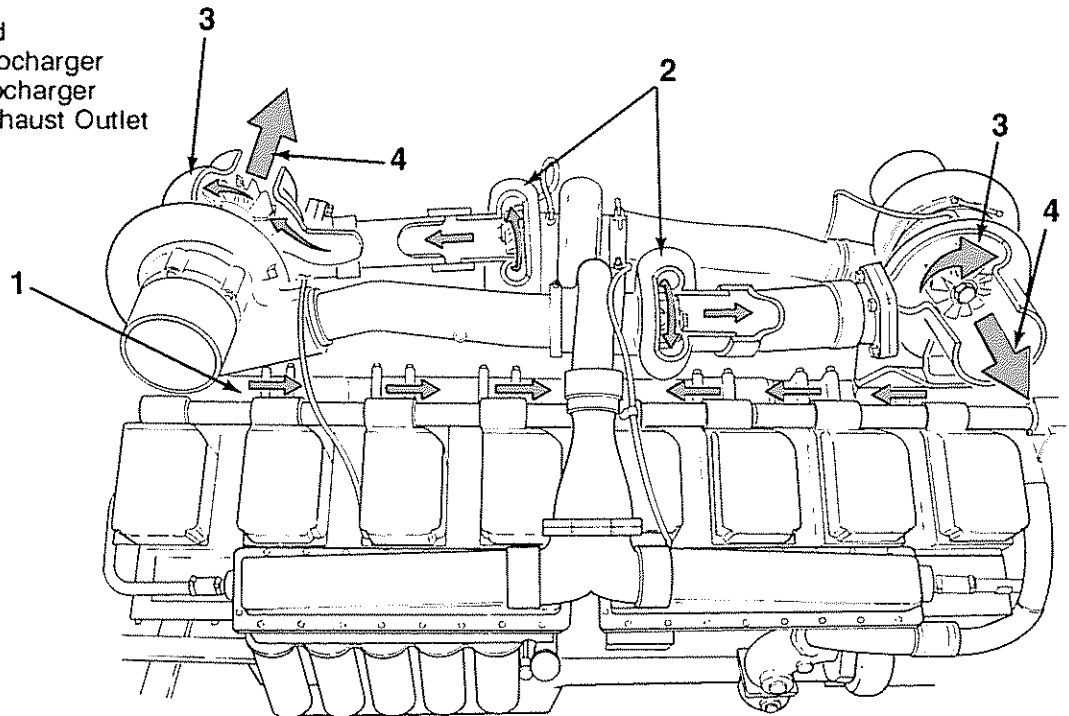

## Compressor Air System Flow Diagram

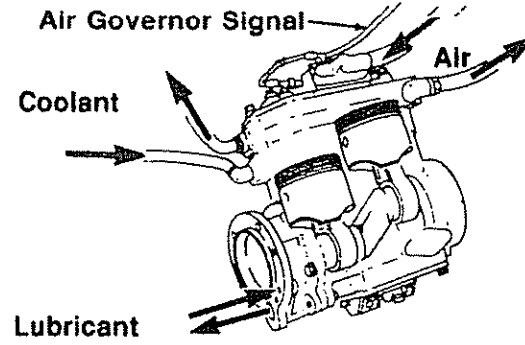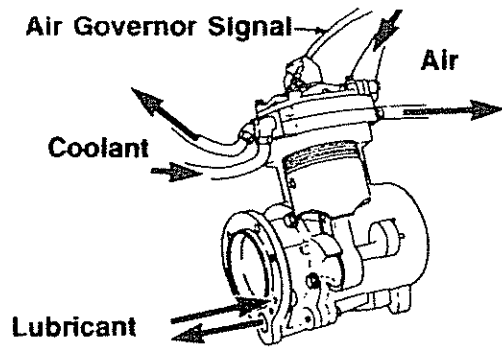

cp800pb

## Section T - Troubleshooting

### Section Contents

	Page
<b>Procedures and Techniques</b> .....	T-2
<b>Troubleshooting Symptoms</b> .....	T-2
Coolant Temperature Above Normal .....	T-10, T-11
Coolant Temperature Below Normal .....	T-12
Engine Cranks But Will Not Start (No Smoke From Exhaust) .....	T-6
Engine Hard to Start or Will Not Start (Exhaust Smoke Present) .....	T-5
Engine Power Output Low .....	T-14, T-15
Engine Starts But Will Not Keep Running .....	T-7
Engine Will Not Crank or Cranks Slowly (Air Starter) .....	T-3
Engine Will Not Crank or Cranks Slowly (Electric Starter) .....	T-4
Engine Will Not Reach Rated Speed When Loaded .....	T-16
Engine Will Not Shut Off .....	T-8
Exhaust Smoke Excessive Under Load .....	T-13
Lubricating Oil Pressure Low .....	T-9
White Smoke or Rough Running At Idle (After Warmup Period) .....	T-17

## Procedures and Techniques


This guide describes some typical engine operating problems, their causes, and some acceptable corrections to those problems. For more procedure information, refer to the K38 and K50 Engine Series Troubleshooting and Repair Manual, Bulletin No. 3810432. Unless noted otherwise, the problems listed are those which an operator can diagnose and repair. See a Cummins Authorized Repair Location for diagnosis and repair of problems **not** listed.

Follow the suggestions below for troubleshooting:


- Study the problem thoroughly before acting.
- Refer to the engine system diagrams.
- Do the easiest and most logical things first.
- Find and correct the cause of the problem.

## Troubleshooting Symptoms

### Engine Will Not Crank or Cranks Slowly (Air Starter)

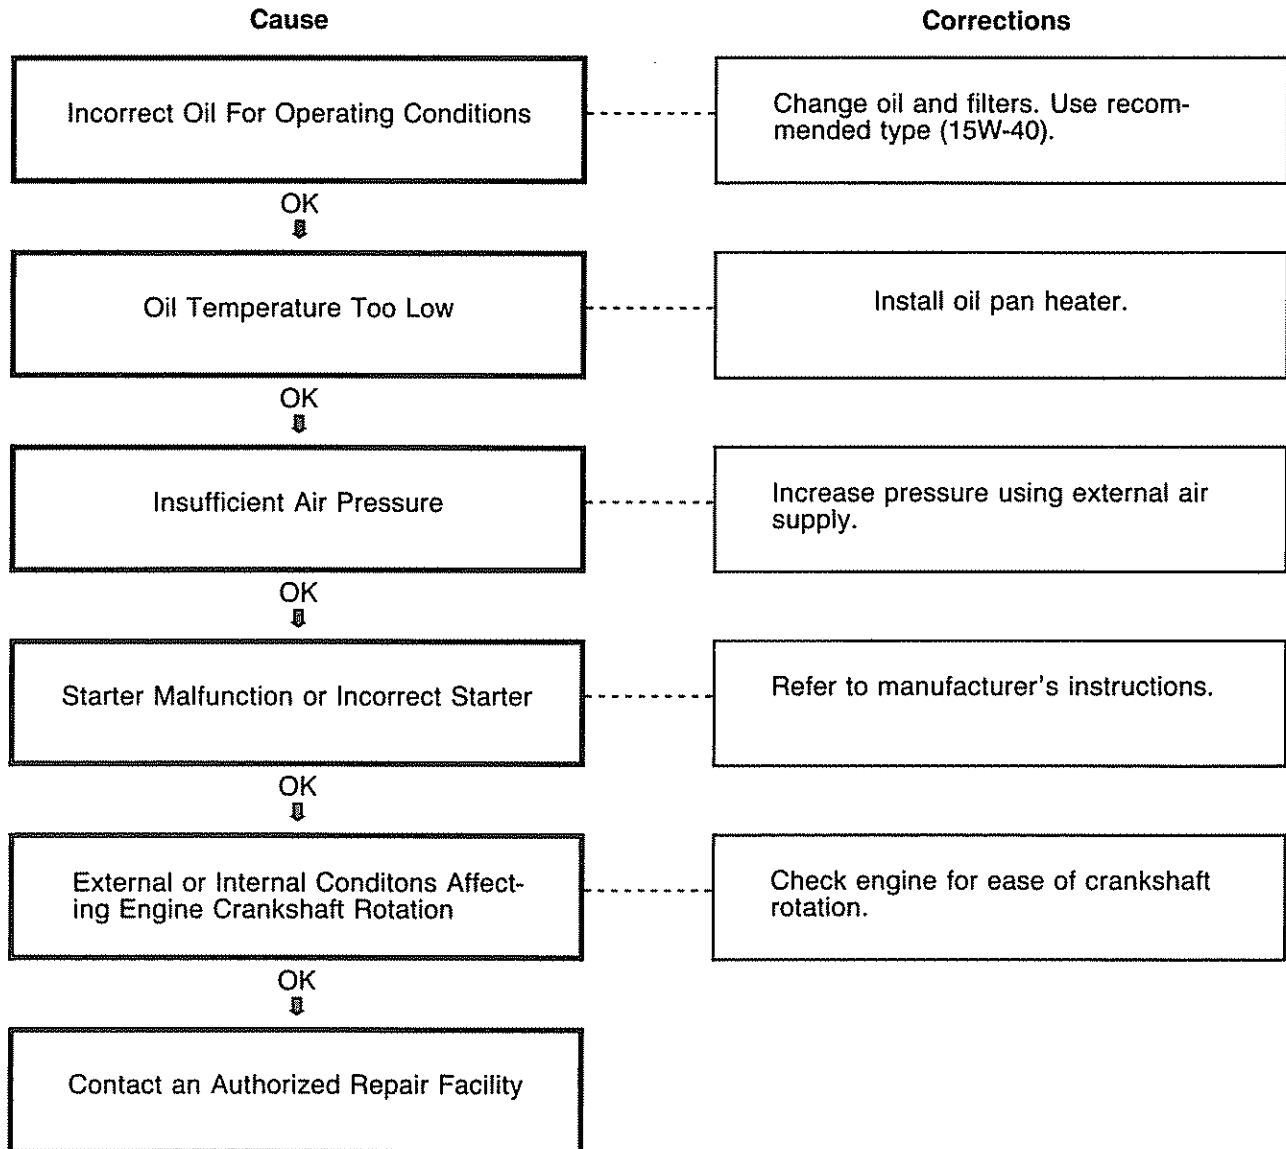

## Engine Will Not Crank or Cranks Slowly (Electric Starter)

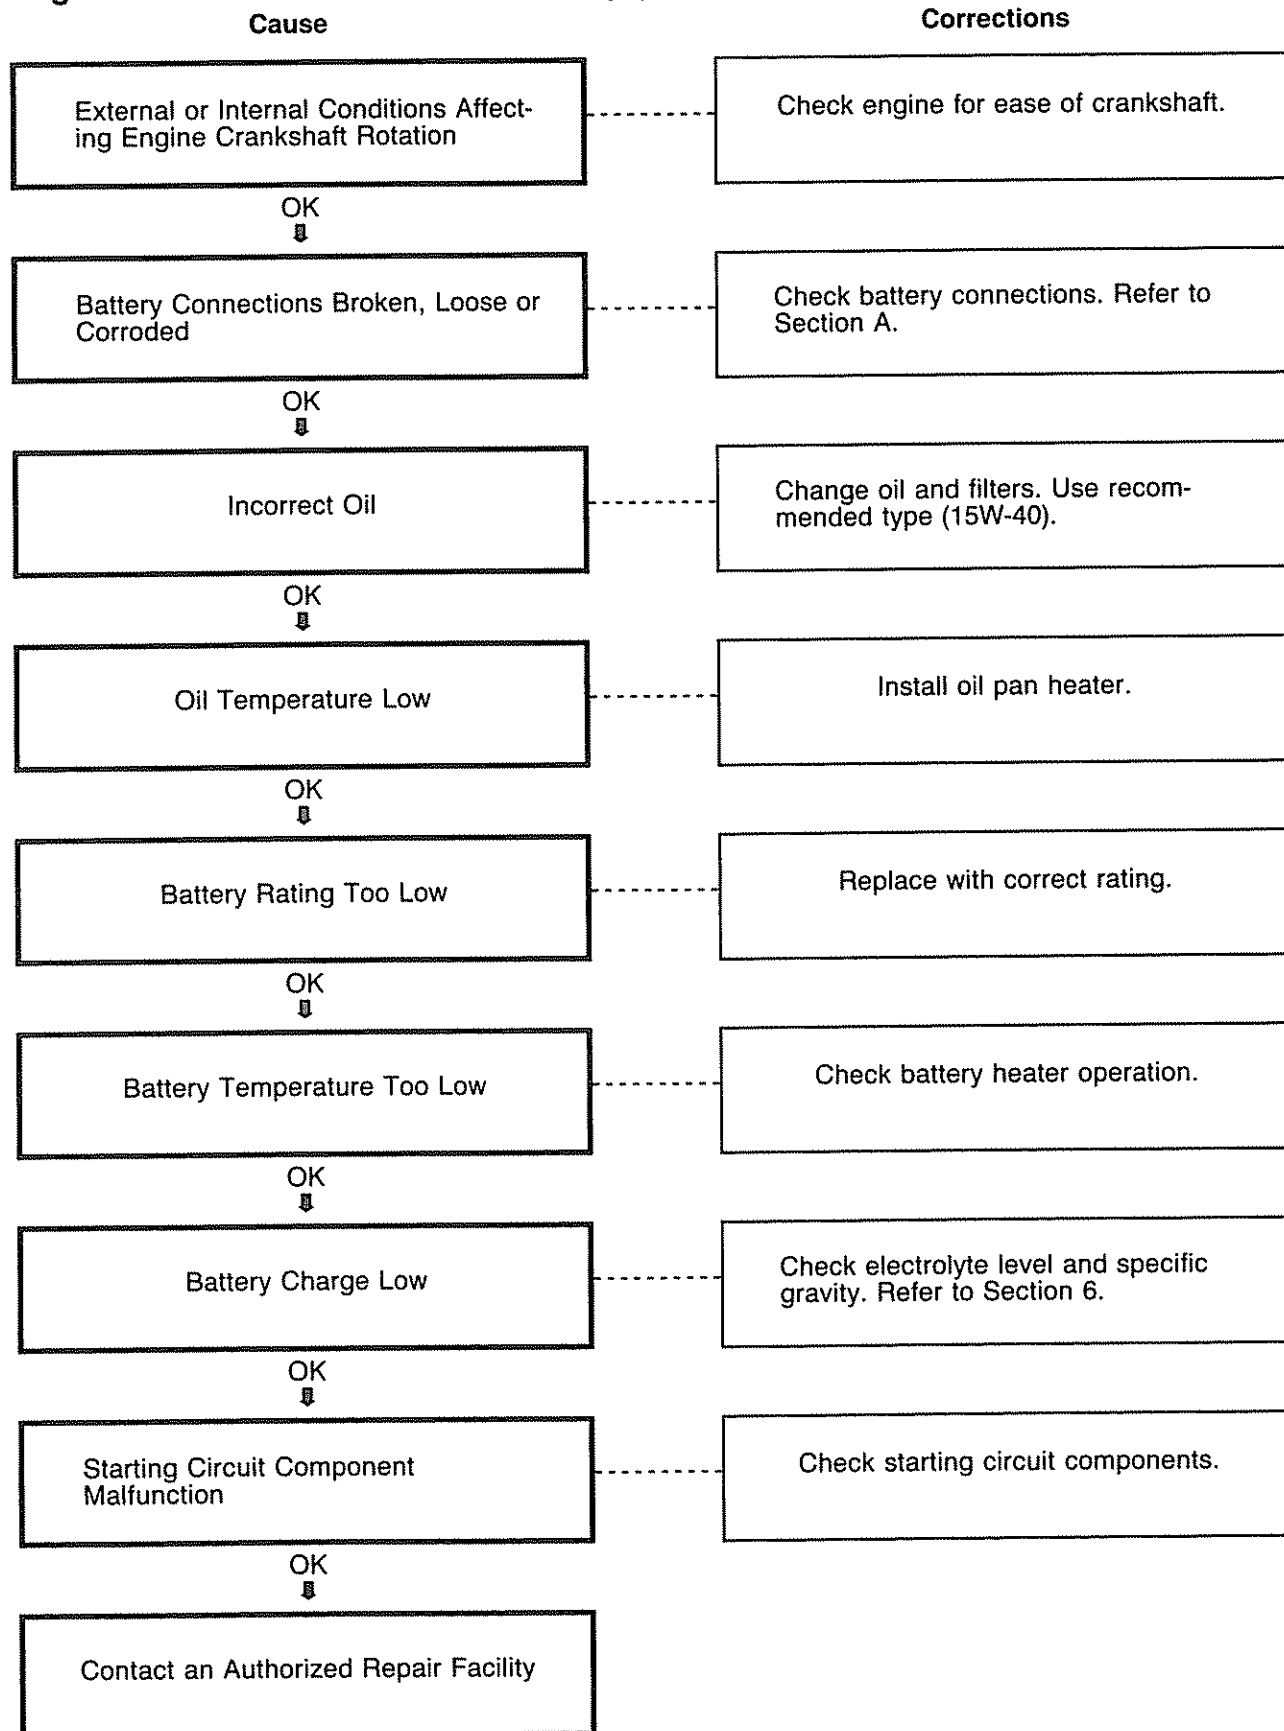


## Engine Hard to Start or Will Not Start (Exhaust Smoke Present)

Cause	Corrections
Engine Cranking Speed Low (Below 150 RPM)	Check engine cranking RPM.
OK ↓	
Engine Driven Units Engaged	Disengage engine driven units.
OK ↓	
Cold Start Aid Needed or Not Working Correctly	Install cold start aid. Check, repair, or replace if necessary.
OK ↓	
Fuel Filter Plugged	Replace fuel filter.
OK ↓	
Air in the Fuel System	Check for air in fuel, tighten fuel connections and filter, check fuel tank stand pipe.
OK ↓	
Fuel Suction Line Restricted	Check fuel line for restrictions.
OK ↓	
Intake Air System Restricted	Check intake air system for restrictions.
OK ↓	
Fuel Contaminated	Verify by operating engine from a temporary supply tank.
OK ↓	
Contact an Authorized Repair Facility	

## Engine Cranks But Will Not Start (No Smoke From Exhaust)

Cause	Corrections
No Fuel In Tank	Add fuel.
OK ↓	
Shut-off Valve Closed	Use manual override. Repair electrics.
OK ↓	
No Fuel To Injectors	Loosen fuel supply line between fuel pump and cylinder head while cranking engine - check for fuel.
OK ↓	
Fuel Connections Loose On Suction Side Of Fuel Pump	Tighten all fuel filter fittings and connections from fuel tank to fuel pump.
OK ↓	
Fuel Filter Plugged or Suction Line Restricted	Replace fuel filter. Inspect fuel hose for restriction.
OK ↓	
No Fuel in Pump	Prime fuel pump.
OK ↓	
Intake or Exhaust System Restricted	Check intake and exhaust system for restrictions.
OK ↓	
Contact an Authorized Repair Facility	


## Engine Starts But Will Not Keep Running

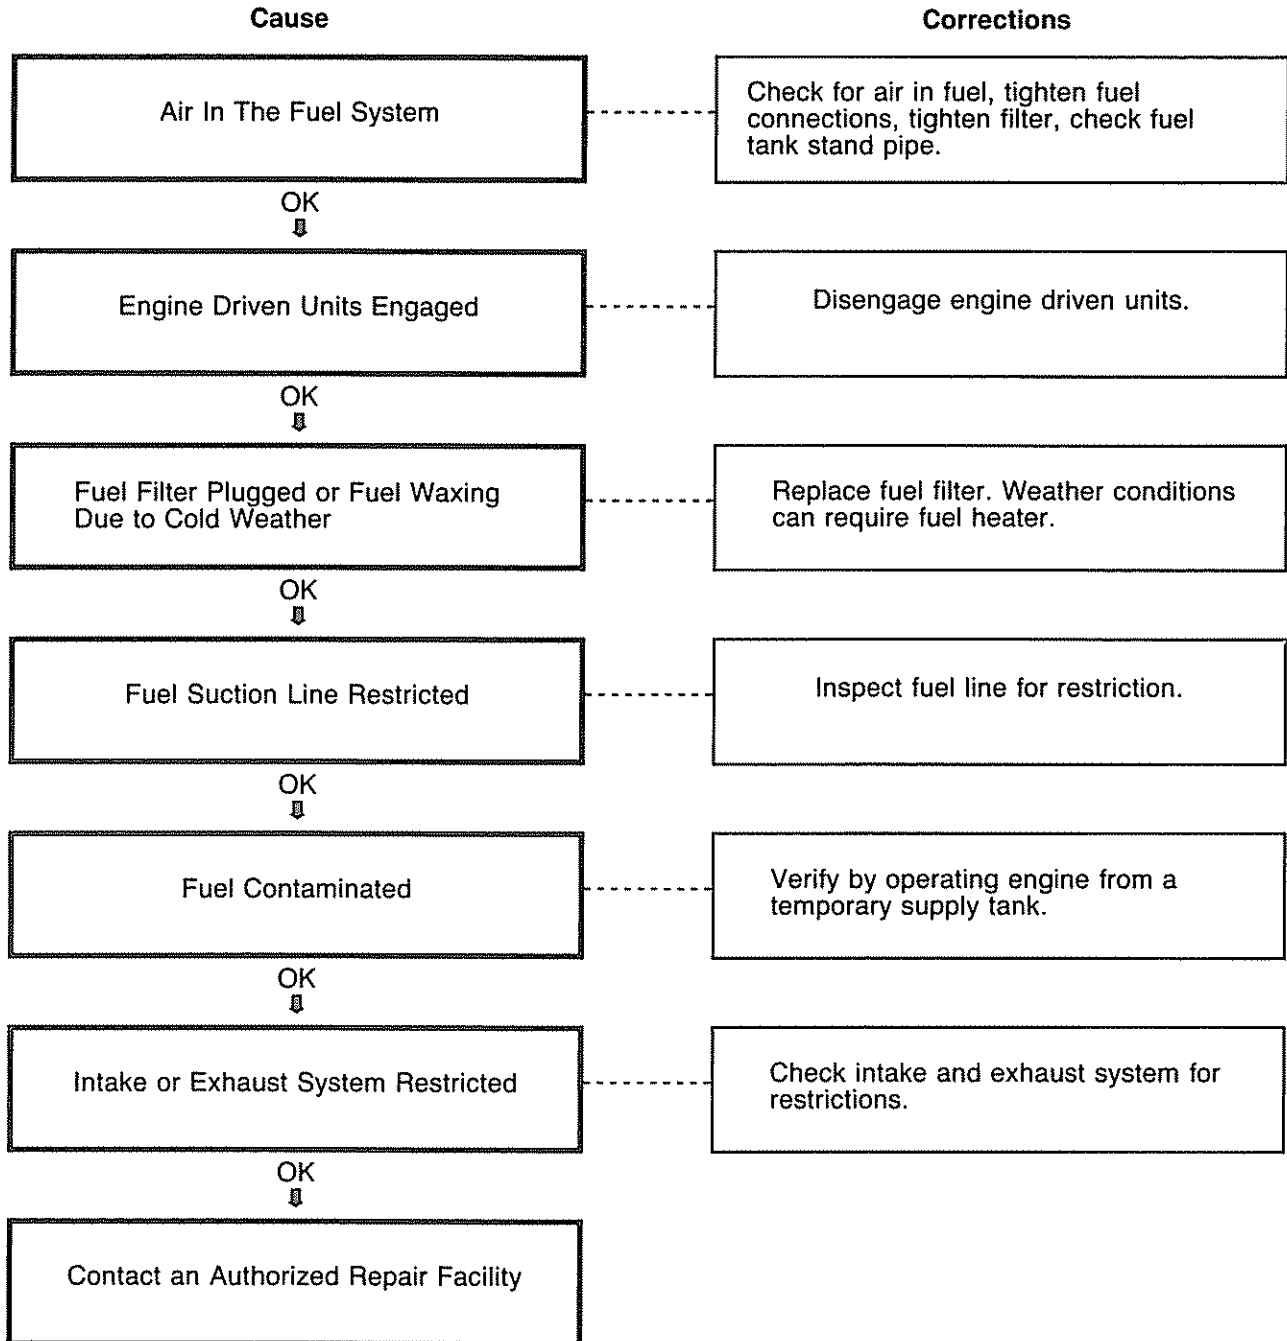

**Engine Will Not Shut Off**

Cause	Corrections
Fuel Pump Manual Override Open.	Check to make sure manual override screw is out to maximum travel.
OK ↓	
Fuel Pump Shut-off Valve Disc Stuck	Check opening and closing of electrics.
OK ↓	
Fuel Tank Vents Plugged	Remove, clean, or replace vents.
OK ↓	
Fuel Drain Line Restricted	Check fuel drain line for loops, crimps, or clamped points.
OK ↓	
Engine Running on Fumes Drawn into Air Intake	Locate and isolate the source of fumes.
OK ↓	
Contact an Authorized Repair Facility	

## Lubricating Oil Pressure Low

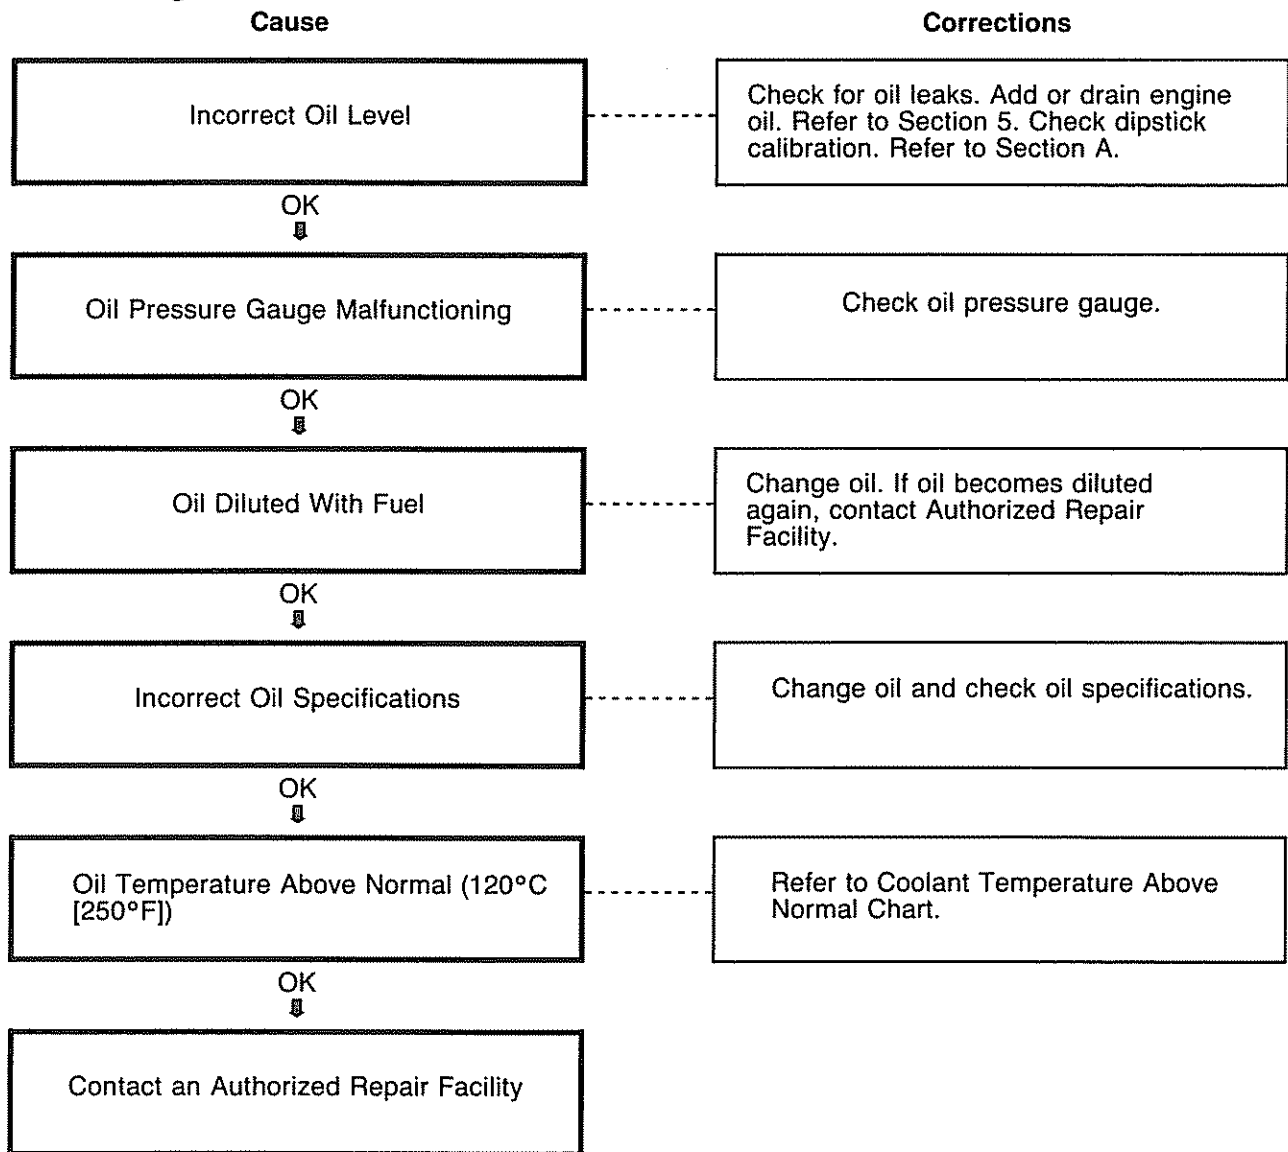

## Coolant Temperature Above Normal

### Cause

### Corrections

Low Coolant Level

Add coolant.

OK  
↓

Radiator Fins Damaged or Obstructed  
with Debris

Inspect radiator fins. Clean or repair if  
necessary.

OK  
↓

Collapsed or Restricted Radiator Hose

Inspect hoses. Replace if necessary.

OK  
↓

Loose Fan Drive Belt

Check belt tension and tighten if  
necessary. Refer to Section 5.

OK  
↓

Incorrect Oil Level

Add or drain engine oil. Refer to Section 5.  
Check dipstick calibration. Refer to  
Section A.

OK  
↓

Cooling Fan Shroud Damaged or  
Missing

Inspect shroud. Repair, replace, or  
install.

OK  
↓

Incorrect or Malfunctioning Radiator  
Cap

Check the radiator cap. Replace if  
necessary.

OK  
↓


Temperature Gauge Malfunctioning

Test the gauge. Repair or replace if  
necessary.

OK  
↓

(Continued)

**Coolant Temperature Above Normal (Continued)**

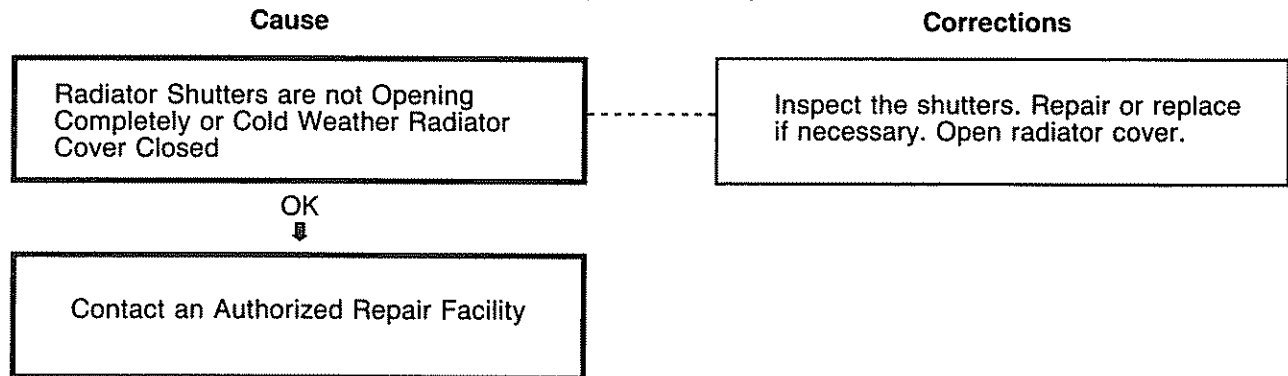

## Coolant Temperature Below Normal

### Cause

### Corrections

Radiator Shutters Stuck in Open  
Position or Opening Early

Inspect the shutters. Repair or replace  
if necessary.

OK  
↓


Temperature Gauge Malfunctioning

Test the gauge. Repair or replace if  
necessary.

OK  
↓

Contact an Authorized Repair Facility

## Exhaust Smoke Excessive Under Load

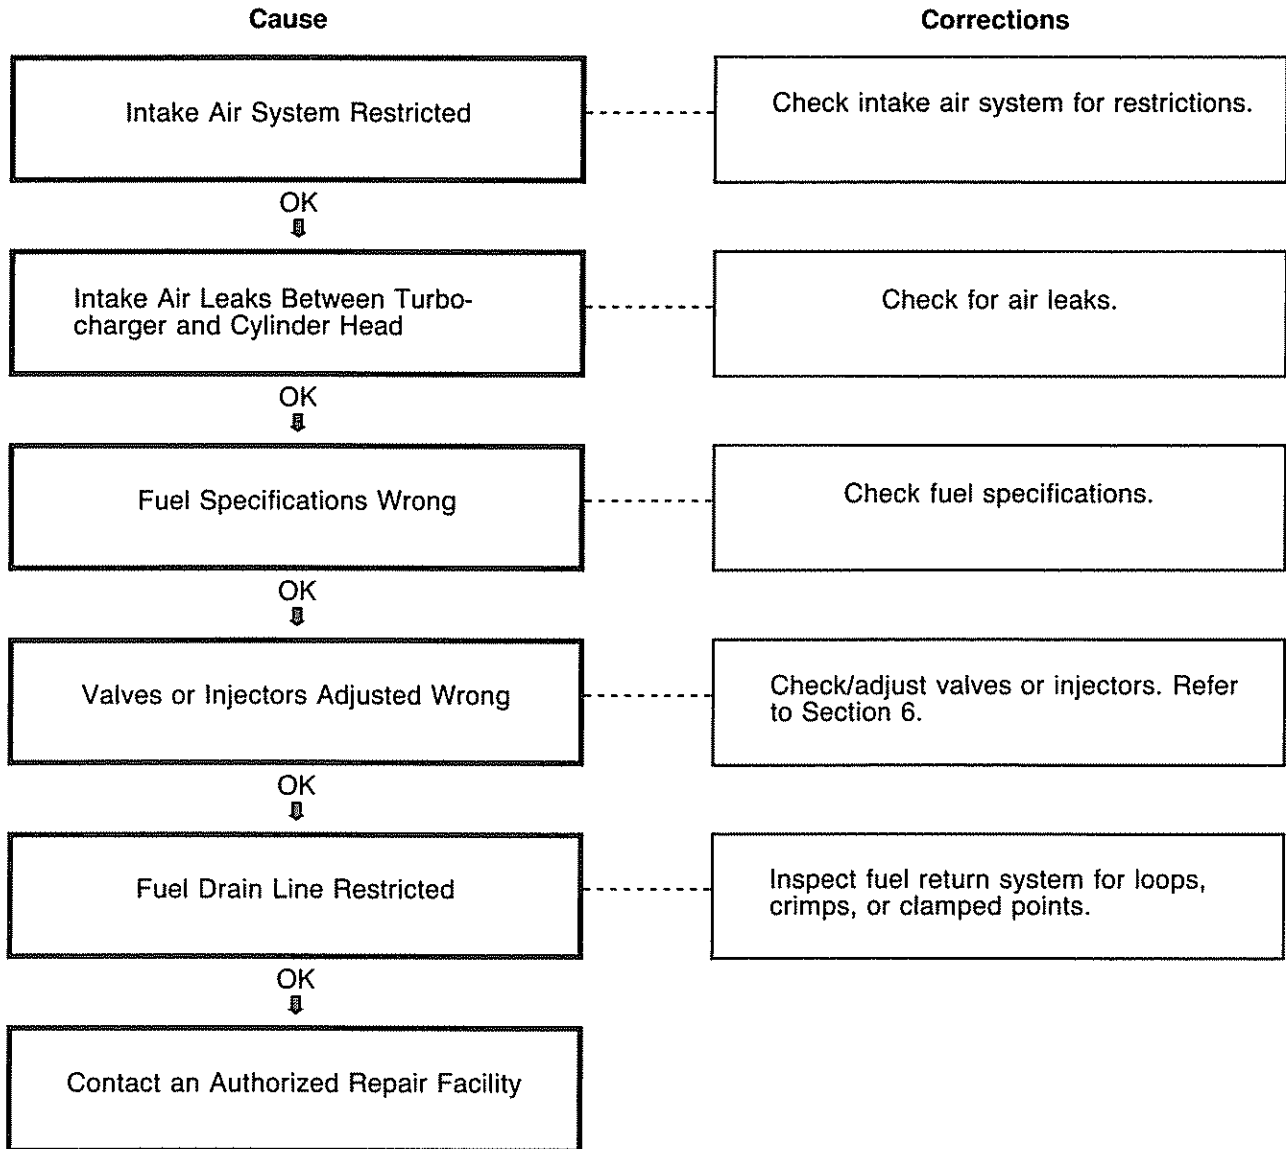

## Engine Power Output Low


Cause	Corrections
Excessive Load for Engine Horsepower Rating	Reduce vehicle load.
OK ↓	
Low Power Due to Altitude	Derate engine for altitude. Refer to engine data sheet for specifications, Bulletin No. 3381194.
OK ↓	
Fuel Suction Line or Fuel Filter Restricted	Check fuel line for restriction. Replace fuel filter.
OK ↓	
Lubricating Oil Level Too High	Check dipstick calibration and oil pan capacity. Refer to Section A.
OK ↓	
Throttle Linkage Adjustment Wrong	Check throttle linkage adjustment for full opening of throttle lever.
OK ↓	
Intake or Exhaust System Restricted	Check intake and exhaust systems for restrictions.
OK ↓	
Air in Fuel - Spongy Throttle is Symptom	Check for air in fuel, tighten fuel connections and filter, check fuel tank stand pipe.
OK ↓	

(Continued)


## Engine Power Output Low (Continued)

Cause	Corrections
Fuel Drain Line Restricted or Fuel Tank Vents Plugged	Check fuel drain line for loops, crimps or clamped points. Remove, clean, or replace vents.
OK ↓	
Valves or Injectors Adjusted Wrong	Check/adjust valves or injectors. Refer to Section 6.
OK ↓	
Fuel Quality Poor	Verify by operating engine from a temporary tank that contains good fuel and refer to fuel oil specifications.
OK ↓	
High Intake Air Temperature - (Above 38°C [100°F])	Use outside air to turbocharger in warm weather.
OK ↓	
Low Intake Air Temperature - (Below 0°C [32°F])	Use intake air from under hood in cold weather.
OK ↓	
High Fuel Temperatures - (Above 70°C [158°F])	Fill fuel tanks; turn off fuel heater. Maximum fuel temperature 70°C [158°F].
OK ↓	
Contact an Authorized Repair Facility	

Engine Will Not Reach Rated Speed When Loaded

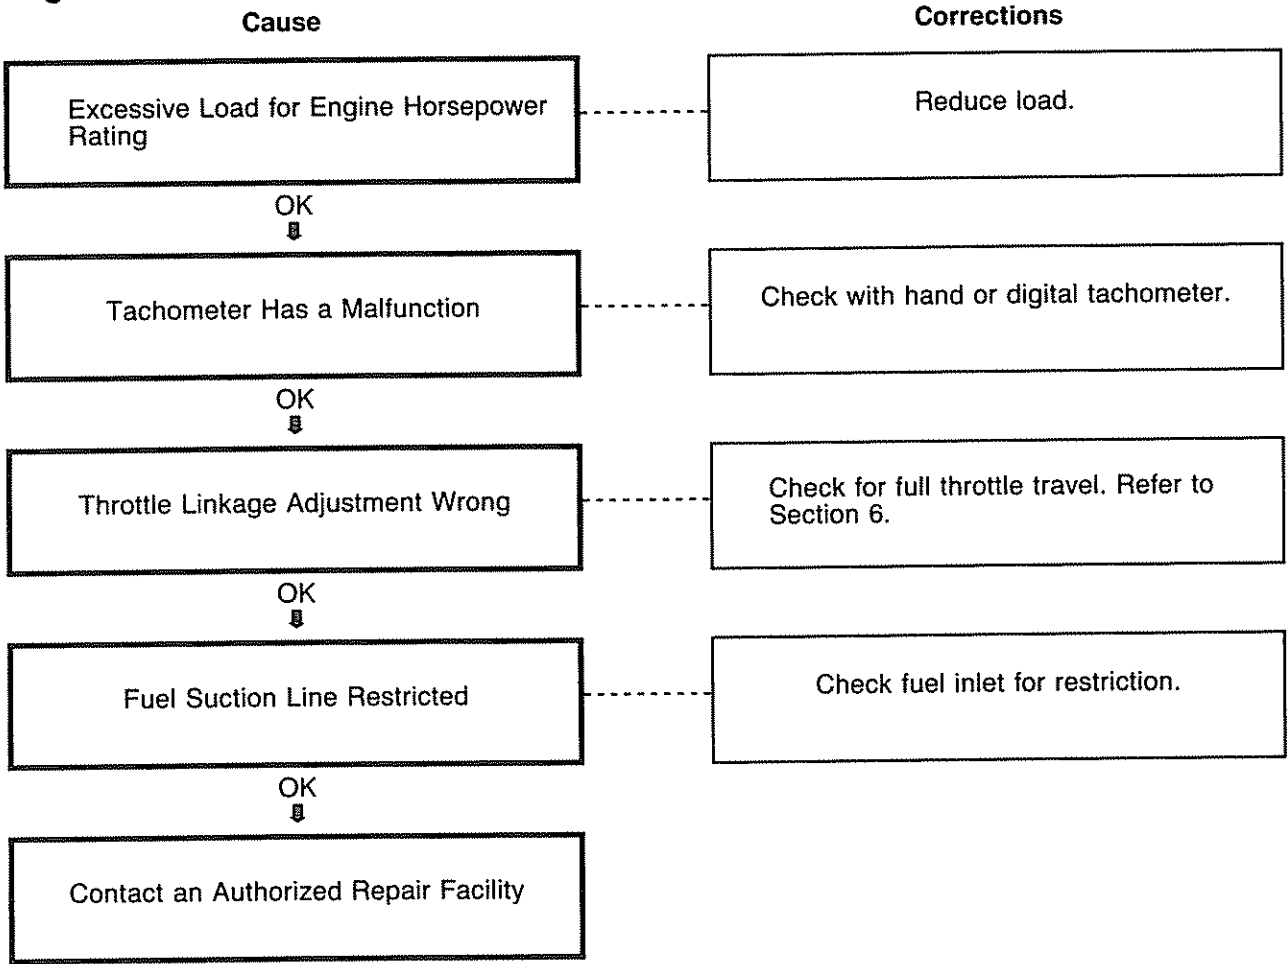

White Smoke or Rough Running At Idle (After Warmup Period)

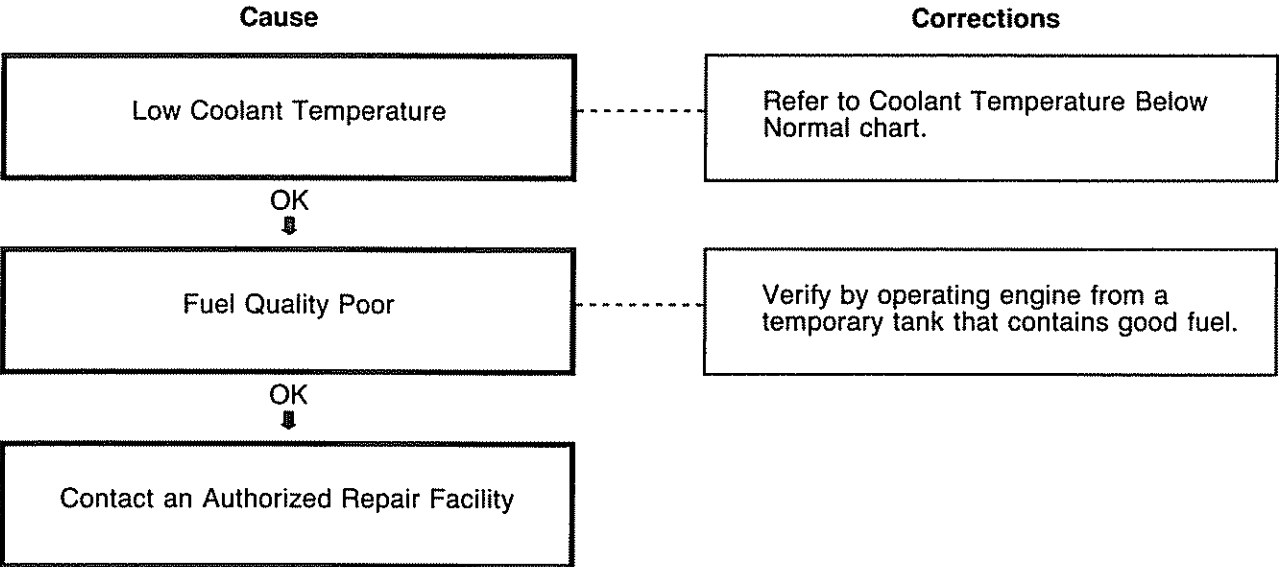



**Section A - Adjustment, Repair, and Replacement**  
**Section Contents**

	Page
<b>Air Starting Motors</b> .....	A-2
Maintenance .....	A-2
<b>Alternator Belt</b> .....	A-3
Adjustment .....	A-3
<b>Battery Connections</b> .....	A-2
<b>Dipstick</b> .....	A-10
Calibration .....	A-10
<b>Fan Belt</b> .....	A-4
Adjustment .....	A-9
Checking.....	A-6
Installation.....	A-6
Removal .....	A-4
<b>Storage for Engines Out of Service</b> .....	A-11
Long Term Storage.....	A-12
Short Term Storage .....	A-11




## Air Starting Motors

The air starting motor system (tanks, line sizes, and valves) is designed and installed by the original equipment manufacturers and the starting motor suppliers. Refer any questions about the air starting systems to the manufacturer.

### Maintenance


- Do **not** operate the air starting motor with air pressure lower than 480 kPa [70 psi].
- Maintain the air compressor according to the recommendations outlined in the manual.
- For maximum efficiency, the hoses, tubes, and lines **must not** leak.
- Refer to the original equipment manufacturers' and starting motor manufacturers' manuals for specific information regarding the starting motors, valves, and systems.

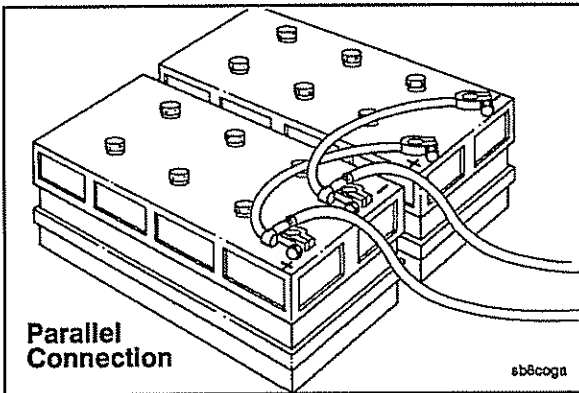

### Battery Connections

**Caution:** When using jumper cables to start the engine, make sure to connect the cables in parallel: positive (+) to positive (+) and negative (-) to negative (-). When using an external electrical source to start the engine, turn the disconnect switch to the OFF position and remove the key before attaching the jumper cables.

The accompanying illustration shows a typical **parallel** battery connection. This arrangement doubles the cranking amperage.

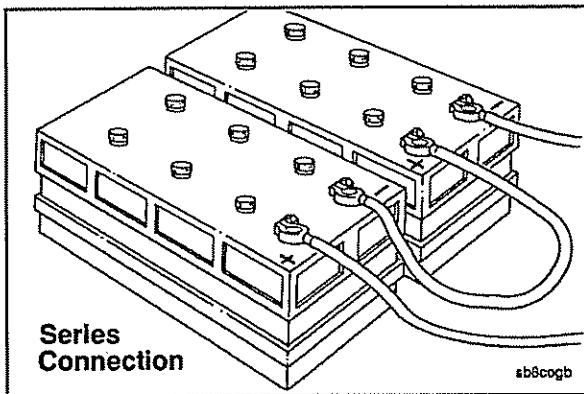

This illustration shows a typical **series** battery connection. This arrangement, positive to negative, doubles the voltage.


## Alternator Belt

### Adjustment

**NOTE:** The lower jam nut has left-hand threads.

Loosen the alternator and adjusting link mounting cap-screws.

Loosen the jam nuts on the adjusting screw.

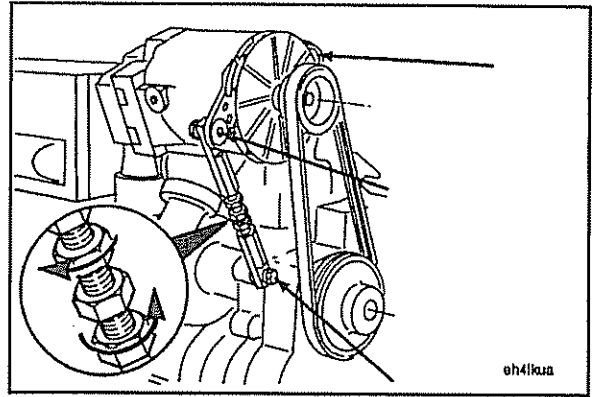


Turn the adjusting screw **clockwise** to tighten the belt tension.

Belt tension: 356 N [80 lbf]

Burroughs Tension Gauge: (ST-1293)


**NOTE:** Over-tensioning of alternator belts can result in premature accessory drive bushing wear and seal leakage.

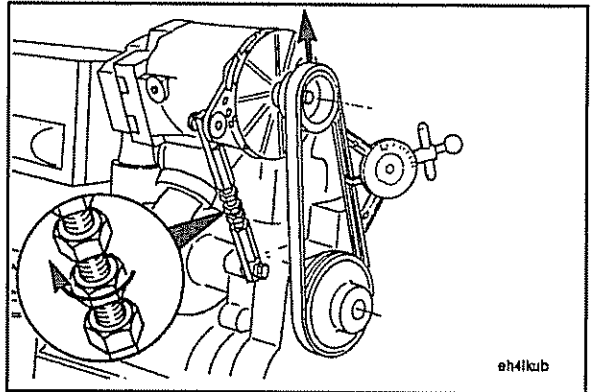


**NOTE:** The lower jam nut has left-hand threads.


Tighten the jam nuts on the adjusting screw to 55 N•m [40 ft-lb].

Tighten the adjusting link and alternator mounting cap-screws to 55 N•m [40 ft-lb].

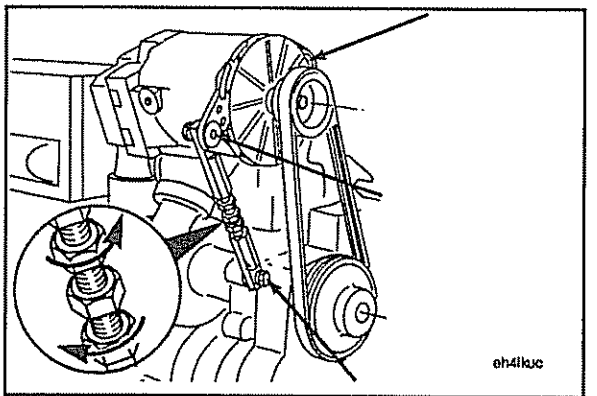

Check the belt tension again to make sure the tension is correct.

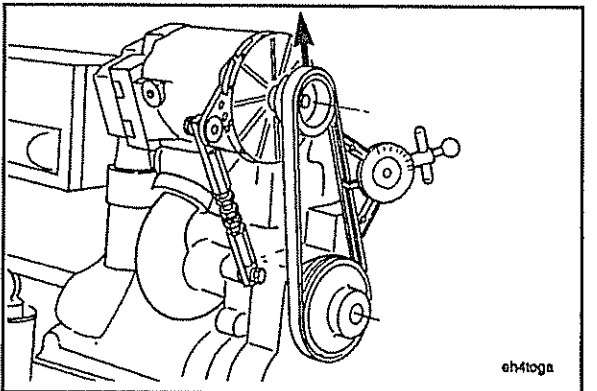

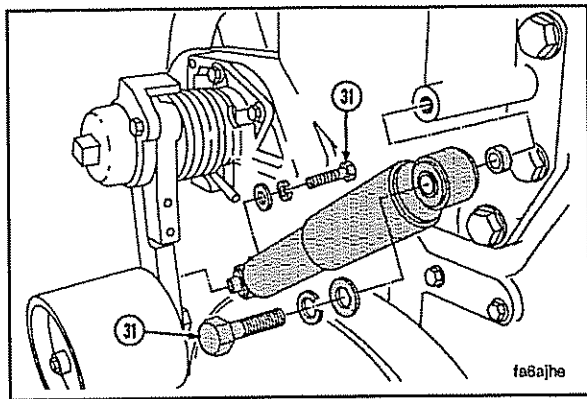

## Fan Belt

### Removal

#### Back Side Idler System




Remove the back side idler end of the shock absorber, solid control rod (turnbuckle), or control rod tensioner assembly.

**NOTE:** The back side idler system uses one of two types of control rods (turnbuckles) or a shock absorber. Refer to the instructions that apply to the engine being serviced.




Loosen the **upper** capscrew (31). Remove the **lower** cap-screw (31).

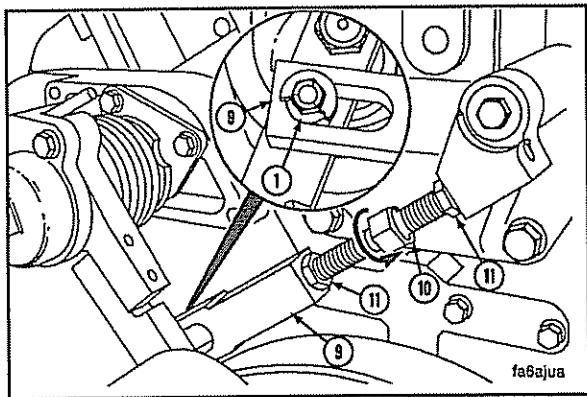


**NOTE:** One of the jam nuts on the solid control rod (turnbuckle) has left hand threads.

Loosen the solid control rod (turnbuckle) jam nuts (11). Turn the adjusting screw (10) until the spacer (1) is not touching the end of the slot in the control rod (9).

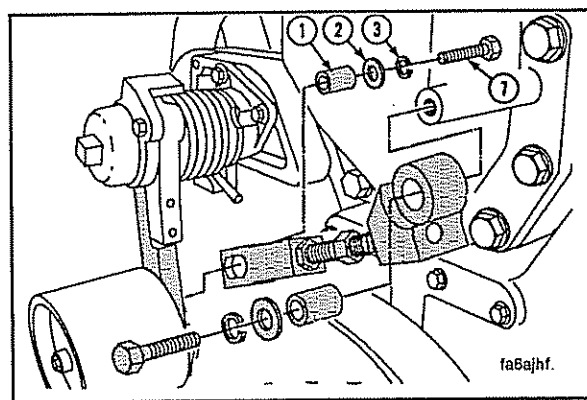


Remove the capscrew (7), washers (2, 3) and spacers (1). Remove the control rod assembly from the idler assembly.

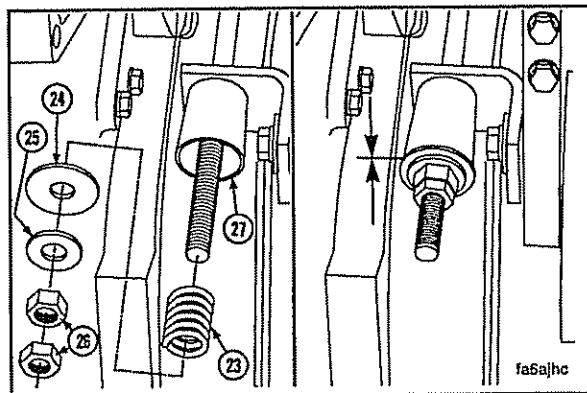

To remove the control rod with spring, remove the two jam nuts (26), washers (25, 24), and spring (23).

Remove the parts.

- (20) Capscrew
- (19) Washer, Lock
- (18) Washer
- (17) Spacer
- (14) Capscrew
- (13) Washer, Lock
- (12) Washer
- (15) Control Rod

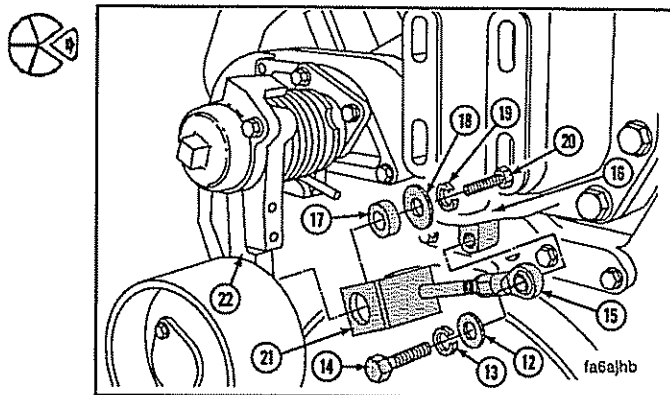


**Caution:** The fan belt idler is under tension. Do NOT allow your hands to get between the idler and the belt, or the fan hub. Personal Injury can result.

Use an 8-point socket and breaker bar or large wrench to hold the idler in position against the spring tension. Remove the capscrews from the spring cap.

Slowly turn the wrench until the spring tension is relieved.

Remove the fan belt.

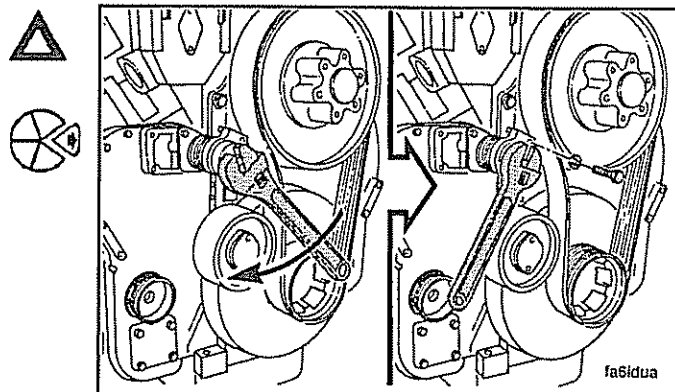


### Two Pulley Fan Drive (Without Idler Pulley)

**NOTE:** The fan center distance is the distance between the crankshaft and fan center lines.


On systems that use a 20, 22, or 24 (without idler pulley) inch fan center, loosen the bolts that pass through the slotted holes in the fan hub bracket.


Loosen the fan hub adjusting screw.

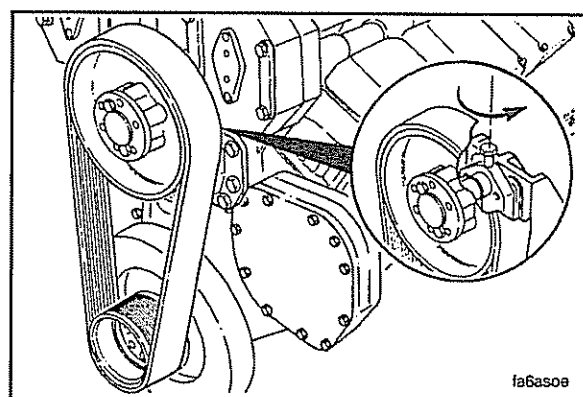


On engines that use a two pulley drive with a 28 inch fan center distance, loosen the bolts that pass through the slotted holes and fan hub bracket of the 28 inch fan center system. The adjusting screw (16) is below the fan hub. The lock nut (17) must be loosened before loosening the fan hub adjusting screw.

Loosen the fan hub adjusting screw.

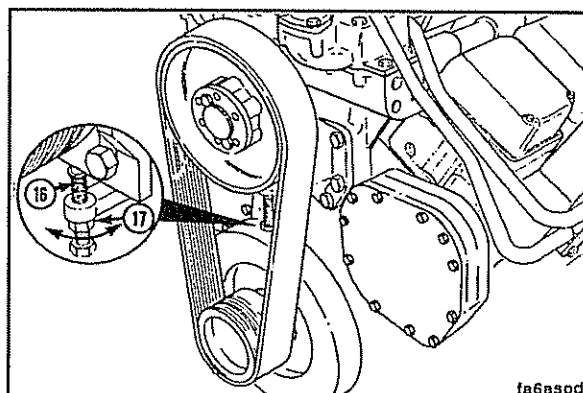

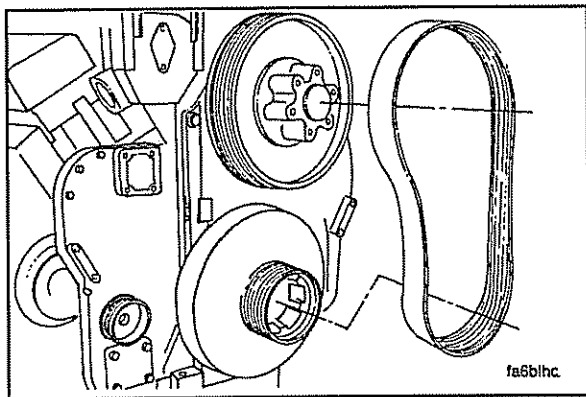


Remove the fan belt.

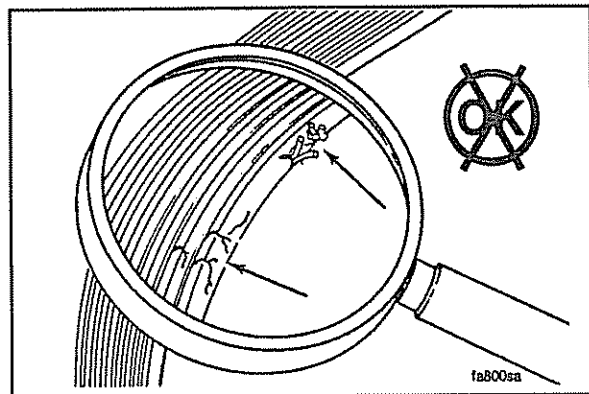

### Checking


Visually inspect the belt for:

- Cracks
- Glazing
- Tears or cuts.

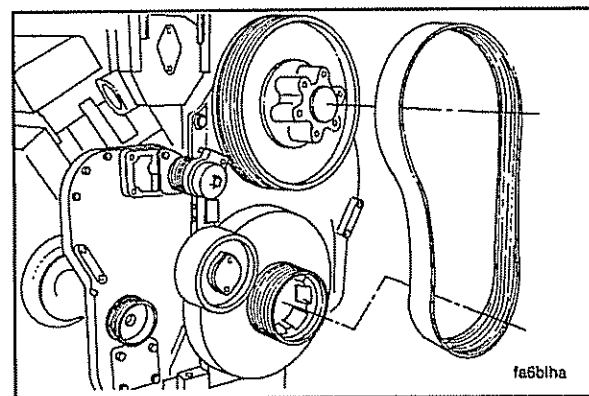

### Installation

Install the belt on the crankshaft and fan hub pulley. Align the grooves on the belt on the ribs of the pulley.

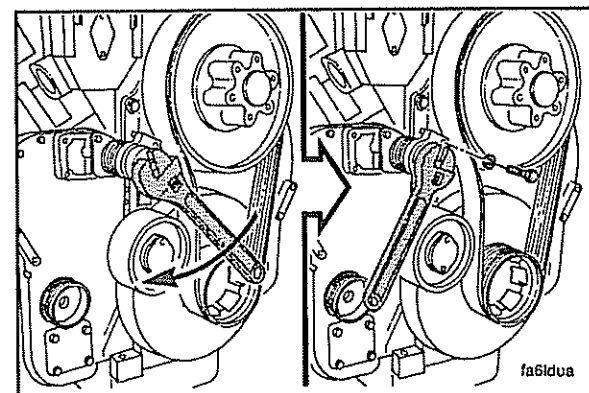

### Back Side Idler System

After installing the fan belt, install the fan idler system.



**Caution:** The fan belt idler is under tension. Do NOT allow your hands to get between the idler and the belt or the fan hub. Personal injury can result.

Rotate the idler against the spring tension until the cap-screw holes are aligned. Install the lock washer and cap-screw.



**Torque Value:** 45 N•m [35 ft-lb]

Slowly turn the wrench until the idler is against the belt.

**NOTE:** The fan hub pulley and the fan belt are shown removed for clarity.

When installing the solid control rod (turnbuckle) on older engines, the capscrews (4 and 7) are 64 mm [2 1/2 in] in length. On the newer engines, the capscrew (4 and 7) are 57 mm [2 1/4 in] in length. It is recommended that SAE Grade 8 capscrews that are 57 mm [2 1/4 in] be installed or the capscrews can break.

Install a spacer (1), a heavy flat washer (2), and a lock washer (3). Install a SAE Grade 8 capscrew (4), 57 mm [7/16-14 X 2 1/4 in] in the **upper** control rod end (5). Hand tighten the capscrew. Install the **upper** control rod end in the fan hub support (6).

Install a spacer (1), a lock washer (3), and a heavy flat washer (2). Install a SAE Grade 8 capscrew (7), 57 mm [7/16-14 X 2 1/4 in] in the lower control rod end (8). Install the lower control rod end on the idler arm (9). Tighten the capscrews (4 and 7).

**Torque Value:** 90 N•m [65 ft-lb]

**NOTE:** The fan belt **must** be installed and under the tension of the fan idler arm spring to adjust the control rod. The fan belt and a portion of the flat washer are **not** shown for clarity.

Turn the adjusting screw (10) until the end of the slot on the **lower** control rod end (9) is touching the spacer (1). One of the nuts has left hand threads.




Hold the adjusting screw and tighten the two jam nuts (11).


To install the control rod with spring, install the flat washer (12), lock washer (13), and capscrews (14) in the upper end of the control rod (15). Install the control rod in the fan support (16). Tighten the capscrew.

**Torque Value:** 60 N•m [45 ft-lb]

Install the spacer bushing (17), flat washer (18), lock washer (19), and capscrew (20) in the lower end of the control rod (21). Install the **lower** end of the control rod on the fan idler arm (22). Tighten the capscrew.

**Torque Value:** 60 N•m [45 ft-lb]

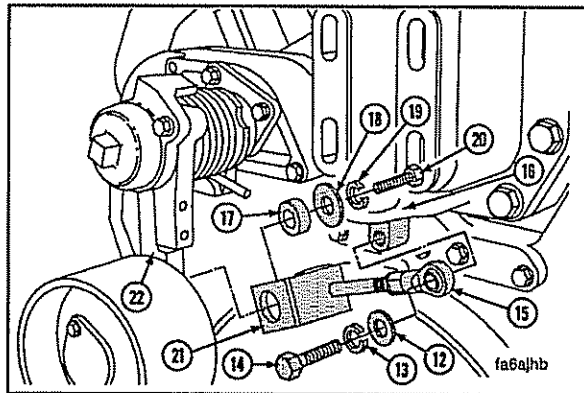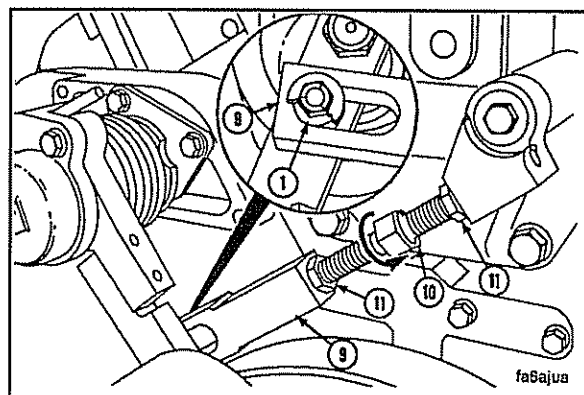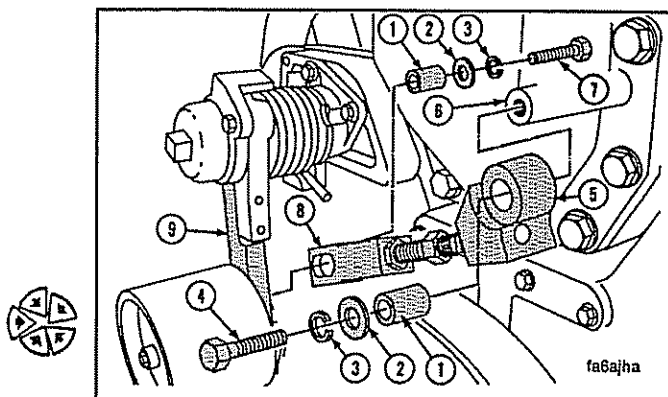

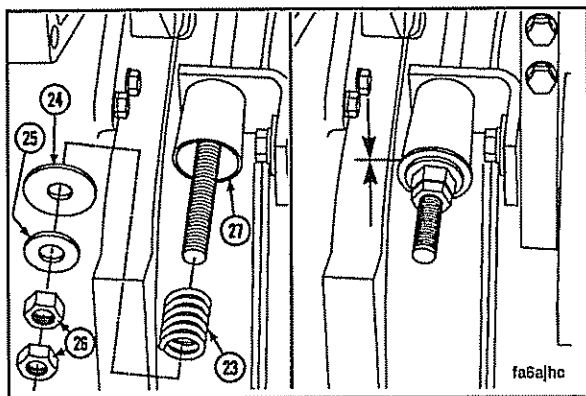


Install the parts.

- (23) Spring
- (24) Spring retainer washer
- (25) Flat washer
- (26) Jam nuts (two)

**NOTE:** Do **not** tighten the inner fan nut excessively. If the jam nut is too tight, the spring retainer will bend and the control rod will fail.


Turn the **Inner** jam nut until the spring retainer washer (24) touches the cylinder on the **lower** control rod end (27). Hold the **Inner** jam nut and tighten the **outer** jam nut.

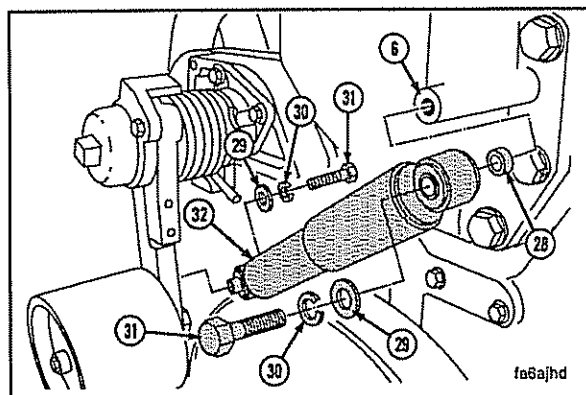

**NOTE:** The shock absorber **must** be installed with the larger outer tube of the absorber attached to the fan hub support. If the absorber is installed wrong, dirt can enter the tube and cause the part to fail.

To install the shock absorber, install these parts:

- (28) Spacer
- (29) Flat washer
- (30) Lock washer
- (31) Capscrew
- (32) Shock absorber

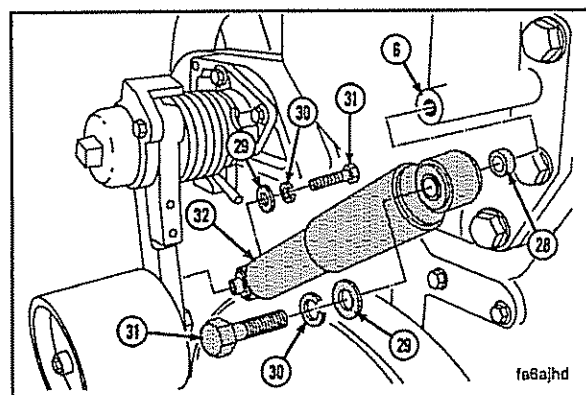


Install the shock absorber (32) in the fan support (6).

Install the flat washer (29), lock washer (30), and cap-screw (31) in the lower end of the shock absorber.

Install the shock absorber on the fan idler arm. Tighten the two capscrews (31).



**Torque Value:** 60 N•m [45 ft-lb]

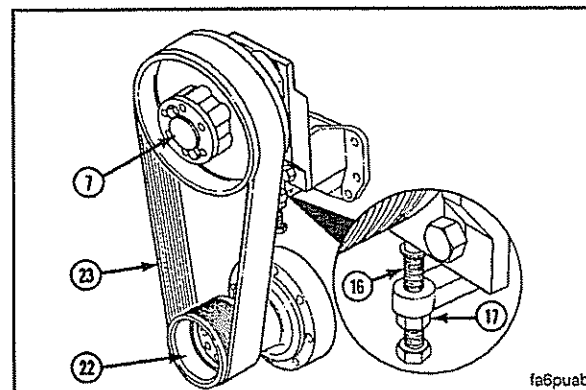

### Two Pulley Fan Drive Belt - [28 In center]

Install the poly vee 20 rib L-section fan belt (23) on the crankshaft pulley (22) and the fan hub pulley (7). Align the grooves in the belt on the ribs in the pulleys.


Make sure the heavy nut (17) is positioned to allow the adjusting capscrew (16) to turn freely.

Turn the adjusting capscrew (16) **counter clockwise** to remove the slack from the belt.

### Two Pulley Fan Drive Belt - (20, 22, or 24 Inch center)

Install the poly vee 20 rib L-section fan belt (18) on the crankshaft pulley (17) and the fan hub pulley (7). Align the grooves in the belt on the ribs in the pulleys.


Turn the adjusting capscrew (10) **clockwise** to remove slack from the belt.

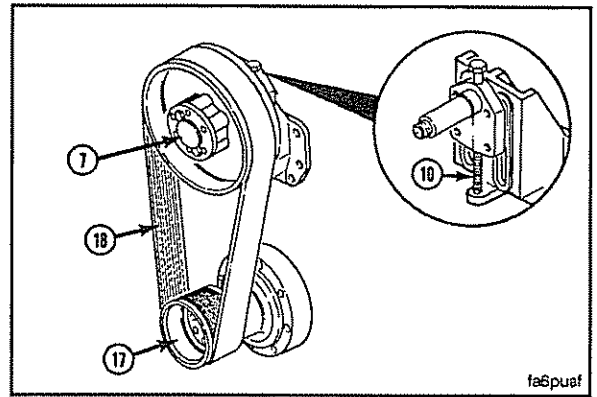

### Adjustment

#### Two Pulley Fan Drive Belt

Only one method is acceptable for setting the two pulley fan drive belt tension. The recommended method is to use a belt tension gauge.

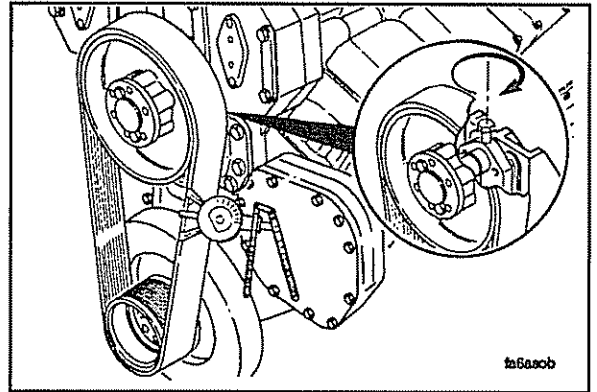


**Caution: Incorrect belt tensloning procedures can cause component failure and personal injury.**


Install the belt tension gauge, Part No. 3823875 or equivalent, on the belt in the middle **between** the two pulleys. Continue tightening the adjusting capscrew to a belt tension of 2668.9 to 2891.3 N [600 to 650 lbf]. The belt tension will increase when the capscrews tighten the fan hub assembly to the fan support. Tighten the capscrews.

**Torque Value:** 285 N•m [210 ft-lb]

Remove the tension gauge and position the gauge on the other side of the belt. Verify the belt tension is correct, 2891.3 to 3336.2 N [650 to 750 lbf]. If the belt tension is **not** correct, loosen the capscrews and adjust to the correct tension again.


**Torque Value:** 285 N•m [210 ft-lb]

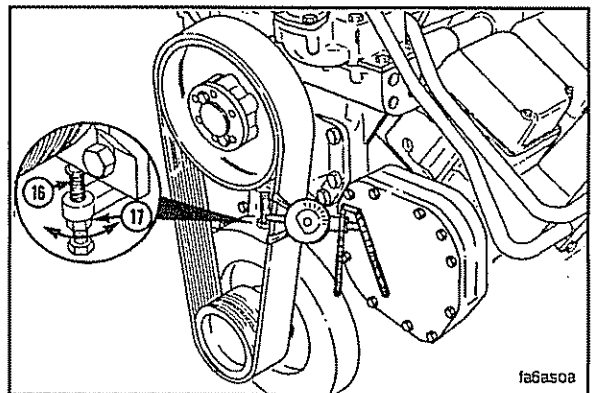

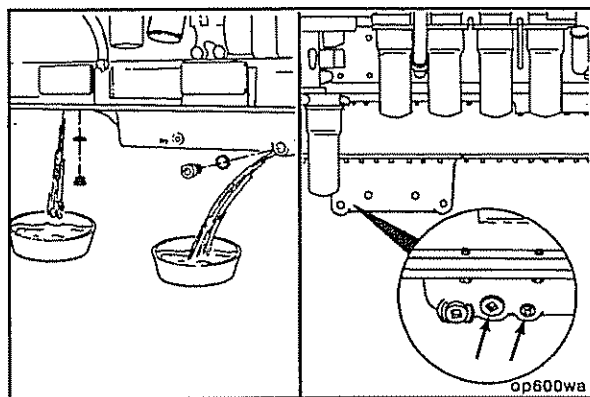


## Dipstick Calibration

Drain the oil from the pan. Refer to Section 5.

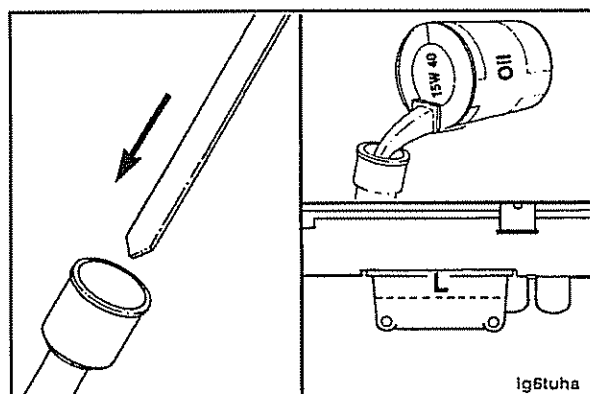


Install the dipstick in the dipstick tube.

Use clean 15W-40 oil to fill the oil pan to the **low** level (specified **low** level). Refer to the lubricating oil system specifications in Section V.

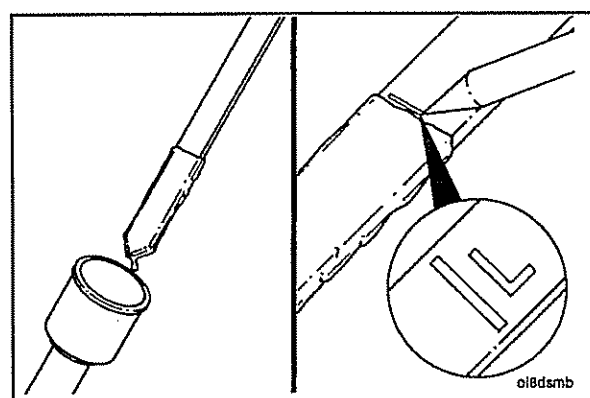

**NOTE:** The dipstick will break if the scribe mark is too deep. Remove the dipstick and scribe a mark across the dipstick at the oil level. Mark the **low** level with an **L**.

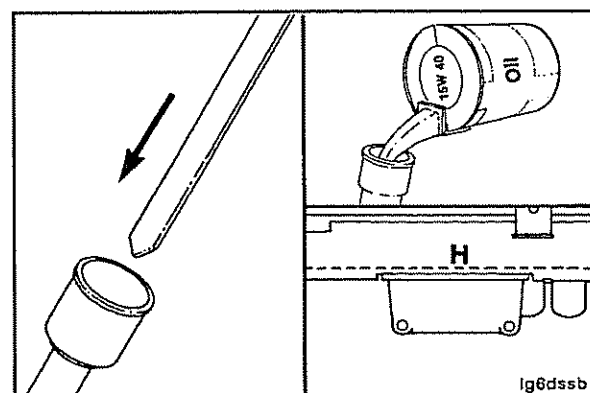

Install the dipstick.


Add additional oil to the oil pan to specified **full** level. Refer to the lubricating oil system specifications in Section V.

**NOTE:** The dipstick will break if the scribe mark is too deep.

Remove the dipstick and scribe a mark across the dipstick at the oil level. Mark the **high** oil level with an **H**.

With a fill to the high oil level, oil can start to flow from the pipe plug at the center of the pan adapter.

There is a 1/8 inch pipe plug located in the right bank side of the oil pan adapter. This plug is near the center of the adapter and is located at the **high** oil level.

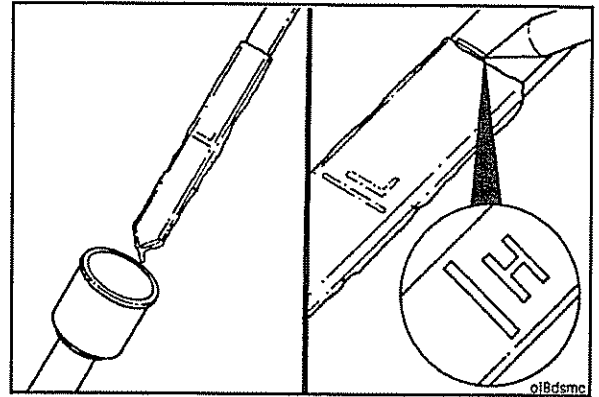

## Storage for Engines Out of Service

### Short Term Storage

#### One Month to 6 Months

This procedure describes the proper method for the short term storage of an engine.

#### Short Term Storage Preparation

Operate the engine at HIGH IDLE until the coolant temperature is 70°C [160°F].

Turn the engine OFF.

Disconnect the fuel lines to the engine fuel filter and the injector return line.

Use a preservative oil. Use Daubert Chemical NoxRust No. 518, or equivalent. The oil must be Military Specification MIL-L-644, Type P-9.

Fill one container with diesel fuel, and the second container with preservative oil. Put both fuel lines in the container of diesel fuel.

START the engine.

After the engine is operating smoothly, transfer the fuel supply line to the container of preservative oil. Operate the engine until the preservative oil flows out of the injector return line.

Turn the engine OFF. Connect the fuel lines to the fuel filter and the injector return line.

Drain the oil pan sump, oil filters, and fuel filters.

Install the drain plugs in the oil sump. The sump can remain empty until the engine is ready to put in a service application.

Disconnect the electrical wiring from the fuel pump solenoid.

Turn the fuel pump manual shutoff valve counterclockwise until it stops.

Crank the engine slowly. Spray lubricating oil into the intake manifold and the inlet of the air compressor.

Drain the coolant.

**NOTE:** It is **not** necessary to drain the coolant if it is a permanent type antifreeze with a rust inhibitor.

**Put a warning tag on the engine. The tag must read:**

- **The engine does NOT contain oil.**
- **Do NOT operate the engine.**

Store the engine in an area that is dry and has a uniform temperature.

Bar the crankshaft two or three revolutions every 3 to 4 weeks.

### Short Term Storage Removal

Prime the lubricating system:

- Fill the oil pan sump, oil filters, and fuel filters.
- Fill the coolant system if necessary.
- Disconnect the electrical wire from the fuel pump solenoid valve.
- Rotate the crankshaft by the starting motor until oil pressure appears on the gauge or the warning light goes out.
- Connect the electrical wire to the fuel pump solenoid valve.
- Start the engine. (Refer to Normal Starting Procedures).

### Long Term Storage

#### Six Months to 24 Months



**Caution:** After 24 months in storage, the engine cooling system **MUST** be flushed with a suitable solvent or a hot, lightweight mineral oil. This procedure **MUST** then be repeated.

This procedure describes the proper method for the long term storage of an engine.

#### Long Term Storage Preparation

Operate the engine at HIGH IDLE until the coolant temperature is 70°C [160°F].

Turn the engine OFF.

Drain the oil. Install the drain plugs. Use Shell 66202 or equivalent, preservative oil. The oil **must** meet Military Specification MIL-L-21260, Type P-10, Grade 2, SAE 30. Fill the engine to the HIGH mark.

Disconnect the fuel lines to the engine fuel filter and the injector return line.

Use Daubert Chemical NoxRust No. 518, or an equivalent preservative oil. The oil **must** meet Military Specification MIL-L-644 Type P9.

Fill **one** container with diesel fuel, and the **second** container with preservative oil. Put both fuel lines in the container of diesel fuel.

START the engine.

After the engine is operating smoothly, transfer the fuel supply line to the container of preservative oil. Operate the engine until the preservative oil flows out of the injector return line.

Turn the engine OFF. Connect the fuel lines to the fuel filter and the injector return line.

Drain the preservative oil from the engine oil pan sump, the air compressor and the oil filters.

Remove the **Intake** and **exhaust** manifolds. Spray preservative oil into the **Intake** and **exhaust** ports in the cylinder heads and in the manifolds.

Spray preservative oil in the intake port on the air compressor.

Use a rust preventative compound that meets Military Specification MIL-C-16173C, Type P-2, Grade 1 or 2. Brush or spray the compound on all of the exposed surfaces that are **not** painted.

Remove the rocker lever covers. Spray the rocker levers, the valve stems, the springs, the valve guides, the crossheads, and the push rods with preservative oil. Install the covers.

Cover all of the openings with heavy paper and tape to prevent dirt and moisture from entering the engine.

**Put a warning tag on the engine. The tag must indicate:**



- The engine has been treated with preservatives.
- Do not bar the crankshaft.
- The coolant has been removed.
- The date of treatment.
- Do not operate the engine.

Store the engine in an area that is dry and has a uniform temperature.

### **Long Term Storage Removal**

Remove the plug from the main oil rifle. Use a hot, lightweight mineral oil. Flush all of the preservative oil from the engine. Bar the engine crankshaft three to four revolutions during the flushing procedure.

Fill the oil pan sump, oil filters, and fuel filters.

Drain the rust preventative compound from the cooling system. Fill the cooling system with coolant.

Prime the lubricating system:

- Disconnect the electrical wire from the fuel pump solenoid valve.
- Rotate the crankshaft by the starting motor until oil pressure appears on the gauge or the warning light goes out.
- Connect the electrical wire to the fuel pump solenoid valve.
- Start the engine. (Refer to Normal Starting Procedures).

Use clean diesel fuel. Flush the fuel system by operating the engine at low idle until the preservative oil is removed.



## Section V - Specifications and Torque Values

### Section Contents

	Page
Air Intake System.....	V-6
Capscrew Markings and Torque Values.....	V-29
Capscrew Markings and Torque Values - U.S. Customary .....	V-29
Compressed Air System .....	V-6
Coolant Recommendations/Specifications.....	V-17
Coolant Capacity Chart.....	V-21
Cooling System Maintenance.....	V-22
Cooling System Soluble Oils.....	V-18
Fleetguard® DCA4 Service Filters and Liquid Pre-Charge .....	V-20
Heavy Duty Coolant.....	V-17
Supplemental Coolant Additives (SCA's).....	V-19
Drive Belt Tension .....	V-27
Electrical System .....	V-7
Engine Component Torque Value .....	V-28
Engine Specifications .....	V-2
Cooling System .....	V-4
Engine Specifications - K38 and K50 .....	V-3
Fuel System .....	V-3
General Specifications - K38.....	V-2
General Specifications - K50.....	V-2
Lubricating Oil System.....	V-3
Exhaust System .....	V-6
Fuel Recommendations/Specifications .....	V-9
Lubricating Oil Recommendations/Specifications .....	V-9
Arctic Operation.....	V-9
Chart Method.....	V-11
Fixed Mileage or Hours Oil Change Interval (All Applications) .....	V-17
New Engine Break-in Oils .....	V-9
Oil Drain Interval Charts .....	V-14
Viscosity Recommendations .....	V-9

## Engine Specifications

### General Specifications - K38

Aspiration	KT KTA KTTA	One Stage Turbocharged One Stage Turbocharged and Aftercooled Two Stage Turbocharged and Aftercooled
Bore and Stroke	159 mm x 159 mm [6.25 in x 6.25 in]	
Compression Ratio	KT KTA KTA-G3 KTA-P(1350) KTTA KTTA-GS/GC	15.5:1 14.5:1 or 15.5:1 or 13.8:1 13.9:1 13.5:1 13.5:1 14.5:1
Displacement	38 Liters [2300 cu in]	
Firing Order	1R-6L-5R-2L-3R-4L-6R-1L-2R-5L-4R-3L	
Type	4 Cycle, 60 Degree Vee, 12 Cylinder	
Weight	Refer to Engine Lifting Weight in Section E.	
Crankshaft Rotation (viewed from front of engine)	Clockwise	

### General Specifications - K50

Aspiration	KTA KTTA	One Stage Turbocharged and Aftercooled Two Stage Turbocharged and Aftercooled
Bore and Stroke	159 mm x 159 mm [6.25 in x 6.25 in]	
Compression Ratio	KTA KTTA	13.8:1 or 13.9:1 or 14.5:1 or 15.5:1 13.5:1 or 13.8:1 or 13.9:1
Displacement	50 Liters [3067 cu in]	
Firing Order (Original Standard)	1R-1L-3R-3L-7R-7L-5R-5L-8R-8L-6R-6L-2R-2L-4R-4L	
	Note: Some KTTA50 engines manufactured after September 1986, the KTA50G3/4 and KTTA50G2, will have a different firing order. These engines have the REVISED FIRING ORDER on the engine data plate.	
Revised Firing Order	1R-1L-3R-3L-2R-2L-5R-4L-8R-8L-6R-6L-7R-7L-4R-5L	
Type	4 Cycle, 60 Degree Vee, 16 Cylinder	
Weight	Refer to Engine Weight in Section E.	
Crankshaft Rotation (viewed from front of engine)	Clockwise	

## Engine Specifications - K38 and K50

Metric [U.S. Customary]

### Valve and injector settings:

Intake valve adjustment .....	0.36 mm [0.014 in]
Intake valve recheck limits .....	0.28 to 0.43 mm [0.011 to 0.017 in]
Exhaust valve adjustment .....	0.69 mm [0.027 in]
Exhaust valve recheck limits .....	0.60 to 0.76 mm [0.024 to 0.030 in]
PTD Non-Top Stop injector travel adjustment .....	7.82 mm [0.308 in]
PTD Non-Top Stop injector travel limits .....	7.77 to 7.87 mm [0.308 to 0.310 in]
STC or HVT Injector Adjustment .....	10 N•m [90 in-lb]

## Fuel System

**NOTE:** For performance and fuel rate values, refer to the engine data sheet, or the fuel pump code for the particular model involved.

### Maximum Allowable Restriction to Pump:

- With Clean Filter ..... 100 mm Hg [4 in Hg]
- With Dirty Filter ..... 200 mm Hg [8 in Hg]

Maximum Allowable Return Line Restriction ..... 63 mm Hg [2.5 in Hg]

Maximum Allowable Return Line Restriction  
with Check Valves and/or Overhead Tanks ..... 165 mm Hg [6.5 in Hg]

Minimum Allowable Fuel Tank Vent Capability  
with 63 mm Hg [2.5 in Hg] or less back pressure ..... 425 L/hr [15 cu ft/hr]

## Lubricating Oil System

### Oil Pressure

Oil Pressure, Main Oil Rifle (15W-40 oil at 107°C [225°F]):

Maximum at Rated RPM .....	483 kPa [70 psi]
Minimum at Rated RPM .....	310 kPa [45 psi]
Minimum at Idle RPM .....	138 kPa [20 psi]

Oil Temperature - Maximum ..... 120°C [250°F]

### Oil Filter Capacity (Each Filter)

Bypass filter (spin-on) (2 required on K38 and K50) .....	2.27 liter [0.60 U.S. gal]
Full flow filter (spin-on) (4 required on K38, 5 required on K50) .....	2.65 liter [0.70 U.S. gal]

### Oil Pan Capacity

The following tabulation gives the low and high STATIC (engine not operating) oil level for the pan installed. Use this information when calibrating the oil gauge (dipstick).

**NOTE:** Only the casting number and finished part number of the oil pan (sump) is given. The part number of the oil pan adapter does not change the engine oil capacity.

Engine Model	Oil Pan Casting Number	Oil Pan Finished Number	Oil Low Level		Oil High Level		Remarks
			Liter	[U.S. Gal]	Liter	[U.S. Gal]	
K38	206100	3036455	87	[23]	114	[30]	Standard
K38	3034652	3034653	114	[30]	140	[37]	Double-Deep
K38	None	3013864	129	[34]	185	[49]	Subbase
K50	206100	3036455	121	[32]	151	[40]	Standard
K50	3032001	3033565	174	[46]	204	[54]	Double-Deep
K50	None	3013865	170	[45]	227	[60]	Subbase

### Total System Capacity

Total system capacity is the summation of the oil pan capacity at the high mark on the dipstick, the full flow oil filter capacity, and the capacity of any bypass filters that are used.

### Cooling System

#### Cooling System Specifications - Construction, Power Units, and Locomotive

	KT38	KTA38	KTTA38	KTA50	KTTA50 1800 HP	K1800E 1800 HP K2000E KTTA50 2000 HP
Coolant Capacity (Engine Only) Liters [Qts]	104 [110]	118 [125]	118 [125]	153 [162]	153 [162]	161 [170]
Standard Modulating Thermostat Range	80 - 90°C [175 - 195°F]	80 - 90°C [175 - 195°F]	80 - 90°C [175 - 195°F]	80 - 90°C [175 - 195°F]	80 - 90°C [175 - 195°F]	80 - 90°C [175 - 195°F]
LTA Modulating Thermostat Range						74 - 82°C [165 - 180°F]
Maximum Coolant Pressure kPa [psi] (Exclusive of Pressure Cap)	241 [35]	241 [35]	241 [35]	283 [41]	345 [50]	345 [50]
Minimum Pressure Cap kPa [psi]	50 [7]	50 [7]	50 [7]	50 [7]	50 [7]	50 [7]
Maximum Allowable Top Tank Temperature	93°C [200°F]	95°C [203°F]	93°C [200°F]	95°C [203°F]	95°C [203°F]	95°C [203°F]
Minimum Recom- mended Top Tank Temperature	70°C [160°F]	70°C [160°F]	70°C [160°F]	70°C [160°F]	70°C [160°F]	70°C [160°F]
Maximum Allowable Deaeration Time (Minutes)	25	25	25	25	25	25
Minimum Allowable Drawdown Liters [Qts]	21 [22]	21 [22]	23 [24]	26 [28]	29 [31]	29 [31]

**Cooling System Specifications - Generator Drive Engines**

	<b>All KTA38</b>	<b>KTA50-G1 KTA50-G2</b>	<b>KTA50-G3 KTA50-G4</b>	<b>KTTA50-G2</b>
Coolant Capacity (Engine Only) Liters [U.S. Qts]	118 [125]	153 [162]	163 [172]	161 [170]
Standard Modulating Thermostat Range	82 - 93°C [180 - 200°F]	82 - 93°C [180 - 200°F]	82 - 93°C [180 - 200°F]	82 - 93°C [180 - 200°F]
Maximum Coolant Pressure kPa [psi] (Exclusive of Pressure Cap)	240 [35]	283 [41]	283 [41]	283 [41]
Minimum Pressure Cap kPa [psi]	50 [7]	50 [7]	50 [7]	50 [7]
Maximum Allowable Top Tank Temperature				
• Standby Power	104°C [220°F]	104°C [220°F]	104°C [220°F]	104°C [220°F]
• Prime Power or Base Load	100°C [212°F]	100°C [212°F]	100°C [212°F]	100°C [212°F]
Minimum Recommended Top Tank Temperature	70°C [160°F]	70°C [160°F]	70°C [160°F]	70°C [160°F]
Maximum Allowable Deaeration Time (Minutes)	25	25	25	25
Minimum Allowable Drawdown Liters [Qts]	21 [22]	36 [38]	36 [38]	36 [38]

**Cooling System Specifications - Marine Engines**

	<b>KT38</b>	<b>KTA38</b>	<b>KTA50</b>
Coolant Capacity (Engine Only) Liters [Qts]	104 [110]	118 [125]	174 [184]
Standard Modulating Thermostat Range	80 - 90°C [175 - 195°F]	80 - 90°C [175 - 195°F]	80 - 90°C [175 - 195°F]
Maximum Static Coolant Pressure kPa [psi] (Exclusive of Pressure Cap)	103 [15]	103 [15]	103 [15]
Maximum Allowable Top Tank Temperature	93°C [200°F]	93°C [200°F]	93°C [200°F]
Maximum Sea Water Pump Inlet Restriction kPa [in Hg]	34 [10]	34 [10]	34 [10]
Maximum Allowable Sea Water Pressure kPa [psi]	103 [15]	103 [15]	103 [15]
Minimum Allowable Drawdown Liters [Qts]	24 [25]	24 [25]	24 [25]

## Air Intake System

**NOTE:** Engine intake air **must** be filtered to prevent dirt and debris from entering the engine. If intake air piping is damaged or loose, unfiltered air will enter the engine and cause premature wear.

Metric [U.S. Customary]

Maximum intake restriction:

Clean air filter element .....	380 mm H <sub>2</sub> O [15.0 in H <sub>2</sub> O]
Dirty air filter element .....	635 mm H <sub>2</sub> O [25.0 in H <sub>2</sub> O]

## Exhaust System

Maximum back pressure (at rated speed and load) ..... 75 mm Hg [3.0 in Hg]

Exhaust Pipe Size (Normally Acceptable Inside Diameter):

• KT38 .....	127 mm [5.0 in]
• KTA38 .....	127 mm [5.0 in]
• KTTA38 .....	152 mm [6.0 in]
• KTA50 .....	152 mm [6.0 in]
• KTTA50 .....	203 mm [8.0 in]

## Compressed Air System

### Upright Two Cylinder Air Compressor

Cylinders .....	2
Compressor Capacity @ 1250 RPM .....	14.2 L per sec. [30.00 CFM]
Piston Displacement .....	676 C.C. [41.3 C.I.]
Bore .....	92.08 mm [3.625 in]
Stroke .....	50.8 mm [2.00 in]
Speed .....	Engine Speed
Cooling .....	Engine Cooling
Lubrication .....	Engine Lubricating Oil
Plumbing Line Sizes:	
Coolant Inlet and Outlet (Pipe Fitting) .....	9.53 mm NPTF [0.375 inch NPTF]
Air Inlet (Inside Diameter) .....	22.22 mm [0.875 in]
Air Outlet (Minimum Inside Diameter) .....	15.88 mm [0.625 in]
Height, Overall (approximate) .....	34.3 cm [13.50 in]
Width, Overall (approximate) .....	17.8 cm [7.00 in]
Length, Overall (approximate) .....	28.7 cm [11.30 in]
Weight (approximate) .....	33.5 Kg [74.50 lbs]

### **Tilted Two Cylinder Air Compressor**

Cylinders .....	2
Compressor Swept Volume Capacity @ 1250 RPM .....	16.1 L per sec. [34.00 CFM]
Piston Displacement .....	773 C.C. [47.2 C.I.]
Bore .....	98.43 mm [3.875 in]
Stroke .....	50.8 mm [2.00 in]
Speed .....	Engine Speed
Cooling .....	Engine Cooling
Lubrication .....	Engine Lubricating Oil
Plumbing Line Sizes:	
Coolant Inlet and Outlet (Pipe Fitting) .....	9.53 mm NPTF [0.375 inch NPTF]
Air Inlet (Inside Diameter) .....	22.22 mm [0.875 in]
Air Outlet (Minimum Inside Diameter) .....	12.7 mm [0.05 in]
Height, Overall (approximate) .....	40.1 cm [15.80 in]
Width, Overall (approximate) .....	27.3 cm [10.75 in]
Length, Overall (approximate) .....	28.7 cm [11.30 in]
Weight (approximate) .....	36.3 Kg [80.0 lbs]

## **Electrical System**

### **Minimum Recommended Battery Capacity**

<b>Engine Model</b>	<b>Temperature Range</b>	<b>System Voltage</b>	<b>Cold Cranking Amperes</b>	<b>Ampere Hours</b>	<b>Reserve Capacity</b>
K38	-18 to 0°C [0. to 32°F]	24	1800	400	640
		32	1560	340	550
K38	above 0°C [32°F]	24	1280	260	480
		32	1560	240	390
K50	All	24	1800	400	640
		32	1560	340	550

**NOTE:** The number of plates within a given battery size determines reserve capacity. Reserve capacity is the length of time sustained cranking can occur.

**NOTE:** CCA ratings are based on two, 12 volt batteries in series.

Battery cable sizes - American wire gauge (Maximum length in cranking motor circuit)

24 to 32 volt


No. 00 .....	6.1 meters [20 ft]
No. 000 .....	8.2 meters [27 ft]
No. 0000 or two No. 0* .....	10.7 meters [35 ft]
Two No. 00 .....	13.7 meters [45 ft]

Minimum ambient temperature without starting aid      Refer to the following chart.

Minimum cranking speed without starting aid ..... 150 RPM

- Two strands of No. 0 cable can be used in place of one No. 0000 cable providing all connections are carefully made to ensure equal current flow in each parallel cable.

Refer to the following chart to determine the temperature for which a cold weather starting aid is required.

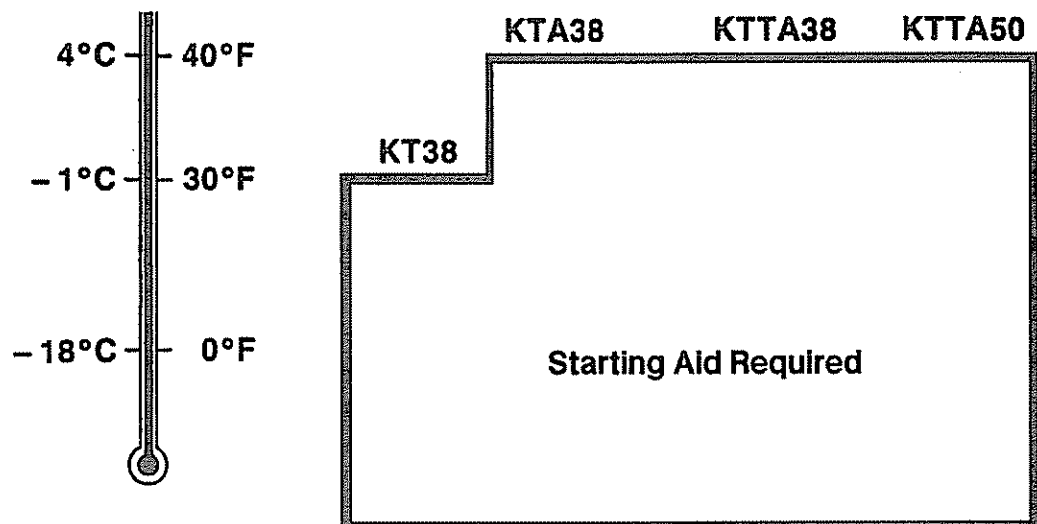

ci600va

**NOTE:** Starting aids such as block heaters, lubricating oil pan heaters, etc. are available to aid in cold weather starting.  
Batteries (Specific Gravity)

Battery State of Charge	Specific Gravity @ 27°C [80°F]
100%	1.260-1.280
75%	1.230-1.250
50%	1.200-1.220
25%	1.170-1.190
Discharged	1.110-1.130

ea500ka

## Fuel Recommendations/Specifications

**Warning:** Do NOT mix gasoline or alcohol with diesel fuel. This mixture can cause an explosion.

Cummins Engine Company, Inc. recommends the use of ASTM No. 2 diesel fuel. The use of No. 2 diesel fuel will result in optimum engine performance. At operating temperatures below 0°C [32°F], acceptable performance can be obtained by using blends of No. 2 D and No. 1 D. The use of lighter fuels can reduce fuel economy.

The viscosity of the fuel **must** be kept above 1.3 cSt to provide adequate fuel system lubrication.

For a more detailed description of fuel properties, refer to Fuel For Cummins Engine, Bulletin No. 3379001. See ordering information in the back of this manual.

## Lubricating Oil Recommendations/Specifications

The use of quality engine lubricating oils combined with appropriate oil drain and filter change intervals is a critical factor in maintaining engine performance and durability.

Cummins Engine Company, Inc. recommends the use of a high quality SAE 15W-40 heavy duty engine oil (such as Cummins Premium Blue) which meets the American Petroleum Institute (API) performance classification CE or CF4.

**NOTE:** CD or CD/SF engine oils can be used in areas where CE or CF4 oils are **not** yet available.

A sulfated ash content of 1.0 mass percent will yield optimal control of piston and valve deposits and will minimize oil consumption. The sulfated ash limit **must not** exceed 1.85 mass percent.



For further details and discussion of engine lubricating oils for Cummins engines, refer to Bulletin No. 3810340, Cummins Engine Oil Recommendations.

## Arctic Operation

If an engine is operated in ambient temperatures consistently below -23°C [-10°F] and there are no provisions to keep the engine warm when it is not in operation, use a synthetic CE/SF engine oil with adequate low temperature properties such as 5W-30.

The oil supplier **must** be responsible for meeting the performance service specifications.



**Caution:** The use of a synthetic base oil does not justify extended oil change intervals. Extended oil change intervals can decrease engine life due to factors such as corrosion, deposits, and wear.

## New Engine Break-in Oils

Special break-in engine lubricating oils are **not** recommended for new or rebuilt Cummins engines. Use the same type oil during the break-in as that which is used in normal operation.





Additional information regarding lubricating oil availability throughout the world is available in the E.M.A. Lubricating Oils Data Book for Heavy Duty Automotive and Industrial Engines. The data book can be ordered from the Engine Manufacturers Association, One Illinois Center, 111 East Wacker Drive, Chicago, IL U.S.A. 60601. The telephone number is: (312) 644-6610.

## Viscosity Recommendations

The viscosity of an oil is a measure of its resistance to flow. The Society of Automotive Engineers has classified engine oils in viscosity grades. Oils that meet the **low** temperature (-18°C [0°F]) requirement carry a grade designation with a W suffix. Oils that meet both the **low** and **high** temperature requirements are referred to as multigrade or multiviscosity grade oils.

Cummins Engine Co., Inc. has found that the use of multigrade lubricating oil improves oil consumption control and engine cranking in cold conditions while maintaining lubrication at high operating temperatures and can contribute to improved fuel consumption.

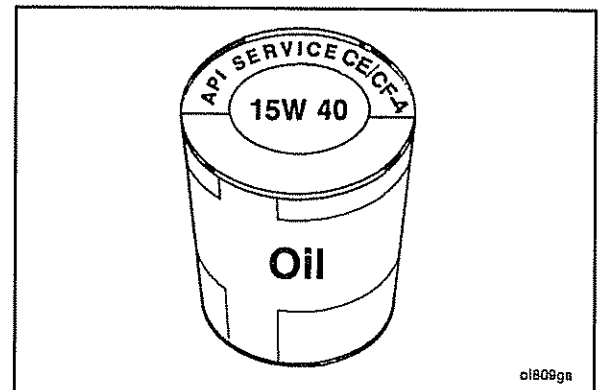

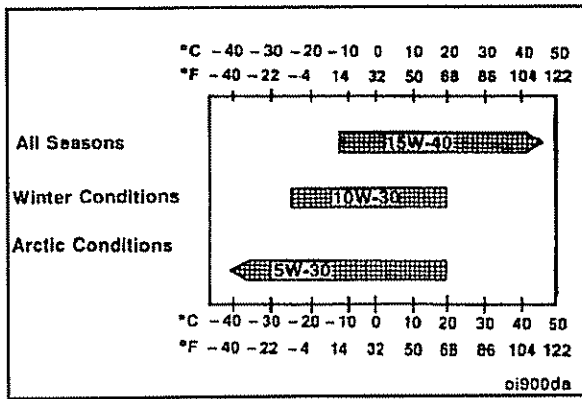


Cummins Engine Company, Inc.® recommends the use of multigrade lubricating oils with the viscosity grades for the ambient temperatures indicated. This picture shows only the preferred oil grades.

Single grade oils can be substituted for short durations until the recommended multigrade is procured. **Arctic Condition** oils are available commercially with better low temperature properties. Consult your supplier.

**Caution:** When single grade oil is used, make sure the oil will be operating within the temperature ranges indicated in the table below.

The primary criterion for selecting an oil viscosity grade is the lowest temperature the oil will experience while in the engine oil sump. Bearing problems can be caused by the lack of lubrication during the cranking and start up of a cold engine when the oil being used is too viscous to flow properly. Change to a lower viscosity grade of oil as the temperature of the oil in the engine oil sump reaches the lower end of the ranges shown in the picture and table.

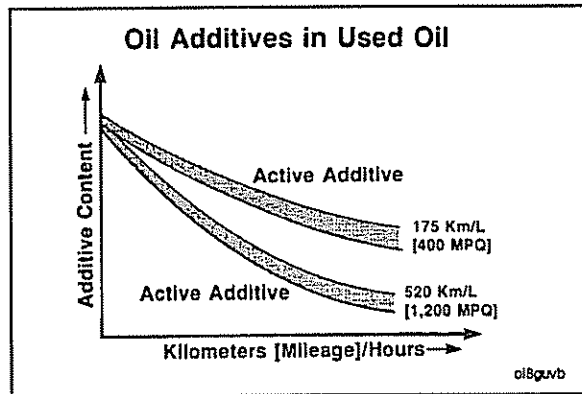

As the engine oil becomes contaminated, essential oil additives are depleted. Lubricating oils protect the engine as long as these additives are functioning properly. Progressive contamination of the oil between oil and filter change intervals is normal. The amount of contamination will vary depending on the operation of the engine, hours or miles on the oil, fuel consumed, and new oil added.

**NOTE:** Do not extend oil and filter change intervals beyond 250 hours or 6 months, whichever occurs first, unless the Chart Method is used. Refer to the charts below. Extended oil and filter change intervals will decrease engine life due to factors such as corrosion, deposits, and wear.

There are two recommended methods used to determine the proper oil and filter change interval:


- Chart Method (based on known fuel and oil consumption rates).
- Fixed Hours Method (based on fixed hours, or months; whichever occurs first).

### Chart Method

The Chart Method is recommended to provide the lowest total cost of operation while still protecting the engine.

Use the Chart Method with the required information listed below to determine the correct oil and filter change interval for your engine:

- Fuel consumption rate
- Oil consumption rate
- Total System Capacity

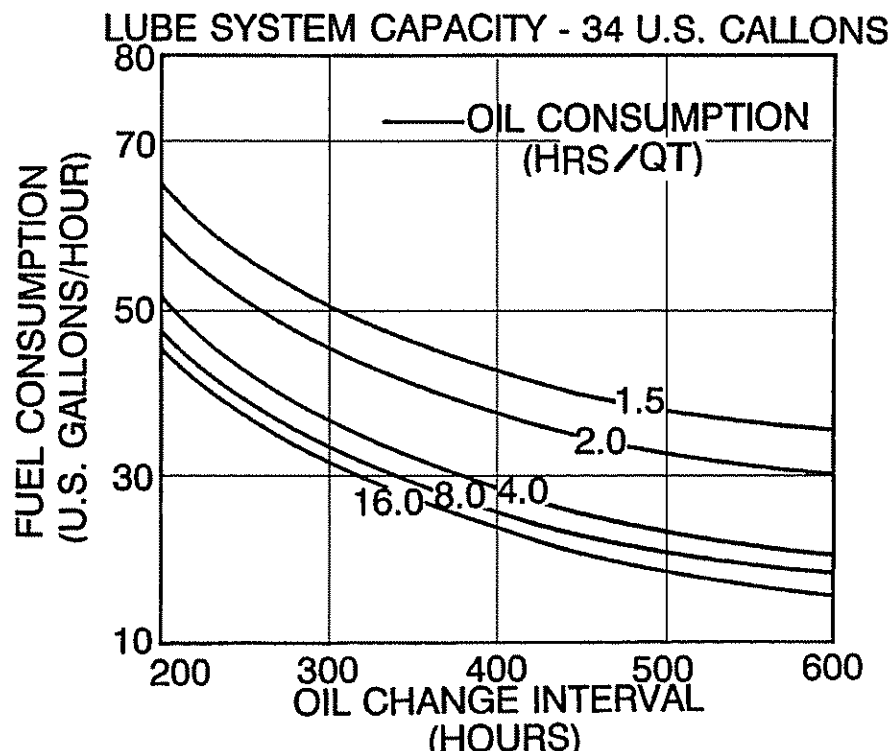

Determine fuel and oil consumption rates:

- To use the Chart Method effectively, accurate fuel and oil consumption records **must** be kept and maintained.
- As oil and fuel consumption rates change as a result of a change in operation or duty cycle of a particular engine, the oil change interval established by the Chart Method must be re-evaluated based on the change in oil and/or fuel consumption.

Determine total lubricating oil system capacity:

- Total lubricating oil system capacity in U.S. gallons can be determined by adding the high level of the oil in the oil pan plus the capacity of the full flow and by-pass oil filters. Refer to the chart below.

Engine Model	Oil Pan Finished Part No.	Oil High Level		Lubricating Oil Filter	Capacity
		Liter	[U.S. Gal]		
K38	3036455	114	[30]	Full Flow Filter (each) (LF670)	2.65 Liter [0.7 U.S. Gal]
K38	3034653	140	[37]	Spin-on by-pass (each) (LF777)	2.27 Liter [0.6 U.S. Gal]
K38	3013864	185	[49]		
K50	3036455	151	[40]	Remote by-pass filter (750 in 3, LF750A, or LF750B)	11.02 Liter [2.91 U.S. Gal]
K50	3033565	204	[54]		
K50	3013865	227	[60]		

For the above charts, determine the total lubricating oil system capacity.

Example: A KTA38 engine has oil pan, Part No. 3036455, and utilizes the standard full-flow filter head (4 LF670 filters) and two spin-on by-pass filter (LF777).

Total capacity equals:

30 U.S. gal (oil pan)  
2.8 U.S. gal (4 x LF670 filters)  
1.2 U.S. gal (2 LF777 filter)  
34 U.S. gal Total Capacity

If necessary, round the total capacity to the nearest whole U.S. gallon and select the appropriate chart.

For our example, assume the average fuel consumption equals 30 U.S. gallons per hour and the average oil consumption equals 4 hours per U.S. quart.

To read the chart:


Select the chart entitled Lube System Capacity 34 U.S. gallons.

The left vertical axis of the chart represents fuel consumption in U.S. gallons per hour.

Determine the location of 30 gallons on the left vertical axis and draw a line from left to right across the chart, parallel with the bottom of the chart, until it intersects with the curve marked 4 (4 hours per quart).



From the intersection point on the curve 4, draw a line perpendicular to the bottom of the chart. The number across the bottom of the chart represents the oil change interval in hours. In this case, the total oil capacity, oil consumption, and fuel consumption of this engine indicates that an oil change interval of 375 hours is recommended.



The charts that follow will allow oil change intervals to be calculated for the total lubricating oil system capacity of any K38 and K50 series engines.


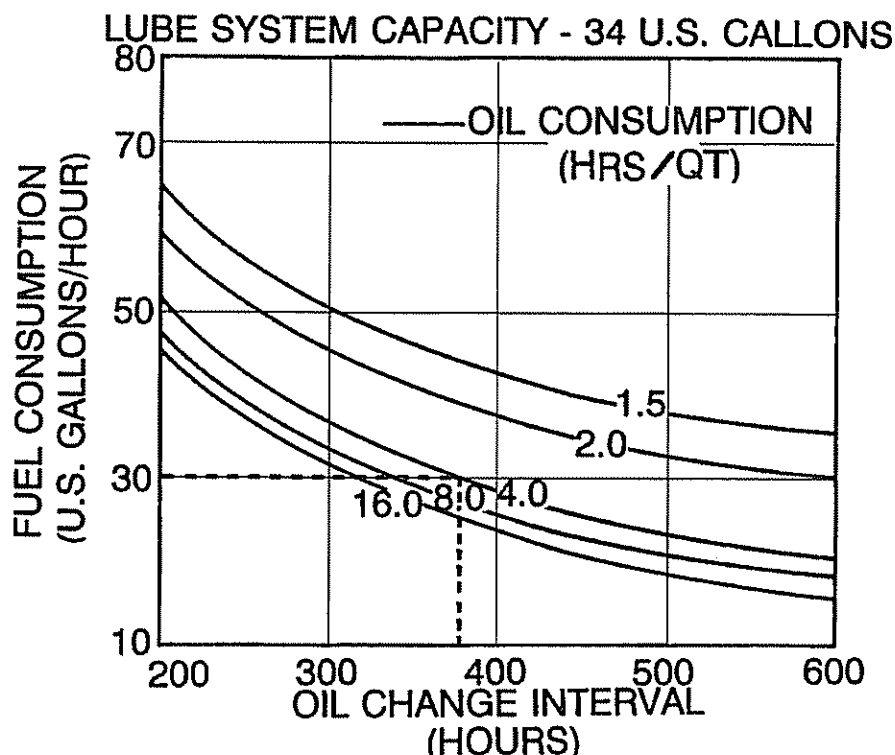


oil600vh

### Oil Drain Interval Charts

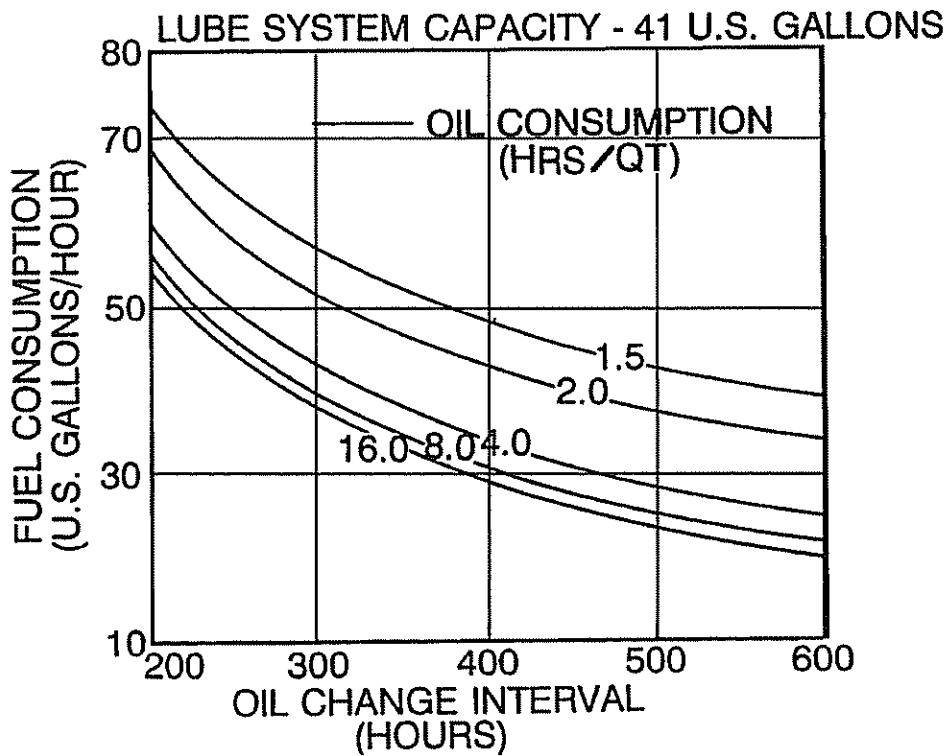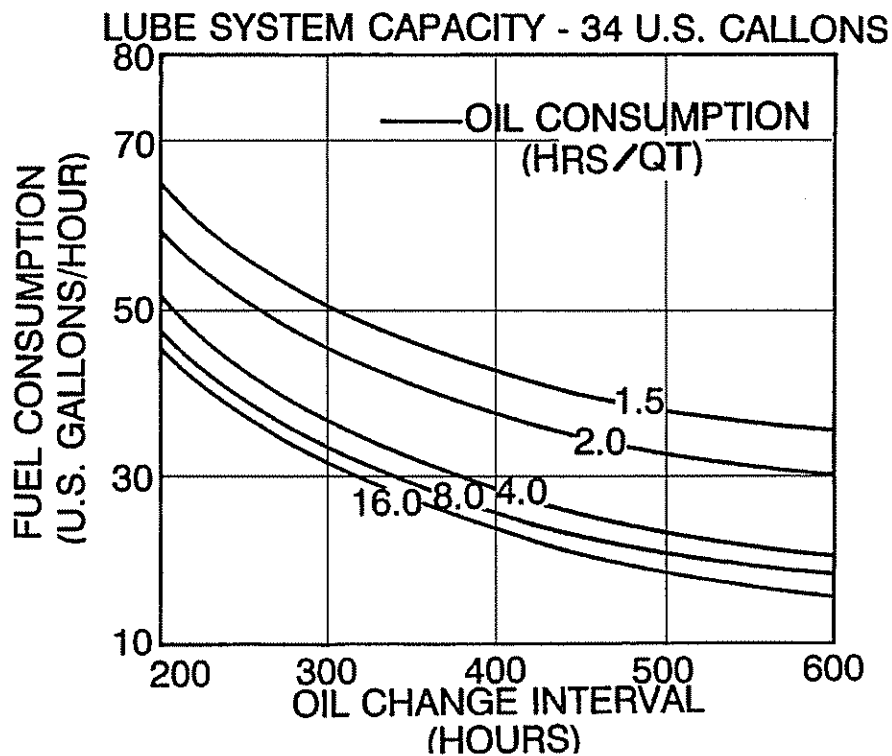

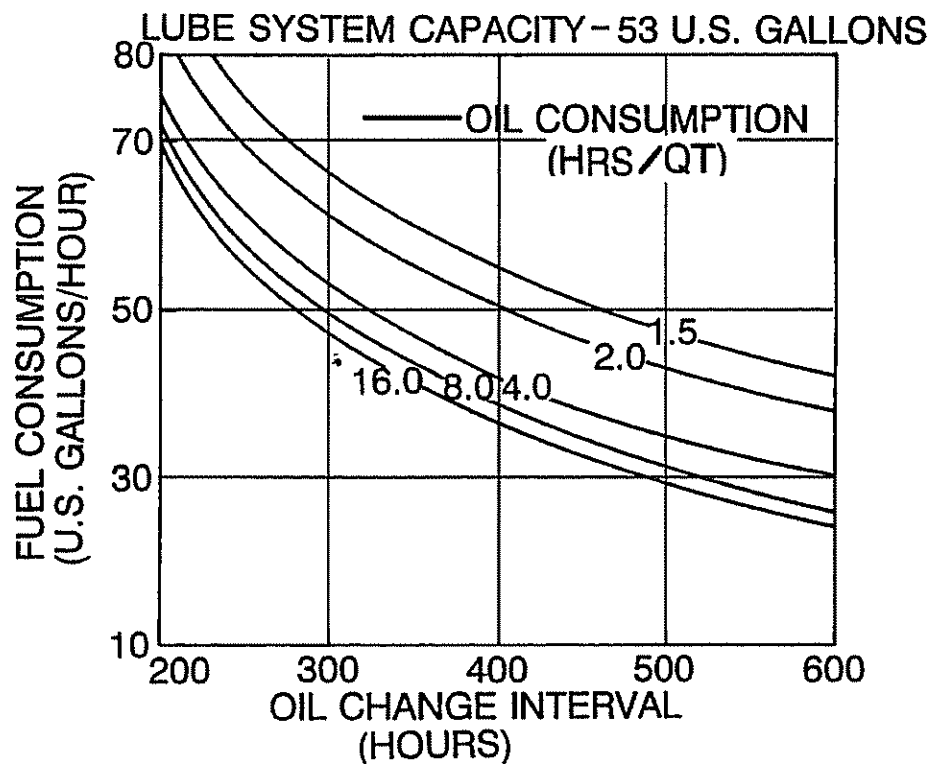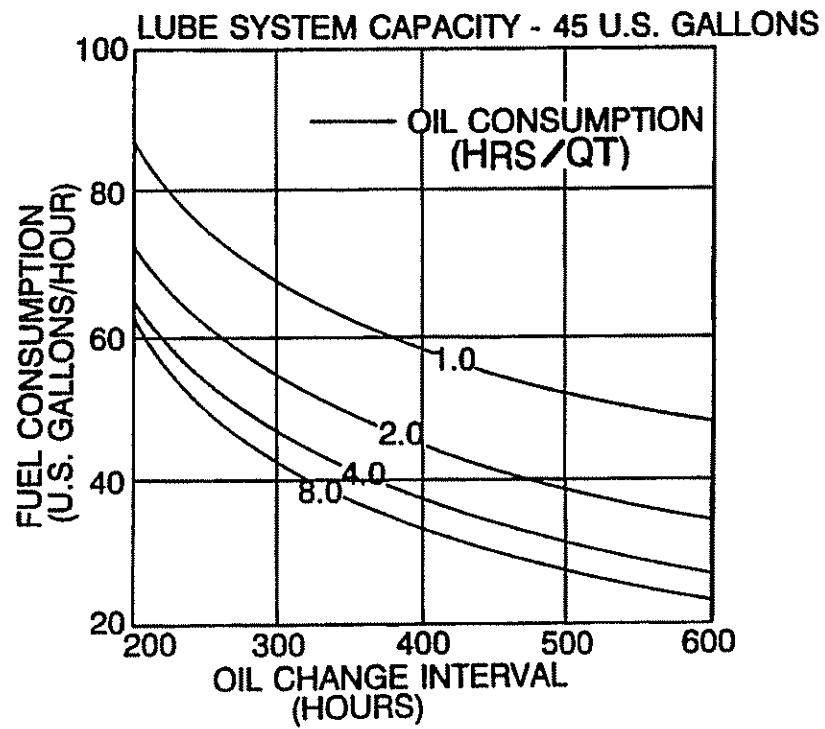

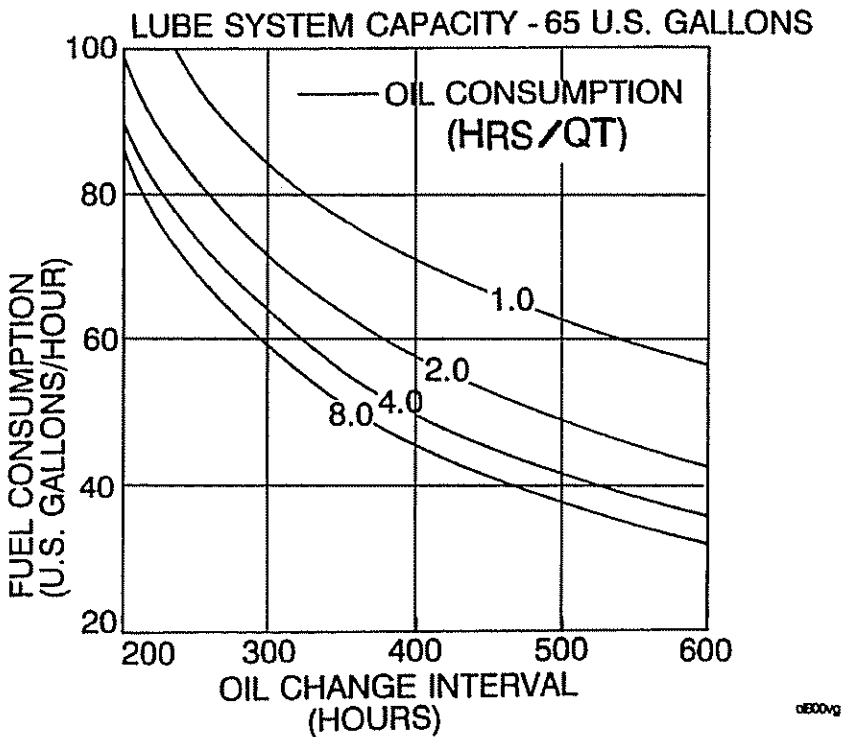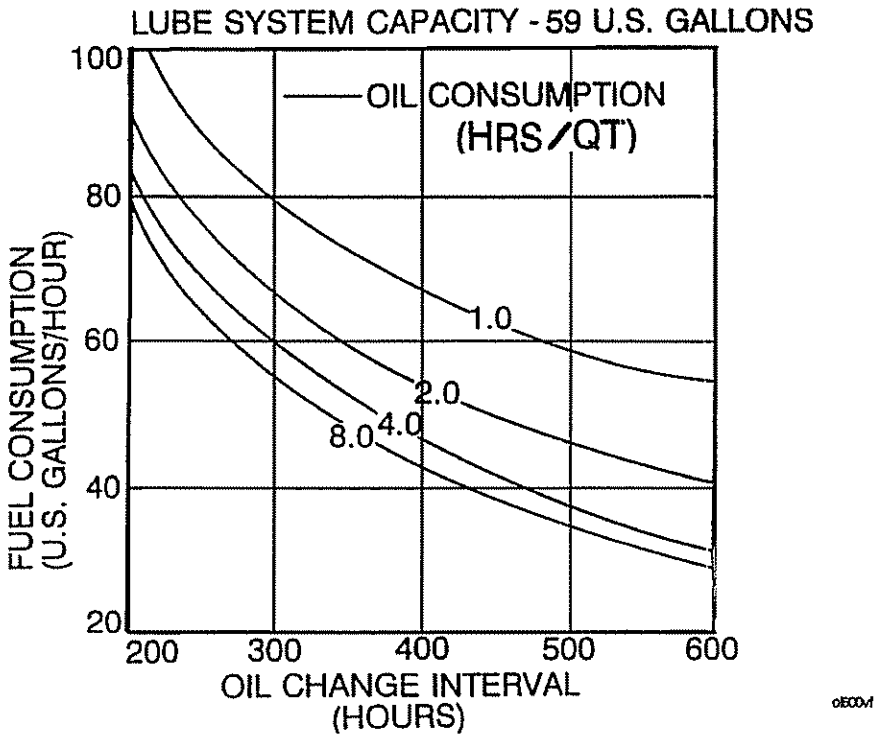

## Fixed Mileage or Hours Oil Change Interval (All Applications)

If the Chart Method is **not** used, Cummins Engine Company Inc.® recommends an oil change interval for all K38 and K50 series engine applications of 250 hours or 6 months whichever occurs first.

## Coolant Recommendations/Specifications

Heavy duty diesel engines require a **heavy duty coolant**. Heavy duty coolant is defined as a correct mixture of good quality water, low silicate antifreeze and supplemental coolant additives (SCA's).

The following information provides an explanation of water, antifreeze, and SCA's, the correct way to mix them and how to test antifreeze and SCA levels.

This section also contains information on cooling system maintenance and a coolant treatment chart that is used to determine the correct DCA4 service filters and liquid pre-charge.


### Heavy Duty Coolant

#### Water

Water quality is important for cooling system performance. Excessive levels of calcium and magnesium contribute to scaling problems, and excessive levels of chlorides and sulfates cause cooling system corrosion.

#### Antifreeze


Cummins and Fleetguard® recommend using a low-silicate antifreeze concentrate that meets ASTM D4985 specifications (less than .10% silicate, expressed as  $\text{Na}_2\text{SiO}_3$ ).

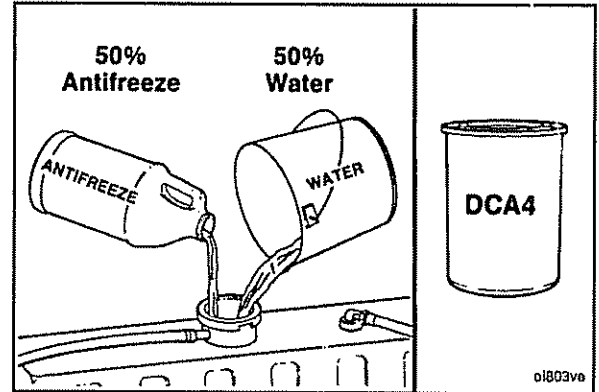


Water Quality	
Calcium Magnesium (Hardness)	170 PPM as ( $\text{CaCO}_3 + \text{MgCO}_3$ )
Chloride	40 PPM as (Cl)
Sulfur	100 PPM as ( $\text{SO}_4$ )

11600wa




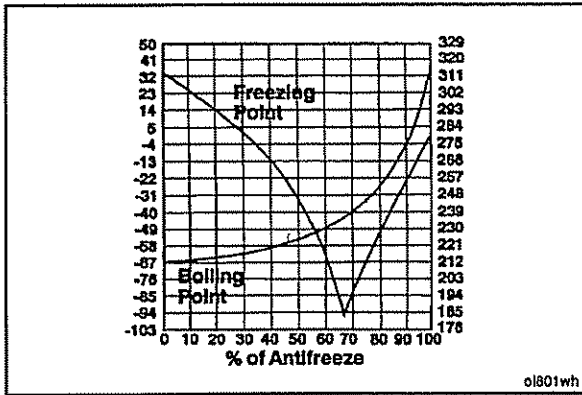


Low-silicate antifreeze **must** be mixed with quality water at a 50/50 ratio (40 to 60% working range). A 50/50 mixture of antifreeze and water gives a -34°F freeze point and a boiling point of 228°F, which is adequate for locations in North America. The actual lowest freeze point of ethylene glycol antifreeze is at 68%. Using higher concentrations of antifreeze will raise the freeze point of the solution and increase the possibility of a silicate gel problem.

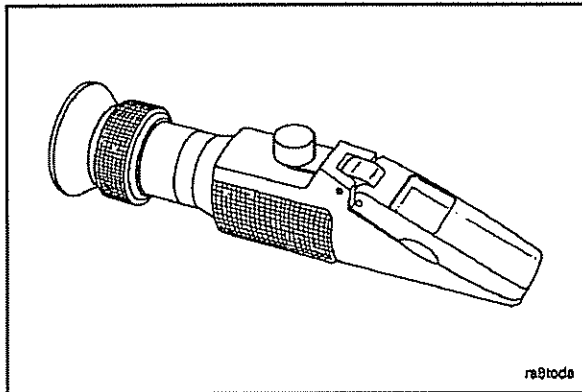

A refractometer **must** be used to accurately measure the freeze point of the coolant.

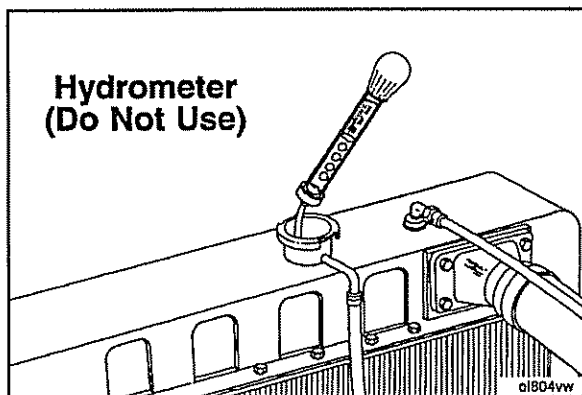

Using floating ball hydrometers can give incorrect readings.

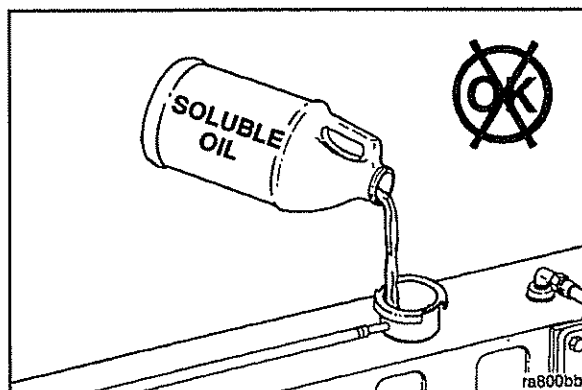

### Cooling System Soluble Oils

Do **not** use soluble oils in the cooling systems. The use of soluble oils will:



- allow cylinder liner pitting,
- corrode brass and copper,
- damage heat transfer surfaces, and
- damage seals and hoses.

## Supplemental Coolant Additives (SCA's)

Correct use of SCA's in conjunction with water and antifreeze are needed to protect engines from cooling system problems. The system **must** be pre-charged with the correct concentration of SCA.

Cummins and Fleetguard® use the SCA unit to define the required concentration level to protect against liner pitting.

When coolant is replaced in the field, it **must** be replaced with **Heavy Duty Coolant** pre-charged with SCA's. In addition, a service coolant filter **must** be installed. Together, this will result in a total pre-charge of approximately 1.5 SCA units per gallon of coolant.

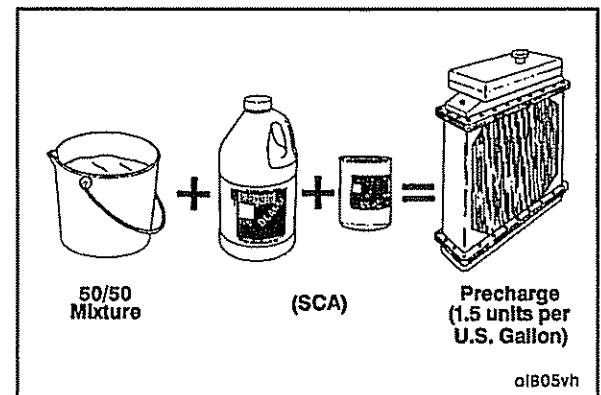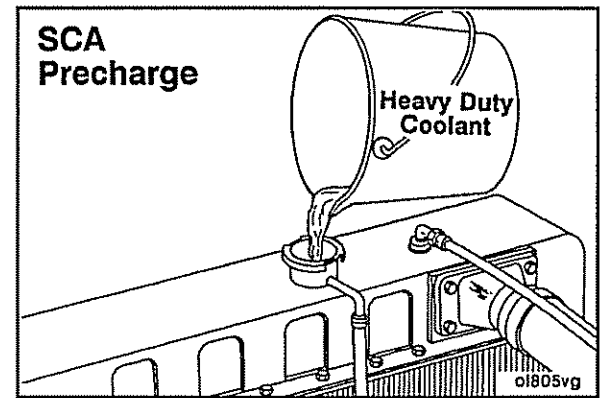


## Coolant Blending/Mixing

Proper blending of **Heavy Duty Coolant** requires:

1. Pour water into the container
2. Add low-silicate antifreeze
3. Add DCA4 liquid
4. Thoroughly blend the components

Following the correct order for mixing the **Heavy Duty Coolant** will prevent additive dropout during the mixing process.

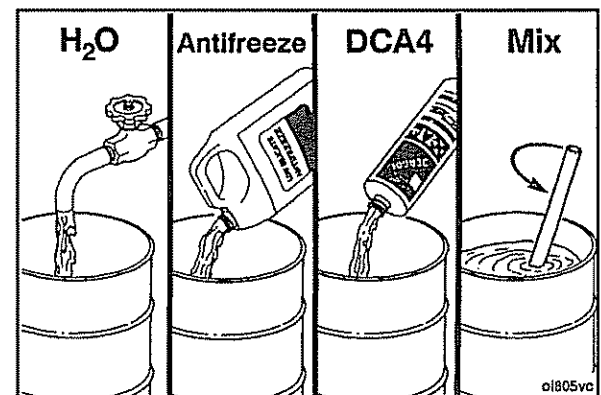

This chart, shown later in this section, **must** be followed to determine how much liquid SCA **must** be added to pre-charge different quantities of make-up coolant (water and low-silicate antifreeze). **Remember, a service filter must also be installed.**

In addition to using the chart as shown, the system requirements can be also calculated as shown in the following examples.

**NOTE:** It is important to know the cooling system capacity. If **not** sure of system capacity, contact the equipment OEM.


The following example illustrates how to calculate the required SCA quantity to add to the coolant to reach the desired concentration level.

WHEN TESTED AT EVERY SUBSEQUENT OIL CHANGE INTERVAL

COOLANT CAPACITY CHART					SERV	
PRECHARGE 1.5 UNITS OF DCA4 PER GALLON OF COOLANT PLUS THE CORRECT SERVICE FILTER				MILES	HOURS	INSTALL A SERVICE FILTER WITH DCA4 UNITS SHOWN BELOW
GALLONS OF COOLANT	DCA4 LIQUID GALLONS	DCA4 UNITS	DCA4 UNITS PER GAL.			
5 - 7	2 PINTS	19	1.4 - 2.0	25,000	325	2 4 8 12
8 - 11	3 PINTS	18	1.3 - 1.9			2 4 8 8
11 - 15	4 PINTS	20	1.5 - 1.8			2 4 8 8
16 - 20	5 PINTS	23	1.4 - 1.5			2 4 8 8
21 - 25	1.00	40	1.5 - 1.9			2 4 8 8
26 - 30	1.25	60	1.2 - 1.5	15,000	375	2 4 8 8
31 - 35	1.50	80	1.3 - 1.5			2 4 8 8
36 - 40	1.75	90	1.2 - 1.5			2 4 8 8
41 - 45	2.00	120	1.2 - 1.5			2 4 8 8
46 - 50	2.25	150	1.2 - 1.5			2 4 8 8
51 - 55	2.50	180	1.2 - 1.5	10,000	425	2 4 8 8
56 - 60	2.75	200	1.3 - 1.5			2 4 8 8
61 - 65	3.00	240	1.2 - 1.4			2 4 8 8
66 - 70	3.25	280	1.2 - 1.4			2 4 8 8
71 - 75	3.50	320	1.2 - 1.4			2 4 8 8
76 - 80	3.75	360	1.2 - 1.4	5,000	475	2 4 8 8
81 - 85	4.00	400	1.2 - 1.4			2 4 8 8
86 - 90	4.25	440	1.2 - 1.4			2 4 8 8
91 - 95	4.50	480	1.2 - 1.4			2 4 8 8
96 - 100	4.75	520	1.2 - 1.4			2 4 8 8

0-8 9-15 16-25 26-35  
SYSTEM SIZE IN GALLONS

PART NUMBER: WF2070 WF2071 WF2072 WF2073 WF2074  
UNITS OF DCA4: 2 4 6 8 10

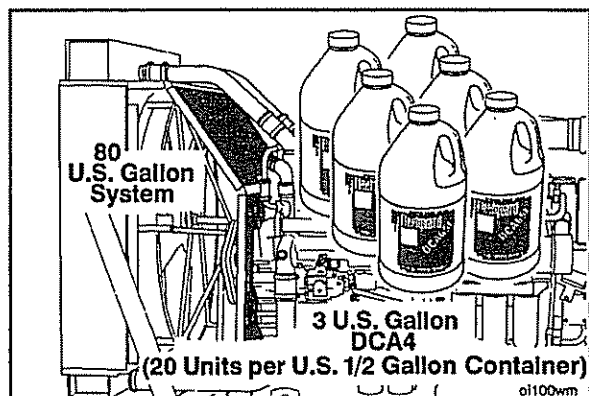

For an 80-gallon system, three (3) gallons of DCA4 liquid **must** be added to pre-charge the coolant to the correct SCA concentration level.

**U.S. Customary Example:**

$$80 \text{ gallons} \times \frac{1.5 \text{ units}}{\text{gallon}} = 120 \text{ units}$$

$$120 \text{ units} \div \frac{20 \text{ units}}{1/2 \text{ gallons DCA4}} = 6 \text{ half gallon containers of DCA4}$$

or 3 gallons of DCA4

**Metric Example:**

$$300 \text{ Liter} \times \frac{4 \text{ units}}{\text{Liter}} = 120 \text{ Units}$$

$$120 \text{ Units} \div \frac{20 \text{ Units}}{1.89 \text{ Liter Containers of DCA4}} = 6 \text{ 1.89 Liter Containers of DCA4}$$

**Fleetguard® DCA4 Service Filters and Liquid Pre-Charge**

**Fleetguard® Part No. DCA4  
Spin-On Coolant Filters**

WF-2070  
WF-2071  
WF-2072  
WF-2073  
WF-2074  
WF-2075  
WF-2076

**Cummins Part No.**

3318157  
3315116  
3318201  
3315115  
3316053  
3318318  
3318319

**DCA4 Units**

2  
4  
6  
8  
12  
15  
23

**DCA4 Liquid**

DCA60L (1 pint)  
DCA65L (1/2 gallon)  
DCA75L (5 gallons)  
DCA80L (55 gallons)

3315459  
3305373  
3317428

5  
20  
200  
2200

**DCA4 Powder**

DCA95

3318320

20

## Coolant Capacity Chart

PRECHARGE UNITS OF DCA4 PER GALLON OF COOLANT				SERVICE							
GALLONS OF COOLANT	DCA4 LIQUID GALLONS	DCA4 UNITS	DCA4 UNITS PER GAL.	HOURS	INSTALL SERVICE FILTERS WITH DCA4 UNITS TOTALING				GALLONS OF COOLANT	ADD DCA4 LIQUID PINTS AS SHOWN	
										250 HRS.	500 HRS.
51 - 75	2.25	90	1.2 - 1.8	625 500 375 250					51 - 75	4	8
76 - 100	3.00	120	1.2 - 1.6		60	68	100	*125	76 - 100	5	10
101 - 150	4.50	180	1.2 - 1.8		40	50	80	100	101 - 150	8	15
151 - 200	6.00	240	1.2 - 1.6		30	38	60	75	151 - 200	10	20
201 - 250	7.50	300	1.2 - 1.5		20	25	40	50	201 - 250	13	25
251 - 300	9.00	360	1.2 - 1.4						251 - 300	15	30
301 - 350	10.50	420	1.2 - 1.4		51-75 76-100 101-150 151-200				301 - 350	18	35
351 - 400	12.00	480	1.2 - 1.4		SYSTEM SIZE IN GALLONS				351 - 400	20	40
* Requires liquid in addition to Cummins largest filters.											
8 PINTS EQUALS 1 U.S. GALLON											

### Notes:





- Consult the vehicle equipment manufacturer's maintenance information for total cooling system capacity.
- After draining and replacing the coolant, **always** pre-charge the cooling system to a SCA level of 1.5 units per gallon. This concentration level **must never** be allowed to go below 1.2 units and **must** be controlled when level is greater than 3 units. Action needed when level goes below 1.2 is a filter and liquid; above 1.2 to 3.0 filter only; above 3.0, test and add filters when 3.0 and below.



**Caution:** Under NO circumstances **MUST** a customer exceed one oil change interval before adding chemicals (by filter or liquid) to the coolant. If the recommended service intervals are neglected, there is a high probability that cylinder liner corrosion will occur.

**NOTE:** When performing service which requires draining the cooling system, take special precautions to collect it in a clean container, seal it to prevent contamination, and save for reuse.

- Change coolant filters at each oil change to protect the cooling system. The service filters are satisfactory for use with maintenance intervals from 125 hours to 6,000 hours.

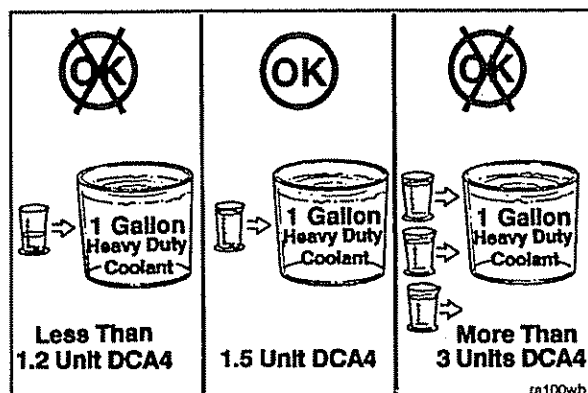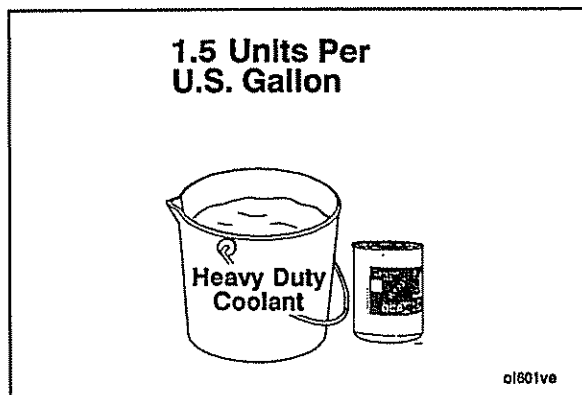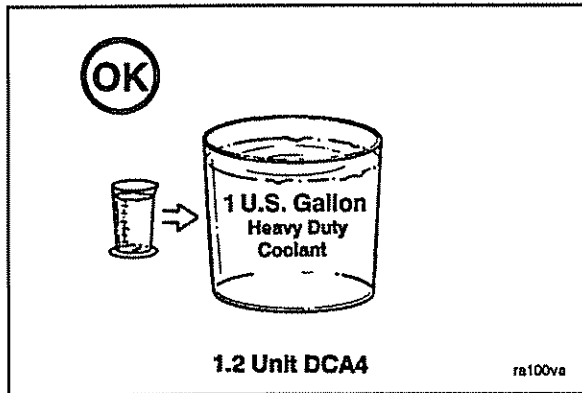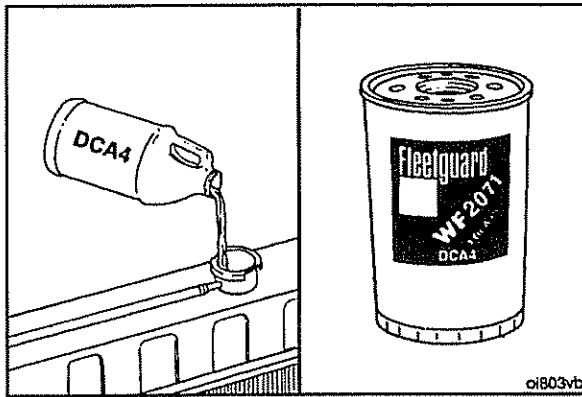

## Cooling System Maintenance

Supplemental Coolant Additives (DCA4), or equivalent, are required to protect the cooling system from fouling, solder blooming, and general corrosion. The cooling filter is required to protect the coolant system from abrasive materials, debris, and precipitated coolant additives.

**NOTE:** Cummins Engine Company requires that a service filter be used and SCA liquid added when the coolant is changed or a significant (more than 50 percent) coolant loss occurs. A service filter **must** be used during the normal oil change interval due to normal depletion (refer to the Operation and Maintenance Manual).

Diesel Coolant Additives (or equivalent) are used to prevent liner pitting, corrosion, and scale deposits in the cooling system.


After changing the coolant, the initial charge of DCA4 (or equivalent) concentration **must** be 1.5 unit per 3.8 liters [1 U.S. gallon] of coolant in the system.

**NOTE:** The cooling system **must** be clean before adding DCA4 (or equivalent).

The DCA4 concentration **must not** fall below 1.2 units or exceed 3 units per gallon of cooling system capacity.

If make-up coolant is added between intervals, additional DCA4 (or equivalent) is required. Any coolant added **must** be pre-mixed with DCA4 to a concentration of 1.2 units per 3.8 liters [1 U.S. gallon] of coolant. With the service filter installed, the total system concentration **must** be 1.5 units DCA4 per gallon of coolant.


**Caution:** Under-concentration of the coolant additive can result in liner pitting and system corrosion. Over-concentration can result in water pump seal leakage.

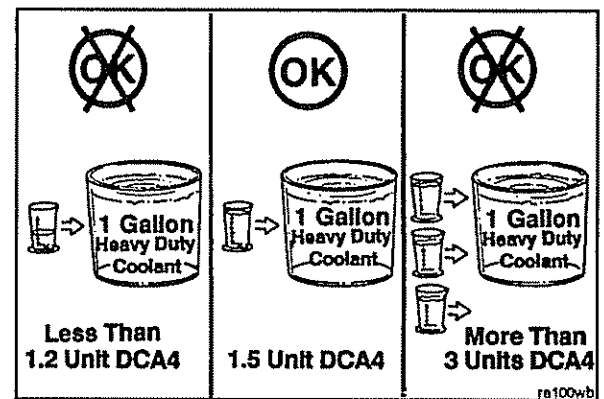

Use the correct Fleetguard® coolant filter to maintain the recommended DCA4 concentration in the system.

Maintain the correct concentration by changing the service coolant filter at each oil drain interval.

**NOTE:** The correct filter is determined by the total cooling system capacity and other operational factors.

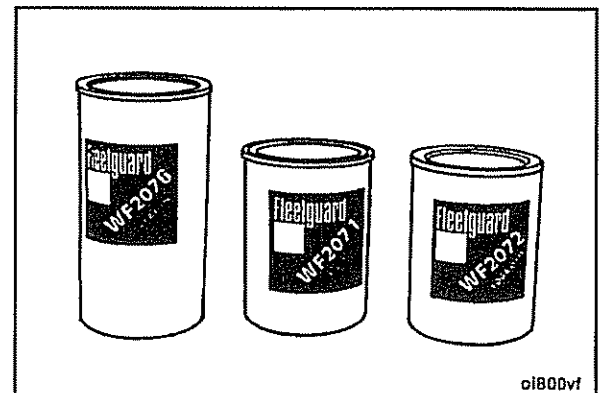

Testing is recommended if the operator is **not** sure of his cooling system condition due to leaks, uncontrolled topping off of the system, or major coolant loss.

Testing is also recommended twice a year to monitor the SCA level. If the SCA level is above 3 units, test at subsequent oil drain intervals until the concentration is back under 3 units. When the concentration is back under 3 units, start installing service filters at each drain interval.

#### When to Test

- When Not Sure of SCA Level
- Twice a Year
- When Over 3 Units Per Gallon of SCA

11600wb

If the concentration is below 1.2 units per gallon, replace the filter and pre-charge with liquid.

#### Below 1.2 Units

- Replace Service Filter
- Pre-charge with Liquid

11600wc

**1.2 to 3 Units**

- **Replace Service Filters**

11600wd

If the concentration is 1.2 to 3 units per gallon, replace the filters.


**Above 3 Units**

- **Do Not Replace Service Filters**
- **Test at Every Oil Change**

11600we

If the concentration is above 3 units per gallon, do **not** replace the service filter. Test the coolant at subsequent oil drain intervals until the concentration is back under 3 units. When the concentration is back under 3 units, start installing service filters at each oil change interval.

**Testing**

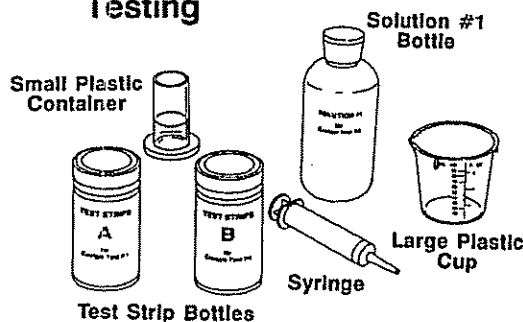

01904vz

**Testing SCA Concentration Level CC-2626 Test Kit**

If unsure about coolant loss and coolant condition, use the CC-2626 test kit to determine the SCA level of the cooling system.

**Precautions:**

**DO**

- Do** carry out testing in a well-lighted area.
- Do** make sure that hands are dry before removing strips from bottles.
- Do** allow coolant sample to reach room temperature for best results.
- Do** make sure that pad ends of strips are dipped.
- Do** replace and tighten caps on strip bottles to avoid getting moisture on strips.
- Do** make sure that all plastic containers are rinsed with water after each use to avoid contamination.

**Don't**

- Don't** handle pad ends of strip.
- Don't** allow pad ends of wet strips to touch during testing.
- Don't** get solution in eyes or on skin and clothing.
- Don't** allow contamination of the strips and solution bottles.
- Don't** allow contamination of the plastic containers during testing.
- Don't** use kits beyond expiration date.


Any variation to the technique listed below will give false readings resulting in incorrect service action.

### Instructions For Proper Kit Use

1. Fill large plastic cup at least half full with coolant.
2. With syringe, draw coolant sample to the stop point and dispense into small plastic container.
3. Hold small plastic container at eye level and fill to the black line with Solution #1, then swirl to mix. (Note: Many coolants will become cloudy at this point which is normal.)
4. Dip strip A into solution for 1 to 2 seconds, remove and shake vigorously to remove excess coolant. This action is much like shaking down a thermometer. Lay strip A down on a clean surface and read after reading strip B.
5. Dip strip B into solution for 1 to 2 seconds, shake vigorously, wait 30 seconds and match to nearest color on the test kit chart within the next 30 seconds. If **not** sure of exact color, read to the left or lower concentration.
6. Read strip A the same as strip B.
7. Determine the intersecting block of strips A and B on the chart, and follow requirements listed above under Testing DCA4.
8. Clean all plastic containers by rinsing cups and filling or flushing syringe with tap water after each use.

**NOTE:** Do **not** utilize the test kit to maintain minimum SCA concentration levels (i.e., 1.5 units).

**NOTE:** In some instances, the A or B reading can be high. However, it is the combined reading that is important. **Always follow the chart.**

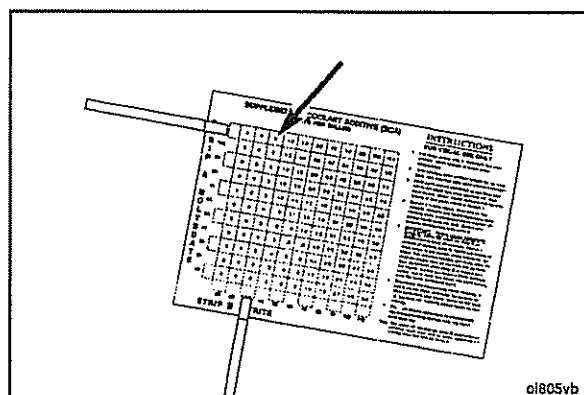

The following coolant testing devices are available to assist in determining the condition of the coolant:

**CC2626 Coolant Test Kit** — Works with any SCA formulation (Call 1-800-521-4005 if you have this test kit and the color chart does not show the number of units of DCA per gallon of coolant. A new chart will be mailed to you free of charge. The new chart will allow you to use your existing test kit with the new service requirements detailed on the reverse side of this paper.)

### Probalizer:

**3318169S Plug**


— Installs on the engine for easy coolant sampling

**3318168S Cap**

— Use with Monitor C bottle to sample coolant

**CC2706 Monitor C**

— Lab analysis of coolant samples

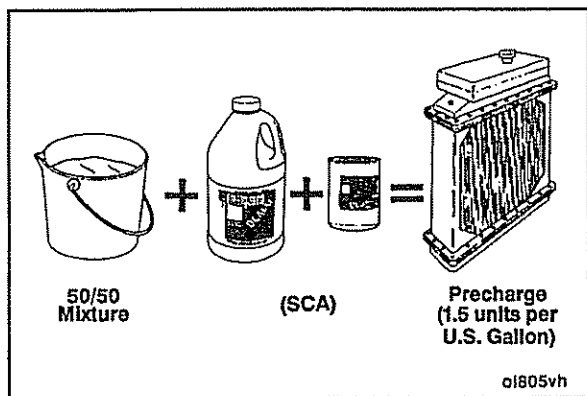

### Coolant Replacement Requirement

Drain and flush the cooling system after 2 years or 6,000 hours of service. Refill with new **Heavy Duty Coolant** and install the **correct service coolant filter**.

**NOTE:** If the coolant is **not** going to be reused, dispose of used coolant/antifreeze in accordance with federal, state, and local laws and regulations.

Call the following numbers to get answers to any questions you may have about cooling system maintenance.

**Cummins: 1-800-DIESELS**

**Fleetguard: 1-800-521-4005**

## Drive Belt Tension

SAE Belt Size	Belt Tension Gauge Part No.		Belt Tension NEW		Belt Tension USED	
	Click-type	Burroughs	N	lbf	N	lbf
1/2	3822524	ST-1138	356	80	267-356	60-80
11/16	3822524	ST-1138	356	80	267-356	60-80
3/4	3822524	ST-1138	356	80	267-356	60-80
7/8	3822524	ST-1138	356	80	267-356	60-80
5 RIB	3822524	ST-1138	356	80	267-356	60-80
9 RIB	3822525	ST-1293	356	80	267-356	60-80
23 RIB	N/A	N/A	BACKSIDE IDLER		SELF TENSIONING	
31 RIB	N/A	N/A	BACKSIDE IDLER		SELF TENSIONING	
16 RIB	N/A	3376344 or 3823875	2000-2224	450-500	1557-2224	350-500
20 RIB	N/A	3823875	2670-2890	600-650	2447-2890	550-650

## Engine Component Torque Value

Component	Wrench Size [in]	Torque Value	
		N·m	[ft-lb]
Oil Drain Plug	.....1-1/4.....	.....100.....	.....75.....
Crosshead Adjusting Screw Lock Nut			
With Adapter	.....9/16.....	.....35.....	.....25.....
Without Adapter	.....9/16.....	.....40.....	.....30.....
Valve Adjusting Screw Lock Nut			
With Adapter	.....3/4.....	.....45.....	.....35.....
Without Adapter	.....3/4.....	.....60.....	.....45.....
Rocker Lever Cover	.....9/16.....	.....40.....	.....30.....
Rocker Lever Shaft (12 pt capscrew)	.....1/2.....	.....90.....	.....65.....
Injector Hold Down Clamp Capscrew	.....1/2.....	.....16.....	.....145 in-lb.....
Injector Adjusting Screw Lock Nut			
With Adapter	.....3/4.....	.....45.....	.....35.....
Without Adapter	.....3/4.....	.....60.....	.....45.....
Adjusting Link and Alternator Mounting Capscrews	.....3/4.....	.....55.....	.....40.....
Fan Idler Control Rod Adjusting Screw Lock Nut	.....5/16.....	.....60.....	.....45.....
Fan Idler Control Rod Capscrews	.....5/8.....	.....90.....	.....65.....
Fan Idler Arm Shock Absorber	.....5/8.....	.....60.....	.....45.....
Fan Hub Assembly to Fan Support (12 pt capscrew)	.....5/8.....	.....290.....	.....215.....
Fan Belt Idler Assembly	.....5/8.....	.....60.....	.....45.....
Thermostat Housing Mounting Capscrews	.....9/16.....	.....45.....	.....35.....
Air Compressor Unloader Valve Cap	.....9/16.....	.....40.....	.....30.....
Air Compressor Unloader Valve Body Capscrew	.....9/16.....	.....15.....	.....120 in-lb.....
Fuel Pump Drive Coupling Capscrews	.....1/2.....	.....45.....	.....35.....

## Capscrew Markings and Torque Values



**Caution:** When replacing capscrews, always use a capscrew of the same measurement and strength as the capscrew being replaced. Using the wrong capscrews can result in engine damage.

U.S. Customary capscrews are identified by radial lines stamped on the head of the capscrew.


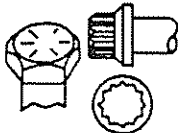
The following examples indicate how capscrews are identified:

U.S. Customary [5/16 X 18 X 1-1/2]		
5/16	18	1-1/2
Major Thread Diameter in Inches	Number Threads per Inch	Length in Inches

### NOTES:

1. **Always** use the torque values listed in the following tables when specific torque values are **not** available.
2. Do **not** use the torque values in place of those specified in other sections of this manual.
3. The torque values in the table are based on the use of lubricated threads.
4. When the ft-lb value is less than 10, give consideration to converting the ft-lb value to in-lb to obtain a better torque with an in-lb torque wrench. Example: 6 ft-lb equals 72 in-lb.

## Capscrew Markings and Torque Values - U.S. Customary

SAE Grade Number		5				8			
Capscrew Head Markings									
These are all SAE Grade 5 (3) line									
		Capscrew Torque - Grade 5 Capscrew				Capscrew Torque - Grade 8 Capscrew			
Capscrew Body Size		Cast Iron		Aluminum		Cast Iron		Aluminum	
		Nom	ft-lb	Nom	ft-lb	Nom	ft-lb	Nom	ft-lb
1/4 - 20		9	7	8	6	15	11	12	9
- 28		12	9	9	7	18	13	14	10
5/16 - 18		20	15	16	12	30	22	24	18
- 24		23	17	19	14	33	24	25	19
3/8 - 16		40	30	25	20	55	40	40	30
- 24		40	30	35	25	60	45	45	35
7/16 - 14		60	45	45	35	90	65	65	50
- 20		65	50	55	40	95	70	75	55
1/2 - 13		95	70	75	55	130	95	100	75
- 20		100	75	80	60	150	110	120	90
9/16 - 12		135	100	110	80	190	140	150	110
- 18		150	110	115	85	210	155	170	125
5/8 - 11		180	135	150	110	255	190	205	150
- 18		210	155	160	120	290	215	230	170
3/4 - 10		325	240	255	190	460	340	365	270
- 16		365	270	285	210	515	380	410	300
7/8 - 9		490	360	380	280	745	550	600	440
- 14		530	390	420	310	825	610	660	490
1 - 8		720	530	570	420	1100	820	890	660
- 14		800	590	650	480	1200	890	960	710



**Section S - Service Assistance**  
**Section Contents**

	<b>Page</b>
<b>Distributors - International.....</b>	<b>S-18</b>
<b>Distributors and Branches - Australia .....</b>	<b>S-13</b>
<b>Distributors and Branches - Canada.....</b>	<b>S-12</b>
<b>Distributors and Branches - New Zealand.....</b>	<b>S-14</b>
<b>Distributors and Branches - United States.....</b>	<b>S-5</b>
<b>Division and Regional Offices .....</b>	<b>S-4</b>
<b>Emergency .....</b>	<b>S-2</b>
<b>Problem Solving .....</b>	<b>S-3</b>
<b>Regional Offices - International.....</b>	<b>S-15</b>
<b>Routine .....</b>	<b>S-2</b>



## Section S - Service Assistance


### Routine

Personnel at a Cummins Authorized Repair Location can assist you with the correct operation or service of your engine. We have a worldwide service network of more than 5,000 Cummins Distributors and Dealers who have been trained to provide sound advice, expert service, and complete parts support. Check the telephone directory yellow pages or refer to the directory in this section for the nearest Cummins Authorized Repair Location.

### Emergency

The Cummins Customer Relations Department provides a 24-hour, toll free telephone number to aid in locating emergency service when a local Cummins Authorized Repair Location can **not** be reached. The emergency service telephone numbers are:

- United States and Canada (excluding Alaska and Hawaii)
  - (800) D-I-E-S-E-L-S
  - (800) 343-7357
- Outside of North America contact your Regional Office. Telephone numbers and addresses are listed in this section.

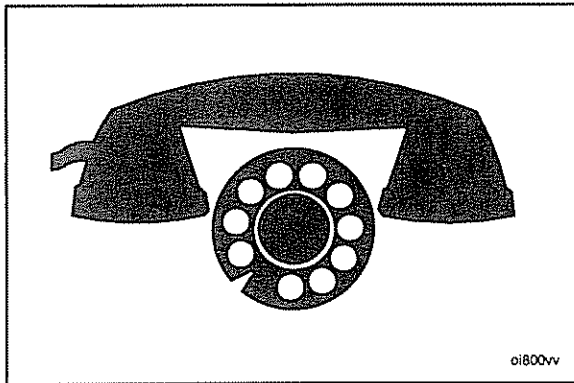

## Problem Solving

Normally, any problem that arises with the sale, service, or repair of your engine can be handled by a Cummins Authorized Repair Location in your area. Refer to the telephone directory yellow pages for the one nearest you. If the problem has **not** been handled satisfactorily, follow the steps outlined below:

1. If the disagreement is with a Dealer, talk to the Cummins Distributor with whom he has his service agreement.
2. If the disagreement is with a Distributor, call the nearest Cummins Division or Regional Office; however, most problems are solved below the Division or Regional office level. Telephone numbers and addresses are listed in this section. Before calling, write down the following information:
  - a. Engine model and serial number
  - b. Type and make of equipment
  - c. Total kilometers [miles] or hours of operation
  - d. Warranty start date
  - e. Nature of problem
  - f. Summary of the current problem arranged in the order of occurrence
  - g. Name and location of the Cummins Distributor or Dealer
3. If a problem can **not** be resolved satisfactorily through your Cummins Authorized Repair Location or Division Office, write to:

Customer Relations - 41403, Cummins Engine Company, Inc., Box 3005, Columbus, IN 47202-3005

## Division and Regional Offices

**NOTE:** The following list contains offices in U.S., Canada, Australia, New Zealand, and Puerto Rico.

### United States

#### Northern Division Office

Cummins Engine Company, Inc.  
2629 Waterfront  
Parkway East Drive  
Suite 200  
Indianapolis, IN 46204  
Telephone: (317) 328-3740

#### Southern Division Office

Cummins Engine Company, Inc.  
425 Franklin Road  
Suite 500  
Marietta, GA 30067  
Telephone: (404) 423-1108

#### Western Division Office

Cummins Engine Company, Inc.  
5660 Greenwood Plaza Blvd.  
Englewood, CO 80111  
Telephone: (303) 773-2866

#### Western Regional Office

Cummins Engine Company, Inc.  
584 First Street East  
Sonoma, CA 95476  
Telephone: (707) 935-3842

#### Plains Regional Office

Cummins Engine Company, Inc.  
1303 Walnut Hill Lane  
Suite 100  
Irving, TX 75038  
Telephone: (214) 580-7745

### Canada

#### Canadian Division Office

Cummins Diesel of Canada, Ltd.  
700 Dorval Drive  
Suite 600  
Oakville, Ontario L6K 3V3  
Telephone: (416) 842-8070

#### Western Canada Regional Office

Cummins Diesel of Canada, Ltd.  
Suite 303  
22359 Longheed Highway  
Maple Ridge, B.C. V2X 7G2  
Telephone: (604) 463-2359

#### Eastern Canada Regional Office

Cummins Diesel of Canada Ltd.  
800 Montee DeLiesse  
Saint Laurent, Quebec H4T 1P3  
Telephone: (514) 342-4042

#### Central Canada Regional Office

Cummins Diesel of Canada Ltd.  
C/O Cummins Albena  
14755 - 121 A Avenue  
Edmonton, Alberta T5L 2T2  
Telephone: (403) 455-2151

### Australia Regional Office

#### Cummins Diesel Australia

513-515 Maroondah Highway  
Ringwood 3134  
Victoria, Australia  
Telephone: (3) 871-2222

**NOTE:** This office also serves New Zealand.

#### Cummins Americas Regional Office

#### Cummins Caribbean

16085 N. W. 52nd Avenue  
Hialeah, FL 33014  
Telephone: (305) 621-1300

**NOTE:** This office serves Puerto Rico and South America excluding Brazil.

**Distributors and Branches - United States****Alabama****Birmingham Distributor**

Cummins Alabama, Inc.  
2200 Pinson Highway  
P.O. Box 1147  
Birmingham, AL 35201  
Telephone: (205) 841-0421

**Mobile Branch**

Cummins Alabama, Inc.  
1924 Beltline Highway,  
I-65 North  
P.O. Box 2566  
Mobile, AL 36601  
Telephone: (205) 456-2236

**Mobile Marine Branch**

Cummins Alabama, Inc.  
Marine Center  
921 Corporate Drive South  
P.O. Box 2566  
Mobile, AL 36601  
Telephone: (205) 456-2236

**Mobile Onan Branch**

Cummins Alabama, Inc.  
Cummins/Onan/Power Systems Center  
3422 Georgia Pacific Avenue  
Mobile, AL 36617  
Telephone: (205) 452-6426

**Montgomery Branch**

Cummins Alabama, Inc.  
2325 West Fairview Avenue  
P.O. Box 9271  
Montgomery, AL 36108  
Telephone: (205) 263-2594

**Alaska****Anchorage - (Branch of Seattle)**

Cummins Northwest, Inc.  
2618 Commercial Drive  
Anchorage, AK 99501-3095  
Telephone: (907) 279-7594

**Arizona****Phoenix Distributor and Branch**

Cummins Southwest, Inc.  
2239 North Black Canyon Hwy.  
P.O. Box 6688  
Phoenix, AZ 85005-6688  
Telephone: (602) 252-8021

**Phoenix Generator Branch**

Cummins Southwest, Inc.  
Power Systems Division  
2222 N. 23rd Drive  
Phoenix, AZ 85009  
Telephone: (602) 252-8021

**Tucson Branch**

Cummins Southwest, Inc.  
1912 West Prince Road  
Tucson, AZ 85705  
Telephone: (602) 887-7440

**Arkansas****Little Rock - (Branch of Memphis)**

Cummins Mid-South, Inc.  
6600 Interstate 30  
Little Rock, AR 72209  
Telephone: (Sales): (501) 569-5600  
(Service): (501) 569-5656  
(Parts): (501) 569-5613

**Van Buren - (Branch of Memphis)**

Cummins Mid-South, Inc.  
1906 N. 6th Street Memphis  
Van Buren, AR 72956  
Telephone: Sales: (501) 474-7953  
Parts: (501) 474-7951  
Service: (501) 474-7955 & 474-7956

**California****San Leandro Distributor**

Cummins West, Inc.  
1515 Aurora Drive  
San Leandro, CA 94577  
Telephone: (415) 351-6101

**Bakersfield Branch**

Cummins West, Inc.  
301 East Fourth Street  
Bakersfield, CA 93304  
Telephone: (805) 325-9407

**Eureka/Arcata Branch**

Cummins West, Inc.  
4801 West End Road  
Arcata, CA 95521  
Telephone: (707) 822-7385

**Fresno Branch**

Cummins West, Inc.  
2740 Church Avenue  
Fresno, CA 93706  
Telephone: (209) 486-6050

**Los Angeles Industrial Branch**

Cummins West, Inc.  
1939 Deere Avenue  
Irvine, CA 92714  
Telephone: (714) 756-8700

**Los Angeles Branch**

Cummins West, Inc.  
1661 McGarry Street  
Los Angeles, CA 90021  
Telephone: (213) 746-3850  
Branch: (213) 746-6410

**Montebello Branch**

Cummins West, Inc.  
1105 South Greenwood Avenue  
Montebello, CA 90640  
Telephone: (213) 728-8111

**Redding Branch**

Cummins West, Inc.  
2725 Favretto Avenue  
Redding, CA 96001  
Telephone: (916) 241-2154

**Rialto Branch**

Cummins West, Inc.  
161 East Valley Road  
Rialto, CA 92376  
Telephone: (714) 877-0433

**San Diego Branch**

Cummins West, Inc.  
9191 Kearny Villa Court  
San Diego, CA 92123  
Telephone: (619) 278-4160

**San Leandro Branch**

Cummins West, Inc.  
1601 Aurora Drive  
San Leandro, CA 94577  
Telephone: (415) 351-6101

**Stockton Office**

Cummins West, Inc.  
41 W. Yokuts Avenue, Suite 131  
Stockton, CA 95207  
Telephone: (209) 473-0386

**West Sacramento Branch**

Cummins West, Inc.  
2661 Evergreen Avenue  
West Sacramento, CA 95691  
Telephone: (916) 371-0630

**Colorado****Denver Distributor**

Cummins Power, Inc.  
5100 East 58th Avenue  
Commerce City, CO 80022  
Telephone: (303) 287-0201

**Denver Generator Branch**

Gen Power, Inc.  
3801 E. 50th Avenue  
Denver, CO 80216  
Telephone: (303) 399-7697

**Grand Junction Branch**

Cummins Power, Inc.  
2380 U.S. Highway 6 & 50  
P.O. Box 339  
Grand Junction, CO 81501  
Telephone: (303) 242-5776

**Greeley Branch**

Cummins Power, Inc.  
250 Sixth Avenue  
Greeley, CO 80631  
Telephone: (303) 351-0448

**Connecticut****Hartford Distributor**

Cummins - Connecticut, Inc.  
260 Murphy Road  
Hartford, CT 06114  
Telephone: (203) 527-9156  
Parts: (203) 525-5606

## **Florida**

### **Tampa Distributor**

Cummins Southeastern Power, Inc.  
Corporate Office and Energy System  
5421 N. 59th Street  
Tampa, FL 33610  
Telephone: (813) 621-7202

### **Ft. Myers Branch**

Cummins Southeastern Power, Inc.  
2671 Edison Avenue  
Ft. Myers, FL 33902  
Telephone: (813) 337-1211

### **Jacksonville Branch**

Cummins Southeastern Power, Inc.  
2060 West 21st Street  
P.O. Box 12036  
Jacksonville, FL 32209  
Telephone: (904) 355-3437

### **Miami Branch**

Cummins Southeastern Power, Inc.  
9900 N.W. 77th Court  
Hialeah Gardens, FL 33016  
Telephone: (305) 821-4200

### **Orlando Branch**

Cummins Southeastern Power, Inc.  
4020 North  
Orange Blossom Trail  
Orlando, FL 32810  
Telephone: (407) 298-2080

### **Tampa Branch**

Cummins Southeastern Power, Inc.  
5910 E. Hillsborough Avenue  
P. O. Box 11737  
Tampa, FL 33680  
Telephone: (813) 626-1101

## **Georgia**

### **Atlanta Distributor**

Cummins South, Inc.  
5125 Georgia Highway 85  
College Park, GA 30349  
Telephone: (404) 763-0151

### **Albany Branch**

Cummins South, Inc.  
1915 W. Oakbridge Drive  
Albany, GA 31707-4938  
Telephone: (912) 888-6210

### **Atlanta Branch**

Cummins South, Inc.  
100 University Avenue, S.W.  
Atlanta, GA 30315-2202  
Telephone: (404) 527-7800

### **Augusta Branch**

Cummins South, Inc.  
1255 New Savannah Road  
Augusta, GA 30901-3891  
Telephone: (404) 722-8825

## **Dalton Branch**

Cummins South, Inc.  
204 Carbondale Road  
Dalton, GA 30720-5303  
Telephone: (404) 277-1144

### **Savannah Branch**

Cummins South, Inc.  
8 Interchange Court  
Savannah, GA 31401-1627  
Telephone: (912) 232-5565

## **Hawaii**

### **Honolulu Distributor**

Cummins Hawaii, Inc.  
215 Puuhale Road  
Honolulu, HI 96819-2235  
Telephone: (808) 845-6606

## **Idaho**

### **Boise - (Branch of Salt Lake City)**

Cummins Intermountain, Inc.  
2851 Federal Way City  
P.O. Box 5212  
Boise, ID 83705  
Telephone: (208) 336-5000

### **Pocatello - (Branch of Salt Lake City)**

Cummins Intermountain, Inc.  
1429 Highway 30 West  
Pocatello, ID 83201  
Telephone: (208) 234-1661

## **Illinois**

### **Chicago Distributor**

Cummins Northern Illinois, Inc.  
7145 Santa Fe Drive  
Hodgkins, IL 60525  
Telephone: (708) 579-9222

### **Bloomington-Normal - (Branch of Indianapolis)**

Cummins Mid-States Power, Inc.  
P.O. Box 348  
(at U.S. 51 N and I-55)  
Bloomington-Normal, IL 61761  
Telephone: (309) 452-4454

### **Harrisburg (Branch of St. Louis)**

Cummins Gateway, Inc.  
Rt. 4, Box 629  
Harrisburg, IL 62946  
Telephone: (618) 244-1232

### **Rock Island - (Branch of Omaha)**

Cummins Great Plains Diesel, Inc.  
7820-42nd Street West  
Rock Island, IL 61204  
Telephone: (309) 787-4300

### **Rockford Branch**

Cummins Northern Illinois, Inc.  
4617 Sandy Hollow Road  
Rockford, IL 61109  
Telephone: (815) 874-1700

## **Indiana**

### **Indianapolis Distributor**

Cummins Mid-States Power, Inc.  
2421 Production Drive  
Indianapolis, IN 46241  
Telephone: (317) 243-7979

### **Evansville - (Branch of Louisville)**

Cummins Cumberland, Inc.  
7901 Highway 41 N.  
Evansville, IN 47711  
Telephone: (812) 867-4400

### **Ft. Wayne Branch**

Cummins Mid-States Power, Inc.  
3415 Coliseum Blvd. West  
(At Jct. I-69 & 30/33)  
Ft. Wayne, IN 46808  
Telephone: (219) 482-3691

### **Gary - (Branch of Chicago)**

Cummins Northern Illinois, Inc.  
1440 Texas Street  
Gary, IN 46402  
Telephone: (219) 885-5591

### **Indianapolis Branch**

Cummins Mid-States Power, Inc.  
P. O. Box 41317  
3621 West Morris Street  
Indianapolis, IN 46241  
Telephone: (317) 244-7251

### **Linton Branch**

Cummins Mid-States Power, Inc.  
1244 N.E. A Street  
(Indiana Highway 54 East)  
Linton, IN 47441-0678  
Telephone: (812) 847-2201 and  
(812) 847-2202

## **Iowa**

### **Cedar Rapids - (Branch of Omaha)**

Cummins Great Plains Diesel, Inc.  
625 - 33rd Avenue SW  
P.O. Box 1107  
Cedar Rapids, IA 52406  
Telephone: (319) 366-7537  
(24 hours)

### **Des Moines - (Branch of Omaha)**

Cummins Great Plains Diesel, Inc.  
1680 N.E. 51st Avenue  
P.O. Box B  
Des Moines, IA 50313  
Telephone: (515) 262-9591  
Parts: (515) 262-9744  
(515) 262-9591 after midnight

### **Des Moines - (Branch of Omaha)**

Midwestern Power Products  
Division of Cummins Great Plains Diesel, Inc.  
10100 Dennis Drive  
Des Moines, IA 50322  
Telephone: (515) 278-5521

**Kansas****Colby - (Branch of Kansas City, Missouri)**

Cummins Mid-America, Inc.  
1880 South Range  
P.O. Drawer "P"  
Colby, KS 67701  
Telephone: (913) 462-3945  
(913) 462-3143

**Garden City - (Branch of Kansas City, Missouri)**

Cummins Mid-America, Inc.  
2203 W. Jones Frontage Road  
Box 2598  
Garden City, KS 67846  
Telephone: (316) 275-2277

**Olathe - (Branch of Kansas City, Missouri)**

Cummins Mid-America, Inc.  
11615 South Rogers Road  
P. O. Box 3108  
Olathe, KS 66062  
Telephone: (913) 469-5660

**Wichita - (Branch of Kansas City, Missouri)**

Cummins Mid-America, Inc.  
5101 North Broadway (67219)  
P.O. Box 2681  
Wichita, KS 67201  
Telephone: (316) 838-0375

**Kentucky****Louisville Distributor**

Cummins Cumberland, Inc.  
(Corporate Office)  
9822 Bluegrass Parkway  
Louisville, KY 40299  
Telephone: (502) 491-6060

**Hazard Branch**

Cummins Cumberland, Inc.  
Highway 15 South  
P.O. Box 510  
Hazard, KY 41701  
Telephone: (606) 436-5718

**Louisville Branch**

Cummins Cumberland, Inc.  
9820 Bluegrass Parkway  
Louisville, KY 40299  
Telephone: (502) 491-4263

**Louisiana****Morgan City - (Branch of Memphis)**

Cummins Mid-South, Inc.  
Hwy. 90 East  
P.O. Box 1229  
Amelia, LA 70340  
Telephone: (504) 631-0576

**New Orleans - (Branch of Memphis)**

Cummins Mid-South, Inc.  
110 E. Airline Highway  
Kenner, LA 70062  
Telephone: (504) 468-3535

**Maine****Bangor (Branch of Boston)**

Cummins North Atlantic, Inc.  
142 Target Industrial Circle  
Bangor, ME 04401  
Telephone: (207) 941-1061

**Scarborough - (Branch of Boston)**

Cummins North Atlantic, Inc.  
10 Gibson Road  
Scarborough, ME 04074  
Telephone: (207) 883-8155

**Maryland****Baltimore Distributor**

Cummins Chesapeake, Inc.  
6120 Holabird Avenue  
Baltimore, MD 21224  
Telephone: (301) 633-5161

**Baltimore Branch**

Cummins Chesapeake  
3140 Washington Boulevard  
Baltimore, MD 21230-1090  
Telephone: (301) 644-6500

**Massachusetts****Boston Distributor**

Cummins North Atlantic, Inc.  
100 Allied Drive  
Dedham, MA 02026  
Telephone: (617) 329-1750

**West Springfield Branch**

Cummins North Atlantic, Inc.  
124 Ashley Avenue  
West Springfield, MA 01089  
Telephone: (413) 737-2659

**Michigan****Detroit Distributor**

Cummins Michigan, Inc.  
41216 Vincent Court  
Novi, MI 48375  
Telephone: (313) 478-9700

**Blissfield, Michigan**

Diesel Fuel Systems, Inc.  
Subsidiary of Cummins Michigan, Inc.  
109 East Adrian Street  
Blissfield, MI 49228  
Telephone: (517) 486-4324

**Dearborn Branch**

Cummins Michigan, Inc.  
3760 Wyoming Avenue  
Dearborn, MI 48120  
Telephone: (313) 843-6200

**Grand Rapids Branch**

Cummins Michigan, Inc.  
3715 Clay Avenue, S.W.  
Grand Rapids, MI 49508  
Telephone: (616) 538-2250

**Grand Rapids Branch**

Standby Power, Inc.  
7580 Expressway Drive S.W.  
Grand Rapids, MI 49548  
Telephone: (616) 281-2211

**Iron Mountain - (Branch of De Pere)**

Cummins Great Lakes, Inc.  
P.O. Box 703  
1901 North Stephenson Avenue  
Iron Mountain, MI 49801  
Telephone: (906) 774-2424

**Saginaw Branch**

Cummins Michigan, Inc.  
722 N. Outer Drive  
Saginaw, MI 48605  
Telephone: (517) 752-5200

**Standby Power - (Branch of Detroit)**

Standby Power, Inc.  
12130 Dixie  
Redford, MI 48239  
Telephone: (313) 538-0200

**Minnesota****St. Paul Distributor**

Cummins Diesel Sales, Inc.  
2690 Cleveland Avenue North  
St. Paul, MN 55113  
(Mailing Address)  
P.O. Box 64578  
St. Paul, MN 55164  
Telephone: (612) 636-1000

**Duluth Branch**

Cummins Diesel Sales, Inc.  
3115 Truck Center Drive  
Duluth, MN 55806  
Telephone: (218) 628-3641

**Hibbing Branch**

Cummins Diesel Sales, Inc.  
604 West 41st Street  
P.O. Box 159  
Hibbing, MN 55746  
Telephone: (218) 263-7558

**Mississippi****Jackson - (Branch of Memphis)**

Cummins Mid-South, Inc.  
325 New Highway 49 South  
P.O. Box 54224  
Jackson, MS 39288-4224  
Telephone: Admin.: (601) 932-7016  
Parts: (601) 932-2720  
Service: (601) 939-1800

**Missouri**

**Kansas City Distributor**

Cummins Mid-America, Inc.  
1760 Universal  
Kansas City, MO 64120  
General Accounting Office  
Telephone: (816) 483-5070

**Kansas City Branch**

Cummins Mid-America, Inc.  
3527 Gardner Avenue  
Kansas City, MO 64120  
Telephone: (816) 483-6313

**Kansas City Fuel Systems Branch**

KC Diesel & Electric  
2810 Nicholson  
Kansas City, MO 64120  
Telephone: (816) 241-3400

**Joplin Branch**

Cummins Mid-America, Inc.  
3507 East 20th Street  
Joplin, MO 64801  
Telephone: (417) 623-1661

**Springfield Branch**

Cummins Mid-America, Inc.  
3637 East Kearney  
Springfield, MO 65803  
Telephone: (417) 862-0777

**St. Louis Distributor**

Cummins Gateway, Inc.  
7210 Hall Street  
St. Louis, MO 63147  
Telephone: (314) 389-5400

**Columbia Branch**

Cummins Gateway, Inc.  
5221 Highway 763 North  
Columbia, MO 65k202-1028  
Telephone: (314) 449-3711

**Sikeston Branch**

Cummins Gateway, Inc.  
101 Keystone Drive  
Sikeston, MO 63801  
Telephone: (314) 472-0303

**Montana**

**Billings - (Branch of Denver)**

Cummins Power, Inc.  
5151 Midland Road  
P.O. Box 30377  
Billings, MT 59101  
Telephone: (406) 245-4194

**Great Falls - (Branch of Denver)**

Cummins Power, Inc.  
415 Vaughn Road (59404)  
P.O. Box 1199  
Great Falls, MT 59403  
Telephone: (406) 452-8561

**Missoula - (Branch of Seattle)**

Cummins Northwest, Inc.  
4950 North Reserve Street  
Missoula, MT 59802-1498  
Telephone: (406) 728-1300

**Nebraska**

**Omaha Distributor and Branch**

Cummins Great Plains  
Diesel, Inc.  
5515 Center Street  
P.O. Box 6068  
Omaha, NE 68106  
Telephone: (402) 551-7678  
(24 hours) or  
(402) 493-4656

**Kearney Branch**

Cummins Great Plains  
Diesel, Inc.  
515 Central Avenue  
P.O. Box 1326  
Kearney, NE 68847  
Telephone: (308) 234-1994

**Nevada**

**Elko - (Branch of Salt Lake City)**

Cummins Intermountain, Inc.  
5370 East Idaho Street  
Elko, NV 89801  
Telephone: (702) 738-6405

**Las Vegas - (Branch of Salt Lake City)**

Cummins Intermountain, Inc.  
2750 Losee Road  
North Las Vegas, NV 89030  
Telephone: (702) 399-2339  
Mailing Address:  
P. O. Box 3997  
North Las Vegas, NV 89036-3998

**Sparks - (Branch of Salt Lake City)**

Cummins Intermountain, Inc.  
150 Glendale Avenue  
Sparks, NV 89431  
Telephone: (702) 331-4983

**New Jersey**

**Newark - (Branch of Bronx)**

Cummins Metropower, Inc.  
Routes U.S. 1 & 22  
Newark, NJ 07114  
Telephone: (201) 242-2255

**New Mexico**

**Albuquerque - (Branch of Phoenix)**

Cummins Southwest, Inc.  
1921 Broadway N.E.  
Albuquerque, NM 87102  
Telephone: (505) 247-2441

**Farmington - (Branch of Phoenix)**

Cummins Southwest, Inc.  
1101 North Troy King Road  
Farmington, NM 87401  
Telephone: (505) 327-7331

**New York**

**Bronx Distributor**

Cummins Metropower, Inc.  
890 Zerega Avenue  
Bronx, NY 10473  
Telephone: (212) 892-2400

**Albany - (Branch of Boston)**

Cummins North Atlantic, Inc.  
101 Railroad Avenue  
Albany, NY 12205  
Telephone: (518) 459-1710

**Buffalo - (Branch of Boston)**

Cummins North Atlantic, Inc.  
480 Lawrence Bell Dr.  
Williamsville, NY 14221-7090  
Telephone: (716) 631-3211

**Plainview Branch**

Cummins Metropower, Inc.  
105 South Service Road  
Plainview, NY 11803  
Telephone: (516) 249-7500

**Syracuse - (Branch of Boston)**

Cummins North Atlantic, Inc.  
29 Eastern Avenue  
Syracuse, NY 13211  
Telephone: (305) 437-2751

**North Carolina**

**Charlotte Distributor**

Cummins Atlantic, Inc.  
11101 Nations Ford Road  
P.O. Box 240729  
Charlotte, NC 28224-8843  
Telephone: (704) 588-1240

**Charlotte Branch**

Cummins Atlantic, Inc.  
3700 North Interstate 85  
Charlotte, NC 28206  
Telephone: (704) 596-7690

**Greensboro Branch**

Cummins Atlantic, Inc.  
513 Preddy Boulevard  
P.O. Box 22066  
Greensboro, NC 27420-2066  
Telephone: (919) 275-4531

**Wilson Branch**

Cummins Atlantic, Inc.  
1514 Cargill Avenue  
P.O. Box 1177  
Wilson, NC 27894-1117  
Telephone: (919) 237-9111

**North Dakota****Dickinson - (Branch of St. Paul)**

Cummins Diesel Sales, Inc.  
Highway 10 West  
P.O. Box 1246  
Dickinson, ND 58602  
Telephone: (701) 225-9194  
(701) 677-5354  
after 12:30 a.m.

**Fargo - (Branch of St. Paul)**

Cummins Diesel Sales, Inc.  
4050 West Main Avenue (58103)  
P.O. Box 2111  
Fargo, ND 58107  
Telephone: (701) 282-2466

**Grand Forks - (Branch of St. Paul)**

Cummins Diesel Sales, Inc.  
4728 Gateway Drive  
P.O. Box 636  
Grand Forks, ND 58201  
Telephone: (701) 775-8197  
(701) 772-7689  
after 12:30 a.m.

**Minot - (Branch of St. Paul)**

Cummins Diesel Sales, Inc.  
1501 - 20th Avenue, S.E.  
P.O. Box 1179  
Minot, ND 58702  
Telephone: (701) 852-3585  
(701) 839-3417  
after 12:30 a.m.

**Ohio****Columbus Distributor and Branch**

Cummins Ohio, Inc.  
4000 Lyman Drive  
Hilliard (Columbus), OH 43026  
Telephone: (614) 771-1000

**Akron Branch**

Cummins Ohio, Inc.  
1033 Kelly Avenue  
Akron, OH 44306  
Telephone: (216) 773-7821

**Cincinnati Branch**

Cummins Ohio, Inc.  
10470 Evendale Drive  
Cincinnati, OH 45241  
Telephone: (513) 563-6670

**Cincinnati Branch**

Power Systems Division  
Cummins Ohio, Inc.  
10660 Evendale Drive  
Cincinnati, OH 45241  
Telephone: (513) 563-9303

**Cleveland Branch**

Cummins Ohio, Inc.  
7585 Northfield Road  
Cleveland, OH 44146  
Telephone: (216) 439-6800

**Lima Branch**

Cummins Ohio, Inc.  
960 Broadway  
Lima, OH 45804  
Telephone: (419) 227-2641

**Strasburg Branch**

Cummins Ohio, Inc.  
777 South Wooster Avenue  
Box 136  
Strasburg, OH 44680  
Telephone: (216) 878-5511  
After hours: (216) 364-1433

**Toledo Branch**

Cummins Ohio, Inc.  
801 Illinois Avenue  
Maumee  
(Toledo), OH 43537  
Telephone: (419) 893-8711

**Youngstown Branch**

Cummins Ohio, Inc.  
7145 Masury Road  
Hubbard  
(Youngstown), OH 44425  
Telephone: (216) 534-1935

**Oklahoma****Duncan - (Branch of Arlington)**

Cummins Southern Plains, Inc.  
1400 East Bois D'Arc  
P.O. Box 310  
Duncan, OK 73534-0310  
Telephone: (405) 255-1414  
(24 Hours)

**Oklahoma City - (Branch of Arlington)**

Cummins Southern Plains, Inc.  
5800 West Reno  
P.O. Box 1636  
Oklahoma City, OK 73101-1636  
Telephone: (405) 946-4481  
(24 hours)

**Tulsa - (Branch of Arlington)**

Cummins Southern Plains, Inc.  
16525 E. Skelly Drive  
P.O. Box 471616  
Tulsa, OK 74147-1616  
Telephone: (918) 234-3240  
(24 hours)

**Oregon****Bend - (Branch of Seattle)**

Cummins Northwest, Inc.  
3500 N. Highway 97 (97701-5729)  
P.O. Box 309  
Bend, OR 97709-0309  
Telephone: (503) 389-1900

**Eugene - (Branch of Seattle)**

Cummins Northwest, Inc.  
91201 Industrial Parkway  
Coburg, OR 97401

(Mailing Address)  
P.O. Box 10877  
Eugene, OR 97440-2887  
Telephone: (503) 687-0000

**Medford - (Branch of Seattle)**

Cummins Northwest, Inc.  
4045 Crater Lake Highway  
Medford, OR 97504-9796  
Telephone: (503) 779-0151

**North Bend - (Branch of Seattle)**

Cummins Northwest, Inc.  
612 California Avenue (97459-3402)  
P.O. Box 447  
North Bend, OR 97459-0105  
Telephone: (503) 756-3111

**Pendleton - (Branch of Seattle)**

Cummins Northwest, Inc.  
223 S.W. 23rd Street  
Pendleton, OR 97801-1810  
Telephone: (503) 276-2561

**Portland - (Corporate Branch of Seattle)**

Cummins Northwest, Inc.  
4711 N. Basin Avenue  
P. O. Box 2710 (97208-2710)  
Portland, OR 97217-3557  
Telephone: (503) 289-0900

**Portland - (Branch of Seattle)**

Cummins Northwest, Inc.  
4711 N. Basin Avenue  
P. O. Box 2710 (97208-2710)  
Portland, OR 97217-3557  
Telephone: (503) 289-0900

**Pennsylvania****Philadelphia Distributor**

Cummins Diesel Engines, Inc.  
3941 Commerce Avenue  
Willow Grove, PA 19090-1108  
Telephone: (215) 657-2200

**Philadelphia (Bristol) Branch**

Cummins Diesel Engines, Inc.  
2727 Ford Road  
Bristol, PA 19007  
Telephone: (215) 785-6005

**Clearfield Branch**

Cummins Diesel Engines, Inc.  
Clearfield Parts Center  
501 Williams Street  
Clearfield, PA 16830  
Telephone: (814) 765-2421

**Harrisburg Branch**

Cummins Diesel Engines, Inc.  
4499 Lewis Road  
Harrisburg, PA 17111-2541  
Telephone: (717) 564-1344

**Monroeville Branch**

Cummins Diesel Engines, Inc.  
2740 Mossie Boulevard  
Monroeville, PA 15146  
Telephone: (412) 856-6700

**Puerto Rico**

**Puerto Nuevo - (Branch of Tampa)**

Cummins Diesel Power, Inc.  
Calle C #31 El Matadero  
Puerto Nuevo, Puerto Rico 00920  
Telephone: (809) 793-0300

**South Carolina**

**Charleston - (Branch of Charlotte)**

Cummins Atlantic, Inc.  
3010 West Montague Avenue  
P.O. Box 10341  
Charleston, SC 29411-0341  
Telephone: (803) 554-5112

**Columbia - (Branch of Charlotte)**

Cummins Atlantic, Inc.  
1233 Bluff Road  
P.O. Box 13543  
Columbia, SC 29201-3543  
Telephone: (803) 799-2410

**South Dakota**

**Rapid City - (Branch of Omaha)**

Cummins Great Plains  
Diesel, Inc.  
2310 Haines Avenue  
P.O. Box 244  
Rapid City, SD 57701  
Telephone: (605) 343-6130

**Sioux Falls - (Branch of Omaha)**

Cummins Great Plains  
Diesel, Inc.  
701 East 54th Street North  
Sioux Falls, SD 57104  
Telephone: (605) 336-1715  
(605) 334-6492

**Tennessee**

**Memphis Distributor & Distribution Center**

Cummins Mid-South, Inc.  
666 Riverside Drive  
P.O. Box 3080  
Memphis, TN 38103  
Telephone: (901) 577-0666

**Chattanooga - (Branch of Atlanta)**

Cummins South, Inc.  
1509 East 26th Street  
Chattanooga, TN 37407-1095  
Telephone: (615) 629-1447

**Knoxville - (Branch of Louisville)**

Cummins Cumberland, Inc.  
1211 Ault Road  
Knoxville, TN 37914  
Telephone: (615) 523-0446

**Memphis Branch**

Cummins Mid-South, Inc.  
1784 E. Brooks Road  
Memphis, TN 38116  
Telephone:  
Sales/Admin.-(901) 345-7424  
Parts - - - -(901) 345-1784  
Service - - - -(901) 345-6185

**Nashville - (Branch of Louisville)**

Cummins Cumberland, Inc.  
706 Spence Lane  
Nashville, TN 37217  
Telephone: (615) 366-4341

**Texas**

**Arlington Distributor and Branch**

Cummins Southern Plains, Inc.  
600 N. Watson Road  
P.O. Box 90027  
Arlington, TX 76004-3027  
Telephone: (817) 640-6801  
(24 hours)

**Amarillo Branch**

Cummins Southern Plains, Inc.  
5224 Interstate 40 -  
Expressway East  
P.O. Box 31570  
Amarillo, TX 79120-1570  
Telephone: (806) 373-3793  
(24 hours)

**Corpus Christi Branch**

Cummins Southern Plains, Inc.  
1302 Corn Products Road  
P.O. Box 48  
Corpus Christi, TX 78403-0048  
Telephone: (512) 289-0700  
(24 hours)

**Dallas Branch**

Cummins Southern Plains, Inc.  
3707 Irving Boulevard  
Dallas, TX 75247  
Telephone: (214) 631-6400  
(24 hours)

**El Paso - (Branch of Phoenix)**

Cummins Southwest, Inc.  
14333 Gateway West  
El Paso, TX 79927  
Telephone: (915) 852-4200

**Fort Worth Branch**

Cummins Southern Plains, Inc.  
3250 North Freeway  
Fort Worth, TX 76111  
Telephone: (817) 624-2107  
(24 hours)

**Houston Branch**

Cummins Southern Plains, Inc.  
4750 Homestead Road  
P.O. Box 1367  
Houston, TX 77251-1367  
Telephone: (713) 675-7421  
(24 hours)

**Mesquite Branch**

Cummins Southern Plains, Inc.  
2615 Big Town Blvd.  
Mesquite, TX 75150  
Telephone: (214) 321-5555  
(24 hours)

**Odessa Branch**

Cummins Southern Plains, Inc.  
1210 South Grandview  
P.O. Box 633  
Odessa, TX 79760-0633  
Telephone: (915) 332-9121  
(24 hours)

**San Antonio Branch**

Cummins Southern Plains, Inc.  
6226 Pan Am Expressway North  
P.O. Box 18385, Serna Station  
San Antonio, TX 78218-0385  
Telephone: (512) 655-5420  
(24 hours)

**Utah**

**Salt Lake City Distributor**

Cummins Intermountain, Inc.  
1030 South 300 West  
P.O. Box 25428  
Salt Lake City, UT 84125  
Telephone: (801) 355-6500

**Vernal Branch**

Cummins Intermountain, Inc.  
1435 East 335 South  
P.O. Box 903  
Vernal, UT 84078  
Telephone: (801) 789-5732

**Virginia**

**Bristol - (Branch of Louisville)**

Cummins Cumberland, Inc.  
400 Stage Coach Road  
1-81 at Old Airport Road  
Bristol, VA 24201  
Telephone: (703) 669-4200

**Norfolk - (Branch of Charlotte)**

Cummins Atlantic, Inc.  
Cummins/Onan Power Systems  
1114 Ballentine Blvd.  
Norfolk, VA 23504  
Telephone: (804)627-9470

**Richmond - (Branch of Charlotte)**

Cummins Atlantic, Inc.  
3900 Deepwater Terminal Road  
Richmond, VA 23234  
Telephone: (804) 232-7891

**Roanoke - (Branch of Charlotte)**

Cummins Atlantic, Inc.  
5307 Peters Creek Road  
P.O. Box 7237  
Roanoke, VA 24019-7237  
Telephone: (703) 362-1673

**Washington****Seattle Distributor**

Cummins Northwest, Inc.  
811 S.W. Grady Way (98055-2944)  
P.O. Box 9811  
Renton, WA 98057-9811  
Telephone: (206) 235-3400

**Chehalis Branch**

Cummins Northwest, Inc.  
1200 N.W. Maryland  
Chehalis, WA 98532-1813  
Telephone: (206) 748-8841

**Longview Branch**

Cummins Northwest, Inc.  
1153 Third Avenue (98632-3204)  
P.O. Box 1459  
Longview, WA 98632-0141  
Telephone: (206) 425-0100

**Spokane Branch**

Cummins Northwest, Inc.  
E. 3904 Trent Avenue (99202-4471)  
P.O. Box 2746 -  
Terminal Annex  
Spokane, WA 99220-2746  
Telephone: (509) 534-0411

**Tacoma Branch**

Cummins Northwest, Inc.  
3701 Pacific Highway East  
Tacoma, WA 98424-1135  
Telephone: (206) 922-2191

**Yakima Branch**

Cummins Northwest, Inc.  
1905 East Central Avenue (98901-3609)  
P.O. Box 9129  
Yakima, WA 98909-0129  
Telephone: (509) 248-9033

**West Virginia****Charleston - (Branch of Louisville)**

Cummins Cumberland, Inc.  
Charleston Ordnance Center  
P.O. Box 8456  
South Charleston, WV 25303  
Telephone: (304) 744-6373

**Fairmont - (Branch of Louisville)**

Cummins Cumberland, Inc.  
South Fairmont Exit, I-79  
Rt. 73, South  
P.O. Box 988  
Fairmont, WV 26554  
Telephone: (304) 367-0196

**Wisconsin****DePere Distributor**

Cummins Great Lakes, Inc.  
875 Lawrence Drive  
(Mailing Address)  
P.O. Box 530  
DePere (Green Bay), WI 54115-0530  
Telephone: (414) 337-1991

**Chippewa Falls Branch**

Cummins Great Lakes, Inc.  
Route #7  
Box Number 88  
Chippewa Falls (Eau Claire), WI 54729  
Telephone: (715) 832-4329

**DePere Branch**

Cummins Great Lakes, Inc.  
939 Lawrence Drive  
(Mailing Address)  
P. O. Box 530  
DePere, WI 54115-0530  
Telephone: (414) 336-9631

**Milwaukee Branch**

Cummins Great Lakes, Inc.  
9401 South 13th Street  
Oak Creek, WI 53154  
Telephone: (414) 768-7400

**Wyoming****Gillette - (Branch of Denver)**

Cummins Power, Inc.  
2700 Hwy. 14 & 16 North  
P.O. Box 1207 (82717)  
Gillette, WY 82716  
Telephone: (307) 682-9611

**Rock Springs - (Branch of Salt Lake City)**

Cummins Intermountain, Inc.  
2000 Foothill Blvd.  
P.O. Box 1634  
Rock Springs, WY 82901  
Telephone: (307) 362-5168

## Distributors and Branches - Canada

### Alberta

#### Edmonton Distributor

Cummins Alberta  
14755 - 121A Avenue  
Edmonton, Alberta T5L 2T2, Canada  
Telephone: (403) 455-2151

#### Calgary Branch

Cummins Alberta  
703-64 Avenue S.E.  
Calgary, Alberta T2H 2C3, Canada  
Telephone: (403) 255-6691

#### Fort McMurray Branch

Cummins Alberta  
158 Becker Crescent  
Fort McMurray, Alberta T9K 1M7, Canada  
Telephone: (403) 791-6836

#### Hinton Branch

Cummins Alberta  
135 Veats Avenue  
Hinton, Alberta T7V 1S8, Canada  
Telephone: (403) 865-5111

#### Lethbridge Branch

Cummins Alberta  
230 - 24th Street North  
Lethbridge, Alberta T1J 3N2, Canada  
Telephone: (403) 329-6144

### British Columbia

#### Vancouver Distributor

Cummins British Columbia  
4270 Dawson Street  
Burnaby, B.C. V5C 4B1, Canada  
Telephone: (604) 299-9111

#### Kamloops Branch

Cummins British Columbia  
976 Laval Crescent  
Kamloops, B.C. Canada V2C 5P5  
Telephone: (604) 828-2388

#### Sparwood Branch

Cummins British Columbia  
731 Douglas Fir Road  
Sparwood, B.C. VOB 2G0, Canada  
Telephone: (604) 425-0522

#### Tumbler Ridge Branch

Cummins British Columbia  
Box 226  
Tumbler Ridge, B.C.  
Canada VOC 2W0  
Telephone: (604) 242-4217

### Manitoba

#### Winnipeg Distributor

Cummins Mid-Canada Ltd.  
489 Oak Point Road  
P.O. Box 1860  
Winnipeg, MB R3C 3R1, Canada  
Telephone: (204) 632-5470

### New Brunswick

#### Fredericton - (Branch of Montreal)

Diesel Cummins  
Branch of Cummins Americas, Inc.  
Vanier Highway  
P.O. Box 1178, Station "A"  
Fredericton,  
New Brunswick E3B 5C8, Canada  
Telephone: (506) 452-1940

### Newfoundland

#### St. John's - (Branch of Montreal)

Diesel Cummins  
Branch of Cummins Americas, Inc.  
122 Clyde Avenue  
Donovans Industrial Park  
(Mailing Address)  
P. O. Box 159  
Donovans Industrial Park  
Mount Pearl, Newfoundland A1N 2C2  
Canada  
Telephone: (709) 364-6972

### Nova Scotia

#### Halifax - (Branch of Montreal)

Diesel Cummins  
Branch of Cummins Americas, Inc.  
3204 Barrington Street  
Halifax, Nova Scotia B3K 2X6, Canada  
Telephone: (902) 429-6613

### Ontario

#### Toronto Distributor

Cummins Ontario Inc.  
150 N. Queen Street  
Etobicoke, Ontario M9C 1A8  
P.O. Box 40, Station "U"  
Toronto, Ontario M8Z 5N1  
Telephone: (416) 621-9921

#### Milton Branch

Dieselguard  
Division of Cummins Ontario Inc.  
40 Chisholm Dr.  
Milton, Ontario L9T 4N9  
Telephone: (416) 876-4623

#### Oakville Industrial Branch

Cummins Ontario Inc.  
301 Wyecroft Road  
Oakville, Ontario L6K 2H2, Canada  
Telephone: (416) 844-5851

#### Ottawa Branch

Cummins Ontario Inc.  
3189 Swansea Crescent  
Ottawa, Ontario K1G 3W5, Canada  
Telephone: (613) 736-1146

#### Thunder Bay Branch

Cummins Ontario Inc.  
1400 W. Walsh Street  
Thunder Bay  
Ontario P7C 4V9, Canada  
Telephone: (807) 577-7561

### Whitby Branch

Cummins Ontario Inc.  
1311 Hopkins Street  
Whitby, Ontario L1N 2C2, Canada  
Telephone: (416) 668-1375

### Quebec

#### Montreal Distributor

Diesel Cummins Branch of Cummins  
Americas, Inc.  
7200 Trans Canada Highway  
Pointe Claire, Quebec H9R 1C2, Canada  
Telephone: (514) 695-8410

#### Montreal Branch

Diesel Cummins Branch of Cummins  
Americas, Inc.  
7200 Trans Canada Highway  
Pointe Claire, Quebec H9R 1C2, Canada  
Telephone: (514) 695-8410  
Sales: (514) 694-5143  
Parts: (514) 694-5880

#### Quebec City Branch

Diesel Cummins Branch of Cummins  
Americas, Inc.  
2400 Watt Street  
Ste. Foy, Quebec G1P 3T3, Canada  
Telephone: (418) 651-2911

### Saskatchewan

#### Lloydminster - (Branch of Winnipeg)

Cummins Mid-Canada Ltd.  
3709 - 44th Street  
P.O. Box 959  
Lloydminster, SK S9V 0Y9, Canada  
Telephone: (403) 825-2062

#### Regina - (Branch of Winnipeg)

Cummins Mid-Canada Ltd.  
110 Kress Street  
P.O. Box 98  
Regina, SK S4P 2Z5, Canada  
Telephone: (306) 721-9710

#### Saskatoon - (Branch of Winnipeg)

Cummins Mid-Canada, Ltd.  
3001 Faithful Avenue  
P.O. Box 7679  
Saskatoon, SK S7K 4R4, Canada  
Telephone: (306) 933-4022

**Distributors and Branches - Australia****Sydney (Lansvale)**

Cummins Diesel Sales & Service  
P.O. Box 150  
164-170 Hume Highway  
Lansvale, 2166  
Cabramatta 2166  
New South Wales,  
Australia  
Telephone: (61-2) 728-6211

**Branches:****Adelaide (Gepps Cross)**

Cummins Diesel Sales & Service  
P.O. Box 108  
45-49 Cavan Road  
Gepps Cross, 5094  
Blair Athol, 5084  
South Australia, Australia  
Telephone: (61-8) 262-5211

**Brisbane (Darra)**

Cummins Diesel Sales & Service  
P.O. Box 124  
2506 Ipswich Road  
Darra, 4076  
Queensland, Australia  
Telephone: (61-7) 375-3277

**Cairns**

Cummins Diesel Sales & Service  
Cnr. Toohey & Knight Streets  
Portsmith, Cairns, 4870  
Queensland, Australia  
Telephone: (61-70) 52-1488

**Canberra**

Cummins Diesel Sales & Service  
15-27 Baydon Road  
Queanbeyan, 2620  
A.C.T., Australia  
Telephone: (61-62) 97-3433

**Darwin (Winnellie)**

Cummins Diesel Sales & Service  
P.O. Box 37587  
Lot 1758 Graffin Crescent  
Winnellie, 5789  
Winnellie, Darwin, 578  
Northern Territory, Australia  
Telephone: (61-89) 47-0766

**Devonport**

Cummins Diesel Sales & Service  
P.O. Box 72E  
2 Matthews Way  
East Devonport, 7310  
Tasmania, Australia  
Telephone: (61-04) 24-8800

**Grafton (South Grafton)**

Cummins Diesel Sales & Service  
P.O. Box 18  
18-20 Induna Street  
South Grafton, 2461  
New South Wales, Australia  
Telephone: (61-66) 42-3655

**Kalgoorlie**

Cummins Diesel Sales & Service  
P.O. Box 706  
Kalgoorlie, 6430  
Western Australia, Australia  
Location:  
Cnr. Keogh Way & Atabara Street  
Telephone: (61-90) 71-2994

**Mackay**

Cummins Diesel Sales & Service  
P.O. Box 842  
4 Presto Avenue  
Mackay, 4740  
Queensland, Australia  
Telephone: (61-79) 55-1222

**Melbourne (Campbellfield)**

Cummins Diesel Sales & Service  
Private Bag 9, G.P.O.  
1788-1800 Hume Highway  
Campbellfield 3061  
Victoria, Australia  
Telephone: (61-3) 357-5622

**Moorabbin**

Cummins Diesel Sales & Service  
P.O. Box 368  
Moorabbin, 3189  
Victoria, Australia  
Location:  
5 Linton Street  
Telephone: (61-3) 555-2255

**Mount Gambier**

Cummins Diesel Sales & Service  
P.O. Box 2219  
2 Avey Road  
Mount Gambier, 5290  
South Australia, Australia  
Telephone: (61-87) 25-6422

**Newcastle**

Cummins Diesel Sales & Service  
21 Galleghan Street  
Hexham, 2322  
New South Wales, Australia  
Telephone: (61-49) 64-8466

**Perth (Welshpool)**

Cummins Diesel Sales & Service  
P.O. Box 275  
50 Kewdale Road  
Kewdale, 6106  
Cloverdale, 6105  
Western Australia, Australia  
Telephone: (61-9) 458-5911

**Swan Hill**

Cummins Diesel Sales & Service  
P.O. Box 1264  
5 McAllister Road  
Swan Hill, 3585  
Victoria, Australia  
Telephone: (61-50) 32-9722

**Tamworth**

Cummins Diesel Sales & Service  
P.O. Box 677  
Lot 65 Gunnedah Road  
Tamworth, 2320  
New South Wales, Australia  
Telephone: (61-67) 65-5455

**Wodonga**

Cummins Diesel Sales & Service  
P.O. Box 174  
9-11 McKoy Street  
Wodonga, 3690  
Victoria, Australia  
Telephone: (61-60) 24-3655

## **Distributors and Branches - New Zealand**

### **Auckland**

Lees Power  
8 The Furlong  
Takanini, Auckland,  
New Zealand  
Telephone: (64-9) 299-7448

### **Branches:**

#### **Auckland**

Lees Power  
P.O. Box 12-120  
440 Church Street  
Penrose, Auckland,  
New Zealand  
Telephone: (64-9) 591-009

#### **Christchurch**

Lees Power  
P.O. Box 16-149, Hornby  
268 Main South Road  
Sockburn, Christchurch,  
New Zealand  
Telephone: (64-3) 497-178

#### **Napier**

Lees Power  
P.O. Box 3021, Onekawa  
Austin Street  
Onekawa, Napier,  
New Zealand  
Telephone: (64-70) 436-129

#### **Palmerston North**

Lees Power  
P.O. Box 9024  
852-860 Tremaine Avenue  
Palmerston North,  
New Zealand  
Telephone: (64-63) 62-209

#### **Rotorua**

Lees Power  
P.O. Box 934  
Te Ngae Road  
Rotorua, New Zealand  
Telephone: (64-73) 56-699

#### **Wellington**

Lees Power  
P.O. Box 30-447,  
Port Road South  
Seaview, Lower Hutt,  
New Zealand  
Telephone: (64-4) 686-029

**Regional Offices - International****Latin America Area Office - Hialeah**

Cummins Americas, Inc.  
16085 N.W. 52nd Avenue  
Hialeah, FL 33014  
U.S.A.

Telephone: (305) 621-4451

Countries	Argentina	Honduras
Covered:	Bolivia	Nicaragua
	Chile	Panama
	Costa Rica	Paraguay
	Dominican Republic	Peru
	El Salvador	Uruguay
	Guatemala	

**Colombia Regional Office - Bogota**

Cummins Engine Co. de Colombia S.A.  
Carrera 11A No. 90-15 Of. 601/602  
Bogota, D.E., Colombia  
Telephone: (57-1) 218-6248

**Mailing Address:**

Apartado Aereo 90988  
Bogota D.E., Colombia  
Countries  
Covered: Colombia  
Ecuador

**Venezuela Regional Office - Caracas**

Cummins Engine Company  
Oficina del Delegado  
Torre La Primera, Oficina 5-D  
Av. Francisco de Miranda  
Chacao, Caracas 1060, Venezuela

**Mailing Address:**

Cummins Engine Company M-227  
c/o Jet Cargo International  
P.O. Box 020010  
Miami, FL 33102-0010  
Telephone: (58-2) 32-0563, 32-7187  
Country  
Covered: Venezuela

**India Kirloskar Office - Pune**

Kirloskar Cummins Limited  
Kothrud  
Pune - 411 029, India  
Telephone: (91-212) 33-0240, 33-1074, 33-1105  
Countries  
Covered: Bhutan  
India  
Nepal

**Brazil Cumbrasa Office - Sao Paulo**

Cummins Brasil S.A.  
Rua Jati, 266  
07270 Guarulhos  
Sao Paulo, Brazil

**Mailing Address:**

P.O. Box 13  
07270 Guarulhos  
Sao Paulo, Brazil  
Telephone: (55-11) 945-9811  
Country  
Covered: Brazil

**South And East Asia Area Office - Singapore**

Cummins Diesel Sales Corporation  
8 Tanjong Penjuru  
Jurong Industrial Estate  
Singapore 2260  
Telephone: (65) 265-0155

Countries	Bangladesh	Laos
Covered:	Brunei	Malaysia
	Burma	Philippines
	Cambodia	Singapore
	Guam	Sri Lanka
	Hong Kong	Taiwan
	Indonesia	Thailand
		Vietnam

**South Pacific Area Office - Scoresby**

Cummins Australia Pty. Ltd.  
2 Caribbean Drive  
Scoresby, 3179  
Victoria, Australia

Telephone: (61-3) 765-3222

Countries	Australia	New Caledonia
Covered:	French Polynesia	New Zealand
	(including Tahiti)	
	South Pacific Islands (including	
	Eastern New Guinea,	
	Fiji Islands, and the Solomon Is-	
	lands)	

**North Asia Area Office - Tokyo**

Cummins Diesel Sales Corporation  
1-12-10 Shintomi  
Chuo-ku, Tokyo 104  
Japan  
Telephone: (81-3) 555-3131/2/3/4/5  
Countries  
Covered: Japan  
South Korea

### China Regional Office - Beijing

Cummins Corporation  
China World Tower, Suite 917  
China World Trade Centre  
No. 1 Jianguo Men Wai  
Beijing 100004  
People's Republic of China  
Telephone: (86-1) 505-4209/10  
Country  
Covered: China

### U.K. Area Office - New Malden

Cummins Engine Company Limited  
46-50 Coombe Road  
New Malden  
Surrey KT3 4QL  
England  
Telephone: (44-1) 949-6171

### U.K. Regional Office - Wellingborough

Cummins Diesel  
Denington Estate  
Wellingborough  
Northants, NN8 2QH  
England  
Telephone: (44-933) 76211  
Countries  
Covered: Ireland  
United Kingdom

### Middle East Regional Office - Mechelen

Cummins Diesel N.V.  
Blarenberglaan 4  
Industriepark Noord 2  
2800 Mechelen  
Belgium  
Telephone: (32-15) 200031  
Countries: Afghanistan Lebanon Sudan  
Covered: Bahrain North Yemen Syria  
Cyprus Oman Turkey  
Egypt Pakistan United  
Iran Qatar Arab  
Iraq Saudi Arabia Emirates  
Jordan South Yemen  
Kuwait

### Daventry

Cummins Engine Company Ltd.  
Royal Oak Way South  
Daventry, Northants NN11 5NU  
England  
Telephone: (44-327) 76000

### Darlington

Cummins Engine Company Limited  
Yarm Road  
Darlington, Co. Durham DL1 4PW  
England  
Telephone: (44-325) 460606

### Shotts

Cummins Engine Company Limited  
Calderhead Road  
Shotts, Lanarkshire ML7 4JT  
Scotland  
Telephone: (44-786) 824879

### East and Southern Africa Regional Office - Harare

Cummins Diesel International Ltd.  
72 Birmingham Road  
(Heavy Industrial Sites)  
Southerton  
Harare, Zimbabwe

#### Mailing Address:

P.O. Box 8440, Causeway  
Harare, Zimbabwe  
Telephone: (263-4) 67645

Countries	Botswana	Namibia
Covered:	Congo	Reunion
	Djibouti	Seychelles
	Ethiopia	Samalia
	Kenya	South Africa
	Lesotho	Swaziland
	Madagascar	Tanzania
	Malawi	Uganda
	Mauritius	Zambia
	Mozambique	Zimbabwe

### West/Northern Africa Regional Office - Mechelen

Cummins Diesel N.V.  
Blarenberglaan 4  
Industriepark Noord 2  
2800 Mechelen  
Belgium  
Telephone: (32-15) 200031  
Countries: Benin Guinea Bissau  
Covered: Burkina Faso Liberia  
Burundi Mali  
Cameroon Malta  
Cape Verde Mauritania  
Central African Republic Morocco  
Chad Niger  
Cote d'Ivoire Nigeria  
Equatorial Guinea Rwanda  
Guinea Sao Tome & Principe  
Gabon Senegal  
Gambia Sierre Leone  
Ghana Togo  
Guinea Tunisia  
Zaire

**North Africa Regional Office - Algiers**

Cummins Corporation  
Bureau de Liaison  
38, Lotissement Benachour Abdelkader  
Cheraga  
42300 Wilaya de Tipasa  
Algeria  
Telephone: (213) 281-06-90  
Countries  
Covered: Algeria  
Angola

**European Regional Office - Mechelen**

Cummins Diesel N.V.  
Blarenberglaan 4  
Industriepark Noord 2  
2800 Mechelen  
Belgium  
Telephone: (32-15) 200031  
Countries Austria Iceland  
Covered: Belgium Israel  
Czechoslovakia Luxembourg  
Denmark Netherlands  
Finland Norway  
Greece Portugal  
Hungary Sweden  
Switzerland

**France Regional Office - Lyon**

Cummins Diesel Sales Corporation  
39, rue Ampere - Zone Industrielle  
69680 Chassieu  
France  
Telephone: (33) 78-90-43-05  
Country  
Covered: France

**Italy Regional Office - Milan**

Cummins Diesel Italia S.p.A.  
Piazza Locatelli 8  
Zona Industriale  
20098 San Giuliano Milanese  
Milan, Italy  
Telephone: (39-2) 982-81235/6/7  
Country  
Covered: Italy

**Mexico Cummsa Office - Mexico City**

Cummins, S.A. de C.V.  
Arquimedes No. 209  
Col. Polanco  
11560 Mexico, D.F.  
Mexico

**Mailing/Shipping Address:**

Gonzalez de Castilla Inc.  
P.O. Box 1391  
4605 Modern Lane  
Modern Industrial Park  
Laredo, TX 78040  
Telephone: (52-5) 254-3822  
Country  
Covered: Mexico

**Germany Regional Office - Gross-Gerau**

Cummins Diesel Deutschland GmbH  
Odenwaldstr. 23  
D-6080 Gross-Gerau  
Federal Republic of Germany  
Telephone: (49-6152) 174-0

**Mailing Address:**

P.O. Box 1134  
D-6080 Gross Gerau  
Federal Republic of Germany  
Countries Albania  
Covered: Bulgaria  
Federal Republic of Germany  
German Democratic Republic  
Poland  
Romania  
U.S.S.R.  
Yugoslavia

**Spain Representation Office - Madrid**

Cummins Diesel N.V.  
C Andarrios 11-C  
28043 Madrid  
Spain  
Telephone: (34-1) 759-2880  
Country  
Covered: Spain

**Moscow**

Cummins Engine Co., Inc.  
c/o Control Data Corporation  
Krasnopresnenskaya Nab. 12, Office 2006  
123100 Moscow  
U.S.S.R.  
Telephone: (7-95) 253-8379

## **ABU DHABI**

-See United Arab Emirates

## **AFGHANISTAN**

-See Middle East Regional Office

## **ALBANIA**

-See Germany Regional Office -  
Gross Gerau

## **ALGERIA**

### **Algiers**

Cummins Corporation  
Bureau de Liaison  
38, Lotissement Benachour Abdelkader  
Cheraga  
43200 Wilaya de Tipasa  
Algeria  
Telephone: (213) 281-0690

## **AMERICAN SAMOA**

### **Pago Pago**

Burns Philp (South Seas) Co. Ltd.  
P.O. Box 129  
Pago Pago, American Samoa  
Telephone: (684) 633-4281

## **ANDORRA**

-See European Regional Office  
- Mechelen

## **ANGUILLA**

-See Antigua

## **ANTIGUA**

### **Miami (Office In U.S.A.)**

Cummins Southeastern Power, Inc.  
9900 N.W. 77 Court  
Hialeah Gardens, FL 33016  
Telephone: (305) 821-4200

## **ARGENTINA**

### **Buenos Aires**

Motores Stork  
Werkspoor S.A.I.C.  
Av. Ader 3707-11  
1605 Carapachay  
Buenos Aires, Argentina  
Telephone: (54-1)766-0865/0738/0580

## **ARUBA, ISLAND OF**

-See Netherlands Antilles

## **AUSTRIA**

### **Vienna**

Cummins-Industriemotoren  
Ges.m.b.H.  
Bickfordstr. 25  
A-7201 Neudoerfl Austria  
Telephone: (43-26) 22-77-418

## **AZORES ISLANDS**

-See Portugal

## **BAHAMAS**

### **Miami (Office in U.S.A.)**

Cummins Southeastern Power, Inc.  
9900 N.W. 77 Court  
Hialeah Gardens, FL 33016  
Telephone: (305) 821-4200

## **Distributors - International**

## **BAHRAIN**

### **Bahrain**

Yusuf Bin Ahmed Kanoo W.L.L.  
Kanoo Commercial  
P.O. Box 45, Manama  
Bahrain  
Telephone: (973) 252454

## **BALEARIC ISLANDS**

### **Madrid (Office in Spain)**

Cummins Ventas y Servicio, S.A.  
Torrelaguna, 56  
28027 Madrid, Spain

## **BANGLADESH**

### **Dhaka**

Equipment & Engineering Co., Ltd.  
P.O. Box 2339  
Dhaka 1000, Bangladesh

Location:  
56, Dilkusha Commercial Area  
2nd Floor/Eastern Block  
Telephone: (880-2) 34357, 34060

## **BARBADOS**

### **Miami (Office in U.S.A.)**

Cummins Southeastern Power, Inc.  
9900 N.W. 77 Court  
Hialeah Gardens, FL 33016  
Telephone: (305) 821-4200

## **BELGIUM**

### **Brussels**

Cummins Distributor  
Belgium S.A.  
623/629 Chaussee de Haecht  
B-1030 Brussels, Belgium  
Telephone: (24 hr.)  
(32-2) 216-81-10

## **BELIZE**

### **Miami (Office in U.S.A.)**

Cummins Southeastern Power, Inc.  
9900 N.W. 77 Court  
Hialeah Gardens, FL 33016  
Telephone: (305) 821-4200

## **BENIN**

-See Togo

## **BERMUDA**

### **Bronx (Office in U.S.A.)**

Cummins Metropower, Inc.  
890 Zerega Avenue  
Bronx, NY 10473  
Telephone: (212) 892-2400

## **BHUTAN**

### **Pune (Office in India)**

Cummins Diesel Sales &  
Service (India) Ltd.  
35A/1/2, Erandawana  
Pune - 411 038, India  
Telephone: (91-212) 56096/7/8

## **BOLIVIA**

### **La Paz**

Machinery & Auto Service  
Casilla 4042  
La Paz, Bolivia

Location:  
Av. 20 de Octubre Esq.  
Rosendo Gutierrez  
Telephone: (591-2) 379650, 366394

## **BONAIRE, ISLAND OF**

-See Netherlands Antilles

## **BOTSWANA**

-See East and Southern  
Africa Regional Office  
Harare

## **BRAZIL**

### **Ananindeua**

Marcos Marcelino & Companhia  
Ltda.  
Rodovia BR-316, Km 9  
67000 Ananindeua, Para,  
Brazil  
Telephone: (55-91) 235-4100/4132/  
4143/4012

### **Belo Horizonte**

Distribuidora Cummins  
Minas Ltda.  
Rua Pl, 25, Caicara  
30770 Belo Horizonte,  
Minas Gerais, Brazil  
Telephone: (55-31) 462-5144

### **Campo Grande**

Distribuidora Cummins  
Mato Grosso Ltda.  
Rodovia BR 163 Km 01  
79060 Campo Grande  
Mato Grosso do Sul, Brazil  
Telephone: (55-67) 387-1166

### **Curitiba**

Festugato S.A.,  
Distribuidora Cummins  
Rua Brasilio Itibere, 2195  
80230 Curitiba, Parana  
Brazil  
Telephone: (55-41) 222-4036

### **Fortaleza**

Distribuidora Cummins Diesel  
Do Nordeste Ltda.  
Av. da Abolicao, 3882,  
Mucuripe  
60165 Fortaleza, Ceara  
Brazil  
Telephone: (55-85) 244-9292

### **Goianian**

Distribuidora de Motores Cummins  
Centro Oeste Ltda.  
Av. Caiapo 777 - Sta. Genoveva  
74410 Goiania, Goias  
Brazil  
Telephone: (55-62) 264-1144

**Manaus**

Distribuidora Cummins  
Amazonas Ltda.  
Estrada da Ponta Negra, 6080 - Sao  
Jorge  
69037 Manaus, Amazonas,  
Brazil  
Telephone: (55-92) 238-7174/7177/  
8856/7631

**Porto Alegre**

Distribuidora Cummins  
Meridional S.A.  
Rua Dona Alzira, 98, Sarandi  
91050 Porto Alegre,  
Rio Grande do Sul, Brazil  
Telephone: (55-512) 40-8222

**Rio de Janeiro**

Distribuidora Cummins  
Leste Ltda.  
Rua Sariema, 138-Olaria  
21030 Rio de Janeiro,  
Rio de Janeiro, Brazil  
Telephone: (55-21) 290-7899

**Sao Paulo**

Companhia Distribuidora  
de Motores Cummins  
Rua Martin Burchard, 291 - Bras  
03043 Sao Paulo,  
Sao Paulo, Brazil  
Telephone: (55-11) 270-2311

**Sao Paulo**

Motores Cummins Diesel  
do Brasil Ltda.  
Av. Thomaz Edson, 448 - Barra Funda  
01140 Sao Paulo,  
Sao Paulo, Brazil  
Telephone: (55-11) 826-9376, 867-3702

**BRITISH VIRGIN ISLANDS**

-See Puerto Rico

**BRUNEI**

-See Malaysia

**BURKINA - FASO**

-See West/Northern Africa Regional  
Office - Mechelen

**BULGARIA**

-See Germany Regional Office - Gross  
Gerau

**BURMA****Kuala Lumpur (Office in Malaysia)**

Contact: Scott &  
English (M) Sdn Bhd  
P.O. Box 10324  
50710 Kuala Lumpur  
West Malaysia

Location:  
16 Jalan Chan Sow Lin  
55200 Kuala Lumpur  
West Malaysia  
Telephone: (60-3) 2211033

**BURUNDI****Brussels (Office in Belgium)**

Bureau Technique Bia, S.A.  
Rameistraat, 123  
B-1900 - Overijse, Belgium  
Telephone: (32-2) 6892811

**CAMBODIA**

-See South & East Asia  
Regional Office - Singapore

**CAMEROON****Limbe**

LEYCAM Motors Ltd.  
P.O. Box 307  
Limbe  
Cameroon  
Telephone: (237) 33-22-66

**CANARY ISLANDS****Madrid (Office in Spain)**

Cummins Ventas y  
Servicio, S.A.  
Torrelauna, 56  
28027 Madrid, Spain

**CAPE VERDE**

-See West/Northern Africa  
Regional Office - Mechelen

**CENTRAL AFRICAN REPUBLIC**

-See West/Northern Africa  
Regional Office - Mechelen

**CEYLON**

-See Sri Lanka

**CHAD**

-See West/Northern Africa  
Regional Office - Mechelen

**CHILE****Santiago**

Distribuidora Cummins Diesel  
S.A.C.I.  
Casilla Postal 1230  
Santiago, Chile

Location:  
Avda. Providencia 2653, Office 1901  
Providencia  
Telephone: (56-2) 321940, 517464/5/6

**CHINA, PEOPLE'S REPUBLIC**

-See China Regional  
Office - Beijing

**COLOMBIA****Barranquilla**

Cummins de Colombia S.A.  
Apartado Aereo 5347  
Barranquilla, Colombia  
Location: Calle 30, No. 19 - 21  
Telephone: (57-58) 40-11-99, 40-13-46

**Bogota**

Cummins Colombiana Ltda.  
Apartado Aereo No. 7431  
Bogota, D.E. Colombia

Location:  
Av. Americas X Carrera  
42C No. 19-45  
Bogota, D.E., Colombia  
Telephone: (57-1) 244-5688/5882

**Bucaramanga**

Cummins API, Ltda.  
Apartado Aereo 352  
Bucaramanga, Colombia  
Location:  
Autopista a Giron, Km 7  
Telephone: (57-73) 68060

**Cali**

Distribuidora Cummins del Valle, Ltda.  
Apartado Aereo No. 6398  
Cali, Colombia  
Location: Av. 3a. # 39-35 - Vipasa  
Telephone: (57-3) 65-4343

**Medellin**

Equipos Tecnicos Ltda.  
Apartado Aereo No. 2046  
Medellin, Colombia  
Location: Carrera 52 No. 10-184  
Telephone: (57-4) 255-4200

**Pereira**

Equipos Tecnicos Ltda. C.Q.R.  
Apartado Aereo No. 1240  
Pereira, Colombia  
Location: Carrera 8a. No. 45-39  
Telephone: (57-63) 366341/43

**COMOROS**

-See East and Southern  
Africa Regional Office  
Harare

**CONGO, PEOPLE'S REPUBLIC****Brussels (Office in Belgium)**

Bureau Technique Bia, S.A.  
Rameistraat, 123  
B-1900  
Overijse, Belgium  
Telephone: (32-2) 6892811

**CORSICA**

-See France

**COSTA RICA****San Jose**

Servicios Unidos, S.A.  
P.O. Box 559  
San Jose, Costa Rica  
Location:  
Curridabat  
Telephone Office: (506) 53-93-93  
Telephone Service Shop:  
(506) 26-00-76

**COTE D'IVOIRE****Abidjan**

AFI-TECHNIK  
2 Rue Clement Ader, Zone 4  
04 B.P. 350  
Abidjan 04  
Cote d'Ivoire  
Telephone: (225) 35-70-96, 35-65-06

**CUBA****Miami (Office in U.S.A.)**

Cummins Southeastern Power, Inc.  
9900 N.W. 77 Court  
Hialeah Gardens, FL 33016  
Telephone: (305) 821-4200

**CURACAO, ISLAND OF**

-See Netherlands Antilles

**CYPRUS**

**Nicosia**

Alexander Dimitriou & Sons Ltd.  
P.O. Box 1932  
Nicosia, Cyprus  
Telephone: (357-2) 461350

**CZECHOSLOVAKIA**

-See European Regional  
Office - Mechelen

**DENMARK**

**Glostrup**

P. L. Industrimaskiner A/S  
Post Box 166  
2605 Broendby, Denmark  
Location:  
Midtager 22  
Telephone: (45-2) 96-21-61

**DJIBOUTI**

-See East and Southern  
Africa Regional Office -  
Harare

**DOMINICA**

**Miami (Office in U.S.A.)**

Cummins Southeastern Power, Inc.  
9900 N.W. 77 Court  
Hialeah Gardens, FL 33016  
Telephone: (305) 821-4200

**DOMINICAN REPUBLIC**

**Santo Domingo**

Argico C. Por A.  
P.O. Box 292-2 Feria  
Santo Domingo  
Dominican Republic, ZP-6  
Location:  
Calle Jose A. Soler  
No. 3, ESQ.  
Avenida Lope de Vega  
Telephone: (809) 562-6281

**DUBAI**

-See United Arab Emirates

**ECUADOR**

**Guayaquil**

Motores Cummins (MOTCUM) S.A.  
P.O. Box 1062  
Guayaquil, Ecuador  
Location:  
Avenida Carlos Julio  
Arosemena Km. 4  
Telephone: (593-4) 204264, 202600

**Quito**

Rectificadora Botar S.A.  
P.O. Box 3344  
Quito, Pichincha, Ecuador  
Location:  
Av. 10 de Agosto No. 5980  
Telephone: (593-2) 241-544

**EGYPT**

**Cairo**

ADAT\*  
P.O. Box 1572  
25, Pyramids Road  
Giza  
Cairo, Egypt  
Telephone: (20-2) 850077, 851829

**Cairo (Egyptian Marine Market)**

Egypt Diesel (Sales Office)  
6 Abdel Rahman Abu Taleb Street  
P.O. Box 72  
Savada Nafisa  
Cairo 11411, Egypt  
Telephone: (20) 3631413

**EL SALVADOR**

**San Salvador**

Salvador Machinery  
Company, S.A. de C.V.  
P.O. Box 125  
San Salvador, El Salvador  
Location:  
Blvd. Ejercito Nacional  
Telephone: (503) 711022, 228388

**ENGLAND**

-See United Kingdom

\* All applications **except** marine market.

**EQUATORIAL GUINEA**

-See West/Northern Africa Regional  
Office - Mechelen

**ETHIOPIA**

**Addis Ababa**

AFCOR (Ethiopia) P.L.C.  
P.O. Box 263  
Addis Ababa, Ethiopia  
Telephone: 128130

**FAROE ISLANDS**

**Wellingborough (Office in United Kingdom)**

Cummins Diesel  
Denington Industrial Estate  
Wellingborough  
Northants NN8 2QH,  
England

**FERNANDO PO**

-See Spain

**FIJI**

**Suva**

Burns Philp (South Seas) Co. Ltd.  
P.O. Box 355  
Suva, Fiji  
Telephone: (679) 31-1777

**FINLAND**

**Helsinki**

Machinery OY  
P.O. Box 56  
Location:  
Teollisuuskatu 29  
SF 00511 Helsinki, Finland  
Telephone: Nat: (9-0) 77221  
Int: (358-0) 77221

**FRANCE**

**Lyon**

Cummins Diesel  
Sales Corporation  
38, rue Ampere Z.I.  
69680 Chassieu, France  
Telephone: (33-7) 8-90-43-05

**GABON**

**Libreville**

SODIM T.P.  
B.P. 506  
Libreville, Gabon  
Location:  
Zone Industrielle d'Oloumi  
Telephone: (241) 72-06-85

**GAMBIA**

-See West/Northern Africa  
Regional Office - Mechelen

**GERMANY, EAST**

-See W. Germany Regional Office -  
Gross-Gerau

**GERMANY, WEST**

**Gross-Gerau**

Cummins Diesel Deutschland GmbH  
P.O. Box 1134  
D-6080 Gross-Gerau,  
W. Germany  
Location: Odenwaldstr. 23  
Telephone: (49-6152) 174-0

**GHANA**

**Accra**

Leyland DAF (Ghana) Ltd.  
P.O. Box 2969  
Accra, Ghana  
Location:  
39/40 Ring Road South  
Industrial Estate  
Telephone: 22-88-06

**GREECE**

**Athens (Ag. Ioannis Rentis)**

Cummins Distributor Hellas Ltd.  
4b Thessalonikis Str.  
182 33 Ag. Ioannis Rentis  
Greece  
Telephone: (1) 493-1086  
Workshop:  
Cummins Distributor Hellas Ltd.  
4 Thessalonikis Str.  
Telephone: (30-1) 491-5264

**GREENLAND**

-See Denmark

**GRENADA****Miami (Office in U.S.A.)**

Cummins Southeastern Power, Inc.  
9900 N.W. 77 Court  
Hialeah Gardens, FL 33016  
Telephone: (305) 821-4200

**GUADELOUPE****Miami (Office in U.S.A.)**

Cummins Southeastern Power, Inc.  
9900 N.W. 77 Court  
Hialeah Gardens, FL 33016  
Telephone: (305) 821-4200

**GUAM****Tamuning**

Mid-Pac Far East, Inc.  
150 E. Harmon  
Industrial Park Road  
Tamuning, Guam 96911  
Telephone: (671) 646-5447/1770

**GUATEMALA****Guatemala City**

Maquinaria y Equipos, S.A.  
P.O. Box 2304  
Guatemala City, Guatemala  
Location:  
Carretera Amatitlan  
Km 12 zona 12  
Telephone: (502-2) 773334/7/9

**GUINEA**

-See West/Northern Africa Regional  
Office - Mechelen

**GUINEA BISSAU**

-See West/Northern Africa Regional  
Office - Mechelen

**GUYANA****Miami (Office in U.S.A.)**

Cummins Southeastern Power, Inc.  
9900 N.W. 77 Court  
Hialeah Gardens, FL 33016  
Telephone: (305) 821-4200

**GUYANA, FRENCH****Miami (Office in U.S.A.)**

Cummins Southeastern Power, Inc.  
9900 N.W. 77 Court  
Hialeah Gardens, FL 33016  
Telephone: (305) 821-4200

**HAITI****Miami (Office in U.S.A.)**

Cummins Southeastern Power, Inc.  
9900 N.W. 77 Court  
Hialeah Gardens, FL 33016  
Telephone: (305) 821-4200

**HOLLAND**

-See Netherlands

**HONDURAS****Tegucigalpa**

Comercial Laeisz  
Honduras, S.A.  
P.O. Box 1022  
Tegucigalpa, D.C., Honduras

Location:  
Zona La Burrera,  
Blvd. Toncontin  
Frente a Gasolinera Esso.  
Telephone: (504) 333570, 331148,  
335615

**HONG KONG****Kowloon**

Cummins Diesel Sales & Service Ltd.  
G.P.O. Box 10004  
Hong Kong, B.C.C.

Location:  
Unison Industrial Centre  
15th Floor, Units C & D  
27-31 Au Pui Wan Street  
Fo Tan, Shatin  
Telephone: (852-0) 6065678

**HUNGARY****Vienna (Office in Austria)**

Cummins-Industriemotoren  
Ges. m.b.H.  
Bickfordstr. 25  
A-7201 Neudorf, Austria

**ICELAND****Reykjavik**

Bjorn & Halldor Ltd.  
P.O. Box 8560  
Sidumula 19  
128 Reykjavik, Iceland  
Telephone: (354-1) 36030, 36930

**INDIA****Pune**

Cummins Diesel Sales &  
Service (India) Ltd.  
35A/1/2, Erandawana  
Pune - 411 038, India  
Telephone: (91-212) 31234, 31534,  
31635, 30066,  
30166, 30356,  
31706

**INDONESIA****Jakarta**

P.T. Alitrak 1978  
P.O. Box 64/KBJL  
Jakarta Selatan 12330, Indonesia

Location:  
J1. R.S.C. Veteran No. 4  
Bintaro, Rempoa  
Telephone: (62-21) 773377, 773155,  
772401

**IRAN**

-See Middle East Regional  
Office - Mechelen

**IRAQ****Genk (Office in Belgium)**

Industrial Construction Consultancy,  
N.V.  
Essenlaan 5, Bus 4  
3600 Genk  
Belgium  
Telephone: (32-11) 38-48-32

**IRELAND****Wellingborough (Office in England)**

Cummins Diesel  
Denington Estate  
Wellingborough  
Northants NN8 2QH, England

**ISRAEL****Tel Aviv**

Israel Engines &  
Trailers Co. Ltd.  
Levinson Brothers Engineers  
P. O. Box 390  
Tel Aviv, Israel 61003

Location:  
33 Hahashmal Street  
Telephone: (972-3) 622671/2/3/4/5

**ITALY****Milan**

Cummins Diesel Italia S.p.A.  
Piazza Locatelli, 8 (gia' Via Basento)  
Zona Industriale  
20098 S. Giuliano  
Milanese (Milan), Italy  
Telephone: (39-2) 988-1235/6/7

**Rome**

O. ME. CO. S.p.A.  
Via Trionfale 12526  
00135 Roma, Italy  
Telephone: (39-6) 376-5152/5151/5702

**IVORY COAST**

-See Cote d' Ivoire

**JAMAICA****Miami (Office in U.S.A.)**

Cummins Southeastern Power, Inc.  
9900 N.W. 77 Court  
Hialeah Gardens, FL 33016  
Telephone: (305) 821-4200

**JAPAN****Tokyo**

Cummins Diesel (Japan) Ltd.  
1-12-10-Shintomi  
Chuo-ku, Tokyo 104  
Japan  
Telephone: (81-3) 555-8511

**JORDAN****Amman**

S.E.T.I. Jordan Limited  
P.O. Box 8053  
Amman, Jordan  
Telephone: (962-6) 621867

**KENYA**

**Nairobi**

Werrot & Company Limited  
P.O. Box 41216  
Nairobi, Kenya

Location:  
Lusaka Road  
Telephone: (254) 150-20316

**KOREA, SOUTH**

**Seoul**

Hwa Chang Trading Co., Ltd.  
Central P.O. Box No. 216  
Seoul, South Korea

Location:  
143-11 Doksan-Dong, Kuro-Ku  
Telephone: (82-2) 854-0071/2/3/4/5,  
869-1411/2/3

Repair Shop:  
336-6, Won-Doug, Osan-City  
Kyeonggi-Province, South Korea  
Telephone: (82-339) 73-0235/6/7/8,  
73-2146

**KUWAIT**

**Kuwait**

General Transportation &  
Equipment Co.  
(Sales Department)  
P.O. Box 1096  
13011 Safat, Kuwait

Location:  
Shuwaikh Behind  
Canada Dry Factory  
Telephone: (965) 4833380/81

**Kuwait**

General Transportation &  
Equipment Co.  
(Service Department)  
East Ahmadi Area  
13011 Safat, Kuwait  
Telephone: (965) 3981577

**LAOS**

-See South and East  
Asia Regional Office  
- Singapore

**LEBANON**

**Beirut**

S.E.T.I. Charles Keller  
S.A.L.  
IMM.B.P. 16-6726  
Beirut, Lebanon

Location:  
Corniche du Fleuve  
Telephone: (961-1) 425040/41, 426042

**LESOTHO**

-See East/South Africa Regional Office -  
Harare

**LIBERIA**

**Monrovia**

Electromotor, Inc.  
P.O. Box 573  
Monrovia, Liberia

Location 1:  
U.N. Drive, Bushrod Island, Waitown  
Telephone: (231) 22-19-50, 22-29-38

Location 2:  
Tubman Blvd. & 3rd St.  
Telephone: (231) 26-12-40, 26-12-41

**LIBYA**

**Valletta (Office in Malta)**

Plant and Equipment Ltd.  
Regency House  
254, Republic Street  
Valletta, Malta

**LIECHTENSTEIN**

-See Switzerland

**LUXEMBOURG**

**Brussels (Office in Belgium)**

Cummins Distributor Belgium S.A.  
623/629 Chausse de Haecht  
B-1030 Brussels, Belgium  
Telephone: (32-2) 216-81-10

**MACAU**

-See Hong Kong

**MADAGASCAR**

-See East and Southern  
Africa Regional Office -  
Harare

**MADEIRA ISLANDS**

-See Portugal

**MALAWI**

-See East and Southern  
Africa Regional Office -  
Harare

**MALAYSIA**

**Kuala Lumpur**

Cummins Diesel Sales & Service  
Div. of Scott & English  
(M) Sdn. Bhd.  
P.O. Box 10324  
50710 Kuala Lumpur, West Malaysia

Location:  
16 Jalan Chan Sow Lin  
55200 Kuala Lumpur, West Malaysia  
Telephone: (60-3) 2211033

**MALI**

-See West/Northern Africa Regional  
Office - Mechelen

**MALTA**

**Valletta**

Plant & Equipment Ltd.  
254, Republic Street  
Valletta, Malta  
Telephone: (356) 23-26-20, 23-33-43

**MARTINIQUE**

**Miami (Office in U.S.A.)**

Cummins Southeastern Power, Inc.  
9900 N.W. 77 Court  
Hialeah Gardens, FL 33016  
Telephone: (305) 821-4200

**MAURITANIA**

-See West/Northern Africa Regional  
Office - Mechelen

**MAURITIUS**

-See East/South Africa Regional  
Office - Harare

**MEXICO**

**Guadalajara**

Cummins de Occidente, S.A.  
Apartado Postal 1-1065  
44890 Guadalajara,  
Jalisco, Mexico

Location:  
Calz. Gonzalez Gallo No. 2213  
Col. El Rosario  
Telephone: (52-36) 39-3101, 39-3153

**Merida**

Cummins del Sureste, S.A. de C.V.  
Av. Aviacion 647  
Esquina Calle 100, Col. Sambula  
97000 Merida, Yucatan  
Mexico

**Mexico City**

Cummins de Mexico, S.A.  
Norte 35 No. 1015  
Col. Industrial Vallejo  
07700 Mexico 14, D.F., Mexico  
Telephone: (52-5) 567-37-00

**Monterrey**

Tecnica Automotriz, S.A.  
Ave. Universidad  
No. 3637 Nte.  
Monterrey, Nuevo Leon, Mexico  
Telephone: (52-83) 51-41-51, 51-46-56

**MOROCCO**

**Casablanca**

Societe Auto-Hall, S.A.  
44, Boulevard Lalla Yacout  
Casablanca, Morocco  
Telephone: (212) 31-84-60, 31-70-52,  
31-90-56, 31-70-44

**MOZAMBIQUE**

-See East and Southern  
Africa Regional Office -  
Harare

**NAMIBIA (Southwest Africa)**

**Windhoek**

Propower, Namibia  
P.O. Box 3637, Windhoek  
Namibia (Southwest Africa)  
Location: 7 Nasmyth Street  
Telephone: (264-61) 37693

**NEPAL****Pune (Office in India)**

Cummins Diesel Sales &  
Service (India) Ltd.  
35A/1/2, Erandawana  
Pune, - 411 038, India  
Telephone: 56096/7/8

**NETHERLANDS****Dordrecht**

Cummins Diesel Sales &  
Service, b.v.  
Galvanistraat 35  
3316 GH DORDRECHT  
Netherlands  
Telephone: (31-78) 18-12-00

**NETHERLANDS ANTILLES****Miami (Office in U.S.A.)**

Cummins Southeastern Power, Inc.  
9900 N.W. 77 Court  
Hialeah Gardens, FL 33016  
Telephone: (305) 821-4200

**NEW CALEDONIA**

-See South Pacific Regional  
Office - Melbourne

**NEW GUINEA**

-See Papua New Guinea

**NICARAGUA****Managua**

F. Alf. Pellas & Cia.  
6a. Calle N.O.,  
30 y 31 Aves. N.O., Zona 5  
Apartado Postal No. 46  
Managua, Nicaragua  
Telephone: (505-2) 660616

**NIGER****Niamey**

MECA Diesel  
B.P. 11279  
Niamey, Niger  
Telephone: (227) 73-41-90

**NIGERIA****Lagos**

SCOATRAC  
P.M.B. 21108  
Ikeja, Lagos  
Nigeria

**Location:**

Apapa-Oshodi Expressway  
Isolo Industrial Estate,  
Isolo

Telephone: (234-1) 52-16-83, 52-17-74,  
52-46-70, 52-18-03,  
52-36-08

**Paris (Office in France)**

SCOATRAC  
c/o SCOA  
9/11 rue Robert de Flers  
75740 Paris, Cedex 15  
France  
Telephone: (33-1) 40-58-48-48

**NORTHERN IRELAND**

-See United Kingdom

**NORWAY****Oslo**

Cummins Diesel Salg & Service A/S  
Verkseier Furulunds vei 11  
Boks 6288  
Etterstad 0603, Oslo 6  
Norway  
Telephone: (47-2) 326110

**OMAN****Ruwi**

Universal Engineering  
Services L.L.C.  
P.O. Box 5688  
Ruwi  
Sultanate of Oman  
Telephone: (968) 797589

**PAKISTAN****Karachi**

Primepower Diesels  
Sultan Centre - Ground Floor  
11 West Wharf Road  
Karachi 2, Pakistan  
Telephone: (92-21) 202733/4

**PANAMA****Panama City**

TRACTOMOVIL, S.A.  
Apartado Postal #9532  
Panama City 4, Panama  
Telephone: (507) 341111, 341868,  
341948

**PAPUA NEW GUINEA****Sydney (Office in Australia)**

Cummins Diesel Sales & Service  
P.O. Box 150  
Cabramatta, 2166  
New South Wales, Australia

**PARAGUAY****Asuncion**

Automotores y Maquinaria,  
S.R.L.  
Yegros y Fulgencio R. Moreno  
P.O. Box 1160  
Asuncion, Paraguay  
Telephone: (595-21) 93-111/15

**PERU****Lima**

Comercial Diesel  
del Peru S.A.  
P.O. Box 14-0234  
Lima, Peru

**Location:**

Ave. V.R. Haya  
de la Torre 2648  
Lima 3, Peru  
Telephone: (51-14) 32-9990, 31-5761,  
32-7639, 32-7518

**PHILIPPINES****Makati (Head Office)**

CDSS, Inc.  
P.O. Box 248  
Makati  
Philippines  
Location:  
6264 Estacion Street  
Makati, Metro Manila  
Telephone: (63-2) 85-81-56, 87-45-16/17,  
87-61-84, 87-61-23,  
87-59-01

**Mikati**

W & L Corporation  
Rm. 704, 7th Floor  
FNM Lopez Bldg.  
Legaspi cor Herrera Sts.  
Legaspi Village, Makati  
Metro Manila, Philippines  
Telephone: (63-2) 8163031/2

**Tondo**

Power Systems, Inc. (Navotas)  
1099 P.O. Box 3241  
Manila CPO  
Philippines

**Location:**

160 H Lopez Blvd., Balut  
Tondo, Manila  
Telephone: (63-2) 264561/2/3/4/5,  
208709

**POLAND**

-See W. Germany Regional Office -  
Gross-Gerau

**PORTUGAL****Lisbon**

Electro Central  
Vulcanizadora, Lda.  
P.O. Box 3077  
1302 Lisbon, Portugal  
Location:  
Rua Conselheiro  
Martins de Carvalho  
Lote 1480  
1400 Lisboa (Restelo)  
Telephone: (351-1) 615361

**QATAR****Doha**

Jaidah Motors & Trading Co.  
P.O. Box 150  
Doha, Qatar (Arabian Gulf)  
Telephone: (974) 426161 Sales  
(974) 810000 Spares &  
Service

**REUNION**

-See East/South Africa Regional  
Office - Harare

**RIO DE ORO**

-See Spain

**ROMANIA**

-See W. Germany Regional Office -  
Gross-Gerau

**RUSSIA**

-See U.S.S.R.

## **RWANDA**

### **Brussels (Office in Belgium)**

Bureau Technique Bia, S.A.  
Rameistraat, 123  
B-1900 - Overijse, Belgium  
Telephone: (32-2) 6892811

## **ST. LUCIA**

### **Miami (Office in U.S.A.)**

Cummins Southeastern Power, Inc.  
9900 N.W. 77 Court  
Hialeah Gardens, FL 33016  
Telephone: (305) 821-4200

## **ST. MARTIN, ISLAND OF**

-See Netherlands Antilles

## **ST. VINCENT**

### **Miami (Office in U.S.A.)**

Cummins Southeastern Power, Inc.  
9900 N.W. 77 Court  
Hialeah Gardens, FL 33016  
Telephone: (305) 821-4200

## **SAN MARINO**

-See Italy

## **SAO TOME AND PRINCIPE**

-See West/Northern Africa Regional  
Office - Mechelen

## **SAUDI ARABIA**

### **Dammam**

General Contracting Company  
P.O. Box 5111  
Dammam 31422, Saudi Arabia  
Telephone: (966-3) 842-1216

## **SCOTLAND**

-See United Kingdom

## **SENEGAL**

### **Dakar**

NOSOCO Dept. Matforce  
B.P. 341  
Dakar, Senegal  
Location:  
10 Avenue Faidherbe  
Telephone: (221) 22-18-35, 22-30-40

## **SEYCHELLES**

-See East/Southern Africa Regional Of-  
fice - Harare

## **SIERRA LEONE**

-See West/Northern Africa Regional  
Office - Mechelen

## **SINGAPORE**

### **Singapore**

Applied Diesel Sales & Service  
8 Tanjong Penjuru  
Jurong Industrial Estate  
Singapore 2260  
Telephone: (65) 261-3555

## **SOLOMON ISLANDS**

-See South Pacific Regional  
Office - Melbourne

## **SOMALIA**

-See East and Southern  
Africa Regional Office -  
Harare

## **SOUTH AFRICA**

### **Isando**

Propower Pty. Ltd.  
Cnr. Diesel and Industry Roads  
P.O. Box 12  
Isando 1600, Transvaal  
South Africa  
Telephone: (27-11) 974-2751

## **SOUTHWEST AFRICA**

-See Namibia

## **SPAIN**

### **Madrid**

Cummins Ventas y  
Servicio S.A.  
Torrelaguna, 56  
28027 Madrid, Spain  
Telephone: (34-91) 267-2000/2404

## **SPANISH GUINEA**

-See Spain

## **SRI LANKA**

### **Colombo**

Blackwood Hodge (Ceylon) Ltd.  
P.O. Box 27  
Moratuwa, Sri Lanka  
Location: (Service Department)  
653, Galle Road  
Laxapathiya  
Moratuwa, Sri Lanka  
Telephone: (94-1) 505354, 507330

## **SUDAN**

### **Khartoum**

Bittar Engineering Ltd.  
P.O. Box 1011  
Gamhuria Street  
Khartoum, Sudan  
Telephone: (249-11) 70952, 71245,  
70306

## **SURINAM**

### **Miami (Office in U.S.A.)**

Cummins Southeastern Power, Inc.  
9900 N.W. 77 Court  
Hialeah Gardens, FL 33016  
Telephone: (305) 821-4200

## **SWAZILAND**

-See South Africa

## **SWEDEN**

### **Stockholm**

SMA Maskin AB  
Aggelundavagen 25  
S-17562 Jarfalla  
Sweden  
Telephone: (46-8) 760-0080

## **SWITZERLAND**

### **Zurich**

Robert Aebi AG  
Baumaschinen und  
Spezialfahrzeuge  
Uraniastrasse 31/33  
8023 Zurich, Switzerland  
Telephone: (41-1) 211-0970

## **SYRIA**

### **Damascus**

Puzant Yacoubian & Sons  
P.O. Box 3617  
Damascus, Syria

Location:

Abou Baker El Saddik Street  
Kafar Sousse Square  
Telephone: (963-11) 231547/8/9

## **TAHITI, ISLAND OF**

-See French Polynesia

## **TAIWAN**

### **Taipei**

Cummins Corporation - Taiwan  
4th Floor  
238, Chungshan N Road  
Section 6  
Taipei, Taiwan  
Telephone: (886-2) 834-9168,  
836-6414/8143

## **TANZANIA**

### **Dar es Salaam**

Falcon Engineering Africa Ltd.  
P.O. Box 5272  
Dar es Salaam  
Tanzania  
Telephone: 23268

## **THAILAND**

### **Bangkok**

Diethelm & Company Ltd.  
280 New Road  
G.P.O. Box 14  
Bangkok 10100, Thailand  
Location:  
1696 New Petchburi Road  
Bangkok 10310  
Telephone: (66-2) 254-4900

## **TOGO**

### **Lome**

Togomat  
Zone Industrielle CNPPME  
B.P. 1641  
Lome, Togo  
Telephone: (228) 21-23-95

## **TONGA, ISLAND OF**

### **Nuku-Alofa**

Burns Philp  
(Tonga) Co. Ltd.  
P.O. Box 55  
Nuku-Alofa, Tonga  
Telephone: 21-500

**TRINIDAD and TOBAGO****Miami (Office in U.S.A.)**

Cummins Southeastern Power Inc.  
9900 N.W. 77 Court  
Hialeah Gardens, FL 33016  
Telephone: (305) 821-4200

**TUNISIA****Tunis**

Dalmas et Cie  
2 Rue de Thebes  
2014 Megrine Riadh  
Tunisia  
Telephone: (216-1) 49-55-99, 49-51-50,  
49-57-65, 49-52-29

**TURKEY****Istanbul**

Hamamcioglu Muesseseleri  
Ticaret T.A.S.  
P.K. 136  
80222 Sisli  
Istanbul, Turkey  
Location:  
Buyukdere Caddesi, 13/A  
P.O. Box 136  
80222 Sisli  
Istanbul, Turkey  
Telephone: (90-1) 131-3406

**UGANDA**

-See East and Southern  
Africa Regional Office -  
Harare

**UNITED ARAB EMIRATES****Abu Dhabi**

Darco Machinery  
P.O. Box 2263  
Abu Dhabi,  
United Arab Emirates  
Telephone: (971-2) 562712  
(Umm al Nar office  
and workshop)

**UNITED KINGDOM****Wellingborough**

Cummins Diesel  
Denington Estate  
Wellingborough  
Northants NN8 2QH, England  
Telephone: (44-933) 76231

**UPPER VOLTA**

-See Burkina - Taso

**URUGUAY****Montevideo**

Santaro S.A.  
P.O. Box 379  
Montevideo  
Uruguay  
Telephone: (598-2) 93908

**U.S.S.R.**

-See European Regional  
Office - Mechelen  
Contact address in Moscow:  
Cummins Engine Co.  
c/o Control Data Corporation  
Krasnopresnenskaya Nab. 12,  
Office 2006  
123100 Moscow  
U.S.S.R.  
Telephone: (7-095) 253-83-79

**VATICAN CITY**

-See Italy

**VENEZUELA****Caracas**

Sudimat  
Apartado Postal 1322  
Caracas 1010  
Venezuela  
Location:  
Final Avenida San Martin  
a 100 Metros de la Loteria de Caracas  
Urb. la Quebradita  
Telephone: (58-2) 442-6161/2647

**Caracas**

Equipos Diesel C.A.  
(EQUIDICA)  
Edif. Insenica, Calle 11-1  
La Urbina - Caracas  
Venezuela  
Telephone: (58-2) 241-7043/74

**Maracaibo**

Equipos y Servicios, C.A.  
(ESERCA)  
Apartado Postal No. 1484  
Maracaibo, Edo. Zulia, Venezuela  
Telephone: (58-61) 34-4858, 34-4376

**Valencia**

Dieselval, C.A.  
Avenida Lisandro Alvarado,  
La Florida  
Apartado Postal 3147  
Valencia - Edo. Carabobo, Venezuela  
Telephone: (58-41) 50-557/8

**VIETNAM**

-See South and East Asia  
Regional Office - Singapore

**WESTERN SAMOA****Apia**

Burns Philp  
(South Seas) Co. Ltd.  
P.O. Box 188  
Apia, Western Samoa  
Telephone: 20-800

**YEMEN, NORTH****Sana'a**

Zubieri Trading Co.  
P.O. Box 535  
Sana'a, Yemen Arab Republic  
Location:  
Zubieri Street  
Telephone: (967-2) 79336, 79149

**YEMEN, SOUTH**

-See Middle East Regional Office -  
Mechelen

**YUGOSLAVIA****Belgrade**

Univerzal Commercial  
Representations  
Auto Put Beograd - Zagreb 22  
11000 Beograd  
Yugoslavia  
Location:  
Majke Jevrosime 51  
Telephone: (38-11) 600-333

**ZAIRE****Brussels (Office in Belgium)**

Bureau Technique Bia, S.A.  
Rameistraat, 123  
B-1900 - Overijse, Belgium  
Telephone: (32-2) 689-28-11

**Kinshasa**

Bureau Technique Bia, S.P.R.L.  
B.P. 8843  
Kinshasa 1  
Zaire

Location:  
Avenue Bobozo  
(ex-Route des Poids Lourds)  
Kinshasa-Limete, Zaire  
Telephones: (243) 77797/8, 78427

**ZAMBIA****Ndola**

N.E.I. (Zambia) Ltd.  
P.O. Box 71501  
Ndola, Zambia  
Telephone: (260-2) 610729

**ZIMBABWE****Harare**

Cummins Zimbabwe (Pvt) Ltd.  
P.O. Box ST363  
Southerton  
Harare, Zimbabwe  
Telephones: (263-4) 67645, 69220



## Section C - Component Manufacturers

### Section Contents

	Page
<b>Component Manufacturers' Addresses</b> .....	C-2
Air Compressors .....	C-2
Air Cylinders .....	C-2
Air Heaters .....	C-2
Air Starting Motors .....	C-2
Alternators .....	C-2
Auxiliary Brakes .....	C-3
Belts .....	C-3
Clutches .....	C-3
Coolant Heaters .....	C-3
Drive Plates .....	C-3
Electric Starting Motors .....	C-3
Engine Protection Controls .....	C-4
Fan Clutches .....	C-4
Fans .....	C-4
Filters .....	C-5
Flexplates .....	C-5
Fuel Warmers .....	C-5
Gauges .....	C-5
Governors .....	C-5
Hydraulic and Power Steering Pumps .....	C-6
Oil Heaters .....	C-6
Torque Converters.....	C-6

## Component Manufacturers' Addresses

**NOTE:** The following list contains addresses and telephone numbers of suppliers of accessories used on Cummins engines. Suppliers may be contacted directly for any specifications **not** covered in this manual.

### Air Compressors

Bendix Heavy Vehicles Systems  
Div. of Allied Automotive  
901 Cleveland Street  
Elyria, OH 44036  
Telephone: (216) 329-9000

Midland-Grau  
Heavy Duty Systems  
Heavy Duty Group Headquarters  
10930 N. Pomona Avenue  
Kansas City, MO 64153  
Telephone: (816) 891-2470

### Air Cylinders

Bendix Ltd.  
Douglas Road  
Kingswood  
Bristol  
England  
Telephone: 0272-671881

Catching Engineering  
2101 Roberts Drive  
Broadview, IL 60153  
Telephone: (312) 344-2334

### Air Heaters

Fleetguard, Inc.  
Route 8  
Cookeville, TN 38501  
Telephone: (615) 526-9551

Kim Hotstart Co.  
West 917 Broadway  
Spokane, WA 99210  
Telephone: (509) 534-6171

### Air Starting Motors

Ingersoll Rand  
Chorley New Road  
Horwich  
Bolton  
Lancashire  
England  
BL6 6JN  
Telephone: 0204-65544

Ingersoll-Rand Engine  
Starting Systems  
888 Industrial Drive  
Elmhurst, IL 60126  
Telephone: (312) 530-3800

StartMaster  
Air Starting Systems  
A Division of Sycon Corporation  
P. O. Box 491  
Marion, OH 43302  
Telephone: (614) 382-5771

### Alternators

Robert Bosch Ltd.  
P.O. Box 98  
Broadwater Park  
North Orbital Road  
Denham  
Uxbridge  
Middlesex UD9 5HG  
England  
Telephone: 0895-833633

Butec Electrics  
Cleveland Road  
Leyland  
PR5 1XB  
England  
Telephone: 0744-21663

C.A.V. Electrical Equipment  
P.O. Box 36  
Warple Way  
London  
W3 7SS  
England  
Telephone: 01-743-3111

A.C. Delco Components Group  
Civic Offices  
Central Milton Keynes  
MK9 3EL  
England  
Telephone: 0908-66001

Delco-Remy  
P.O. Box 2439  
Anderson, IN 46018  
Telephone: (317) 646-7838

Leece-Neville Corp.  
1374 E. 51st St.  
Cleveland, OH 44013  
Telephone: (216) 431-0740

### Auxiliary Brakes

The Jacobs Manufacturing Company  
Vehicle Equipment Division  
22 East Dudley Town Road  
Bloomfield, CT 06002  
Telephone: (203) 243-1441

### Belts

Dayco Rubber U.K.  
Sheffield Street  
Stockport  
Cheshire  
SK4 1RV  
England  
Telephone: 061-432-5163

T.B.A. Ind. Products  
P.O. Box 77  
Wigan  
Lancashire  
WN2 4XQ  
England  
Telephone: 0942-59221

Dayco Corp.  
Belt Technical Center  
P.O. Box 3258  
Springfield, MO 65804  
Telephone: (417) 881-7440

Gates Rubber Company  
5610 Crawfordsville Road  
Suite 2002  
Speedway, IN 46224  
Telephone: (317) 248-0386

Goodyear Tire and  
Rubber Company  
49 South Franklin Road  
Indianapolis, IN 46219  
Telephone: (317) 898-4170

### Clutches

Twin Disc International S.A.  
Chaussee de Namur  
Nivelles  
Belguim  
Telephone: 067-224941

Twin Disc Clutch Co.  
Racine, WI 53403  
Telephone: (414) 634-1981

### Coolant Heaters

Fleetguard, Inc.  
Route 8  
Cookeville, TN 38501  
Telephone: (615) 526-9551

### Drive Plates

Detroit Diesel Allison  
Division of General Motors  
Corporation  
P.O. Box 894  
Indianapolis, IN 46206  
Telephone: (317) 244-1511

### Electric Starting Motors

Butec Electrics  
Cleveland Road  
Leyland  
PR5 1XB  
England  
Telephone: 0744-21663

C.A.V. Electrical Equipment  
P.O. Box 36  
Warple Way  
London  
W3 7SS  
England  
Telephone: 01-743-3111

A.C. Delco Components Group  
Civic Offices  
Central Milton Keynes  
MK9 3EL  
England  
Telephone: 0908-66001

Delco-Remy  
P.O. Box 2439  
Anderson, IN 46018  
Telephone: (317) 646-7838

Leece-Neville Corp.  
1374 E. 51st Street  
Cleveland, OH 44013  
Telephone: (216) 431-0740

Nippondenso Sales, Inc.  
24777 Denso Drive  
P.O. Box 5133  
Southfield, MI 48086-5133  
Telephone: (313) 350-7500

**Engine Protection Controls**

Teddington Industrial  
Equipment  
Windmill Road  
Sunburn on Thames  
Middlesex  
TW16 7HF  
England  
Telephone: 09327-85500

The Nason Company  
10388 Enterprise Drive  
Davisburg, MI 48019  
Telephone: (313) 625-5381

Robertshaw Controls Co.  
P.O. Box 400  
Knoxville, TN 37901  
Telephone: (615) 546-0550

Flight Systems  
Hempt Road Box 25  
Mechanicsburg, PA 17055  
Telephone: (717) 697-0333

**Fan Clutches**

Holset Engineering Co. Ltd.  
P.O. Box 9  
Turnbridge  
Huddersfield  
England  
Telephone: 0484-22244

Horton Industries, Inc.  
P.O. Box 9455  
Minneapolis, MN 55440  
Telephone: (612) 378-6410

Rockford Division  
Borg-Warner Corporation  
1200 Windsor Road  
P.O. Box 7007  
Rockford, IL 61125-7007  
Telephone: (815) 633-7460

Transportation Components Group  
Facet Enterprises, Inc.  
Elmira, NY 14903  
Telephone: (607) 737-8212

**Fans**

Truffo Ltd.  
Westwood Road  
Birmingham  
B6 7JF  
England  
Telephone: 021-557-4101

Hayes-Albion  
1999 Wildwood Avenue  
Jackson, MI 49202  
Telephone: (517) 782-9421

Engineering Cooling Systems  
201 W. Carmel Drive  
Carmel, IN 46032  
Telephone: (317) 846-3438

Brookside  
McCordsville, IN 46055  
Telephone: (317) 873-5093

Aerovent  
8777 Purdue Rd.  
Indianapolis, IN 46268  
Telephone: (317) 872-0030

Kysor  
1100 Wright Street  
Cadillac, MI 49601  
Telephone: (616) 775-4681

Schwitzer  
1125 Brookside Avenue  
P.O. Box 80-B  
Indianapolis, IN 46206  
Telephone: (317) 269-3100

**Filters**

Fleetguard International Corp.  
Cavalry Hill Industrial Park  
Weedon  
Northampton NN7 4TD  
England  
Telephone: 0327-41313

Fleetguard, Inc.  
Route 8  
Cookeville, TN 38501  
Telephone: (615) 526-9551

**Flexplates**

Corrugated Packing and  
Sheet Metal  
Hamsterley  
Newcastle Upon Tyne  
Telephone: 0207-560-505

Detroit Diesel Allison  
Division of General Motors  
Corporation  
P.O. Box 894  
Indianapolis, IN 46206  
Telephone: (317) 244-1511

Detroit Diesel Allison  
Division of General Motors  
36501 Van Born Road  
Romulus, MI 48174  
Telephone: (313) 595-5711

Midwest Mfg. Co.  
30161 Southfield Road  
Southfield, MI 48076  
Telephone: (313) 642-5355

**Fuel Warmers**

Fleetguard, Inc.  
Route 8  
Cookeville, TN 38501  
Telephone: (615) 526-9551

**Gauges**

A.I.S.  
Dyffon Industrial Estate  
Ystrad Mynach  
Hengoed  
Mid Glamorgan  
CF8 7XD  
England  
Telephone: 0443-812791

Grasslin U.K. Ltd.  
Vale Rise  
Tonbridge  
Kent  
TN9 1TB  
England  
Telephone: 0732-359888

Icknield Instruments Ltd.  
Jubilee Road  
Letchworth  
Herts  
England  
Telephone: 04626-5551

Superb Tool and Gauge Co.  
21 Princip Street  
Birmingham  
B4 61E

England  
Telephone: 021-359-4876  
Kabi Electrical and Plastics  
Cranborne Road  
Potters Bar  
Herts  
EN6 3JP  
England  
Telephone: 0707-53444

Datcon Instrument Co.  
P.O. Box 128  
East Petersburg, PA 17520  
Telephone: (717) 569-5713  
Rochester Gauge of Texas  
11637 Denton Drive  
Dallas, TX 75229  
Telephone: (214) 241-2161

**Governors**

Woodward Governors Ltd.  
P.O. Box 15  
663/664 Ajax Avenue  
Slough  
Bucks  
SL1 4DD  
England  
Telephone: 0753-26835

Woodward Governor Co.  
1000 E. Drake Road  
Fort Collins, CO 80522  
Telephone: (303) 482-5811

Barber Colman Co.  
1300 Rock Street  
Rockford, IL 61101  
Telephone: (815) 877-0241

United Technologies  
Diesel Systems  
1000 Jorie Blvd.  
Oak Brook, IL 60521  
Telephone: (312) 325-2020

**Hydraulic and Power Steering Pumps**

Hobourn Eaton Ltd.  
Priory Road  
Strood  
Rochester  
Kent  
ME2 2BD  
Telephone: 0634-71773

Honeywell Control Systems Ltd.  
Honeywell House  
Charles Square  
Bracknell  
Berks RG12 1EB  
Telephone: 0344-424555

Sundstrand Hydratec Ltd.  
Cheney Manor Trading Estate  
Swindon  
Wiltshire  
SN2 2PZ  
England  
Telephone: 0793-30101

Sperry Vickers  
1401 Crooks Road  
Troy, MI 48064  
Telephone: (313) 280-3000

Z.F.  
P.O. Box 1340  
Grafvonsoden Strasse  
5-9 D7070  
Schwaebisch Gmuend  
West Germany  
Telephone: 7070-7171-31510

**Oil Heaters**

Fleetguard, Inc.  
Route 8  
Cookeville, TN 38501  
Telephone: (615) 526-9551

Kim Hotstart Co.  
West 917 Broadway  
Spokane, WA 99210  
Telephone: (509) 534-6171

**Torque Converters**

Twin Disc International S.A.  
Chaussee de Namur  
Nivelles  
Belgium  
Telephone: 067-224941

Twin Disc Clutch Co.  
Racine, WI 53403  
Telephone: (414) 634-1981

Rockford Division  
Borg-Warner Corporation  
1200 Windsor Road  
P.O. Box 7007  
Rockford, IL 61125-7007  
Telephone: (815) 633-7460

Modine  
1500 DeKoven Avenue  
Racine, WI 53401  
Telephone: (414) 636-1640

**Section W - Warranty**  
**Section Contents**

	<b>Page</b>
<b>Generator Drive .....</b>	<b>W-2</b>
<b>International Industrial .....</b>	<b>W-9</b>
<b>Marine Propulsion Products - International .....</b>	<b>W-14</b>
<b>Marine Propulsion Products - U. S. and Canada .....</b>	<b>W-11</b>
<b>United States and Canada Industrial .....</b>	<b>W-6</b>



## Generator Drive

### Engines Warranted

This warranty applies to Engines sold by Cummins Engine Company and delivered to the first user on or after June 1, 1993 that are used in generator drive application anywhere in the world where Cummins-approved service is available. These Engines will have the following rating designations:

#### Standby Power Rating

Engines of this rating are applicable for supplying emergency power for the duration of the utility power outage. No overload capability is available for this rating. Under no condition is an Engine allowed to operate in parallel with the public utility at the Standby Power rating. This rating should be applied where reliable utility power is available. A standby rated engine is to be sized for a maximum of an 80 percent average load factor and 200 hours of operation per year. This includes less than 25 hours per year at the Standby Power rating. Standby rating should never be applied except in true emergency power outages. Negotiated power outages contracted with a utility company are not considered an emergency.

#### Unlimited Time Running Prime Power Rating

Engines with this rating are available for an unlimited number of hours per year in a variable load application. Variable load is not to exceed a 70 percent average of the Prime Power Rating during any operating period of 250 hours. Total operating time at 100 percent Prime Power shall not exceed 500 hours per year.

A 10 percent overload capability is available for a period of one hour within a twelve hour period of operation. Total operating time at the 10 percent overload power shall not exceed 25 hours per year.

#### Limited Time Running Prime Power Rating

Engines of this rating are available for a limited number of hours in a non-variable load application. It is intended for use in situations where power outages are contracted, such as in utility power curtailment. Engines may be operated in parallel to the public utility up to 750 hours per year at power levels never to exceed the Prime Power rating.

Limited Time Running Prime Power ratings differ from Unlimited Time Running in that even though the maximum power output of the engines are the same, the Limited Time Running allows the Engine to be parallel to Public Utility and run at the full Prime Power rating and must never exceed the Prime Power rating.

#### Continuous/Base Power Rating

Engines with this rating are available for supplying utility power at a constant 100 percent load for an unlimited number of hours per year. No overload capability is available for this rating.

Continuous/Base Power ratings differ from Unlimited Time Running Prime Power ratings in that the Continuous/Base Load ratings are significantly reduced from the Prime Power ratings. Continuous/Base Load ratings have no load factor or application restrictions.

### Coverage

#### Base Engine Warranty

This warranty covers any failures of the Engine, under normal use and service, which result from a defect in material or workmanship (Warrantable Failure).

Coverage begins with the sale of the Engine by Cummins and continues for the Duration stated below. The Duration commences either on the date of delivery of the Engine to the first user, or on the date the Engine is first leased, rented or loaned, or when the product has been ran for 50 hours, whichever of the three occurs first.

### Base Engine Warranty

Rating	Duration	
	Months or Hours of Operation Whichever Occurs First	
Standby Power	24	400
Unlimited Prime Power	12	Unlimited
Limited Prime Power	12	750
Continuous/Base Power	12	Unlimited

### Extended Major Components Warranty

The Extended Major Components Warranty applies to Engines other than B and C series and covers Warrantable Failures of the Engine cylinder block, camshaft, crankshaft and connecting rods (Covered Parts). Bushing and bearing failures are not covered. This coverage begins with the expiration of the Base Engine Warranty and continues for the Duration stated below. The Duration commences either on the date of delivery of the Engine to the first user, or on the date the Engine is first leased, rented or loaned, or when the product has been run for 50 hours, whichever of the three occurs first.

### Extended Major Components Warranty

Rating	Duration	
	Months or Hours of Operation Whichever Occurs First	
Standby Power	36	600
Unlimited Prime Power	36	10,000
Limited Prime Power	36	2,250
Continuous/Base Power	36	10,000

### Consumer Products

This warranty on Consumer Products in the United States is a LIMITED warranty. **CUMMINS IS NOT RESPONSIBLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES.** Any implied warranties applicable to Consumer Products terminate concurrently with the expiration of the express warranties applicable to such products. In the United States, some states do not allow the exclusion of incidental or consequential damages, or limitations on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you.

These warranties are made to all Owners in the chain of distribution, and coverage continues to all subsequent Owners until the end of the periods of coverage.

## Cummins Responsibilities

### During Base Engine Warranty

Cummins will pay for all parts and labor needed to repair the damage to the Engine resulting from a Warrantable Failure.

Cummins will pay for the lubricating oil, antifreeze, filter elements, belts, hoses and other maintenance items that are not reusable due to a Warrantable Failure.

Cummins will pay reasonable travel expenses for mechanics to and from the Engine site, including meals, mileage, and lodging when the repair is performed at the site of the failure.

Cummins will pay reasonable labor costs for Engine removal and reinstallation when necessary to make the warranty repair.

### During the Extended Major Components Warranty

Cummins will pay for the repair or, at its option, replacement of the defective Covered Part and any Covered Part damaged by a Warrantable Failure of the defective Covered Part.

## Owners Responsibilities

### During the Base Engine Warranty

Owner is responsible for the cost of lubricating oil, antifreeze, filter elements and other maintenance items provided during repairs unless such items are not reusable due to the Warrantable Failure.

### **During the Extended Major Components Warranty**

Owner is responsible for the cost of all labor needed to repair the Engine, including the labor cost for Engine removal and reinstallation. When Cummins elects to repair a part instead of replacing it, the Owner is not responsible for the labor needed to repair the part.

Owner is responsible for the cost of all parts required for the repair except for the defective Covered Part and any Covered Part damaged by a Warrantable Failure of the defective Covered Part.

Owner is responsible for the cost of lubricating oil, antifreeze, filter elements and other maintenance items replaced during repair of a Warrantable Failure.

### **During the Base Engine and Extended Major Components Warranties**

Owner is responsible for the operation and maintenance of the Engine as specified in the Cummins Operation and Maintenance Manuals. Owner is also responsible for providing proof that all recommended maintenance has been performed.

Before the expiration of the applicable warranty, Owner must notify a Cummins distributor, authorized dealer or other repair location approved by Cummins of any Warrantable Failure and make the Engine available for repair by such facility. Locations in the United States and Canada are listed in the Cummins United States and Canada Sales and Service Directory; other locations are listed in the Cummins International Sales and Service Directory.

Owner is responsible for communication expenses, meals, lodging and similar costs incurred as a result of a Warrantable Failure.

Owner is responsible for non-Engine repairs and for "downtime" expenses, fines, all applicable taxes, all business costs and other losses resulting from a Warrantable Failure.

Owner is responsible for providing sufficient access to and reasonable ability to remove the Engine from the installation in the event of a Warrantable Failure.

Owner is responsible for maintaining an operating Engine hourmeter. If the hourmeter is not operational, engine usage will be estimated at 400 hours per month.

### **Limitations**

Cummins is not responsible for failures or damage resulting from what Cummins determines to be abuse or neglect, including but not limited to: operation without adequate coolant or lubricant; overfueling; overspeeding; lack of maintenance of lubricating, cooling or intake systems; improper storage, starting, warm-up, run-in or shutdown practices. Cummins is also not responsible for Engine performance problems or failures caused by incorrect fuel, or by water, dirt or other contaminants in the fuel.

This warranty does not apply to accessories supplied by Cummins which bear the name of another company. This category includes, but is not limited to: alternators, starters, fans, air conditioning compressors, clutches, filters, transmissions, air cleaners and safety shutdown switches.

Before a claim for excessive oil consumption will be considered, Owner must submit adequate documentation to show that consumption exceeds Cummins published standards.

Failure of belts and hoses supplied by Cummins are not covered beyond the first 500 hours or one year of operation, whichever occurs first.

Parts used to repair a Warrantable Failure may be new Cummins parts, Cummins approved rebuilt parts, or repaired parts. Cummins is not responsible for failures resulting from the use of parts not approved by Cummins.

A new Cummins or Cummins-approved rebuilt part used to repair a Warrantable Failure assumes the identity of the part it replaced and is entitled to the remaining coverage hereunder.

Cummins is not responsible for Engine performance problems or failures resulting from:

1. Use or application of the Engine inconsistent with its rating designation as set forth above.
2. Inadequate or incorrect installations deviating from Cummins Generator Drive Installation Guidelines.

**CUMMINS IS NOT RESPONSIBLE FOR WEAR OR WEAROUT OF COVERED PARTS.**

**CUMMINS IS NOT RESPONSIBLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES.**

**THE WARRANTIES SET FORTH HEREIN ARE THE SOLE WARRANTIES MADE BY CUMMINS IN REGARD TO THESE ENGINES. CUMMINS MAKES NO OTHER WARRANTIES, EXPRESS OR IMPLIED, OR OF**

**MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE.**

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

In case of consumer sales, in some countries, the Owner has statutory rights which cannot be affected or limited by the terms of this warranty.

Nothing in this warranty excludes or restricts any contractual rights the owner may have against third parties.

## United States and Canada Industrial

### Coverage

#### PRODUCTS WARRANTED

This warranty applies to new Engines sold by Cummins Engine Company and delivered to the first user on or after February 1, 1993, that are used in off-highway applications in the United States\* and Canada, except for Engines used in marine, generator drive and certain defense applications, for which different warranty coverage is provided.

#### BASE ENGINE WARRANTY

This warranty covers any failures of the Engine, under normal use and service, which results from a defect in material or workmanship (Warrantable Failure).

Coverage begins with the sale of the Engine by Cummins. Coverage continues for two years or 2,000 hours of operation, whichever occurs first, from the date of delivery of the Engine to the first user, or from the date the unit is first leased, rented or loaned, or from the date the Engine reaches 50 hours of operation in demonstration use, whichever of the three occurs first. If the 2,000 hour limit is exceeded during the first year, coverage continues until the end of the first year.

#### EXTENDED MAJOR COMPONENTS WARRANTY

The Extended Major Components Warranty covers Warrantable Failures of the Engine cylinder block, camshaft, crankshaft and connecting rods (Covered Parts).

Bushing and bearing failures are not covered.

This coverage begins with the expiration of the Base Engine Warranty and ends after three years or 10,000 hours of operation, from the date of delivery of the Engine to the first user, or from the date the unit is first leased, rented or loaned, or from the date the Engine reaches 50 hours of operation in demonstration use, whichever of the three occurs first.

#### CONSUMER PRODUCTS

The warranty on Consumer Products in the United States is a LIMITED warranty. **CUMMINS IS NOT RESPONSIBLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES.** Any implied warranties applicable to Consumer Products in the United States terminate concurrently with the expiration of the express warranties applicable to such products. In the United States, some states do not allow the exclusion of incidental or consequential damages, or limitations on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you.

These warranties are made to all Owners in the chain of distribution, and coverage continues to all subsequent Owners until the end of the periods of coverage.

### Cummins Responsibilities

#### DURING THE BASE ENGINE WARRANTY

Cummins will pay for all parts and labor needed to repair the damage to the Engine resulting from a Warrantable Failure.

Cummins will pay for the lubricating oil, antifreeze, filter elements, belts, hoses and other maintenance items that are not reusable due to a Warrantable Failure.

Cummins will pay reasonable costs for mechanics to travel to and from the equipment site, including meals, mileage and lodging, when the repair is performed at the site of the failure.

Cummins will pay reasonable labor costs for Engine removal and reinstallation when necessary to repair a Warrantable Failure.

#### DURING THE EXTENDED MAJOR COMPONENTS WARRANTY

Cummins will pay for the repair or, at its option, replacement of the defective Covered Part and any Covered Part damaged by a Warrantable Failure of the defective Covered part.

## **Owners Responsibilities**

### **DURING THE BASE ENGINE WARRANTY**

Owner is responsible for the cost of lubricating oil, antifreeze, filter elements and other maintenance items provided during warranty repairs unless such items are not reusable due to the Warrantable Failure.

### **DURING THE EXTENDED MAJOR COMPONENTS WARRANTY**

Owner is responsible for the cost of all labor needed to repair the Engine, including the labor to remove and reinstall the Engine. When Cummins elects to repair a part instead of replacing it, Owner is not responsible for the labor needed to repair the part.

Owner is responsible for the cost of all parts required for the repair except for the defective Covered Part and any Covered Part damaged by a Warrantable Failure of the defective Covered Part.

Owner is responsible for the cost of lubricating oil, antifreeze, filter elements and other maintenance items replaced during repair of a Warrantable Failure.

### **DURING THE BASE ENGINE AND EXTENDED MAJOR COMPONENTS WARRANTIES**

Owner is responsible for the operation and maintenance of the Engine as specified in Cummins Operations and Maintenance Manuals. Owner is also responsible for providing proof that all recommended maintenance has been performed.

Before the expiration of the applicable warranty, Owner must notify a Cummins distributor, authorized dealer or other repair location approved by Cummins of any Warrantable Failure and make the product available for repair by such facility. Locations in the United States and Canada are listed in the Cummins Off Highway Authorized Dealer Directory.

Owner is responsible for communication expenses, meals, lodging and similar costs incurred as a result of a Warrantable Failure.

Owner is responsible for non-Engine repairs, "downtime" expenses, cargo damage, fines, all applicable taxes, all business costs and other losses resulting from a Warrantable Failure.

## **Limitations**

Cummins is not responsible for failures or damage resulting from what Cummins determines to be abuse or neglect, including, but not limited to: operation without adequate coolant or lubricants; overfueling; overspeeding; lack of maintenance of lubricating, cooling or intake systems; improper storage, starting, warm-up, run-in or shutdown practices; unauthorized modifications of the Engine. Cummins is also not responsible for failures caused by incorrect fuel or by water, dirt or other contaminants in the fuel.

For power units and fire pumps (package units), this warranty applies to accessories, except for clutches and filters, supplied by Cummins which bear the name of another company.

Except for power units and fire pumps, this warranty does not apply to accessories which bear the name of another company. This category includes, but is not limited to: alternators, starters, fans, air conditioning compressors, clutches, filters, transmissions, torque converters, steering pumps, and non-Cummins fan drives, engine compression brakes and air compressors.

Cummins Compusave units are covered by a separate warranty.

Before a claim for excessive oil consumption will be considered, Owner must submit adequate documentation to show that consumption exceeds Cummins published standards.

Failures of belts supplied by Cummins are not covered beyond the first 500 hours or one year of operation, whichever occurs first.

Parts used to repair a Warrantable Failure may be new Cummins parts, Cummins approved rebuilt parts, or repaired parts. Cummins is not responsible for failures resulting from the use of parts not approved by Cummins.

A new Cummins or Cummins-approved rebuilt part used to repair a Warrantable Failure assumes the identity of the part it replaced and is entitled to the remaining coverage hereunder.

**CUMMINS DOES NOT COVER WEAR OR WEAROUT OF COVERED PARTS.**

**CUMMINS IS NOT RESPONSIBLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES.**

**THESE WARRANTIES SET FORTH HEREINAFTER ARE THE SOLE WARRANTIES MADE BY CUMMINS IN REGARD TO THESE ENGINES. CUMMINS MAKES NO OTHER WARRANTIES, EXPRESS OR IMPLIED, OR OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE.**

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

\* United States includes American Samoa, the Commonwealth of Northern Mariana Islands, Guam, Puerto Rico and the U.S. Virgin Islands.

## **International Industrial**

### **Coverage**

#### **PRODUCTS WARRANTED**

This warranty applies to new Engines sold by Cummins Engine Company and delivered to the first user on or after February 1, 1993, that are used in off-highway applications anywhere in the world where Cummins-approved service is available, except the United States\* and Canada. Different warranty coverage is provided for Engines used in marine, generator drive and certain defense applications.

#### **BASE ENGINE WARRANTY**

This warranty covers any failures of the Engine, under normal use and service, which results from a defect in material or workmanship (Warrantable Failure).

Coverage begins with the sale of the Engine by Cummins. Coverage continues for two years or 2,000 hours of operation, whichever occurs first, from the date of delivery of the Engine to the first user, or from the date the unit is first leased, rented or loaned, or from the date the Engine reaches 50 hours of operation in demonstration use, whichever of the three occurs first. If the 2,000 hour limit is exceeded during the first year, coverage continues until the end of the first year.

#### **EXTENDED MAJOR COMPONENTS WARRANTY**

The Extended Major Components Warranty covers Warrantable Failures of the Engine cylinder block, camshaft, crankshaft and connecting rods (Covered Parts).

Bushing and bearing failures are not covered.

This coverage begins with the expiration of the Base Engine Warranty and ends after three years or 10,000 hours of operation, from the date of delivery of the Engine to the first user, or from the date the unit is first leased, rented or loaned, or from the date the Engine reaches 50 hours of operation in demonstration use, whichever of the three occurs first.

These warranties are made to all Owners in the chain of distribution, and coverage continues to all subsequent Owners until the end of the periods of coverage.

### **Cummins Responsibilities**

#### **DURING THE BASE ENGINE WARRANTY**

Cummins will pay for all parts and labor needed to repair the damage to the Engine resulting from a Warrantable Failure.

Cummins will pay for the lubricating oil, antifreeze, filter elements, belts, hoses and other maintenance items that are not reusable due to a Warrantable Failure.

Cummins will pay reasonable costs for mechanics to travel to and from the equipment site, including meals, mileage and lodging, when the repair is performed at the site of the failure.

Cummins will pay reasonable labor costs for Engine removal and reinstallation when necessary to repair a Warrantable Failure.

#### **DURING THE EXTENDED MAJOR COMPONENTS WARRANTY**

Cummins will pay for the repair or, at its option, replacement of the defective Covered Part and any Covered Part damaged by a Warrantable Failure of the defective Covered part.

### **Owners Responsibilities**

#### **DURING THE BASE ENGINE WARRANTY**

Owner is responsible for the cost of lubricating oil, antifreeze, filter elements and other maintenance items provided during warranty repairs unless such items are not reusable due to the Warrantable Failure.

#### **DURING THE EXTENDED MAJOR COMPONENTS WARRANTY**

Owner is responsible for the cost of all labor needed to repair the Engine, including the labor to remove and reinstall the Engine. When Cummins elects to repair a part instead of replacing it, Owner is not responsible for the labor needed to repair the part.

Owner is responsible for the cost of all parts required for the repair except for the defective Covered Part and any Covered Part damaged by a Warrantable Failure of the defective Covered Part.

Owner is responsible for the cost of lubricating oil, antifreeze, filter elements and other maintenance items replaced during repair of a Warrantable Failure.

## **DURING THE BASE ENGINE AND EXTENDED MAJOR COMPONENTS WARRANTIES**

Owner is responsible for the operation and maintenance of the Engine as specified in Cummins Operations and Maintenance Manuals. Owner is also responsible for providing proof that all recommended maintenance has been performed.

Before the expiration of the applicable warranty, Owner must notify a Cummins distributor, authorized dealer or other repair location approved by Cummins of any Warrantable Failure and make the product available for repair by such facility. Locations are listed in the Cummins International Sales and Service Directory.

Owner is responsible for communication expenses, meals, lodging and similar costs incurred as a result of a Warrantable Failure.

Owner is responsible for non-Engine repairs, "downtime" expenses, cargo damage, fines, all applicable taxes, all business costs and other losses resulting from a Warrantable Failure.

## **Limitations**

Cummins is not responsible for failures or damage resulting from what Cummins determines to be abuse or neglect, including, but not limited to: operation without adequate coolant or lubricants; overfueling; overspeeding; lack of maintenance of lubricating, cooling or intake systems; improper storage, starting, warm-up, run-in or shutdown practices; unauthorized modifications of the Engine. Cummins is also not responsible for failures caused by incorrect fuel or by water, dirt or other contaminants in the fuel.

With certain exceptions, this warranty does not apply to accessories supplied by Cummins which bear the name of another company. The exceptions to which this warranty does apply are:

1. Accessories, except for clutches and filters, supplied by Cummins as part of a fire pump or power unit (package units) are covered for the duration of Base Engine Warranty.
2. Starters, alternators, power steering pumps and non-Cummins air compressors supplied by Cummins on B or C Series Engines in applications other than fire pumps or power units are covered for six months.

Examples of accessories to which this warranty does not apply are: air conditioning compressors, clutches, air cleaners, fans, filters, transmissions and torque convertors.

Cummins Compusave units are covered by a separate warranty.

Before a claim for excessive oil consumption will be considered, Owner must submit adequate documentation to show that consumption exceeds Cummins published standards.

Failures of belts supplied by Cummins are not covered beyond the first 500 hours or one year of operation, whichever occurs first.

Parts used to repair a Warrantable Failure may be new Cummins parts, Cummins approved rebuilt parts, or repaired parts. Cummins is not responsible for failures resulting from the use of parts not approved by Cummins.

A new Cummins or Cummins-approved rebuilt part used to repair a Warrantable Failure assumes the identity of the part it replaced and is entitled to the remaining coverage hereunder.

**CUMMINS DOES NOT COVER WEAR OR WEAROUT OF COVERED PARTS.**

**CUMMINS IS NOT RESPONSIBLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES.**

**THESE WARRANTIES SET FORTH HEREINAFTER ARE THE SOLE WARRANTIES MADE BY CUMMINS IN REGARD TO THESE ENGINES. CUMMINS MAKES NO OTHER WARRANTIES, EXPRESS OR IMPLIED, OR OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE.**

In case of consumer sales, in some countries, the Owner has statutory rights which cannot be affected or limited by the terms of this warranty.

Nothing in this warranty excludes or restricts any contractual rights the Owner may have against third parties.

\* United States includes American Samoa, the Commonwealth of Northern Mariana Islands, Guam, Puerto Rico and the U.S. Virgin Islands.

## Marine Propulsion Products - U. S. and Canada

### Products Warranted

These warranties apply to Cummins Engine Company, Inc, hereinafter 'Cummins', Products used in marine propulsion applications in the United States\* and Canada and delivered to the first user on or after October 1, 1991. The 'Product' consists of a new Cummins engine and other accompanying new components. These Products have the following rating designations:

#### RECREATION/LIGHT DUTY COMMERCIAL RATING

Engines with this rating are intended for powering marine pleasure craft used for personal use only and for powering some marine commercial boats such as gillnetters, bowpickers, skiffs, oil skimmers, and small fishing craft.

This power rating is intended for use in variable load applications where full power is limited to one hour out of every eight hours of operation. Also, reduced power operations must be at or below 200 RPM of the the maximum rated RPM. This rating is an ISO 3046 Fuel Stop Power Rating and is for applications that operate less than 750 hours per year.

#### MEDIUM CONTINUOUS RATING

Engines with this rating are intended for powering commercial boats such as lobster boats, crew boats, party fishing boats, charter fishing boats, long range cruisers, harbor and coastal patrol boats, search and rescue boats, fire boats, bay shrimpers, clam boats, crab boats and seine skiffs.

This power rating is intended for continuous use in variable load applications where full power is limited to six hours out of every twelve hours of operation. Also, reduced power operations must be at or below 200 RPM of the maximum rated RPM. This is an ISO 3046 Fuel Stop Power Rating and is for applications that operate less than 3000 hours per year.

#### CONTINUOUS RATING

Engines with this rating are intended for powering commercial boats such as buoy tenders, research vessels, offshore supply boats, fishing trawlers, purse seiners, tugs, tow boats, and car/passenger ferries.

This power rating is intended for continuous use in applications requiring uninterrupted service at full power. This rating is the ISO 3046 Standard Power Rating and the SAE J1228 Continuous Crankshaft Power Rating.

### Coverage

#### Base Engine Warranty

The Base Engine Warranty covers any failures of the Product which result, under normal use and service, from defects in material or workmanship (Warrantable Failure). This coverage begins with the sale of the Product by Cummins and continues for the Duration stated below. The Duration commences either on the date of delivery of the Product to the first user, or on the date the unit is first leased, rented or loaned, or when the Product has been operated for 50 hours, whichever occurs first.

RATING	Duration Whichever Occurs First	
	Years	Hours
Recreational/Light Duty Commercial - <u>Personal Use</u>	1	Unlimited
Recreational/Light Duty Commercial - <u>Commercial Use</u>	1	750
Medium Continuous	1	3000
Continuous	1	Unlimited

#### Extended Major Components Warranty

The Extended Major Components Warranty applies to Engines other than A, B and C series and covers Warrantable Failures of the Engine cylinder block, camshafts, crankshaft and connecting rods (Covered Parts). Bushing and bearing failures are NOT covered. This coverage begins with the expiration of the Base Engine Warranty and ends three years or 10,800 hours of operation, whichever occurs first, after the Base Engine Warranty start date.

## Consumer Products

The warranty on Consumer Products in the United States is a LIMITED warranty. **CUMMINS IS NOT RESPONSIBLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES.** Any implied warranties applicable to Consumer Products terminates concurrently with the expiration of the express warranties applicable to such products. Some states do not allow the exclusion of incidental or consequential damages, or limitations or how long an implied warranty lasts, so the above limitations or exclusions may differ in certain areas of the United States.

These warranties are provided to all Owners until the end of the Duration stated above.

## Cummins Responsibilities

### During the Base Engine Warranty

Cummins will pay for all parts and labor needed to repair the damage to the Product resulting from a Warrantable Failure.

Cummins will pay for the lubricating oil, antifreeze, filter elements, belts, hoses, and other maintenance items that are not reusable due to the Warrantable Failure.

Cummins will pay reasonable labor costs for engine removal and reinstallation when necessary to make the warranty repair.

When it is necessary for mechanics to make on-site warranty repairs, Cummins will pay up to six hours total travel expenses for mechanics to and from the repair dock.

### During the Extended Major Components Warranty

Cummins will pay for the repair or, at its option, replacement of the defective Covered Part and of any Covered Part damaged by a Warrantable Failure of the defective Covered Part.

## Owner Responsibilities

### During the Base Engine Warranty

Owner is responsible for the cost of lubricating oil, antifreeze, filter elements and other maintenance items replaced during warranty repairs unless such items are not reusable due to the Warrantable Failure.

### During the Extended Major Components Warranty

Owner is responsible for the cost of all labor needed to repair the Product, including the labor to remove and reinstall the Product. When Cummins elects to repair a part instead of replacing it, Owner is not responsible for the labor needed to repair the part.

Owner is responsible for the cost of all parts required for the repair except for the defective Covered Part and any Covered Part damaged by a Warrantable Failure of the defective Covered Part.

Owner is responsible for the cost of lubricating oil, antifreeze, filter elements, and other maintenance items replaced during the repair.

### Additional Responsibilities During Both Warranties

Owner is responsible for the operation and maintenance of the Product as specified in the Cummins Operation and Maintenance Manuals. Owner is also responsible for providing proof that all recommended maintenance has been performed.

Before the expiration of the applicable warranty, Owner must notify a Cummins Distributor, authorized dealer or other location approved by Cummins of any Warrantable and make the product available for repair by such facility. Locations in the United States are listed in the Cummins U.S. and Canada Sales and Service Directory.

In the event of any Product failure, Owner is responsible for the cost of towing the boat to the repair dock and for all associated docking and harbor charges.

Owner is responsible for communication expenses, meals, lodging and similar costs incurred as a result of Warrantable Failure.

Owner is responsible for maintaining the engine hourmeter in good working order at all times and to ensure that the hourmeter accurately reflects the total hours of operation of the product.

Owner is responsible for costs to investigate complaints, unless the problem is caused by a defect in Cummins material or workmanship.

Owner is responsible for non-Engine repairs, "downtime" expenses, cargo damage, fines, all applicable taxes, all business costs and other losses resulting from a Warrantable Failure.

## Limitations

Cummins is not responsible for failures or damage resulting from what Cummins determines to be abuse or neglect, including but not limited to: operation without adequate coolant or lubricants; overfueling; overspeeding; lack of maintenance of lubricating, cooling or intake systems; improper storage, starting, warm-up, run-in, or shutdown practices; unauthorized modifications of the Engine. Cummins is also not responsible for failures caused by incorrect fuel, or by water, dirt, or other contaminants in the fuel.

Cummins is also not responsible for failures resulting from:

1. Use or application of the product inconsistent with its rating designation set forth above.
2. Incorrect installation

Before a claim for excessive oil consumption will be considered, Owner must submit adequate documentation to show that consumption exceeds Cummins published standards.

Failures of belts and hoses are covered only during the first 90 days of the warranty period.

Parts used to repair a Warrantable Failure may be new Cummins parts, Cummins approved rebuilt parts or repaired parts. Cummins is not responsible for failures resulting from the use of parts not approved by Cummins.

A new Cummins or Cummins-approved rebuilt part used to repair a Warrantable Failure assumes the identity of the part it replaced and is entitled to the remaining coverage hereunder.

**CUMMINS DOES NOT COVER WEAR OR WEAROUT OF COVERED PARTS.**

**CUMMINS IS NOT RESPONSIBLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES.**

**THE WARRANTIES SET FORTH HEREINAFTER ARE THE SOLE WARRANTIES MADE BY CUMMINS IN REGARD TO THESE PRODUCTS. CUMMINS MAKES NO OTHER WARRANTIES, EXPRESS OR IMPLIED, OR OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE.**

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

\*United States Includes American Samoa, Commonwealth of Northern Mariana Islands, Guam, Puerto Rico, and U. S. Virgin Islands.

## Marine Propulsion Products - International

### Products Warranted

These warranties apply to Cummins Engine Company, hereinafter 'Cummins', Products used in marine propulsion applications anywhere in the world except in the United States\* and Canada and delivered to the first user on or after October 1, 1991. The 'Product' consists of a new Cummins engine and other accompanying new Cummins components. These Products have the following rating designations:

#### RECREATION/LIGHT DUTY COMMERCIAL RATING

Engines with this rating are intended for powering marine pleasure craft used for personal use only and for powering some marine commercial boats.

This power rating is intended for use in variable load applications where full power is limited to one hour out of every eight hours of operation. Also, reduced power operations must be at or below 200 RPM of the maximum rated RPM. This rating is an ISO 3046 Fuel Stop Power Rating and is for applications that operate less than 750 hours per year.

#### MEDIUM CONTINUOUS RATING

This power rating is intended for continuous use in variable load applications where full power is limited to six hours out of every twelve hours of operation. Also, reduced power operations must be at or below 200 RPM of the maximum rated RPM. This is an ISO 3046 Fuel Stop Power Rating and is for applications that operate less than 3000 hours per year.

#### CONTINUOUS RATING

This power rating is intended for continuous use in applications requiring uninterrupted service at full power. This rating is the ISO 3046 Standard Power Rating and the SAE J1228 Continuous Crankshaft Power Rating.

### Coverage

#### Base Engine Warranty

The Base Engine Warranty covers any failures of the Product which result, under normal use and service, from a defect in material or workmanship (Warrantable Failure). This coverage begins with the sale of the Product by Cummins and continues for the Duration stated below. The Duration commences either on the date of delivery of the Product to the first user, or on the date the unit is first leased, rented or loaned, or when the Product has been operated for 50 hours, whichever occurs first.

RATING	Duration Whichever Occurs First	
	Years	Hours
Recreation/Light Duty Commercial - Personal Use	1	Unlimited
Recreation/Light Duty Commercial - Commercial Use	1	750
Medium Continuous	1	3000
Continuous	1	Unlimited

#### Extended Major Components Warranty

The Extended Major Components Warranty applies to Engines other than A, B and C series and covers Warrantable Failures of the Engine cylinder block, camshafts, crankshaft and connecting rods (Covered Parts). Bushing and bearing failures are NOT covered. This coverage begins with the expiration of the Base Engine Warranty and ends three years or 10,800 hours of operation, whichever occurs first, after the Base Engine Warranty start date.

These warranties are provided to all Owners until the end of the Duration stated above.

## **Cummins Responsibilities**

### **During the Base Engine Warranty**

Cummins will pay for all parts and labor needed to repair the damage to the Product resulting from a Warrantable Failure.

Cummins will pay for the lubricating oil, antifreeze, filter elements, belts, hoses and other maintenance items that are not reusable due to the Warrantable Failure.

Cummins will pay reasonable labor costs for engine removal and reinstallation when necessary to make the warranty repair.

When it is necessary for mechanics to make on-site warranty repairs, Cummins will pay up to six hours total travel expenses for mechanics to and from the repair dock.

### **During the Extended Major Components Warranty**

Cummins will pay for the repair or, at its option, replacement of the defective Covered Part and of any Covered Part damaged by a Warrantable Failure of the defective Covered Part.

## **Owner Responsibilities**

### **During the Base Engine Warranty**

Owner is responsible for the cost of lubricating oil, antifreeze, filter elements and other maintenance items replaced during warranty repairs unless such items are not reusable due to the Warrantable Failure.

### **During the Extended Major Components Warranty**

Owner is responsible for the cost of all labor needed to repair the Product, including the labor cost to remove and reinstall the Product. When Cummins elects to repair a part instead of replacing it, Owner is not responsible for the labor needed to repair the part.

Owner is responsible for the cost of all parts required for the repair except for the defective Covered Part and any Covered Part damaged by a Warrantable Failure of the defective Covered Part.

Owner is responsible for the cost of lubricating oil, antifreeze, filter elements, and other maintenance items replaced during the repair.

### **Additional Responsibilities During Both Warranties**

Owner is responsible for the operation and maintenance of the Product as specified in the Cummins Operation and Maintenance Manuals. Owner is also responsible for providing proof that all recommended maintenance has been performed.

Before the expiration of the applicable warranty, Owner must notify a Cummins Distributor, authorized dealer or other repair location approved by Cummins of any Warrantable Failure and make the Product available for repair by such facility. Locations are listed in the Cummins International Sales and Service Directory.

In the event of any Product failure, Owner is responsible for the cost of towing the boat to the repair dock and for all associated docking and harbor charges.

Owner is responsible for communication expenses, meals, lodging and similar costs incurred as a result of Warrantable Failure.

Owner is responsible for maintaining the engine hourmeter in good working order at all times and to ensure that the hourmeter accurately reflects the total hours of operation of the product.

Owner is responsible for costs to investigate complaints, unless the problem is caused by a defect in Cummins material or workmanship.

Owner is responsible for non-Engine repairs, "downtime" expenses, cargo damage, fines, all applicable taxes, all business costs and other losses resulting from a Warrantable Failure.

## **Limitations**

Cummins is not responsible for failures or damage resulting from what Cummins determines to be abuse or neglect, including, but not limited to: operation without adequate coolant or lubricants; overfueling; overspeeding; lack of maintenance of lubricating, cooling or intake systems; improper storage, starting, warm-up, run-in, or shutdown practices; unauthorized modifications of the Engine. Cummins is also not responsible for failures caused by incorrect fuel, or by water, dirt, or other contaminants in the fuel.

Cummins is also not responsible for failures resulting from:

1. Use or application of the product inconsistent with its rating designation set forth above.
2. Incorrect installation

Before a claim for excessive oil consumption will be considered, Owner must submit adequate documentation to show that consumption exceeds Cummins published standards.

Failures of belts and hoses are covered during the first 90 days of the warranty period.

Parts used to repair a Warrantable Failure may be new Cummins parts, Cummins approved rebuilt parts or repaired parts. Cummins is not responsible for failures resulting from the use of parts not approved by Cummins.

A new Cummins or Cummins-approved rebuilt part used to repair a Warrantable Failure assumes the identity of the part it replaced and is entitled to the remaining coverage hereunder.

**CUMMINS DOES NOT COVER WEAR OR WEAROUT OF COVERED PARTS.**

**CUMMINS IS NOT RESPONSIBLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES.**

**THE WARRANTIES SET FORTH HEREINAFTER ARE THE SOLE WARRANTIES MADE BY CUMMINS IN REGARD TO THESE PRODUCTS. CUMMINS MAKES NO OTHER WARRANTIES, EXPRESS OR IMPLIED, OR OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE.**

In case of consumer sales, in some countries, the Owner has statutory rights which cannot be affected or limited by the terms of this warranty.

Nothing in this warranty excludes or restricts any contractual rights the Owner may have against third parties.

\*United States includes American Samoa, Commonwealth of Northern Mariana Islands, Guam, Puerto Rico, and U. S. Virgin Islands.

**Section L - Service Literature**  
**Section Contents**

	Page
Publications Titles.....	L-2
Section Contents.....	L-1
Service Literature Ordering Location .....	L-4
Service Publications Order Form.....	L-5

## Publications Titles

The following publications can be purchased by filling in and mailing the Service Literature Order Form:

Bulletin No.	Title of Publication
3810304	KT/KTA38/KTA50 Shop Manual
3810432	K38/K50 Troubleshooting and Repair Manual
3379035	K19/K38/K50 Alternative Repair Manual
3810497	K38 and K50 Engine Series O & M Manual
3810458	KTA50-G3, KTA50-G4 and KTTA50-G2 Engine Service Bulletin
3810334	K38 Standard Repair Times
3810335	K50 Standard Repair Times
3810346	Low Power Electric Drive System Troubleshooting Manual
3810386	HT100 Turbocharger Shop Manual
3379231	Electronic Fuel Control Governor
3810349	Industrial Electronic Fuel Control
3379084	Fuel Pump Rebuild Manual
3379071	Injector Rebuild Manual
3810242	Single Cylinder Air Compressor Shop Manual
3810257	Two Cylinder Air Compressor Shop Manual
3379091	Turbochargers Rebuild Manual
3810243	HC-5A Turbocharger Shop Manual
3387082	K Temperature Sensing Fan Drive Operation and Installation (Recall Book)
	Fuel Pump PT (Type G) Calibration Values
3379068	1970-1975
3379182	1976-1982
3379352	1983-Present
	Engine Data Sheets/Performance Curves
3381194	Construction, Mining, Locomotive, and Agriculture
3381174	Generator Drive and Genset
3381237	Automotive

Bulletin No.	Title of Publication
Installation Recommendations Bulletin	
	Construction, Mining, Logging, and Agriculture
3382108	Air Intake System
3382118	Cold Weather Operation
3382643	Compressed Air System
3382171	Cooling System
3382362	Engine Mounting
3382138	Engine Performance
3382109	Exhaust System
3382409	Fuel System
3382113	Lubrication System
3382110	Noise Control
3382014	Power Trains
3382150	Service Accessibility
3382452	Starting & Electrical System
3382135	Torsional Vibration
K38 Parts Catalog	
3379518	KT/KTA38 Series KT-2300, L, P900 KTA-2300, P1200 KTA-2300, L, P1050
3379570	KT, KTA38-GS/GC
3379578	KT, KTA38 Generator Drive
3822102	KTTA38 Construction
3822115	KTTA38 Generator Drive
3884249	KT, KTA38 Construction
3884295	KTA38-G3 Generator Drive
3884296	KT, KTA38 Marine
K50 Parts Catalog	
3379592	KTA50 Generator Drive
3379595	KTA50 Marine
3822112	KTTA50 Construction
3884205	KTTA2000 Construction
3884255	KTA50 Construction
3884280	KTA50-G3/G4 Generator Drive
3884281	KTTA50 Generator Drive
3884306	KTA50 Low Mount Aftercooler, Construction
3884347	KTTA50 Side Mount Aftercooler, Construction
3884348	KTA50 Power Unit
3884355	KTTA50-G2 Generator Drive

## Service Literature Ordering Location

Region	Ordering Location
United States and Canada	Cummins Distributors or Cummins Engine Co., Inc. Publishing Services CMC 40924 Box 3005 Columbus, IN 47202-3005
U.K., Europe, Mid-East, Africa, and Eastern European Countries	Cummins Engine Co., Ltd. Royal Oak Way South Daventry Northants, NN11 5NU, England
South and Central America (excluding Brazil and Mexico)	Cummins Americas, Inc. 16085 N.W. 52nd Avenue Hialeah, FL 33104
Brazil and Mexico	Cummins Engine Co., Inc. International Parts Order Dept., MC 40931 Box 3005 Columbus, IN 47202-3005
Far East (excluding Australia and New Zealand)	Cummins Diesel Sales Corp. Literature Center 8 Tanjong Penjuru Jurong Industrial Estate Singapore
Australia and New Zealand	Cummins Diesel Australia Maroondah Highway, P.O.B. 139 Ringwood 3134 Victoria, Australia

Obtain current price information from your local Cummins Distributor or (for U.S.A.) by calling Cummins Toll Free Number 1-800-DIESELS (1-800-343-7357).

## Service Publications Order Form

Use this form for prompt handling of your literature order from the factory.

Item	Bulletin Number	Title of Publication	Quantity	U.S. Price Each	Amount
1				\$	\$
2					
3					
4					
5					
6					

☐ Payment Enclosed. Make certified check or money order payable to Cummins Engine Co.

☐ Please ship C.O.D. (U.S.A. only)

Prices subject to change without notice.

**Publications Total**

**Indiana Residents:**  
**Add 5% Sales Tax**

**Handling & Shipping Chg:**  
**No. Items X \$1.50 =**

**Order Total**

\$

Please Cut on Dotted Line

## Service Publications Order Form

Use this form for prompt handling of your literature order from the factory.

Item	Bulletin Number	Title of Publication	Quantity	U.S. Price Each	Amount
1				\$	\$
2					
3					
4					
5					
6					

☐ Payment Enclosed. Make certified check or money order payable to Cummins Engine Co.

☐ Please ship C.O.D. (U.S.A. only)

Prices subject to change without notice.

**Publications Total**

**Indiana Residents:**  
**Add 5% Sales Tax**

**Handling & Shipping Chg:**  
**No. Items X \$1.50 =**

**Order Total**

\$

For factory orders, mail the Service Publications Order Form along with your ship-to address to:  
Cummins Engine Co., Inc., Publishing Services (MC 41407)  
Box 3005, Columbus, IN 47202-3005.

**FROM:**

Name: \_\_\_\_\_  
Street Address: \_\_\_\_\_  
City: \_\_\_\_\_ State: \_\_\_\_\_ Zip Code: \_\_\_\_\_  
Country: \_\_\_\_\_

**SHIP TO: (Name and address where literature is to be shipped)**

Name: \_\_\_\_\_  
Street Address: \_\_\_\_\_  
City: \_\_\_\_\_ State: \_\_\_\_\_ Zip Code: \_\_\_\_\_  
Country: \_\_\_\_\_

Please cut on the dotted line

-----

For factory orders, mail the Service Publications Order Form along with your ship-to address to:  
Cummins Engine Co., Inc., Publishing Services (MC 41407)  
Box 3005, Columbus, IN 47202-3005.

**FROM:**

Name: \_\_\_\_\_  
Street Address: \_\_\_\_\_  
City: \_\_\_\_\_ State: \_\_\_\_\_ Zip Code: \_\_\_\_\_  
Country: \_\_\_\_\_

**SHIP TO: (Name and address where literature is to be shipped)**

Name: \_\_\_\_\_  
Street Address: \_\_\_\_\_  
City: \_\_\_\_\_ State: \_\_\_\_\_ Zip Code: \_\_\_\_\_  
Country: \_\_\_\_\_

<b>About the Manual</b> .....	i-2	<b>Coolant Level</b> .....	3-3
<b>Air Cleaner Element - Replacement</b> .....	4-3	Checking.....	3-3
Cartridge Type Element - Cleaning.....	4-5	<b>Coolant Recommendations/Specifications</b> .....	V-17
Dual - Heavy Duty Dry-Type Element - Replacement.....	4-4	Coolant Capacity Chart.....	V-21
Single - Heavy Duty Dry-Type Element - Replacement.....	4-3	Cooling System Maintenance.....	V-22
<b>Air Cleaner Pre-Cleaner and Dust Pan</b> .....	3-4	Cooling System Soluble Oils.....	V-18
Checking/Cleaning.....	3-4	Fleetguard® DCA4 Service Filters and Liquid Pre-Charge.....	V-20
<b>Air Compressor</b> .....	7-23	Heavy Duty Coolant.....	V-17
Air Compressor Discharge-Checking.....	7-23	Supplemental Coolant Additives (SCA's).....	V-19
Air Compressor Intake-Checking.....	7-24	<b>Coolant System Flow Diagrams</b> .....	D-11
Checking.....	7-23	Cooling System - Top Mounted Aftercooler.....	D-11
<b>Air Compressor Air Cleaner Element</b> .....	5-10	Cooling System Flow (LTA) - K2000, KTTA50-G2, KTA50-G3/G4.....	D-13
Bendix-Westinghouse Paper Element - Replacement.....	5-10	Cooling System Flow (LTA)-K2000, KTTA50-G2, KTA50-G3/G4.....	D-14
Bendix-Westinghouse Sponge Element - Replacement.....	5-10	Cooling System Flow (Outboard Aftercoolers).....	D-12
Cummins Two-Cylinder Only - Replacement.....	5-10	Thermostat Housing Flow.....	D-15
<b>Air Intake Hoses, Pipes, and Clamps</b> .....	4-6	<b>Cooling Fan</b> .....	5-11
Checking.....	4-6	Checking.....	5-11
<b>Air Intake System</b> .....	V-6	<b>Cooling System</b> .....	7-15
<b>Air Starting Motors</b> .....	A-2	Cleaning System and Changing Antifreeze.....	7-15
Maintenance.....	A-2	<b>Cooling System Additives</b> .....	5-6
<b>Air System Flow Diagrams</b> .....	D-16	Checking.....	5-6
Exhaust System - Center Mount Aftercooler.....	D-16	<b>Crankcase Breather Tube/Hose</b> .....	5-6
Exhaust System - KTTA Engines.....	D-17	Checking/Cleaning.....	5-6
Intake System - Center Mount Aftercooler.....	D-16	<b>Crankshaft End Clearance</b> .....	6-21
Intake System - KTTA Engines.....	D-17	Inspection.....	6-21
<b>Air Tanks</b> .....	4-6	<b>Definition of Terms</b> .....	i-9
<b>Alternator Belt</b> .....	A-3	<b>Dipstick</b> .....	A-10
Adjustment.....	A-3	Calibration.....	A-10
<b>Batteries</b> .....	6-22	<b>Distributors - International</b> .....	S-18
Checking.....	6-22	<b>Distributors and Branches - Australia</b> .....	S-13
<b>Battery Connections</b> .....	A-2	<b>Distributors and Branches - Canada</b> .....	S-12
<b>Belt Tension</b> .....	5-11	<b>Distributors and Branches - New Zealand</b> .....	S-14
Checking.....	5-11	<b>Distributors and Branches - United States</b> .....	S-5, S-6, S-7, S-8, S-9, S-10, S-11
<b>Belts</b> .....	5-11	<b>Division and Regional Offices</b> .....	S-4
Checking.....	5-11	<b>Drive Belt Tension</b> .....	V-27
<b>Capscrew Markings and Torque Values</b> .....	V-29	<b>Electrical System</b> .....	V-7
Capscrew Markings and Torque Values - U.S. Customary.....	V-29	<b>Emergency</b> .....	S-2
<b>Cold Start Aids</b> .....	6-23	<b>Engine Component Torque Value</b> .....	V-28
Checking.....	6-23	<b>Engine Diagram - KT38</b> .....	E-9
<b>Cold Weather Engine Operation</b> .....	1-5	Left Bank View.....	E-9
<b>Cold Weather Starting</b> .....	1-4	Rear and Front View.....	E-11
Using Starting Fluid With Mechanical or Electrical Metering Equipment.....	1-4	Right Bank View.....	E-8
Using Starting Fluid Without Metering Equipment.....	1-5	Top View.....	E-10
<b>Cold Weather Starting Aids</b> .....	1-6	<b>Engine Diagram - KTA38 Center Mount Aftercooler (K50 Similar)</b> .....	E-15
Electrically Operated Ether Valve.....	1-7	Rear and Front View.....	E-15
Ether Starting Aids.....	1-6	Top View.....	E-14
Installation Recommendations.....	1-7	<b>Engine Diagram - KTA38 Center Mount Aftercooler (KTA50 Similar)</b> .....	E-13
Manually Operated Ether Valve.....	1-7	Left Bank View.....	E-13
<b>Component Manufacturers' Addresses</b> .....	C-2	Right Bank View.....	E-12
Air Compressors.....	C-2	<b>Engine Diagram - KTA38 Outboard Aftercoolers (KTA50 Similar)</b> .....	E-21
Air Cylinders.....	C-2	Left Bank View.....	E-21
Air Heaters.....	C-2	Rear and Front View.....	E-23
Air Starting Motors.....	C-2	Right Bank View.....	E-20
Alternators.....	C-2	Top View.....	E-22
Auxiliary Brakes.....	C-2	<b>Engine Diagram - KTTA38 (KTTA50 Similar)</b> .....	E-17
Belts.....	C-2	Left Bank View.....	E-17
Clutches.....	C-2	Rear and Front View.....	E-19
Coolant Heaters.....	C-2	Right Bank View.....	E-16
Drive Plates.....	C-2	Top View.....	E-18
Electric Starting Motors.....	C-2	<b>Engine Identification</b> .....	E-2
Engine Protection Controls.....	C-3	Cummins Engine Nomenclature.....	E-2
Fan Clutches.....	C-3	Engine Dataplate.....	E-2
Fans.....	C-3	Fuel Pump Dataplate.....	E-2
Filters.....	C-3	<b>Engine Maintenance Schedule</b> .....	2-3
Flexplates.....	C-3	Page References for Maintenance Instructions.....	2-4
Fuel Warmers.....	C-3	<b>Engine Monitor System</b> .....	3-5
Gauges.....	C-3	Checking.....	3-5
Governors.....	C-3	<b>Engine Mounting Bolts and Nuts</b> .....	6-24
Hydraulic and Power Steering Pumps.....	C-3	Checking.....	6-24
Oil Heaters.....	C-4	<b>Engine Operating Range</b> .....	1-10
Torque Converters.....	C-4	<b>Engine Operation Report</b> .....	3-2
<b>Compressed Air System</b> .....	V-6		
<b>Compressor Air System Flow Diagram</b> .....	D-18		
<b>Coolant Filter</b> .....	5-8		
Replacement.....	5-8		

# Index

## Page X-2

<b>Engine Protection System</b> .....	7-29	<b>Fixed Mileage or Hours Oil Change Interval</b> .....	
Calibration.....	7-29	(All Applications) .....	V-17
General Information.....	6-23	New Engine Break-in Oils .....	V-9
<b>Engine Shut-down</b> .....	1-11	Oil Drain Interval Charts.....	V-14
<b>Engine Specifications</b> .....	V-2	Viscosity Recommendations .....	V-9
Cooling System .....	V-4	<b>Lubricating Oil System</b> .....	D-4
Engine Specifications - K38 and K50 .....	V-3	Front Gear Train.....	D-6
Fuel System.....	V-3	Full Flow Lubricating Oil Filter Head.....	D-8
General Specifications - K38.....	V-2	Piston Cooling, Connecting Rod, Overhead .....	D-5
General Specifications - K50.....	V-2	Rear Gear Train, Turbocharger .....	D-7
Lubricating Oil System.....	V-3	STC Lubricating Oil Flow (Advanced Timing).....	
<b>Engine Weight</b> .....	E-7	Hydromechanically Controlled.....	D-9
<b>Exhaust System</b> .....	V-6	STC Lubricating Oil Flow (Normal Timing) Hydromechanically Controlled.....	D-10
<b>Fan Belt</b> .....	A-4	<b>Marine Propulsion Products - International</b> .....	W-10
Adjustment.....	A-9	<b>Marine Propulsion Products - U. S. and Canada</b> .....	W-7
Checking .....	A-6	<b>Miscellaneous</b> .....	8-2
Installation .....	A-6	<b>Normal Starting Procedure (Above 0°C [32°F])</b> .....	1-2
Removal .....	A-4	<b>Oil Level</b> .....	3-3
<b>Fan Hub</b> .....	7-17	Checking.....	3-3
Inspection .....	7-17	<b>Operating the Engine</b> .....	1-9
<b>Fan Idler Pivot Arm</b> .....	6-20	<b>Power Takeoff Application with Variable Speed Controls</b> .....	1-11
<b>Fan Idler Pulley Assembly</b> .....	7-18	<b>Problem Solving</b> .....	S-3
Installation.....	7-18	<b>Procedures and Techniques</b> .....	T-2
Rebuild.....	7-18	<b>Publications Titles</b> .....	L-2
Rebuild/Replacement .....	7-18	<b>Raw Water Strainer</b> .....	3-4
<b>Fan Idler Pulley Tensioner Adjustment</b> .....	6-20	Cleaning.....	3-4
Engines With Control Rod Spring .....	6-21	<b>Regional Offices - International</b> .....	S-15 , S-16 , S-17
Engines With Shock Absorber .....	6-21	<b>Routine</b> .....	S-2
Engines With Solid Control Rod .....	6-20	<b>Section Contents</b> .....	L-1
<b>Front Engine Support</b> .....	6-24	<b>Service Literature Ordering Location</b> .....	L-4
<b>Fuel Control Valve - Single Bank</b> .....	1-13	<b>Service Publications Order Form</b> .....	L-5
<b>Fuel Filter(s)</b> .....	5-2	<b>Starting Procedure - After Extended Shutdown or Oil Change</b> .....	1-8
Replacement.....	5-2	<b>Steam Clean the Engine</b> .....	6-2
<b>Fuel Pump</b> .....	7-2	<b>Step Timing Control (STC)</b> .....	1-11
Calibration.....	7-4	<b>Storage for Engines Out of Service</b> .....	A-11
Checking.....	7-4	Long Term Storage.....	A-12
Installation.....	7-5	Short Term Storage .....	A-11
Removal.....	7-2	<b>Symbols</b> .....	i-3
<b>Fuel Recommendations/Specifications</b> .....	V-9	<b>Thermostats and Seals</b> .....	7-19
<b>Fuel System</b> .....	D-3	Replacement .....	7-19
<b>Fuel Systems Flow Diagram</b> .....	D-3	<b>Throttle Travel/Throttle Air Cylinder</b> .....	7-6
<b>Fuel-Water Separator</b> .....	3-2	Checking.....	7-6
<b>General Information</b> .....	1-2	Variable Speed (VS) Throttle Linkage Adjustment .....	7-6
<b>General Information</b> .....	4-2	<b>To the Owner and Operator</b> .....	i-2
<b>General Safety Instructions</b> .....	i-8	<b>Tool Requirements</b> .....	2-2
Important Safety Notice .....	i-8	<b>Troubleshooting Symptoms</b> .....	T-2
<b>General Specifications</b> .....	E-3	Coolant Temperature Above Normal.....	T-10 , T-11
Air Induction System.....	E-5	Coolant Temperature Below Normal.....	T-12
Cooling System.....	E-5	Engine Cranks But Will Not Start (No Smoke From Exhaust)....	T-6
Electrical System .....	E-6	Engine Hard to Start or Will Not Start (Exhaust Smoke Present) .....	T-5
Exhaust System.....	E-6	Engine Power Output Low.....	T-14 , T-15
Fuel System.....	E-6	Engine Starts But Will Not Keep Running.....	T-7
Lubricating Oil System.....	E-5	Engine Will Not Crank or Cranks Slowly (Air Starter).....	T-3
<b>Heat Exchanger Zinc Plugs (Marine Only)</b> .....	6-21	Engine Will Not Crank or Cranks Slowly (Electric Starter).....	T-4
Checking .....	6-21	Engine Will Not Reach Rated Speed When Loaded .....	T-16
<b>Hoses</b> .....	6-20	Engine Will Not Shut Off .....	T-8
Checking/Replacement.....	6-20	Exhaust Smoke Excessive Under Load .....	T-13
<b>How to Use the Manual</b> .....	i-2	Lubricating Oil Pressure Low.....	T-9
<b>Illustrations</b> .....	i-7	White Smoke or Rough Running At Idle (After Warmup Period) .....	T-17
<b>Injectors</b> .....	7-9	<b>Turbocharger</b> .....	7-21
Calibration.....	7-12	Inspection.....	7-21
Checking .....	7-11	<b>United States and Canada Industrial</b> .....	W-2
Installation.....	7-12	<b>Unusual Engine Noise</b> .....	3-2
Removal.....	7-9	Checking.....	3-2
<b>Inlet Air Restriction Indicators</b> .....	4-2	<b>Valves and Injectors</b> .....	6-2
Mechanical Indicator .....	4-2	General Information - Checking and Adjustment.....	6-2
Vacuum Indicator .....	4-2	PT (type D) Injector and Valve Set Procedures .....	6-4
<b>International Industrial</b> .....	W-5	STC or HVT OBC Valve and Injector Set Procedure .....	6-12
<b>Literature Survey Form</b> .....	2	<b>Vibration Damper</b> .....	7-28
<b>Lubricating Oil and Oil Filter</b> .....	5-3	Checking.....	7-28
Changing/Replacement.....	5-3	Damper Leakage Detection .....	7-29
<b>Lubricating Oil Flow Diagrams</b> .....	D-4	Thickness Measurement.....	7-28
<b>Lubricating Oil Recommendations/Specifications</b> .....	V-9		
Arctic Operation.....	V-9		
Chart Method .....	V-11		

<b>Water Pump .....</b>	<b>7-19</b>
<b>Rebuild/Replacement .....</b>	<b>7-19</b>

## NOTES

## NOTES

## NOTES




NO POSTAGE  
NECESSARY  
IF MAILED  
IN THE  
UNITED STATES

**BUSINESS REPLY MAIL**

FIRST CLASS PERMIT NO. 15, COLUMBUS INDIANA

—POSTAGE WILL BE PAID BY ADDRESSEE—

CUMMINS ENGINE COMPANY, INC.  
MAIL CODE 41403  
BOX 3005  
COLUMBUS, IN 47202-9982

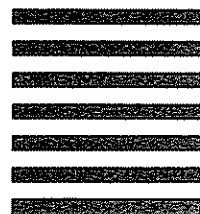

**I am interested in the following Customized Assurance Plans:**

- ☐ **Custom Registry**
- ☐ **Extended Coverage**
- ☐ **Please forward the specified plans information**
- ☐ **Have your representative contact me**

### **CUSTOMIZED ASSURANCE PROGRAMS (CAP)**

Name \_\_\_\_\_

Title \_\_\_\_\_

Company \_\_\_\_\_

Address \_\_\_\_\_

City \_\_\_\_\_

State/Province \_\_\_\_\_ Zip/PC \_\_\_\_\_

\* CAP programs available in U.S. and Canada markets only.



NO POSTAGE  
NECESSARY  
IF MAILED  
IN THE  
UNITED STATES

# BUSINESS REPLY MAIL

FIRST CLASS PERMIT NO. 15, COLUMBUS INDIANA

—POSTAGE WILL BE PAID BY ADDRESSEE—

CUMMINS ENGINE COMPANY, INC.  
MAIL CODE 41312  
BOX 3005  
COLUMBUS, IN 47202-3005



# Literature Survey Form

Bulletin No. 3810497-02

We are always open to any suggestions or recommendations that will aid in improving our manuals. Use this postage paid survey form to evaluate this manual. Please check the appropriate response and use the space provided below to list any additional comments:

	Yes	No
Is the needed information easy to locate in the manual?	_____	_____
Is the information easy to read?	_____	_____
Is the information easy to understand?	_____	_____
Does the information sufficiently cover the subject?	_____	_____
Are subjects in the index specific enough to locate in the manual?	_____	_____
Are the important points sufficiently emphasized?	_____	_____
Are the illustrations easy to understand?	_____	_____
Does the text support the operation being illustrated?	_____	_____
Do you use the Table of Contents?	_____	_____
Do you use the Index?	_____	_____

Please comment on any response(s) marked "No" in this survey. \_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

Other comments that you feel would help improve the manual. \_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

Name: \_\_\_\_\_

Company: \_\_\_\_\_

Address: City \_\_\_\_\_ State \_\_\_\_\_ Country \_\_\_\_\_ Zip Code \_\_\_\_\_