



**REMOTE
COMMUNICATION
SYSTEM
VERSION 3.0
USER MANUAL**

Copyright © 1999 by Thomson Technology

PM055 REV 2 00/08/31

SECTION 1 COMMUNICATION INTERFACE MODULE (CIM)

VERSION 3.0 1

1. INTRODUCTION 1

2. GENERAL DESCRIPTION 2

3. HARDWARE INTERFACE 3

4. TELEPHONE PORT 1 6

5. PORT 2A/B 6

6. PORT 3A/B 7

7. CIM OPERATION FUNCTIONS 7

8. CIM BLOCK DIAGRAM 8

9. CIM SPECIFICATIONS 8

10. CIM INSTALLATION 9

 10.1. BATTERY SUPPLY INPUT 9

 10.2. REMOTE COMMUNICATION WIRING 10

 10.3. DIELECTRIC TESTING 10

 10.4. MOUNTING LOCATION/INSTALLATION 10

 10.5. MOUNTING DIMENSIONS 10

 10.6. RS-232 AND RS-485/422 WIRING 11

11. TROUBLESHOOTING 13

 11.1. DATABASE RE-INITIALIZATION 15

SECTION 2 THS 2000 SOFTWARE PROGRAM 16

1. INTRODUCTION 16

 1.1. DEFINITIONS 16

1.2. IMPROVEMENTS..... 17

1.3. COMPUTER SYSTEM REQUIREMENTS 17

1.4. INSTALLATION 18

2. QUICK START 18

2.1. STEP 1 START THS 2000..... 18

2.2. STEP 2: LOGON 18

2.3. STEP 3: SET HOST CONNECTION METHOD..... 19

2.4. STEP 4: ENTER SITE PROPERTIES 20

2.5. STEP 5: CONNECT TO SITE 20

2.6. STEP 6: IDENTIFY CONTROLLERS 21

2.7. STEP 7: VIEW CONTROLLER DATA 21

2.8. STEP 8: ISSUE CONTROLLER COMMANDS 21

2.9. STEP 9: SAVE/RESTORE SITE-LIST INFORMATION 22

3. CONFIGURATION..... 22

3.1. PASSWORDS 22

3.2. SITE-LIST MANAGEMENT 23

3.3. SITE CONFIGURATION..... 24

3.4. COMMUNICATIONS INTERFACE MODULE SETTINGS..... 27

3.5. CONTROLLER CONFIGURATION..... 35

3.6. AUTO-ANSWER CONFIGURATION..... 38

4. OPERATION..... 38

4.1. BASICS 38

4.2. CONNECTING SITES..... 41

4.3. VIEWING AND COMMANDING CONTROLLERS 42

4.4. PRINTING 44

4.5. AUTO-ANSWER OPERATION..... 44

5. CIM BYPASS WIRING 45

6. TROUBLESHOOTING 47

SECTION 3 CIM PROTOCOL..... 48

1. INTRODUCTION 48

2. PHYSICAL LAYER..... 48

3. DATALINK LAYER 49

4. PRESET MULTIPLE REGISTERS (TYPE 16)..... 50

 4.1. PRESET MULTIPLE REGISTERS RESPONSE..... 51

 4.2. EXAMPLE: REMOTE KEY PRESS OPERATION 51

5. READ HOLDING REGISTERS (TYPE 3)..... 52

 5.1. READ HOLDING REGISTERS REQUEST 52

 5.2. READ HOLDING REGISTERS RESPONSE 52

 5.3. EXAMPLE: READ REGISTERS 200 TO 201 52

6. APPLICATION LAYER 53

7. DATA TYPES AND FORMATS..... 54

8. CIM PORT CONFIGURATION 54

9. CIM GENERAL CONFIGURATION 55

10. CIM PASSWORDS 56

11. CIM LOGIN 56

12. CIM ABOUT 56

13. CIM RTU LIST..... 57

14. CIM CALLOUT..... 58

15. MEC 20 REGISTER TABLES..... 59

16. MEC 20 MESSAGES (VERSION 1.0) 61

16.1. MEC 20 PRESS KEY 61

16.2. MEC 20 VALID DATA/DISPLAY 62

16.3. MEC 20 GET VERSION..... 62

16.4. MEC 20 GET SUMMARY 63

16.5. MEC 20 ANALOG VALUES 64

16.6. MEC 20 DISPLAY DETAILS..... 66

16.7. MEC 20 FAULT DETAILS 66

17. TSC 800 REGISTER TABLES 67

18. TSC 800 MESSAGES (VERSION 1.0) 67

18.1. TSC 800 PRESS KEY 68

18.2. TSC 800 VALID DATA/DISPLAY 68

18.3. TSC 800 GET VERSION 68

18.4. TSC 800 GET SUMMARY..... 69

18.5. TSC 800 GET ANALOG VALUES..... 72

18.6. TSC 800 DISPLAY DETAILS 73

19. CRC CALCULATION..... 74

20. NOTES:..... 75

SECTION 1

COMMUNICATION INTERFACE MODULE (CIM)

VERSION 3.0


1. Introduction

This section is intended version 3.0 of the Communication Interface Module (CIM). For **other product versions, contact Thomson Technology, Inc. to obtain applicable instruction manuals.**

The Thomson Technology (TTI) remote communication system with the CIM 3.0 and Modbus™ protocol provides remote monitoring and control of TTI microprocessor-based controllers as used in the power generation industry. The system consists of 2 main components as follows:

- Communication Interface Module (CIM): The CIM provides the hardware and software interface between a Modbus compliant device (customer supplied) and the specific microprocessor-based controllers as used at a generator site.
- Remote Terminal Unit (RTU): An RTU is a device that directly operates the equipment at a generator site. These devices are the actual microprocessor-based controllers as developed by Thomson Technology, Inc. (e.g. MEC 20 engine controller or TSC 800 transfer switch controller).

The following diagram depicts a typical remote communication system.

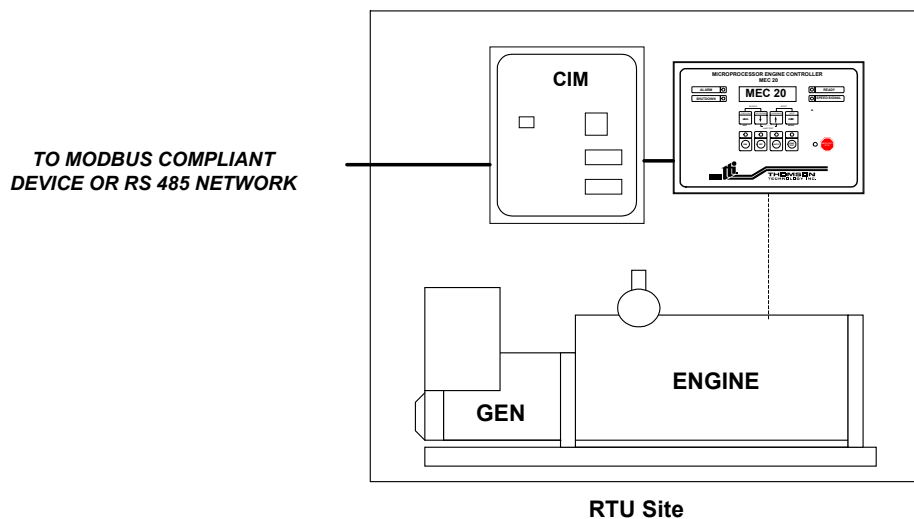

G:\ENGINEER\PRODUCTS\ICSHOST.VSD

Some advanced features of the remote communication system with the CIM 3.0 module and Modbus™ protocol are as follows:

- One CIM module can control and monitor up to 10 RTUs at a generator site using a single direct serial/phone link.
- Configuration of all communication system setpoints is done using software.
- CIM Port #2 can be configured for RS-232, RS-422 or RS-485 serial communication types. RS-485 communication allows multiple CIM's to be interconnected to any Modbus™ RS-485 network. RS-485 is recommended for the best distance and noise immunity. Port #2 has a hardware protocol auto-detection option that removes the confusion of determining whether the port is in RS-232 or RS-485 mode. Just plug in and communicate (assuming the baud rate etc. is set correctly).
- Security features have been implemented to allow password protection. However these features along with auto-detection and modem functionality can be bypassed with a "fixed Modbus" option that is intended for direct PLC function where remote access is not necessary.
- With onboard modem support, CIM 3.0 offers remote telephone connectivity with auto callout and pager support with up to 32 characters. Up to 3 phone numbers can be programmed into the CIM for remote THS connection or pager notification. In the case of a failed connection, retries can be specified.

Further information on the Modbus™ protocol support on the CIM can be found in SECTION 3 and at the Modicon website (www.modicon.com).

NOTE: Throughout this document, CIM's, MEC 20's and TSC 800's are generically referred to as remotes.

2. General Description


The Communication Interface Module (CIM) is an advanced communication interface device for remote communication to Thomson Technology's latest generation of Microprocessor-based engine generator and transfer switch control products. One CIM module can communicate with networked MEC 20 engine generator controllers or TSC 800 transfer controllers. The serial communication ports can be used for direct connection to a personal computer (port #2) or to other remote connected devices (port #3). An internal modem is available with the CIM, which provides direct connection to a telephone system.

The CIM provides the following advanced features:

- Dedicated Microprocessor-based design provides fast operation without restricting RTU operation.
- One CIM module can provide interface to a complete networked RTU system. This leads to a single telephone line connection per site rather than typical multiple line solutions.
- Internal 14.4 kbaud modem available for direct connection to telephone system.
- Flexible design provides two fully configurable serial ports.
- Standard plug-in telephone RJ45/RJ11 type jacks and DB9 computer ports provide simple interconnection to system.
- The ability to callout to a THS host station or pager when an RTU fault occurs frees the user from continual monitoring. It also allows for immediate remote response to problems.

3. Hardware Interface

The main features of the CIM are described as follows with reference to the following figure.

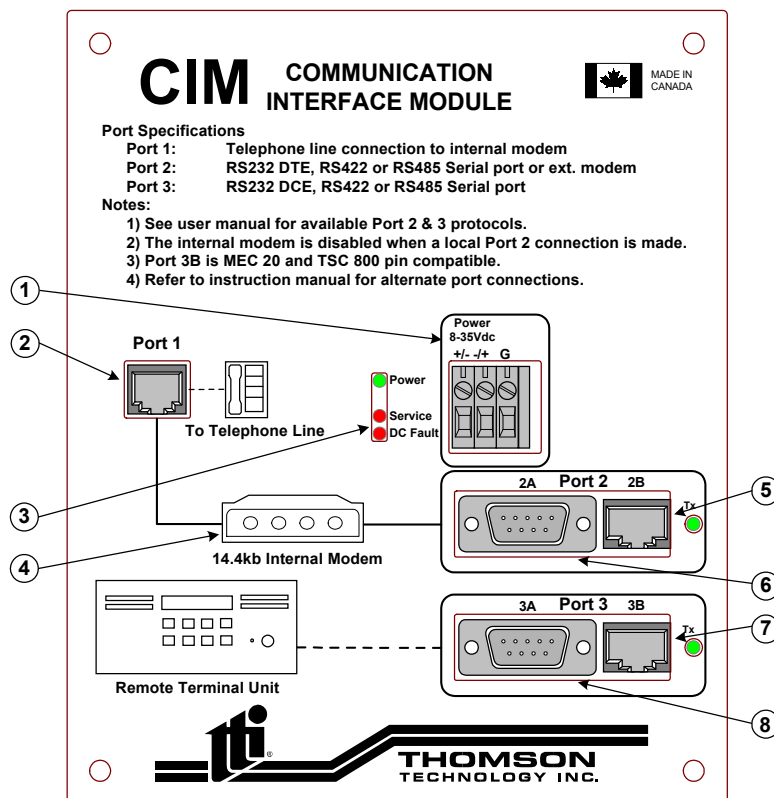

- 3.1.** DC Power Input: Terminals are provided for DC power input to the CIM module. Power input is non-polarity sensitive and can range from 8-35Vdc.
- 3.2.** Telephone Port: The telephone port is used to interconnect to a telephone system. This port is internally connected to a 14.4 Kbaud modem. This port uses a 6 pin RJ11 plug-in jack connection.
- 3.3.** Diagnostic LEDs: The CIM module provides four diagnostics LED lights are described as follows:
- Power: This LED is illuminated whenever the CIM has correct DC supply voltage applied.
 - Service: This LED illuminates when the CIM has an internal fault in which the unit must require service.
 - DC Fault: This LED is illuminated whenever the CIM's internal power supply has shutdown do an internal fault or an external overvoltage condition from the DC supply input. To reset a DC fault, the DC supply voltage must be removed for 30 seconds, then re-applied.
- 3.4.** Internal Modem: The CIM is provided with an internal 14.4 Kbaud modem. The modem is internally connected between the telephone port and port 2A/B.
- 3.5.** Port 2B: Port 2B may be interconnected to a remote terminal unit (RTU) or Personal computer (PC). Port 2B can be configured to RS-232 or RS-485/-422 type transmission signal. When a personal computer is connected to Port 2B, a null modem cable or connector must be used. When the CIM modules' internal modem is used, port 2B is disabled. This port uses an 8 pin RJ45 plug-in connector. An LED indicator is provided to signal when the port is communicating. Port 2B is internally wired in parallel with Port 2A.
- 3.6.** Port 2A: Port 2A may be interconnected to a remote terminal unit (RTU) or PC. Port 2A can be configured to RS-232 or RS-485/-422 type transmission signal. When a personal computer is connected to Port 2A, a null modem cable or connector must be used in series with the PC cable. When the CIM modules' internal modem is used, port 2A is disabled. This port uses a 9 pin standard DB9 female plug-in connector.

An LED indicator is provided to signal when the port is Transmitting. Port 2A is internally wired in parallel with Port 2B.

- 3.7.** Port 3B: This port may be interconnected to a remote terminal unit (RTU). Port 3B utilizes a RS-422 type transmission signal that is compatible with MEC 20 or TSC 800 controllers. The standard connection for a MEC 20 or TSC 800 controller (RTU) application is for port 3B to be connected to the RTU. This port uses an 8 pin RJ45 plug-in connector and allows for a direct connection to TTI MEC 20 and/or TSC 800 controllers. Port 3B is internally wired in parallel with Port 3A.
- 3.8.** Port 3A. This port may be interconnected to a remote terminal unit (RTU) or directly to a PC. Port 3A utilizes a RS-422 type transmission signal that is compatible with MEC 20 or TSC 800 controllers. The standard connection for a MEC 20 or TSC 800 controller (RTU) application is for port 3A to be connected to the RTU. This port uses a 9 pin DB9 female connector. Port 3A is internally wired in parallel with Port 3B.

NOTE: CIM Port 2 cannot be used concurrently with the modem (CIM Port 1). An RS-232 or RS-422 cable can be connected to the CIM, but cannot be active if the modem is to be used. An RS-485 connection will effectively disable the modem whether it is active or inactive.

4. Telephone Port 1

Detail pin numbers and usage designations for the telephone port are as follows:

| Signal Type - Telephone | Direction | Port 1A RJ11 # |
|-------------------------|---------------|----------------|
| No Connection | No Connection | 1 |
| No Connection | No Connection | 2 |
| TIP | Input/output | 3 |
| Ring | Input/output | 4 |
| No Connection | No Connection | 5 |
| No Connection | No Connection | 6 |

5. Port 2A/B

Detail pin numbers and usage designations for Port number 2A/B are as follows:

| RS-485 half-duplex (Pending) | RS-422 full-duplex (Pending) | RS-232 (DTE) | Direction | RJ45 # | DB9 # |
|---------------------------------|---------------------------------|-----------------|-----------|--------|-------|
| Sa' | Rxa | CD | Input | 1 | 1 |
| Sb' | Rxb | Rx | Input | 2 | 2 |
| Sb | Txb | Tx | Output | 3 | 3 |
| Sa | Txa | DTR | Output | 4 | 4 |
| Ground | Ground | GND | Passive | 5 | 5 |
| NC | NC | DSR | Input | 6 | 6 |
| NC | NC | RTS | Output | 7 | 7 |
| NC | NC | CTS | Input | 8 | 8 |
| | | RI | n/c | n/a | 9 |

6. Port 3A/B

Detail pin numbers and usage designations for Port number 3A/B are as follows:

| RS-485 half-duplex (Pending) | RS-422 full-duplex (Pending) | RS-232 (DCE) | Direction | RJ45 # | DB9 # |
|---------------------------------|---------------------------------|-----------------|-----------|--------|-------|
| Sa | Txa | CD | Output | 1 | 1 |
| Sb | Txb | Tx | Output | 2 | 2 |
| Sb' | Rxb | Rx | Input | 3 | 3 |
| Sa' | Rxa | DSR | Input | 4 | 4 |
| Ground | Ground | GND | Passive | 5 | 5 |
| NC | NC | DTR | Output | 6 | 6 |
| NC | NC | CTS | Input | 7 | 7 |
| NC | NC | RTS | Output | 8 | 8 |
| | | RI | n/c | n/a | 9 |

7. CIM Operation Functions

The CIM module provides the following main functions when used in a communication system:


RTU & Modbus™ Device Interface: The CIM is the main communication interface component between a Modbus™ compliant device and the remote terminal units. The CIM provides the necessary hardware interface (i.e. COM Ports) as well as the Modbus™ software protocol interface.

Protocol Data Processing: The CIM receives incoming communication signals from various types of RTUs and processes the data into the specific Modbus™ language as required for the application. The processed data then gets transferred to the applicable port and transmitted to a remote Modbus™ compliant device.

CIM Configuration: The CIM stores vital information in non-volatile FLASH memory pertaining to a specific RTU site as defined by the user. Stored information includes, site name, site passwords, and auto callout phone numbers (3).

RTU Polling: The CIM module will automatically poll connected RTUs to determine their operating status and to signal an auto callout (callout is only operational when the modem feature is operational) to the remote Modbus™ compliant device to alert a user of an abnormal condition.

8. CIM Block Diagram

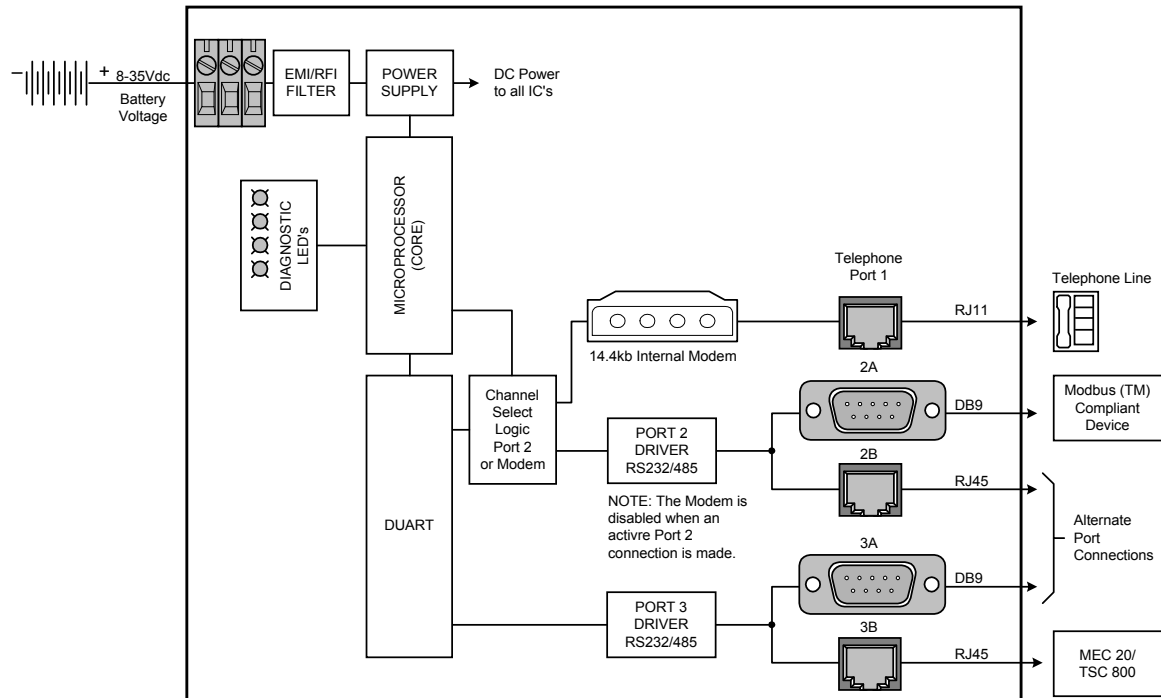

G:/R&D/PRODUCTS/ICS/DESIGN/CIM/1029012.VSD Rev. 0 99-08-26

9. CIM Specifications

- Power supply: 8 to 35Vdc, negative ground
- Power consumption: 5 watts (max.)
- Operating temperature: -15(C to +50(C
- Storage temperature: -40(C to +85(C
- Environmental: NEMA 1
- Vibration: 1g, 5-250Hz
- Humidity: 5 to 95% non-condensing
- Dimensions: 150mm W x 180mm H x 50mm D
- Internal Modem 14.4 kbaud, Hayes™ AT set compatible
- Communication Ports Hardware Port 1 Telephone T/R Port 2 RS-232/-422/-485 asynch., 1200-19200 baud Port 3 RS-422, asynchronous 4800 baud
- Communication Ports Software Protocol Port 1 Telephone Port 2 Modbus™ Protocol Port 3 TTI T-Net Protocol

Specifications subject to change without notice.

10. CIM Installation

NOTE: Installations should be done according to all applicable electrical regulation codes as required.

The following installation guidelines are provided for general information only pertaining to typical site installations. For specific site installation information, consult Thomson Technology as required.

CAUTION!!! Qualified personnel must do all installation and/or service work performed only. Failure to do so may cause personal injury or death.

10.1. Battery Supply Input

The CIM can operate on any battery supply from 8 to 35 volts DC nominal. Wiring from the system battery to the CIM should conform to the following guidelines to avoid possible communication module malfunction and/or damage.

Avoid wiring from the engine starter terminals - wiring should go directly from the battery terminals to the control panel where the CIM module is located (to avoid voltage drop in the starter cables and starter motor commutation noise).

CAUTION!!! The battery charger must be turned off before battery cables are removed from the battery (i.e. for servicing). Failure to do so may subject the control panel to an overvoltage condition in which damage may result.

Under noisy environments (i.e. gas engines with high voltage ignitions, etc.), wiring from battery should be a twisted pair of #14 AWG (2.5mm²) wires.

The use of AC or DC operated solenoids or relays in control systems can sometimes cause high voltage spikes on the DC power supply, which may cause electronic devices to fail. Transient suppression devices are recommended for all inductive devices sharing wiring or if physically located near the CIM module. For DC operated relays or solenoids, use a suitably rated counter EMF Diode (or commonly known as "freewheeling" diode). For AC operated relays or solenoids, use a suitably rated metal oxide varistor (MOV) or capacitor/resistor suppressor.

10.2. Remote Communication Wiring

All communication interconnecting wiring to/from the CIM Module shall utilize #22 AWG-8 wire, twisted, shielded cable with RJ45 connectors.

All remote communication wiring outside the control panel must be run in separate conduit and shall not be located near AC power cables to prevent pick-up of induced voltages.

10.3. Dielectric Testing

Do not perform any high voltage dielectric testing on the CIM connected in the circuit as serious damage will occur to the module.


10.4. Mounting Location/Installation

The CIM Module is designed for mounting directly onto a control panel inner sub-panel. Considerations should be given for the following:

The controller should be installed in a dirt free, dry location away from extreme heat sources. Adequate space should be provided around the CIM module for control wiring.

10.5. Mounting Dimensions

The CIM mounting dimensions are shown in the following diagram:

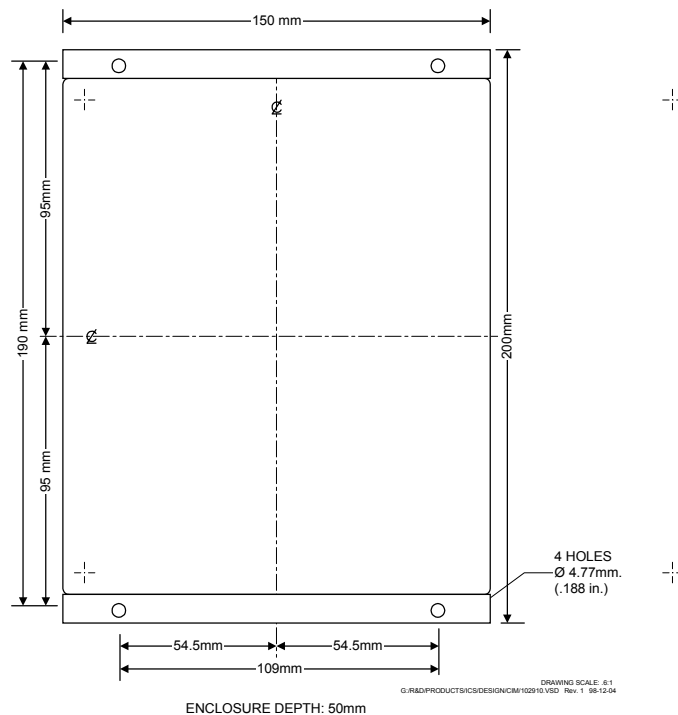

10.6. RS-232 and RS-485/422 Wiring

This section describes the cabling necessary to connect a host PC to a CIM using RS-232 and to connect to an RS-485 or RS-422 network

10.6.1. Host PC Connection

The host PC connection to the CIM requires a null-modem adapter, as both devices believe they are DTE.

10.6.1.1. Host PC DB-25 To CIM DB-9

| DTE | DB-25 | DB-9 | CIM |
|----------|-------|------|---------|
| GND | 1 | n/c | GND |
| TXD | 2 | 2 | RXD |
| RXD | 3 | 3 | TXD |
| RTS | 4 | 8 | CTS |
| CTS | 5 | 7 | RTS |
| DSR, DCD | 6,8 | 4 | DTR |
| SG | 7 | 5 | SG |
| DTR | 20 | 6,1 | DSR,DCD |

10.6.1.2. Host PC DB-9 To CIM DB-9

| DTE | DB-9 | DB-9 | CIM |
|----------|------|------|---------|
| TXD | 3 | 2 | RXD |
| RXD | 2 | 3 | TXD |
| RTS | 4,7 | 8 | CTS |
| CTS | 8 | 7 | RTS |
| DSR, DCD | 1,6 | 4 | DTR |
| SG | 5 | 5 | SG |
| DTR | 4 | 6,1 | DSR,DCD |

10.6.2. RS-485/-422 Connection

The following hardware configuration is required for 4 wire RS-485/-422 from the port 2 on the CIM to an RS-232 port on a computer:

The following parts are connected in order from the RS-232 side (computer) to the RS-485/-422 side (the CIM).

RS-232 to RS-485 or RS-422 adapter (set to DCE)

DB-25 to RJ45 adapter (or custom cable) for RS-422/-485 on the CIM port 2(see below wiring).

Insure that the correct handshaking signals are connected on the RS-232 side of the RS-485/-422 converter. Many RS-485 converters use the RTS line to control the transmitter (which must be tri-stated during receive mode). It is important to insure that the converter is configured correctly and the correct handshaking lines are wiring appropriately. If the handshaking lines (RTS) are not wired correctly the connection may appear to work but damage may occur and communications may be unreliable over time.

| DB-25 from RS-422 converter | | CIM Port 2 | |
|-----------------------------|-----|------------|--------|
| Signal | Pin | Pin | Signal |
| TXB+ | 14 | 1 | RXB+ |
| TXA- | 2 | 2 | RXA- |
| RXA- | 5 | 3 | TXA- |
| RXB+ | 17 | 4 | TXB+ |
| GND (optional) | 7 | 5 | GND |

| DB-25 from RS-485 converter | | CIM Port 2 | |
|-----------------------------|-------|------------|-----------------------|
| Signal | Pin | Pin | Signal |
| TXB+, RXB+ (jumpered) | 14,17 | 1,4 | RXB+,TXB+ (jumpered) |
| TXA-, RXA- (jumpered) | 2,5 | 2,3 | RXA-, TXA- (jumpered) |
| GND (optional) | 7 | 5 | GND |

- Note that the RS-232 side of the RS-485 converter will most likely require the RTS line be connected along with TX, RX and GND.

11. Troubleshooting

Refer to the following list of typical problems. Consult the factory for any detailed information or for any problems not listed.

CAUTION!!! Before opening the enclosure to perform any service task, it is imperative to isolate the control system from any possible source of power. Failure to do so may result in serious personal injury or death due to electrical shock.

Service procedures must be undertaken by qualified personnel only!

| SYMPTOM | CORRECTIVE ACTION |
|--|---|
| CIM does not power up even with correct DC power applied | Check that there are no wiring errors/short circuits connected to the CIM. Note: The CIM Module contains an electronic fuse that triggers upon an overload or overvoltage condition and does not reset until the supply voltage is removed. |
| Failure to communicate with PC (direct connected). | <p>Verify all communication cables are connected to the correct ports.</p> <p>Ensure that the RTU's (TSC 800 and MEC 20) are connected to Port 3 on the CIM.</p> <p>Ensure the correct MEC 20 communication port (J7) is utilized. Port J7 is white in color. The black RJ45 connector on the MEC</p> |

| | |
|--|--|
| | <p>20 is for the expansion port, damage may occur to the CIM if this port is connected! When direct connection is used from port 2A to a PC, ensure a null modem cable or connector is used. (see Host PC Connection).</p> <p>Verify all settings in the THS 2000 program are correct. Critical settings are as follows:</p> <p>Port 3 baud rate--4800</p> <p>Controller address--THS setting and controller setting must match</p> <p>Site Name--THS setting and CIM setting must match. Note: factory default setting in CIM is "site"</p> <p>Site Password--THS setting and CIM setting must match. Note: factory defeat setting in CIM is "user".</p> <p>If multiple MEC 20 controllers are connected to a single system, verify all controller node addresses are different.</p> <p>RTU site may be busy calling out if an alarm condition is present on the controller. Reset all fault conditions at the controller and set for automatic mode to cancel the auto call out condition.</p> |
| <p>Failure to communicate with PC (Modem connected).</p> | <p>Verify PC modem operates correctly (test independently with another software system).</p> <p>Verify PC modem is set for 9600 baud operation.</p> <p>Ensure phone numbers programmed for both PC site location and RTU equipment location are correct.</p> |
| <p>Failure to communicate with PC.</p> | <p>If you encounter difficulty connecting to a CIM with the Host software make sure the CIM is not trying to call-out. When the CIM is trying to call-out to the Host sites it will not respond to outside requests for connection. In this situation the user can be patient and make repeated attempts at connection until the CIM has exhausted its phone numbers and retries (can be over 12 mins in some cases with 3 numbers and 3 retries). Or the user can let the host successfully call-out to the Host software. After the phone numbers are successfully attempted or retries are exhausted the CIM will go back into a log-in ready state. If time is important, the CIM may be power cycled, for a brief time after the CIM power is restored (after the 2 quick blinks on the Port 2 LED) the CIM will be log-in ready. However the CIM will eventually go into a call-out state to report the site alarm situation.</p> <p>The above situation is the most common cause for not being</p> |

| | |
|---|---|
| | able to establish a connection to the CIM. For testing and configuration it is recommended that the call-out function be disabled until it is required, this will eliminate the frustration described above. |
| Site RTU fails to auto callout to PC. | Verify the connected controller is programmed for the specific auto callout function (i.e. common alarm, common shutdown or common fail) Verify the Host software is in auto-answer mode, see THS2000 User Manual, Auto-answer Configuration . |
| Port configuration changes do not work. | The CIM port configuration changes will not go into effect until the CIM has been power cycled. For Modbus communications ensure that the CIM is being addressed with the correct node address. The factory default CIM node address is '1', this should not be confused with the RTU node addresses connected to Port 3 of the CIM. |

11.1. Database Re-initialization

If state of the internal database is unknown a reset to factory default conditions can be done by the following procedure:

- a) Remove power from the CIM.
- b) Remove the CIM back cover.
- c) Connect a wire from the CIM ground terminal located next to the power connections.
- d) Connect the other end of the ground wire to the testpoint located on the bottom of the daughter board (the daughter board is plugged into the bottom of the CIM motherboard) located on the bottom of the CIM that should be visible with the bottom cover removed.
- e) With the bottom testpoint grounded carefully apply power to the CIM for at least 2 seconds. You may now remove power and reassemble the CIM. The CIM has defaulted back to factory settings.

SECTION 2

THS 2000 SOFTWARE PROGRAM

1. Introduction

The THS 2000 software program remotely controls and monitors a Thomson Technology (www.thomsontechnology.com) generator/transfer-switch control system. The THS 2000 program operates on an IBM-compatible Personal Computer with Microsoft Windows 95™, Microsoft Windows 98™, Microsoft Windows NT™ 4.0 or Microsoft Windows 2000 operating systems (www.microsoft.com). The THS 2000 program uses a TTI designed protocol to communicate to TTI generator control system site. A site consists of a single Communication Interface Module (CIM) and one or more associated Remote Terminal Unit (RTU) controllers.

The THS 2000 software is designed to allow a direct connection (via RS-232, RS-422 or RS-485) to Port 2 of the CIM or a remote connection (via a host PC modem) with the internal modem of the CIM on Port 1. The host PC modem must already be configured before attempting a remote connection. See the operating-system help for installing and configuring modems.

Version 3.1 of the THS2000 is intended for operation with version 3.0 of the CIM, but also provides support for previous versions of the CIM.

Throughout this document, text that looks like THIS FOR FILENAMES and other computer-type text; text that appears in menus, dialog boxes and buttons looks like *this windows-type text*.

1.1. Definitions

| | |
|------------|--|
| CIM | Communications Interface Module; the communications hub for a site |
| Dialog box | interactive window allowing the user to view or change settings |
| MEC 20 | Microprocessor Engine Controller |
| Modbus | industry-standard serial automation protocol defined by Modicon (www.modicon.com), part of Schneider Automation, Inc. |
| RTU | Remote Terminal Unit; in this context, a MEC 20 or a TSC 800 |
| TSC 800 | Transfer Switch Controller |
| Site | a CIM and one or more connected RTUs |
| Site-list | the site-list is the list of remote sites, primarily used for auto-answer and multiple CIM sites |

1.2. Improvements

A number of improvements have been made to this version of the THS 2000 software. Most of the improvements correspond to added features of CIM version 3.0, but some of the changes are applicable to the previous version of the CIM. See [See Section 1](#) for more information on device-specific features and [Section 3](#) for the Modbus protocol.

The most notable improvement is the use of the Modbus protocol for communications to the CIM.

The new features in THS 2000 are:

- Support for new CIM 3.0 Modbus protocol as well as previous CIM protocol versions.
- Automatic RTU (MEC 20 and TSC 800) discovery on login. This will eliminate the need for the user to program the individual node address and controller type for each site (CIM). See [Controller Discovery](#).
- Support for these additional CIM 3.0 features:
 - ❖ 32 character telephone numbers for callout, see [Auto-answer Configuration](#);
 - ❖ call all numbers option for CIM callout, see [Auto-answer Configuration](#);
 - ❖ CIM Port 2 auto-detect feature for the hardware protocol, see [CIM Port 2](#);
 - ❖ bounded controller addresses for faster detection, see [CIM Advanced](#).
- CIM Port 2 can now be configured for speeds from 1200bps up to 19.2kbps, instead of being fixed at 9600bps. This works for old CIM versions as well.
- Support for multiple remote callout sites. THS version 1.0 and 1.1 only support auto-answer for a single site. A system with two CIM sites that can callout, would not work correctly. This has been fixed by adding multiple sites to a single THS 2000 file. The calling-in CIM is then identified from the loaded set of sites. See [Site-list Management](#).
- The MEC 20 digital fault labels that are disabled are blanked out in THS 2000. This feature requires the latest version of the MEC 20.
- Improved communications reliability over noisy communication lines.

THS2000 version 3.1 adds the ability to connect directly to an RTU, bypassing the CIM. A maximum of one RTU, MEC20 or TSC800, is allowed. The auto-answer feature of THS2000 is not supported in this mode, as it is a function of the CIM. The auto-discovery of controllers is likewise not available. See [CIM Bypass Wiring](#) for a wiring description.

1.3. Computer System Requirements

The supported operating-systems are:

- Microsoft Windows 95™, Service Release 2 or later;
- Microsoft Windows 98™;
- Microsoft Windows NT™ 4.0 Workstation or Server, Service Pack 3 or later;
- Microsoft Windows 2000.

A minimum of 2 MBytes of hard drive space on the chosen installation drive is necessary for proper operation.

A modem that is fully supported by the operating-system is required for remote operation. It is important that the correct modem driver software is installed correctly.

A FIFO-enabled serial-port is required for direct connections.

Microsoft Internet Explorer™ 4.01 or later is recommended for use with the on-line help. However, Microsoft Internet Explorer 3.02 is sufficient if the `hhupd.exe` file, included with the THS 2000 distribution, is run first; this executable is provided by Microsoft for updating help file support.

1.4. Installation

The THS 2000 software consists of two files, the `THS3V0.EXE` file and the `THS3V0.CHM` file. Both files should be copied to a directory on your hard drive, such as `C:\THS`. The first file, `THS3V0.EXE` is the THS 2000 executable. You can make a link to this file on your desktop by dragging and dropping the `THS3V0.EXE` from the explorer to the desktop. The second file, `THS3V0.CHM`, is the on-line help file.

If you are using Microsoft Internet Explorer 3.02, the file `hhupd.exe` will be required to execute and update a system file for HTML Help support. That file is not required if Microsoft Internet Explorer 4.01 or later is installed.

2. Quick Start

This section will get you up and running the THS 2000 quickly and easily. This chapter covers the simple tasks that are necessary to communicate with a site. More advanced topics will be covered in a later section.

2.1. Step 1 Start THS 2000

Double-click on the THS 2000 icon  (`THS3V0.EXE`) to start the program.

See [Installation](#).

2.2. Step 2: Logon

The *Password* dialog box will appear as shown below. Type in your password and click the *OK* button or just click the *OK* button if you have not programmed any passwords


yet. There are no passwords configured initially, so click on *OK* to continue if you are running for the first time.



See [Passwords](#) and [Starting And Logging On](#).

2.3. Step 3: Set Host Connection Method

Select the *Connect* command from the Site menu (or toolbar button or press F9). This command will normally bring up a list of accessible sites, however, if no sites are defined, you will be required to choose a host connection method. This dialog box is shown below.

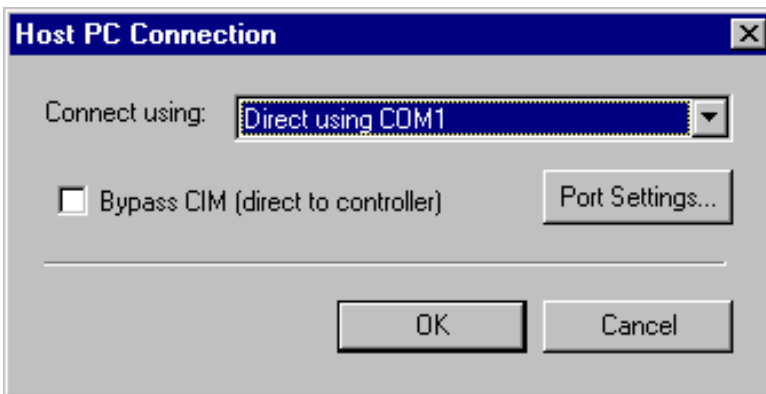


Select your connection method, either a specific modem (e.g. *Hayes Accura 288 V.34 + FAX*) or a serial port (e.g. *Direct using COM1*). If you select a direct communications port, you are also able to modify the port settings. The default settings are likely sufficient for now, so click the *OK* button.

See [Host Connection](#).

2.4. Step 4: Enter Site Properties

Once the connection method is established, you will be prompted for the site properties, such as site name, as shown below. This allows you to enter the first site in the site-list.

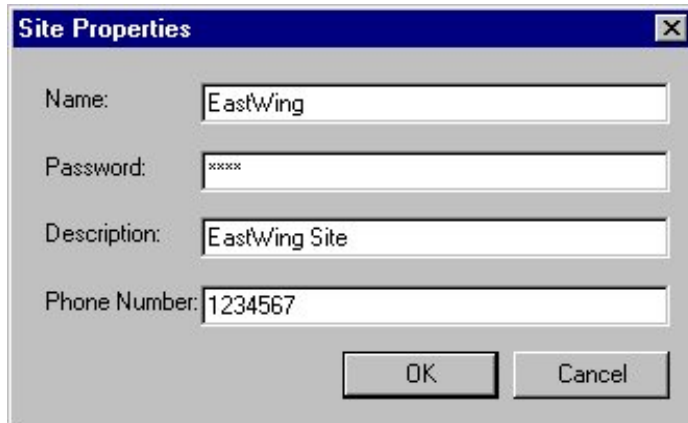

The 'Site Properties' dialog box contains the following fields and buttons:

| | |
|---------------|---------------|
| Name: | EastWing |
| Password: | xxxx |
| Description: | EastWing Site |
| Phone Number: | 1234567 |

Buttons: OK, Cancel


The name and password fields correspond to the name and password already programmed into the CIM that is managing the remote site. The description field is optional and can be used to describe the site. The phone number is entered for a remote site.

The name and password parameters must match the CIM on the intended site. The default name is "site" and the default password is "user." These parameters are case insensitive.

See [Site Properties](#).

2.5. Step 5: Connect To Site

The next dialog box displays the list of sites, as shown below. At this point, there is only one site and it's already selected. From this dialog you can add, remove and modify site properties; modify the connection method; and connect to the selected site.

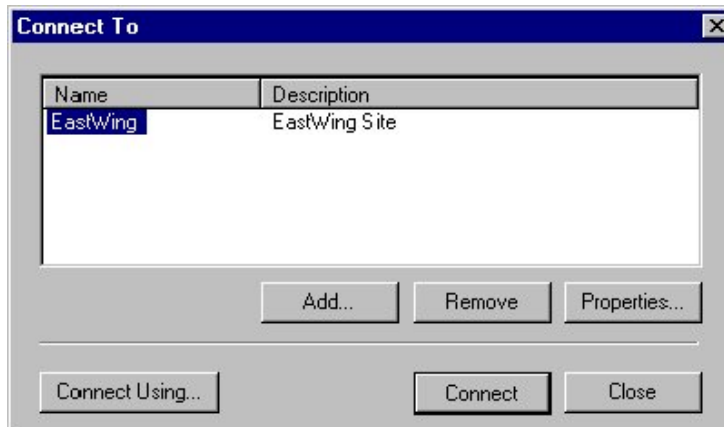

The 'Connect To' dialog box displays a table with the following data:

| Name | Description |
|----------|---------------|
| EastWing | EastWing Site |

Buttons: Add..., Remove, Properties..., Connect Using..., Connect, Close

Clicking on the Connect button will begin the connection process. If you experience problems connecting to the remote site, please refer to the troubleshooting section of this manual.

See [Connecting A Site](#).

2.6. Step 6: Identify Controllers

Once you are connected to the remote site, you need to identify the controllers on the site. If you are running CIM 3.0 or higher, the THS 2000 software will offer the controllers that have already been discovered, as shown below. You merely need to accept the controller list to have them added to the site. If you are running an older CIM, you must identify and add the controllers manually; see the [Adding A Controller](#) section later in this manual.



At this point, you are connected and communicating with the CIM and its controllers. The status bar at the bottom of the window will flicker and display a message similar to "*Connected to EastWing.*"

2.7. Step 7: View Controller Data

A set of buttons at the top of the window will contain the word *List* and the number of each controller. This is the Controller Bar. Clicking a button on the Controller Bar selects the current view in the main part of the window. The list-view is a list of all the controllers and the controller views are representations of an individual controller.

When the selected site is connected, the dot in the middle of the controller bar button will indicate the status of the controller (green, yellow, red or black).

See [Controller Views](#).

2.8. Step 8: Issue Controller Commands

Once connected to a site, commands can be issued to controllers through the *Mec20 Command* or *Tsc800 Command* menu items under the *Controller* menu.

See [Controller Commands](#).

2.9. Step 9: Save/Restore Site-list Information

The current site-list can be saved by using the *Save* or *Save As* commands under the *File* menu or the toolbar button.

A previously saved site-list file can be retrieved using the *Open* command from the *File* menu or the numbered recent file list under the *File* menu or the toolbar button.

See [Saving A Site-list](#) and [Opening An Existing Site-list](#).

3. Configuration

The THS 2000 software allows the configuration of passwords, lists of sites, the Communications Interface Module (CIM) and the auto-answer feature. Configuration of THS 2000 site-lists and other parameters is generally done once and then used many times in an operational capacity.

3.1. Passwords

The THS 2000 program can be secured with the use of passwords. The password levels are:

3.1.1. READ-ONLY

The read-only user can only monitor an RTU site and may not change any settings or modes of operation.

3.1.2. READ/WRITE

The read/write user can monitor an RTU site and may change any settings or modes of operation as desired.

3.1.3. MASTER

The master read/write user can monitor an RTU site and may change any settings or modes of operation as desired. The master read/write user can also view or modify the lower-level security passwords.

The *Options* item under the *Tools* menu will present the user with master security level with a choice that allows the passwords to be modified, as shown below. For a user with less than the master security level, that menu item is grayed-out.



The site passwords are normally shown as a series of asterisks (*), but can be shown in actual letters by enabling the show-site-password check box.


3.2. Site-list Management

THS 2000 allows you to create, save and reopen site-lists. A site-list is a collection of one or more sites that are all accessed through the same host modem. A site-list can also be configured for auto-answer, allowing any of the listed remote sites to call THS 2000 in case of an alarm condition.

The list of sites, the site properties, the connection method and the auto-answer settings are all stored in the `.THS` file. This file can be created, opened and saved from THS 2000.

3.2.1. Creating A New Site-list

A new site-list can be created using the *New* command from the *File* menu (or toolbar button). This command will bring up the *Site Properties* dialog, as shown, for the first site in the site-list.

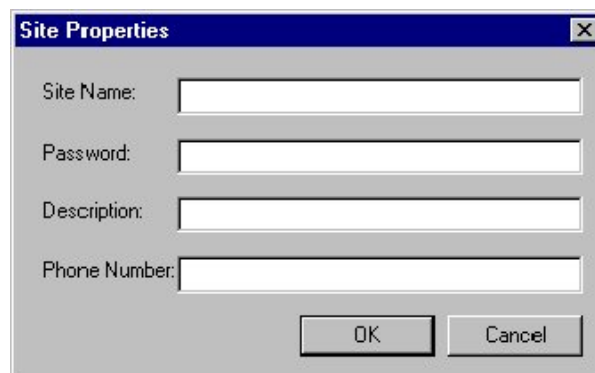

The name and password fields correspond to the name and password already programmed into the CIM that is managing the remote site. All of the site names

within a site-list must be unique. The description field is optional. The phone number is entered for a remote site.

3.2.2. Opening An Existing Site-list

An existing site-list can be opened using the *Open* command from the *File* menu (or the toolbar button). This command will bring up the conventional Windows dialog allowing you to select a file to open.

The *File* menu also stores the most recently used four site-list files. These can be opened directly by selecting the file name from the *File* menu or using the shortcut key sequence ALT-F followed by the number (1-4) of the desired file.

Note: files created by previous versions of THS 2000 can be opened, but they will only contain a single site in the site-list. If this file is modified and saved, you will no longer be able to open it from previous versions of THS 2000.


3.2.3. Saving A Site-list

A site-list can be saved to disk by using the *Save* or *Save As* commands from the *File* menu (or the toolbar button). These commands will invoke the standard Windows dialog for saving a file.

Note: files saved by this version of software will not be readable by previous versions of THS 2000.

3.3. Site Configuration


Viewing and modifying the site configuration begins with the *Connect* item under the *Site* menu. This action will produce the list of sites (see [Site-list Management](#)), as exemplified in the following diagram. From this dialog box, new sites can be [added to the site-list](#), sites can be [removed from the site-list](#) or a site's [properties viewed or modified](#). The [host connection method](#) can also be viewed or modified.

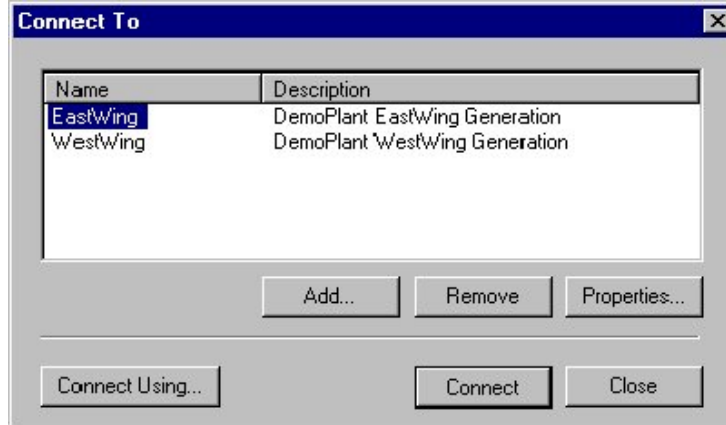

In addition, the site to be connected (see [Connecting A Site](#)) from this dialog.

3.3.1. Adding A Site

Electing to add a site by clicking the *Add* button of the *Connect To* dialog box will present you with the *Site Properties* dialog box depicted in the following figure. This allows you to enter the name and password of the new site, which is the name and password of the CIM on that site. The description can be any descriptive text. The phone-number can only be entered for a host connection that is a modem (see [Host Connection](#)).

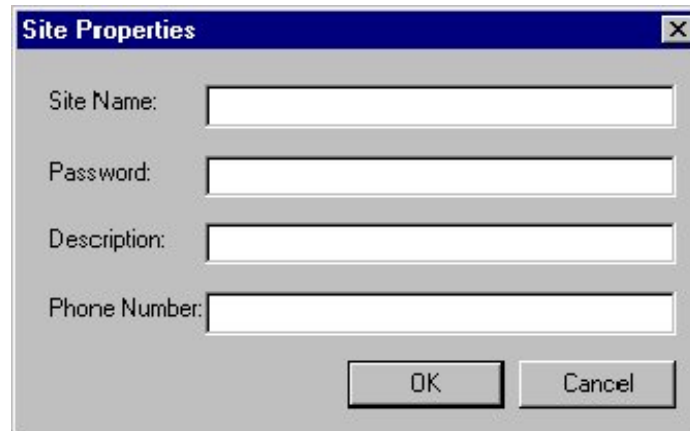


The password field is normally shown as all asterisks (*), but can be made to display the actual letters (see [Passwords](#)).

3.3.2. Removing A Site

Clicking the *Remove* button of the *Connect To* dialog box will cause THS 2000 to ask you if you really want to remove the selected site. Choosing the affirmative option will delete the selected site from the site-list.

3.3.3. Site Properties

Selecting the *Properties* button of the *Connect To* dialog box will bring up the *Site Properties* dialog box, as in section [Adding A Site](#), but with the details of the selected site, as shown here.

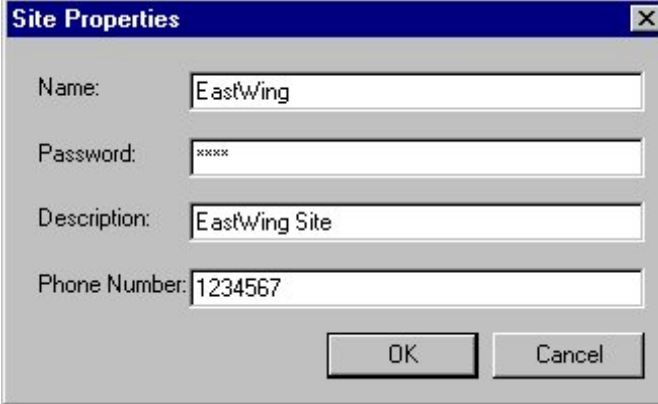


The screenshot shows a dialog box titled "Site Properties" with a close button (X) in the top right corner. It contains four text input fields: "Name:" with the value "EastWing", "Password:" with the value "****", "Description:" with the value "EastWing Site", and "Phone Number:" with the value "1234567". At the bottom right, there are two buttons: "OK" and "Cancel".

This dialog box can also be displayed by right-clicking on the name of the site in the site-list dialog.

3.3.4. Host Connection

The host connection method can be changed from the *Connect Using* command of the *Site* menu or the *Connect Using* button of the *Connect To* dialog box (see [Connecting A Site](#)). This command will bring up the *Host PC Connection* dialog box, as shown here.

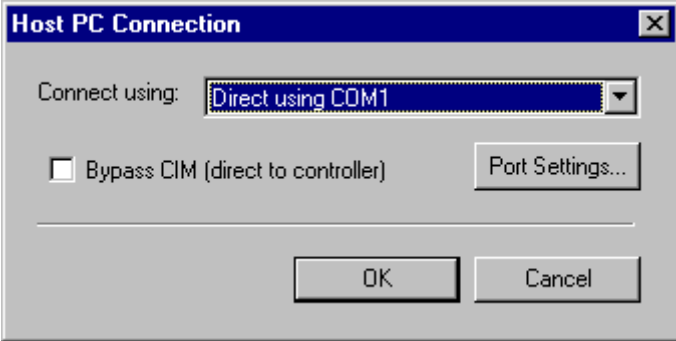


The screenshot shows a dialog box titled "Host PC Connection" with a close button (X) in the top right corner. It features a "Connect using:" label followed by a dropdown menu showing "Direct using COM1". Below this is a checkbox labeled "Bypass CIM (direct to controller)" which is currently unchecked, and a "Port Settings..." button. At the bottom, there are "OK" and "Cancel" buttons.

In the list-box, you can select any modems or communication ports that are recognized by the operating system. Modems can be added and configured in the Modem entry in the Windows Control Panel (see the operating system documentation).

In THS2000 version 3.1, an additional option allows THS2000 to bypass the CIM and connect to a single controller, MEC20 or TSC800. For a direct connection using one of the serial ports, the baudrate is automatically set to 4800 to match a direct controller connection. The CIM bypass mode does not allow THS2000 to receive alarm callouts from the site.

If a direct communication port is selected, the *Port Settings* button will click-able. Selecting the *Port Settings* button will bring up the *Port Settings* dialog box, as shown below, where advanced communications parameters can be viewed and modified.

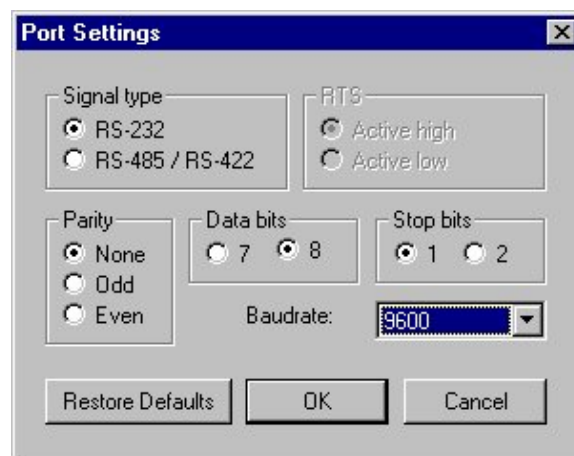

Supported baudrates are 1200, 2400, 4800, 9600, 14400 and 19200. The *Restore Defaults* button set the parameters to RS-232 signal type, no parity, 8 data bits, 1 stop bit and 9600 baud.

The RTS activation is only applicable under RS-485. This defines the level of the RTS line that is used by RS-232 to RS-485 converters to signal a transmission. Unless otherwise specified, this should be active high for most converters.

These parameters must be matched to the Port 2 configuration of the CIM on the site (see [CIM Port 2](#)).

Changes to the port settings do not take effect until the site is reconnected.

3.4. Communications Interface Module Settings

The heart of communications to a remote site is the Communications Interface Module (CIM). All the remote controllers, TSC 800s and MEC 20s, are attached to this device. Normally, the CIM is not connected to the host computer. The

normal operation for the CIM is to poll the status of each controller and attempt to discover new controllers. When the status of a controller indicates an alarm condition, the CIM can be programmed to call the host and report that an alarm condition exists.

When connected to a host computer running THS 2000, the CIM discontinues its polling and allows the THS 2000 software to interrogate the controllers.

The CIM can be configured by selected the *CIM Properties* item in the *Site* menu. This will bring up the *Current Site Properties* dialog box. This window is a tabbed collection of dialogs that query and display different parameters from the CIM, including the site information, version, port configuration and callout phone-numbers.


When a value is modified, the *Apply* button will become click-able. Clicking the *Apply* button will send the changes to the CIM; also, clicking the *OK* button will send the changes to the CIM if you answer yes to the "save changes" question. Hitting the *Cancel* button will abort any changes that have not yet been written. After the new values are written to the CIM, they are read from the CIM and displayed.

Some of the CIM's properties screens contain a *Refresh* button that will simply re-read the data from the CIM.

For more information on the CIM, see [Section 1](#).

3.4.1. CIM Site

Selecting the *CIM Site* tab in the *Current Site Properties* dialog box will produce a display similar to that shown in next figure. The F2 key (or the toolbar button) can also be used to select the *Current Site Properties* dialog box. From here, you can enter the site name and site password that will be used by the site connection described in section [Connecting A Site](#).

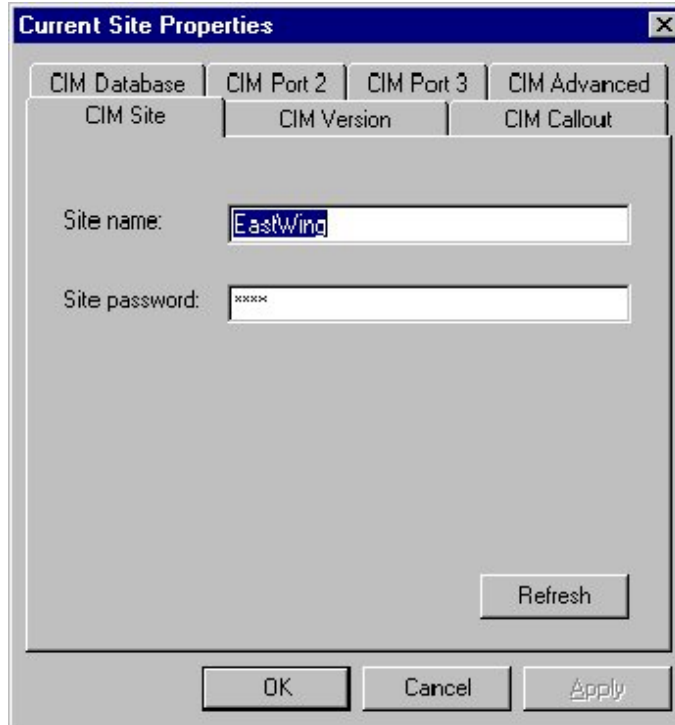

The name and password fields have a maximum length of 16 characters and case does not matter. CIM versions prior to CIM3.0 are limited to 12 characters for the site name and 8 characters for the password.

Note: all CIMs that are intended for callout operation to the same site-list must have unique site names.

3.4.2. CIM Version

The *CIM Version* tab simply reads and displays the version information, including the serial number, from the CIM, as shown below. This may be useful for future compatibility issues and service.



Note: CIM version prior to version 3.0 did not have a serial-number or Modbus support; these fields appears as *N/A* when communicating with one of these older devices.

3.4.3. CIM Callout


The *CIM Callout* tab configured the callout feature, which allows the CIM to call the host in case of an alarm condition. The dialog box is depicted in the next figure. Refer to section [Auto-answer Operation](#) for more information on CIM callout and THS 2000 auto-answer features.

The screenshot shows the 'Current Site Properties' dialog box with the 'CIM Callout' tab selected. The dialog has a title bar with a close button. Below the title bar are four tabs: 'CIM Database', 'CIM Port 2', 'CIM Port 3', and 'CIM Advanced'. The 'CIM Callout' tab is active, showing two checked checkboxes: 'Callout enabled' and 'Call all numbers'. Below these are three rows of input fields for phone numbers and attempts. The first row has 'Phone Number: 1: 555-1212' and 'Attempts: 3'. The second row has 'Phone Number: 2: ' and 'Attempts: 0'. The third row has 'Phone Number: 3: ' and 'Attempts: 0'. A 'Refresh' button is located below the input fields. At the bottom of the dialog are 'OK', 'Cancel', and 'Apply' buttons.

Note: CIM versions prior to version 3.0 did not support the call-all-numbers feature; this option is grayed-out for those devices. Also, in older CIM versions, all the phone numbers shared the same number of attempts; this is reflected in this dialog box by tying all these attempts choices together, so if one is changed they are all changed.

3.4.4. CIM Database


All the properties of the CIM described in this chapter are stored in an internal database. This database, and thus the CIM properties, can be reset to factory default values by initializing the database. The command to initialize the database can be found in the *CIM Database* tab of the *Current Site Properties* dialog box, as shown here.

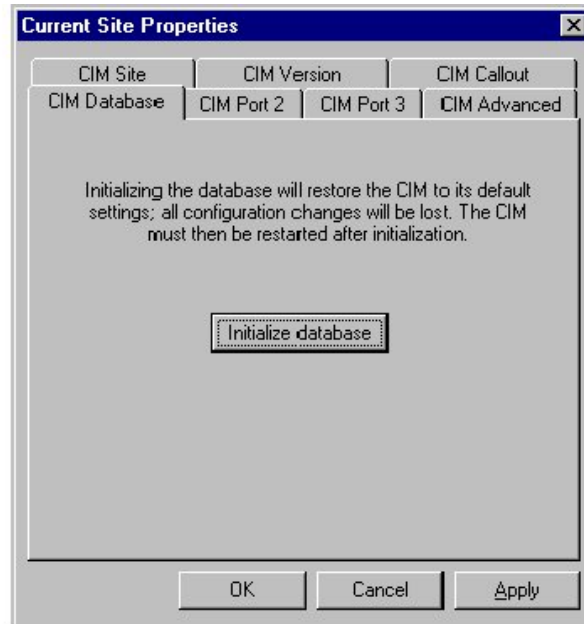

This feature is provided as a last resort. It should not be invoked unless you know what you are doing or you are under the guidance of a qualified service person.

3.4.5. CIM Port 2

A CIM connected directly to a PC host or a Programmable Logic Controller (PLC) is connected serially to Port 2. The serial connection parameters are under the *CIM Port 2* tab of the *Current Site Properties* dialog box, as shown here.

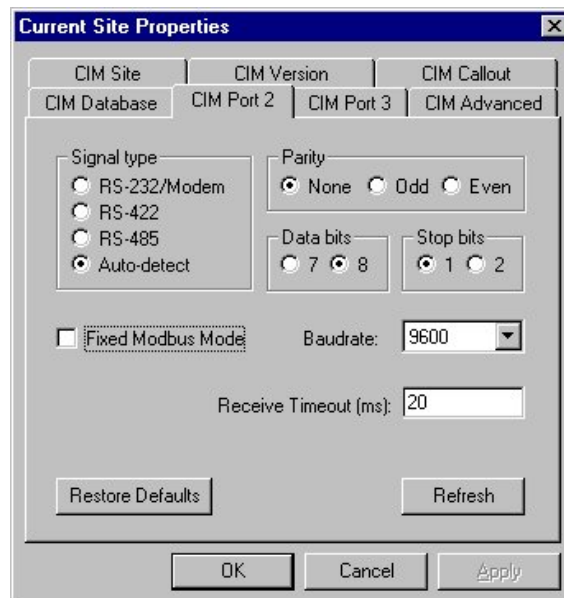

The signal-type indicates the type of physical connection between the host and CIM. The *RS-232/Modem* option indicates that a connection is via a standard RS-232 cable or the internal modem (CIM Port 1). The *RS-422* and *RS-485* options are for multi-drop networks. The auto-detect option will allow the CIM to attempt to decide for itself which physical connection is in use. The default signal-type is auto-detect.

The other parameters are standard serial type parameters, including parity, data bit size, stop bits and baudrate. The baudrate values can be *1200, 2400, 4800, 9600, 14400 and 19200*. The receive-timeout parameter describes the amount of time after receiving the last byte of the packet until the packet is processed internally.

The *Restore Defaults* button will restore all parameters to their initial values, which are no parity, 8 data bits, 1 stop bit, 9600 baud and 20 millisecond receive-timeout.


The *Fixed Modbus Mode* option is for enabling the fixed Modbus mode for operation with a Programmable Logic Controller (PLC). Once in fixed Modbus mode, the CIM no longer requires a password to login, it is essentially always logged-in to save the PLC from having to do so. All modem functions are disabled when in fixed Modbus mode as well, to prevent unauthorized remote access. The only way to disable fixed Modbus mode is to connect directly (via RS-232 or RS-485) with THS 2000, which will disable fixed Modbus mode when attempting to log in to the CIM.

Note: the receive-timeout and auto-detect signal-type features were not supported in previous versions of the CIM and therefore their values appears grayed-out and read-only when examined by THS 2000.

The protocol used on Port 2 is Modbus, as described in [Section 3](#).

3.4.6. CIM Port 3


The Port 3 of the CIM is used to communicate with the controllers on the site. The parameters for this port can be found under the *CIM Port 3* tab in the *Current Site Properties* dialog box, as shown here.

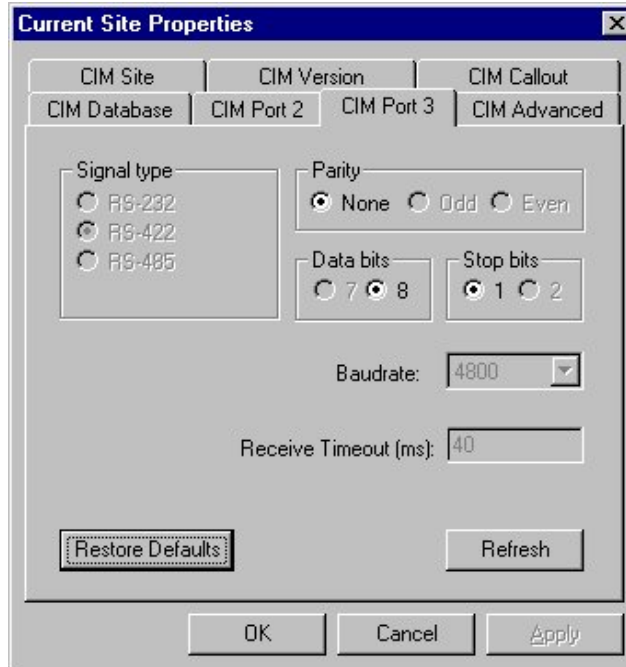

These values are all currently read-only; you may not change any of these values, they are fixed.

3.4.7. CIM Advanced

The *CIM Advanced* tab of the *Current Site Properties* dialog box allows you to change some of the more advanced features of the CIM, such as Modbus characteristics and controller polling. The dialog box is shown in the next figure.

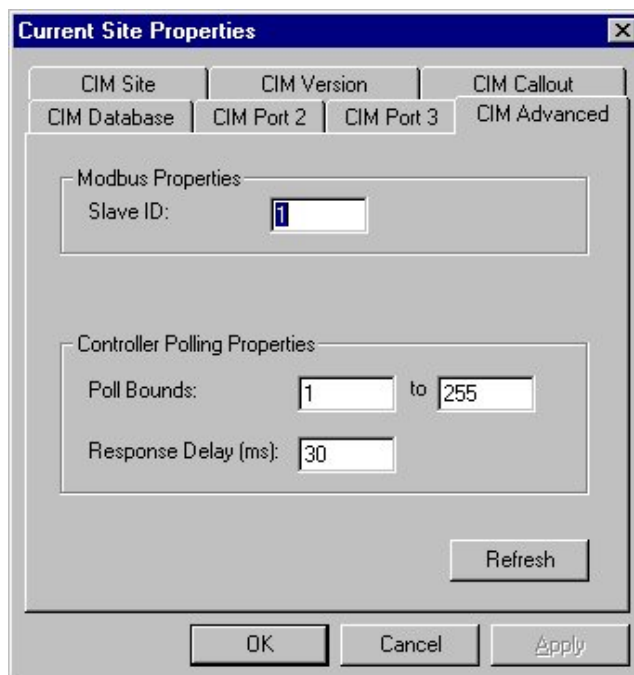

The top box contains properties unique to the Modbus operation of the CIM (see [Section 3.](#)). The *Slave ID* is the ID used by the PLC to reference the CIM; the valid range for a Modbus slave device is 1-247.

The *Poll Bounds* parameters are for changing the behavior of the controller discovery polling. Controllers have an address range of 1 to 255, but there is a limit of 10 controllers per site. *The Poll Bounds* parameters reduce the range of addresses that the CIM must poll in order to discover new devices. Reducing this range to the expected values of the controllers, such as 1 to 10, speeds up response time.

The Response Delay parameter dictates the amount of time, in milliseconds, to wait before sending a response.

Note: the advanced features described here are only supported in CIM version 3.0. When THS 2000 is communicating with an older CIM, the *CIM Advanced* dialog box is not available.

3.5. Controller Configuration

This section deals with the adding and removing of controllers. The controllers currently supported by THS 2000 and the CIM are the MEC 20 Microprocessor Engine Controller and the TSC 800 Transfer Switch Controller.


3.5.1. Controller Discovery

The THS 2000 version 3.0 in conjunction with the CIM version 3.0 supports automatic controller discovery. When THS 2000 establishes a connection to a remote CIM, it interrogates the CIM for the list of controllers present on this site. The user is then prompted to accept this list of controllers or continue with the controllers already loaded.

Version of the CIM prior to version 3.0 do not support the controller discovery and controllers must be added manually as explained in the next section ([Adding A Controller](#)).

3.5.2. Adding A Controller

Selecting the *Add* option from the *Controller* menu allows you to add a MEC 20 or TSC 800 controller to the site from the *Add Controller* dialog box, as shown below.

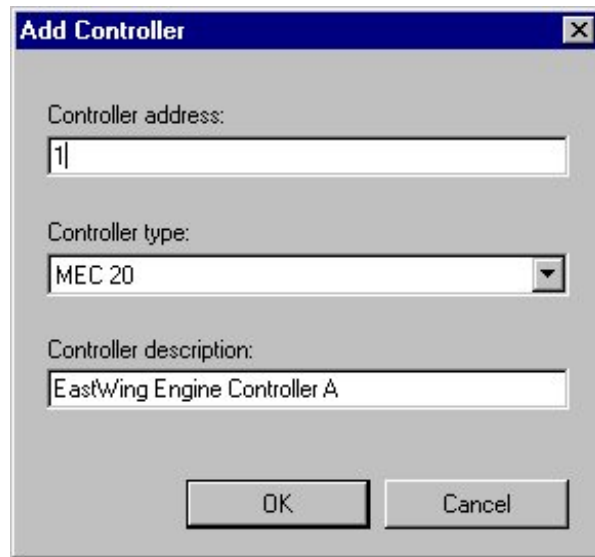

The controller address can be between 1 and 255, with no duplicates allowed. The controller type can be a MEC 20 or a TSC 800. The description can be any descriptive text you wish.

3.5.3. Removing A Controller

Removing a controller is accomplished by selecting the *Remove* item from the *Controller* menu which brings up the *Remove Controller* dialog box, as shown below.




The controller to be deleted is selected from the list presented.

3.5.4. Controller Properties


A controller's properties can be examined by selected the *Properties* item of the *Controller* menu. This brings up a menu from which you can choose the controller to be examined, as shown below.



After the desired controller is selected and the *OK* button clicked one of two dialog boxes is presented: one for the MEC 20 and one for the TSC 800. The *MEC 20 properties* dialog box is shown in the following figure. From this window, the description can be modified and other properties, such as the controller address and the fault-labels, can be viewed.

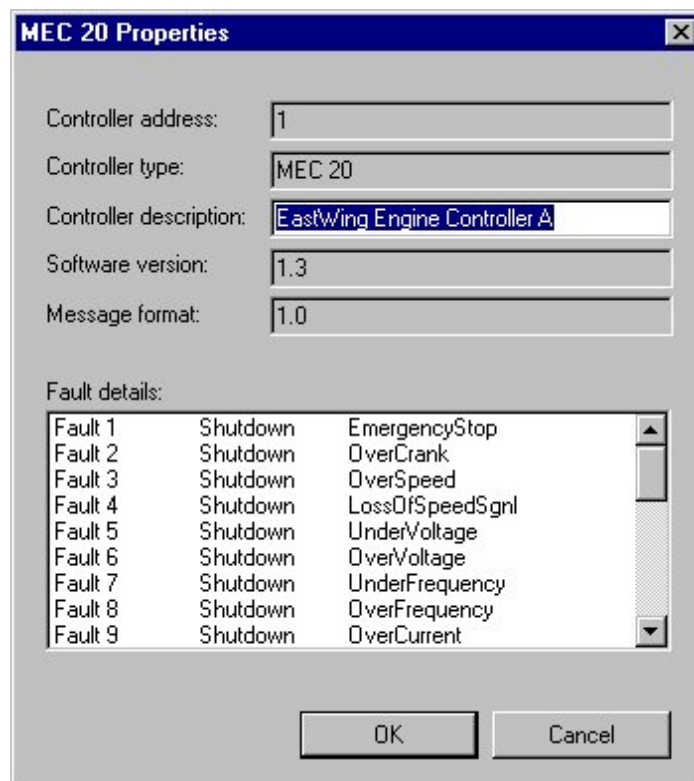


The *TSC 800 properties* dialog box is shown in the next diagram. From here, the controller description can be modified. Additional properties, such as the controller address, can be viewed.

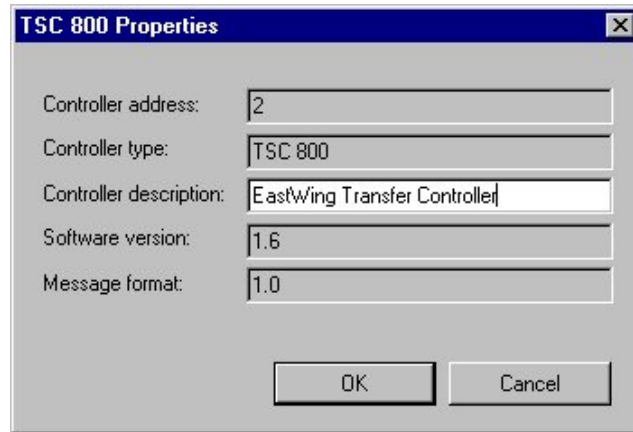

3.6. Auto-answer Configuration

An important feature of remote modem sites is the ability to dial the host and report an alarm condition. The host side can be configured from the *Auto-answer Settings* command of the *Site* menu, as shown below.

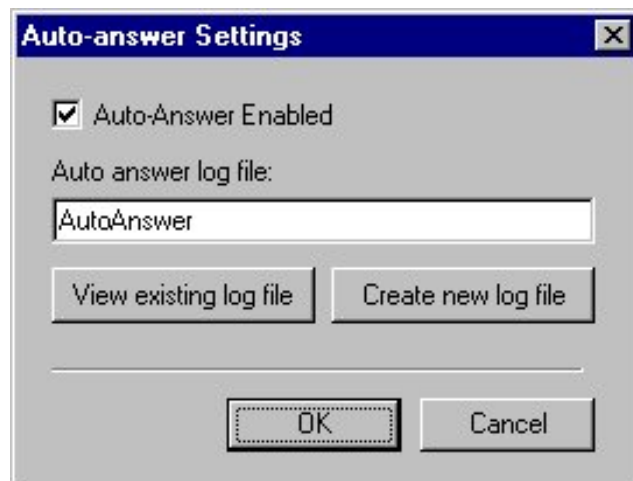


When the auto-answer feature is enabled, the THS 2000 software will accept calls from any site in the currently loaded site-list.

4. Operation

4.1. Basics

This section describes the basic functionality of the THS 2000 software, from logging-on to user interface to accessing the online help. See the [Quick Start](#) section for a fast get-up-and-running breakdown.

4.1.1. Starting And Logging On

Double-clicking the THS 2000 icon  starts the THS 2000 software. A splash screen indicating the version and related information is displayed for a short period. You will then be prompted to enter a password, as below.




The THS 2000 log on process allows for three different levels of security, depending on the password you entered. The levels are read-only, read/write and master (see [Passwords](#) for more information).

You also have the option of selecting "Demo mode," which allows you to create some simulated controllers and otherwise operates as if you had "read-only" security privileges.

4.1.2. The Interface

The main THS 2000 interface is shown in the next diagram. It is a relatively standard Windows-based application with a title bar, main menu, toolbar and status bar, as well as a controller bar and a special viewing area.

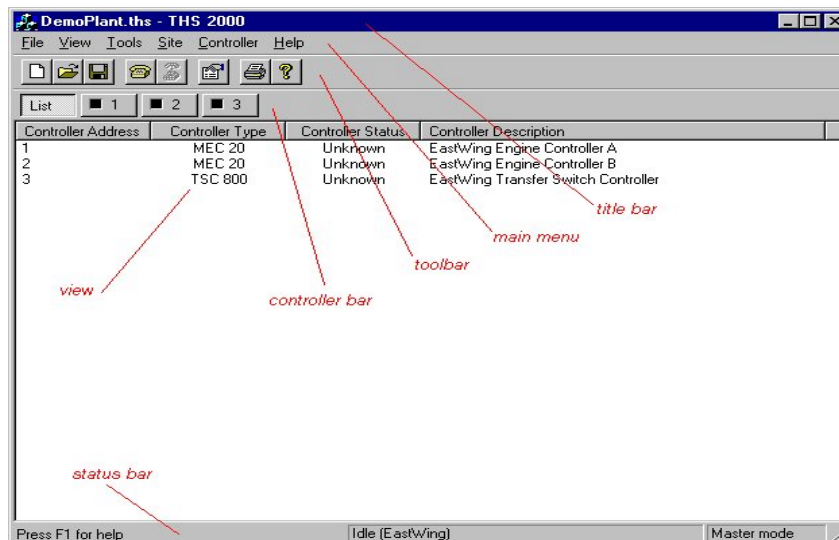

4.1.3. Title Bar

The title bar displays the currently loaded site-list file. The site-list file is a collection of one or more generation sites that has been configured and saved previously. The site-list file can be opened, saved and printed from the main menu or toolbar. The THS 2000 site-list files have the file extension .THS.

4.1.4. Main Menu

The main menu provides the access to the THS 2000 commands. Some commands are available only under certain circumstances; when the command is not available, it is grayed-out. For example, you will not be able to add a controller (*Add* from the Controller menu) until you have created an initial site (*Connect* from the *Site* menu or *New* from the *File* menu).

The main menu commands are also available using ALT-key combinations; the underlined character indicates the key to press in combination with the ALT key. Many of the important commands are available using function keys; these are indicated in the pull-down menus.

4.1.5. Toolbar

The toolbar provides instant access to many important menu commands. When the mouse pointer is floated over the tool item, a tool tip is displayed in the status line portion of the status bar.

4.1.6. Controller Bar

The controller bar contains a button called List and a button for each controller on the site. The controller buttons are labeled using the controller's identification number (id). Pressing a button on the controller bar will change the view to display the selected controller or the controller-list view.

When the selected site is connected, the dot in the middle of the controller bar button will indicate the status of the controller (green, yellow, red or black).

4.1.7. Status Bar

The status bar displays status messages and indicates connection status and security status. The status line displays tool tips and various status messages.

The connection status indicates the state of the current connection, such as

"Idle" or "Connected to EastWing." The security status indicates with which security level you have logged on.

4.1.8. View

The view area displays one of two different views. The list-view shows a tabular list of the controllers on the selected site. The controller-view displays data from either a MEC 20 or a TSC 800.

4.1.9. Accessing Help

The command *Contents* from the *Help* menu, the toolbar button or the F1 key will bring up an online reference.

4.1.10. Exiting

The *Exit* command from the *File* menu will exit THS 2000, disconnecting any outstanding connections.


4.2. Connecting Sites

A site is made up of a single CIM connected to one or more controllers. Connecting to a site is the same as connecting to a CIM. From the user's point of view, the CIM is the site. This section describes how sites are connected and disconnected as well as various properties of the CIM and the host connection.

Only a single site from the site-list can be connected at a time.

4.2.1. Connecting A Site

A site can be connected using the *Connect* command from the *Site* menu, the toolbar button or the F9 key. This will bring up the *Connect To* dialog depicted in the next figure.

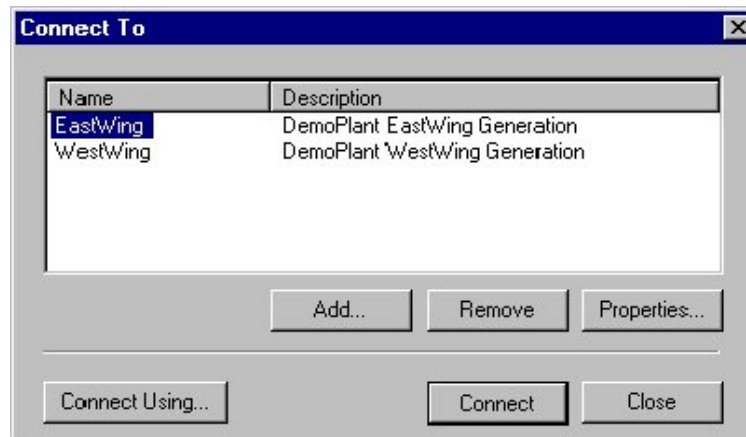

This dialog lists each site contained in the currently loaded site-list and allows you to select the site to which a connection is desired. Clicking the *Connect* button will initiate a connection attempt. In addition, double-clicking on the site name will initiate a connection attempt.

In addition, sites can be added to or removed from the site-list or simply have their properties modified. A button labeled *Connect Using* is provided to jump to the host connection settings (see [Host Connection](#)).

4.2.2. Disconnecting A Site

Selecting the *Disconnect* command from the *Site* menu, the toolbar button or the F10 key will disconnect the currently connected site. This includes hanging up the phone line for a modem connection.

4.3. Viewing And Commanding Controllers

The main function of the Communication Interface Module (CIM) is to facilitate communication to the controllers present on the site. The controllers currently supported by the CIM are the MEC 20 Microprocessor Engine Controller and the TSC 800 Transfer Switch Controller. The main view of the THS 2000 provides a simulated front-panel of a single controller.

Controllers can be added, removed and examined from menu commands.

4.3.1. Controller Views


The bulk of the THS 2000 window is the view area. This area can be a simple list of the controllers or a more detailed representation of a single controller. The controller bar buttons are used to select the desired controller or the controller-list (see also [The Interface](#)).

The controller bar contains a button called *List* and a button for each controller on the site. The controller buttons are labeled using the controller's identification number (id). Pressing a button on the controller bar will change the view to display the selected controller or the controller-list view.


When the selected site is connected, the dot in the middle of the controller bar button will indicate the status of the controller (green, yellow, red or black).

The next figure shows the view of a MEC 20 connected to a remote CIM. The MEC 20 indicates that it is currently in shutdown mode. The black part of the view is generally the same as the front panel of the actual MEC 20 device. The

display and buttons work as it were the actual device. Additional information includes the digital fault status and labels, analog fault status and present measured values.

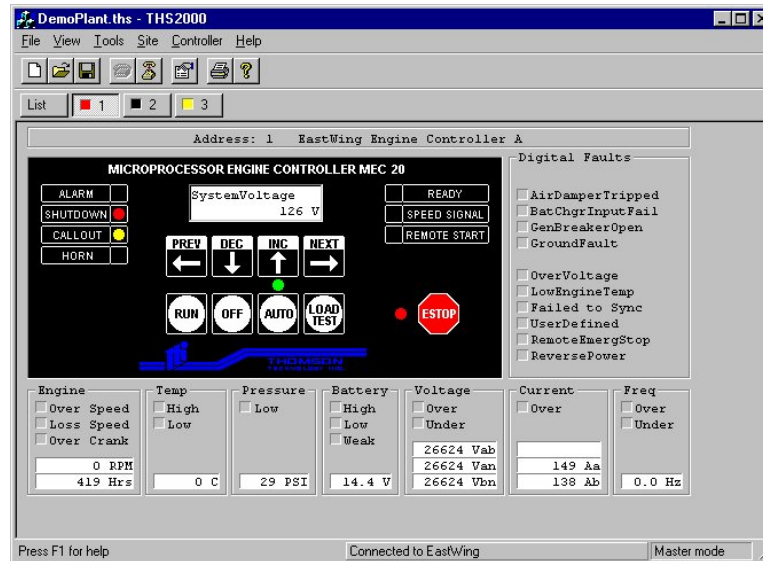

The figure below shows the view of a TSC 800 connected to a remote CIM. Just as the MEC 20, the black part of the view is a direct emulation of the TSC 800 front panel. The faults and values are displayed and updated frequently.

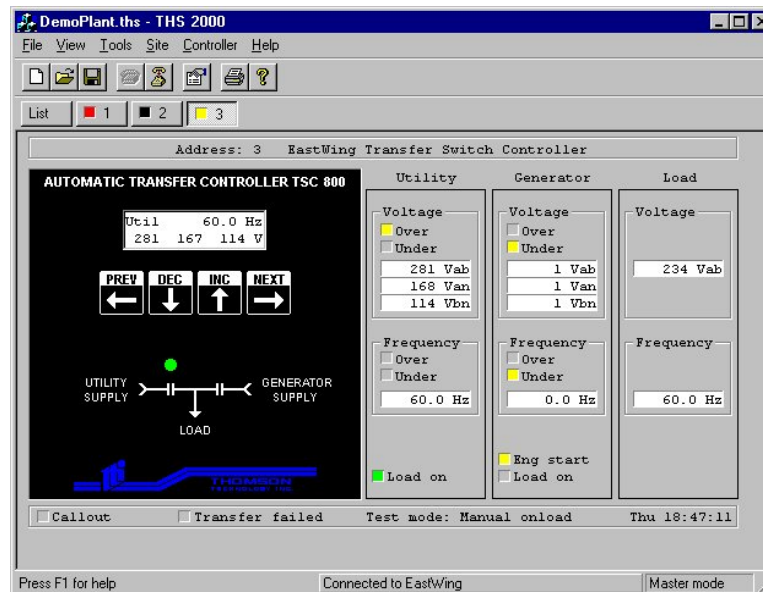


4.3.2. Controller Commands


The controllers can also be commanded to perform control functions remotely. The control functions can be found under the *MEC 20 Command* or *TSC 800 Command* items of the *Controller* menu. The controller in the current view is the

controller being commanded. The control functions available vary by type of controller.

The commands available for the MEC 20 are shown in next figure.

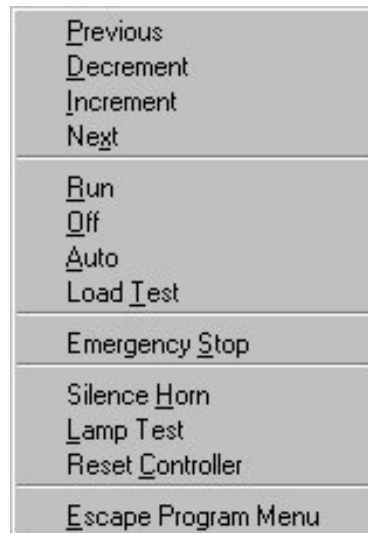

The commands for the TSC 800 are shown in the next figure.

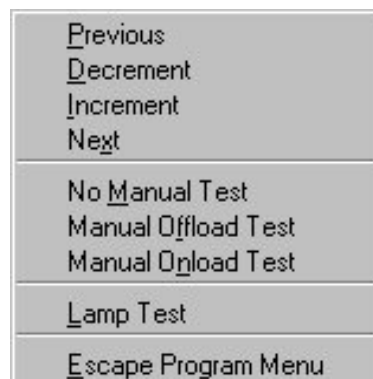


4.4. Printing

Using the print command (the *Print* item from the *File* menu or the toolbar button) while viewing a controller will print the currently displayed values in a simple text format. The print command will print the list of controllers when invoked while viewing the controller list.

4.5. Auto-answer Operation

When a remote CIM senses that a controller desires a Callout, it will start the calling out sequence. The CIM will dial its stored phone numbers some amount of times until it makes a connection (see [CIM Callout](#)). The site in which the CIM belongs must currently exist in the site-list of the THS 2000 program.


When an auto-answer connection is established, an event is registered in the *Auto Answer* dialog box, as shown below, and logged in the auto-answer log file (see [Auto-answer Configuration](#)).

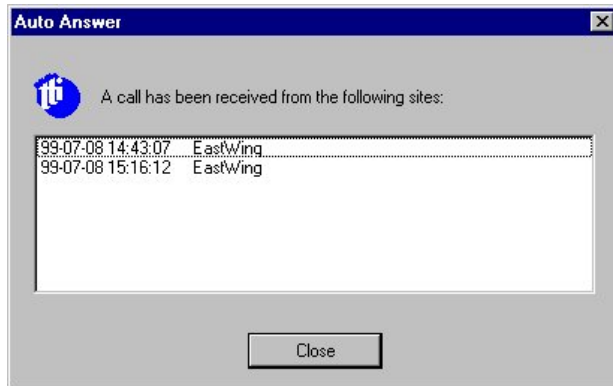


When a site has connected, it will remain connected for two minutes just as if connected by the operator. During this time, the operator can view the controllers and determine the cause of the alarm. The status bar will also display a countdown of the remaining connection time in seconds.

5. CIM Bypass Wiring


The CIM bypass connection mode of operation has a different wiring scheme than a standard CIM connection. The two possible methods of connection are: direct--from computer to controller and modem--from computer to local modem to remote modem to controller. The direct connection bypass mode is shown below:

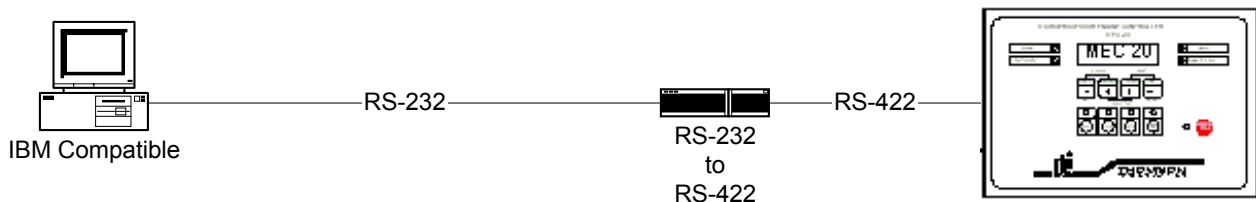


The modem connection bypass mode is shown below:

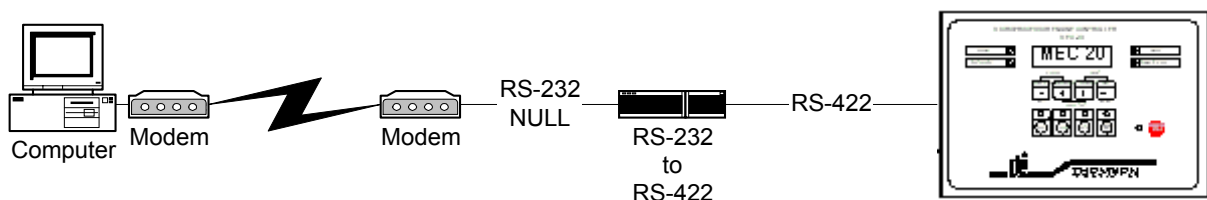

An RS-232 to RS-422 converter is required to convert the signal from the computer or modem. The required wiring from the RS-422 side of the convert to the RJ-45 connection on the controller is as shown:

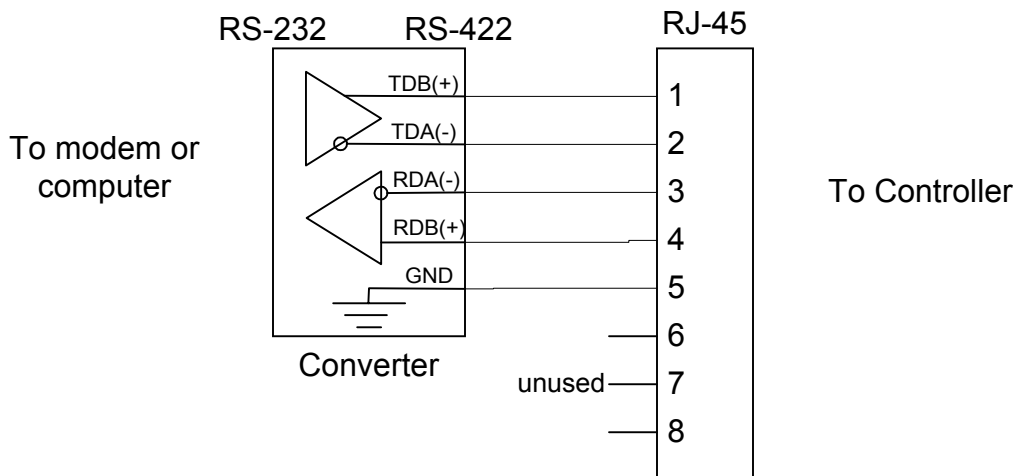

The RS-232 NULL connection between the modem and the converter must pass all handshake signals, as shown in the following diagram:

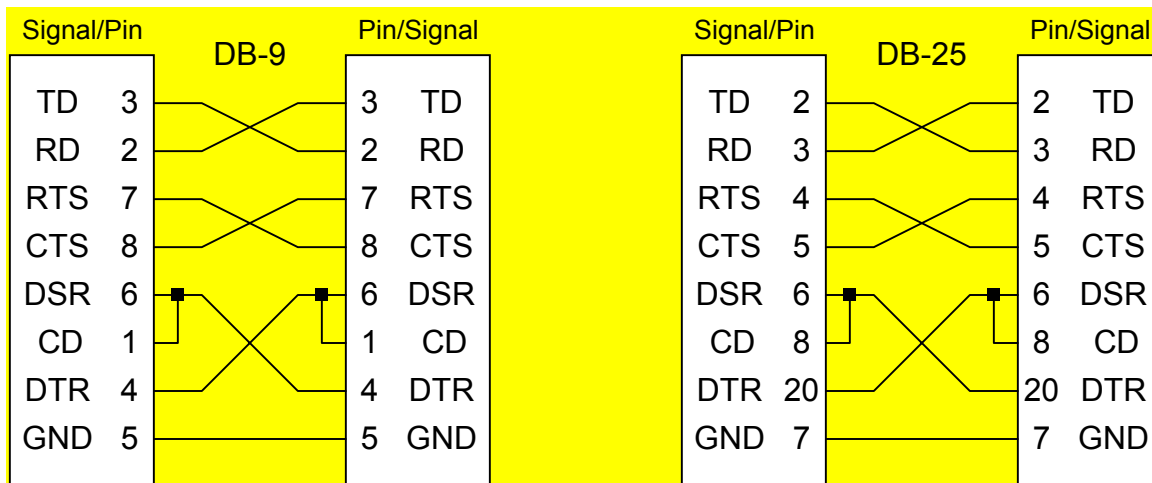

The modem must store configuration in a non-volatile storage medium (such as FLASH). The modem must be configured for the following features:

- auto-answer,
- connect at 4800 bps only (no fallback),
- echo disabled,
- no error correction,
- no compression.

All RS-232 to RS-422 converters and modems are not created equal. Thomson Technology has tested many converter and modem combinations and the recommended parts are: 3Com USRobotics V.90 56K Faxmodem and B&B Electronics RS-232/RS-485 Converter Model 485PTBR (also an RS-422 converter). The modem must be configured prior to operation with the DIP switches set to (DOWN is ON):

| Switch | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 |
|-----------|------|----|------|------|----|----|----|------|
| Position: | DOWN | UP | DOWN | DOWN | UP | UP | UP | DOWN |

and the following initialization strings:

```
AT Q0 E0 V1 X4 &K0 &D0 &M0 &B0 &H0 &R1 &N4
```

```
AT S0=1
```

```
AT &W0
```

6. Troubleshooting

| SYMPTOM | CORRECTIVE ACTION |
|--|---|
| Cannot communicate with the site. | See the CIM User Manual Troubleshooting for possible solutions. |
| THS 2000 software locks up. | The Host software may lock-up if auto-answer mode is on when running in direct mode, the Host software is trying to write to a modem when it may not be present. The solution is to disable auto-answer (see Auto-answer Configuration). |
| Unable to view on-line help: "The THS 2000 help file (THS3v0.chm) could not be located." | Check that Microsoft Internet Explorer 4.01 or later is installed. Ensure that the THS3V0.CHM file is located in the same directory as the THS3V0.EXE file. |
| Unable to view on-line help: unable to load a file called hhctrl.ocx. | You need to run the hhupd.exe file included with the THS 2000 distribution diskettes. |

SECTION 3

CIM PROTOCOL

1. Introduction

This protocol document is applicable to version 3.0 of the Communication Interface Module (TTI).

The Communication Interface Module (CIM) provides the hardware and software interface between a Modbus™ compliant master device (customer supplied) and the specific Remote Terminal Units (RTUs) as used at a generator site.


The Remote Terminal Unit (RTU) in this context is a device which directly operates the equipment at a generator site. These devices are the actual microprocessor-based controllers as developed by Thomson Technology, Inc. and include the MEC 20 Engine Controller and the TSC 800 Transfer Switch Controller.

NOTE: This instruction manual provides detailed information on the CIM 3.0 Modbus™ protocol. For detailed information on a the CIM 3.0 hardware and installation, see the [Section 1](#). For information on operation CIM 3.0 using the THS2000 3.0 software program, see the [Section 2](#). For more information on specific RTU devices, refer to their associated instruction manuals.

For more information on the Modbus™ protocol, visit the Modicon web site at www.modicon.com. The communications protocol is split in to the physical layer, the datalink layer and the application layer.

2. Physical Layer

At the Physical Layer, the CIM device is connected to a Modbus Master through CIM Port 2 (DB-9 or RJ-45) which is configurable to RS-232/-485/-422 and up to 19200 baud. The MEC 20s or TSC 800s connect to the CIM (Host) through an RS-422 interface via an RJ-45 connector to CIM port 3b. Up to 10 remotes can be connected to a single CIM (Host), as shown below:

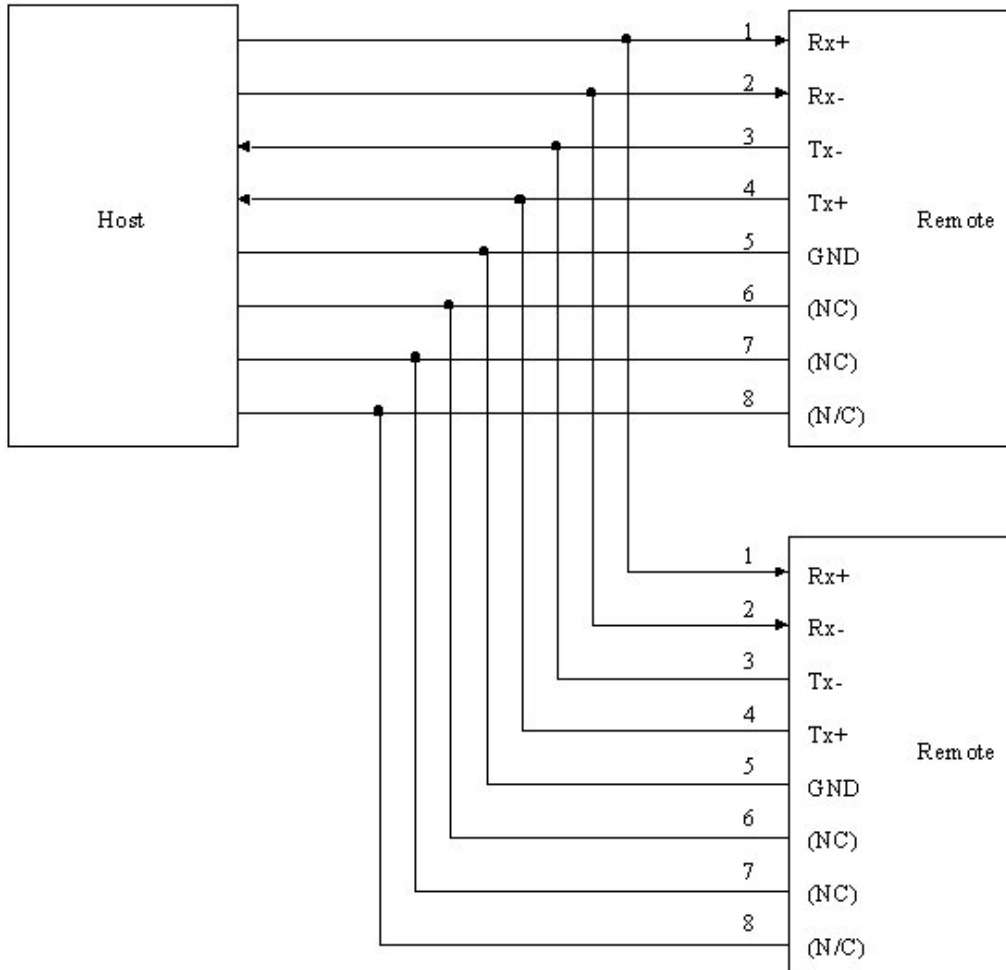

The remote's receive lines are always enabled. The remote's transmit lines are only enabled while transmitting.

There is no hardware flow control.

3. Datalink Layer

NOTE: Unless noted otherwise, all fields described in this document contain unsigned binary data stored in big-endian (most significant byte first) format. Any unused fields contain zeroes. When describing the fields, FALSE equals zero, and TRUE equals non-zero.

At the Datalink Layer, the host (master) is responsible for polling the CIM's. The host sends request packets to the remotes, and the remotes respond with response packets. The CIM acts like a local host (master) to the MEC 20's connected. The CIM takes care of gathering data from the individual MEC 20's and storing it in a local database. The communication format describes an interface with the CIM database.

Unfortunately due to processing limitations response packets from the CIM to the host can have up to 25ms gaps in the data. The CIM response data is shifted out in 16 character increments, in some cases it can take up to 25 ms to shift out the next 16 character buffer.

The host pre-transmit delay is the minimum time required between the reception of the last byte of a frame (response) and the transmission of the first byte of a new frame (request). The following values show the necessary pre-transmit delays to insure reliable transmission of data to the CIM.

| baudrate | delay(ms) |
|----------|-----------|
| 1200 | 130 |
| 2400 | 80 |
| 4800 | 40 |
| 9600 | 30 |
| 14400 | 30 |
| 19200 | 30 |

The typical CIM, MEC 20 and TSC 800 data is accessible through direct register read and writes. Programming the CIM is done using the same protocol with the CIM ID instead of the MEC ID.

4. Preset Multiple Registers (Type 16)

The preset multiple registers packet is used to write specific values to the controllers. Numeric values are shown in hexadecimal.

Preset Multiple Registers Request

The packet format for this request is shown below.

| | | | | | | |
|----|----|------|------|----|-------------------|------|
| ss | 10 | aaaa | pppp | bb | rrrr rrrr | cccc |
|----|----|------|------|----|-------------------|------|

ss

MEC 20 ID (00 to FF)

aaaa

Starting register (4aaaa)

pppp

Register count (number of points)

bb

Number of bytes (register count x 2)

rrrr

Register data (16 bit data)

cccc

CRC-16 (see [CRC Calculation](#))

4.1. Preset Multiple Registers Response

The response to this packet is shown below.

| | | | | |
|----|----|------|------|------|
| ss | 10 | aaaa | pppp | cccc |
|----|----|------|------|------|

ss

MEC 20 ID (00 to FF)

aaaa

Starting register (4aaaa, same number as the write packet)

pppp

Register count (same number as the write packet)

cccc

CRC-16 (see [CRC Calculation](#))

4.2. Example: Remote Key Press Operation

SEND:

| | | | | | | |
|----|----|------|------|----|------|------|
| ss | 10 | 0200 | 0001 | 02 | kknn | cccc |
|----|----|------|------|----|------|------|

ss

MEC 20 ID (00 to FF)

kk

keystroke number

nn

number of times to repeat keystroke

cccc

CRC-16

RECEIVE:

| | | | | |
|----|----|------|------|------|
| ss | 10 | 0200 | 0001 | cccc |
|----|----|------|------|------|

ss

MEC 20 ID (00 to FF)

cccc

CRC-16

It is also recommended to follow up with a Display Valid Flag read to insure the operation was successful before proceeding. The CIM does attempt multiple operations in the case of a bad packet. However, if the Display Valid Flag is not valid after 900ms a retry should be performed.


5. Read Holding Registers (Type 3)

The read holding register request is used for read data from the controller.

Numeric values are shown in hexadecimal.

5.1. Read Holding Registers Request

Field addressing is done with the following format:



ss

MEC 20 ID (00 to FF)

aaaa

Starting register (4aaaa)


pppp

Register count

cccc

CRC-16 (see [CRC Calculation](#))

5.2. Read Holding Registers Response



ss

MEC 20 ID (00 to FF)

bb

Response Byte count (Register count x 2)

rrrr


Register data (16 bit data)

cccc

CRC-16 (see [CRC Calculation](#))


5.3. Example: Read Registers 200 To 201

SEND:



ss

MEC ID (00 to FF)

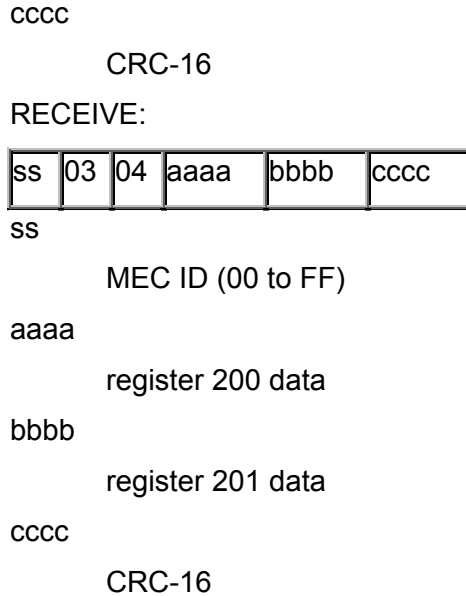

6. Application Layer

At the Application Layer, the Master Controller sends request messages to the CIM's, and the CIM's respond with response messages. Communication with the MEC 20's is done using the MEC 20 ID and a typical Modbus packet, the CIM is transparent to the protocol. The only time the user needs to be concerned with the CIM is when CIM configuration parameters need to be modified. CIM communication is done with the same Modbus packet using the CIM ID instead of the MEC 20 ID. In the case of the same ID the CIM is smart enough to look at the registers requested to figure out whether it is meant for a CIM or MEC 20.

The data block protocol from the MEC 20 will be described in the next section.

The CIM port configuration table is used to change the port type (RS-232/-485/-422) and data protocol options such as baudrate, start bits, stop bits, and parity. The CIM port configuration table consists of 2 records that define CIM port 2 and port 3 options.

All register values are in hexadecimal notation, with certain Modbus interfaces you may be required to use a decimal value. In Modbus terminology a zero does not exist in the decimal register list therefore many PLC/software interfaces may require you to convert the Hex to decimal and then add one. (example 100Hex -> 257 not 256). The actual packet will include the below listed value with the '4' chopped off. The 4xxxx is another Modbus terminology that is not used in the actual protocol, only the lower 4 digits are converted and used in the packet description.

Values in embolded typeface are the default values for their respective fields.

7. Data Types And Formats

The following table describes the possible return data types and formats for Modbus registers defined in the CIM.

A register data value consists of two bytes: the most significant (MSB) and the least significant (LSB). Data values are arranged with the MSB first (called big-endian).

| Data Type | Register Count | Maximum Range | Description |
|-----------|----------------|----------------|---|
| boolean | 1 | 0 or non-zero | boolean value: 0=false, non-zero=true |
| enum | 1 | 0 to max-range | enumeration: range from 0 to some maximum |
| uint8 | 1 | 0-255 | unsigned 8-bit integer (allowable values can be further limited) |
| uint16 | 1 | 0-65535 | unsigned 16-bit integer (allowable values can be further limited) |
| string | n | special | character (0-255) string, ordered: MSB1, LSB1, MSB2, LSB2, ... |
| struct | n | special | structure; definition depends on register range; ordered: MSB1=byte0, LSB1=byte1, MSB2=byte2, LSB2=byte3, ... |

8. CIM Port Configuration

| Field | Register (decimal) | Address (hex) | Register Count | Data Format | Value |
|----------------------|--------------------|---------------|----------------|-------------|--|
| Port#2 Bitrate | 40257 | 100 | 1 | enum | 0=57600, 1=38400, 2=19200, 3=14400, 4=9600, 5=4800, 6=2400, 7=1200 |
| Port#2 Bits/char | 40258 | 101 | 1 | uint8 | 7 to 8 (8) |
| Port#2 Stopbits | 40259 | 102 | 1 | uint8 | 1 to 2 (1) |
| Port#2 Parity | 40260 | 103 | 1 | enum | 0=Odd, 1=Even, 2=None, 3=Mark, 4=Space |
| Port#2 Rx Timeout | 40261 | 104 | 1 | uint16 | 0 to 65535 (20) |
| Port#2 Line Protocol | 40262 | 105 | 1 | enum | 0=RS-232, 1=RS-422, 2=RS-485, 3=auto-detect |

| | | | | | |
|-------------------------|-------|-----|---|--------|--|
| Port#3 Bitrate | 40289 | 120 | 1 | enum | 0=57600, 1=38400, 2=19200, 3=14400, 4=9600, 5=4800, 6=2400, 7=1200 |
| Port#3 Bits/char | 40290 | 121 | 1 | uint8 | 7 to 8 (8) |
| Port#3 Stopbits | 40291 | 122 | 1 | uint8 | 1 to 2 (1) |
| Port#3 Parity | 40292 | 123 | 1 | enum | 0=Odd, 1=Even, 2=None, 3=Mark, 4=Space |
| Port#3 Rx Timeout | 40293 | 124 | 1 | uint16 | 0 to 65535 (40) |
| Port#3 Line Protocol | 40294 | 125 | 1 | enum | 0=RS-232, 1=RS-422, 2=RS-485 |

The Modbus Configuration table is used specifically to assign a node address (CIM ID) to the individual CIM unit. This is used in multiple CIM configurations. The CIM's are slaves to any device connected to Port 2. However the CIM acts like a Master to anything connected to Port 3. Communication to the individual MEC 20's will be done by communicating to the CIM.

9. CIM General Configuration

| Field | Register (decimal) | Address (hex) | Register Count | Data Format | Value |
|----------------------------|-----------------------|------------------|-------------------|----------------|-------------------------------------|
| CIM ID | 40321 | 140 | 1 | uint8 | 0 to 255 (1) |
| CIM response delay (ms) | 40322 | 141 | 1 | uint16 | 0 to 5000 (30) |
| Poll bounds | 40323 | 142 | 1 | struct | see below |
| Call out enable | 40324 | 143 | 1 | boolean | 0=disabled, 1=enabled |
| Call out mode | 40325 | 144 | 1 | enum | 0=connect once, 1=connect to all |

The CIM ID is only used for programming CIM features, it is transparent when communicating with MEC 20's or TSC 800's.

The Poll Bounds structure has the following format:

byte0 = upper bound; default 255

byte1 = lower bound; default 0.

10. CIM Passwords

| Field | Register (decimal) | Address (hex) | Register Count | Data Format | Value |
|----------------------|--------------------|---------------|----------------|-------------|----------------------|
| Site Name | 40337-40345 | 150-158 | 9 | string | max-length =18 bytes |
| THS mode password | 40346-40354 | 159-161 | 9 | string | max-length =18 bytes |
| Modbus mode password | 40355-40363 | 162-16A | 9 | string | max-length =18 bytes |

11. CIM Login

| Field | Register (decimal) | Address (hex) | Register Count | Data Format | Value |
|-------------------------|--------------------|---------------|----------------|-------------|---|
| Requested Link protocol | 40385 | 180 | 1 | enum | 0=THS, 1=Modbus, 2=Fixed-Modbus |
| Requested Line protocol | 40386 | 181 | 1 | enum | 0=logoff, 1=RS-232, 2=RS-422, 3=RS-485, 4=Modem |
| Login Request Password | 40387-40395 | 182-18A | 9 | string | max-length =18 bytes |

12. CIM About

| Field | Register (decimal) | Address (hex) | Register Count | Data Format | Value |
|------------------------------|--------------------|---------------|----------------|-------------|---|
| TTI Device Type identifier | 40417 | 1A0 | 1 | enum | TTI=0xC53A |
| TTI 4 character device name | 40418-40419 | 1A1-1A2 | 2 | string | max-length = 4 bytes; "CIM3" |
| Call out requested | 40420 | 1A3 | 1 | boolean | 1=call out requested |
| Serial Number (64bit binary) | 40421-40424 | 1A4-1A7 | 4 | struct | structure-length is 8 bytes; value is factory |

| | | | | | |
|---------------------------------|-------|-----|---|--------|------------|
| | | | | | set |
| THS software version (upper) | 40425 | 1A8 | 1 | uint16 | 0 to 65535 |
| THS software version (lower) | 40426 | 1A9 | 1 | uint16 | 0 to 65535 |
| THS protocol version (upper) | 40427 | 1AA | 1 | uint16 | 0 to 65535 |
| THS protocol version (lower) | 40428 | 1AB | 1 | uint16 | 0 to 65535 |
| Modbus software version (upper) | 40429 | 1AC | 1 | uint16 | 0 to 65535 |
| Modbus software version (lower) | 40430 | 1AD | 1 | uint16 | 0 to 65535 |
| Modbus protocol version (upper) | 40431 | 1AE | 1 | uint16 | 0 to 65535 |
| Modbus protocol version (lower) | 40432 | 1AF | 1 | uint16 | 0 to 65535 |

13. CIM RTU List

| Field | Register (decimal) | Address (hex) | Register Count | Data Format | Value |
|--------------------------|--------------------|---------------|----------------|-------------|--|
| Reason for last callout | 41281 | 500 | 1 | enum | 0=RTU requested callout, 1=RTU removed, 2=RTU added, 3=bad slave response |
| Slave 1 address and type | 41282 | 501 | 1 | struct | see below |
| Slave 2 address and type | 41283 | 502 | 1 | struct | see below |
| Slave 3 address and type | 41284 | 503 | 1 | struct | see below |
| Slave 4 address and type | 41285 | 504 | 1 | struct | see below |

| | | | | | |
|---------------------------|-------|-----|---|--------|-----------|
| Slave 5 address and type | 41286 | 505 | 1 | struct | see below |
| Slave 6 address and type | 41287 | 506 | 1 | struct | see below |
| Slave 7 address and type | 41288 | 507 | 1 | struct | see below |
| Slave 8 address and type | 41289 | 508 | 1 | struct | see below |
| Slave 9 address and type | 41290 | 509 | 1 | struct | see below |
| Slave 10 address and type | 41291 | 50A | 1 | struct | see below |

The slave address and type are encoded in the following 2-byte structure:

byte0 = slave type (0=none, 1=MEC 20, 2=TSC 800),

byte1 = slave address (0 to 255).

14. CIM Callout

| Field | Register (decimal) | Address (hex) | Register Count | Data Format | Value |
|--------------------------|--------------------|---------------|----------------|-------------|-----------------------|
| Phone Number 1 | 41537-41553 | 600-610 | 17 | string | max-length = 34 bytes |
| Callout attempts count 1 | 41554 | 611 | 1 | uint8 | 0 to 9 (3) |
| Phone Number 2 | 41555-41571 | 612-622 | 17 | string | max-length = 34 bytes |
| Callout attempts count 2 | 41572 | 623 | 1 | uint8 | 0 to 9 (3) |
| Phone Number 3 | 41573-41589 | 623-634 | 17 | string | max-length = 34 bytes |
| Callout attempts count 3 | 41590 | 635 | 1 | uint8 | 0 to 9 (3) |

15. MEC 20 Register Tables

Specific MEC 20 data is received by addressing the MEC 20 and accessing the appropriate registers listed below. Using a MEC 20 address of "0" will cause all MEC 20's to respond to the request. This is usually reserved for communication with a single MEC 20 with an unknown address. Otherwise MEC 20 addresses range from 1 - 255 however only 10 RTU's (MEC 20 or TSC 800) can be connected to an individual CIM.

| Field | Register (decimal) | Address (hex) | Register Count | Data Format | Value |
|-----------------------------------|--------------------|---------------|----------------|-------------|---|
| MEC 20 Key Press (write only reg) | 40513 | 200 | 1 | struct | see MEC 20 Press Key |
| MEC 20 Valid Data/Display | 40514 | 201 | 1 | struct | see MEC 20 Valid Data/Display |
| MEC 20 Version | 40515-40527 | 202-204 | 3 | struct | see MEC 20 Get Version |
| MEC 20 Summary | 40518-40523 | 205-20A | 6 | struct | see MEC 20 Get Summary |
| MEC 20 Analog Group 0 | 40524-40530 | 20B-211 | 7 | struct | see MEC 20 Analog Values |
| MEC 20 Analog Group 1 | 40531-40539 | 212-21A | 9 | struct | see MEC 20 Analog Values |
| MEC 20 Display Group 0 | 40540-40547 | 21B-222 | 8 | string | length = 16 bytes; see MEC 20 Display Details |
| MEC 20 Display Group 1 | 40548-40555 | 223-22A | 8 | string | length = 16 bytes; see MEC 20 Display Details |
| MEC 20 Fault Details | 40556-40557 | 22B-22C | 2 | struct | length = 4 bytes; see MEC 20 Fault Details |
| MEC 20 Digital Fault 1 Message | 40558-40565 | 22D-234 | 8 | string | length = 16 bytes; see MEC 20 Fault Details |
| MEC 20 Digital Fault 2 Message | 40566-40573 | 235-23C | 8 | string | length = 16 bytes; see MEC 20 Fault Details |

| | | | | | |
|---------------------------------|-------------|---------|---|--------|---|
| MEC 20 Digital Fault 3 Message | 40574-40581 | 23D-244 | 8 | string | length = 16 bytes; see MEC 20 Fault Details |
| MEC 20 Digital Fault 4 Message | 40582-40589 | 245-24C | 8 | string | length = 16 bytes; see MEC 20 Fault Details |
| MEC 20 Digital Fault 5 Message | 40590-40597 | 24D-254 | 8 | string | length = 16 bytes; see MEC 20 Fault Details |
| MEC 20 Digital Fault 6 Message | 40598-40605 | 255-25C | 8 | string | length = 16 bytes; see MEC 20 Fault Details |
| MEC 20 Digital Fault 7 Message | 40606-40613 | 25D-264 | 8 | string | length = 16 bytes; see MEC 20 Fault Details |
| MEC 20 Digital Fault 8 Message | 40614-40621 | 265-27C | 8 | string | length = 16 bytes; see MEC 20 Fault Details |
| MEC 20 Digital Fault 9 Message | 40622-40629 | 26D-274 | 8 | string | length = 16 bytes; see MEC 20 Fault Details |
| MEC 20 Digital Fault 10 Message | 40630-40637 | 275-27C | 8 | string | length = 16 bytes; see MEC 20 Fault Details |
| MEC 20 Digital Fault 11 Message | 40638-40645 | 27D-284 | 8 | string | length = 16 bytes; see MEC 20 Fault Details |
| MEC 20 Digital Fault 12 Message | 40646-40653 | 285-28C | 8 | string | length = 16 bytes; see MEC 20 Fault Details |
| MEC 20 Estop message | 40769-40776 | 300-307 | 8 | string | length = 16 bytes; see MEC 20 Fault Details |
| MEC 20 OverCrank message | 40777-40784 | 308-30F | 8 | string | length = 16 bytes; see MEC 20 Fault Details |
| MEC 20 OverSpeed message | 40785-40792 | 310-317 | 8 | string | length = 16 bytes; see MEC 20 Fault Details |
| MEC 20 LostSpeedSignal message | 40793-40800 | 318-31F | 8 | string | length = 16 bytes; see MEC 20 Fault Details |
| MEC 20 Under Volt message | 40801-40808 | 320-327 | 8 | string | length = 16 bytes; see MEC 20 Fault Details |

| | | | | | |
|-----------------------------|-------------|---------|---|--------|---|
| MEC 20 Over Volt message | 40809-40816 | 328-32F | 8 | string | length = 16 bytes; see MEC 20 Fault Details |
| MEC 20 Under Freq message | 40817-40824 | 330-337 | 8 | string | length = 16 bytes; see MEC 20 Fault Details |
| MEC 20 Over Freq message | 40825-40832 | 338-33F | 8 | string | length = 16 bytes; see MEC 20 Fault Details |
| MEC 20 Over Current message | 40833-40840 | 340-347 | 8 | string | length = 16 bytes; see MEC 20 Fault Details |
| MEC 20 Weak Batt message | 40841-40848 | 348-34F | 8 | string | length = 16 bytes; see MEC 20 Fault Details |
| MEC 20 Low Batt message | 40849-40856 | 350-357 | 8 | string | length = 16 bytes; see MEC 20 Fault Details |
| MEC 20 Hi Batt message | 40857-40864 | 358-35F | 8 | string | length = 16 bytes; see MEC 20 Fault Details |
| MEC 20 Low Temp | 40865-40872 | 360-367 | 8 | string | length = 16 bytes; see MEC 20 Fault Details |
| MEC 20 Hi Temp1 message | 40873-40880 | 368-36F | 8 | string | length = 16 bytes; see MEC 20 Fault Details |
| MEC 20 Hi Temp2 message | 40881-40888 | 370-377 | 8 | string | length = 16 bytes; see MEC 20 Fault Details |
| MEC 20 Low Oil1 message | 40889-40896 | 378-37F | 8 | string | length = 16 bytes; see MEC 20 Fault Details |
| MEC 20 Low Oil2 message | 40897-40904 | 380-387 | 8 | string | length = 16 bytes; see MEC 20 Fault Details |

16. MEC 20 Messages (Version 1.0)

The following sections describe in detail the data registers mentioned in the above tables, for single byte data the actual byte location in the registers is included in the above mentioned tables.

16.1. MEC 20 Press Key

This message is used to remotely press a key on a MEC 20's front panel. Key press actions can be used to duplicate any local action on the MEC 20 device remotely. The key press sequences can be involved therefore it

is recommended to program the MEC 20's locally using the actual key pad and display. The key press write message is described below:

| Field | Description |
|-----------|--|
| byte 0 | This field contains the key, as follows: 0 = Null (This value is used to get the characters displayed on the LCD without pressing any of the keys) 1 = Lamp test 2 = Silence horn 3 = Reset controller 4 = Escape 5 = Decrement 6 = Increment 7 = Enter 8 = Manual 9 = Off 10 = Auto 11 = Test 12 = Emergency stop 13 = Escape from program menu 14-255 = Undefined |
| byte 1 | This field contains the number of times the key is to be pressed. |

The response message contains the current display contents.

16.2. MEC 20 Valid Data/Display

The Data/Display Valid byte is used to determine the following. If bit 0 is set (1) then the Current Data in the registers is valid. If bit 1 is set (1) then the Display Data is valid (i.e. the last Keypress command has executed successfully).

16.3. MEC 20 Get Version

This message is used to get the version information from a MEC 20. The request message does not have any data bytes. The response message has the following data bytes:

| Field | Description |
|-------|--|
| byte0 | ***PAD*** |
| byte1 | This field contains the remote type, as follows: 0 = MEC 20 1 = TSC 800 2-255 = Undefined |
| byte2 | This field contains the major MEC 20 message format version |

| | |
|-------|---|
| | number. |
| byte3 | This field contains the minor MEC 20 message format version number. |
| byte4 | This field contains the major software version number. |
| byte5 | This field contains the minor software version number. |

16.4. MEC 20 Get Summary

This message is used to get the summary information from a MEC 20. The request message does not have any data bytes. The response message has the following data bytes:

| Field | Description |
|--------------|--|
| byte0, byte1 | This field contains the summary bitmap, as follows: Bit 15 contains TRUE if a callout is required. Bit 14 contains TRUE if a shutdown is active. This bit is the equivalent of the Shutdown LED. Bit 13 contains TRUE if an alarm is active. This bit is the equivalent of the Alarm LED. Bit 12 contains TRUE if the speed signal is present. This bit is the equivalent of the Speed Signal Present LED. Bit 11 contains TRUE if the engine controller is ready. This bit is the equivalent of the Ready LED. Bit 10 contains TRUE if the emergency stop is active. This bit is the equivalent of the Emergency Stop LED. Bit 9 contains TRUE if the horn output is enabled. Bit 8 contains TRUE if the remote start input is enabled. Bits 7-0 are unused. |
| byte2 | This field contains the start mode, as follows: 0 = Manual 1 = Off 2 = Auto 3 = Load test 4-255 = Unused |
| byte3 | This field contains the system status, as follows: 0 = Switch in off 1 = Switch not in auto 2 = Unit ready 3 = Start delay 4 = Crank period 5 = Rest period 6 = Bypass delay 7 = Unit running 8 = Cooldown 9 = Unit shutdown 10-255 = Unused |

| | |
|---|---|
| byte4, byte5 | This field contains the system status timer value (in seconds). |
| byte6 (MSB), byte7, byte8, byte9(LSB) | This field contains the fault state bitmap. Each bit contains TRUE if the associated fault is active. The bits are defined as follows: Bits 31-29 are unused. Bit 28 is digital fault 12 (Fault name is programmable). Bit 27 is digital fault 11 (Fault name is programmable). Bit 26 is digital fault 10 (Fault name is programmable). Bit 25 is digital fault 9 (Fault name is programmable). Bit 24 is digital fault 8 (Fault name is programmable). Bit 23 is digital fault 7 (Fault name is programmable). Bit 22 is digital fault 6 (Fault name is programmable). Bit 21 is digital fault 5 (Fault name is programmable). Bit 20 is digital fault 4 (Fault name is programmable). Bit 19 is digital fault 3 (Fault name is programmable). Bit 18 is digital fault 2 (Fault name is programmable). Bit 17 is digital fault 1 (Fault name is programmable). Bit 16 is low oil pressure 2. Bit 15 is low oil pressure 1. Bit 14 is high engine temperature 2. Bit 13 is high engine temperature 1. Bit 12 is low engine temperature. Bit 11 is high battery. Bit 10 is low battery. Bit 9 is weak battery. Bit 8 is over current. Bit 7 is over frequency. Bit 6 is under frequency. Bit 5 is over voltage. Bit 4 is under voltage. Bit 3 is loss of speed signal. Bit 2 is over speed. Bit 1 is over crank. Bit 0 is emergency stop. |
| byte10 | ***PAD*** |
| byte11 | This field contains the EEPROM write count. This value is incremented each time the configuration information in the EEPROM is changed. The host uses this value to determine when the fault details may have changed. |

16.5. MEC 20 Analog Values

Analog Group 0 Registers are described in more detail below:

| Analog Group 0 Data | Description |
|---------------------|--|
| byte0, byte1 | This field contains the analog values bitmap, as follows: Bit 15 contains TRUE if the engine temperature is in degrees Celsius. and FALSE if the engine temperature |

| | |
|-------------------------------|--|
| | is in degrees Fahrenheit. Bit 14 contains TRUE if the oil pressure is in KPA, and FALSE if the oil pressure is in PSI. Bit 13 contains TRUE if 3 phase mode, and FALSE if 1 phase mode. Bits 12-0 are unused. |
| byte2, byte3 | This field contains the battery voltage (in tenths of volts). |
| byte4, byte5 | This field contains the engine RPM (in revolutions per minute). |
| byte6, byte7, byte8, byte9 | This field contains the run hours (in hours). |
| byte10, byte11 | This field contains the engine temperature (in degrees Celsius or degrees Fahrenheit). |
| byte12, byte13 | This field contains the oil pressure (in KPA or PSI). |

Analog Group 1 Registers are described in more detail below:

| Analog Group 1 Data | Description |
|---------------------|--|
| byte0, byte1 | 3 phase mode: This field contains the phase AB voltage (in volts). 1 Phase mode: This field contains the phase AB voltage (in volts). |
| byte2, byte3 | 3 phase mode: This field contains the phase BC voltage (in volts). 1 Phase mode: This field contains the phase AN voltage (in volts). |
| byte4, byte5 | 3 phase mode: This field contains the phase CA voltage (in volts). 1 Phase mode: This field contains the phase BN voltage (in volts). |
| byte6, byte7 | 3 phase mode: This field contains the average of the phase AB, BC, and CA voltages (in volts). 1 Phase mode: This field contains the phase AB voltage (in volts). |
| byte8, byte9 | 3 phase mode: This field contains the phase A current (in amps). 1 Phase mode: This field is unused. |
| byte10, byte11 | 3 phase mode: This field contains the phase B current (in amps). 1 Phase mode: This field contains the phase A current (in amps). |
| byte12, byte13 | 3 phase mode: This field contains the phase C current (in amps). 1 Phase mode: This field contains the phase B current (in amps). |
| byte14, byte15 | 3 phase mode: This field contains the average of the phase A, B, and C currents (in amps). |

| | |
|----------------|--|
| | 1 Phase mode: This field contains the average of the phase A and B currents (in amps). |
| byte16, byte17 | This field contains the AC frequency (in tenths of hertz). |

16.6. MEC 20 Display Details

The Display details are broken into 2 groups. Group 0 contains the 16 ASCII characters from the top line of the MEC 20 display. Group 1 contains the 16 ASCII characters from the bottom line of the display. There are too many individual display messages to list all of them here, however some basic messages should be described. The 2 most useful messages are "non-valid" and "valid". This is mainly used for confirmation that a keystroke has been sent and received by the MEC 20 correctly.

Group 0

| Field | Description |
|-----------------|---|
| byte0 to byte15 | This field contains the ASCII characters from the LCD top line. |

Group 1

| Field | Description |
|-----------------|--|
| byte0 to byte15 | This field contains the ASCII characters from the LCD bottom line. |

16.7. MEC 20 Fault Details

DigFault 1 - 12 are user programmable (see the table [MEC 20 Get Summary](#), bytes 6 to 9 for fault descriptions), the fault name register can be read or written to any value up to 16 characters long. This must be done locally on the MEC 20's.

Fault Detail Registers are described in more detail below:

| Fault Status Shutdown/Alarm | Description |
|-----------------------------|---|
| byte0, byte1 | This field contains the fault details bitmap, as follows: The bits contain TRUE if the fault is programmed as a shutdown, and FALSE if the fault is programmed as an alarm. Byte 0 contains information for digital Faults 0 - 15 (Bit15 =#15, Bit0 = #0) Byte 1 contains information for digital Faults 16 - 28 (Bit12 =#28, Bit0 =#16) |

The message format for all faults is shown below:

| Fault Message Description | Description |
|---------------------------|-------------|
| | |

| | |
|-----------------|--|
| byte0 to byte15 | This field contains the ASCII fault name. Unused characters at the end of this field are padded with spaces. |
|-----------------|--|

17. TSC 800 Register Tables

Specific TSC 800 data is received by addressing the TSC 800 and accessing the appropriate registers listed below. Using a TSC 800 address of "0" will cause all TSC 800's to respond to the request. This is usually reserved for communication with a single TSC 800 with an unknown address. Otherwise TSC 800 addresses range from 1 - 255 however only 10 RTU's (TSC 800 or MEC 20) can be connected to an individual CIM.

[table 41025 to 41065]

| Field | Register (decimal) | Address (hex) | Register Count | Data Format | Value |
|------------------------------------|--------------------|---------------|----------------|-------------|--|
| TSC 800 Key Press (write only reg) | 41025 | 400 | 1 | uint16 | see TSC 800 Press Key |
| TSC 800 Valid Data/Display | 41026 | 401 | 1 | uint8 | see TSC 800 Valid Data/Display |
| TSC 800 Version | 41027-41029 | 402-404 | 3 | struct | see TSC 800 Get Version |
| TSC 800 Summary | 41030-41036 | 405-40B | 6 | struct | see TSC 800 Get Summary |
| TSC 800 Analog Group | 41037-41049 | 40C-418 | 13 | struct | see TSC 800 Get Analog Values |
| TSC 800 Display Group 0 | 41050-41057 | 419-420 | 8 | string | see TSC 800 Display Details |
| TSC 800 Display Group 1 | 41058-41065 | 421-428 | 8 | string | see TSC 800 Display Details |

18. TSC 800 Messages (Version 1.0)

The following sections describe in detail the data registers mentioned in the above tables, for single byte data the actual byte location in the registers is included in the above mentioned tables.

18.1. TSC 800 Press Key

This message is used to remotely press a key on a TSC 800's front panel. It is also used to get the characters displayed on a TSC 800's LCD. The request message has the following data bytes:

| Field | Description |
|-------|---|
| byte0 | This field contains the key, as follows: 0 = Null (This value is used to get the characters displayed on the LCD without pressing any of the keys). 1 = Lamp test 2 = Previous 3 = Decrement 4 = Increment 5 = Next 6 = No manual test 7 = Manual offload test 8 = Manual onload test 9 = Escape from program menu 10-255 = Unused |
| byte1 | This field contains the number of times the key is to be pressed. |

The response message contains the current display contents.

18.2. TSC 800 Valid Data/Display

The Data/Display Valid byte (byte1, LSB) is used to determine the following.

If bit 0 is set (1) then the Current Data in the registers is valid.

If bit 1 is set (1) then the Display Data is valid (i.e. the last Keypress command has executed successfully).

18.3. TSC 800 Get Version

This message is used to get the version information from a TSC 800. The request message does not have any data bytes. The response message has the following data bytes:

| Field | Description |
|-------|--|
| byte0 | *** PAD *** |
| byte1 | This field contains the remote type, as follows: 0 = MEC 20 1 = TSC 800 2-255 = Undefined |
| byte2 | This field contains the major TSC 800 message format version number. |

| | |
|-------|--|
| byte3 | This field contains the minor TSC 800 message format version number. |
| byte4 | This field contains the major software version number. |
| byte5 | This field contains the minor software version number. |

18.4. TSC 800 Get Summary

This message is used to get the summary information from a TSC 800. The request message does not have any data bytes. The response message has the following data bytes:

| Field | Description |
|-----------------|--|
| byte0, byte1 | This field contains the summary bitmap, as follows: Bit 15 contains TRUE if a callout is required. Bit 14 contains TRUE if dual prime mode, and FALSE if standard mode. Bit 13 contains TRUE if Src2 prime, and FALSE if Src1 prime. Bit 12 contains TRUE if a transfer switch failure has occurred. Bit 11 is unused in standard mode. This bit contains TRUE if the Src1 Start output is enabled in dual prime mode. Bit 10 contains TRUE if the Src2 Start output is enabled. Bit 9 contains TRUE if the Src1 Pretransfer output is enabled. Bit 8 contains TRUE if the Src2 Pretransfer output is enabled. Bit 7 contains TRUE if the Src1 Transfer output is enabled. Bit 6 contains TRUE if the Src2 Transfer output is enabled. Bit 5 contains TRUE if the Load On Src1 input is enabled. Bit 4 contains TRUE if the Load On Src2 input is enabled. Bits 3-0 are unused. |
| byte2 | This field contains the test mode, as follows: 0 = None 1 = Switch offload test 2 = Switch onload test 3 = Switch off 4 = Manual offload test 5 = Manual onload test 6 = Auto offload test 7 = Auto onload test 8-255 = Unused |
| byte3 | This field contains the system status, as follows: 0 = Src1 start delay 1 = Src2 start delay 2 = Src1 warmup delay 3 = Src2 warmup delay 4 = Pretransfer delay 5 = Finding neutral 6 = Neutral delay 7 = Transferring 8 = Transfer failed, press lamptest |

| |
|---|
| 9 = Posttransfer delay |
| 10 = Src1 return delay |
| 11 = Src2 return delay |
| 12 = Src1 cooling |
| 13 = Src2 cooling |
| 14 = Src1 auto, Src2 auto |
| 15 = Src1 auto, Src2 failed |
| 16 = Src1 auto, Src2 normal |
| 17 = Src1 auto, Src2 offload test |
| 18 = Src1 auto, Src2 onload test |
| 19 = Src1 auto, Src2 ready |
| 20 = Src1 auto, Src2 running |
| 21 = Src1 auto, Src2 starting |
| 22 = Src1 auto, Src2 switch off |
| 23 = Src1 failed, Src2 auto |
| 24 = Src1 failed, Src2 failed |
| 25 = Src1 failed, Src2 normal |
| 26 = Src1 failed, Src2 offload test |
| 27 = Src1 failed, Src2 onload test |
| 28 = Src1 failed, Src2 ready |
| 29 = Src1 failed, Src2 running |
| 30 = Src1 failed, Src2 starting |
| 31 = Src1 failed, Src2 switch off |
| 32 = Src1 normal, Src2 auto |
| 33 = Src1 normal, Src2 failed |
| 34 = Src1 normal, Src2 normal |
| 35 = Src1 normal, Src2 offload test |
| 36 = Src1 normal, Src2 onload test |
| 37 = Src1 normal, Src2 ready |
| 38 = Src1 normal, Src2 running |
| 39 = Src1 normal, Src2 starting |
| 40 = Src1 normal, Src2 switch off |
| 41 = Src1 offload test, Src2 auto |
| 42 = Src1 offload test, Src2 failed |
| 43 = Src1 offload test, Src2 normal |
| 44 = Src1 offload test, Src2 offload test |
| 45 = Src1 offload test, Src2 onload test |
| 46 = Src1 offload test, Src2 ready |
| 47 = Src1 offload test, Src2 running |
| 48 = Src1 offload test, Src2 starting |
| 49 = Src1 offload test, Src2 switch off |
| 50 = Src1 onload test, Src2 auto |
| 51 = Src1 onload test, Src2 failed |
| 52 = Src1 onload test, Src2 normal |
| 53 = Src1 onload test, Src2 offload test |
| 54 = Src1 onload test, Src2 onload test |
| 55 = Src1 onload test, Src2 ready |
| 56 = Src1 onload test, Src2 running |
| 57 = Src1 onload test, Src2 starting |
| 58 = Src1 onload test, Src2 switch off |

| | |
|-----------------|--|
| | <p>59 = Src1 ready, Src2 auto 60 = Src1 ready, Src2 failed 61 = Src1 ready, Src2 normal 62 = Src1 ready, Src2 offload test 63 = Src1 ready, Src2 onload test 64 = Src1 ready, Src2 ready 65 = Src1 ready, Src2 running 66 = Src1 ready, Src2 starting 67 = Src1 ready, Src2 switch off 68 = Src1 running, Src2 auto 69 = Src1 running, Src2 failed 70 = Src1 running, Src2 normal 71 = Src1 running, Src2 offload test 72 = Src1 running, Src2 onload test 73 = Src1 running, Src2 ready 74 = Src1 running, Src2 running 75 = Src1 running, Src2 starting 76 = Src1 running, Src2 switch off 77 = Src1 starting, Src2 auto 78 = Src1 starting, Src2 failed 79 = Src1 starting, Src2 normal 80 = Src1 starting, Src2 offload test 81 = Src1 starting, Src2 onload test 82 = Src1 starting, Src2 ready 83 = Src1 starting, Src2 running 84 = Src1 starting, Src2 starting 85 = Src1 starting, Src2 switch off 86 = Src1 switch off, Src2 auto 87 = Src1 switch off, Src2 failed 88 = Src1 switch off, Src2 normal 89 = Src1 switch off, Src2 offload test 90 = Src1 switch off, Src2 onload test 91 = Src1 switch off, Src2 ready 92 = Src1 switch off, Src2 running 93 = Src1 switch off, Src2 starting 94 = Src1 switch off, Src2 switch off 95-255 = Unused</p> |
| byte4, byte5 | This field contains the system status timer value (in seconds). |
| byte6, byte7 | <p>This field contains the fault state bitmap. Each bit contains TRUE if the associated fault is active. The bits are defined as follows: Bits 15-8 are unused. Bit 7 is Src2 over frequency. Bit 6 is Src2 under frequency. Bit 5 is Src2 over voltage. Bit 4 is Src2 under voltage. Bit 3 is Src1 over frequency. Bit 2 is Src1 under frequency. Bit 1 is Src1 over voltage.</p> |

| | |
|-----------------|--|
| | Bit 0 is Src1 under voltage. |
| byte8, byte9 | This field contains the fault visible bitmap. Each bit contains TRUE if the associated fault is visible. The bits are defined as follows: Bits 15-8 are unused. Bit 7 is Src2 over frequency. Bit 6 is Src2 under frequency. Bit 5 is Src2 over voltage. Bit 4 is Src2 under voltage. Bit 3 is Src1 over frequency. Bit 2 is Src1 under frequency. Bit 1 is Src1 over voltage. Bit 0 is Src1 under voltage. |
| byte10 | This field contains the day of the week of the system time, as follows: 0 = Sunday 1 = Monday 2 = Tuesday 3 = Wednesday 4 = Thursday 5 = Friday 6 = Saturday 7-255 = Unused |
| byte11 | This field contains the hour of the system time. Valid values are 0-59. |
| byte12 | This field contains the minute of the system time. Valid values are 0-59. |
| byte13 | This field contains the second of the system time. Valid values are 0-59. |

18.5. TSC 800 Get Analog Values

This message is used to get the analog values from a TSC 800. The request message does not have any data bytes. The response message has the following data bytes:

| Field | Description |
|--------------|--|
| byte0, byte1 | This field contains the analog values bitmap, as follows: Bit 15 contains TRUE if 3 phase mode, and FALSE if 1 phase mode. Bits 14-0 are unused. |
| byte2, byte3 | This field contains the Src1 phase AB voltage (in volts). |
| byte4, byte5 | 3 phase mode: This field contains the Src1 phase BC voltage (in volts). 1 Phase mode: This field contains the Src1 phase AN voltage (in volts). |
| byte6, byte7 | 3 phase mode: This field contains the Src1 phase CA voltage (in volts). |

| | |
|----------------|--|
| | 1 Phase mode: This field contains the Src1 phase BN voltage (in volts). |
| byte8, byte9 | This field contains the Src1 frequency (in tenths of hertz). |
| byte10, byte11 | This field contains the Src2 phase AB voltage (in volts). |
| byte12, byte13 | 3 phase mode: This field contains the Src2 phase BC voltage (in volts). 1 Phase mode: This field contains the Src2 phase AN voltage (in volts). |
| byte14, byte15 | 3 phase mode: This field contains the Src2 phase CA voltage (in volts). 1 Phase mode: This field contains the Src2 phase BN voltage (in volts). |
| byte16, byte17 | This field contains the Src2 frequency (in tenths of hertz). |
| byte18, byte19 | This field contains the load phase AB voltage (in volts). |
| byte20, byte21 | This field is unused. |
| byte22, byte23 | This field is unused. |
| byte24, byte25 | This field contains the load frequency (in tenths of hertz). |

18.6. TSC 800 Display Details

The Display details are broken into 2 groups. Group 0 contains the 16 ASCII characters from the top line of the TSC 800 display. Group 1 contains the 16 ASCII characters from the bottom line of the display. There are too many individual display messages to list all of them here, however some basic messages should be described. The 2 most useful messages are "non-valid" and "valid". This is mainly used for confirmation that a keystroke has been sent and received by the TSC 800 correctly.

Group 0

| Field | Description |
|-----------------|---|
| byte0 to byte15 | This field contains the ASCII characters from the LCD top line. |

Group 1

| Field | Description |
|-----------------|--|
| byte0 to byte15 | This field contains the ASCII characters from the LCD bottom line. |

19. CRC Calculation

The Cyclical Redundancy Check (CRC) calculation used by Modbus is commonly called the CRC-16 algorithm. Refer to [A Painless Guide To CRC Error Detection Algorithms](#) by Ross N. Williams for more detailed information; using the terminology of that paper, the CRC algorithm used by the CIM is:

Name : "CRC-16"

Width : 16

Poly : 8005

Init : FFFF

RefIn : True

RefOut : True

XorOut : 0000

Check : BB3D

The following is a C code implementation of the CRC-16 method:

```
unsigned short CalculateCrc(unsigned char *pAddress, int nByteCount)
{
    unsigned short wCrcValue = 0xffff;

    while (nByteCount--)
    {
        wCrcValue ^= *pAddress;
        for (int i = 0; i < 8; i++)
        {
            if (wCrcValue & 1)
            {
                wCrcValue >>= 1;
                wCrcValue ^= 0xa001;
            }
            else
            {
                wCrcValue >>= 1;
            }
        }
        pAddress++;
    }
    return wCrcValue;
}
```

20. NOTES: