

Application and Installation

DDEC® for MBE 900 and MBE 4000

DDEC-VCU/ADM2 Software Version 14

DDEC-ECU Software Version 53, 56, and 60

DETROIT DIESEL



Detroit Diesel Corporation
13400 Outer Drive, West / Detroit, Michigan 48239-4001
Telephone: 313-592-5000
Fax: 313-592-8176
<http://www.detroitdiesel.com>

Detroit Diesel®, DDC®, DDEC® and the spinning arrows design are registered trademarks of Detroit Diesel Corporation. All other trademarks are the property of their respective owners.

Printed in U.S.A.

All information subject to change without notice.

7SA825 0511 Copyright © 2005 DETROIT DIESEL CORPORATION. All rights reserved.

**CALIFORNIA
Proposition 65 Warning**

Diesel engine exhaust and some of its constituents are known to the State of California to cause cancer, birth defects, and other reproductive harm.

ATTENTION

This document is a guideline for qualified personnel. It is intended to be used by vehicle manufacturers and contains Detroit Diesel Corporation's recommendations for the ancillary systems supporting the Detroit Diesel engines covered by this document. The vehicle manufacturer is responsible for developing, designing, manufacturing and installing these systems, including component qualification. The vehicle manufacturer is also responsible for furnishing vehicle users complete service and safety information for these systems. Detroit Diesel Corporation makes no representations or warranties regarding the information contained in this document and disclaims all liability or other responsibility for the design, manufacture or installation of these ancillary systems, or the preparation or distribution to vehicle users of appropriate information regarding these systems. The information contained in this document may not be complete and is subject to change without notice.

Trademark Information

Detroit Diesel®, DDEC®, and Diagnostic Link® are registered trademarks of Detroit Diesel Corporation. Voith® is a registered trademark of JM Voith GmbH. Nexiq™ is a trademark of Nexiq Technologies, Inc. All other trademarks are the property of their respective owners.

DDEC FOR MBE900 AND MBE4000

ABSTRACT

DDEC for MBE900 and MBE4000 offers engine controls and an extensive range of engine and vehicle options.

The detail provided will facilitate the following:

- The selection of features and settings, based on individual applications
- The fabrication and installation of a vehicle interface harness, based on individual applications
- The communication of messages & data between sensors and various electronic control modules within the installation
- The use of industry standard tools to obtain engine data and diagnostic information, as well as to reprogram key parameters

The manual is arranged as follows:

- The initial portion covers the installation, beginning with an overview and safety precautions, followed by hardware and wiring requirements, inputs and outputs, and available features.
- The second portion covers communication protocol.
- The third portion covers the tools capable of obtaining engine data and diagnostic information from the DDEC-ECU and the DDEC-VCU, as well as reprogramming of its key parameters.
- The fourth portion covers application specific recommendations.
- The final portion summarizes detailed information on codes and kit availability.

This manual does not cover the installation of the engine itself into various applications. For this, the reader should refer to the specific engine application and installation manual.

This manual is intended for those with an electrical background. A simple installation may require a basic understanding of electrical circuits while a more comprehensive electrical/electronics background is required to access all the capability of DDEC for MBE900 and MBE4000.

TABLE OF CONTENTS

1	INTRODUCTION	1-1
1.1	ADVANTAGES	1-1
2	SAFETY PRECAUTIONS	2-1
2.1	STANDS	2-1
2.2	GLASSES	2-1
2.3	WELDING	2-2
2.4	WORK PLACE	2-3
2.5	CLOTHING	2-4
2.6	ELECTRIC TOOLS	2-4
2.7	AIR	2-5
2.8	FLUIDS AND PRESSURE	2-5
2.9	BATTERIES	2-6
2.10	FIRE	2-6
2.11	FLUROELASTOMER	2-7
3	HARDWARE AND WIRING	3-1
3.1	OVERVIEW	3-3
3.2	DDEC-ECU – ENGINE-RESIDENT CONTROL UNIT	3-5
3.2.1	ENVIRONMENTAL CONDITIONS	3-6
	TEMPERATURE	3-6
	VIBRATION	3-6
	WATER INTRUSION	3-6
3.2.2	ENGINE HARNESS	3-7
3.2.3	POWER SUPPLY	3-12
3.2.4	FUSES	3-13
3.2.5	PROPORTIONAL VALVE CONTROL	3-14
3.2.6	CONNECTORS	3-15
3.3	DDEC-VCU	3-17
3.3.1	ENVIRONMENTAL CONDITIONS	3-19
	TEMPERATURE	3-19
	WATER INTRUSION	3-19
3.3.2	VEHICLE INTERFACE HARNESS DESIGN	3-20
	FREQUENCY INPUT	3-22
	DIGITAL INPUTS	3-23
	DIGITAL OUTPUTS	3-25
	ANALOG INPUTS AND OUTPUTS	3-26
	DATA LINKS	3-27
3.3.3	VEHICLE INTERFACE HARNESS WIRING	3-28
	VIH TO DDEC-ECU CONNECTOR WIRING	3-32
	VIH TO EH CONNECTOR WIRING	3-33
	VIH POWER WIRING	3-36
	COMMUNICATIONS – SAE J1939 DATA LINK	3-38
	COMMUNICATIONS – PROPRIETARY IES-CAN DATA LINK	3-39

3.3.4	POWER SUPPLY – 12 VOLT SYSTEM	3-39
	AVERAGE CURRENT DRAW	3-40
	BATTERY ISOLATOR	3-40
	MAIN POWER SHUTDOWN	3-41
3.3.5	POWER SUPPLY – 24 VOLT SYSTEM	3-42
	AVERAGE CURRENT DRAW	3-43
	BATTERY ISOLATOR	3-43
	MAIN POWER SHUTDOWN	3-44
3.3.6	FUSES	3-45
3.3.7	CONNECTORS	3-47
	SAE J1939/J1587 SIX-PIN DATA LINK CONNECTOR	3-49
	SAE J1939/J1587 NINE-PIN DATA LINK CONNECTOR (RECOMMENDED)	3-50
3.3.8	GRID HEATER	3-51
	WIRING THE GRID HEATER	3-52
3.4	WIRES AND WIRING	3-53
3.4.1	GENERAL REQUIREMENTS	3-53
3.4.2	GENERAL WIRE	3-53
3.4.3	CRIMP TOOLS	3-54
3.4.4	DEUTSCH TERMINAL INSTALLATION AND REMOVAL	3-54
	DEUTSCH TERMINAL INSTALLATION GUIDELINES	3-54
	DEUTSCH TERMINAL REMOVAL	3-56
3.4.5	SPLICING GUIDELINES	3-58
	CLIPPED AND SOLDERED SPLICING METHOD	3-58
	SPLICING AND REPAIRING STRAIGHT LEADS-ALTERNATE METHOD 1	3-60
	SPLICING AND REPAIRING STRAIGHT LEADS - ALTERNATE METHOD 2	3-63
	SHRINK WRAP	3-65
	STAGGERING WIRE SPLICES	3-66
3.5	CONDUIT AND LOOM	3-67
3.6	TAPE AND TAPING	3-69
3.7	SENSORS	3-71
3.7.1	FACTORY-INSTALLED SENSORS	3-71
3.7.2	OEM-INSTALLED SENSORS	3-75
3.7.3	ENGINE COOLANT LEVEL SENSOR	3-76
3.7.4	VEHICLE SPEED SENSOR	3-80
	MAGNETIC PICKUP	3-81
	SAE J1939 DATA LINK	3-83
	VSS ANTI-TAMPER	3-83
4	INPUTS AND OUTPUTS	4-1
4.1	DIGITAL INPUTS	4-3
4.1.1	AIR CONDITION STATUS	4-4
	INSTALLATION	4-4
	PROGRAMMING REQUIREMENTS AND FLEXIBILITY	4-4
4.1.2	CLUTCH SWITCH	4-5
	INSTALLATION	4-5
	PROGRAMMING REQUIREMENTS AND FLEXIBILITY	4-5
4.1.3	CRUISE CONTROL ON/OFF SWITCH	4-6

	INSTALLATION	4-6
	PROGRAMMING REQUIREMENTS AND FLEXIBILITY	4-6
4.1.4	CRUISE CONTROL RESUME / ACCEL SWITCH AND SET/COAST SWITCH	4-7
	INSTALLATION	4-7
	PROGRAMMING REQUIREMENTS AND FLEXIBILITY	4-7
	DIAGNOSTICS	4-7
4.1.5	TORQUE, ENGINE SPEED, VEHICLE SPEED LIMITERS	4-8
	INSTALLATION	4-8
	PROGRAMMING REQUIREMENTS AND FLEXIBILITY	4-8
4.1.6	DUAL SPEED AXLE SWITCH	4-8
	INSTALLATION	4-8
	PROGRAMMING REQUIREMENTS AND FLEXIBILITY	4-8
4.1.7	ENGINE BRAKE LOW & HIGH	4-9
	INSTALLATION	4-9
	PROGRAMMING REQUIREMENTS AND FLEXIBILITY	4-9
4.1.8	FAN OVERRIDE	4-9
	INSTALLATION	4-9
4.1.9	IDLE VALIDATION 1 & IDLE VALIDATION 2	4-10
	INSTALLATION	4-10
4.1.10	OPTIMIZED IDLE HOOD TILT SWITCH	4-10
	INSTALLATION	4-10
	PROGRAMMING REQUIREMENTS AND FLEXIBILITY	4-10
4.1.11	OPTIMIZED IDLE THERMOSTAT	4-11
	INSTALLATION	4-11
	PROGRAMMING REQUIREMENTS AND FLEXIBILITY	4-11
4.1.12	PARK BRAKE SWITCH	4-11
	INSTALLATION	4-11
	PROGRAMMING REQUIREMENTS & FLEXIBILITY	4-11
4.1.13	REMOTE VSG SWITCH	4-12
	INSTALLATION	4-12
4.1.14	SERVICE BRAKE SWITCH	4-12
	INSTALLATION	4-12
	PROGRAMMING REQUIREMENTS & FLEXIBILITY	4-12
4.1.15	SHUTDOWN OVERRIDE SWITCH	4-13
	INSTALLATION	4-13
4.1.16	THROTTLE INHIBIT	4-13
	INSTALLATION	4-13
4.1.17	REMOTE ACCELERATOR SELECT SWITCH	4-13
	INSTALLATION	4-13
	PROGRAMMING REQUIREMENTS & FLEXIBILITY	4-13
4.1.18	TRANSMISSION NEUTRAL SWITCH	4-14
	INSTALLATION	4-14
	PROGRAMMING REQUIREMENTS & FLEXIBILITY	4-14
4.2	SWITCH INPUTS RECEIVED OVER J1939 DATA LINK	4-15
4.3	DIGITAL OUTPUTS	4-17
4.3.1	AMBER WARNING LAMP	4-17
	INSTALLATION	4-17

4.3.2	GEAR OUT 1	4-18
	INSTALLATION	4-18
4.3.3	GRID HEATER CONTROL	4-19
	INSTALLATION	4-19
	PROGRAMMING REQUIREMENTS AND FLEXIBILITY	4-19
4.3.4	OIL LEVEL LOW LAMP	4-19
	INSTALLATION	4-19
4.3.5	OPTIMIZED IDLE ACTIVE LAMP	4-20
	INSTALLATION	4-20
	PROGRAMMING REQUIREMENTS AND FLEXIBILITY	4-20
	DIAGNOSTICS	4-20
4.3.6	OPTIMIZED IDLE ALARM	4-21
	INSTALLATION	4-21
	PROGRAMMING REQUIREMENTS AND FLEXIBILITY	4-21
	DIAGNOSTICS	4-21
4.3.7	RED STOP LAMP	4-21
	INSTALLATION	4-21
4.3.8	STARTER LOCKOUT	4-22
	INSTALLATION	4-22
	4-22
4.3.9	VEHICLE POWER SHUTDOWN	4-22
	INSTALLATION	4-22
4.3.10	WAIT TO START LAMP	4-23
	INSTALLATION	4-23
5	FEATURES	5-1
5.1	ANTI-LOCK BRAKE/AUTOMATIC TRACTION CONTROL SYSTEMS	5-5
5.1.1	OPERATION	5-5
5.2	COLD START	5-7
5.2.1	OPERATION	5-7
	INITIALIZATION	5-7
	PREHEATING STATE	5-7
	WAITING FOR ENGINE START	5-8
	ENGINE START	5-8
	POST-HEATING STATE	5-8
	COOLING OFF	5-8
	OFF	5-8
5.2.2	INSTALLATION	5-8
5.2.3	PROGRAMMING REQUIREMENTS AND FLEXIBILITY	5-8
5.2.4	DIAGNOSTICS	5-9
5.3	CRUISE CONTROL	5-11
5.3.1	OPERATION	5-11
	VEHICLE SPEED CRUISE CONTROL	5-11
	ENGINE BRAKES IN CRUISE CONTROL (OPTIONAL)	5-12
	CRUISE AUTO RESUME (OPTIONAL)	5-12
	SMART CRUISE	5-12
	CRUISE ENABLE	5-13

	SET / COAST	5-13
	RESUME / ACCEL	5-13
	CLUTCH RELEASED (MANUAL TRANSMISSIONS)	5-14
	SERVICE BRAKE RELEASED (AUTOMATIC AND MANUAL TRANSMIS- SIONS)	5-14
	THROTTLE INHIBIT SWITCH	5-14
	CRUISE CONTROL MODES	5-15
5.3.2	INSTALLATION	5-15
5.3.3	PROGRAMMING REQUIREMENTS AND FLEXIBILITY	5-17
5.4	DIAGNOSTICS	5-19
5.4.1	OPERATION	5-19
5.5	DUAL SPEED AXLE	5-21
5.5.1	OPERATION	5-21
5.5.2	PROGRAMMING FLEXIBILITY & REQUIREMENTS	5-21
5.6	ENGINE BRAKE CONTROLS	5-23
5.6.1	OPERATION	5-23
	CRUISE CONTROL WITH ENGINE BRAKE	5-24
	SERVICE BRAKE CONTROL OF ENGINE BRAKES	5-24
	ENGINE BRAKES WITH ROAD SPEED LIMITER	5-24
5.6.2	PROGRAMMING REQUIREMENTS AND FLEXIBILITY	5-24
	CONFIGURATION FOR MBE 900 COMPRESSION BRAKE (CONSTANT THROTTLE) ONLY APPLICATION	5-25
	CONFIGURATION FOR MBE 900 COMPRESSION BRAKE AND EXHAUST BRAKE APPLICATIONS	5-28
	CONFIGURATION FOR MBE 4000 COMPRESSION BRAKE AND EXHAUST BRAKE APPLICATIONS	5-31
	CONFIGURATION FOR COMPRESSION BRAKE AND TURBO BRAKE APPLICATIONS	5-34
	CRUISE CONTROL OF ENGINE BRAKE OPTION	5-37
	ENGINE BRAKE OPTION WITH SERVICE BRAKE	5-38
	ENGINE BRAKES OPTION WITH MINIMUM KPH	5-38
	ENGINE BRAKE OPTION WITH VEHICLE SPEED LIMIT	5-38
5.6.3	INTERACTION WITH OTHER FEATURE	5-38
5.7	ENGINE PROTECTION	5-39
5.7.1	OPERATION	5-39
	RAMPDOWN (DERATE)	5-40
	SHUTDOWN	5-42
5.7.2	STOP ENGINE OVERRIDE OPTION	5-44
5.7.3	PROGRAMMING FLEXIBILITY	5-45
5.8	ENGINE STARTER CONTROL	5-47
5.8.1	PROGRAMMING REQUIREMENTS AND FLEXIBILITY	5-48
5.9	FAN CONTROL	5-49
5.9.1	OPERATION	5-49
5.9.2	SINGLE FAN	5-50
	SINGLE SPEED FAN INSTALLATION	5-51
5.9.3	DUAL FANS	5-52
	DUAL FANS INSTALLATION	5-54

5.9.4	TWO-SPEED FAN	5-54
	TWO-SPEED FAN INSTALLATION	5-56
5.9.5	VARIABLE SPEED SINGLE-FAN	5-56
	INSTALLATION	5-58
5.9.6	PROGRAMMING REQUIREMENTS AND FLEXIBILITY	5-59
5.10	FUEL ECONOMY INCENTIVE	5-63
5.10.1	OPERATION	5-63
5.10.2	PROGRAMMING FLEXIBILITY	5-64
5.10.3	INTERACTION WITH OTHER FEATURES	5-64
5.11	IDLE SHUTDOWN TIMER AND VSG SHUTDOWN	5-65
5.11.1	OPERATION	5-65
	IDLE SHUTDOWN OVERRIDE - OPTIONAL	5-66
	VEHICLE POWER SHUTDOWN - OPTIONAL	5-66
	SHUTDOWN ON VSG - OPTIONAL	5-67
	MAXIMUM ENGINE LOAD SHUTDOWN — OPTIONAL	5-67
5.11.2	PROGRAMMING REQUIREMENTS AND FLEXIBILITY	5-67
5.12	LIMITERS	5-69
5.12.1	OPERATION	5-69
5.12.2	INSTALLATION	5-69
5.12.3	PROGRAMMING REQUIREMENTS AND FLEXIBILITY	5-70
5.13	LOW GEAR TORQUE LIMITING	5-73
5.13.1	OPERATION	5-73
	EXAMPLE 1 – ONE TORQUE LIMIT	5-73
	EXAMPLE 2 – TWO TORQUE LIMITS	5-74
5.13.2	PROGRAMMING REQUIREMENTS AND FLEXIBILITY	5-75
5.14	MANAGEMENT INFORMATION PRODUCTS	5-77
5.14.1	OPERATION	5-77
5.14.2	DDEC DATA	5-78
5.14.3	DDEC REPORTS	5-78
5.14.4	DETROIT DIESEL DATA SUMMARIES	5-83
5.14.5	PRODRIVER DC	5-84
	PRODRIVER DC INSTALLATION	5-85
5.14.6	MANAGEMENT INFORMATION PRODUCTS KITS	5-93
5.15	OPTIMIZED IDLE	5-95
5.15.1	OPERATION	5-95
	ENGINE MODE	5-96
	THERMOSTAT MODE	5-96
	OPTIMIZED IDLE START UP SEQUENCE	5-96
5.15.2	INSTALLATION	5-97
5.15.3	PROGRAMMING REQUIREMENTS AND FLEXIBILITY	5-98
5.15.4	INTERACTION WITH OTHER FEATURES	5-98
5.16	PASSMART	5-99
5.16.1	OPERATION	5-99
5.16.2	INSTALLATION	5-100
5.16.3	PROGRAMMING REQUIREMENTS AND FLEXIBILITY	5-101
5.16.4	INTERACTION WITH OTHER FEATURES	5-101
5.17	PASSWORDS	5-103

5.17.1	OPERATION	5-103
	BACK DOOR PASSWORD	5-103
	CHANGING THE PASSWORD	5-103
5.18	PROGRESSIVE SHIFT	5-105
5.18.1	OPERATION	5-105
5.18.2	GEAR RATIO THRESHOLD	5-106
5.18.3	INSTALLATION INFORMATION	5-106
5.18.4	PROGRAMMING REQUIREMENTS AND FLEXIBILITY	5-106
5.19	STARTER LOCKOUT	5-107
5.19.1	OPERATION	5-107
5.19.2	INSTALLATION	5-108
5.19.3	PROGRAMMING REQUIREMENTS AND FLEXIBILITY	5-108
5.20	TACHOMETER DRIVE	5-109
5.20.1	OPERATION	5-109
5.21	THROTTLE CONTROL/GOVERNORS	5-111
5.21.1	AUTOMOTIVE LIMITING SPEED GOVERNOR - ON-HIGHWAY	5-111
	ALSG ACCELERATOR PEDAL	5-111
	ALSG ACCELERATOR PEDAL INSTALLATION	5-111
	ALSG ELECTRONIC FOOT PEDAL ASSEMBLY DIAGNOSTICS	5-112
5.21.2	VARIABLE SPEED GOVERNOR	5-112
	CAB VSG – CRUISE SWITCH VSG	5-114
	CRUISE SWITCH VSG PROGRAMMING REQUIREMENT AND FLEXIBILITY .	5-116
	REMOTE VSG MODE	5-119
	INSTALLATION	5-120
	REMOTE VSG PROGRAMMING REQUIREMENT AND FLEXIBILITY	5-120
	REMOTE ACCELERATOR CONTROL FOR VSG OR ALSG	5-123
	REMOTE ACCELERATOR CONTROL EXAMPLE	5-123
	INSTALLATION	5-124
5.22	TRANSMISSION INTERFACE	5-125
5.22.1	INSTALLATIONS	5-125
	AGS2 INSTALLATION	5-125
5.22.2	PROGRAMMING REQUIREMENTS AND FLEXIBILITY	5-127
5.23	VEHICLE SPEED LIMITING	5-131
5.23.1	OPERATION	5-131
5.23.2	INSTALLATION	5-131
5.23.3	PROGRAMMING REQUIREMENTS AND FLEXIBILITY	5-131
5.23.4	INTERACTION WITH OTHER FEATURES	5-132
5.24	VEHICLE SPEED SENSOR ANTI-TAMPERING	5-133
5.24.1	PROGRAMMING FLEXIBILITY	5-133
6	COMMUNICATION PROTOCOLS— DDEC-VCU	6-1
6.1	OVERVIEW	6-3
6.2	SAE J1587 – DDEC-VCU ONLY	6-5
6.2.1	MESSAGE FORMAT	6-5
	SAE J1587 PARAMETERS AVAILABLE WITH DDEC FOR MBE 900 AND MBE	
	4000	6-7
6.2.2	J1708/J1587 MESSAGE PRIORITY	6-9

6.2.3	SAE J1587 PIDS REQUIRING ACTION	6-9
	DATA REQUEST	6-9
	COMPONENT SPECIFIC REQUEST	6-9
	TRANSMITTER DATA REQUEST / CLEAR COUNT	6-10
	J1587 OUTPUTS - SINGLE BYTE PARAMETERS	6-11
	DOUBLE BYTE PARAMETERS	6-20
	VARIABLE LENGTH PARAMETERS	6-22
6.3	SAE J1939 – DDEC-VCU SUPPORTED MESSAGES	6-27
6.3.1	MESSAGE FORMAT	6-27
6.3.2	SAE J1939/71 APPLICATION LAYER	6-27
	ELECTRONIC ENGINE CONTROLLER #1 -- EEC1	6-28
	ELECTRONIC ENGINE CONTROLLER #2 -- EEC2	6-29
	ELECTRONIC ENGINE CONTROLLER #3 -- EEC3	6-30
	ENGINE TEMPERATURE #1 – ET1	6-30
	ENGINE FLUID LEVEL/PRESSURE – EFL/P1	6-31
	CRUISE CONTROL / VEHICLE SPEED – CCVS	6-32
	VEHICLE ELECTRICAL POWER – VEP	6-34
	ELECTRONIC RETARDER CONTROLLER #1 - ERC1	6-35
	COMPONENT IDENTIFICATION – CI	6-36
	ENGINE CONFIGURATION	6-36
	TORQUE SPEED CONTROL — TSC1	6-38
	ELECTRONIC TRANSMISSION CONTROLLER #1 -- ETC1	6-39
	ELECTRONIC TRANSMISSION CONTROLLER #2 -- ETC2	6-40
	ELECTRONIC BRAKE CONTROLLER #1 -- EBC1	6-41
	RETARDER CONFIGURATION – RC	6-42
	FUEL ECONOMY (LIQUID) – LFE	6-43
	INLET/EXHAUST CONDITIONS – IC	6-44
	ENGINE HOURS, REVOLUTIONS – HOURS	6-44
	FUEL CONSUMPTION (LIQUID) – LFC	6-45
6.3.3	SAE J1939/21 DATA LINK LAYER	6-46
	REQUESTS	6-46
6.3.4	SAE J1939/73 DIAGNOSTIC LAYER	6-47
	ACTIVE DIAGNOSTIC TROUBLE CODES – DM1	6-47
APPENDIX A: FAULT CODES		A-1
APPENDIX B: CUSTOMER PROGRAMMABLE PARAMETERS		B-1
B.1	COLD START	B-1
B.2	CRUISE CONTROL	B-2
B.3	ENGINE BRAKE	B-4
3.1	CONFIGURATION FOR MBE 900 COMPRESSION BRAKE (CONSTANT THROTTLE) ONLY APPLICATION	B-4
3.2	CONFIGURATION FOR MBE 900 COMPRESSION BRAKE AND EXHAUST BRAKE APPLICATIONS	B-7
3.3	CONFIGURATION FOR MBE 4000 COMPRESSION BRAKE AND EXHAUST BRAKE APPLICATIONS	B-10

3.4	CONFIGURATION FOR COMPRESSION BRAKE AND TURBO BRAKE APPLICATIONS	B-13
3.5	ENGINE BRAKE OPTION WITH SERVICE BRAKE	B-16
3.6	ENGINE BRAKES OPTION WITH MINIMUM KPH	B-17
3.7	ENGINE BRAKE OPTION WITH VEHICLE SPEED LIMIT	B-17
B.4	ENGINE PROTECTION	B-18
B.5	FAN CONTROL	B-19
B.6	FUEL ECONOMY INCENTIVE	B-23
B.7	IDLE SHUTDOWN	B-24
B.8	LIMITERS	B-25
B.9	LOW GEAR TORQUE LIMITING	B-26
B.10	PASSMART	B-27
B.11	PROGRESSIVE SHIFT	B-27
B.12	STARTER LOCKOUT	B-28
B.13	THROTTLE CONTROL/GOVERNORS	B-29
B.14	VEHICLE SPEED LIMITING	B-33
B.15	VEHICLE SPEED SENSOR ANTI-TAMPERING	B-33
15.1	VEHICLE SPEED SENSOR	B-34
INDEX	INDEX-1

LIST OF FIGURES

Figure 3-1	DDEC-ECU on the Engine	3-5
Figure 3-2	Typical Off-highway MBE 900 Six-cylinder Engine Harness — Non-EGR Engine	3-7
Figure 3-3	Typical On-highway MBE 900 Six-cylinder Engine Harness — EGR Engine ...	3-8
Figure 3-4	Typical MBE 4000 Engine Harness — EGR Engine	3-9
Figure 3-5	DDEC-ECU Connectors	3-15
Figure 3-6	The DDEC-VCU	3-17
Figure 3-7	NAFTA Architecture Off-highway	3-18
Figure 3-8	NAFTA Architecture On-highway	3-19
Figure 3-9	Typical On-highway Vehicle Interface Harness with a DDEC-VCU	3-20
Figure 3-10	Typical On-highway and Off-highway Vehicle Interface Harness with an ADM2	3-21
Figure 3-11	MBE 4000 Fan Connections	3-33
Figure 3-12	MBE 900 Non-EGR VIH to EH Wiring	3-34
Figure 3-13	MBE 900 EGR VIH to EH Wiring	3-35
Figure 3-14	Power Wiring	3-36
Figure 3-15	Main Power Supply Shutdown 12 Systems	3-41
Figure 3-16	Main Power Supply Shutdown	3-44
Figure 3-17	Wiring for Six-pin Data Link Connector	3-49
Figure 3-18	Wiring for 9-pin Data Link Connector	3-50
Figure 3-19	Grid Heater	3-51
Figure 3-20	DDEC-VCU Grid Heater Wiring	3-52
Figure 3-21	Setting Wire Gage Selector and Positioning the Contact	3-55
Figure 3-22	Pushing Contact Into Grommet	3-55
Figure 3-23	Locking Terminal Into Connector	3-56
Figure 3-24	Removal Tool Position	3-57
Figure 3-25	Removal Tool Insertion	3-57
Figure 3-26	Positioning the Leads	3-59
Figure 3-27	Securing the Leads With a Clip	3-59
Figure 3-28	Recommended Strain Relief of Spliced Joint	3-60
Figure 3-29	Splicing Straight Leads - Alternate Method 1	3-62
Figure 3-30	Splicing Straight Leads - Alternate Method 2	3-64
Figure 3-31	The Correct and Incorrect Method of Staggering Multiple Splices	3-66
Figure 3-32	Sensor Locations on the MBE 900 EGR Engine	3-72
Figure 3-33	Sensor Location on the MBE 900 Non-EGR Engine	3-73
Figure 3-34	Sensor Location on the MBE 4000 EGR Engine	3-74
Figure 3-35	Engine Coolant Level Sensor Specifications — DDEC-VCU Only	3-76
Figure 3-36	Engine Coolant Level Sensor Installation	3-77
Figure 3-37	Engine Coolant Level Sensor Location - Top of Radiator Tank	3-78
Figure 3-38	Vehicle Speed Sensor	3-80
Figure 3-39	Magnetic Vehicle Speed Sensor Installation	3-82
Figure 5-1	Cruise Control Circuit	5-16
Figure 5-2	Rampdown Option	5-40

Figure 5-3	Coolant Overtemperature Rampdown (Derate)	5-41
Figure 5-4	Engine Shutdown	5-42
Figure 5-5	Coolant Overtemperature and Rampdown/Shutdown Protection with Stop Engine Override	5-43
Figure 5-6	Typical SEO Switch and Warning Lamps	5-44
Figure 5-7	Key Switch Starter Control	5-47
Figure 5-8	DDEC-ECU Starter Control	5-47
Figure 5-9	Single Speed Fan (Fan Type 4) — MBE 900 EGR Engine and MBE 4000 EGR Engine	5-51
Figure 5-10	Single Speed Fan (Fan Type 4) – MBE 4000 Non-EGR Engine	5-51
Figure 5-11	Single Speed Fan (Fan Type 4) – MBE 900 Engine	5-52
Figure 5-12	Dual Fan (Fan Type 6) – MBE 4000 Non-EGR Only	5-54
Figure 5-13	Two-speed Fan (Fan type 0 or 1) – MBE 4000 Non-EGR Engine	5-56
Figure 5-14	Variable Speed Fan (Fan Type 5) – MBE 4000	5-58
Figure 5-15	Variable Speed Fan (Fan Type 5) – MBE 900	5-58
Figure 5-16	Park Brake Digital Input	5-65
Figure 5-17	Vehicle Power Shutdown Relay	5-66
Figure 5-18	DDEC Reports, On-highway - Idle and Drive Time	5-80
Figure 5-19	DDEC Reports, On-highway - Daily Engine Usage	5-81
Figure 5-20	DDEC Reports, On-highway - Engine Load/RPM	5-82
Figure 5-21	ProDriver DC	5-84
Figure 5-22	ProDriver DC Flush Mount	5-86
Figure 5-23	ProDriver DC Flush Mount Mounting Bracket	5-87
Figure 5-24	ProDriver DC Flush Mount Display Template	5-88
Figure 5-25	ProDriver DC Surface Mount	5-89
Figure 5-26	ProDriver DC Surface Mount Bracket	5-90
Figure 5-27	ProDriver DC Vehicle Harness	5-91
Figure 5-28	ProDriver DC Jumper Harness	5-92
Figure 5-29	Optimized Idle System Overview for MBE Engines	5-97
Figure 5-30	Progressive Shift Chart	5-105
Figure 5-31	Starter Lockout	5-108
Figure 5-32	Tachometer Drive Installation	5-109
Figure 5-33	Accelerator Pedal Installation	5-112
Figure 5-34	VSG Logic	5-113
Figure 5-35	Cab VSG Mode	5-115
Figure 5-36	Remote VSG Mode	5-120
Figure 5-37	Remote VSG Switch	5-120
Figure 5-38	Remote Accelerator Control for VSG or ALSG	5-124
Figure 5-39	AGS2 Transmission Interface to DDEC-VCU/DDEC-ECU — Non-multiplexed	5-125
Figure 5-40	AGS2 Transmission Interface to DDEC-VCU/DDEC-ECU — Multiplexed	5-126

LIST OF TABLES

Table 2-1	The Correct Type of Fire Extinguisher	2-6
Table 3-1	DDEC-ECU Part Numbers and Software Versions	3-5
Table 3-2	Engine Harness – Pins 0–26	3-10
Table 3-3	Engine Harness – Pins 27–54	3-11
Table 3-4	DDEC-ECU Voltage Supply	3-12
Table 3-5	DDEC-ECU Current Consumption	3-12
Table 3-6	DDEC-ECU Short Circuit Recognition Thresholds – Pin 16/12	3-12
Table 3-7	Fuse Current and Blow Time	3-14
Table 3-8	Fuse Temperature and Current	3-14
Table 3-9	Proportional Valves	3-14
Table 3-10	Variable Reluctance Signal Interface	3-22
Table 3-11	Digital Inputs	3-24
Table 3-12	Digital Outputs	3-25
Table 3-13	Analog Inputs	3-26
Table 3-14	Analog Outputs on ADM2	3-26
Table 3-15	Analog Inputs/Outputs on DDEC-VCU	3-26
Table 3-16	Communication Interface Data Links	3-27
Table 3-17	DDEC-VCU 21–Pin VIH Connector Pin Assignments	3-28
Table 3-18	DDEC-VCU 18–Pin VIH Connector Pin Assignments	3-29
Table 3-19	DDEC-VCU 15–Pin VIH Connector Pin Assignments	3-30
Table 3-20	DDEC-VCU 12–Pin VIH Connector Pin Assignments	3-31
Table 3-21	16–Pin Connector to the DDEC-ECU	3-32
Table 3-22	Engine Harness Connector for Fan — MBE 4000 EGR Engine Only	3-33
Table 3-23	Engine Harness Connector for MBE 900 Non-EGR Engine	3-34
Table 3-24	Engine Harness Connector for MBE 900 EGR Engine	3-35
Table 3-25	J1939 DDEC-VCU to VIH Connector Pin Assignments	3-38
Table 3-26	Propriety IES-CAN Data Link	3-39
Table 3-27	Maximum Average Current Draw	3-40
Table 3-28	Current Draw for DDEC-VCU Configuration	3-40
Table 3-29	Current Draw for DDEC-ECU Configuration	3-40
Table 3-30	Maximum Average Current Draw	3-43
Table 3-31	Current Draw for DDEC-VCU Configuration	3-43
Table 3-32	Current Draw for DDEC-ECU Configuration	3-43
Table 3-33	Fuse Current and Blow Time	3-46
Table 3-34	Fuse Temperature and Current	3-46
Table 3-35	DDEC-VCU 21–pin Connector Part Numbers	3-47
Table 3-36	DDEC-VCU 18–pin Connector Part Numbers	3-47
Table 3-37	DDEC-VCU 15–pin Connector Part Numbers	3-48
Table 3-38	DDEC-VCU 12–pin Connector Part Numbers	3-48
Table 3-39	DDEC-VCU–to–DDEC-ECU 16–pin Connector Part Numbers	3-48
Table 3-40	Required Components to Incorporate an SAE J1939/J1587 Data Link in the VIH	3-49

Table 3-41	Required Components to Incorporate an SAE J1939/J1587 Data Link in the VIH	3-50
Table 3-42	Nominal Power and Resistance	3-51
Table 3-43	Crimp Tools	3-54
Table 3-44	Removal Tools for Deutsch Terminals	3-56
Table 3-45	Recommended Splicing Tools	3-58
Table 3-46	Applied Load Criteria for Terminals	3-60
Table 3-47	Recommended Splicing Tools	3-60
Table 3-48	Applied Load Criteria for Terminals	3-61
Table 3-49	Recommended Splicing Tools	3-63
Table 3-50	Sensor Types	3-71
Table 3-51	Function of Factory-installed Sensors	3-71
Table 3-52	Function and Guidelines for OEM-installed Sensors	3-75
Table 3-53	Metri-Pack 280 Connectors and Part Numbers	3-76
Table 3-54	ECL Sensor Installation Kit 1/4 in. NPTF P/N: 23515397	3-79
Table 3-55	ECL Sensor Installation Kit 3/8 in. NPTF P/N: 23515398	3-79
Table 3-56	Enabling the Engine Coolant Level Sensor	3-79
Table 3-57	Vehicle Speed Sensor Parameters	3-80
Table 3-58	Magnetic Pickup Vehicle Speed Sensor Requirements	3-81
Table 3-59	Vehicle Speed Sensor Wiring	3-81
Table 3-60	Vehicle Speed Sensor Parameters for Transmission Output Shaft Speed	3-83
Table 4-1	Digital Inputs	4-3
Table 4-2	Air Condition Status Programming Options	4-4
Table 4-3	Clutch Switch Programming Options	4-5
Table 4-4	Cruise Control On/Off Switch Programming Options	4-6
Table 4-5	Cruise Control Resume/Accel Switch Programming Options	4-7
Table 4-6	Dual Speed Axle Switch Programming Options	4-8
Table 4-7	Level of Engine Braking	4-9
Table 4-8	Engine Brake Switch Switch Programming Options	4-9
Table 4-9	Hood Tilt Switch Programming Options	4-10
Table 4-10	OI Thermostat Programming Options	4-11
Table 4-11	Configuring the Park Brake Switch Input	4-11
Table 4-12	Configuring the Service Brake Switch Input	4-12
Table 4-13	Configuring the Throttle Select Input	4-13
Table 4-14	Configuring the Transmission Neutral Switch Input	4-14
Table 4-15	Parameters for Multiplexing	4-16
Table 4-16	Digital Outputs	4-17
Table 4-17	Grid Heater Parameters	4-19
Table 4-18	OI Active Lamp Programming	4-20
Table 4-19	OI Active Lamp Programming	4-21
Table 4-20	Starter Lockout Programming	4-22
Table 5-1	Cold Start States and Outputs	5-7
Table 5-2	Cold Start Parameters	5-8
Table 5-3	Cold Start Failures and Action Taken	5-9
Table 5-4	Three Cruise Control Operation Modes	5-12
Table 5-5	Cruise Control Mode Status Change	5-15
Table 5-6	Cruise Control Input Configuration	5-17

Table 5-7	Cruise Control Parameters	5-18
Table 5-8	Smart Cruise Parameter	5-18
Table 5-9	Dual Speed Axle Digital Input	5-21
Table 5-10	Programming the Axle Ratios	5-21
Table 5-11	Engine Brake Switches	5-23
Table 5-12	Required Digital Inputs for Engine Brake Controls	5-24
Table 5-13	Engine Brake Parameter	5-24
Table 5-14	DDEC-VCU Configuration Parameter for Compression Brake Only	5-25
Table 5-15	DDEC-ECU Software 53 (Diagnostic Version 5) Parameters for Compression Brake Only Applications	5-26
Table 5-16	DDEC-ECU Software 56 (Diagnostic Version 6) Parameters for Compression Brake Only Applications	5-26
Table 5-17	DDEC-ECU Software 60 (Diagnostic Version 9) Configuration Parameter for Compression Brake Only Applications - MBE 900 Engine	5-27
Table 5-18	DDEC-VCU Configuration Parameter for Compression and Exhaust Brake Applications - MBE 906 Engine	5-28
Table 5-19	DDEC-ECU Software 53 (Diagnostic Version 5) Configuration Parameter for Compression and Exhaust Brake Applications - MBE 906 Engine	5-29
Table 5-20	DDEC-ECU Software 56 (Diagnostic Version 6) Configuration Parameter for Compression and Exhaust Brake Applications - MBE 906 Engine	5-29
Table 5-21	DDEC-ECU Software 60 (Diagnostic Version 9) Configuration Parameter for Compression Brake and Exhaust Flap Applications - MBE 900 Engine	5-30
Table 5-22	DDEC-VCU Configuration Parameter for Compression Brake and Exhaust Brake Applications - MBE 4000 Engine	5-31
Table 5-23	DDEC-ECU Software 53 (Diagnostic Version 5) Configuration Parameter for Compression Brake and Exhaust Brake Applications - MBE 4000 Engine	5-32
Table 5-24	DDEC-ECU Software 56 (Diagnostic Version 6) Configuration Parameter for Compression Brake and Exhaust Brake Applications - MBE 4000 Engine	5-32
Table 5-25	DDEC-ECU Software 60 (Diagnostic Version 9) Configuration Parameter for Compression Brake and Exhaust Brake Applications - MBE 4000 Engine	5-33
Table 5-26	DDEC-VCU Configuration Parameter for Compression Brake and Turbo Brake Applications	5-34
Table 5-27	DDEC-ECU Software 53 (Diagnostic Version 5) Parameters for Compression Brake and Turbo Brake Applications	5-35
Table 5-28	DDEC-ECU Software 56 (Diagnostic Version 6) Parameters for Compression Brake and Turbo Brake Applications	5-35
Table 5-29	DDEC-ECU Software 60 (Diagnostic Version 9) Configuration Parameter for Compression Brake and Turbo Brake Applications	5-36
Table 5-30	Cruise Control Engine Brake Parameters	5-37
Table 5-31	Service Brake Control of Engine Brake Parameter	5-38
Table 5-32	Minimum KPH for Engine Brakes Option	5-38
Table 5-33	Vehicle Speed Limiting for Engine Brake Option	5-38
Table 5-34	Engine Protection	5-45
Table 5-35	Engine Starter Control Settings	5-48
Table 5-36	Single Fan Digital Inputs and Outputs	5-50
Table 5-37	Dual Fans Digital Inputs and Outputs	5-53
Table 5-38	Two-speed Fan Digital Inputs and Outputs	5-55

Table 5-39	PWM Fan Control Digital Inputs and Outputs	5-57
Table 5-40	Fan Control Parameters	5-59
Table 5-41	Fan Control Software 53 (Diagnostic Version 5) Fan Control Parameters	5-60
Table 5-42	DDEC-ECU Software 56 (Diagnostic Version 6) Fan Control Parameters	5-61
Table 5-43	DDEC—ECU Software 60 (Diagnostic Version 9) Fan Control Parameters	5-62
Table 5-44	Fuel Economy Limits	5-63
Table 5-45	Fuel Economy Incentive Parameters	5-64
Table 5-46	Idle Shutdown Timer Digital Input	5-67
Table 5-47	Idle Shutdown Timer Programming Options	5-68
Table 5-48	Limiter Pin Assignments	5-69
Table 5-49	LIM0 and LIM1 Parameters	5-70
Table 5-50	LIM2 Parameters	5-71
Table 5-51	Transmission Ratios	5-73
Table 5-52	Transmission Ratios	5-74
Table 5-53	Low Gear Torque Limiting Parameters	5-75
Table 5-54	On-highway Reports Available from DDEC Reports	5-79
Table 5-55	Data Card Functions	5-84
Table 5-56	ProDriver DC Flush Mount Kit P/N: 23525759	5-93
Table 5-57	ProDriver DC Flush Mount Kit P/N: 23525753	5-93
Table 5-58	ProDriver DC Surface Mount Kit P/N: 23525760	5-93
Table 5-59	ProDriver DC Surface Mount Kit P/N: 23525754	5-94
Table 5-60	Other ProDriver DC Parts	5-94
Table 5-61	Optimized Idle Digital Inputs and Digital Outputs	5-98
Table 5-62	PasSmart Settings	5-100
Table 5-63	PasSmart Parameters	5-101
Table 5-64	Additional Password Protection	5-103
Table 5-65	Progressive Shift Programming	5-106
Table 5-66	Starter Lockout	5-108
Table 5-67	Cruise Switch VSG Digital Inputs	5-116
Table 5-68	Cruise Switch VSG Parameters (1 of 2)	5-117
Table 5-69	Cruise Switch VSG Parameters (2 of 2)	5-118
Table 5-70	Remote VSG Parameters (1 of 2)	5-121
Table 5-71	Remote VSG Parameters (2 of 2)	5-122
Table 5-72	Remote Accelerator Control Parameter Settings	5-123
Table 5-73	AGS2 Connector	5-126
Table 5-74	Transmission Type	5-127
Table 5-75	Engine Identification	5-127
Table 5-76	AGS2 Transmission Programming Requirements for Non-Multiplexed Vehicles (Example Configuration)	5-128
Table 5-77	AGS2 Transmission Programming Requirements for Multiplexed Vehicles (Example Configuration)	5-129
Table 5-78	Vehicle Speed Limiting Parameters	5-131
Table 5-79	VSS Anti-tampering Parameters	5-133
Table 6-1	DDEC-VCU MIDs	6-5
Table 6-2	Identifiers Used by DDEC for MBE 900 and MBE 4000	6-6
Table 6-3	SAE J1587 PIDs (part 1 of 2)	6-7
Table 6-4	SAE J1587 PIDs (part 2 of 2)	6-8

Table 6-5	Message Priority Assignments	6-9
Table B-1	Cold Start Parameters	B-1
Table B-2	Cruise Control Parameters	B-2
Table B-3	Cruise Control Engine Brake Parameters	B-3
Table B-4	Engine Brake Parameter	B-4
Table B-5	DDEC-VCU Configuration Parameter for Compression Brake Only	B-5
Table B-6	DDEC-ECU Software 53 (Diagnostic Version 5) Parameters for Compression Brake Only Applications	B-6
Table B-7	DDEC-ECU Software 56 (Diagnostic Version 6) Parameters for Compression Brake Only Applications	B-6
Table B-8	DDEC-ECU Software 60 (Diagnostic Version 9) Configuration Parameter for Compression Brake Only Applications - MBE 900 Engine	B-7
Table B-9	DDEC-VCU Configuration Parameter for Compression and Exhaust Brake Applications - MBE 906 Engine	B-8
Table B-10	DDEC-ECU Software 53 (Diagnostic Version 5) Configuration Parameter for Compression and Exhaust Brake Applications - MBE 906 Engine	B-9
Table B-11	DDEC-ECU Software 56 (Diagnostic Version 6) Configuration Parameter for Compression and Exhaust Brake Applications - MBE 906 Engine	B-9
Table B-12	DDEC-ECU Software 60 (Diagnostic Version 9) Configuration Parameter for Compression Brake and Exhaust Flap Applications - MBE 900 Engine	B-10
Table B-13	DDEC-VCU Configuration Parameter for Compression Brake and Exhaust Brake Applications - MBE 4000 Engine	B-11
Table B-14	DDEC-ECU Software 53 (Diagnostic Version 5) Configuration Parameter for Compression Brake and Exhaust Brake Applications - MBE 4000 Engine	B-12
Table B-15	DDEC-ECU Software 56 (Diagnostic Version 6) Configuration Parameter for Compression Brake and Exhaust Brake Applications - MBE 4000 Engine	B-12
Table B-16	DDEC-ECU Software 60 (Diagnostic Version 9) Configuration Parameter for Compression Brake and Exhaust Brake Applications - MBE 4000 Engine	B-13
Table B-17	DDEC-VCU Configuration Parameter for Compression Brake and Turbo Brake Applications	B-14
Table B-18	DDEC-ECU Software 53 (Diagnostic Version 5) Parameters for Compression Brake and Turbo Brake Applications	B-15
Table B-19	DDEC-ECU Software 56 (Diagnostic Version 6) Parameters for Compression Brake and Turbo Brake Applications	B-15
Table B-20	DDEC-ECU Software 60 (Diagnostic Version 9) Configuration Parameter for Compression Brake and Turbo Brake Applications	B-16
Table B-21	Service Brake Control of Engine Brake Parameter	B-16
Table B-22	Minimum KPH for Engine Brakes Option	B-17
Table B-23	Vehicle Speed Limiting for Engine Brake Option	B-17
Table B-24	Engine Protection	B-18
Table B-25	DDEC-VCU Fan Control Parameters	B-19
Table B-26	Fan Control Software 53 (Diagnostic Version 5) Fan Control Parameters	B-20
Table B-27	DDEC-ECU Software 56 (Diagnostic Version 6) Fan Control Parameters	B-21
Table B-28	DDEC—ECU Software 60 (Diagnostic Version 9) Fan Control Parameters	B-22
Table B-29	Fuel Economy Incentive Parameters	B-23
Table B-30	Idle Shutdown Timer Programming Options	B-24
Table B-31	LIM0 and LIM1 Parameters	B-25

Table B-32	LIM2 Parameters	B-26
Table B-33	Low Gear Torque Limiting Parameters	B-26
Table B-34	PasSmart Parameters	B-27
Table B-35	Progressive Shift Programming	B-27
Table B-36	Starter Lockout	B-28
Table B-37	Cruise Switch VSG Parameters (1 of 2)	B-29
Table B-38	Cruise Switch VSG Parameters (2 of 2)	B-30
Table B-39	Remote VSG Parameters (1 of 2)	B-31
Table B-40	Remote VSG Parameters (2 of 2)	B-32
Table B-41	Vehicle Speed Limiting Parameters	B-33
Table B-42	VSS Anti-tampering Parameters	B-33
Table B-43	Vehicle Speed Sensor Parameters	B-34

1 INTRODUCTION

DDEC for MBE 900 and MBE 4000 is an electronic control system that monitors and determines all values required for the operation of the engine. A diagnostic interface is provided to connect to an external diagnosis tester.

Besides the engine related sensors and the engine-resident control unit (DDEC-ECU), this system has a cab-mounted control unit for vehicle engine management. There several different modules used for vehicle engine management such as the DDEC-Vehicle Control Unit (DDEC-VCU). The specific vehicle control unit used is application dependent. The connection to the vehicle is made via a CAN interface which digitally transmits the nominal values (e.g. torque, engine speed specification, etc.) and the actual values (e.g. engine speed, oil pressure, etc.). There are five different architectures used for the different vehicle engine management modules and the DDEC-ECU.

The engine control system monitors both the engine and the datalink connecting the electronic control units. The vehicle control unit then broadcasts all information on the J1587 and J1939 datalinks, where it can be read by minidiag2 and the other vehicle systems. When a malfunction or other problem is detected, the system selects an appropriate response; for example, the emergency running mode may be activated.

1.1 ADVANTAGES


The operating advantages offered by DDEC for MBE 900 and MBE 4000 are:

- Effective protection of engine from overloading
- Engine parameters easily set for particular applications
- Integrated backup computer keeps engine operational if main computer fails
- Engine continues to operate if CAN connection is interrupted
- Warning signals issued in critical states
- Electronic fault store reduces costs of service

THIS PAGE INTENTIONALLY LEFT BLANK

2 SAFETY PRECAUTIONS

The following safety measures are essential when installing any engine with DDEC for MBE 900 and MBE 4000.

 WARNING: PERSONAL INJURY
<p>Diesel engine exhaust and some of its constituents are known to the State of California to cause cancer, birth defects, and other reproductive harm.</p> <ul style="list-style-type: none"><input type="checkbox"/> Always start and operate an engine in a well ventilated area.<input type="checkbox"/> If operating an engine in an enclosed area, vent the exhaust to the outside.<input type="checkbox"/> Do not modify or tamper with the exhaust system or emission control system.

2.1 STANDS

Use safety stands in conjunction with hydraulic jacks or hoists. Do not rely on either the jack or the hoist to carry the load.

2.2 GLASSES

Select appropriate safety glasses for the job. Safety glasses *must* be worn when using tools such as hammers, chisels, pullers and punches.

2.3 WELDING

Use caution when welding.

 **WARNING:**

PERSONAL INJURY

To avoid injury from arc welding, gas welding, or cutting, wear required safety equipment such as an arc welder's face plate or gas welder's goggles, welding gloves, protective apron, long sleeve shirt, head protection, and safety shoes. Always perform welding or cutting operations in a well ventilated area. The gas in oxygen/acetylene cylinders used in gas welding and cutting is under high pressure. If a cylinder should fall due to careless handling, the gage end could strike an obstruction and fracture, resulting in a gas leak leading to fire or an explosion. If a cylinder should fall resulting in the gage end breaking off, the sudden release of cylinder pressure will turn the cylinder into a dangerous projectile. Observe the following precautions when using oxygen/acetylene gas cylinders:

- Always wear required safety shoes.
- Do not handle tanks in a careless manner or with greasy gloves or slippery hands.
- Use a chain, bracket, or other restraining device at all times to prevent gas cylinders from falling.
- Do not place gas cylinders on their sides, but stand them upright when in use.
- Do not drop, drag, roll, or strike a cylinder forcefully.
- Always close valves completely when finished welding or cutting.

NOTICE:

When welding, the following must be done to avoid damage to the electronic controls or the engine:

- Both the positive (+) and negative (-) battery leads must be disconnected before welding.
- Ground cable must be in close proximity to welding location - engine must never be used as a grounding point.
- Welding on the engine or engine mounted components is NEVER recommended.

**WARNING:****FIRE**

To avoid injury from fire, check for fuel or oil leaks before welding or carrying an open flame near the engine.

2.4 WORK PLACE

Organize your work area and keep it clean.

**WARNING:****PERSONAL INJURY**

To avoid injury from slipping and falling, immediately clean up any spilled liquids.

Eliminate the possibility of a fall by:

- Wiping up oil spills
- Keeping tools and parts off the floor

A fall could result in a serious injury.


After installation of the engine is complete:

 WARNING:
PERSONAL INJURY
To avoid injury from rotating belts and fans, do not remove and discard safety guards.

- Reinstall all safety devices, guards or shields
- Check to be sure that all tools and equipment used to install the engine are removed from the engine


2.5 CLOTHING

Wear work clothing that fits and is in good repair. Work shoes must be sturdy and rough-soled. Bare feet, sandals or sneakers are not acceptable foot wear when installing an engine.

 WARNING:
PERSONAL INJURY
To avoid injury when working near or on an operating engine, remove loose items of clothing and jewelry. Tie back or contain long hair that could be caught in any moving part causing injury.


2.6 ELECTRIC TOOLS

Improper use of electrical equipment can cause severe injury.

 WARNING:
ELECTRICAL SHOCK
To avoid injury from electrical shock, follow OEM furnished operating instructions prior to usage.


2.7 AIR

Use proper shielding to protect everyone in the work area.


 WARNING: EYE INJURY
<p>To avoid injury from flying debris when using compressed air, wear adequate eye protection (face shield or safety goggles) and do not exceed 276 kPa (40 psi) air pressure.</p>

2.8 FLUIDS AND PRESSURE

Be extremely careful when dealing with fluids under pressure.

 WARNING: HOT COOLANT
<p>To avoid scalding from the expulsion of hot coolant, never remove the cooling system pressure cap while the engine is at operating temperature. Wear adequate protective clothing (face shield, rubber gloves, apron, and boots). Remove the cap slowly to relieve pressure.</p>


Fluids under pressure can have enough force to penetrate the skin.

 WARNING: PERSONAL INJURY
<p>To avoid injury from penetrating fluids, do not put your hands in front of fluid under pressure. Fluids under pressure can penetrate skin and clothing.</p>

These fluids can infect a minor cut or opening in the skin. See a doctor at once, if injured by escaping fluid. Serious infection or reaction can result without immediate medical treatment.

2.9 BATTERIES

Electrical storage batteries give off highly flammable hydrogen gas when charging and continue to do so for some time after receiving a steady charge.

 WARNING:
Battery Explosion and Acid Burn
<p>To avoid injury from battery explosion or contact with battery acid, work in a well ventilated area, wear protective clothing, and avoid sparks or flames near the battery. If you come in contact with battery acid:</p> <ul style="list-style-type: none"> <input type="checkbox"/> Flush your skin with water. <input type="checkbox"/> Apply baking soda or lime to help neutralize the acid. <input type="checkbox"/> Flush your eyes with water. <input type="checkbox"/> Get medical attention immediately.

Always disconnect the battery cable before working on the Detroit Diesel Electronic Controls system.

2.10 FIRE

Keep a charged fire extinguisher within reach. Be sure you have the correct type of extinguisher for the situation. The correct fire extinguisher types for specific working environments are listed in Table 2-1.

Fire Extinguisher	Work Environment
Type A	Wood, Paper, Textile and Rubbish
Type B	Flammable Liquids
Type C	Electrical Equipment

Table 2-1 The Correct Type of Fire Extinguisher

2.11 FLUOROELASTOMER

Fluoroelastomer (Viton®) parts such as O-rings and seals are perfectly safe to handle under normal design conditions.



WARNING:

CHEMICAL BURNS

To avoid injury from chemical burns, wear a face shield and neoprene or PVC gloves when handling fluoroelastomer O-rings or seals that have been degraded by excessive heat. Discard gloves after handling degraded fluoroelastomer parts.

A potential hazard may occur if these components are raised to a temperature above 600°F (316°C) (in a fire for example). Fluoroelastomer will decompose (indicated by charring or the appearance of a black, sticky mass) and produce hydrofluoric acid. This acid is extremely corrosive and, if touched by bare skin, may cause severe burns (the symptoms could be delayed for several hours).

THIS PAGE INTENTIONALLY LEFT BLANK

3 HARDWARE AND WIRING

Section	Page
3.1 OVERVIEW	3-3
3.2 DDEC-ECU – ENGINE-RESIDENT CONTROL UNIT	3-5
3.3 DDEC-VCU	3-17
3.4 WIRES AND WIRING	3-53
3.5 CONDUIT AND LOOM	3-67
3.6 TAPE AND TAPING	3-69
3.7 SENSORS	3-71

THIS PAGE INTENTIONALLY LEFT BLANK

3.1 OVERVIEW

DDEC for MBE 900 and MBE 4000 requires several electronic control units and their harnesses.

The engine control system monitors and determines all values which are required for the operation of the engine. The engine-resident control unit is the DDEC-ECU (refer to section 3.2).

The vehicle control system monitors the vehicle systems. The vehicle control system broadcasts all information on the J1587 and J1939 Data Links, where it can be read by minidiag2 The vehicle control system module is the DDEC-VCU (refer to section 3.3)

The harnesses connect the electronic control units to sensors and switches, injectors, and miscellaneous application devices like throttle controls, instrument panel gages and lights. This chapter describes the functionality of the harnesses and the electronic control units.

THIS PAGE INTENTIONALLY LEFT BLANK

3.2 DDEC-ECU – ENGINE-RESIDENT CONTROL UNIT

The DDEC-ECU monitors and determines all values which are required for the operation of the engine.

The DDEC-ECU (see Figure 3-1) is located on the left-hand side of the engine.

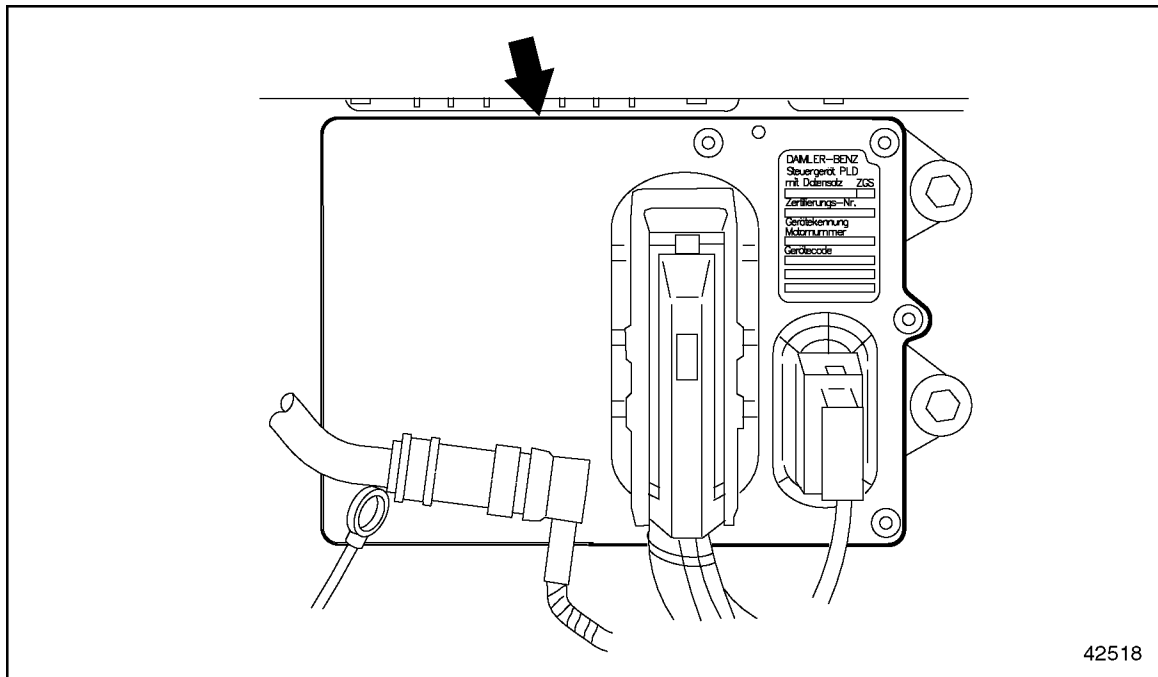


Figure 3-1 DDEC-ECU on the Engine

The DDEC-ECU processes the data received from the Vehicle Control Unit (DDEC-VCU) for engine control management. The data is then compared to the parameters stored in the DDEC-ECU. From these data, quantity and timing of injection are calculated and the unit pumps are actuated accordingly through the solenoid valves.

The part numbers for the DDEC-ECU versions in production in NAFTA are listed in Table 3-1.

DDEC-ECU	Part Number	Software Version
D21	000 446 78 40	Rel. 53 (12/24 V), 4 cylinder
D21	000 446 74 40	Rel. 53 (12/24 V), 6 cylinder
D3	000 446 85 40	Rel. 56 (12/24 V), 4 cylinder
D3	000 446 84 40	Rel. 56 (12/24 V), 6 cylinder
D3.1	001 446 65 40	Rel. 60a (12/24 V), 4 cylinder
D3.1	001 446 64 40	Rel. 60a (12/24 V), 6 cylinder

Table 3-1 DDEC-ECU Part Numbers and Software Versions

NOTE:

To obtain a replacement DDEC-ECU, all the data given on the DDEC-ECU label are required.

The DDEC-ECU data label has the 10 digit engine serial number, the engine horse power, and torque.

3.2.1 ENVIRONMENTAL CONDITIONS

Temperature, atmospheric conditions, and vibration must be considered. The DDEC-ECU is resistant to all fluids and toxic gases occurring in the engine compartment.

Temperature

The ambient operating temperature range is -40°F to 257°F (-40°C to 125°C).

Vibration

The vibration load for the DDEC-ECU is maximum 3 g at 10 Hz – 1000 Hz with damping elements.

Water Intrusion

The DDEC-ECU can be exposed to steam cleaning and pressure washing. Care should be taken not to pressure spray the connectors.

3.2.2 ENGINE HARNESS

The Engine Harness (EH) is factory installed and delivered connected to the engine sensors and the DDEC-ECU. See Figure 3-2 for the MBE 900 non-EGR engine EH.

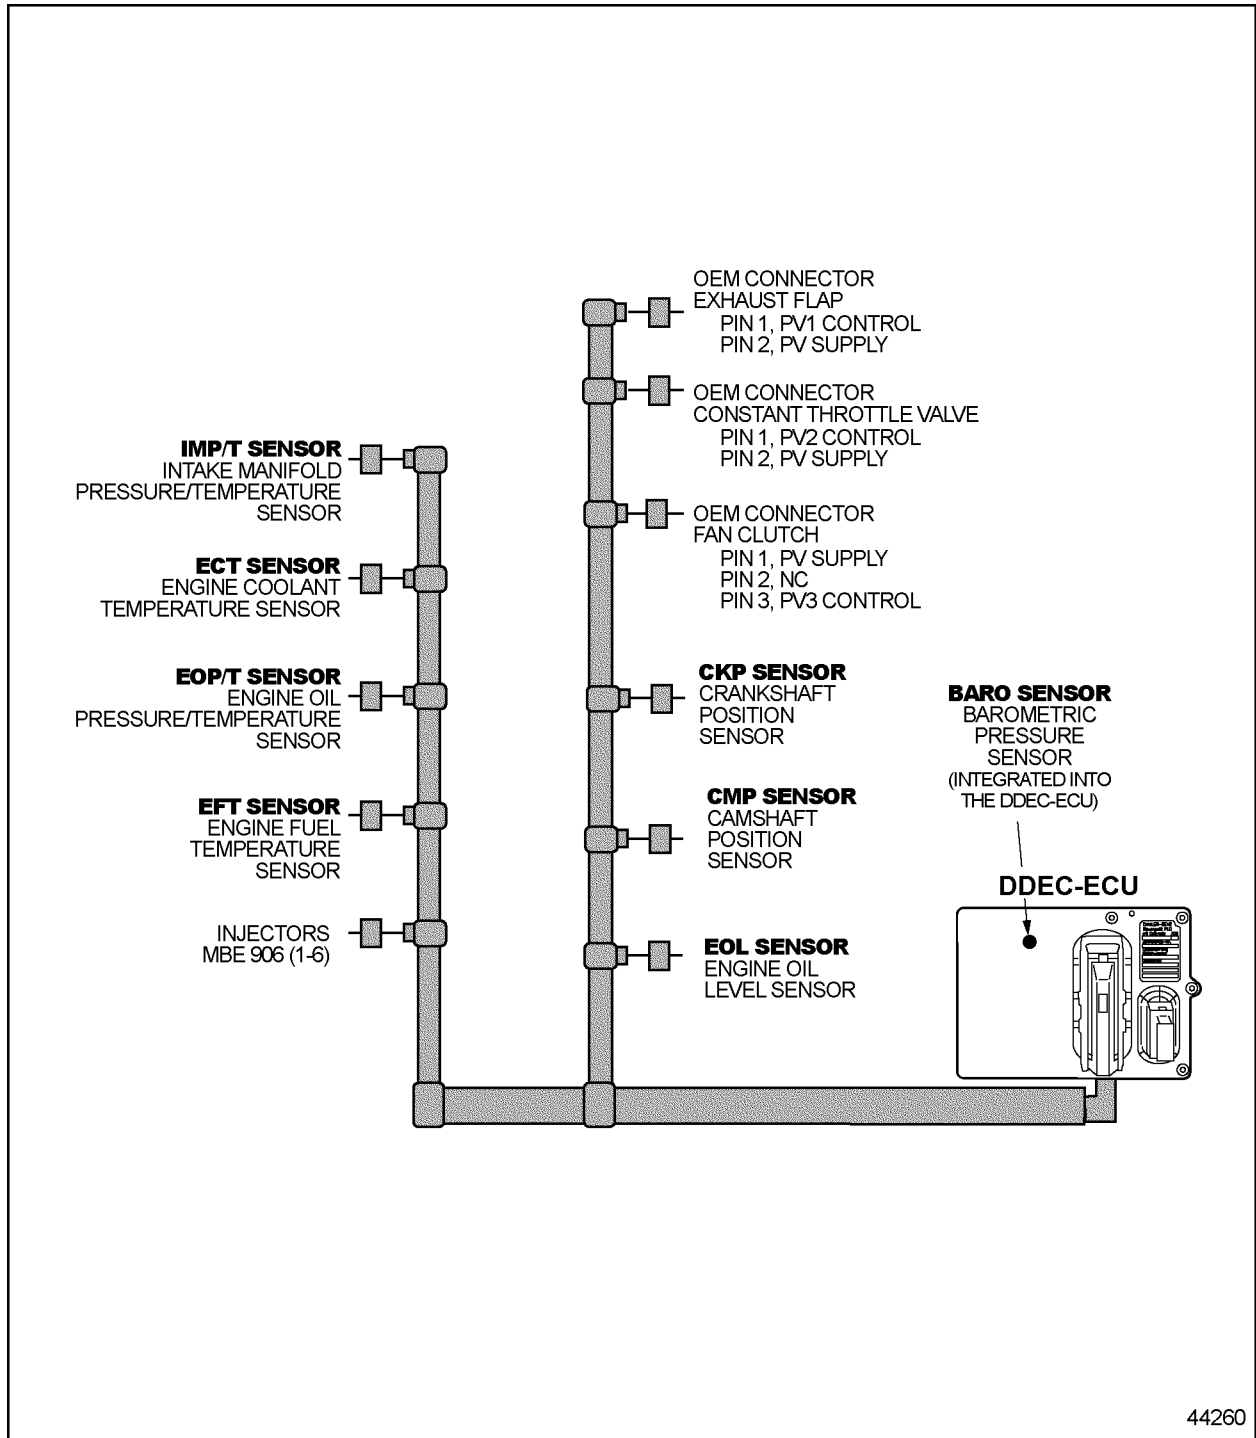


Figure 3-2 Typical Off-highway MBE 900 Six.cylinder Engine Harness — Non-EGR Engine

See Figure 3-3 for the MBE 900 EGR engine EH and Figure 3-4 for the MBE 4000 EGR engine EH.

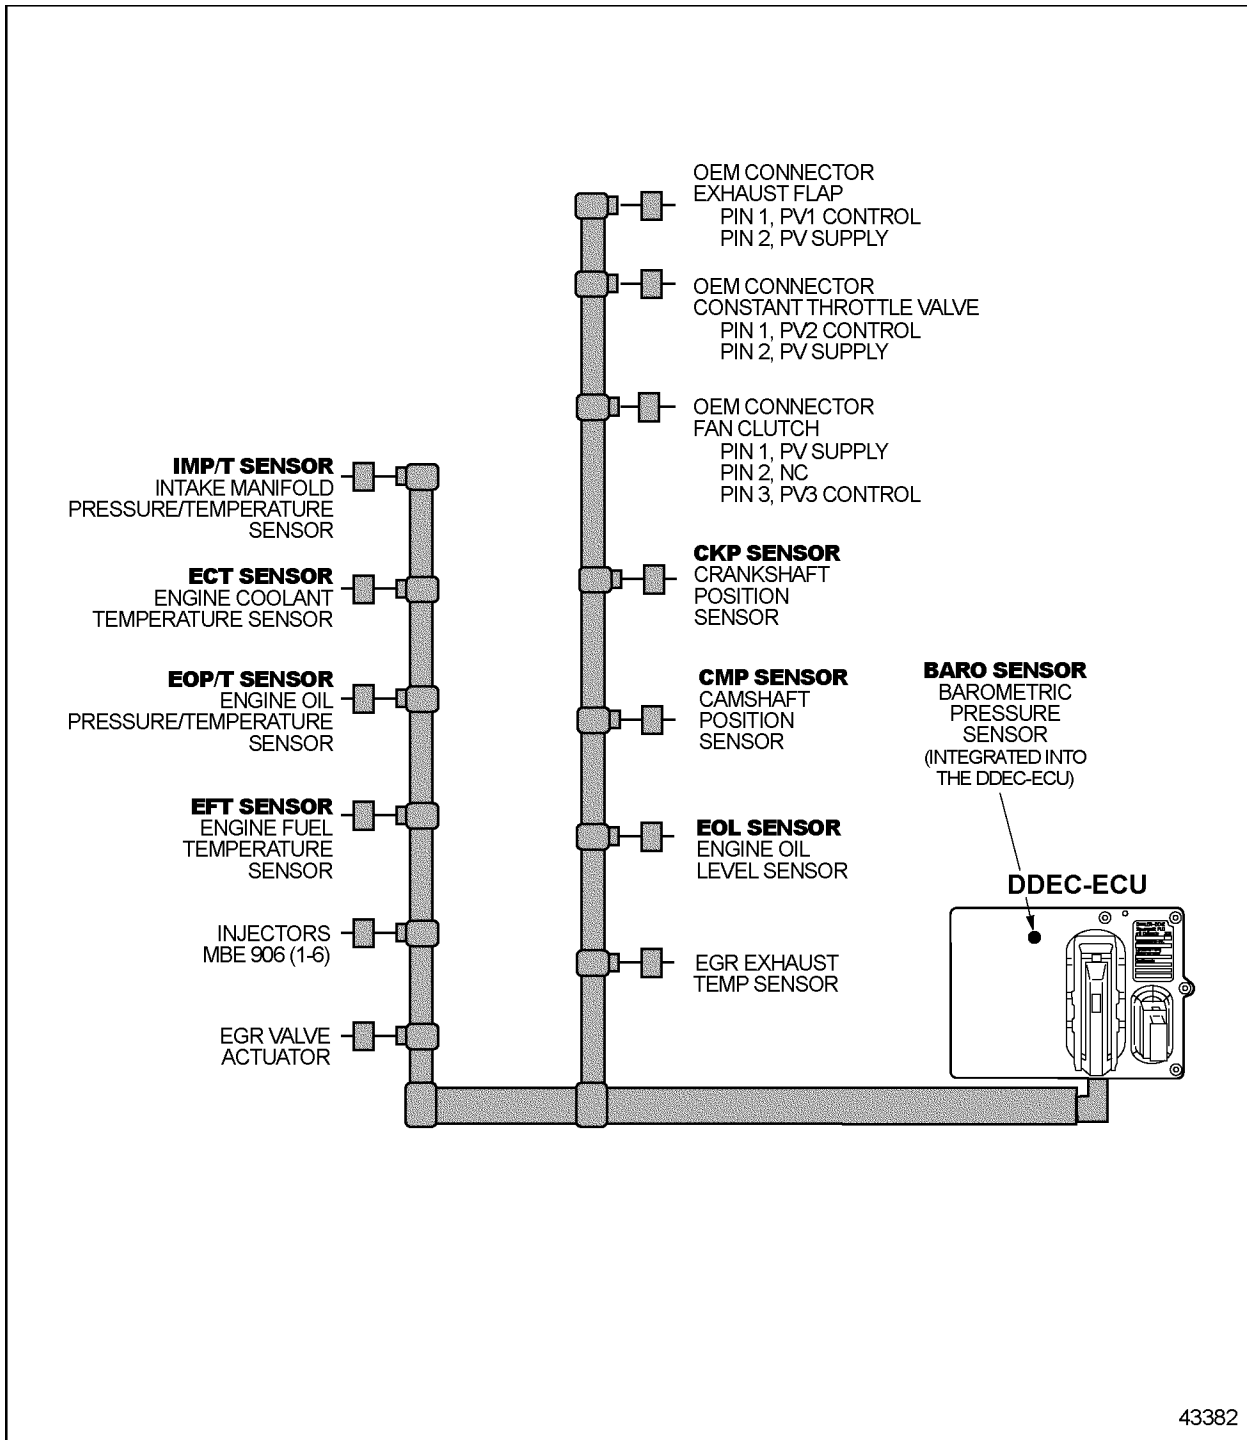


Figure 3-3 Typical On-highway MBE 900 Six-cylinder Engine Harness — EGR Engine

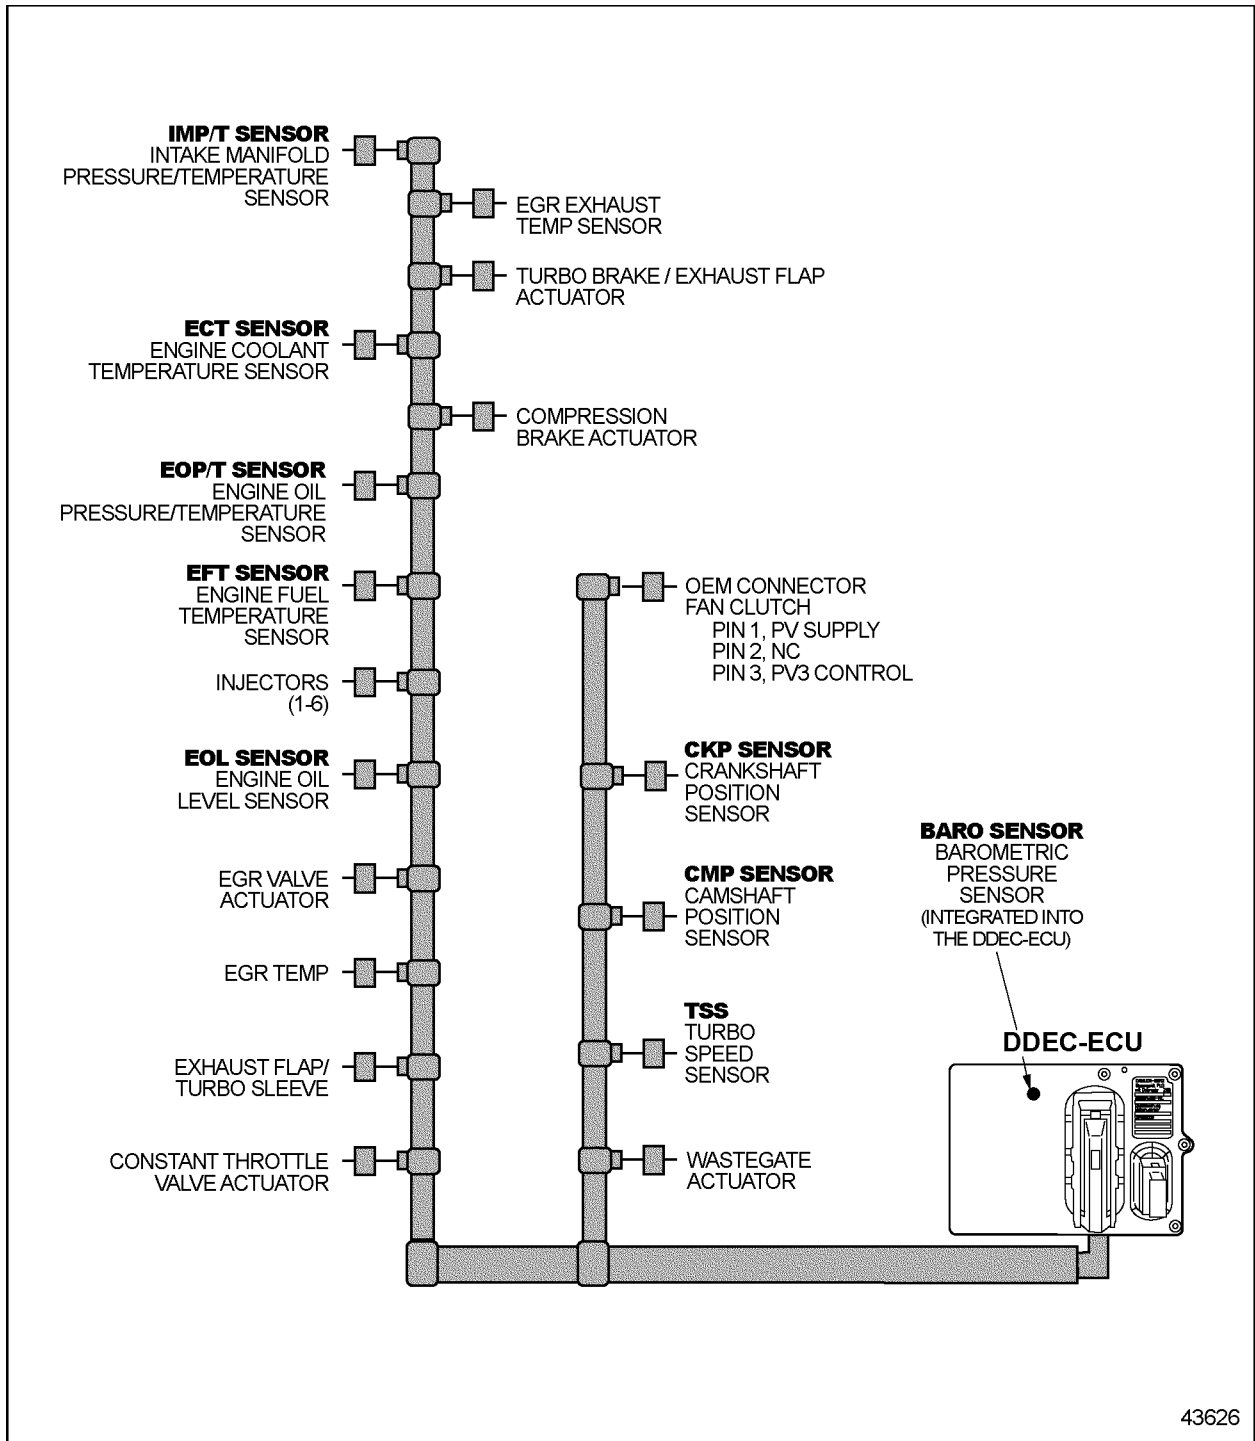


Figure 3-4 Typical MBE 4000 Engine Harness — EGR Engine

The wiring for the 55-pin EH connector to the DDEC-ECU is listed in Table 3-2 , and Table 3-3 . The side of the connector shown is looking into the pins.

Pin	Wire Color		Signal Type	Function	Connector
	900	4000			
0	N/A	N/A	Digital Input	—	 <p style="text-align: right;">42708</p> <p style="text-align: center;">Front Looking into the Pins</p>
1	Blk/Yel	Blk/Yel	Sensor Return	CMP Sensor (-)	
2	Blk/Viol	Blk/Viol	Sensor Return	CKP Sensor (-)	
3	Wht/Yel	Wht/Yel	Sensor Return	Engine Coolant Temp Sensor	
4	Brn/Grn	Brn/Grn	Sensor Return	Supply Fuel Temp Sensor	
5	N/A	Grn/Wht	Sensor Return	Passive Engine Oil Press / Booster / Fan Speed Sensor Return	
6	Brn/Gray	Wht/Blk	Sensor Supply	Engine Oil Press Sensor Supply	
7	Grn	Grn	Sensor Supply	Intake Manifold Press Sensor Supply	
8	N/A	N/A	Frequency Input	—	
9	Red/Blu	Red/Blu	Injector Return	Injector Valves Bank 2 (B - D - F - H)	
10	Gray/Yel	N/A	Sensor Return	Active Engine Oil Press Sensor Alternative Oil Combination Sensor, each w/ Speed Sensor	
11	N/A	Brn/Wht	Output Return	Proportional Valve - Ground	
12	Red/Blk	Brn/Red	Output Supply	Proportional Valve Bank (PV 1 - 4)	
13	N/A	N/A	Sensor Supply	—	
14	N/A	N/A	Sensor Supply	—	
15	Brn/Wht	Gray/Yel	Sensor Return	Engine Oil Temp Sensor Return	
16	Red/Grn	Red/Grn	Injector Return	Injector Valve Bank 1 (A - C - E - G)	
17	N/A	N/A	Frequency Input	—	
18	N/A	N/A	High Side Control Output	Starter	
19	Brn/Viol	Brn/Viol	Frequency Input	CKP Sensor (+)	
20	Brn/Yel	Brn/Yel	Frequency Input	CMP Sensor (+)	
21	Grn/Yel	N/A	Sensor Return	Intake Manifold Temp Sensor Return	
22	N/A	Blk	Sensor Return	EGR Temp Sensor Return	
23	N/A	Blu	Sensor Return	Intake Manifold Press Sensor Return	
24	N/A	Grn/Viol	Frequency Input	Turbo Speed # 1	
25	N/A	N/A	Digital Input	—	
26	N/A	N/A	Digital Input	—	

Table 3-2 Engine Harness – Pins 0–26

Pin	Wire Color		Signal Type	Function	Connector
	900	4000			
27	N/A	Brn/Blk	High Side Control	Proportional Valve 5 — Constant Throttle Valve	
28	N/A	Wht/Viol	Analog Input	EGR Temp	
29	Viol	Viol	Analog Input	Intake Manifold Pressure	
30	N/A	N/A	Sensor Supply	—	
31	N/A	N/A	Analog Input	—	
32	Grn/Blu	Brn/Gray	Analog Input	Engine Oil Press	
33	Wht	Wht	Analog Input	Engine Oil Level	
34	Red/Yel	Red/Yel	Analog Input	Engine Coolant Temp	
35	N/A	N/A	Digital Input	—	
36	Brn/Blu	Brn/Blu	Analog Input	Supply Fuel Temp	
37	N/A	N/A	Injector Output – High Side	—	
38	Wht/Blu	Gray/Yel	Injector Output – High Side	Injector/Solenoid Valve F	
39	Gray/Brn	Gray/Brn	Analog Input	Engine Oil Temp	
40	N/A	Red/Wht	PWM/Digital Output – Low Side	Proportional Valve 6	
41	Blu/Wht	Red	PWM/Digital Output – Low Side	Proportional Valve 3 — Fan Control	
42	N/A	Blu/Blk	Sensor Supply	Proportional Valve 6 Supply	
43	Blu/Red	Blk/Wht	PWM/Digital Output – Low Side	Proportional Valve 4	
44	Gray/Yel	Wht/Blu	Injector Output – High Side	Injector/Solenoid Valve D	
45	Gray/Viol	Gray/Grn	Injector Output – High Side	Injector/Solenoid Valve B	
46	N/A	N/A	Injector Output – High Side	—	
47	Gray/Blu	Gray/Viol	Injector Output – High Side	Injector/Solenoid Valve E	
48	Brn	Brn	Analog Input	Intake Manifold Temp	
49	Yel	Yel	Sensor Return	Engine Oil Level Sensor Return	
50	Grn/Wht	Yel	PWM/Digital Output – Low Side	Proportional Valve 2	
51	Red/Wht	Wht/Red	PWM/Digital Output – Low Side	Proportional Valve 1	
52	Brn/Red	—	Output Supply	Proportional Valve 2 Supply	
53	Gray/Grn	Gray/Blu	Injector Output – High Side	Injector/Solenoid Valve C	
54	Gray/Blk	Gray/Blk	Injector Output – High Side	Injector/Solenoid Valve A	

42708
Front Looking into the Pins

Table 3-3 Engine Harness – Pins 27–54

3.2.3 POWER SUPPLY

NOTE:

The DDEC-ECU and DDEC-VCU must be powered from the same battery voltage source.

The voltage supply and polarity/overload protection for the DDEC-ECU is listed in Table 3-4.

Voltage Supply	Voltage Version	
	24 V	12 V
Nominal Voltage	22 V ≤ V ≤ 30 V	11 V ≤ V ≤ 16 V
Low Voltage	8 V ≤ V ≤ 22V Limited Operating Range	6.5V ≤ V ≤ 11V Limited Operating Range
Polarity Protection	Continuous polarity of battery (+) and battery (-) will not damage the system	
Overload Switch-off	V > 32 V	V > 32 V

Table 3-4 DDEC-ECU Voltage Supply

The current consumption for the DDEC-ECU is listed in Table 3-5.

Current Consumption	Voltage Version	
	24 V	12 V
Peak Current Consumption (without solenoid drivers)	8.0 A, cyclic, depending on engine rpm and series	12.5 A, cyclic, depending on engine rpm and series
Current Draw with Ignition Off	I < 1 mA	I < 1 mA

Table 3-5 DDEC-ECU Current Consumption

The short circuit recognition thresholds for the DDEC-ECU are listed in Table 3-6.

Short Circuit Recognition Thresholds	Voltage Version	
	24 V	12 V
Ground Short	20 A	20 A
Starter to Ground with DDEC-ECU Control	2.5 A	2.5 A
Solenoid Valve to Return Line	32 A	32 A
Proportional Valve Supply to Ground	14 A	14 A
Proportional Valve to Ground*	2 A	2 A

* Open circuit fault greater than 40 kΩ resistance

Table 3-6 DDEC-ECU Short Circuit Recognition Thresholds – Pin 16/12

NOTE:

Although the DDEC-ECU and DDEC-VCU are voltage insensitive, the DDEC-ECU fuel map is battery voltage specific.

NOTE:

Voltage must be specified at time of engine order.

3.2.4 FUSES

A Battery (+) fuse and an ignition circuit fuse must be provided by the vehicle wiring harness. Blade-type automotive fuses are normally utilized; however, manual or automatic reset circuit breakers which meet the following requirements are also acceptable. The fuse voltage rating must be compatible with the DDEC-ECU's maximum voltage of 32 volts.

**CAUTION:****FIRE**

To avoid injury from fire, additional loads should not be placed on existing circuits. Additional loads may blow the fuse (or trip the circuit breaker) and cause the circuit to overheat and burn.

**CAUTION:****FIRE**

To avoid injury from fire, do not replace an existing fuse with a larger amperage fuse. The increased current may overheat the wiring, causing the insulation and surrounding materials to burn.

The ignition fuse current rating must be sized for the loads utilized in each application; however, a rating of between 5 and 10 amps is usually sufficient.

The Battery (+) fuse must not open during normal operation.

Bussmann ATC-40 and Delphi Packard Electric Systems MaxiFuse 40 amp rated fuses or equivalent will satisfy these requirements. Acceptable blow times versus current and temperature derating characteristics are listed in Table 3-7 and listed in Table 3-8.

% of Rated Fuse Current	Minimum Blow Time	Maximum Blow Time
100%	100 hours	-
135%	1 minute	30 minutes
200%	6 seconds	40 seconds

Table 3-7 Fuse Current and Blow Time

Temperature	% of Rated Fuse Current
-40°C	110% max
+25°C	100%
+120°C	80% min

Table 3-8 Fuse Temperature and Current

3.2.5 PROPORTIONAL VALVE CONTROL

The proportional valve control on the DDEC-ECU controls external setting and switching elements. The output function of the proportional valves is determined by the configuration. The outputs of the control unit can be configured as pulse width modulated (PWM) or digital outputs. The proportional valve control outputs can be enabled or disabled by minidiag2.

The output function of the proportional valves is listed in Table 3-9.

Valve	Signal	MBE 900 Non-EGR Engine	MBE 900 EGR Engine	MBE 4000 EGR Engine	Low Side Control Pin	Power Supply Pin (Switched V Bat)
PV1	PWM/Digital Output	Exhaust Flap	Exhaust Flap	Wastegate	55/51	55/12
PV2	PWM/Digital Output	Compression Brake	EGR Valve	EGR Valve	55/50	55/42
PV3	PWM/Digital Output	Fan 1	Fan 1	Fan 1	55/41	55/12
PV4	PWM/Digital Output	Fan 2	Fan 2	Fan 2	55/43	55/12
PV5	PWM/Digital Output	Unused	Compression Brake	Compression Brake	55/11 – Ground	55/27 — High Side Control
PV6	PWM/Digital Output	Unused	Grid Heater	Turbo Brake or Exhaust Flap and EGR Shutoff Valve	55/40	55/42

Table 3-9 Proportional Valves

3.2.6 CONNECTORS

See Figure 3-5 for the connectors to the DDEC-ECU.

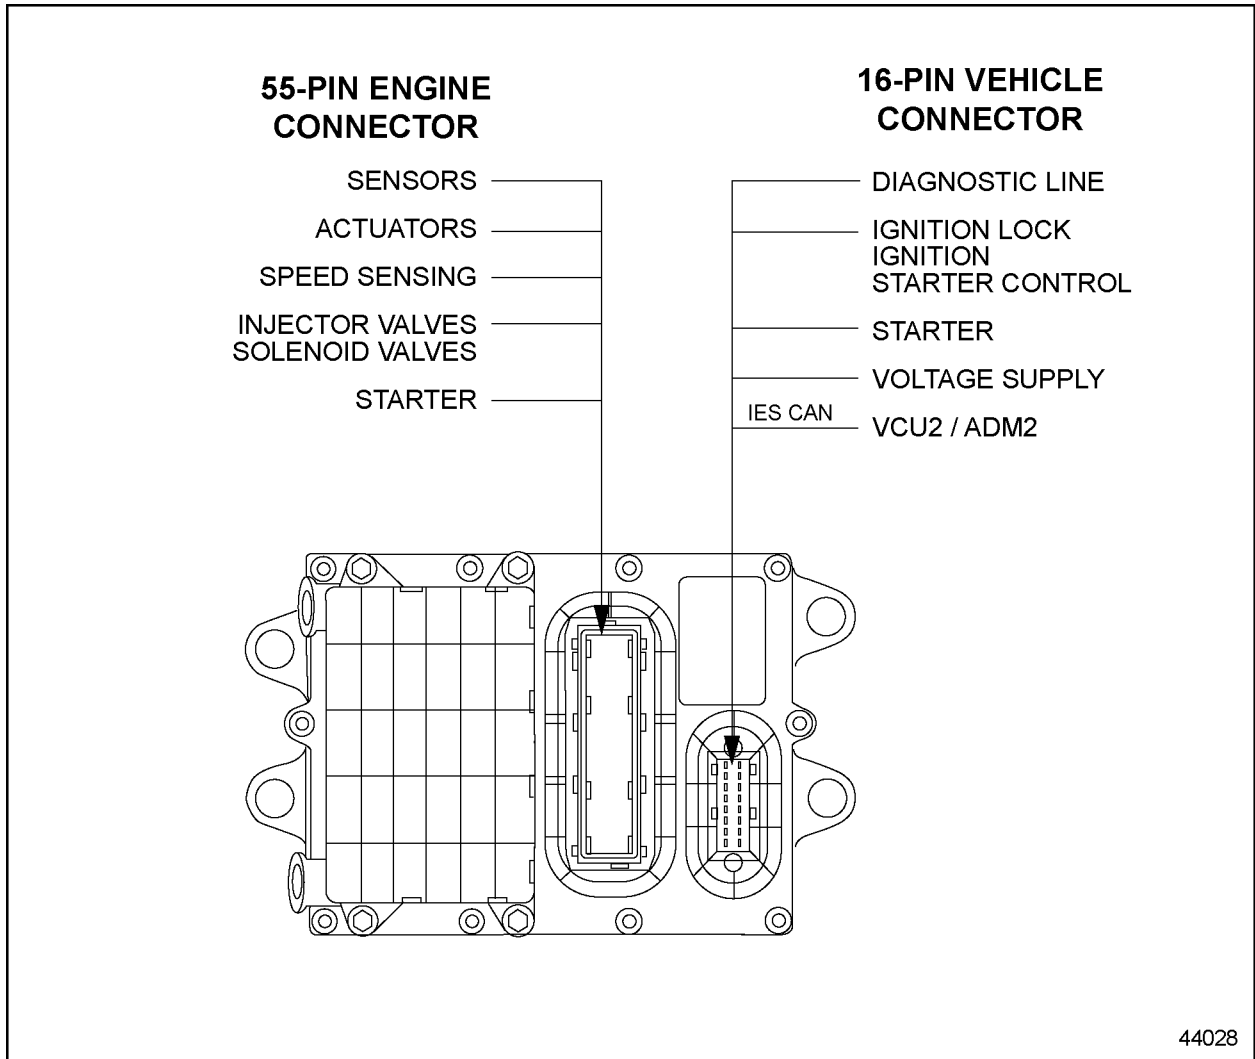


Figure 3-5 DDEC-ECU Connectors

THIS PAGE INTENTIONALLY LEFT BLANK

3.3 DDEC-VCU

The Vehicle Control Unit (DDEC-VCU)/Adaption Module 2 (ADM2) is the interface between the DDEC-ECU and the vehicle/equipment for engine control and manages other vehicle/equipment functions. See Figure 3-6.

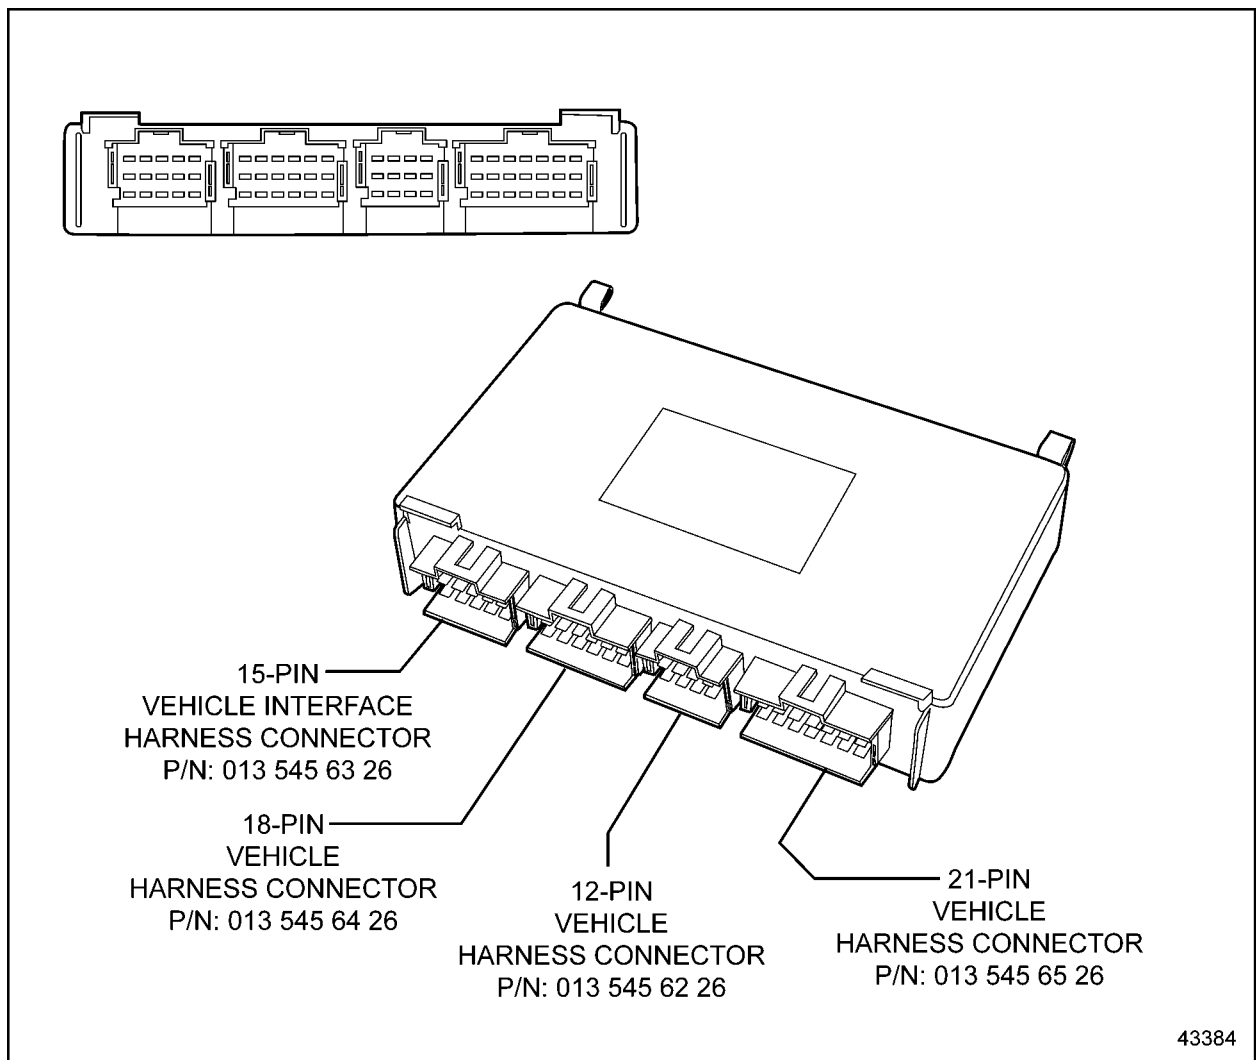


Figure 3-6 The DDEC-VCU

The OEM is responsible for mounting this part in an enclosed, protected environment. The mounting bracket is the responsibility of the OEM. There must be maximum physical separation of the VIH from other vehicle/equipment electrical systems. Other electrical system wires should ideally be at least three feet away from the VIH and should not be parallel to the VIH. This will eliminate coupling electromagnetic energy from other systems into the VIH.

NOTE:

The DDEC-VCU should be mounted with the connectors pointing down.

The ADM2 communicates over the K-line and J1939 Data Links to the equipment (see Figure 3-7).

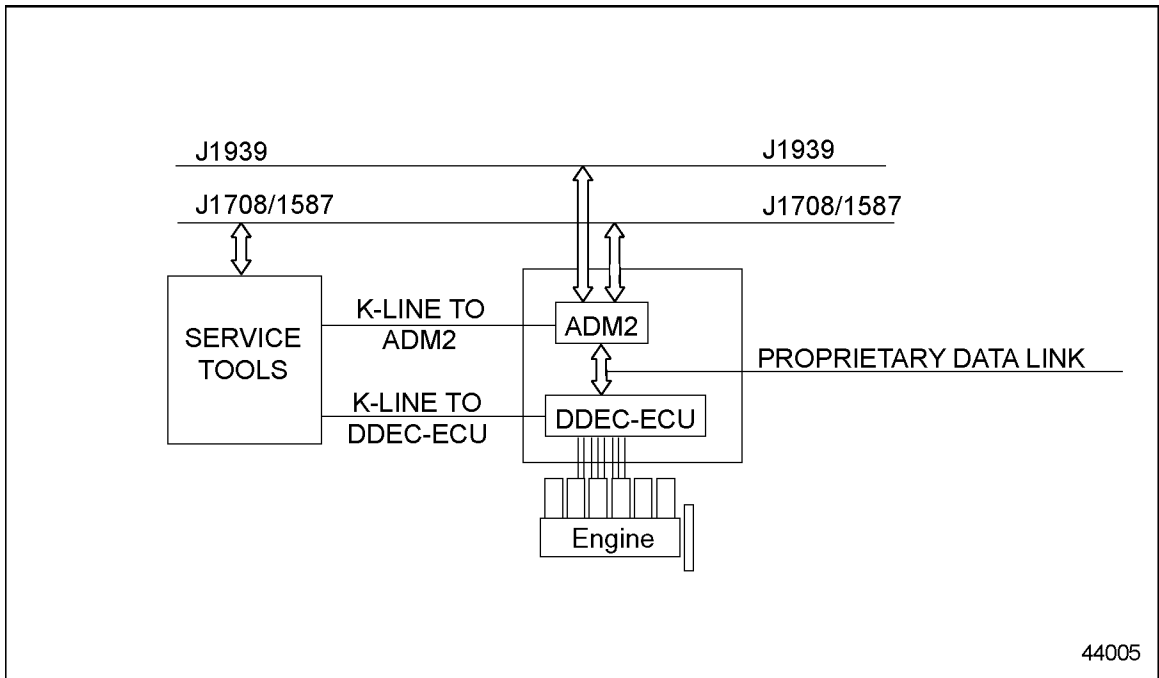


Figure 3-7 NAFTA Architecture Off-highway

The DDEC-VCU communicates over the J1587 and J1939 Data Links to the vehicle (see Figure 3-8).

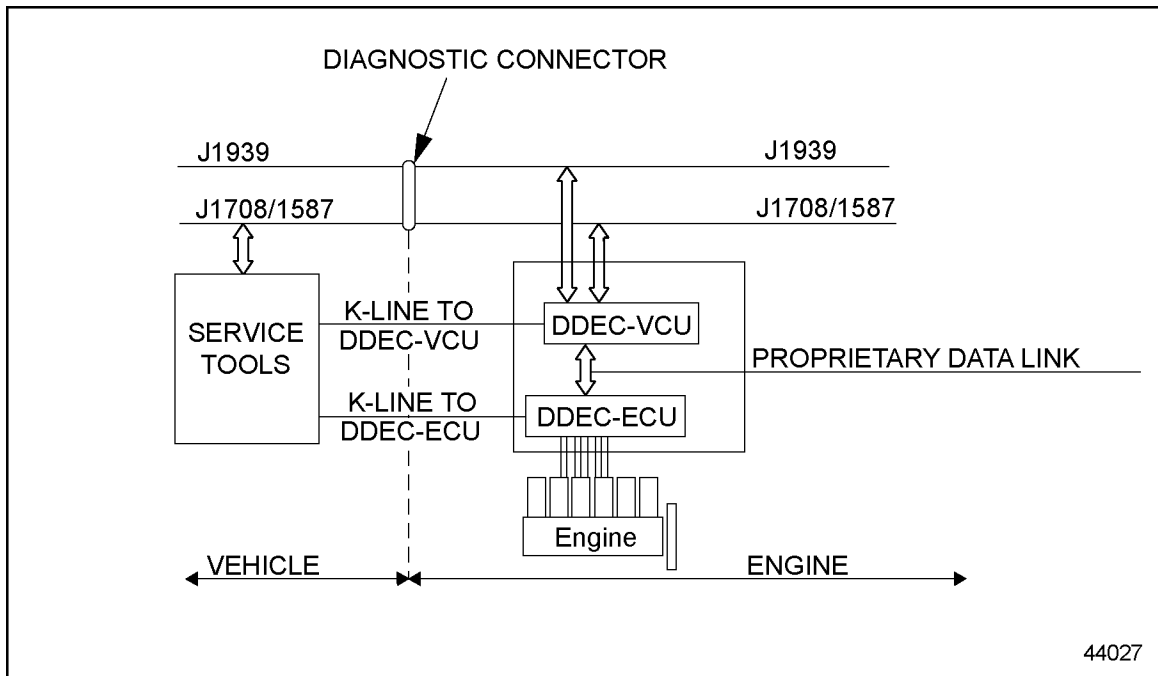


Figure 3-8 NAFTA Architecture On-highway

Within the DDEC-VCU, sets of data for specific applications are stored. These include idle speed, maximum running speed, and speed limitation. Customer programmable parameters are also stored here.

The DDEC-VCU receives data from the operator (accelerator pedal position, switches, various sensors) and other electronic control units (for example, synchronization controllers for more than one genset, air compressor controls).

From this data, instructions are computed for controlling the engine and transmitted to the DDEC-ECU via the proprietary data link.

3.3.1 ENVIRONMENTAL CONDITIONS

Temperature, vibration, and water intrusion must be considered.

Temperature

The ambient operating temperature range is -40°F to 185°F (-40°C to 85°C).

Water Intrusion

The DDEC-VCU is not water tight and cannot be subject to water spray. It must be mounted in an enclosed, protected environment.

3.3.2 VEHICLE INTERFACE HARNESS DESIGN

The OEM supplied Vehicle Interface harness (VIH) connects the DDEC-VCU to the DDEC-ECU and other vehicle systems (see Figure 3-9). Refer to Appendix B for a harness schematic.

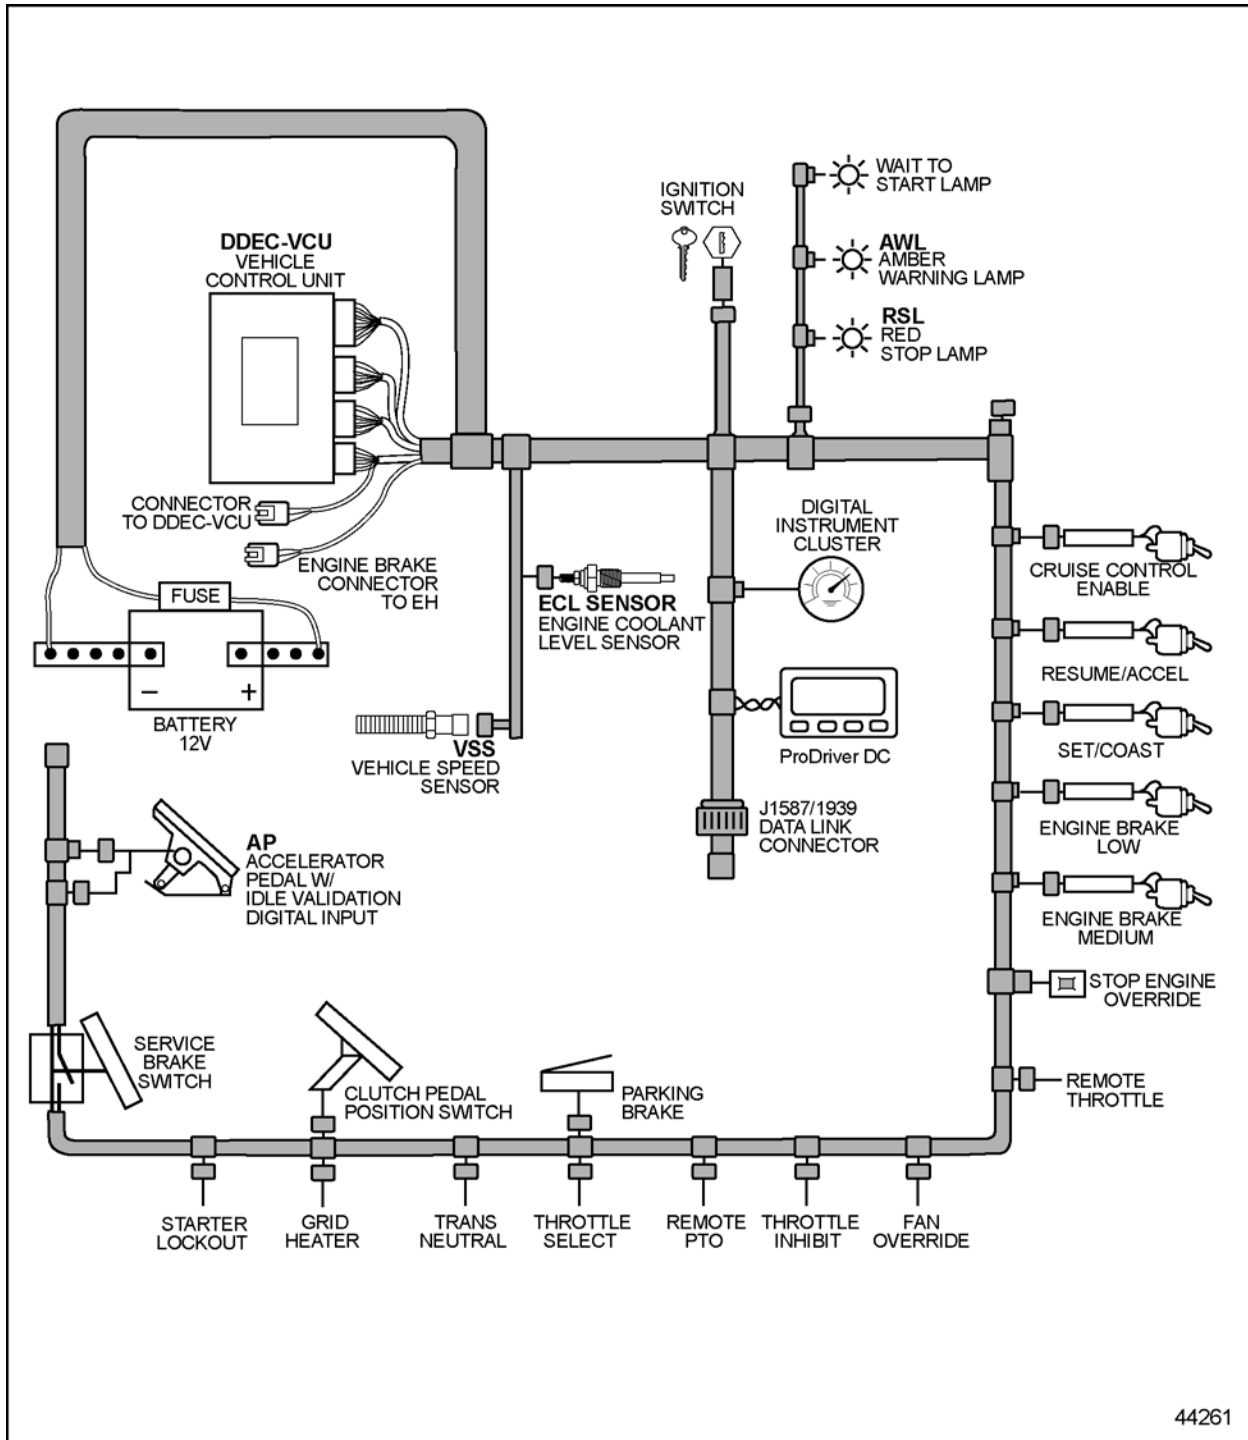


Figure 3-9 Typical On-highway Vehicle Interface Harness with a DDEC-VCU

The OEM supplied Vehicle Interface Harness (VIH) connects the ADM2 to the DDEC-ECU and other vehicle/equipment systems (see Figure 3-10).

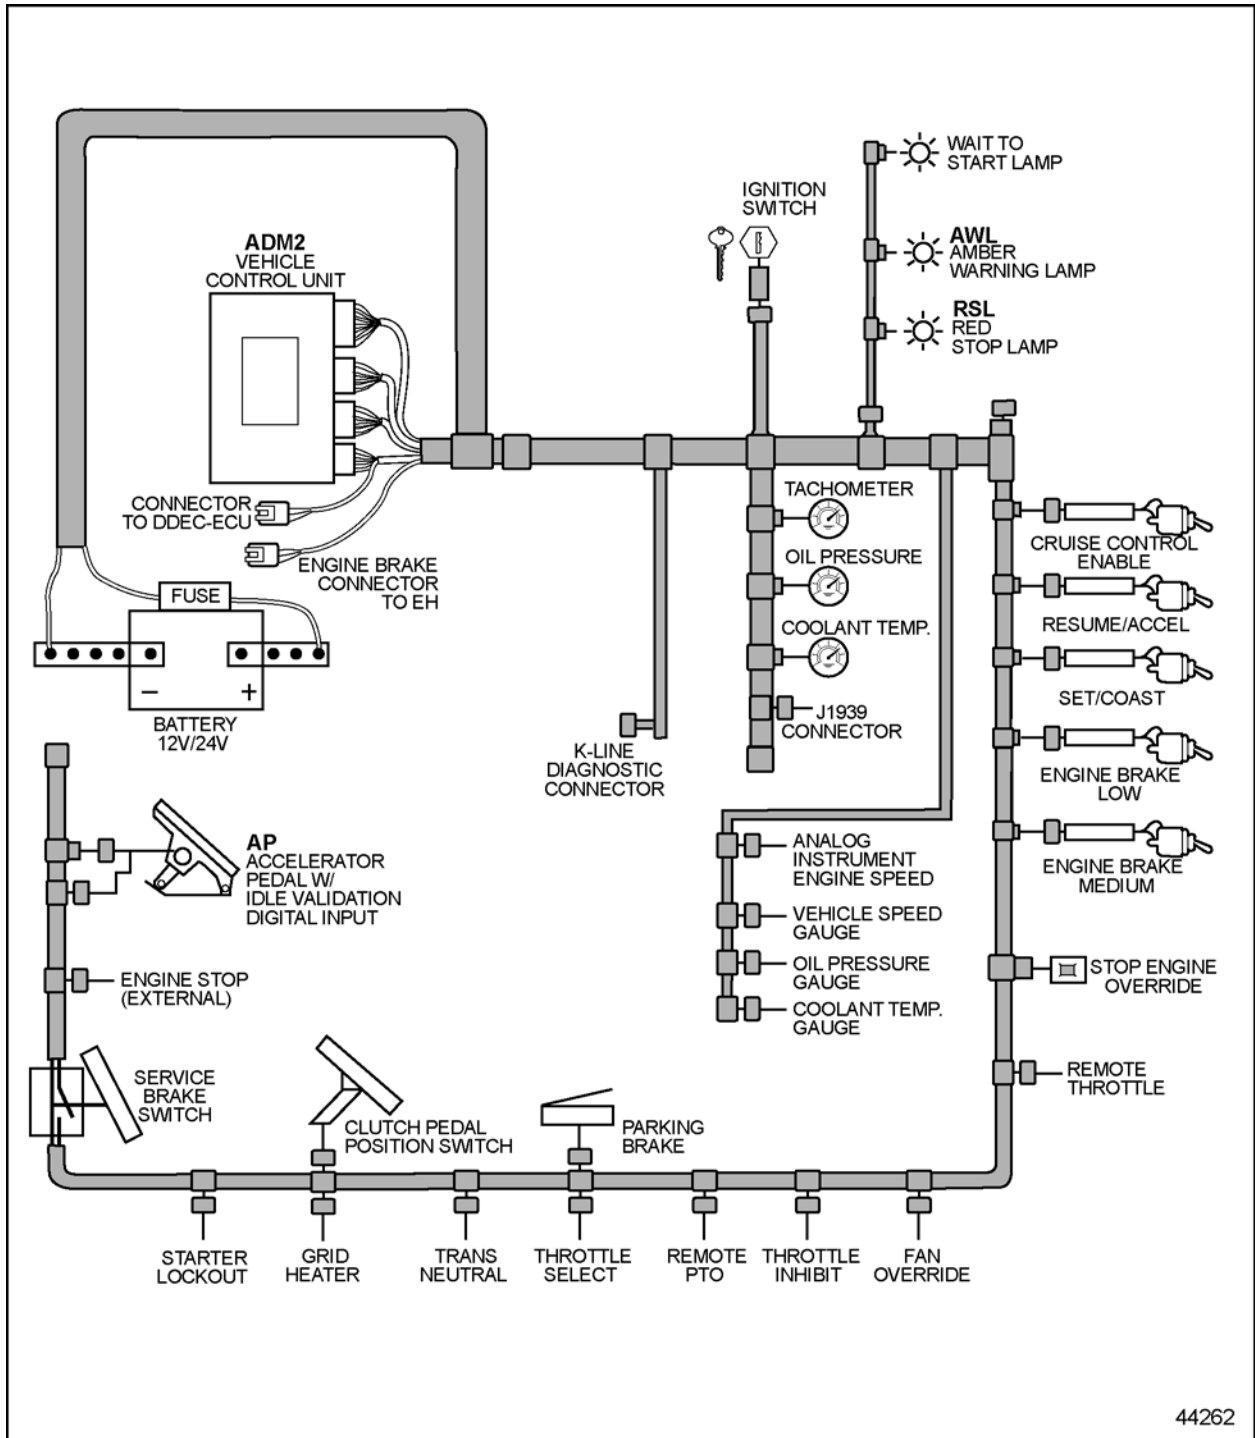


Figure 3-10 Typical On-highway and Off-highway Vehicle Interface Harness with an ADM2

The following criteria are to be used when designing the VIH.



Criteria: VIH Design

The four vehicle connectors are designed to accept 18 AWG wires for all circuits except power and ground. These circuits should use 14 AWG wire

The conductor must be annealed copper, not aluminum, and must comply with the industry standard SAE J1128 document.

Color code the wires as shown in the schematics. If the wires used are the same color, hot stamp the cavity number on the wires.

NOTE:

The Vehicle Speed Sensor (VSS) must be a twisted pair. The twists are a minimum of 12 turns per foot (305 mm) and are required to minimize electromagnetic field coupling.

NOTE:

J1939 cable is required for the J1939 datalink wires. Refer to SAE J1939–11 spec for specific requirements.

The low speed propriety IES-CAN link between the DDEC-ECU and the DDEC-VCU must be a twisted shielded cable with 0.75 mm diameter wire (approximately 20 AWG), bundle shielded with drain wire and 30 twists per meter. The insulation is rated to 105°C. Termination resistors for the IES-CAN link are located in the DDEC-VCU and DDEC-ECU.

Frequency Input

The DDEC-VCU has one frequency input on the VIH that can accept a variable reluctance sensor. A typical frequency input functions is the Vehicle Speed Sensor (VSS). Requirements for a variable reluctance signal interface are listed in Table 3-10. Inputs use 47 kΩ to ground.

Parameter	Range
Input Amplitude Range	3 V, 40 V Peak to Peak
Input Frequency Range	1 to 3000 Hz

Table 3-10 Variable Reluctance Signal Interface

Digital Inputs

The DDEC-VCU has 23 digital inputs located on the VIH. These inputs are in low state by providing a connection to battery ground and placed in high state by providing an open circuit.

Digital Input Requirements:

High State: Battery (+) $>E_{in} > 7.0$ V
Low State: $V_{in} < 3.0$ V
Isink: Capable of sinking 5–20 mA

There is an exception for pin 12/10 and 12/11 of the 12-pin connector.

Digital Input Requirements for Pins 12/10 and 12/11:

High State: Battery (+) $>E_{in} > 8.2$ V
Low State: $V_{in} < 3.5$ V

NOTE:

Use switches that will not oxidize with the passage of time and environmental factors due to the low source current.

The digital inputs are listed in Table 3-11.

Connector Pin	Description	V _{max}	V _{min}	Pull-up Resistor	Pull-down Resistor	Input Requirement
12/7	Feature Not Yet Available	—	—	—	—	—
12/8	OI Engine Hood Switch	V _{max}	—0 V	2.35 kΩ	—	Von<3.0 V, Voff>7.0 V
12/9	Configurable Input	V _{max}	0 V	2.35 kΩ	—	Von<3.0 V, Voff>7.0 V
12/10	Configurable Input	V _{max}	0 V		7.7 kΩ	Von<3.5 V, Voff>8.2 V
12/11	Engine Stop	V _{max}	0 V		7.7 kΩ	Von<3.5 V, Voff>8.2 V
15/1	Transmission Neutral	V _{max}	0 V	2.35 kΩ	—	Von<3.0 V, Voff>7.0 V
15/2	Dual Road Speed Axle	V _{max}	0 V	5 kΩ	—	Von<3.0 V, Voff>7.0 V
18/2	Clutch Switch	V _{max}	0 V	5 kΩ	—	Von<3.0 V, Voff>7.0 V
18/4	Cruise Control Set/Coast	V _{max}	0 V	5 kΩ	—	Von<3.0 V, Voff>7.0 V
18/5	Cruise Control Resume/Accel	V _{max}	0 V	5 kΩ	—	Von<3.0 V, Voff>7.0 V
18/6	Cruise Control On/Off Switch	V _{max}	0 V	5 kΩ	—	Von<3.0 V, Voff>7.0 V
18/7	Throttle Select	V _{max}	0 V	5 kΩ	—	Von<3.0 V, Voff>7.0 V
18/8	Engine Brake Low	V _{max}	0 V	5 kΩ	—	Von<3.0 V, Voff>7.0 V
18/9	Engine Brake High	V _{max}	0 V	5 kΩ	—	Von<3.0 V, Voff>7.0 V
18/10	Remote PTO Switch	V _{max}	0 V	5 kΩ	—	Von<3.0 V, Voff>7.0 V
18/11	Limiter 0	V _{max}	0 V	5 kΩ	—	Von<3.0 V, Voff>7.0 V
18/12	Limiter 1	V _{max}	0 V	2.35 kΩ	—	Von<3.0 V, Voff>7.0 V
18/13	Shutdown Override Switch	V _{max}	0 V	5 kΩ	—	Von<3.0 V, Voff>7.0 V
18/14	Air Conditioner (Limiter 2)	V _{max}	0 V	2.35 kΩ	—	Von<3.0 V, Voff>7.0 V
18/15	Fan Override	V _{max}	0 V	5 kΩ	—	Von<3.0 V, Voff>7.0 V
18/16	Throttle Inhibit	V _{max}	0 V	5 kΩ	—	Von<3.0 V, Voff>7.0 V
21/12	Idle Validation 2	V _{max}	0 V		—	Von<3.0 V, Voff>7.0 V
21/13	Idle Validation 1	V _{max}	0 V		—	Von<3.0 V, Voff>7.0 V
21/15	Service Brake Switch	V _{max}	0 V	2.35 kΩ	—	Von<3.0 V, Voff>7.0 V
21/16	Park Brake Switch	V _{max}	0 V	2.35 kΩ	—	Von<3.0 V, Voff>7.0 V

Table 3-11 Digital Inputs

Digital Outputs

The digital outputs are listed in Table 3-12.

Pin	Description	I _{Max}	V _{max}	P _{Max} Lamp	Output Type
15/5	Gear Out 1	2 A	V _{max}	—	High-side Driver
15/6	Engine Brake 2, Exhaust Flap	2 A	V _{max}	—	High-side Relay Driver
15/9	Relay 2	2 A	V _{max}	—	Low-side Relay Driver
15/10	Grid Heater, Constant Throttle Valve Alt	1.8 A	V _{max}	—	High-side Relay Driver
15/11	OI Active Lamp	250 mA	V _{max}	—	Low-side Lamp Driver, Short Protected
15/12	OI Alarm	1.3 A	V _{max}	—	Low-side Lamp Driver, Short Protected
18/1	OI Vehicle Power Shutdown	1.3 A	V _{max}	—	Low-side Relay Driver, Short Protected
21/4	Oil Level Lamp	250 mA	V _{max}	2 W at 12 V/24 V	Low-side Relay Driver, Short Protected
21/5	Red Stop Lamp	250 mA	V _{max}	2 W at 12 V/24 V	Low-side Relay Driver, Short Protected
21/6	Amber Warning Lamp	150 mA	V _{max}	2 W at 12 V/24 V	Low-side Relay Driver, Short Protected
21/7	Wait to Start Lamp	250 mA	V _{max}	2 W at 12 V/24 V	Low-side Relay Driver, Short Protected
21/8	Air Filter Lamp	250 mA	V _{max}	2 W at 12 V/24 V	Low-side Relay Driver, Short Protected

Table 3-12 Digital Outputs

Analog Inputs and Outputs

The analog inputs are listed in Table 3-13. The analog outputs are listed in Table 3-14.

Pin	Description	V _{max}	V _{min}	Pull-up or Pull-down Resistor
15/7	Coolant Level Sensor	5 V	0 V	440 Ω to 5 V Pull-up (ADM2) 122 kΩ to 5 V Pull-up (DDEC-VCU)
15/8	Air Filter Sensor	5 V	0 V	200 kΩ to 5 V Pull-up
18/18	Remote Throttle Signal	5 V	0 V	200 kΩ to 5 V Pull-up
21/11	Throttle Pedal Signal	5 V	0 V	Williams Pedal Terminal A, 47 kΩ to Ground Pull-down

Table 3-13 Analog Inputs

Pin	Description	Type
12/3	Oil Pressure Warning Lamp	Low Side Driver
12/4	Coolant Temperature Warning Lamp	Low Side Driver
12/5	Configurable Output for Actual Values: 0 = Output Disabled 1 = Pedal Torque (10%...90%) 2 = Differential torque (limit load control) 3 = Inverse Pedal Torque (90%...10%) 4 = Actual Torque 5 = Actual Load (automatic trans) 6 = Vehicle Speed 7 = Demand Speed	Output
12/6	Engine Speed Gauge	Low Side Output

Table 3-14 Analog Outputs on ADM2

Pin	Description	Type
12/3	Oil Pressure Warning Lamp Fuel Filter Restriction Sensor Oil Pressure Gauge	Low Side Driver Output Analog Input Analog Output
12/4	Coolant Temperature Warning Lamp Coolant Temperature Gauge Output OI Thermostat Input	Low Side Driver Output Analog Output Analog Input
12/5	Configurable Output for Actual Values: 0 = Output Disabled 1 = Pedal Torque (10%...90%) 2 = Differential torque (limit load control) 3 = Inverse Pedal Torque (90%...10%) 4 = Actual Torque 5 = Actual Load (automatic trans) 6 = Vehicle Speed 7 = Demand Speed	Output
12/6	Engine Speed Gauge	Low Side Output

Table 3-15 Analog Inputs/Outputs on DDEC-VCU

Data Links

The Data Links that provide the communication interface are listed in Table 3-16.

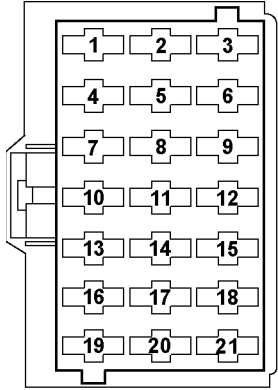
Pin	Description	Comments
15/15	Engine-CAN (Low)	ISO/DIS 11992, One Wire Capability
15/14	CAN-HF-Ground	100 nF to Ground
15/13	Engine-CAN (High)	ISO/DIS 11992, One Wire Capability
21/17	SAE 1708 (+)	—
21/18	SAE 1708 (-)	—
21/19	SAE J1939 CAN (High)	—
21/20	CAN-HF-Ground	100 nF to ground
21/21	SAE J1939 CAN (Low)	—

Table 3-16 Communication Interface Data Links

3.3.3 VEHICLE INTERFACE HARNESS WIRING

The OEM is responsible for wiring three connectors to the DDEC-VCU and one connector to the DDEC-ECU. For connector and terminal part numbers, refer to section 3.3.7.

The wiring for the VIH 21-pin connector for the DDEC-VCU is listed in Table 3-17. The power and communication links are wired through this connector. The side of the connector shown is looking into the pins.

Pin	Signal Type	Function	Connector
21/1	Input	Battery Voltage	 <p style="text-align: center;">42707 Front Looking into the Pins on the Harness</p>
21/2	Input	Ignition (+12 V)	
21/3	Input	Battery Ground	
21/4	Digital Output – Low Side	Oil Level Lamp*	
21/5	Digital Output – Low Side	Red Stop Lamp*	
21/6	Digital Output – Low Side	Amber Warning Lamp*	
21/7	Digital Output – Low Side	Wait to Start Lamp	
21/8	Digital Output – Low Side	Air Filter Warning Lamp	
21/9	Sensor Supply	Throttle Pedal Power Supply (+5 V supply)	
21/10	Digital Input – Normally Open	Plug (not used, must be plugged)	
21/11	Analog Input	Throttle Pedal Signal	
21/12	Digital Input — Normally Closed	Idle Validation 2 (Throttle Active)	
21/13	Digital Input — Normally Open	Idle Validation 1 (Idle Active)	
21/14	Sensor Return	Throttle Pedal, Remote Throttle, Fuel Restriction, Air Restriction, Dual Coolant Level	
21/15	Digital Input – Normally Closed	Service Brake Switch	
21/16	Digital Input – Normally Open	Park Brake Switch	
21/17	Data Link	J1708 A (+)	
21/18	Data Link	J1708 B (-)	
21/19	Data Link	SAE J1939 (+)	
21/20	Data Link	J1939 Shield	
21/21	Data Link	SAE J1939 (-)	

* If output is active while engine is running, shut down the engine immediately and initiate an error diagnosis.

Table 3-17 DDEC-VCU 21-Pin VIH Connector Pin Assignments

The wiring for the VIH 18-pin connector to the DDEC-VCU is listed in Table 3-18. The side of the connector shown is looking into the pins.

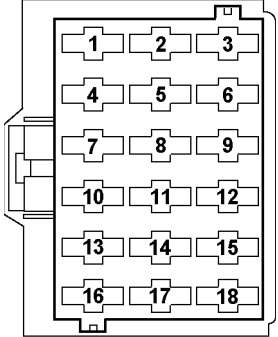
Pin	Signal Type	Function	Connector
18/1	Configurable Low Side Digital Output	Relay 4 — The configurable parameters are: 0 = Kickdown Position 1 = Actual Torque 2 = Vehicle Speed 3 = Engine Speed 4 = Coolant Temp 5 = Pedal Torque 6 = Booster Air Temp 7 = Oil Pressure Warning Lamp 8 = Coolant Temp Warning Lamp 10 = Vehicle Power Shutdown	 <p>42706</p> <p>Front Looking into the Pins on the Harness</p>
18/2	Digital Input – Normally Closed (open if clutch is pressed)	Clutch Switch 1	
18/3	Ground	Idle Validation Ground	
18/4	Digital Input – Normally Open	Cruise Control, Set/Coast	
18/5	Digital Input – Normally Open	Cruise Control, Res/Accel	
18/6	Digital Input – Normally Open	Cruise Control, On/Off	
18/7	Digital Input – Normally Open	Remote Accelerator Select Switch	
18/8	Digital Input – Normally Open	Engine Brake Low	
18/9	Digital Input – Normally Open	Engine Brake High	
18/10	Digital Input – Normally Open	Remote PTO Switch	
18/11	Digital Input – Normally Open	Limiter 0 (LIM0)	
18/12	Digital Input – Normally Open	Second Vehicle Speed Limit (LIM1)	
18/13	Digital Input – Normally Open	Engine Shutdown Override	
18/14	Digital Input – Normally Open	Air Condition Status	
18/15	Digital Input – Normally Open	Fan Override	
18/16	Digital Input – Normally Open	Throttle Inhibit	
18/17	Sensor Supply	Remote Throttle, Air Restriction, Fuel Restriction, or Dual Level Coolant Sensor	
18/18	Analog Input	Remote Throttle Signal	

Table 3-18 DDEC-VCU 18-Pin VIH Connector Pin Assignments

The wiring for the VIH 15-pin connector to the DDEC-VCU is listed in Table 3-19. The side of the connector shown is looking into the pins.

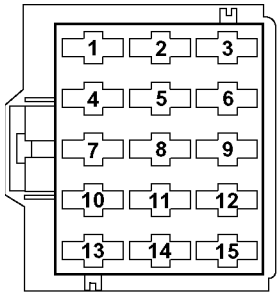
Pin	Signal Type	Function	Connector
15/1	Digital Input – Switch to Ground, Normally Open, Disables Engine Start if Closed	Transmission Neutral Switch	 <p>42705</p> <p>Front Looking into the Pins on the Harness</p>
15/2	Digital Input – Switch to Ground, Normally Open, Sets Speed Ratio if Closed	Dual Speed Axle	
15/3	Frequency Input	Vehicle Speed Sensor (+)	
15/4	Frequency Input	Vehicle Speed Sensor (-)	
15/5	Configurable High Side Digital Output	Gear Out 1, Output for Modulation Valve	
15/6	Configurable High Side Digital Output	Add Engine Coolant Level Sensor Module Signal	
15/7	Analog Input	Engine Coolant Level Sensor	
15/8	Analog Input	Air Filter Sensor (MAS)	
15/9	Configurable High Side Digital Output	Relay 2 – The configurable parameters are: 0 = Disabled 2 = Grid Heater (typically ADM2) 5 = AGS2 Backup Lamp	
15/10	Configurable High Side Digital Output	Grid Heater (typically DDEC-VCU), Constant Throttle Valve	
15/11	Configurable Low Side Digital Output	Relay 3 – The configurable parameters are: 9 = Off 10 = OI Active Lamp	
15/12	Configurable Low Side Digital Output	Relay 1 – The configurable parameters are: 0 = Disabled 1 = Enable Starter Lockout 2 = Reserved 3 = Reserved 4 = OI Alarm 5 = Reserved	
15/13	Data Link	MBE Proprietary CAN (+) (DDEC-ECU)	
15/14	Data Link	MBE Proprietary CAN Shield (DDEC-ECU)	
15/15	Data Link	MBE Proprietary CAN (-) (DDEC-ECU)	

Table 3-19 DDEC-VCU 15-Pin VIH Connector Pin Assignments

The wiring for the VIH 12-pin connector for the DDEC-VCU is listed in Table 3-20.

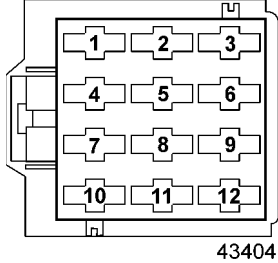
Pin	Signal Type	Function	Connector
12/1	Pulse Input	Engine Start	 <p>43404</p> <p>Front Looking into the Pins on the Harness</p>
12/2	Data Link	K-line Diagnosis Interface	
12/3	Analog Output – Low Side (ADM2) Digital or Analog Input/Output – Low Side (DDEC-VCU)	Oil Pressure Gauge/Warning Lamp Fuel Restriction (Analog Input)	
12/4	Analog Output – Low Side (ADM2) Digital or Analog Input/Output – Low Side (DDEC-VCU)	Coolant Temperature Gauge/Warning Lamp OI Thermostat (Analog Input) Check Trans Lamp	
12/5	Analog Output (ADM2) Digital or Analog Output (DDEC-VCU)	Configurable Output for Actual Values: 0 = Output Disabled 1 = Pedal Torque (10%...90%) 2 = Differential torque (limit load control) 3 = Inverse Pedal Torque (90%...10%) 4 = Actual Torque 5 = Actual Load (automatic trans) 6 = Vehicle Speed 7 = Demand Speed 10 = Trans Temp Lamp	
12/6	Analog Output – Low Side Digital or Analog Output – Low Side (DDEC-VCU)	Engine Speed Gauge	
12/7	Digital Input	Feature Not Yet Available	
12/8	Digital Input	OI Hood Tilt Switch	
12/9	Digital Input – Normally Open	Configurable Input: 0 = Disabled 1 = ABS 2 = Retarder 3 = Temporary/Alternate Road Speed Limit (set road speed limit) 4 = Grid Heater Detection 5 = Minimal Torque 6 = PTO Driving	
12/10	Digital Input – Normally Open	Configurable Input: 0 = Disabled 1 = ABS 2 = Retarder 3 = Tempset (set roadspeed limit) 4 = Grid Heater Detection 5 = Minimal Torque 6 = PTO Driving	
12/11	Digital Input – Normally Open	Engine Stop	
12/12	Pulse Input	Feature Not Yet Available	

Table 3-20 DDEC-VCU 12-Pin VIH Connector Pin Assignments

VIH to DDEC-ECU Connector Wiring

The wiring for the VIH 16-pin to the DDEC-ECU is listed in Table 3-21. The side of the connector shown is looking into the pins.

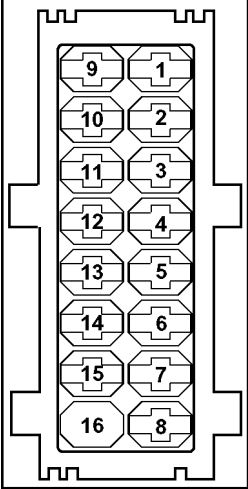
Pin	Signal Type	Function	Connector
16/1	Data Link	CAN Interface (High Line)	 <p style="text-align: right;">42704</p> <p style="text-align: center;">Front Looking into the Pins on the Harness</p>
16/2	Data Link	CAN Interface (Low Line)	
16/3	Data Link	CAN HF Ground	
16/4	Data Link	CAN HF Ground	
16/5	Power Supply	Battery Voltage (+)	
16/6	Power Supply	Battery Voltage (+)	
16/7	NC	NC	
16/8	Digital Input	Starter Control Signal	
16/9	Ground	Battery Ground (-)	
16/10	Digital Output	Proportional Valve 1-4 High Side Supply	
16/11	Ground	Battery Ground (-)	
16/12	Digital Output	Starter High Side Control	
16/13	Digital Data Link	Diagnostic Link K-line (ISO)	
16/14	Digital Output	Proportional Valve 3 Low Side Control	
16/15	Ignition Input	Ignition	
16/16	Digital Output	Proportional Valve 4 Low Side Control	

Table 3-21 16-Pin Connector to the DDEC-ECU

VIH to EH Connector Wiring

The wiring for the three-pin connector to the Engine Harness required for fan control for the MBE 4000 is listed in Table 3-22.

Description	Engine Harness 3-pin Connector	DDEC-ECU 55-pin Connector
Fan Control —Control , Switch to Bat- (PV3 and PV4)	3	41and 43

Table 3-22 Engine Harness Connector for Fan — MBE 4000 EGR Engine Only

See Figure 3-11 for an engine brake schematic.

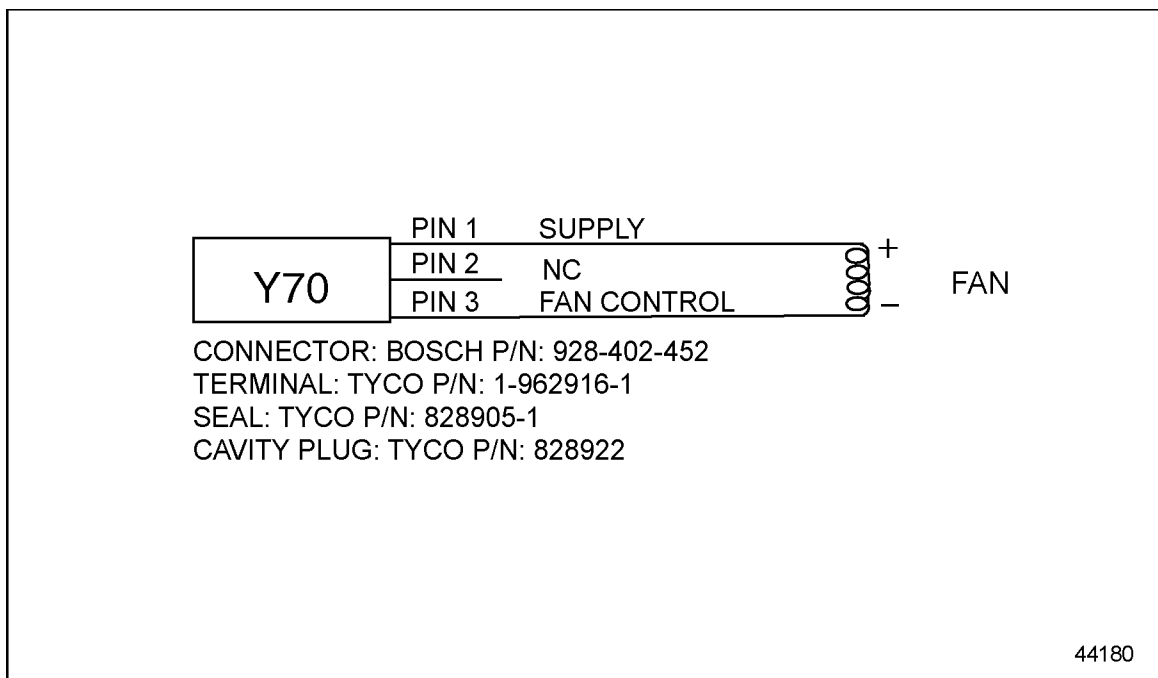


Figure 3-11 MBE 4000 Fan Connections

The wiring for the three connectors to the Engine Harness required for engine brakes and fan control for the MBE 900 without an EGR is listed in Table 3-23 . See Figure 3-12 for a schematic before the EGR is added.

Description	Engine Harness Connector/Pin	DDEC-ECU 55 Pin Connector
Fan Control, Switch to Bat- (PV3, PV4)	Y70/Pin 1	41
Fan Control Power	Y70/ Pin 3	12
Compression Brake Control, Switch to Bat- (PV2)	Y49/ pin 1	50
Compression Brake Power	Y49/Pin 2	52
Exhaust Flap Control, Switch to Bat- (PV1)	Y91/Pin 1	51
Exhaust Flap Power	Y91/Pin 2	12

Table 3-23 Engine Harness Connector for MBE 900 Non-EGR Engine

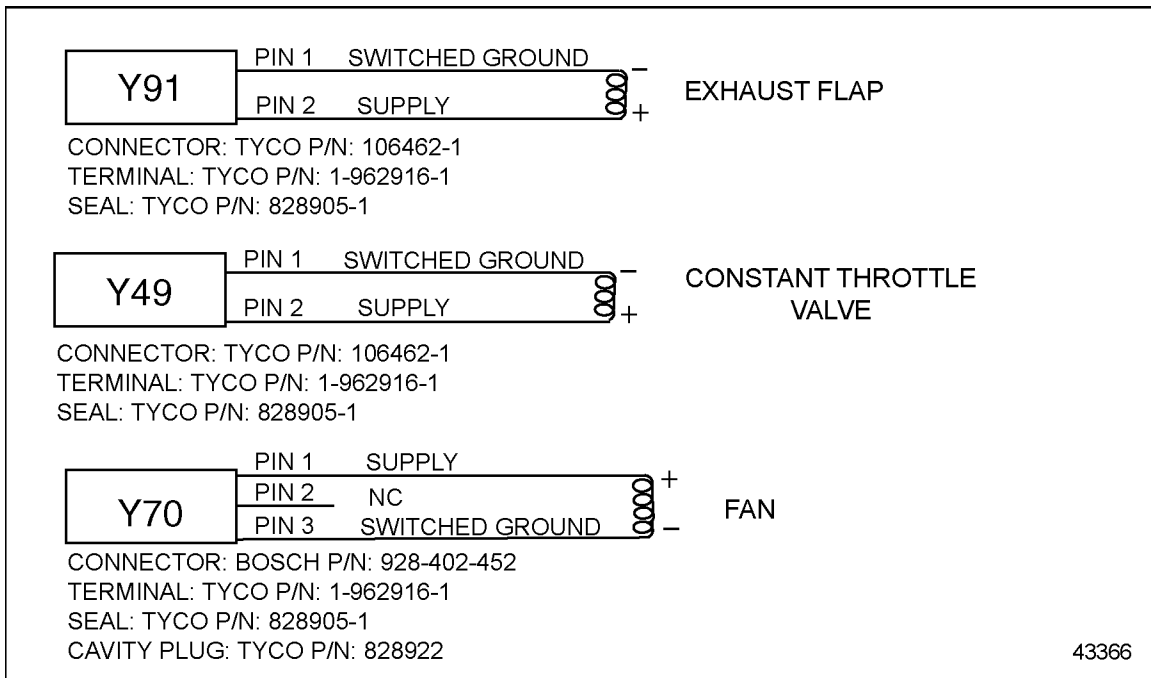


Figure 3-12 MBE 900 Non-EGR VIH to EH Wiring

The wiring for the three connectors to the Engine Harness required for engine brakes and fan control for the MBE 900 with an EGR is listed in Table 3-24. See Figure 3-13 for a schematic when the EGR is added.

Description	Engine Harness Connector/Pin	DDEC-ECU 55 Pin Connector
Fan Control, Switch to Bat- (PV3, PV4)	Y70/Pin 1	41
Fan Control Power	Y70/ Pin 3	12
Compression Brake Ground	Y49/ pin 1	11
Compression Brake Control, Switch to Bat+ (PV5)	Y49/Pin 2	27
Exhaust Flap Control, Switch to Bat- (PV1)	Y91/Pin 1	51
Exhaust Flap Power	Y91/Pin 2	12

Table 3-24 Engine Harness Connector for MBE 900 EGR Engine

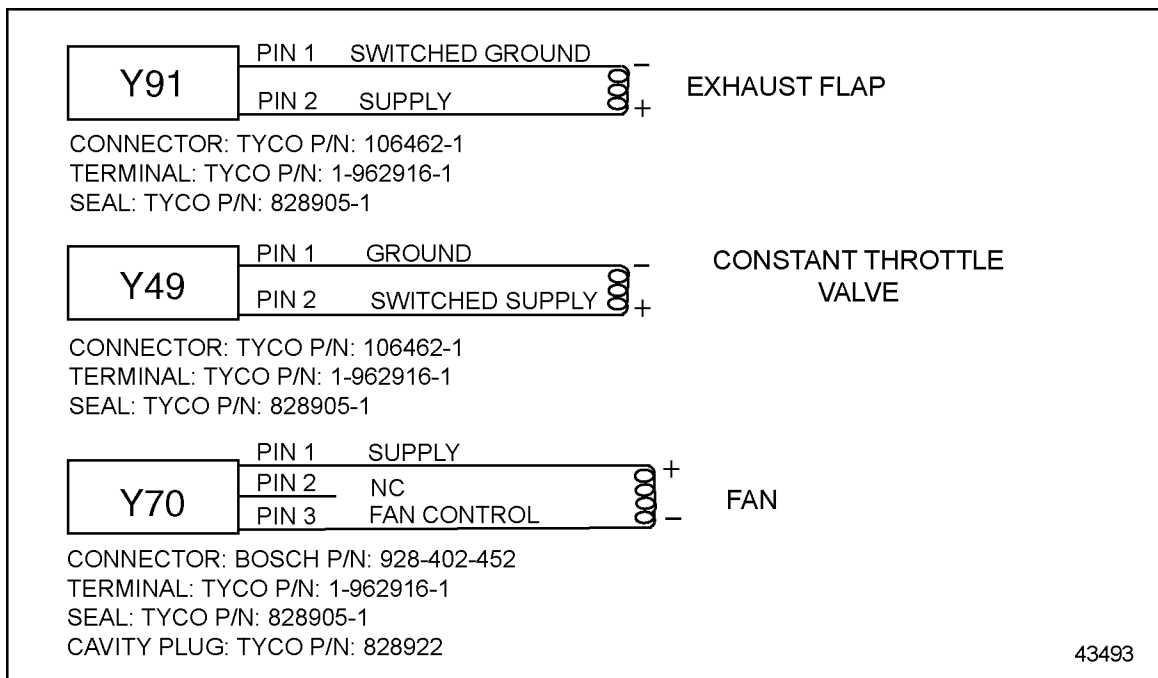


Figure 3-13 MBE 900 EGR VIH to EH Wiring

VIH Power Wiring

The OEM-supplied VIH power wiring (see Figure 3-14) supplies 12 or 24 volts to the ADM2 and DDEC-ECU or 12 volts to the DDEC-VCU. The system must be sourced directly from the battery. The terminals are designed to accept 14 AWG wire with an insulation diameter of 3.2 mm minimum and 5.6 mm maximum.

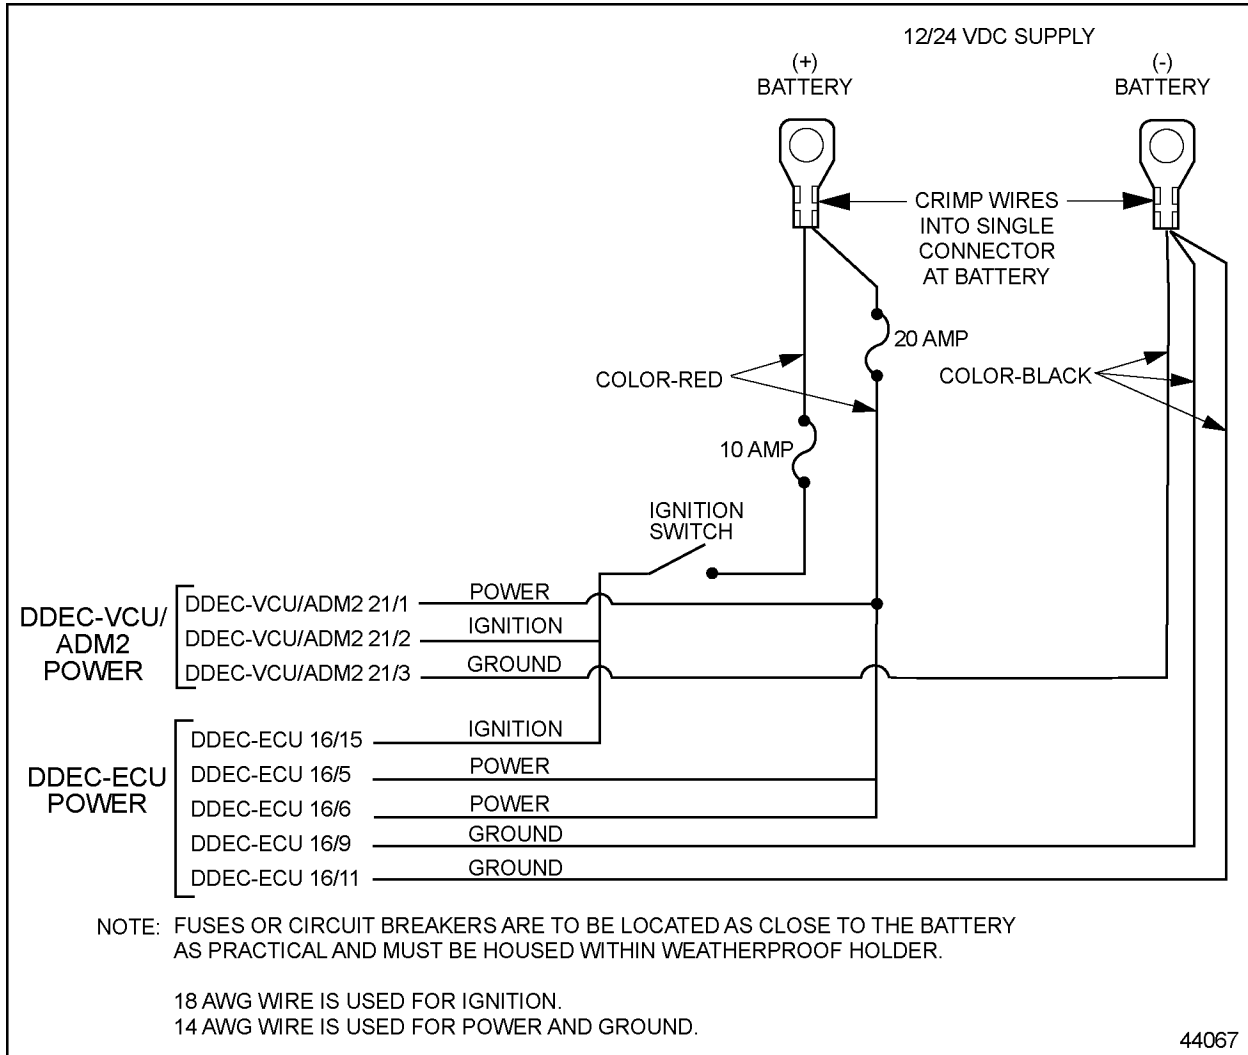


Figure 3-14 Power Wiring

Power and ground must be sourced directly from the battery. An electrically solid connection to the battery or bus bar is required so the battery can filter electrical noise from the power lines. Power for other vehicle systems must not be sourced from the VIH power wires. **Do not** use chassis ground.

NOTE:

The ground wire must be electrically separate from chassis ground.

NOTE:

Although the DDEC-ECU and ADM2 are voltage insensitive, the DDEC-ECU fuel map is battery voltage specific.

Power and ground bus bars may be used. The bus bar must be connected to the battery posts with 0 AWG or larger wire depending upon the total vehicle current requirement. The connecting wires must be as short as possible to minimize circuit resistance. **Do not** connect the ground wire to the chassis ground. The bus bar and all related DDEC-ECU and DDEC-VCU ground circuitry must **not** be any part of the chassis ground circuit.

Provide maximum physical separation of the VIH power wiring from other vehicle electrical systems. Other electrical system wires should ideally be at least three feet away from the VIH power wiring and should not be parallel to the VIH power wiring. This will eliminate coupling electromagnetic energy from other systems into the VIH power wiring.

NOTICE:

Connection to reverse polarity will damage the system if not properly fused.

A 20 amp fuse must be used and installed as close to the battery as possible.

The conductor must be annealed copper not aluminum and must comply with the industry standard, *SAE J1128 JAN 95 Low Tension Primary Cable*. Contact the Society of Automotive Engineers to obtain documents, refer to Appendix for their address.

Splices must be soldered and sealed with a waterproof insulator. Alpha FIT-300, Raychem TAT-125 or any equivalent heat shrink - dual wall epoxy encapsulating adhesive polyolefin is required.

Detroit Diesel Corporation recommends color coding. Alternatively, wires may be hot stamped with the cavity number.

The DDEC-VCU will log a high voltage code (PID 168, FMI 0) when the battery voltage is greater than 19 V for a 12 V system and 36 V for a 24 V system.

The DDEC-VCU will log a low voltage code (PID 168 FMI 1) when the battery voltage is less than 10 V for a 12 V system and 16 V for a 24 V system.

Communications – SAE J1939 Data Link

SAE J1939 Data Link+, SAE J1939 Data Link-, and SAE J1939 Data Link Shield are used as the J1939 communication link. J1939 cable is required for the J1939 data link. Termination resistors are required per the SAE specification. Refer to SAE J1939–11 for specific requirements.

NOTICE:
The communication system operation will degenerate if the wrong cable is used.

The DDEC-VCU connector pin assignments for SAE J1939 are listed in Table 3-25.

Pin	Signal Type	Function
21/19	Data Link	SAE J1939 (+)
21/20	Data Link	J1939 Shield
21/21	Data Link	SAE J1939 (-)

Table 3-25 J1939 DDEC-VCU to VIH Connector Pin Assignments

The following SAE documents cover the SAE J1939 Data Link. Contact the Society of Automotive Engineers to obtain documents, refer to Appendix C for their address.

<i>SAE J1939</i>	Top Layer (Overview)
<i>SAE J1939/11</i>	Physical Layer
<i>SAE J1939/21</i>	Data Link Layer
<i>SAE J1939/71</i>	Vehicle Application Layer
<i>SAE J1939/01</i>	Truck and Bus Applications
<i>SAE J1939/73</i>	Application Layer — Diagnostics

J1939 cable is available from the following sources:

Belden Electronics Division

2200 U.S. 27 South
Richmond, IN 47374
Phone: 1-800-235-3361
www.belden.com

Tyco Electronics Corporation

Raychem Wire & Harnessing
300 Constitution Drive
Menlo Park, CA 94025
www.raychem.com

For a list of supported messages, refer to section 6, "Communications Protocols."

Communications – Proprietary IES-CAN Data Link

The low speed proprietary IES-CAN link between the DDEC-ECU and the DDEC-VCU must be a twisted shielded cable with 0.75 mm diameter wire (approximately 20 AWG), bundle shielded with drain wire and 30 twists per meter. The insulation is rated to 105°C. Termination resistors for the IES-CAN link are located in the DDEC-VCU and DDEC-ECU. The wiring for the DDEC-ECU 16-pin connector and the DDEC-VCU 15-pin connector are listed in Table 3-26.

DDEC-VCU 15-Pin	Function	DDEC-ECU 16-Pin
15/13	IES-CAN Data Link (+)	16/1
15/15	IES-CAN Data Link (-)	16/3
15/14	IES-CAN Data Link (Shield)	16/2

Table 3-26 Propriety IES-CAN Data Link

3.3.4 POWER SUPPLY – 12 VOLT SYSTEM

Normal operating voltage on a 12 V system for the DDEC-VCU and DDEC-ECU is 11-16 VDC.

NOTICE:
Operating the DDEC-VCU or DDEC-ECU over the voltage limits of 32volts will cause damage to the DDEC-VCU or DDEC-ECU.

Operating the DDEC-VCU and/or DDEC-ECU between 8 and 11 volts may result in degraded engine operation. (Transient operation in this range during engine starting is considered normal for 12 volt systems.)

NOTICE:
Reversing polarity will cause damage to the DDEC-VCU and/or DDEC-ECU if the Power Harness is not properly fused.

NOTE:

All output loads, ignition and DDEC-VCU power must be powered from the same battery voltage source.

Average Current Draw

The maximum average current draw is listed in Table 3-27. This information should be used to size the alternator.

System	Maximum Average Current Draw (12 V Nominal Supply)	
	Idle	Full Load/Rated Speed
DDEC-ECU – Engine Loads	1–2 A total	12.5 A total
DDEC-VCU – Vehicle Loads*	350 mA total	5.4 A total

* Vehicle loads are controlled by the OEMs who can best determine the total maximum current draw for their installation.

Table 3-27 Maximum Average Current Draw

The current draw for a DDEC-VCU/DDEC-ECU configuration is listed in Table 3-28.

Configuration	Condition	Current
DDEC-VCU	Ignition Off	300 μ A
	Ignition On and Engine Stopped	175 mA

Table 3-28 Current Draw for DDEC-VCU Configuration

The current draw for a DDEC-ECU is listed in Table 3-29.

Configuration	Condition	Current
DDEC-ECU	Ignition Off	1 mA
	Ignition On and Engine Stopped	400 mA

Table 3-29 Current Draw for DDEC-ECU Configuration

Battery Isolator

DDEC for MBE 900 and MBE 4000 does not require a battery isolator. However, some applications require a battery that is dedicated to the engine and completely isolated from the rest of the vehicle. Commercially available battery isolators can be used.

Main Power Shutdown

The main power supply shutdown schematic shows the DDC approved method for main power switch implementation. See Figure 3-15.

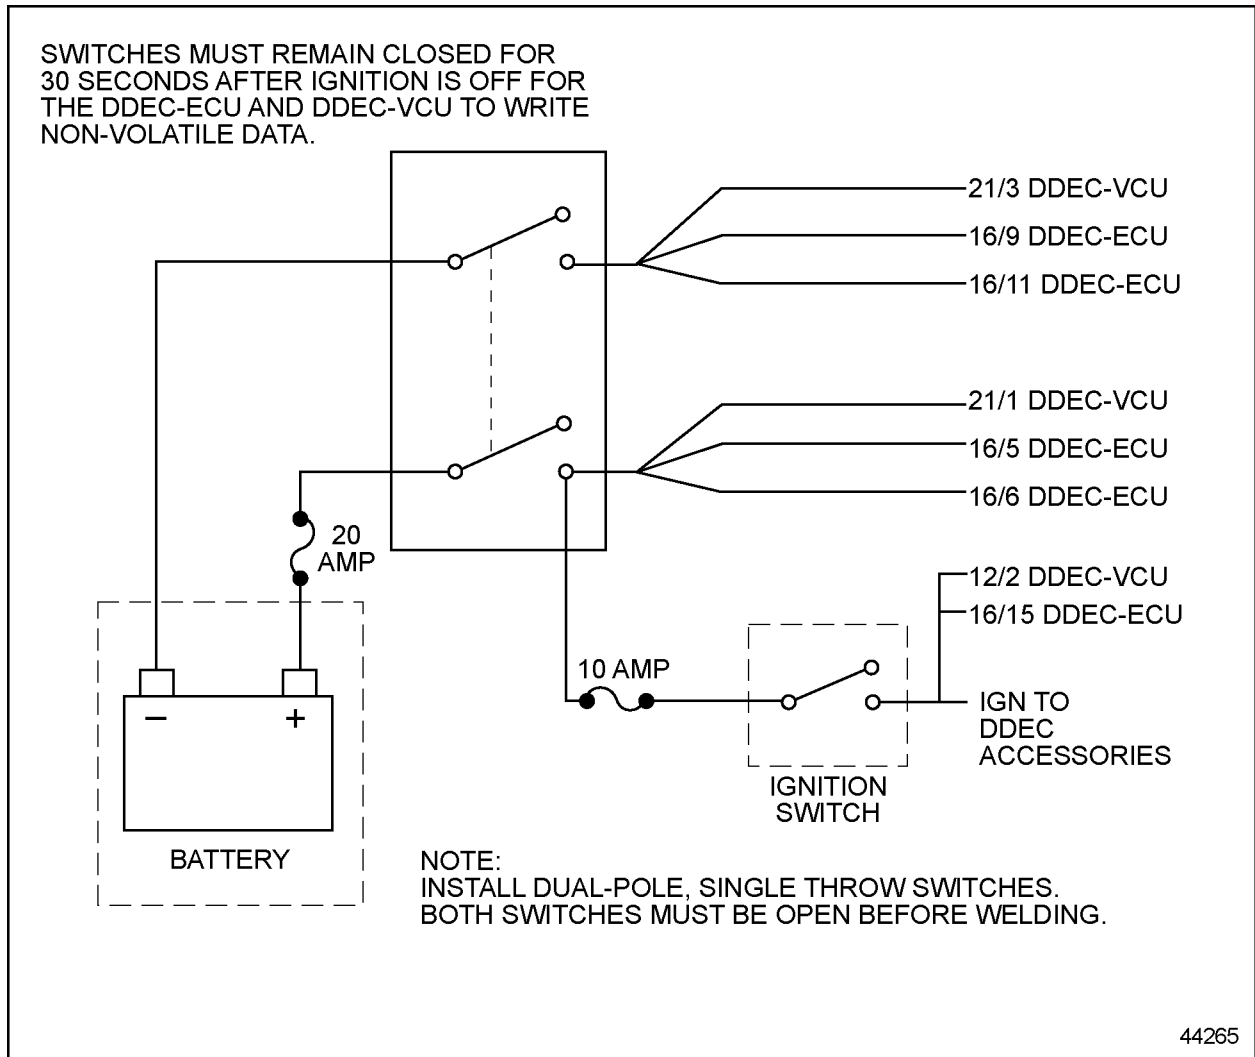


Figure 3-15 Main Power Supply Shutdown 12 Systems

NOTE:

Switches must remain closed for 30 seconds after ignition is off for the DDEC-ECU and DDEC-VCU to write non-volatile data.

NOTE:

Disconnecting positive power is not sufficient to isolate the DDEC-VCU for welding purposes.

NOTE:

It is recommended that both the positive (+) and negative (-) battery leads be disconnected.

NOTICE:

When welding, the following must be done to avoid damage to the electronic controls or the engine:

- Both the positive (+) and negative (-) battery leads must be disconnected before welding.
- The welding ground wire must be in close proximity to welding location - the engine must never be used as a grounding point.
- Welding on the engine or engine mounted components is NEVER recommended.

NOTE:

The alternator should be connected directly to the battery for isolation purposes.

3.3.5 POWER SUPPLY – 24 VOLT SYSTEM

Normal operating voltage for the DDEC-VCU and DDEC-ECU is 16-32 VDC.

NOTICE:

Operating the DDEC-VCU or DDEC-ECU over the voltage limits of 32 volts will cause damage to the DDEC-VCU or DDEC-ECU.

Operating the DDEC-VCU and/or DDEC-ECU between 8 and 16 volts may result in degraded engine operation. (Transient operation in this range during engine starting is considered normal for 24 volt systems.)

NOTICE:

Reversing polarity will cause damage to the DDEC-VCU and/or DDEC-ECU if the Power Harness is not properly fused.

NOTE:

All output loads, ignition, DDEC-ECU, and ADM2 power must be powered from the same battery voltage source.

Average Current Draw

The maximum average current draw is listed in Table 3-30. This information should be used to size the alternator.

System	Maximum Average Current Draw (24 V Nominal Supply)	
	Idle	Full Load/Rated Speed
DDEC-ECU – Engine Loads	1–2 A total	12.5 A total
DDEC-VCU – Vehicle Loads*	350 mA total	5.4 A total

* Vehicle/Equipment loads are controlled by the OEMs who can best determine the total maximum current draw for their installation.

Table 3-30 Maximum Average Current Draw

The current draw for a DDEC-VCU/DDEC-ECU configuration is listed in listed in Table 3-31.

Configuration	Condition	Current
DDEC-VCU	Ignition Off	300 μ A
	Ignition On and Engine Stopped	175 mA

Table 3-31 Current Draw for DDEC-VCU Configuration

The current draw for a DDEC-ECU is listed in Table 3-32.

Configuration	Condition	Current
DDEC-ECU	Ignition Off	1 mA
	Ignition On and Engine Stopped	400 mA

Table 3-32 Current Draw for DDEC-ECU Configuration

Battery Isolator

DDEC for MBE 900 and MBE 4000 does not require a battery isolator. However, some applications require a battery that is dedicated to the engine and completely isolated from the rest of the vehicle. Commercially available battery isolators can be used.

Main Power Shutdown

The main power supply shutdown schematic shows the DDC approved method for main power switch implementation. See Figure 3-16.

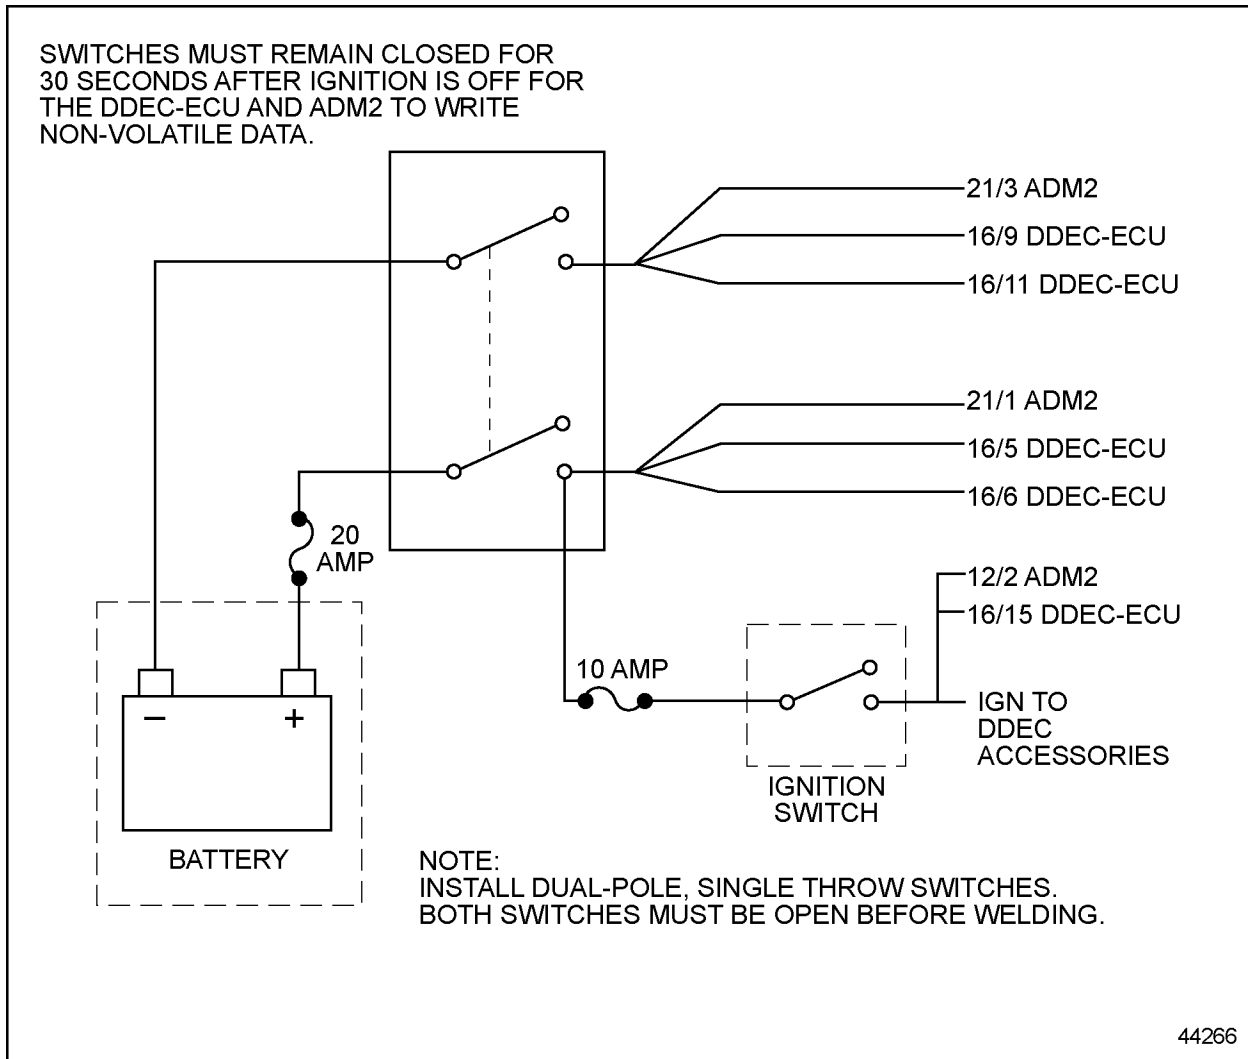


Figure 3-16 Main Power Supply Shutdown

NOTE:

Switches must remain closed for 30 seconds after ignition is off for the DDEC-ECU and DDEC-VCU to write non-volatile data.

NOTE:

It is recommended that both the positive (+) and negative (-) battery leads be disconnected.

NOTE:

Disconnecting positive power is not sufficient to isolate the DDEC-VCU for welding purposes.

NOTICE:

When welding, the following must be done to avoid damage to the electronic controls or the engine:

- Both the positive (+) and negative (-) battery leads must be disconnected before welding.
- The welding ground wire must be in close proximity to welding location - the engine must never be used as a grounding point.
- Welding on the engine or engine mounted components is NEVER recommended.

NOTE:


The alternator should be connected directly to the battery for isolation purposes.

3.3.6 FUSES

A Battery (+) fuse and an ignition circuit fuse must be provided by the vehicle wiring harness. Blade-type automotive fuses are normally utilized; however, manual or automatic reset circuit breakers which meet the following requirements are also acceptable. The fuse voltage rating must be compatible with the DDEC-VCU – DDEC-ECU's maximum operating voltage of 32 volts.

**CAUTION:****FIRE**

To avoid injury from fire, additional loads should not be placed on existing circuits. Additional loads may blow the fuse (or trip the circuit breaker) and cause the circuit to overheat and burn.

 CAUTION: FIRE
<p>To avoid injury from fire, do not replace an existing fuse with a larger amperage fuse. The increased current may overheat the wiring, causing the insulation and surrounding materials to burn.</p>

The ignition fuse current rating must be sized for the loads utilized in each application; however, a rating of between 5 and 10 amps is usually sufficient.

The Battery (+) fuse current rating must satisfy two criteria:

- Must not open during normal operation
- Must open before the DDEC-ECU or DDEC-VCU is damaged during a reverse battery condition

Bussmann ATC-20 and Delphi Packard Electric Systems MaxiFuse 20 amp rated fuses or equivalent will satisfy these requirements. Acceptable blow times versus current and temperature derating characteristics are listed in Table 3-33 and Table 3-34.

% of Rated Fuse Current	Minimum Blow Time	Maximum Blow Time
100%	100 hours	-
135%	1 minutes	30 minute
200%	6 seconds	40 seconds

Table 3-33 Fuse Current and Blow Time

Temperature	% of Rated Fuse Current
-40°C	110% max
+25°C	100%
+120°C	80% min

Table 3-34 Fuse Temperature and Current

3.3.7 CONNECTORS

There are four connectors to the DDEC-VCU, a 21-pin connector, an 18-pin connector, a 15-pin connector, and a 12-pin connector. The OEM is responsible for the four connectors at the DDEC-VCU and the 16-pin connector at the DDEC-ECU.

NOTE:

The DDEC-VCU connectors are not water tight and cannot be subject to water spray.

The part numbers for the DDEC-VCU 21-pin connector are listed in Table 3-35.

Part	Tyco Part Number	DDC Part Number
DDEC-VCU 21-pin connector	1-967625-1	013 545 65 26
Terminal (Vehicle) 0.5-1.0 mm wire	927779-6	013 545 76 26
Terminal (Power) 1.5-2.5 mm wire	927777-6	013 545 78 26
Seals — 1.0 mm wire	—	000 545 28 39
Seals — 1.5 — 2.5 mm wire	—	000 545 29 39
Plug	—	000 545 62 80
Lock	1-967634-1	—

Table 3-35 DDEC-VCU 21-pin Connector Part Numbers

The part numbers for the DDEC-VCU 18-pin connector are listed in Table 3-36.

Part	Tyco	DDC Part Number
DDEC-VCU 18-pin connector	1-967624-1	013 545 64 26
Terminal (Vehicle) 0.5-1.0 mm wire	—	013 545 76 26
Terminal (Power) 1.5-2.5 mm wire	—	013 545 78 26
Seals — 1.0 mm wire	—	000 545 28 39
Seals — 1.5 — 2.5 mm wire	—	000 545 29 39
Plug	—	000 545 62 80
Lock	1-967634-1	—

Table 3-36 DDEC-VCU 18-pin Connector Part Numbers

The part numbers for the DDEC-VCU 15-pin connector are listed in Table 3-37.

Part	DDC Part Number
DDEC-VCU 15-pin connector	013 545 63 26
Terminal (Vehicle) 0.5–1.0 mm wire	013 545 76 26
Terminal (Power) 1.5–2.5 mm wire	013 545 78 26
Seals — 1.0 mm wire	000 545 28 39
Seals — 1.5 — 2.5 mm wire	000 545 29 39
Plug	000 545 62 80

Table 3-37 DDEC-VCU 15-pin Connector Part Numbers

The part numbers for the DDEC-VCU 12-pin connector are listed in Table 3-38.

Part	DDC Part Number
DDEC-VCU 12-pin connector	013 545 62 26
Terminal (Vehicle) 0.5-1.0 mm wire	013 545 76 26
Terminal (Power) 1.5-2.5 mm wire	013 545 78 26
Seals – 1.0 mm wire	000 545 28 39
Seals – 1.5 – 2.5 mm wire	000 545 29 39
Plug	000 545 62 80

Table 3-38 DDEC-VCU 12-pin Connector Part Numbers

The part numbers for the DDEC-VCU-to-DDEC-ECU connector is listed in Table 3-39.

Part	DDC Part Number
DDEC-ECU 16-pin connector	000 153 00 22
Terminal (DDEC-VCU) 0.5–1.0 mm wire	011 545 76 26
Terminal (power) 1.0–2.5 mm wire	011 545 78 26
Seals — 1.0 mm	000 545 28 39
Seals — 1.5–2.5 mm	000 545 29 39
Plug	000 545 62 80
Cover	000 153 00 82

Table 3-39 DDEC-VCU-to-DDEC-ECU 16-pin Connector Part Numbers

SAE J1939/J1587 Six-pin Data Link Connector

The components listed in Table 3-40 are required to incorporate a SAE J1708/J1587 Data Link in a VIH so a DDR or other diagnostic devices can be attached without a unique jumper.

Component	DDC Part Number	Deutsch Part Number
Six-pin Deutsch Connector	23513052	HD-10-6-12P
Connector Cover	23513054	HDC-16-6
Two (2) Cavity Plugs	23507136	114017
Four (4) Terminals	23513053	0460-220-1231

Table 3-40 Required Components to Incorporate an SAE J1939/J1587 Data Link in the VIH

The following illustration shows the wiring for the 6-pin connector (see Figure 3-17).

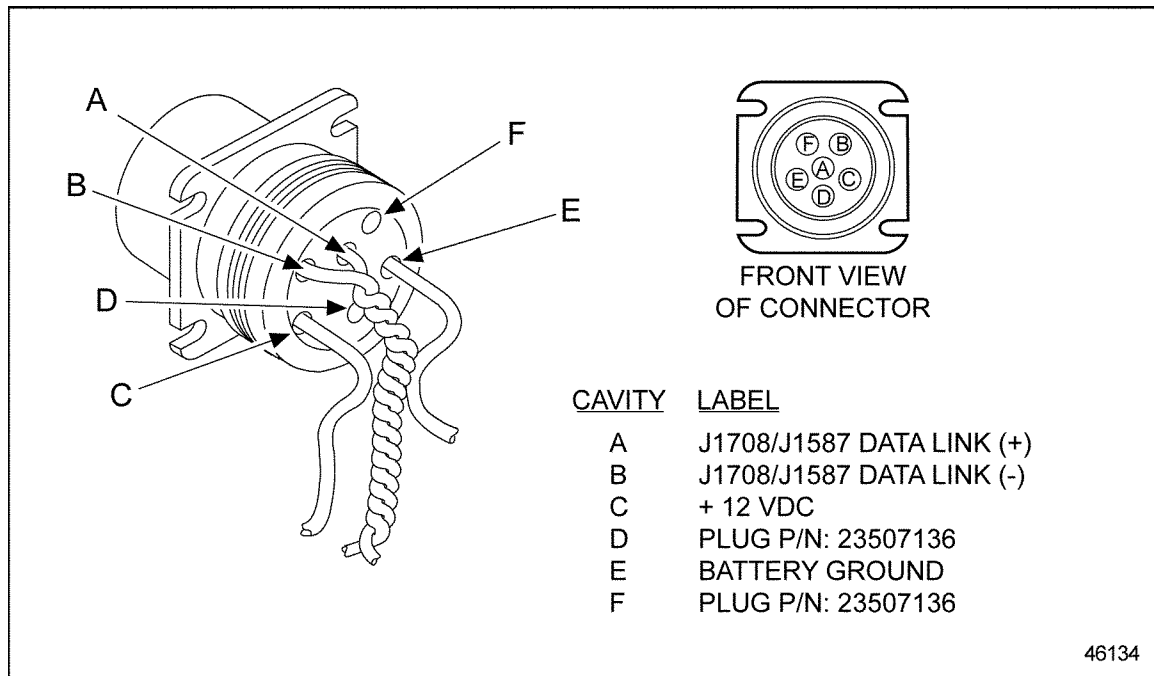


Figure 3-17 Wiring for Six-pin Data Link Connector

SAE J1939/J1587 Nine-pin Data Link Connector (Recommended)

The SAE J1708/J1587 nine-pin data link connector is the recommended data link connector. DDC recommends that the OEM-supplied data link connector be conveniently positioned in a well protected location facilitating subsequent DDDL usage (i.e., reprogramming, diagnostics, etc.).

The components listed in Table 3-41 are required to incorporate a SAE J1939/J1587 Data Link in a VIH for diagnostic and reprogramming devices.

Component	DDC Part Number	Deutsch Part Number
Nine-pin Deutsch Connector	23529496	HD10-9-1939P
Connector Cover	23529497	HDC 16-9
Two (2) Cavity Plugs	23507136	114017
Seven (7) Terminals	23507132	0460-202-16141

Table 3-41 Required Components to Incorporate an SAE J1939/J1587 Data Link in the VIH

The following illustration shows the wiring for the nine-pin connector (see Figure 3-18).

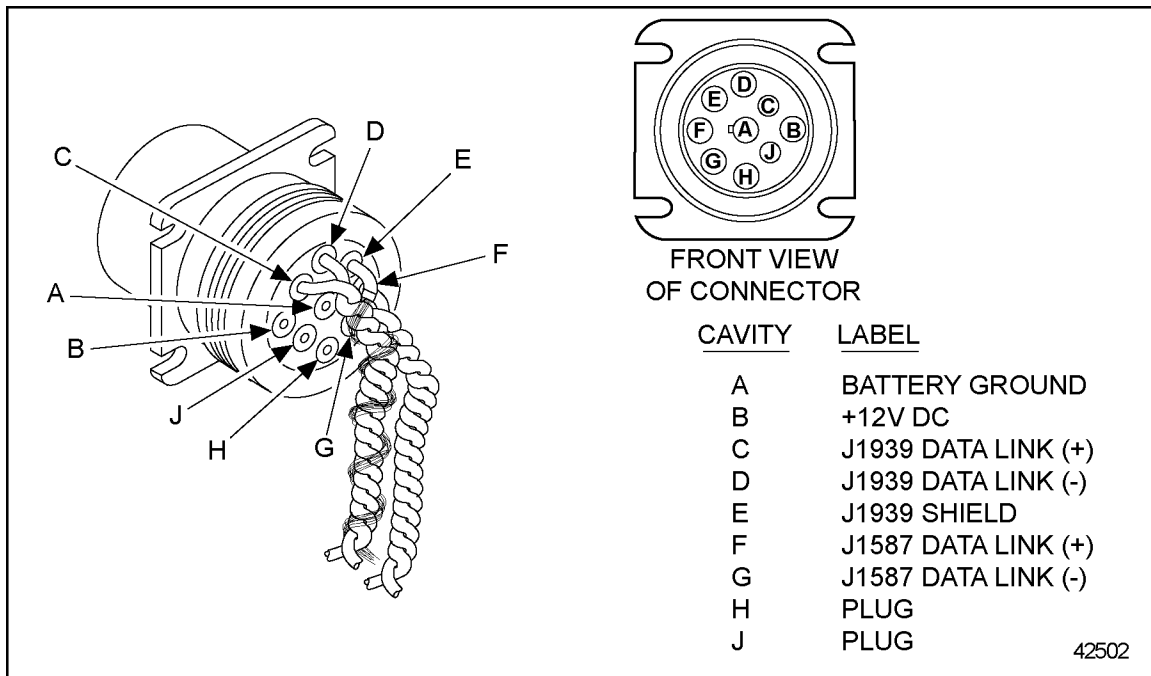


Figure 3-18 Wiring for 9-pin Data Link Connector

The SAE J1587/J1708 Data Link must be twisted pairs. The twists are a minimum of 12 turns per foot (305 mm). The maximum length for the SAE J1587/J1708 Data Link is 130 ft (40 m).

3.3.8 GRID HEATER

The grid heater (see Figure 3-19) is driven by a load relay switched to supply voltage. The installation of a fused high current, as well as the recommended monitoring of the load contact of the load relay, is the responsibility of the vehicle manufacturer. A sticking load contact of the load relay can be monitored via input 12/10, but there is no automatic power cut off. If a sticking load contact occurs, the grid heater control lamp will flash and the grid heater load circuit must be switched off manually.

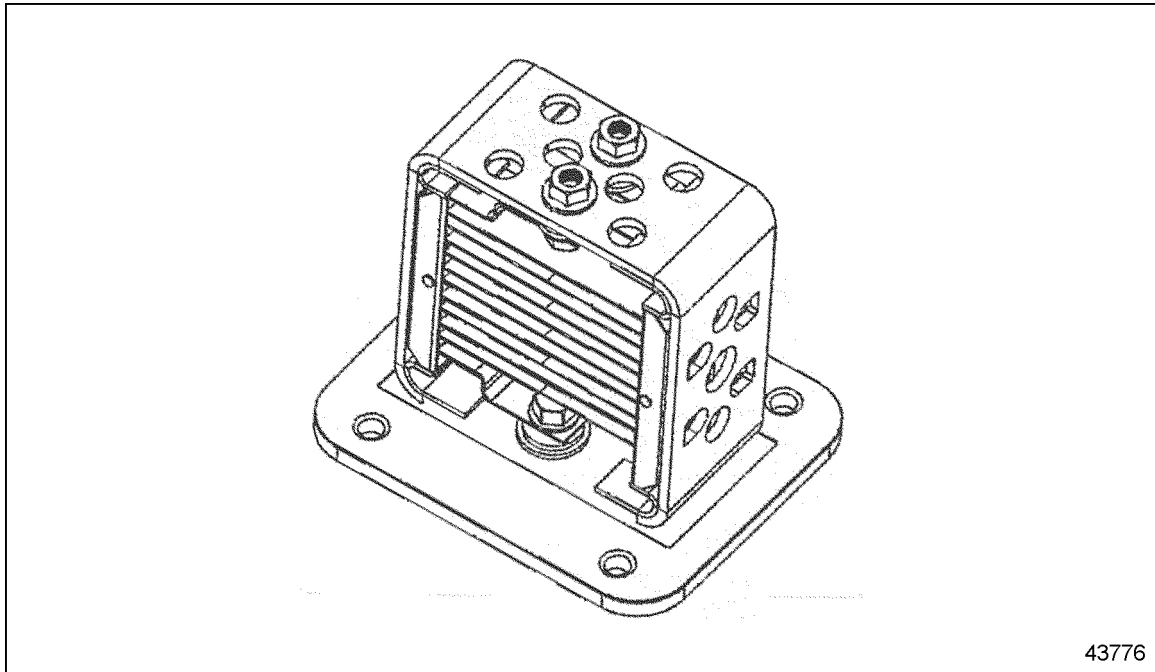


Figure 3-19 Grid Heater

Nominal power and resistance for the 12 V and 24 V grid heaters are listed in Table 3-42.

Data	12 Volt	24 Volts
Nominal Power at 1000°C (1832°F)	1.9 KW ± 10%	1.9 KW ± 10%
Resistance at Rated Temperature	62 mΩ ± 10%	250 mΩ ± 10%

Table 3-42 Nominal Power and Resistance

NOTE:

The grid heater requires a 250 Amp relay for 12 V systems, a 120 Amp for 24 V systems.

Wiring the Grid Heater

The output (21/7) activates the grid heater control lamp. The output (15/9 - ADM2) (15/10 – DDEC-VCU) activates the load relay for the grid heater. The digital input (12/10) can be used for monitoring the load contacts of the load relay. If the output is shut off, the relay is switched to the supply voltage or switched to ground. See Figure 3-20

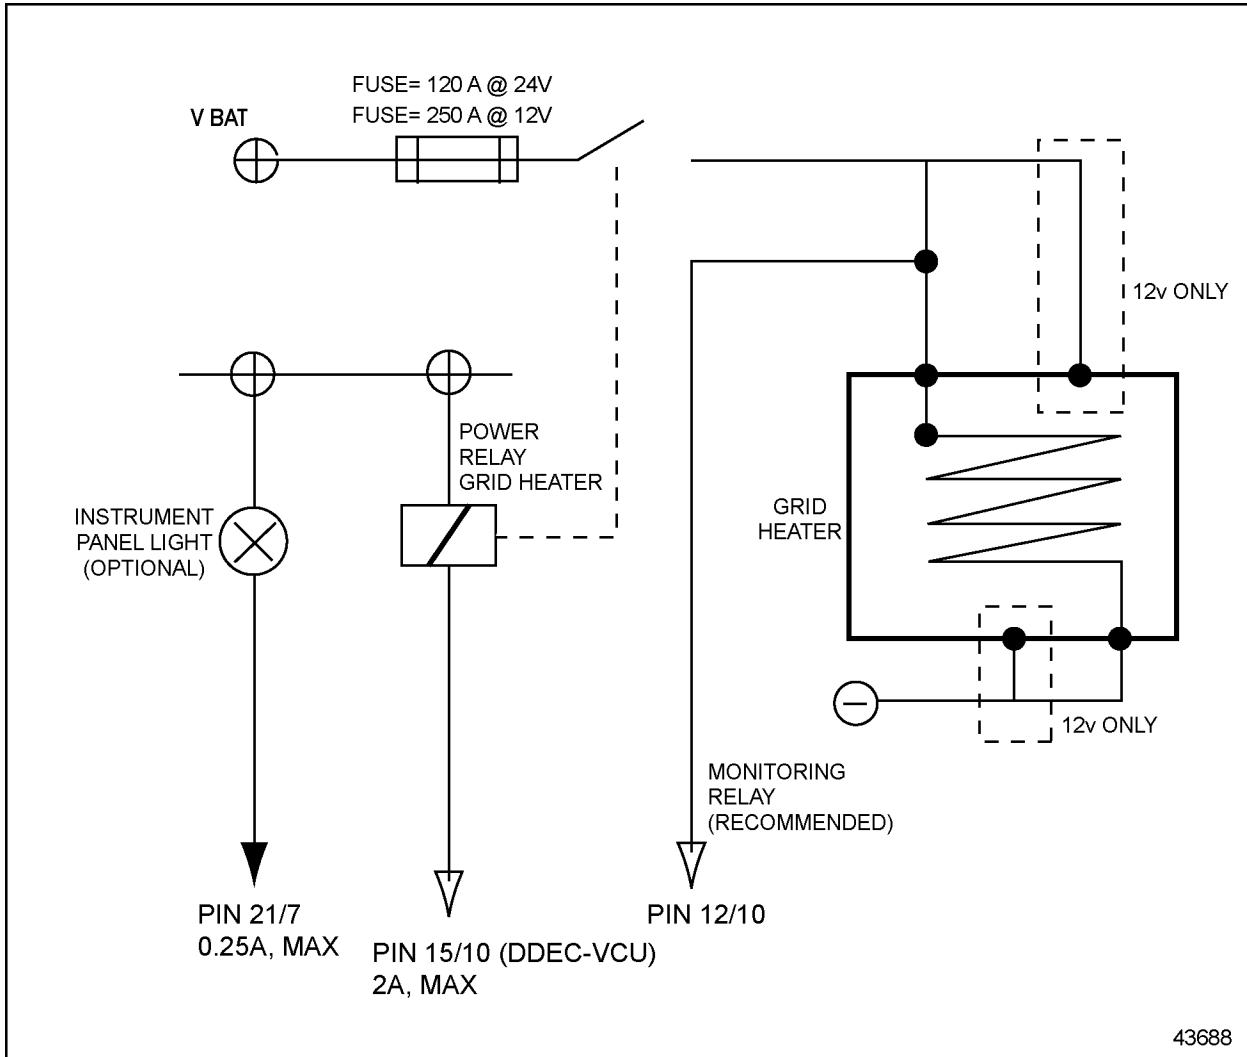


Figure 3-20 DDEC-VCU Grid Heater Wiring

3.4 WIRES AND WIRING

Detroit Diesel Corporation recommends color coding and hot stamping wire numbers in contrasting colors at intervals of four inches or less.

3.4.1 GENERAL REQUIREMENTS

NOTE:

Avoid renumbering DDC circuits since all troubleshooting guides reference the circuit numbers shown in the schematic. DDC suggests including a prefix or suffix with the DDC circuit numbers when conflicts exist.

3.4.2 GENERAL WIRE

All wires used in conjunction with the DDEC for MBE 900 and MBE 4000 must meet the following criteria:

NOTICE:
DDC does not recommend using any type of terminal lubricant or grease compounds. These products may cause dirt or other harmful substances to be retained in the connector. DDC has not tested these products and cannot stand behind their use.

NOTICE:
Insulation must be free of nicks.



Criteria: Wires

Tape, conduit, loom or a combination thereof must be used to protect the wires. Refer to sections 3.5 and 3.6.

All wires must be annealed copper wire (not aluminum).

All wires must comply with SAE J1128.

All wires must be insulated with cross-link polyethylene (XLPE) such as GXL, or any self-extinguishing insulation having a minimum rating of -40°C (-40°F) to 125°C (257°F).

3.4.3 CRIMP TOOLS

The part numbers for the crimp tools for working with the DDEC-ECU and DDEC-VCU connectors are listed in Table 3-43.

Description	Tyco/Amp Part Number
Extraction Tool	726503-1
Hand Crimp Tool	169400-0
Crimp Dies for 0.5 mm – 1.0 mm Terminals	734262-0
Crimp Dies for 1.0 mm – 2.5 mm Terminals	169917-0

Table 3-43 Crimp Tools

3.4.4 DEUTSCH TERMINAL INSTALLATION AND REMOVAL

The method of terminal installation and removal varies. The following sections cover Deutsch terminal installation and removal.

Deutsch Terminal Installation Guidelines

Deutsch connectors have cable seals molded into the connector. These connectors are push-to-seat connectors with cylindrical terminals. The diagnostic connector terminals are gold plated for clarity.

NOTICE:

Improper selection and use of crimp tools have varying adverse effects on crimp geometry and effectiveness. Proper installation of terminals require specialized tools. Do not attempt to use alternative tools.

The crimp tool to use in Deutsch terminal installation is J 34182 (Kent-Moore part number).

NOTICE:

Terminal crimps must be made with the Deutsch crimp tool P/N: HDT-48-00 to assure gas tight connections.

NOTICE:

If a separate seal is required, be sure to install the seal onto the wire before stripping the insulation.

Use the following instructions for installing Deutsch terminals:

1. Strip approximately .25 inch (6 mm) of insulation from the cable.
2. Remove the lock clip, raise the wire gage selector, and rotate the knob to the number matching the gage wire that is being used.
3. Lower the selector and insert the lock clip.
4. Position the contact so that the crimp barrel is 1/32 of an inch above the four indenters. See Figure 3-21. Crimp the cable.

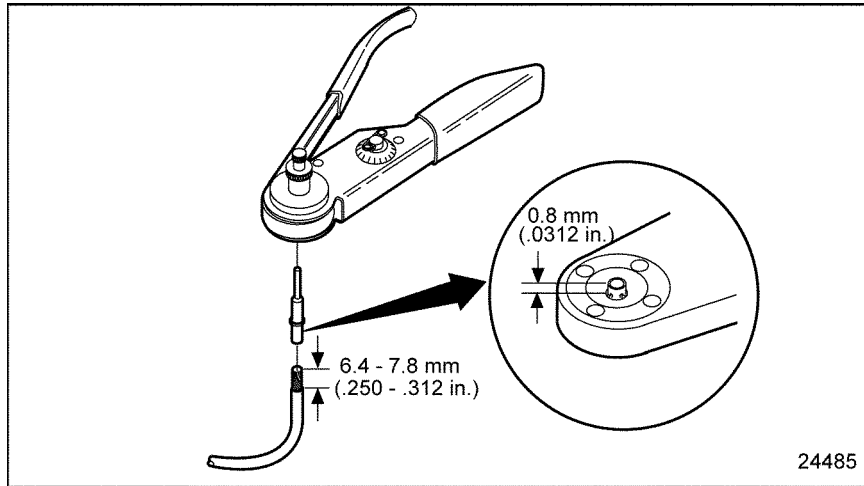


Figure 3-21 Setting Wire Gage Selector and Positioning the Contact

5. Grasp the contact approximately one inch behind the contact crimp barrel. Hold the connector with the rear grommet facing you. See Figure 3-22.

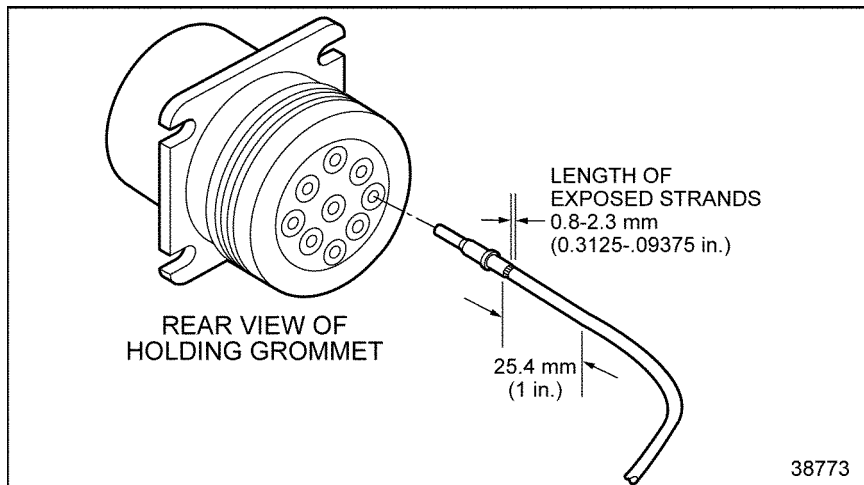


Figure 3-22 Pushing Contact Into Grommet

6. Push the contact into the grommet until a positive stop is felt. See Figure 3-22. A slight tug will confirm that it is properly locked into place. See Figure 3-23.

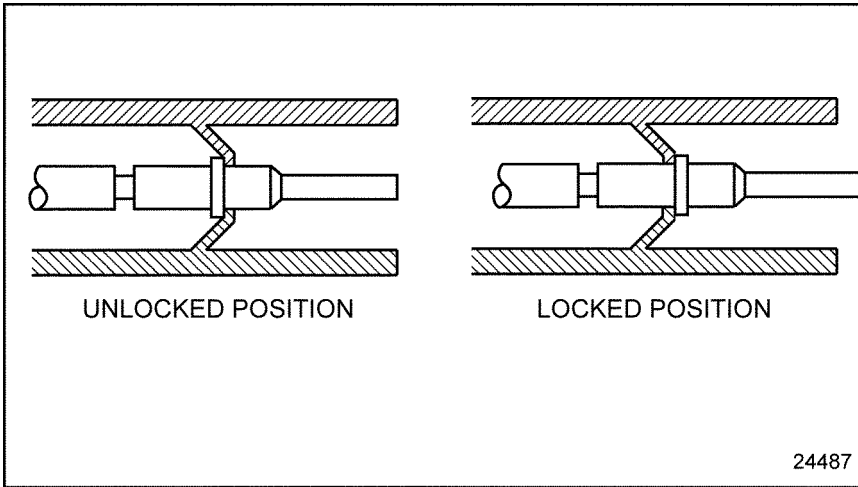


Figure 3-23 Locking Terminal Into Connector

Deutsch Terminal Removal

The appropriate size removal tool should be used when removing cables from connectors. The proper removal tools are listed in Table 3-44.

Tool	Kent-Moore Part Number
Removing (12 AWG)	J 37451
Removing (16-18 AWG)	J 34513-1

Table 3-44 Removal Tools for Deutsch Terminals

Remove Deutsch terminals as follows:

1. With the rear insert toward you, snap the appropriate size remover tool over the cable of contact to be removed. See Figure 3-24.

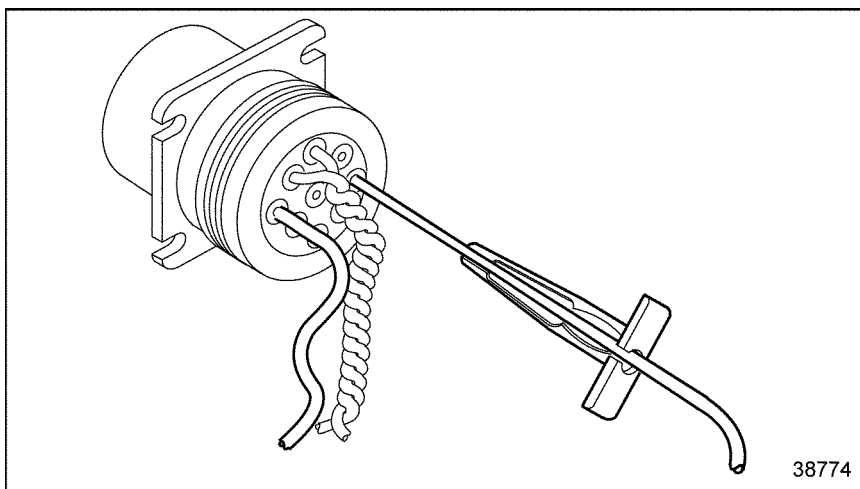


Figure 3-24 Removal Tool Position

2. Slide the tool along the cable into the insert cavity until it engages and resistance is felt. Do not twist or insert tool at an angle. See Figure 3-25.

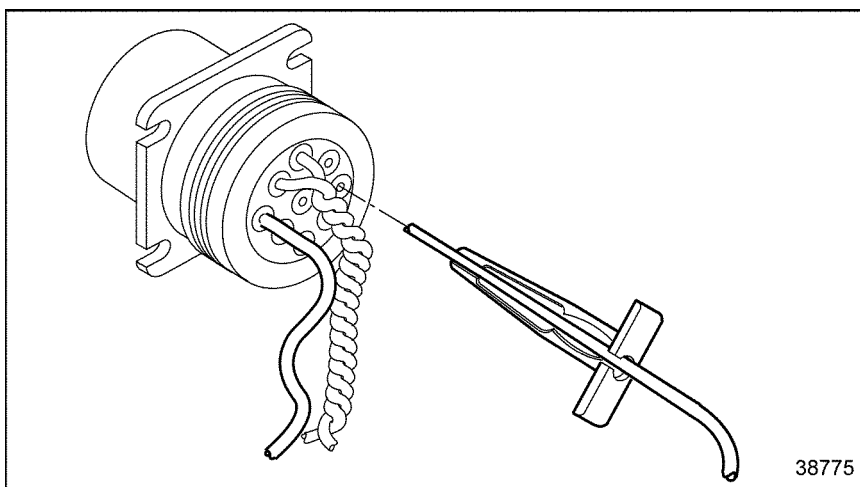


Figure 3-25 Removal Tool Insertion

3. Pull contact cable assembly out of the connector. Keep reverse tension on the cable and forward tension on the tool.

3.4.5 SPLICING GUIDELINES

The following are guidelines which may be used for splices. The selection of crimpers and splice connectors is optional. Select a high quality crimper equivalent to the Kent-Moore tool, J 38706, and commercially available splice clips.

The recommended technique for splicing and repairing circuits (other than power and ignition circuits) is a clipped and soldered splice. Alternatively, any method that produces a high quality, tight (mechanically and electronically sound) splice with durable insulation is considered to be acceptable.

Clipped and Soldered Splicing Method

The tools required are listed in Table 3-45.

Tool	Part Number
Heat Gun	--
Sn 60 solder with rosin core flux	--
Wire Stripper	Kent-Moore J 35615 or equivalent
Splice Clips (commercially available)	Wire size dependent
Heat Shrink Tubing	Raychem HTAT or equivalent

Table 3-45 Recommended Splicing Tools



Criteria: Splicing Straight Leads

No more than one strand in a 16 strand wire may be cut or missing.

Use Sn 60 solder with rosin core flux.

The exposed wire must be clean before the splice is soldered.

Soldering splice connectors is optional. To solder splice connectors:

1. Position the leads, so one overlaps the other. See Figure 3-26.

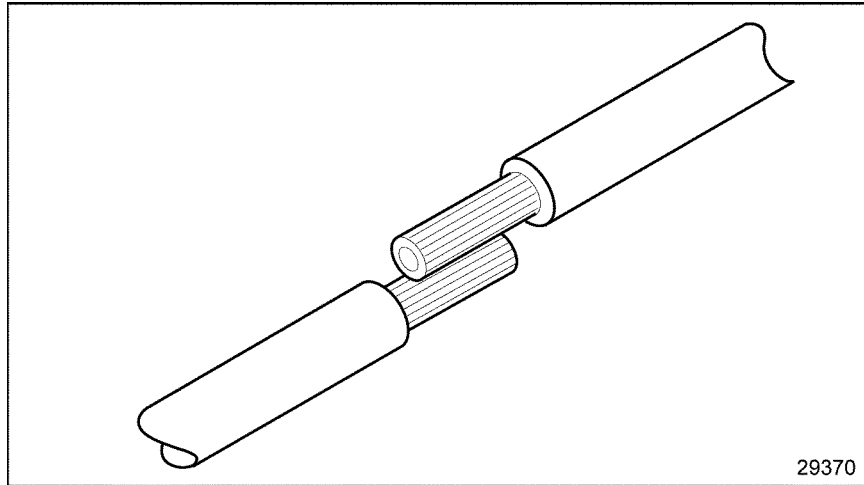


Figure 3-26 Positioning the Leads

2. Secure the leads with a commercially available clip and hand tool. See Figure 3-27.

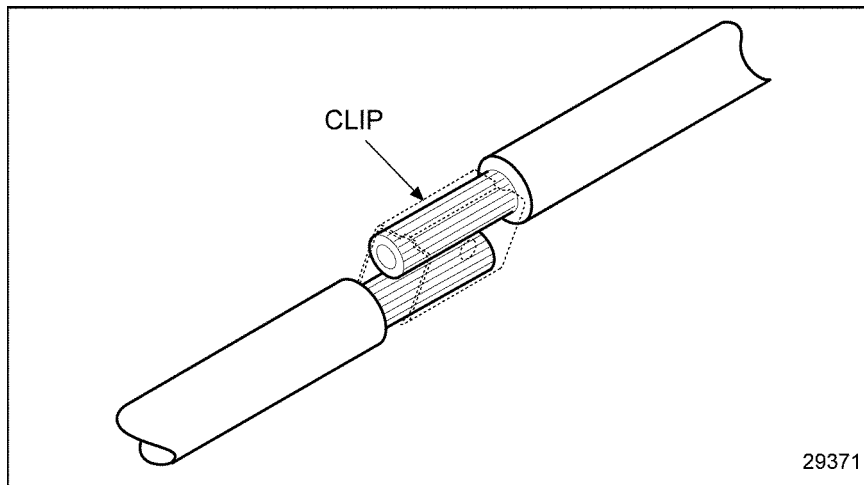


Figure 3-27 Securing the Leads With a Clip

3. Use a suitable electronic soldering iron to heat the wires. Apply the solder to the heated wire and clip (not to the soldering iron) allowing sufficient solder flow into the splice joint.
4. Pull on wire to assure crimping and soldering integrity. The criteria listed in Table 3-46 must be met.

Wire Gauge	Must Withstand Applied Load
14 AWG	45 lb (200 N)
16 AWG	27 lb (120 N)
18 AWG	20 lb (90 N)

Table 3-46 Applied Load Criteria for Terminals

5. Loop the lead back over the spliced joint and tape. See Figure 3-28.

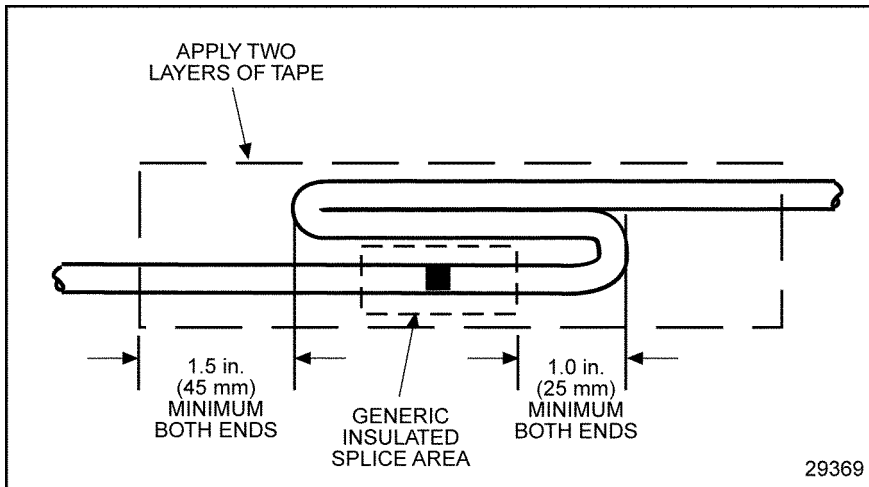


Figure 3-28 Recommended Strain Relief of Spliced Joint

Splicing and Repairing Straight Leads-Alternate Method 1

The tools required are listed in Table 3-47.

Tool	Part Number
Heat Gun	--
Wire Stripper	Kent-Moore J 35615 or equivalent
Splice Clips (commercially available)	Wire size dependent
Heat Shrink Tubing	Raychem HTAT or equivalent
Terminal Crimper for Metri-Pack 280 (12 AWG)	Kent-Moore J 38125-6
Terminal Crimper for Metri-Pack 280 (18 AWG)	Kent-Moore J 39848
Terminal Crimper for Weather Pack	Kent-Moore J 35606
Terminal Crimper for Deutsch	Kent-Moore J 34182
Terminal Crimper for Metri-Pack 150	Kent-Moore J 35123

Table 3-47 Recommended Splicing Tools



Criteria: Splicing Straight Leads

No more than one strand in a 16 strand wire may be cut or missing.

The recommended method to splice straight leads follows:

1. Locate broken wire.
2. Remove insulation as required; be sure exposed wire is clean and not corroded.
3. Insert one wire into the splice clip until it butts against the clip. Stop and crimp (see Figure 3-29, A).
4. Insert the other wire into the splice clip until it butts against the clip stop (see Figure 3-29, B).

NOTICE:

Any terminal that is cracked or ruptured is unacceptable as malfunctions may occur.

5. Visually inspect the splice clip for cracks, rupture, or other crimping damage. Remove and replace damaged clips before proceeding.
6. Pull on wire to ensure the splice integrity. The criteria listed in Table 3-48 must be met.

Wire Gage	Must Withstand Applied Load
14 AWG	45 lb (200 N)
16 AWG	27 lb (120 N)
18 AWG	20 lb (90 N)

Table 3-48 Applied Load Criteria for Terminals

7. Shrink the splice clip insulative casing with a heat gun to seal the splice (see Figure 3-29, C).

NOTICE:

Splices may not be closer than 12 in. (.3 m) apart to avoid degradation in circuit performance. Replace wire to avoid having splices closer than 12 in. (.3 m) apart.

8. Loop the lead back over the spliced joint and tape. See Figure 3-28.

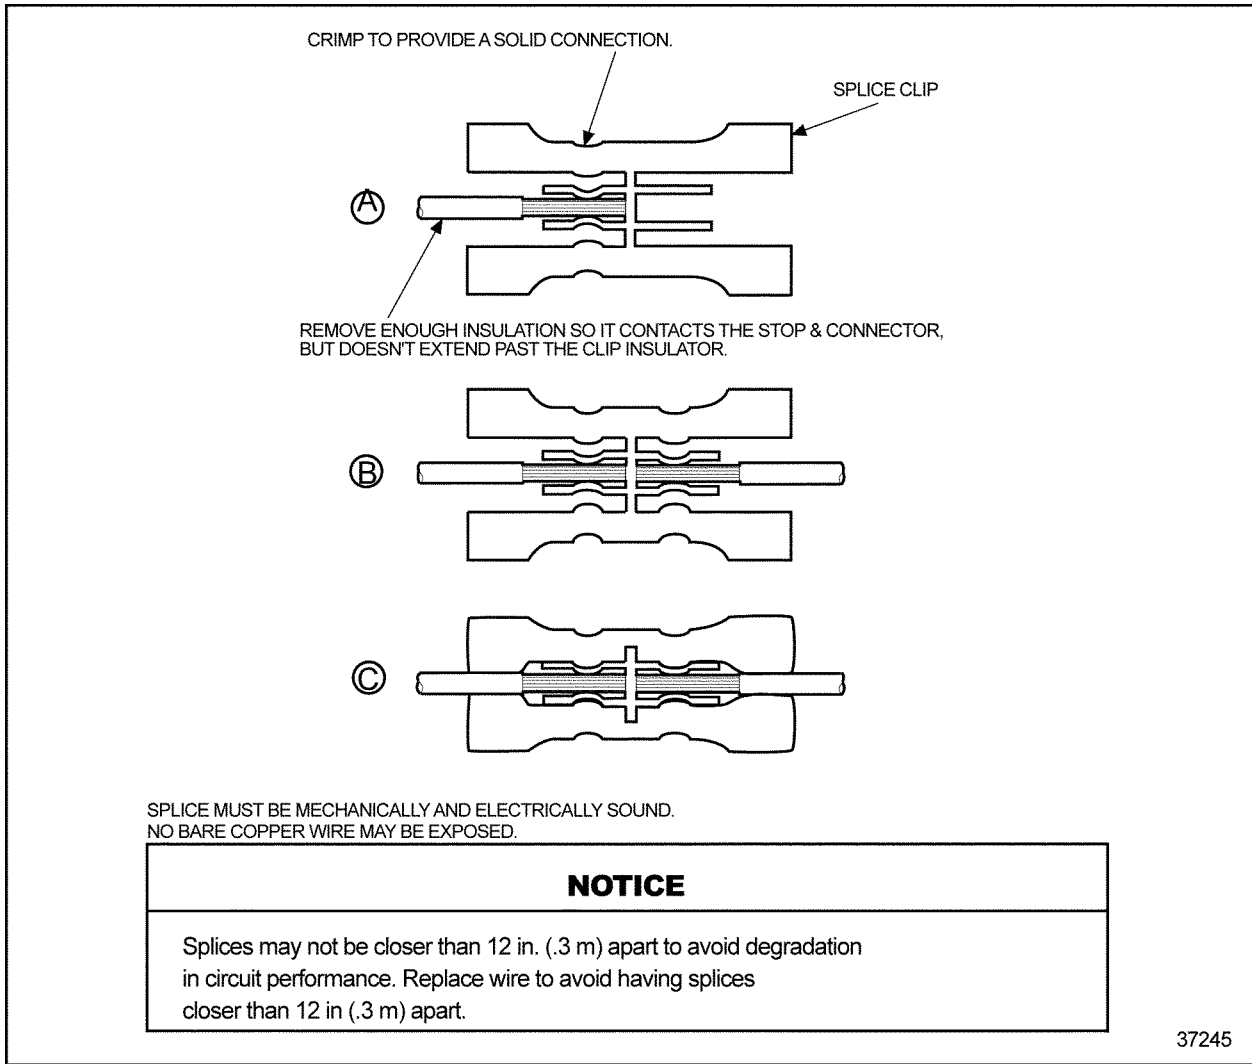


Figure 3-29 Splicing Straight Leads - Alternate Method 1

Splicing and Repairing Straight Leads - Alternate Method 2

This method is not allowed or recommended for power or ignition circuits. The tools required are listed in Table 3-49.

Tool	Part Number
Heat Gun	--
Wire Stripper	Kent-Moore J 35615 or equivalent
Splice Clips (commercially available)	Wire size dependent
Heat Shrink Tubing	Raychem HTAT or equivalent
Terminal Crimper for Metri-Pack 280 (12 AWG)	Kent-Moore J 38125-6
Terminal Crimper for Metri-Pack 280 (18 AWG)	Kent-Moore J 39848
Terminal Crimper for Weather Pack	Kent-Moore J 35606
Terminal Crimper for Deutsch	Kent-Moore J 34182
Terminal Crimper for Metri-Pack 150	Kent-Moore J 35123

Table 3-49 Recommended Splicing Tools



Criteria: Splicing Straight Leads

No more than one strand in a 16 strand wire may be cut or missing.

An acceptable option for splicing straight leads is:

1. Locate broken wire.
2. Remove insulation as required; be sure exposed wire is clean and not corroded.
3. Slide a sleeve of glue lined, shrink tubing (Raychem HTAT or equivalent) long enough to cover the splice clip on the wire and overlap the wire insulation, about .25 in. (6 mm) on both sides (see Figure 3-30, A).
4. Insert one wire into splice clip until it butts against the splice clip. Stop and crimp (see Figure 3-30, B).
5. Insert the remaining wires into the splice clip one at a time until each butts against the splice clip; stop and crimp (see Figure 3-30, B).

NOTICE:

Any terminal that is cracked or ruptured is unacceptable as malfunctions may occur.

6. Visually inspect the terminal for cracks, rupture, or other crimping damage. Remove and replace damaged terminal before proceeding.
7. Slide the shrink tubing over the crimped splice clip (see Figure 3-30, C).
8. Shrink tubing with a heat gun to seal the splice (see Figure 3-30, D).

NOTICE:

A minimum of two layers of heat shrink tubing must be applied to splices that have more than one lead in or out.

9. Loop the lead back over the spliced joint and tape. See Figure 3-28.

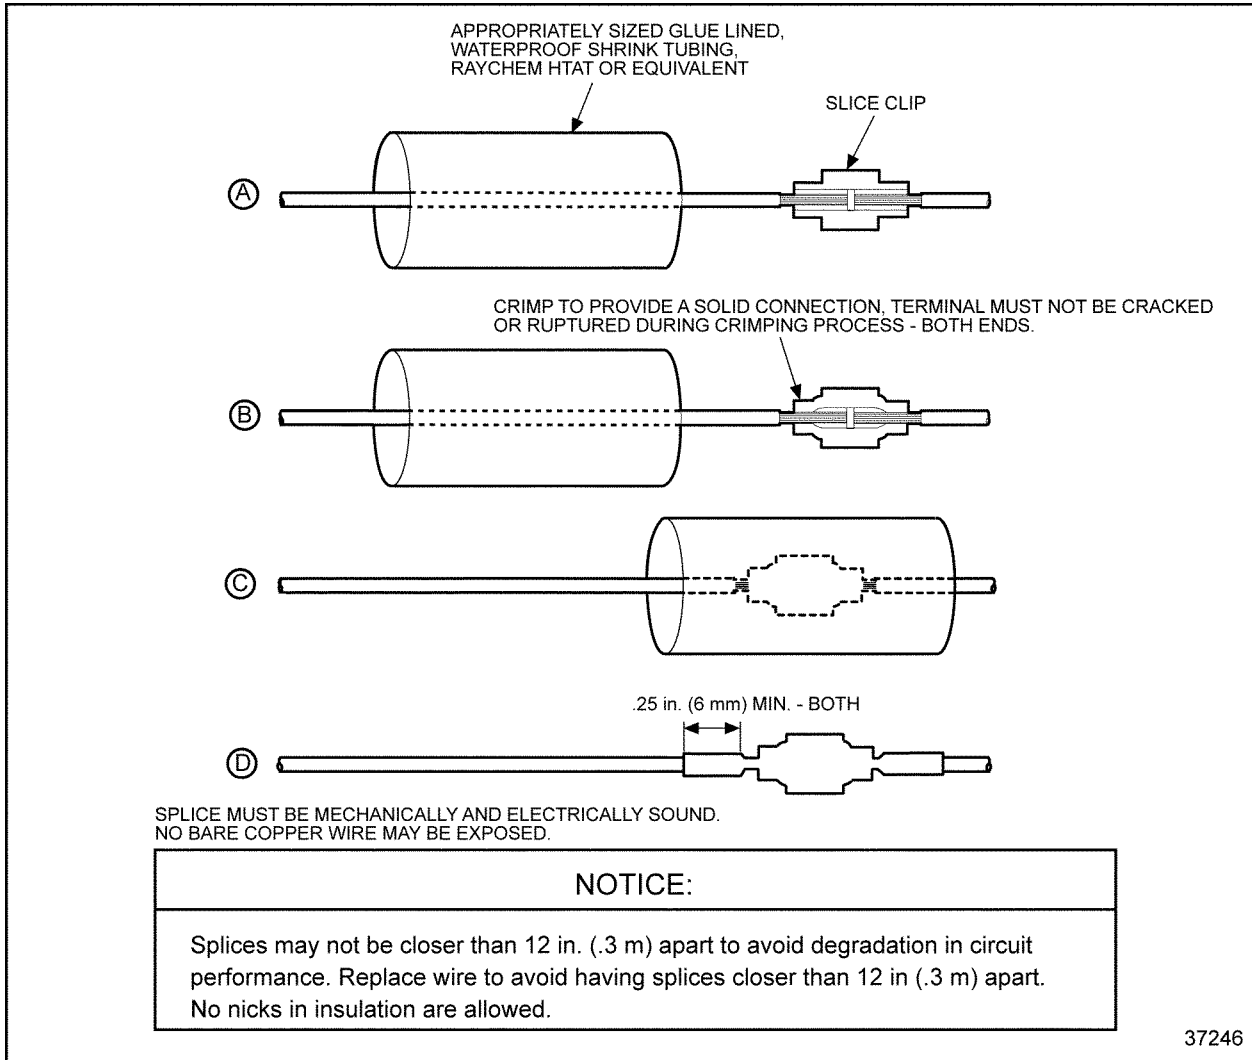


Figure 3-30 Splicing Straight Leads - Alternate Method 2

Shrink Wrap

Shrink wrap is required when splicing non insulated connections. Raychem HTAT or any equivalent heat shrink dual wall epoxy encapsulating adhesive polyolefin is required. Shrink wrap must extend at least .25 in. (6 mm) over wire insulation past splice in both directions.

Alpha Wire Corporation

711 Lidgerwood Ave
P.O. Box 711
Elizabeth, New Jersey 07207-0711
1-800-52ALPHA
www.alphawire.com

Tyco Electronics Corporation

Raychem Cable Identification and Protection
300 Constitution Drive
Menlo Park, CA 94025
Phone: 1-800-926-2425
www.raychem.com

To heat shrink wrap a splice:

NOTICE:

The heat shrink wrap must overlap the wire insulation about .25 in. (6 mm) on both sides of the splice.

1. Select the correct diameter to allow a tight wrap when heated.
2. Heat the shrink wrap with a heat gun; do not concentrate the heat in one location, but apply the heat over the entire length of shrink wrap until the joint is complete.
3. Repeat step 2 to apply a second layer of protection (if required by splicing guidelines).

Staggering Wire Splices

Position spliced wires properly as follows:

NOTICE:

You must stagger positions to prevent a large bulge in the harness and to prevent the wires from chafing against each other.

1. Stagger the position of each splice (see Figure 3-31) so there is at least a 2.5 in. (65 mm) separation between splices.

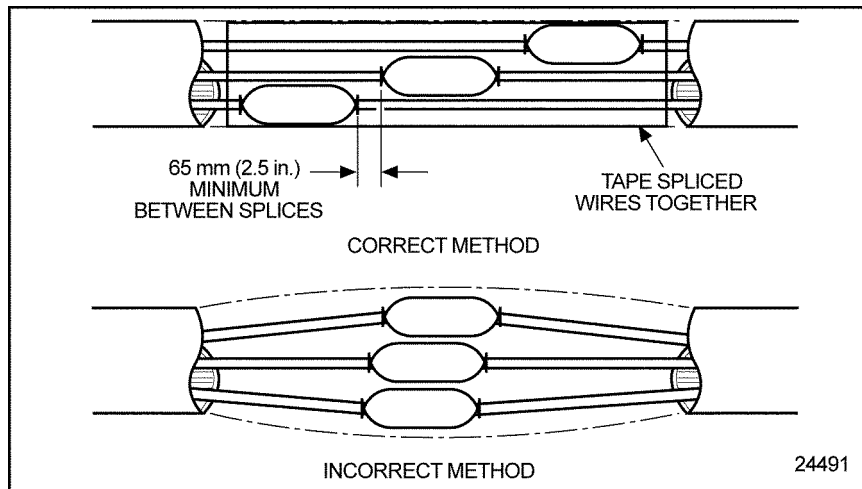


Figure 3-31 The Correct and Incorrect Method of Staggering Multiple Splices

NOTICE:

A minimum of two layers of heat shrink tubing extending .25 in. (6 mm) past the splice must be used to complete the splice.

2. Heat shrink a minimum of two layers of heat shrink tubing.
3. Tape the spliced wires to each other. Refer to section 3.5.

3.5 CONDUIT AND LOOM

Conduit must be used to protect the harness cable and cable splices.

NOTICE:

The conduit must not cover any connectors, switches, relays, fuses, or sensors.

The following guidelines should be used when designing a harness:

NOTICE:

Wires should be sized and cut to near equal length prior to installing conduit.

- The distance between the back of the connector or other listed devices to the end of the conduit should not exceed:
 - 1.0 in. (25 mm) for a single connector/device
 - 3 in. (75 mm) for multiple connectors/devices
- All cable breakouts and conduit ends must be secured in place with conduit outlet rings or tape.



Criteria: Conduit and Loom

Due to the wide variety of operating conditions and environments, it is the responsibility of the OEM to select a conduit that will survive the conditions of the specific applications. Flame retardant convoluted polypropylene conduit or equivalent may be used for most installations. Heat retardant nylon conduit or oil, water, acid, fire, and abrasion resistant non-metallic loom conforming to SAE J562A* is also acceptable. The diameter of conduit should be selected based on the number of wires being protected.

* If non-metallic loom is used, secure the ends with tightly wrapped nylon straps to prevent unraveling.

Conduit should cover the wires without binding and without being excessively large.

THIS PAGE INTENTIONALLY LEFT BLANK

3.6 TAPE AND TAPING

Tape must be used when conduit is utilized. Be sure to follow the tape manufacturers' guidelines. The harness manufacturer may use tape under the harness covering (conduit or loom) to facilitate harness building. Tape must be tightly wrapped at all conduit interconnections with a minimum of two layers (refer to section 3.5). Be sure to firmly secure the start and finish ends of tape.



Criteria: Tape

NOTICE:
Black vinyl electrical tape should not be used in applications where the temperature exceeds 176°F (80°C).

In applications where the temperature doesn't exceed 176°F (80°C), black vinyl electrical tape that is flame retardant and weather resistant may be used.

In applications where temperature exceeds 176°F (80°C), vinyl electrical tape should not be used. For these applications, adhesive cloth backed, flame retardant polyethylene or fiber glass tape (Delphi #PM-2203, Polikan #165 or equivalent) is recommended.



Criteria: Taping

The tape must extend a minimum of 1 in. (25 mm) past the conduit.

The tape must be crossed over butted conduit ends.

The tape must be extended a minimum of 1 in. (25 mm) in each direction at all branches.

THIS PAGE INTENTIONALLY LEFT BLANK

3.7 SENSORS

DDEC for MBE 900 and MBE 4000 is designed to operate with several types of sensors as listed in Table 3-50.

Sensor Type	Description
Variable Reluctance/Magnetic Pick-up	Used to monitor the crankshaft position, engine speed, turbo speed (MBE 4000 only), and vehicle speed.
Thermistor	Used to monitor temperatures.
Variable Capacitance	Used to monitor manifold, and oil gallery pressures.
Variable Resistance (Potentiometer)	Used to sense throttle position.
Switch	Used to signal coolant level, inlet air restriction, and oil level.

Table 3-50 Sensor Types

The sensors integrated into the Engine Harness are factory-installed (refer to section 3.7.1). The sensors integrated into the Vehicle Interface Harness are installed by the OEM (refer to section 3.7.2).


3.7.1 FACTORY-INSTALLED SENSORS

The sensors integrated into the factory-installed Engine Harness are listed in Table 3-51.

Sensor	Function
Camshaft Position Sensor (CMP Sensor)	Indicates a specific cylinder in the firing order.
Crankshaft Position Sensor (CKP Sensor)	Senses crankshaft position and engine speed for functions such as fuel control strategy.
Engine Coolant Temperature Sensor (ECT Sensor)	Senses coolant temperature for functions such as engine protection, fan control and engine fueling.
EGR Temperature Sensor	Senses EGR exhaust temperature after EGR cooler. Used for EGR system diagnosis.
Engine Oil Pressure Sensor (EOP Sensor)	Senses gallery oil pressure for functions such as engine protection.
Engine Oil Temperature Sensor (EOT Sensor)	Senses oil temperature for functions such as reducing variation in fuel injection and fan control.
Intake Manifold Pressure Sensor (IMP Sensor)	Senses turbo boost for functions such as smoke control and engine protection.
Intake Manifold Temperature Sensor (IMT Sensor)	Senses boost temperature
Supply Fuel Temperature Sensor (SFT Sensor)	Senses fuel temperature for functions such as engine fueling.
Turbo Speed Sensor (MBE 4000 only)	Monitors turbo speed.

Table 3-51 Function of Factory-installed Sensors

See Figure 3-32 for sensor locations on the MBE 900 EGR engine

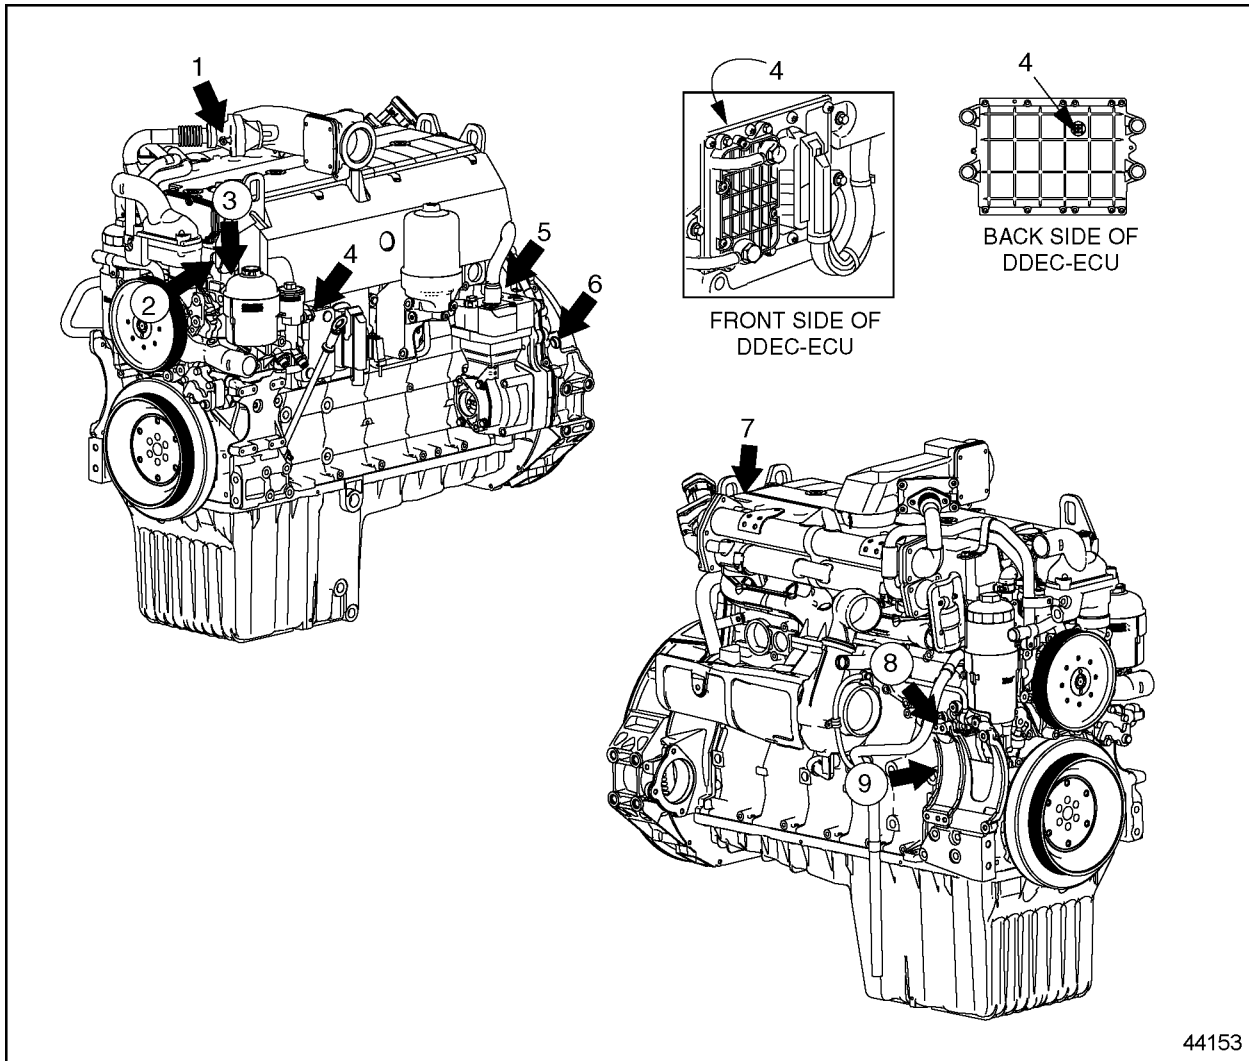


- | | |
|----------------------------------------------------------|------------------------------------------------|
| 1. EGR Temperature Sensor | 6. Crankshaft Position Sensor (on timing case) |
| 2. Engine Coolant Temperature Sensor | 7. Intake Manifold Pressure/Temperature Sensor |
| 3. Supply Fuel Temperature Sensor | 8. Engine Oil Temperature Sensor |
| 4. Barometric Pressure Sensor (integrated into DDEC-ECU) | 9. Engine Oil Pressure Sensor |
| 5. Camshaft Position Sensor | |

Figure 3-32 Sensor Locations on the MBE 900 EGR Engine

NOTE:

The 6-cylinder engine is shown; sensor locations are similar on the 4-cylinder engine.

See Figure 3-33 for sensor locations on the MBE 900 non-EGR engine.

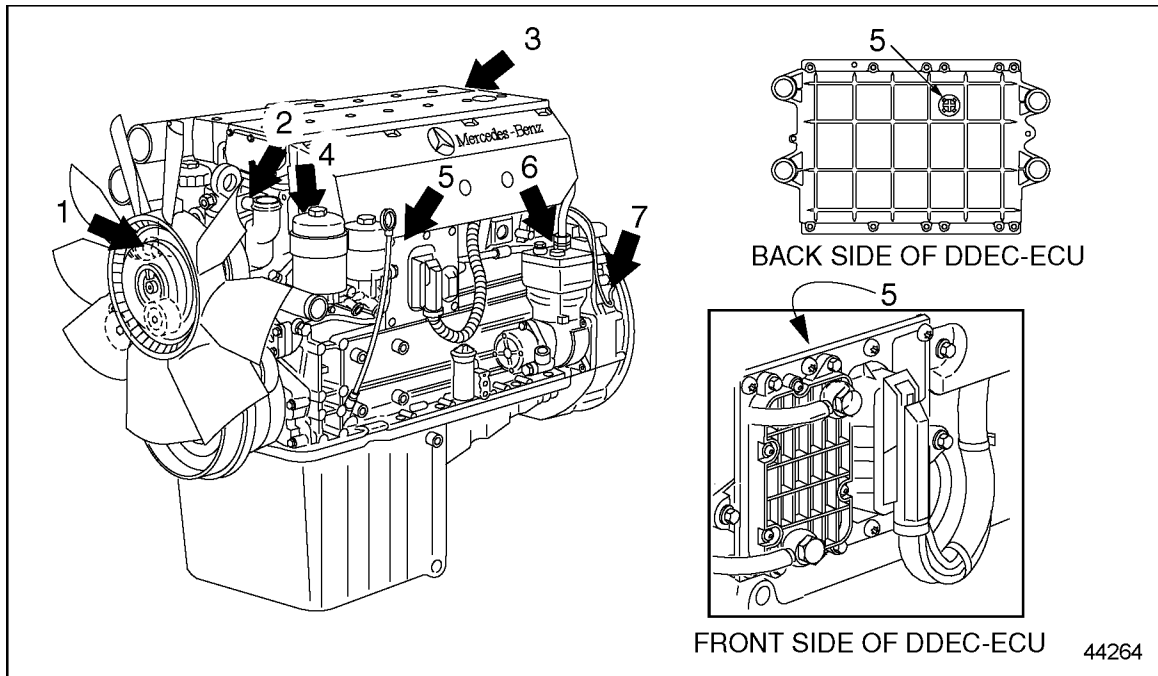

- | | |
|------------------------------------------------|----------------------------------------------------------|
| 1. Engine Oil Pressure/Temperature Sensor | 5. Barometric Pressure Sensor (integrated into DDEC-ECU) |
| 2. Engine Coolant Temperature Sensor | 6. Camshaft Position Sensor (on camshaft) |
| 3. Intake Manifold Pressure/Temperature Sensor | 7. Crankshaft Position Sensor (on timing case) |
| 4. Supply Fuel Temperature Sensor | |

Figure 3-33 Sensor Location on the MBE 900 Non-EGR Engine


NOTE:

The 6-cylinder engine is shown; sensor locations are similar on the 4-cylinder engine.

Two sensors are not easily visible from the left-hand side of the MBE 4000 engine. The Intake Manifold Pressure/Temperature Sensor is located on the right-hand side of the charge air manifold, behind the #2 cylinder head. The Engine Oil Pressure/Temperature Sensor is located at the base of the oil filter. See Figure 3-34 for sensor locations on the MBE 4000 engine.

NOTE:

The Engine Oil Level Sensor, if used, is located at the bottom of the oil pan.

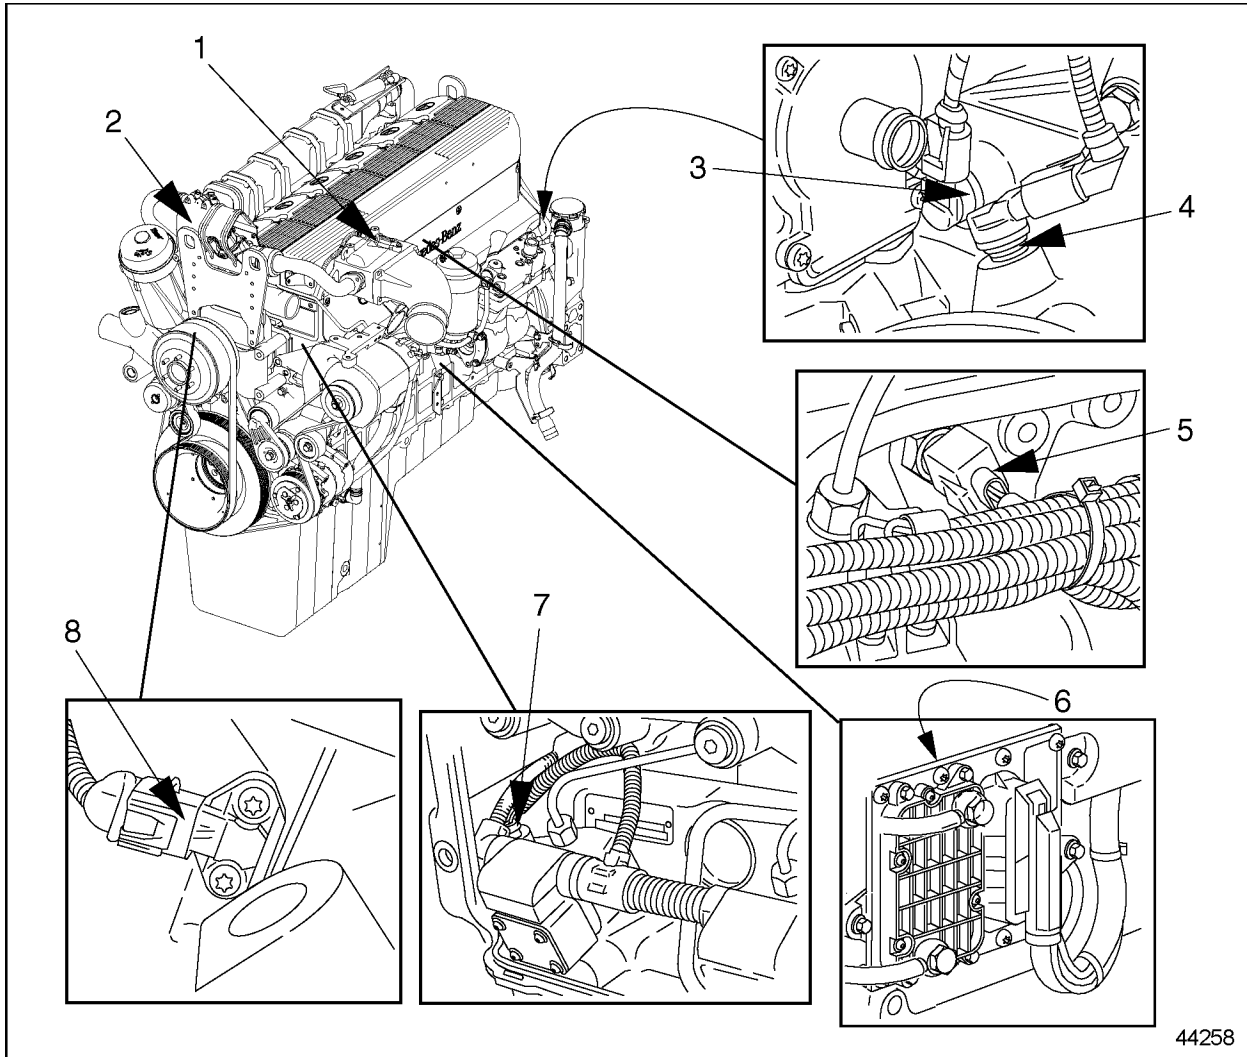

- | | |
|-------------------------------------------|----------------------------------------------------------|
| 1. Intake Air Pressure/Temperature Sensor | 5. Engine Coolant Temperature Sensor |
| 2. EGR Temperature Sensor | 6. Barometric Pressure Sensor (integrated into DDEC-ECU) |
| 3. Camshaft Position Sensor (on camshaft) | 7. Supply Fuel Temperature Sensor |
| 4. Crankshaft Position Sensor | 8. Engine Oil Pressure/Temperature Sensor |

Figure 3-34 Sensor Location on the MBE 4000 EGR Engine

3.7.2 OEM-INSTALLED SENSORS

All sensors must be of the proper type and continuously monitor vehicular and environmental conditions, so the DDEC-ECU can react to changing situations.

The OEM is responsible for installing the sensors listed in Table 3-52.

Sensor	Part Number	Function
Engine Coolant Level Sensor (ECL Sensor)	23526905 23526906 23526907	Senses coolant level for engine protection. Refer to section 3.7.3.
Vehicle Speed Sensor (VSS)	—	Senses vehicle speed for Cruise Control and Vehicle Speed Limiting. Refer to section 3.7.4.

* Available in some applications

Table 3-52 Function and Guidelines for OEM-installed Sensors

NOTE:

The OEM harness must be securely fastened every 6 in. It is required that the harness be fastened within 6 in. of the sensor.

3.7.3 ENGINE COOLANT LEVEL SENSOR

The ECL Sensor provides an input to the engine protection system and warn the operator if a low coolant level has been reached.

The main component of the ECL Sensor consists of a conductivity probe, which connects to the DDEC-VCU (see Figure 3-35).

NOTICE:

The probe has an operational temperature range of -40 to 257°F (-40 to 125°C). Exposure to temperatures beyond this range may result in unacceptable component life, or degraded sensor accuracy.

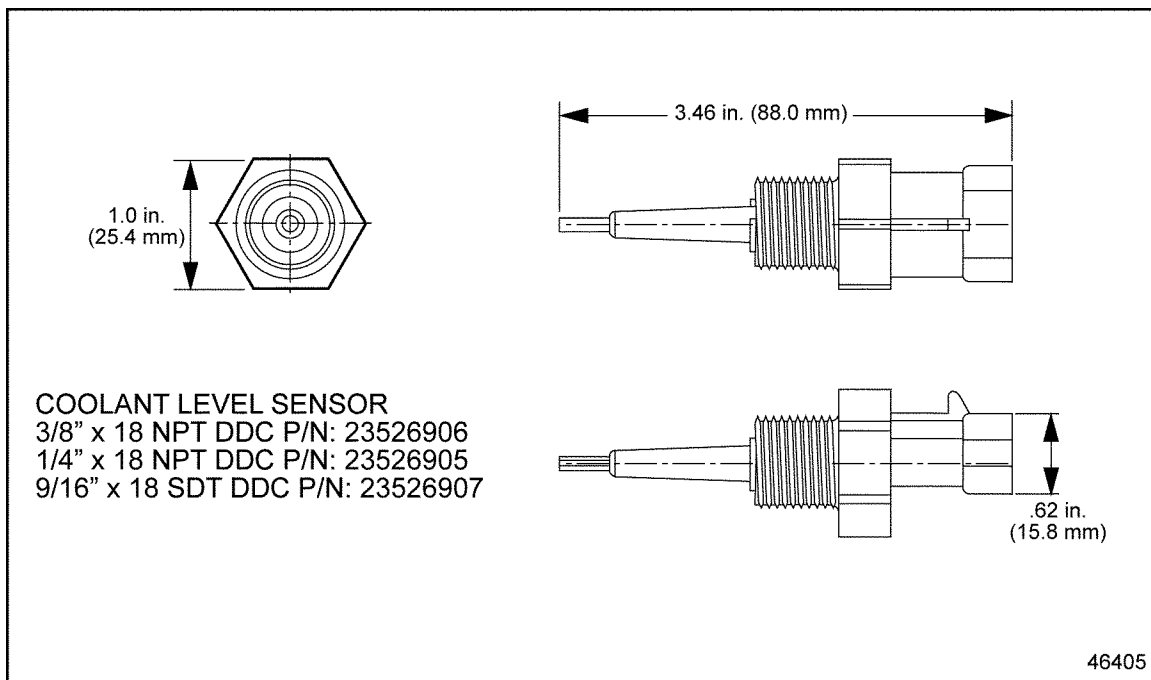


Figure 3-35 Engine Coolant Level Sensor Specifications — DDEC-VCU Only

The connector listed in Table 3-53 is a Metri-Pack 280 series push-to-seat connector.

Coolant Level Sensor Connector	
Connector	P/N: 15300027
Terminal	P/N: 12077411
Seal	P/N: 12015323
Secondary Lock	P/N: 15300014

Table 3-53 Metri-Pack 280 Connectors and Part Numbers

The OEM must connect the ECL Sensor probe as shown in the next illustration (see Figure 3-36). Polarity of the ground and signal must be correct for proper operation.

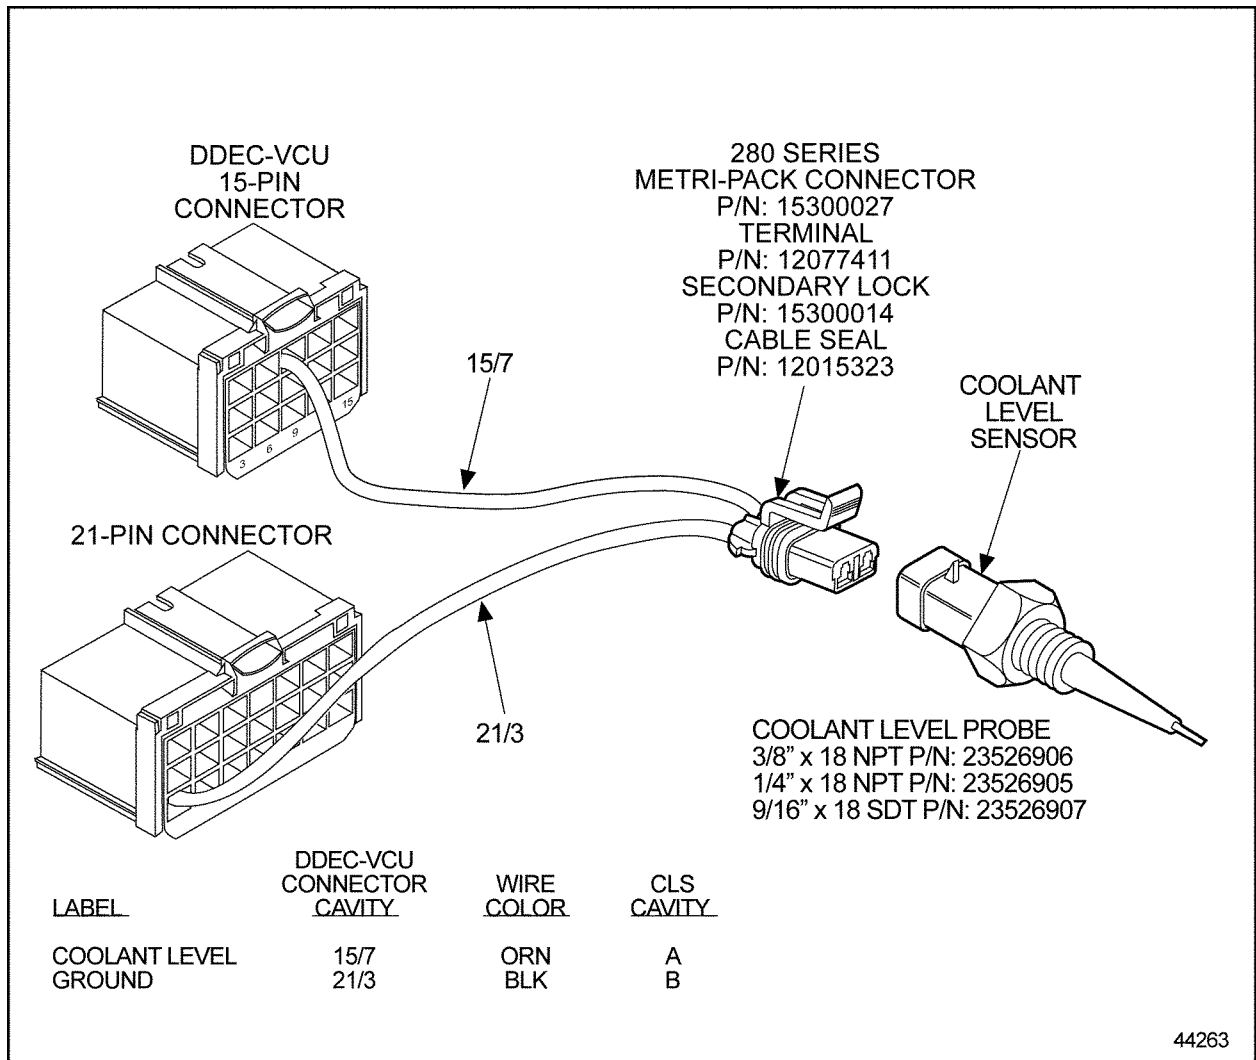


Figure 3-36 Engine Coolant Level Sensor Installation

The probe should be located in either the radiator top tank or a remote mounted surge tank. It should be mounted horizontally in the center of the tank and must be in a position to signal low coolant before aeration occurs. Typically, this is a height representing 98% of the drawdown quantity. The probe should be located so that it is not splashed by deaeration line, stand pipe or coolant return line flows. The insulated portion of the probe should be inserted into the coolant 1/2 in. or more past the inside wall of the tank. See Figure 3-37.

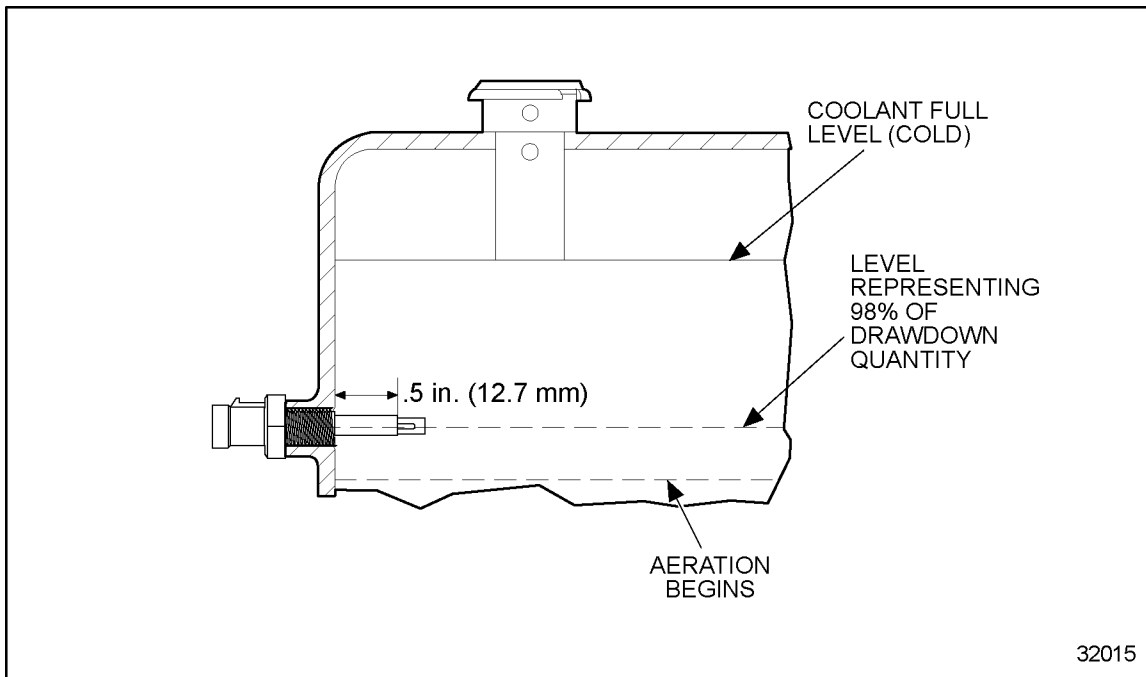


Figure 3-37 Engine Coolant Level Sensor Location - Top of Radiator Tank

Determine proper location for low coolant level sensor while running the drawdown test. It *must* actuate a warning before the satisfactory drawdown level is reached.

The ECL Sensor components are OEM supplied hardware and can be purchased as kits or individual components, depending on OEM requirements.

The following kits listed in Table 3-54 and Table 3-55 provide all the necessary hardware for proper installation of the ECL Sensor. Kits are available through the DDC parts distribution network.

Component	Part Number
ECL Sensor	23526905
Metri-Pack Connector Kit	15300027
Metri-Pack Terminals	12077411
Secondary Lock	15300014
wire Seal	12015323
Terminal	12103881

Table 3-54 ECL Sensor Installation Kit 1/4 in. NPTF P/N: 23515397

Component	Part Number
ECL Sensor	23526906
Metri-Pack Connector Kit	15300027
Metri-Pack Terminals	12077411
Secondary Lock	15300014
wire Seal	12015323
Terminal	12103881

Table 3-55 ECL Sensor Installation Kit 3/8 in. NPTF P/N: 23515398

The sensor must be enabled with VEPS, the minidiag2, or the DRS as listed in Table 3-56.

Parameter	Range	Default	Parameter ID
Enable ECL Sensor Input	0 = Disabled 1 = Single Level Sensor	1	1 13 01

Table 3-56 Enabling the Engine Coolant Level Sensor

3.7.4 VEHICLE SPEED SENSOR

The DDEC-VCU can calculate vehicle speed providing that it is properly programmed and interfaced with a Vehicle Speed Sensor (VSS) that meets MBE requirements. The VSS (see Figure 3-38) provides a vehicle speed signal for use in Cruise Control and Vehicle Speed Limiting. The VSS signal type can be changed with the VEPS, or minidiag2.

NOTE:

DDC does not approve of the use of signal generator sensors.

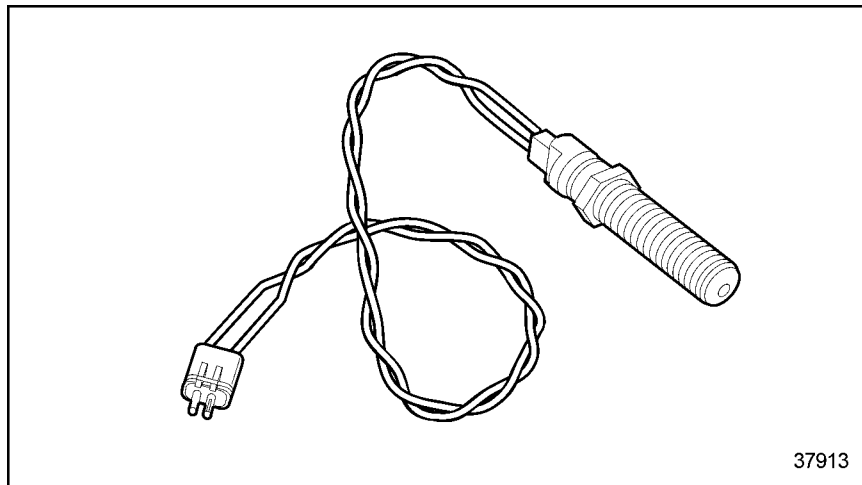


Figure 3-38 Vehicle Speed Sensor

To obtain accurate vehicle mileage, the parameters listed in Table 3-57 must be programmed with VEPS, the minidiag2, DRS, DDDL, and the Nexiq DDR.

Parameter	Range	Default	Parameter ID
VSS Input Configuration	0 = No Sensor 2 = Magnetic Pickup* 3 = VSS via J1939	2 = Magnetic	1 08 01
Axle Ratio	1 – 20.0	5.29	1 08 03
Number of Output Shaft Teeth	0 – 250	16	1 08 04
Tire Revs/Kilometer	160 – 1599	312	1 08 05
Top Gear Ratio	0.1 – 2.55	1	1 08 06
Gear Ratio Tolerance	0 – 60	2	1 08 08
Second Highest Gear Ratio	0.1 – 2.55	1	1 08 07
Two Speed Axle – Second Axle Ratio	1 – 20.0	5.29	1 08 09
Anti-tamper	0 = Disable 1 = Enable	0 = Disable	1 08 10

* Range must be set to 2.

Table 3-57 Vehicle Speed Sensor Parameters

Magnetic Pickup

The magnetic pickup requirements are listed in Table 3-58. Magnetic Pickup size is determined by installation requirements.

Parameters	Range
Frequency Range	1 - 3000 Hz
Low Threshold Voltage	>1.7 Volts Peak to Peak
DC Resistance	800–3000 Ω

Table 3-58 Magnetic Pickup Vehicle Speed Sensor Requirements

The Vehicle Speed Sensor is wired to the 15–pin connector of the DDEC-VCU as listed in Table 3-59.

Connector/Pin	Function
15/3	VSS (+)
15/4	VSS (-)

Table 3-59 Vehicle Speed Sensor Wiring

Magnetic Vehicle Speed Sensors can be obtained from the following sources:

Wabash Technologies

1375 Swan Street
Huntington, Indiana
46750-0829

Tel: 260-356-8300

www.wabashtech.com

Airpax Instruments

Phillips Technologies

150 Knotter Drive

Cheshire, Connecticut 06410

Tel: 800-643-0643

Invensys Electro Corporation

1845 57th Street

Sarasota, Florida 34231

Tel: 1-800-446-5762

Fax: 941-355-3120

www.electrocorp.com

See Figure 3-39 for the installation of the Magnetic VSS.

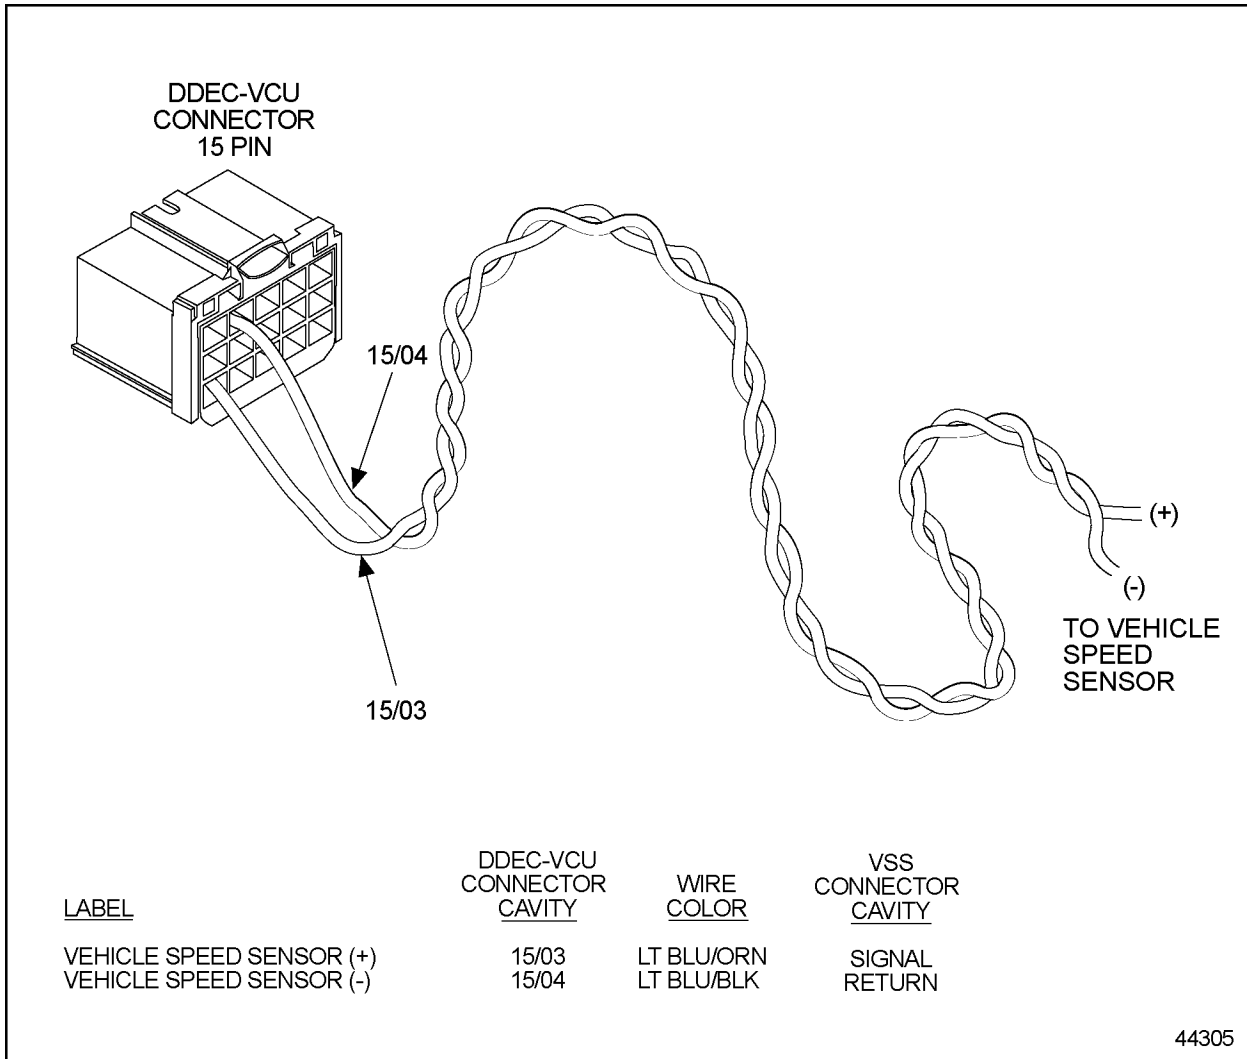


Figure 3-39 Magnetic Vehicle Speed Sensor Installation

SAE J1939 Data Link

A VSS wired to the DDEC-VCU is not required if the transmission output shaft speed message is being transmitted over the SAE J1939 Data Link. To obtain accurate vehicle mileage, the parameters listed in Table 3-60 must be programmed with VEPS or the minidiag2.

Parameter	Range	Default	Parameter ID
VSS Input Configuration	0 = No Sensor 2 = Magnetic Pickup* 3 = VSS via J1939	2 = Magnetic	1 08 01
Axle Ratio	1 – 20.0	5.29	1 08 03
Tire Revs/Kilometer	160 – 1599	312	1 08 05
Top Gear Ratio	0.1 – 2.55	1	1 08 06
Second Highest Gear Ratio	0 — 5.75	2.55	1 08 07
Two Speed Axle — Second Axle Ratio	1 – 20.0	5.29	1 08 09
Anti-tamper	0 = Disable 1 = Enable	0 = Disable	1 08 10

* Parameter must be set to 3 = Transmission output shaft speed on the SAE J1939 Data Link.

Table 3-60 Vehicle Speed Sensor Parameters for Transmission Output Shaft Speed

VSS Anti-tamper

If the sensor appears to be working improperly, but the vehicle speed is not zero, VSS Anti-Tamper will log a VSS fault. Refer to section 5.24 for more information on VSS Anti-tamper.

THIS PAGE INTENTIONALLY LEFT BLANK

4 INPUTS AND OUTPUTS

Section	Page
4.1 DIGITAL INPUTS	4-3
4.2 SWITCH INPUTS RECEIVED OVER J1939 DATA LINK	4-15
4.3 DIGITAL OUTPUTS	4-17

THIS PAGE INTENTIONALLY LEFT BLANK

4.1 DIGITAL INPUTS

DDEC for MBE 900 and MBE 4000 has 27 digital input ports located on the Vehicle Interface Harness. These functions can be configured by VEPS. Some digital input features can be enabled or disabled with the minidiag2. The DDEC-VCU supports three programmable engine limiters; LIM0, LIM1, and LIM2/A/C. These limiters are associated with a digital input. Not all of the digital inputs are used. The digital input functions and their associated pins are listed in Table 4-1.

Digital Input Functions	DDEC-VCU Connector / Pin
Clutch Switch	18/02
Cruise Control On/Off	18/06
Cruise Control Set/Coast	18/04
Cruise Control Resume/Accel	18/05
Dual Speed Axle	15/02
Engine Brake High	18/09
Engine Brake Low	18/08
Engine Shutdown Override	18/13
Fan Override	18/15
Idle Validation 1	21/13
Idle Validation 2	21/12
Idle Validation Ground	18/03
LIM0 (Torque, Engine Speed, Vehicle Speed)	18/11
LIM1 (Torque, Engine Speed, Vehicle Speed)	18/12
LIM2 (A/C, High Idle, Torque, Engine Speed, Vehicle Speed)	18/14
Not Used	12/07, 12/09, 12/10
Optimized Idle Hood Tilt Switch	12/08
Optimized Idle Thermostat	12/04
Park Brake Switch	21/16
Remote VSG Switch	18/10
Service Brake Switch	21/15
Throttle Inhibit	18/16
Remote Accelerator Select Switch	18/07
Transmission Neutral Switch	15/01

Table 4-1 Digital Inputs

The digital input can be either a switch or an OEM interlock depending on the function. The following sections contain a description of the available options.

4.1.1 AIR CONDITION STATUS

This digital input indicates that the air conditioner is inactive. When the digital input is open, then the fan is turned on. High Idle will be enabled (if configured) if vehicle speed is zero. There is a 10 second delay when the digital input is grounded before returning to regular idle.

The AC Enable Switch or the AC High Pressure Switch can be used for this input. These switches are normally closed. The Air Condition function is normally disabled.

Installation

The Air Conditioner Switch is wired to the VCU on pin 18/14.

Programming Requirements and Flexibility

This digital input is always active and is also called LIM 2. Its parameters are listed in Table 4-2. This parameter can be set with VEPS, DDDL, DRS or the Nexiq DDR.

Parameter	Setting	Default	Parameter ID
Enable LIM2	0 – Enable LIM2 limiter 1 – Enable fast idle on air condition in neutral only 2 — Enable fast idle on air condition	0 – Enable LIM2 limiter	1 06 01

Table 4-2 Air Condition Status Programming Options

4.1.2 CLUTCH SWITCH

This input indicates that the clutch is released and is used for suspending Cruise Control and Auto Resume. When the clutch is released, the input is at battery ground. Cruise Control is suspended if the clutch is pressed once if Auto Resume is enabled (Rel. 12.4 or lower). If the clutch is released within three seconds, Cruise Control is automatically resumed (Rel. 12.4 or lower). Depending on how this feature is programmed, the clutch must be pressed once or twice if your software release is greater than 13.9.

The digital input logic for the Clutch Switch disables Cruise Control in the unlikely event of a broken clutch switch wire.

If the transmission type is set to a two pedal system, the engine will know that there is no clutch on the vehicle and will ignore the clutch switch input.

The Clutch Switch is a normally closed switch. It is customer selectable and is normally disabled.

Installation

The Clutch Switch is wired to the VCU on pin 18/02. Alternatively the Clutch switch may be multiplexed on J1939. Refer to section 4.2, “Switch Inputs Received Over J1939 Data Link” for additional information.

Programming Requirements and Flexibility

This digital input can be configured by VEPS/DRS or minidiag2 as listed in Table 4-3.

Parameter	Setting	Default	Parameter ID
Clutch Switch Input Configuration	0 – Hardwired 1 – Source Address 1 (SA1) 2 – Source Address 2 (SA2) 3 – Source Address 3 (SA3)	0 – Hardwired	1 13 15

Table 4-3 Clutch Switch Programming Options

4.1.3 CRUISE CONTROL ON/OFF SWITCH

Cruise Control is enabled but not active when the Cruise Control Master switch digital input is switched to battery ground.

The Cruise Control Master switch is a normally open switch.

Installation

The Cruise Control Master Switch is wired to the VCU on pin 18/06. Alternatively, this input may be multiplexed on J1939. Refer to section 4.2, “Switch Inputs Received Over J1939 Data Link” for additional information on multiplexing this input.

Programming Requirements and Flexibility

This digital input can be configured by VEPS/DRS or minidiag2 as listed in Table 4-4.

Parameter	Setting	Default	Parameter ID
Cruise Control On/Off Switch Input Configuration	0 – Hardwired 1 – Source Address 1 (SA1) 2 – Source Address 2 (SA2) 3 – Source Address 3 (SA3)	0 – Hardwired	1 13 11

Table 4-4 Cruise Control On/Off Switch Programming Options

4.1.4 CRUISE CONTROL RESUME / ACCEL SWITCH AND SET/COAST SWITCH

RESUME – If Cruise Control has been disabled with the service brake or the clutch switch, momentary contact to the ON position (switching to battery ground) restores the previously set cruise speed.

ACCEL – When Cruise Control is active, the Resume/Accel input can be used to increase the power and speed by toggling the switch. Momentarily toggling and releasing the Resume/Accel switch will increase the set point by 1 MPH increments. Holding the Resume/Accel will increase the set point by 1 MPH per second. When released, the cruise control set point will be at the new speed.

The Resume/Accel Switch is a momentary normally open switch.

SET – Cruise Speed is set by momentarily contact the switch to the ON position (switching the digital input to battery ground). Cruise Control will become active and maintain the vehicle speed present at the time.

COAST– When Cruise Control is active, the Set/Coast input can be used to reduce power and speed by toggling the switch. Momentarily toggling and releasing the Set/Coast switch will decrease the set point by 1 MPH increments. Holding the Set/Coast will decrease the set point by 1 MPH per second. When released the Cruise Control set point will be at the new speed.

The Set/Coast Switch is a momentary normally open switch.

Installation

The Resume/Accel Switch is wired to the VCU on pin 18/05. The Set/Coast Switch is wired to the VCU on pin 18/04. Alternatively, either may be multiplexed on J1939. Refer to section 4.2, “Switch Inputs Received Over J1939 Data Link” for additional information on multiplexing this input.

Programming Requirements and Flexibility

This digital input can be configured by VEPS/DRS or minidiag2 as listed in Table 4-5.

Parameter	Setting	Default	Parameter ID
Cruise Control Resume/Accel (Set/Coast) Switch Input Configuration	0 – Hardwired 1 – Source Address 1 (SA1) 2 – Source Address 2 (SA2) 3 – Source Address 3 (SA3)	0 – Hardwired	1 13 12

Table 4-5 Cruise Control Resume/Accel Switch Programming Options

Diagnostics

If both the Cruise Control Set/Coast and Resume/Accel switches are grounded for more than a programmed number of consecutive samples, a diagnostic fault is logged. All cruise control switch functions will be disabled.

4.1.5 TORQUE, ENGINE SPEED, VEHICLE SPEED LIMITERS

These inputs indicate that the engine is being limited to a torque, engine speed or vehicle speed. These limiters are LIM0, LIM1, and LIM2. LIM2 is always used for A/C but can also be used for torque, engine speed or vehicle speed.

Installation

The LIM0 is wired to the DDEC-VCU on pin 18/11, LIM1 on pin 18/12, and LIM2 on pin 18/14.

Programming Requirements and Flexibility

Refer to section 5.23, “Limiters,” for more information.

4.1.6 DUAL SPEED AXLE SWITCH

This input indicates that the dual speed axle ratio has been switched when the input is grounded. When the switch is open, the dual speed axle ratio is normal.

The Dual Speed Axle switch is a normally open switch.

Installation

The Dual Speed Axle switch is wired to the VCU on pin 15/2. Alternatively, it may be multiplexed on J1939. Refer to section 4.2, “Switch Inputs Received Over J1939 Data Link” for additional information.

Programming Requirements and Flexibility

This digital input can be configured by VEPS/DRS or minidiag2 as listed in Table 4-6.

Parameter	Setting	Default	Parameter ID
Dual Speed Axle Switch Input Configuration	0 – Hardwired 1 – Source Address 1 (SA1) 2 – Source Address 2 (SA2) 3 – Source Address 3 (SA3)	0 – Hardwired	1 13 14

Table 4-6 Dual Speed Axle Switch Programming Options

4.1.7 ENGINE BRAKE LOW & HIGH

The Engine Brake Low and Engine Brake High switches select the level of engine braking as listed in Table 4-7. Refer to section 5.6, “Engine Brake Controls.” for additional information.

Engine Brake Low Digital Input	Engine Brake High Digital Input	Engine Brake Status
OPEN	OPEN	OFF
GND	OPEN	LOW
OPEN	GND	MEDIUM
GND	GND	HIGH

Table 4-7 Level of Engine Braking

The Engine Brake Low and Engine Brake High switches are normally open switches.

Installation

The Engine Brake Low Switch is wired to the VCU on pin 18/08 and Engine Brake High Switch is wired to the VCU on pin 18/9.

Programming Requirements and Flexibility

This digital input can be configured by VEPS/DRS or minidiag2 as listed in Table 4-8.

Parameter	Setting	Default	Parameter ID
Engine Brake Switch Configuration	0 – Hardwired 1 – Source Address 1 (SA1) 2 – Source Address 2 (SA2) 3 – Source Address 3 (SA3)	0 – Hardwired	1 13 16

Table 4-8 Engine Brake Switch Switch Programming Options

4.1.8 FAN OVERRIDE

This digital input is used to activate the fan when the input is switched to battery ground.

The fan override switch is a normally open switch. Refer to section 5.9, “Fan Control,” for additional information.

Installation

The Fan Override Switch is wired to the VCU on pin 18/15.

4.1.9 IDLE VALIDATION 1 & IDLE VALIDATION 2

The idle validation switch consists of two contacts. Idle Validation 2 is normally closed and indicates that the accelerator pedal is in the idle position when the input is grounded. Idle Validation 1 is normally open and indicates that the accelerator pedal is not in the idle position when it is grounded.

NOTE:

An Idle Validation Switch is required.

Installation

The Idle Validation 1 Switch is wired to the VCU on pin 21/13. The Idle Validation 2 Switch is wired to the VCU on pin 21/12.

4.1.10 OPTIMIZED IDLE HOOD TILT SWITCH

The Hood Tilt Switch digital input indicates when the hood is opened or closed for Optimized Idle operation.

The Hood Tilt Switch is a normally open switch and is required for Optimized Idle.

Installation

The Hood Tilt Switch is wired to the DDEC-VCU on pin 12/08.

Programming Requirements and Flexibility

This digital input must be configured by VEPS or mimidiag2 as listed in Table 4-9.

Parameter	Setting	Default	Parameter ID
Input DSF3	0 = Not Active 1 = Reserved 2 = Hood Tilt Switch (OI Loop)	0 = Not Active	1 13 38

Table 4-9 Hood Tilt Switch Programming Options

4.1.11 OPTIMIZED IDLE THERMOSTAT

The OI thermostat input indicates when the engine should run to heat/cool the cab when operating in Optimized Idle mode. This input is normally open.

Installation

The OI thermostat is wired to the DDEC-VCU on pin 12/04.

Programming Requirements and Flexibility

This digital input must be configured by VEPS or mimidiag2 as listed in Table 4-10.

Parameter	Setting	Default	Parameter ID
OI Thermostat	3 = Not Used 4 = OI Thermostat 5 = AGS2 Check Transmission	3 = Not Used	1 09 04

Table 4-10 OI Thermostat Programming Options

4.1.12 PARK BRAKE SWITCH

This input indicates that the park brake is engaged when switched to battery ground.

The park brake switch is a normally open switch and is customer selectable.

Installation

This input is wired to the VCU pin 21/16. Alternatively, this input may be multiplexed on J1939. Refer to section 4.2, “Switch Inputs Received Over J1939 Data Link” for additional information on multiplexing this input.

Programming Requirements & Flexibility

This digital input can be configured by VEPS/DRS or minidiag2 as listed in Table 4-11.

Parameter	Setting	Default	Parameter ID
Enable Park Brake Input	0 – Disable 1 – Enable	1 – Enable	1 13 08
Park Brake Input Configuration	0 – Hardwired 1 – Source Address 1 (SA1) 2 – Source Address 2 (SA2) 3 – Source Address 3 (SA3)	0 – Hardwired	1 13 09

Table 4-11 Configuring the Park Brake Switch Input

4.1.13 REMOTE VSG SWITCH

The Remote VSG Switch allows the use of a customer selected high idle speed instead of the hot idle engine speed.

The Remote VSG speed is active when a digital input is switched to battery ground and the parking brake is enabled. The preset speeds are selected by enabling the remote VSG switch once for VSG speed #1, twice for VSG speed #2 or three times for VSG speed #3. These VSG speeds can be set with VEPS or minidiag2. The Remote VSG will override the Cab VSG mode and cab throttle unless “VSG Throttle Override” is disabled.

Refer to section 5.21, “Throttle Controls” for additional information.

The Remote VSG Switch is a normally open switch.

Installation

This input is wired to the VCU pin 18/10.

4.1.14 SERVICE BRAKE SWITCH

This input indicates that the brake is released when switched to battery ground. If the brake is activated, then the input is not grounded. This input will suspend cruise control when the brake is activated.

The service brake switch is a normally closed switch. This input is customer selectable and is normally disabled.

Installation

This input is wired to the VCU pin 21/15. Alternatively, this input may be multiplexed on J1939. Refer to section 4.2, “Switch Inputs Received Over J1939 Data Link” for additional information on multiplexing this input.

Programming Requirements & Flexibility

This digital input can be configured by VEPS/DRS or minidiag2 as listed in Table 4-12.

Parameter	Setting	Default	Parameter ID
Enable Service Brake Input	0 – Disable 1 – Enable	1 – Enable	1 13 04
Service Brake Input Configuration	0 – Hardwired 1 – Source Address 1 (SA1) 2 – Source Address 2 (SA2) 3 – Source Address 3 (SA3)	0 – Hardwired	1 13 05

Table 4-12 Configuring the Service Brake Switch Input

4.1.15 SHUTDOWN OVERRIDE SWITCH

The shutdown override switch is a momentary normally open switch. When the input is switched to battery ground, a shutdown override is enabled.

Shutdown Override Switch is a momentary normally open switch.

Installation

This input is wired to the VCU pin 18/13.

4.1.16 THROTTLE INHIBIT

If the throttle inhibit switch is switched to battery ground, the engine will only run at low idle speed. the engine will not respond to the foot pedal or remote throttle. Refer to section 5.21, “Throttle Control/Governors,” for additional information.

The Throttle Inhibit switch is a normally open switch.

Installation

The Throttle Inhibit switch is wired to the VCU on pin 18/16.

4.1.17 REMOTE ACCELERATOR SELECT SWITCH

This digital input when switched to battery ground indicates that the remote accelerator is active. The switch information will only be used if the remote accelerator input is configured. Refer to section 5.21, “Throttle Control/Governors,” for additional information.

The remote accelerator enable switch is a normally open switch.

Installation

This input is wired to the VCU pin 18/07.

Programming Requirements & Flexibility

This digital input can be configured by VEPS/DRS or minidiag2 as listed in Table 4-13.

Parameter	Setting	Default	Parameter ID
Enable Remote Accelerator Input (Throttle Select)	0 – Disable 1 – Enable	0 – Disable	1 20 01

Table 4-13 Configuring the Throttle Select Input

4.1.18 TRANSMISSION NEUTRAL SWITCH

This digital input when switched to battery ground indicates that the transmission is NOT in neutral. An open circuit indicates neutral.

This input is customer selectable and is normally disabled.

NOTE:

This input is required for Optimized Idle.

Installation

This input is wired to the VCU pin 15/01.

Programming Requirements & Flexibility

This digital input can be configured by VEPS/DRS or minidiag2 as listed in Table 4-14.

Parameter	Setting	Default	Parameter ID
Transmission Neutral Switch	0 – J1939 (ETC2)/No Switch 1 – Hardwired pin 15/01	0 – J1939 (ETC2)/No Switch	1 13 07

Table 4-14 Configuring the Transmission Neutral Switch Input

4.2 SWITCH INPUTS RECEIVED OVER J1939 DATA LINK

Multiplexing is available for several switch inputs over the SAE J1939 Data Link. The VCU supports this feature for the following switch inputs:

- Cruise Control On/Off Switch
- Cruise Control Set/Coast
- Cruise Control Resume/Accel
- Service Brake Switch
- Park Brake Switch
- Clutch Brake Switch
- Engine Brake Switches – EBC1 Message
- Two Speed Axle Switch

To use the multiplexing feature with the VCU, the parameters listed in Table 4-15 must be set up correctly. There are three different source addresses (SA) possible for receiving the Cruise Control message. Every switch in this message must be programmed to react on one programmed SA. The SA is programmed by the vehicle OEM.

If an error is detected (wrong data on J1939 CC message or the message is not sent) an error is logged. If the error is caused by wrong data or missing data, the error will be logged and will be held active until the ignition is switched off. Cruise Control will also be disabled.

Parameter	Setting	Default	Parameter ID
Source Address 1 (SA1) for receiving Switch Status	0-255	23	1 01 09
Source Address 2 (SA2) for receiving Switch Status	0-255	33	1 01 10
Source Address 3 (SA3) for receiving Switch Status	0-255	49	1 01 11
Source Address for receiving EBC1 Message for Engine Brake Switch	0-255	33	1 01 12
Input Configuration of Cruise Control On/Off	0 - Hardwired 1 - SA1 2 - SA2 3 - SA3	0	1 13 11
Input Configuration of Cruise Control for Set/Coast & Resume/Accel Switch	0 - Hardwired 1 - SA1 2 - SA2 3 - SA3	0	1 13 12
Input Configuration for Service Brake Switch	0 - Hardwired 1 - SA1 2 - SA2 3 - SA3	0	1 13 05
Input Configuration for Park Brake Switch	0 - Hardwired 1 - SA1 2 - SA2 3 - SA3	0	1 13 09
Input Configuration for Clutch Switch	0 - Hardwired 1 - SA1 2 - SA2 3 - SA3	0	1 13 15
Input Configuration for Dual Speed Axle Switch	0 - Hardwired 1 - SA1 2 - SA2 3 - SA3	0	1 13 14
Input Configuration for Engine Brake Switches	0 - Hardwired 1 - SA EBC1	0	1 13 16

Table 4-15 Parameters for Multiplexing

4.3 DIGITAL OUTPUTS

The DDEC-VCU has 12 digital output pins, nine low side and three high side. The DDEC-ECU has five digital outputs. The VCU digital output functions and their associated pins are listed in Table 4-16.

Digital Output Function	Driver	VCU Connector/Pin
Air Filter Lamp	Low Side	21/08
Amber Warning Lamp	Low Side	21/06
Gear Out 1	High Side	15/05
Gear Out 2	High Side	15/06
Grid Heater Control / Engine Brake / Decompression Valve	High Side	15/10
Oil Level Lamp	Low Side	21/04
Optimized Idle Active Lamp	Low Side	15/11
Optimized Idle Alarm/Starter Lockout	Low Side	15/12
Red Stop Lamp	Low Side	21/05
Relay2	Low Side	15/9
Vehicle Power Shutdown	Low Side	18/01
Wait to Start Lamp	Low Side	21/07

Table 4-16 Digital Outputs

4.3.1 AMBER WARNING LAMP

The Amber Warning Lamp is illuminated for all active faults. The AWL will also flash when an engine shutdown occurs.

Installation

This digital output circuit is designed to sink no more than 300 mA (DC) current.

The AWL is wired to pin 21/06 of the VCU.

NOTE:

This digital output is REQUIRED.

4.3.2 GEAR OUT 1

The AT500 and MT600 transmissions require a throttle position input from the engine in order to get an indication of the current power level at any given time. This input is used to raise the shift points and apply the clutches more firmly with increasing engine power.

The MBE 900 engine needs to provide a digital output that switches high (Vbatt) under certain conditions and switches open (strike through or low [ground]) under other conditions. When switched high, the output needs to have the ability to source 0.5 amps minimum when using a relay or 3 amps minimum if driving the modulator directly.

When Cruise Control and Road Speed Limiting are not active:

- If the Gear Out 1 output is enabled, it will be disabled (open [strike through or low]) if the engine is not running or the accelerator pedal position is <45%.
- If the Gear Out 1 output is disabled, it will be enabled (switched high) when the engine is running or the accelerator pedal position is >60%.

When Cruise Control is active or near the road speed limit:

- If the Gear Out 1 output is enabled, it will be disabled if the engine is running and the accelerator pedal position is >60%
- If the Gear Out 1 output is disabled, it will be enabled when vehicle speed is within one (1) mph of the cruise set speed or road speed limit speed or the percent load at the current speed is >80%.

Installation

This digital output circuit is designed to sink no more than 1 A (DC) current.

The Gear Out 1 digital output is wired to pin 15/05 of the VCU.

4.3.3 GRID HEATER CONTROL

This digital output controls the relay for the Grid Heater.

Installation

This digital output circuit is designed to source no more than 2.5 A (DC) current.

The Grid Heater Control digital output is wired to pin 15/10 of the VCU.

Programming Requirements and Flexibility

This digital output can be configured by VEPS/DRS or minidiag2 as listed in Table 4-17.

Parameter	Setting	Default	Parameter ID
Grid Heater	0 – Disable 1 – Grid Heater 15/10 2 – Grid Heater DDEC-ECU	0 – Disable	1 02 06

Table 4-17 Grid Heater Parameters

4.3.4 OIL LEVEL LOW LAMP

This digital output is switched to battery ground when the oil level falls below the oil fill threshold as read by an Oil Level Sensor. This output is used to drive a light to warn the operator. The AWL will illuminate when an oil level fault is logged in the VCU.

Installation

A 12 or 24 volt lamp of less than 500 mA DC is needed depending on the ignition source. This digital output circuit is designed to sink no more than 500 mA (DC) current.

The Oil Level Low Lamp is wired to pin 21/04 of the DDEC-VCU.

4.3.5 OPTIMIZED IDLE ACTIVE LAMP

The Optimized Idle Active lamp digital output will flash at a rate of once every half second while the idle timer is counting down, after the system has initialized. The digital output is switched to sensor return after the idle timer has timed out and Optimized Idle has become active. The output will be activated along with the AWL and the RSL when the ignition is cycled ON for the bulb check. For more information on Optimized Idle, .

Installation

The OI Active Lamp is wired to the DDEC-VCU on pin 15/11.

NOTE:

This output is required for Optimized Idle.

Programming Requirements and Flexibility

This digital input must be configured by VEPS or minidiag2 as listed in Table 4-18.

Parameter	Setting	Default	Parameter ID
Configuration Relay 3 (IWK 3)	9 = Off 10 = Optimized Idle Active Lamp	9 = Off	1 14 01

Table 4-18 OI Active Lamp Programming

Diagnostics

A Diagnostic Trouble Code (DTC) will be logged for an open or shorted circuit.

4.3.6 OPTIMIZED IDLE ALARM

The Optimized Idle Alarm digital output is switched to sensor return to turn on the Optimized Idle Alarm. The alarm will sound for five seconds prior to any Optimized Idle engine start. For more information on Optimized Idle, refer to section 5.15.

Installation

The OI Alarm is wired to the DDEC-VCU on pin 15/12. The DDC part number for the OI Alarm is 23517899.

NOTE:

This output is required for Optimized Idle.

Programming Requirements and Flexibility

This digital output must be configured by VEPS or minidiag2 as listed in Table 4-19.

Parameter	Setting	Default	Parameter ID
Relay 1	0 = Disabled 1 = Enable Starter Lockout 2 = Reserved 3 = Reserved 4 = OI Alarm 5 = Reserved	0 = Disabled	1 16 01

Table 4-19 OI Active Lamp Programming

Diagnostics

A Diagnostic Trouble Code (DTC) will be logged for an open or shorted circuit.

4.3.7 RED STOP LAMP

The Red Stop Lamp (RSL) is illuminated for all active serious faults, which require the engine to be shutdown immediately. The AWL will also flash when an engine shutdown occurs.

Installation

This digital output circuit is designed to sink no more than 300 mA (DC) current.

The RSL is wired to pin 21/05 of the VCU.

NOTE:

This digital output is REQUIRED.

4.3.8 STARTER LOCKOUT

This digital output drives a normally closed relay which interrupts the starting signal when the output has been activated. For additional information, refer to section 5.19, “Starter Lockout.”

Installation

This digital output circuit is designed to sink no more than 2.0 A (DC) current.

The Starter Lockout digital output is wired to pin 15/12 of the VCU.

This digital output must be configured by VEPS or minidiag2 as listed in Table 4-20.

Parameter	Setting	Default	Parameter ID
Relay 1	0 = Disabled 1 = Enable Starter Lockout 2 = Reserved 3 = Reserved 4 = OI Alarm 5 = Reserved	0 = Disabled	1 16 01

Table 4-20 Starter Lockout Programming

4.3.9 VEHICLE POWER SHUTDOWN

This digital output actuates a relay that shuts down the rest of the electrical power to the vehicle when an idle shutdown or engine protection shutdown occurs. For additional information, refer to section 5.11, “Idle Shutdown.”

This function is available with the VCU only.

Installation

This digital output circuit is designed to sink no more than 2 A (DC) current.

The Accessory Bus Shutdown is wired to pin 18/01 of the VCU.

4.3.10 WAIT TO START LAMP

This digital output is switched to battery ground when the Wait to Start (Cold Start) system is active. This output is used to drive a light to alert the operator. As long as the lamp is illuminated the engine should not be started.

Installation

A 12 or 24 volt lamp of less than 500 mA DC is needed depending on the ignition source. This digital output circuit is designed to sink no more than 500 mA (DC) current.

The Wait to Start Lamp is wired to pin 21/07 of the VCU.

THIS PAGE INTENTIONALLY LEFT BLANK

5 FEATURES

Section	Page
5.1 ANTI-LOCK BRAKE/AUTOMATIC TRACTION CONTROL SYSTEMS ..	5-5
5.2 COLD START	5-7
5.3 CRUISE CONTROL	5-11
5.4 DIAGNOSTICS	5-19
5.5 DUAL SPEED AXLE	5-21
5.6 ENGINE BRAKE CONTROLS	5-23
5.7 ENGINE PROTECTION	5-39
5.8 ENGINE STARTER CONTROL	5-47
5.9 FAN CONTROL	5-49
5.10 FUEL ECONOMY INCENTIVE	5-63
5.11 IDLE SHUTDOWN TIMER AND VSG SHUTDOWN	5-65
5.12 LIMITERS	5-69
5.13 LOW GEAR TORQUE LIMITING	5-73
5.14 MANAGEMENT INFORMATION PRODUCTS	5-77
5.15 OPTIMIZED IDLE	5-95
5.16 PASSMART	5-99
5.17 PASSWORDS	5-103
5.18 PROGRESSIVE SHIFT	5-105
5.19 STARTER LOCKOUT	5-107
5.20 TACHOMETER DRIVE	5-109
5.21 THROTTLE CONTROL/GOVERNORS	5-111
5.22 TRANSMISSION INTERFACE	5-125

5.23	VEHICLE SPEED LIMITING	5-131
5.24	VEHICLE SPEED SENSOR ANTI-TAMPERING	5-133

THIS PAGE INTENTIONALLY LEFT BLANK

THIS PAGE INTENTIONALLY LEFT BLANK

5.1 ANTI-LOCK BRAKE/AUTOMATIC TRACTION CONTROL SYSTEMS

Anti-lock Brake Systems (ABS) and Automatic Traction Control (ATC) systems are electronic systems that monitor and control wheel speed during braking. The systems are compatible with standard air brake systems. The system monitors wheel speed at all times, and controls braking during emergency situations. Vehicle stability and control are improved by reducing wheel lock during braking.

5.1.1 OPERATION

The DDEC-VCU transmits engine data via SAE J1587 or SAE J1939. Anti-lock brake systems monitor data on one or more of these communication links. In the event that an excessive wheel spin is detected, the DDEC-VCU receives a message from the ABS requesting a 0% output torque limit. The message is transmitted on SAE J1939.

SAE J1939 transmits/receives data at 250 K baud. SAE J1939 has a high bit rate so messages reach their destination very quickly.

THIS PAGE INTENTIONALLY LEFT BLANK

5.2 COLD START

The DDEC-VCU has optional support for an electric Grid Heater for use as a cold start aid. The Grid Heater element is operated by a high current relay. If the heater is enabled, the DDEC-VCU will turn the Grid Heater relay on and off as required.

5.2.1 OPERATION

The cold start procedure has several states. The cold start states and outputs during a successful engine start are listed in Table 5-1 and described in the following sections.

State	Grid Heater	
	Wait to Start Lamp	Grid Heater Relay
Initialization	Off	Off
Preheating	On	On - Preheat Time
Ready for Engine Start	Off	Off
Engine Starting	Off	Off
Post-heating	Off	On - Post Heat Time
Cooling Off	Off	Off
OFF	Off	Off

Table 5-1 Cold Start States and Outputs

NOTE:

If ignition switch off is detected, the DDEC-VCU remains in the current state for 5 seconds. If the ignition is switched on again, cold start proceeds. Otherwise the DDEC-VCU changes to the cooling off state.

Initialization

When ignition is switched on and engine speed is 0 rpm, the DDEC-VCU determines preheating time, post-heating time and the coolant switch off temperature. The preheating time is shortened when the cold start device is not cold.

A preheating time of 0 indicates, that no cold start is needed for the following engine start. If the preheating time is greater than 0, the DDEC-VCU enters the preheating state.

Preheating State

Engine cranking detection during preheating will stop the Preheating process and the canceling of the Cold Start function. The Cold Start function will also be canceled when low battery voltage codes are active.

When the Preheat time has elapsed, the Wait to Start lamp will go off and the engine is ready to start.

Waiting for Engine Start

A cranking detection before the end of time waiting for start leads to the engine starting state. If the engine does not start then Cold Start is canceled.

Engine Start

If engine start is successful or if the engine starting time ends, the post-heating state starts.

Post-heating State

When the engine start is successful, the grid heater will be switched on until the post-heating time expires or the coolant temperature exceeds the switch off temperature.

Cooling Off

This time is used to determine the preheating time at the beginning of the next cold start.

Off

End of the Cold Start procedure, all outputs are switched off.

5.2.2 INSTALLATION

The grid heater control is performed using the DDEC-VCU high side driver output Grid Heater Control on DDEC-VCU pin 15/10. This output can source up to 2.5 amps.

The Wait to Start Lamp is driven by a low side output on DDEC-VCU pin 21/7.

5.2.3 PROGRAMMING REQUIREMENTS AND FLEXIBILITY

The Cold Start parameters are listed in Table 5-2.

Parameter	Setting	Default	Parameter ID	Access
Grid Heater	0 = Disabled 1 = Grid Heater (pin 15/10) 2 = Grid Heater (DDEC-ECU, not currently available)	0	01 02 06	VEPS or minidiag2

Table 5-2 Cold Start Parameters

5.2.4 DIAGNOSTICS

The digital output for the grid heater relay is monitored for high/low state conformity. At the beginning of the preheating state and the starting state, and the first two seconds of the preheating state, the intake air manifold temperature is measured to check if the cold start device works.

A fault code (PID 45) is recorded if one of the errors listed in Table 5-3 occurs.

Failure	Action Taken
Output relay grid heater is not valid	Cold Start is cancelled
Voltage drop below switch off voltage	Cold Start is cancelled
No increase of intake air manifold temperature during preheating state	Cold Start is cancelled

Table 5-3 Cold Start Failures and Action Taken

THIS PAGE INTENTIONALLY LEFT BLANK

5.3 CRUISE CONTROL

Cruise Control maintains a targeted speed (MPH) by increasing or decreasing fueling. The targeted speed can be selected and adjusted with dash-mounted switches. Up to five digital inputs are required (four for automatic transmission) for Cruise Control operation. A Vehicle Speed Sensor (VSS) is required for Vehicle Speed Cruise Control or an output shaft speed message over the J1939 data link.

5.3.1 OPERATION

Cruise Control will operate in Vehicle Speed Mode.

Vehicle Speed Cruise Control

Vehicle Speed Cruise is enabled when "Enable Cruise" and a Vehicle Speed Sensor (VSS) is installed or output shaft speed is received over J1939. Engine speed and power are varied under Vehicle Speed Cruise Control to maintain the set vehicle speed. The vehicle speed must be above 24 mph (38 km/hr).

This type of Cruise Control is required when either of the following conditions exists:

- Vehicle Speed Limiting -- Vehicle Speed Cruise Control is mandatory if the vehicle speed limit is programmed and Cruise Control is desired. This will prevent the DDEC-ECU from fueling the engine at speeds greater than the vehicle speed limit.
- Automatic Transmissions -- Vehicle Speed Cruise Control must be selected if the vehicle is equipped with an automatic transmission. This will ensure proper transmission upshifts while in Cruise Control. Refer to the transmission manufacturer's manual for more information and see the Vehicle Interface Harness schematic.

Cruise Control can be overridden at any time with the foot pedal if the vehicle is operating at less than the programmed Vehicle Speed Limit.

Clutch pedal, service brake pedal, and throttle interlock input, if configured, are monitored to abort fueling the engine in Cruise Control Active Mode if there is driver action.

There are three Cruise Control operation modes as listed in Table 5-4.

Cruise Control Mode	Conditions	Set Speed	Engine Fuel Controlled By Cruise Control
Off	Cruise Control ON/OFF switch is in OFF position or Cruise Control ON/OFF is switched to ON position although Cruise Control is not allowed.	0 MPH	No
Active	Cruise Control ON/OFF switch in ON position and Cruise Control is allowed and set speed has already been set. The set speed can be increased or decreased by using the Resume/Accel and Set/Coast switches.	Set Speed (+/-)	Yes
Standby	Cruise Control ON/OFF switch in On position and Cruise Control formally active but not allowed anymore or no set speed has been set after switching Cruise Control On and Cruise Control is allowed.	Last Set speed on Hold in Memory	No

Table 5-4 Three Cruise Control Operation Modes

Engine Brakes in Cruise Control (Optional)

When there is vehicle acceleration above set speed, engine brakes (if configured) are activated to keep the desired road speed.

Cruise Auto Resume (Optional)

The Cruise Auto Resume feature will resume Vehicle Speed Cruise Control based on the calibration setting.

- 1 = Cruise Control is resumed immediately after the clutch pedal is released.
- 2 = Cruise Control is resumed if the clutch has been pushed twice and released within three (3) seconds.

Smart Cruise

The Eaton® Smart Cruise® system will send a "heart beat" message on the SAE J1939 Data Link. Manual Cruise Control and Smart Cruise will be disabled if the message is not received over the data link or the message indicates that there is a failure in Smart Cruise. To regain manual control, the driver must toggle the Cruise Master Switch twice within 10 seconds.

Smart Cruise must be configured by VEPS. For additional information on Smart Cruise, contact Eaton Corporation.

This feature is available with V 14.21 software or later.

Cruise Enable

Cruise Control is enabled, but not active when the Cruise Control Enable digital input is switched to battery ground.

The Cruise Enable switch is a normally open switch.

Set / Coast

The Set/Coast switch is a momentary switch.

Set: Cruise Speed is set by momentarily contacting the switch to the ON position (switching the digital input to battery ground). Cruise Control will become active and maintain the vehicle speed present at the time.

Coast: When Cruise Control is active, the Set/Coast input can be used to reduce power and speed by toggling the switch. Momentarily toggling and releasing the Set/Coast switch will decrease the set point by 1.24 mph (2 km/hr) increments for Vehicle Speed Cruise Control. Holding the Set/Coast will decrease the set point by 1.24 mph (2 km/hr) per second. When released the Cruise Control set point will be at the new speed.

Resume / Accel

The Resume/Accel switch is a momentary switch.

Resume: If Cruise Control has been disabled with the service brake or the clutch switch, momentary contact to the ON position (switching the input to battery ground) restores the previously set cruise speed.

Accel: When Cruise Control is active, the Resume/Accel input can be used to increase power and speed by toggling the switch. Momentarily toggling and releasing the Resume/Accel switch will increase the set point by 1.24 mph (2 km/hr) increments for Vehicle Speed Cruise Control. Holding the Resume/Accel will increase the set point by 1.24 mph (2 km/hr) per second (Vehicle Speed CC). When released the Cruise Control set point will be at the new speed.

Clutch Released (Manual Transmissions)

This input indicates that the clutch is released and is used for suspending Cruise Control and Auto Resume.

When the clutch is released, the input is at battery ground. Cruise Control is suspended if the clutch is pressed once. If the clutch pedal is pressed twice within three seconds, Cruise Control is automatically resumed if Cruise Auto Resume is configured depending on the calibration setting selected (refer to “Cruise Auto Resume”).

The digital input logic for the Clutch Switch disables Cruise Control in the unlikely event of a broken clutch switch wire.

This switch is a normally closed switch.

Service Brake Released (Automatic and Manual Transmissions)

This input indicates that the brake is released when switched to battery ground. If the brake is activated, then the input is not grounded and Cruise Control is suspended. Cruise Control is resumed by using the Resume/Accel Switch.

The input logic for the Brake Switch disables Cruise Control in the unlikely event of a broken brake switch wire.

This switch is a normally closed switch.

Throttle Inhibit Switch

This input indicates that the throttle inhibit function is active when switched to battery ground. Cruise Control is deactivated if the throttle inhibit switch is grounded.

Cruise Control Modes

Separate programmable thresholds are available for increasing and decreasing set speed using the Cruise Control switches Resume/Accel and Set/Coast. The difference between the new set speed and road speed is limited to the programmable thresholds.

All Cruise Control modes, conditions, and action taken are listed in Table 5-5.

Cruise Control Mode Status Change	Condition	Action Taken
Standby/Active to Off	Cruise Control ON/OFF switch is switched to OFF position	Set Speed = 0 MPH
Off to Standby	Cruise Control ON/OFF switch is switched from OFF to ON position	Set Speed = Set Speed
Standby to Active	Cruise Control switch is toggled to Set/Coast position	Set Speed = Road Speed
	Cruise Control switch is toggled to Resume/Accel position and the desired road speed has already been set (> 0 MPH)	Set Speed = Set Speed
	Cruise Control switch is toggled to Resume/Accel position and no desired road speed has been set before (=0 MPH)	Set Speed = Road Speed
	Cruise auto resume	Set Speed = Set Speed
Active	Cruise Control switch is toggled to Set/Coast position	Set Speed = Set Speed – Speed Step Down
	Cruise Control switch is held in Set/Coast position for more than one second	Set Speed = Set Speed – Speed Ratio Down Time
	Cruise Control switch is toggled to Resume/Accel position	Set Speed = Set Speed + Speed Step Up
	Cruise Control switch is held in Resume/Accel position for more than one second	Set Speed = Set Speed + Speed Ration up Time
	Cruise Control switch is not toggled	Set Speed Hold in Memory
Active to Standby	Brake switch, clutch switch toggled, vehicle speed drops below min cruise speed	Set Speed Hold in Memory

Table 5-5 Cruise Control Mode Status Change

5.3.2 INSTALLATION

The following is a list of switches and DDEC-VCU sensors that are required for Cruise Control operation.

- Cruise Control ON/OFF (Switch or J1939)
- Service Brake (Switch or J1939)
- Clutch Released for Manual Transmission (Switch or J1939)
- Set/Coast (Switch or J1939)
- Resume/Accel (Switch or J1939)

- Vehicle Speed Sensor (or J1939)

See Figure 5-1 for a diagram of the Cruise Control circuit.

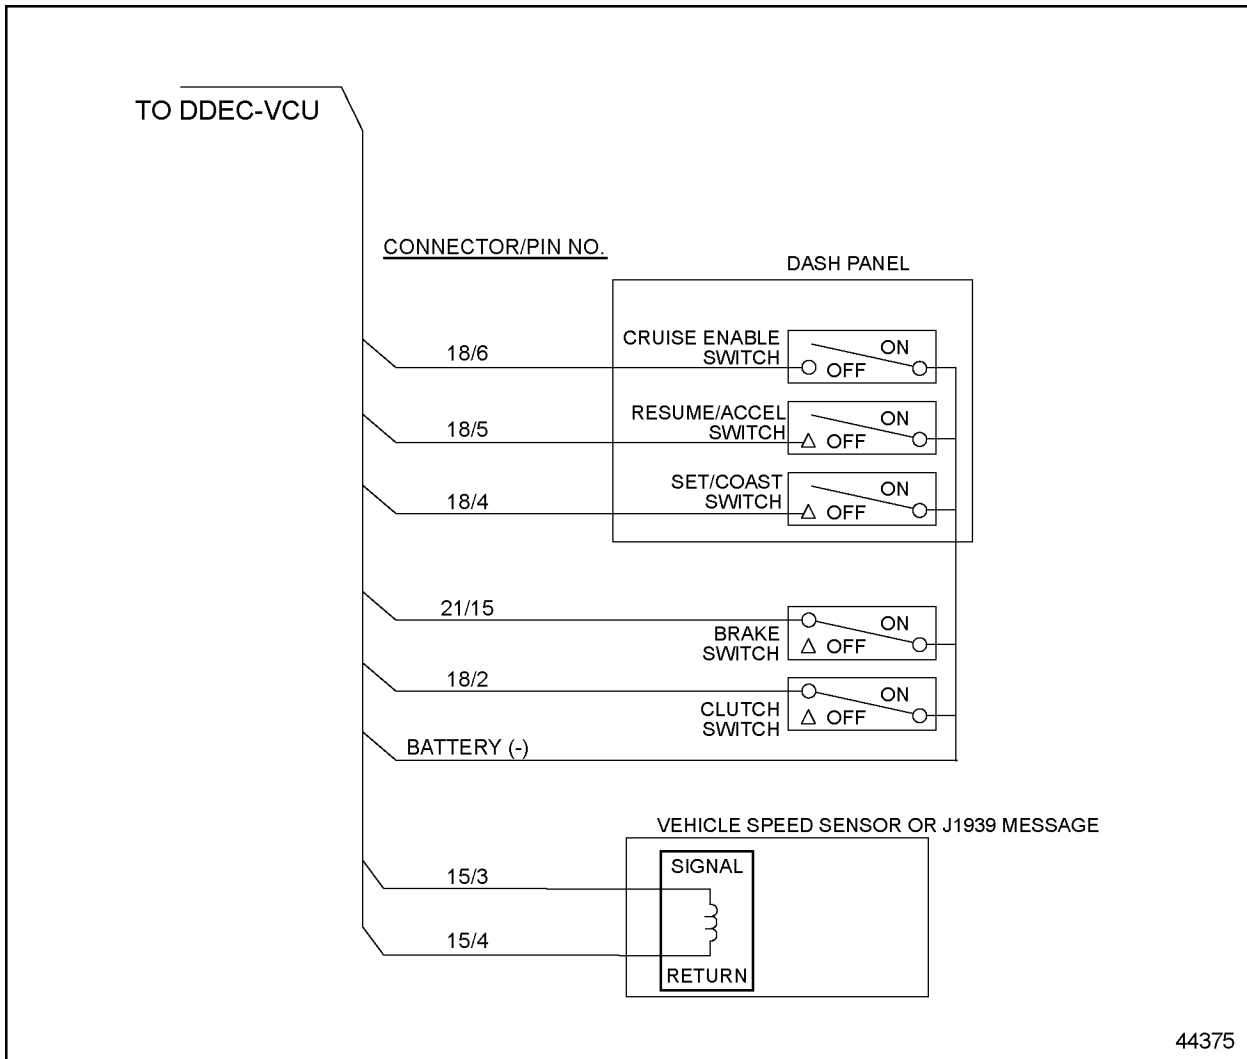


Figure 5-1 Cruise Control Circuit

5.3.3 PROGRAMMING REQUIREMENTS AND FLEXIBILITY

To configure an engine for Cruise Control, the digital inputs listed in Table 5-6 must be selected. These parameters can be set with VEPS, DRS or the minidiag2. Refer to section 4.1, "Digital Inputs," for more information.

Parameter	Setting	Default	Parameter ID
Enable Service Brake Input	1 = Enable 2 = Disable	1 = Enabled	1 13 04
Service Brake Input Configuration	0 = Hardwired 1 = Source Address 1 (SA1) 2 = Source Address 2 (SA2) 3 = Source Address 3 (SA3)	0 = Hardwired	1 13 05
Configuration Cruise Control On/Off Switch	0 = Hardwired 1 = Source Address 1 (SA1) 2 = Source Address 2 (SA2) 3 = Source Address 3 (SA3)	0 = Hardwired	1 13 11
Cruise Control Set/Coast and Resume/Accel Switches Configuration	0 = Hardwired 1 = Source Address 1 (SA1) 2 = Source Address 2 (SA2) 3 = Source Address 3 (SA3)	0 = Hardwired	1 13 12
Clutch Switch Configuration	0 = Hardwired 1 = Source Address 1 (SA1) 2 = Source Address 2 (SA2) 3 = Source Address 3 (SA3)	0 = Hardwired	1 13 15
Source Address 1 (SA1) for Receiving Multiplexed Switch Status	0 — 55	23	1 01 09
Source Address 2 (SA2) for Receiving Multiplexed Switch Status	0 — 255	33	1 01 10
Source Address 3 (SA3) for Receiving Multiplexed Switch Status	0 — 255	49	1 01 11

Table 5-6 Cruise Control Input Configuration

A Vehicle Speed Sensor must be configured for Vehicle Speed Cruise Control. Refer to section 3.7.4, "Vehicle Speed Sensor," for additional information.

The Cruise Control parameters listed in Table 5-7 can be set by minidiag2.

Parameter	Description	Range	Default	Parameter ID	Access
Min Road Speed	Minimum road speed for Cruise Control	38 – 152 km/hr	48 km/hr	1 15 01	Nexiq™ DDR, DDDL, DRS, VEPS, minidiag2
Max Set Speed	Cruise Control vehicle set speed cannot be faster than this value.	48–152 km/hr	152 km/hr	1 15 02	Nexiq DDR, DDDL, DRS, VEPS, minidiag2
Cruise Set Speed Increment	Set Speed increment for every Resume/Accel switch momentary press.	0–10 km/hr	2 km/hr	1 15 03	VEPS, DRS, minidiag2
Cruise Set Speed Decrement	Set Speed decrement for every Set/Coast switch momentary press.	0–10 km/hr	2 km/hr	1 15 04	VEPS, DRS, minidiag2
Cruise Set Speed Ramp Up	Set Speed increment for Resume/Accel switch continuous press.	0–20 km/hr/sec	2 km/hr/sec	1 15 05	VEPS, DRS, minidiag2
Cruise Set Speed Ramp Down	Set Speed decrement for Set/Coast switch continuous press.	0–20 km/hr/sec	2 km/hr/sec	1 15 06	VEPS, DRS, minidiag2
Enable Cruise Auto Resume	Enables or disables the auto resume feature.	0 = Disable 1 = Enable after 1st clutch release 2 = Enable after clutch released twice	0	1 15 07	Nexiq DDR, DDDL, DRS, VEPS, minidiag2
Enable Engine Brakes on Cruise Control	Enables or disables the engine brakes during Cruise Control.	0 = Disable 1 = Enable	0	1 10 06	Nexiq DDR, DDDL, DRS, VEPS, minidiag2

Table 5-7 Cruise Control Parameters

If Smart Cruise is installed on the vehicle the parameter listed in Table 5-8 must be enabled by VEPS, DRS or the minidiag2.

Parameter	Description	Choice	Default	Parameter ID	Access
Adaptive Cruise Control	Enables/Disables the feature.	0 = Disable 1 = Enable	0	1 15 10	DRS, VEPS, minidiag2

Table 5-8 Smart Cruise Parameter

5.4 DIAGNOSTICS

Diagnostics is a standard feature of DDEC for MBE 900 and MBE 4000. The purpose of this feature is to provide information for problem identification and problem solving in the form of a code. The DDEC-ECU and DDEC-VCU continuously perform self diagnostic checks and monitors the other system components. Information for problem identification and problem solving is enhanced by the detection of faults, retention of fault codes and separation of active from inactive codes.

5.4.1 OPERATION

The engine-mounted DDEC-ECU includes control logic to provide overall engine management. System diagnostic checks are made at ignition on and continue throughout all engine operating modes.

Sensors provide information to the DDEC-ECU and DDEC-VCU regarding various engine and vehicle performance characteristics. The information is used to regulate engine and vehicle performance, provide diagnostic information, and activate the engine protection system.

Instrument panel warning lights, the Amber Warning Lamp (AWL) and the Red Stop Lamp (RSL), warn the engine operator. The AWL is an amber light and the RSL is a red light.

NOTE:

The DDEC-ECU and DDEC-VCU save error codes into memory during a six second period after the ignition is turned off. The codes will not be stored if there is an interruption of battery power or recycling of the ignition.

The AWL is illuminated and a code is stored if an electronic system fault occurs. This indicates the problem should be diagnosed as soon as possible. The DDEC-VCU illuminates the AWL and RSL and stores a malfunction code if a potentially engine damaging fault is detected. These codes can be accessed in one of three ways:

- Using the minidiag2 diagnostic reader
- By ProDriver® DC, Electronic Display Module (EDM), or other display
- Commercially available J1587 diagnostic tools
- Detroit Diesel Diagnostic Link® (DDDL)

There are two types of diagnostic codes:

- An *active code* - a fault present at the time when checking for codes
- An *inactive code* - a fault which has previously occurred; inactive codes are logged into the DDEC-VCU and time stamped with the following information:

Refer to Appendix A for a list and description of diagnostic codes.

THIS PAGE INTENTIONALLY LEFT BLANK

5.5 DUAL SPEED AXLE

The Dual Speed Axle feature allows a digital input to be configured to switch between two axle ratios for calculation of vehicle speed.

5.5.1 OPERATION

When the digital input is open the first axle ratio will be used. When the switch is grounded, the second axle ratio will be used. The vehicle must be stopped before switching the axle ratios.

5.5.2 PROGRAMMING FLEXIBILITY & REQUIREMENTS

The digital input listed in Table 5-9 can be configured by VEPS, DRS or minidiag2.

Description	Setting	Default	Parameter ID
Dual Speed Axle Switch	0 = Hardwired 1 = Source Address 1 (SA1) 2 = Source Address 2 (SA2) 3 = Source Address 3 (SA3)	0 = Hardwired	1 13 14

Table 5-9 Dual Speed Axle Digital Input

Both axle ratios listed in Table 5-10 must also be programmed with VEPS, DRS or minidiag2.

Parameter	Description	Range	Default	Parameter ID
Axle Ratio	Indicates the first axle ratio of the vehicle.	1.0 – 20.00	5.29	1 08 03
Second Axle Ratio	Indicates the second axle ratio of the vehicle.	1.0 – 20.00	5.29	1 08 09

Table 5-10 Programming the Axle Ratios

THIS PAGE INTENTIONALLY LEFT BLANK

5.6 ENGINE BRAKE CONTROLS

The Engine Brake option converts a power-producing diesel engine into a power-absorbing air compressor. This is accomplished by opening the constant throttle valve over all cylinders near the top of the normal compression stroke and releasing the compressed cylinder charge to exhaust. The release of the compressed air to atmospheric pressure prevents the return of energy to the engine piston on the expansion stroke, the effect being a net energy loss. Fueling is cut off when this occurs. The constant throttle valves are open over all cycles, not just the exhaust cycle.

5.6.1 OPERATION

A dash mounted On/Off Switch is used to enable the Engine Brake option. Engine Brake operations are allowed only when all of the following conditions are met:

- Percent throttle = 0 except if exceeding Vehicle Speed Limit
- Engine speed is within a programmed range
- ABS is not active (J1939)
- Clutch pedal is released
- Fuel quantity = 0%
- Engine is not in VSG mode
- Engine Brake switches are turned on
- Torque converter locked up (automatic transmission)

If all of these conditions are met, engine brake will be activated when the engine brake switches are on low or medium (for exhaust flap Engine Brake configuration) or on low, medium or high (for turbo Engine Brake configuration). Engine brakes will be deactivated when at least one of these conditions is no longer met or the engine brake switch is turned back to the OFF position.

Stage	Engine Brake High Digital Input	Engine Brake Low Digital Input	Constant Throttle and Exhaust Flap Action	Constant Throttle and Turbo Brake Action
Off	Open	Open	No Brakes Active	No Brakes Active
1	Open	Ground	Constant Throttle Only	Constant Throttle Only
2	Ground	Open	Constant Throttle and Exhaust Flap	Constant Throttle + Turbo Brake 50%
3	Ground	Ground	Not Available	Constant Throttle + Turbo Brake 100%

Table 5-11 Engine Brake Switches

Cruise Control with Engine Brake, Service Brake Control of Engine Brakes, and Engine Brake with Vehicle Speed Limit are options for Engine Brake.

Cruise Control with Engine Brake

The Engine Brake option can also provide Engine Brake capability when the vehicle is in Cruise Control. For example, if the vehicle is going down hill in Cruise Control while the engine brake is selected, the DDEC-VCU will control the amount of Engine Brake with respect to the Cruise Control set speed. Engine brakes will be activated automatically when the road speed exceeds a programmed maximum over-speed limit above the Cruise Control set speed. Engine brakes are deactivated when the road speed falls under a programmed minimum over-speed limit above the cruise set speed. Different speed limits are available for activating and deactivating the engine brakes for low and medium braking. Cruise Control with Engine Brake can be set with can be set by minidiag2.

Service Brake Control of Engine Brakes

This option will allow the service brake pedal to engage the engine brakes when pressed independent of the engine brake switch position. A digital input must be programmed for service brake. Refer to section 4.1, “Digital Inputs” for additional information.

Engine Brakes with Road Speed Limiter

This option enables engine brake operations when the current road speed is higher than the sum of the programmed offset and the set road speed limit. Engine brakes remain on until the road speed is lower than the set road speed limit and the road speed governor allows fueling the engine again.

5.6.2 PROGRAMMING REQUIREMENTS AND FLEXIBILITY

Engine Brake must be specified at the time of engine order or by contacting Detroit Diesel Technical Service.

The digital inputs listed in Table 5-12 must be configured by VEPS or minidiag2:

Description	Pin Number
Engine Brake Low	18/8
Engine Brake Medium	18/9
Clutch Switch (required for manual transmissions)	18/2

Table 5-12 Required Digital Inputs for Engine Brake Controls

Engine Brake configuration listed in Table 5-13 must be configured by VEPS or minidiag2.

Parameter	Choice/Range	Default	Parameter ID
Engine Brake Configuration	0 = Compression Brake and Exhaust Flap (Low/Med) 1 = Compression Brake and Turbo Brake (Low/Med/High)	0	1 10 13

Table 5-13 Engine Brake Parameter

Configuration for MBE 900 Compression Brake (Constant Throttle) Only Application

The configuration parameters for **Compression Brake Only** applications are listed in Table 5-14. These parameters can be configured or changed with VEPS or minidiag2.

Parameter	Description	Range	Recommended Setting	Parameter ID
Engine Brake Configuration	Enables the type of engine brake required	0 = Engine Brake configuration with Compression Brake & Exhaust Flap 1 = Engine Brake Configuration w/ Compression Brake & Turbo Brake	0 = Low/High	1 10 13
Engine Brake Stage 1 Mask for Low Braking	Mask determines which device turns on for low braking	64 = Constant Throttle Valve Only 80 = Constant Throttle & Exhaust Flap 81 = Constant Throttle Valve & Turbo Brake High	64	1 10 14
Engine Brake Stage 1 Factor for Low Braking	Factor determines the amount of low braking	0 – 100%	100	1 10 15
Engine Brake Stage 2 Mask for Medium Braking	Mask determines which device turns on for medium braking	64 = Constant Throttle Valve Only 80 = Constant Throttle & Exhaust Flap 81 = Constant Throttle Valve & Turbo Brake High	64	1 10 16
Engine Brake Stage 2 Factor for Medium Braking	Factor determines the amount of medium braking	0 – 100%	100	1 10 17
Engine Brake Stage 3 Mask for High Braking*	Mask determines which device turns on for high braking	64 = Constant Throttle Valve Only 80 = Constant Throttle & Exhaust Flap 81 = Constant Throttle Valve & Turbo Brake High	64	1 10 18
Engine Brake Stage 3 Factor for High Braking	Factor determines the amount of high braking	0 – 100%	100	1 10 19
Engine Brake Transmission Mask		64 = Constant Throttle Valve Only 80 = Constant Throttle & Exhaust Flap 81 = Constant Throttle Valve & Turbo Brake High	64	1 10 20
Engine Brake Transmission Factor	Factor determines the amount of high braking	0–100%	100	1 10 21

* The Engine Brake Stage 3 mask is used when the vehicle is exceeding the Road Speed limit. Engine Brake Stage 3 mask should always be set to a non-zero value for engines with an engine brake. For Constant Throttle only or Exhaust Flap applications, the Stage 3 mask must be the same value as the Stage 2 mask.

Table 5-14 DDEC-VCU Configuration Parameter for Compression Brake Only

For DDEC-ECU software 53 (Diagnostic Version 5), the parameters listed in Table 5-15 for **Compression Brake Only** applications must be set in the DDEC-ECU and the configuration parameters listed in Table 5-14 must be set in the DDEC-VCU. These parameters can be changed with VEPS or minidiag2.

Parameter	Description	Range	Recommended Setting	Parameter ID
PWM1 – Exhaust Flap Enable	Enables the Exhaust Flap or Turbo Brake on PWM1	0 = No Function 1 = Wastegate Control 2 = Exhaust Flap (VEPS) 3 = Exhaust Flap (minidiag2)	0 = No Function	0 06 01
PWM2 – Compression Engine Brake Enable	Enables the Compression brake on PWM2	0 = No Function 1 = Not Used 2 = Compression Brake (VEPS) 3 = Compression Brake (minidiag2)	2 for VEPS OR 3 for minidiag2	0 06 02
PWM6	Turbo Brake Sleeve	0 = No Function 1 = Not Used 2 = Not Used 3 = Exhaust Flap	0 = No Function	0 35 02

Table 5-15 DDEC-ECU Software 53 (Diagnostic Version 5) Parameters for Compression Brake Only Applications

For DDEC-ECU software 56 (Diagnostic Version 5), the parameters listed in Table 5-16 for **Compression Brake Only** applications must be set in the DDEC-ECU and the configuration parameters listed in Table 5-14 must be set in the DDEC-VCU. These parameters can be changed with VEPS or minidiag2.

Parameter	Description	Range	Recommended Setting	Parameter ID
PWM1 – Exhaust Flap Enable	Enables the Exhaust Flap or Turbo Brake on PWM1	0 = No Function 1 = Wastegate Control 2 = Exhaust Flap (VEPS) 3 = Exhaust Flap (minidiag2)	0 = No Function	0 03 01
PWM2 – Compression Engine Brake Enable	Enables the Compression brake on PWM2	0 = No Function 1 = Not Used 2 = Compression Brake (VEPS) 3 = Compression Brake (minidiag2)	2 for VEPS OR 3 for minidiag2	0 03 02
PWM6	Turbo Brake Sleeve	0 = No Function 1 = Not Used 2 = Not Used 3 = Exhaust Flap	0 = No Function	0 03 06

Table 5-16 DDEC-ECU Software 56 (Diagnostic Version 6) Parameters for Compression Brake Only Applications

For DDEC-ECU software 60 (Diagnostic Version 9), the parameters listed in Table 5-17 for **Compression Brake Only** applications must be set in the DDEC-ECU and the configuration parameters listed in Table 5-14 must be set in the DDEC-VCU. These parameters can be changed with VEPS or minidiag2.

Parameter	Description	Range	Recommended Settings	Parameter ID
PWM1 (PV1)	MBR 900 Exhaust Flap Enable/MBE 4000 Wastegate Enable	0 = No Function 1 = Boost Control* 2 = Not Used 3 = Exhaust Flap†	0 = No Function	0 03 01
PWM2 (PV2)	EGR Value Enable	0 = No Function 1 = EGR Valve 2 = Not Used 3 = Engine Brake‡	2 for VEPS or 3 for minidiag2	0 03 02
PWM5 (PV5)	Compression Brake Enable	0 = No Function 1 = Not Used 2 = Not Used 3 = Engine Brake§	3 = Compression Brake Enable	0 03 05
PWM6 (PV6)	MBE 4000 Turbo Brake/Exhaust Flap	0 = No Function 1 = Not Used 2 = Not Used 3 = Exhaust Flap or Turbo Brake Sleeve 4 = Future Grid Heater	0 = No Function	0 03 06

* Only if turbo brake

† MBE 900 EGR engine

‡ Moved to PV5 if PV2 is used for EGR.

§ Alternative to PV2 if PV2 is used for EGR.

Table 5-17 DDEC-ECU Software 60 (Diagnostic Version 9) Configuration Parameter for Compression Brake Only Applications - MBE 900 Engine

Configuration for MBE 900 Compression Brake and Exhaust Brake Applications

The configuration parameters listed in Table 5-18 for **Compression Brake and Exhaust Brake** are for the MBE 906. These parameters can be configured or changed with VEPS or minidiag2.

Parameter	Description	Range	Recommended Setting	Parameter ID
Engine Brake Configuration	Enables the type of engine brake required	0 = Engine Brake configuration w/ Compression Brake & Exhaust flap 1 = Engine Brake Configuration w/ Compression Brake & Turbo Brake	0 = Low/Med	1 10 13
Engine Brake Stage 1 Mask for Low Braking	Mask determines which device turns on for low braking	64 = Constant Throttle Valve Only 80 = Constant Throttle & Exhaust Flap 81 = Constant Throttle Valve & Turbo Brake High	64	1 10 14
Engine Brake Stage 1 Factor for Low Braking	Factor determines the amount of low braking	0 – 100%	100	1 10 15
Engine Brake Stage 2 Mask for Medium Braking	Mask determines which device turns on for medium braking	64 = Constant Throttle Valve Only 80 = Constant Throttle & Exhaust Flap 81 = Constant Throttle Valve & Turbo Brake High	80	1 10 16
Engine Brake Stage 2 Factor for Medium Braking	Factor determines the amount of medium braking	0 – 100%	100	1 10 17
Engine Brake Stage 3 Mask for High Braking*	Mask determines which device turns on for high braking	64 = Constant Throttle Valve Only 80 = Constant Throttle & Exhaust Flap 81 = Constant Throttle Valve & Turbo Brake High	80	1 10 18
Engine Brake Stage 3 Factor for High Braking	Factor determines the amount of high braking	0 – 100%	100	1 10 19
Engine Brake Transmission Mask	—	64 = Constant Throttle Valve Only 80 = Constant Throttle & Exhaust Flap 81 = Constant Throttle Valve & Turbo Brake High	64	1 10 20
Engine Brake Transmission Factor	Factor determines the amount of high braking	0–100%	100	1 10 21

* The Engine Brake Stage 3 mask is used when the vehicle is exceeding the Road Speed limit. Therefore the Engine Brake Stage 3 mask should always be set to a non-zero value with engine brake. For Constant Throttle only or Exhaust Flap applications, the Stage 3 mask must be the same value as the Stage 2 mask.

Table 5-18 DDEC-VCU Configuration Parameter for Compression and Exhaust Brake Applications - MBE 906 Engine

For DDEC-ECU software 53 (Diagnostic Version 5), the parameters listed in Table 5-19 for **Compression Brake and Exhaust Brake** applications must be set in the DDEC-ECU and the configuration parameters listed in Table 5-18 must be set in the DDEC-VCU. These parameters can be changed with VEPS or minidiag2.

Parameter	Description	Range	Recommended Setting	Parameter ID
PWM1 – Exhaust Flap Enable	Enables the Exhaust Flap or Turbo Brake on PWM1	0 = No Function 1 = Wastegate Control 2 = Exhaust Flap (VEPS) 3 = Exhaust Flap (minidiag2)	2 for VEPS or 3 for minidiag2	0 06 01
PWM2 – Compression Engine Brake Enable	Enables the Compression brake on PWM2	0 = No Function 1 = Not Used 2 = Compression Brake (VEPS) 3 = Compression Brake (minidiag2)	2 for VEPS or 3 for minidiag2	0 06 02
PWM6	Turbo Brake Sleeve Control	0 = No Function 1 = Not Used 2 = Not Used 3 = Exhaust Flap	0 = No Function	0 35 02

Table 5-19 DDEC-ECU Software 53 (Diagnostic Version 5) Configuration Parameter for Compression and Exhaust Brake Applications - MBE 906 Engine

For DDEC-ECU software 56 (Diagnostic Version 6), the parameters listed in Table 5-20 for **Compression Brake and Exhaust Brake** applications must be set in the DDEC-ECU and the configuration parameters listed in Table 5-18 must be set in the DDEC-VCU. These parameters can be changed with VEPS or minidiag2.

Parameter	Description	Range	Recommended Setting	Parameter ID
PWM1 – Exhaust Flap Enable	Enables the Exhaust Flap or Turbo Brake on PWM1	0 = No Function 1 = Wastegate Control 2 = Exhaust Flap (VEPS) 3 = Exhaust Flap (minidiag2)	2 for VEPS or 3 for minidiag2	0 03 01
PWM2 – Compression Engine Brake Enable	Enables the Compression brake on PWM2	0 = No Function 1 = Not Used 2 = Compression Brake (VEPS) 3 = Compression Brake (minidiag2)	2 for VEPS or 3 for minidiag2	0 03 02
PWM6	Turbo Brake sleeve Control	0 = No Function 1 = Not Used 2 = Not Used 3 = Exhaust Flap	0 = No Function	0 03 06

Table 5-20 DDEC-ECU Software 56 (Diagnostic Version 6) Configuration Parameter for Compression and Exhaust Brake Applications - MBE 906 Engine

For DDEC-ECU software 60 (Diagnostic Version 9), the parameters listed in Table 5-21 for **Compression Brake and Exhaust Flap** applications must be set in the DDEC-ECU and the configuration parameters listed in Table 5-18 must be set in the DDEC-VCU. These parameters can be changed with VEPS or minidiag2.

Parameter	Description	Range	Recommended Settings	Parameter ID
PWM1 (PV1)	MBR 900 Exhaust Flap Enable/MBE 4000 Wastegate Enable	0 = No Function 1 = Boost Control* 2 = Not Used 3 = Exhaust Flap†	2 for VEPS or 3 for minidiag2	0 03 01
PWM2 (PV2)	EGR Value Enable	0 = No Function 1 = EGR Valve 2 = Not Used 3 = Engine Brake‡	2 for VEPS or 3 for minidiag2	0 03 02
PWM5 (PV5)	Compression Brake Enable	0 = No Function 1 = Not Used 2 = Not Used 3 = Engine Brake§	3 = Compression Brake Enable	0 03 05
PWM6 (PV6)	MBE 4000 Turbo Brake/Exhaust Flap	0 = No Function 1 = Not Used 2 = Not Used 3 = Exhaust Flap or Turbo Brake Sleeve 4 = Future Grid Heater	0 = No Function	0 03 06

* Only if tubo brake

† MBE 900 EGR engine

‡ Moved to PV5 if PV2 is used for EGR.

§ Alternative to PV2 if PV2 is used for EGR.

Table 5-21 DDEC-ECU Software 60 (Diagnostic Version 9) Configuration Parameter for Compression Brake and Exhaust Flap Applications - MBE 900 Engine

Configuration for MBE 4000 Compression Brake and Exhaust Brake Applications

The configuration parameters listed in Table 5-22 for **Compression Brake and Exhaust Brake** are for the MBE 4000. These parameters can be configured or changed with VEPS or minidiag2.

Parameter	Description	Range	Recommended Setting	Parameter ID
Engine Brake Configuration	Enables the type of engine brake required	0 = Engine Brake Configuration w/ Compression Brake & Exhaust Flap 1 = Engine Brake Configuration with Compression Brake & Turbo Brake	0 = Low/Med	1 10 13
Engine Brake Stage 1 Mask for Low Braking	Mask determines which device turns on for low braking	64 = Constant Throttle Valve Only 80 = Constant Throttle & Exhaust Flap 81 = Constant Throttle Valve & Turbo Brake High	64	1 10 14
Engine Brake Stage 1 Factor for Low Braking	Factor determines the amount of low braking	0 – 100%	100	1 10 15
Engine Brake Stage 2 Mask for Medium Braking	Mask determines which device turns on for medium braking	64 = Constant Throttle Valve Only 80 = Constant Throttle & Exhaust Flap 81 = Constant Throttle Valve & Turbo Brake High	80	1 10 16
Engine Brake Stage 2 Factor for Medium Braking	Factor determines the amount of medium braking	0 – 100%	100	1 10 17
Engine Brake Stage 3 Mask for High Braking*	Mask determines which device turns on for high braking	64 = Constant Throttle Valve Only 80 = Constant Throttle & Exhaust Flap 81 = Constant Throttle Valve & Turbo Brake High	80	1 10 18
Engine Brake Stage 3 Factor for High Braking	Factor determines the amount of high braking	0 – 100%	100	1 10 19
Engine Brake Transmission Mask		64 = Constant Throttle Valve Only 80 = Constant Throttle & Exhaust Flap 81 = Constant Throttle Valve & Turbo Brake High	64	1 10 20
Engine Brake Transmission Factor	Factor determines the amount of high braking	0–100%	100	1 10 21

*The Engine Brake Stage 3 mask is used when the vehicle is exceeding the Road Speed limit. Engine Brake Stage 3 mask should always be set to a non-zero value for engines with an engine brake. For Constant Throttle only or Exhaust Flap applications, the Stage 3 mask must be the same value as the Stage 2 mask.

Table 5-22 DDEC-VCU Configuration Parameter for Compression Brake and Exhaust Brake Applications - MBE 4000 Engine

For DDEC-ECU software 53 (Diagnostic Version 5), the parameters listed in Table 5-23 for **Compression Brake and Exhaust Brake** applications must be set in the DDEC-ECU and the configuration parameters listed in Table 5-22 must be set in the DDEC-VCU. These parameters can be changed with VEPS or minidiag2.

Parameter	Description	Range	Recommended Setting	Parameter ID
PWM1 – Exhaust Flap Enable	Enables the Exhaust Flap or Turbo Brake on PWM1	0 = No Function 1 = Wastegate Control 2 = Exhaust Flap (VEPS) 3 = Exhaust Flap (minidiag2)	2 for VEPS or 3 for minidiag2	0 06 01
PWM2 – Compression Engine Brake Enable	Enables the Compression brake on PWM2	0 = No Function 1 = Not Used 2 = Compression Brake (VEPS) 3 = Compression Brake (minidiag2)	2 for VEPS or 3 for minidiag2	0 06 02
PWM6	Turbo Brake Sleeve Control	0 = No Function 1 = Not Used 2 = Not Used 3 = Exhaust Flap	0 = No Function	0 35 02

Table 5-23 DDEC-ECU Software 53 (Diagnostic Version 5) Configuration Parameter for Compression Brake and Exhaust Brake Applications - MBE 4000 Engine

For DDEC-ECU software 56 (Diagnostic Version 6), the parameters listed in Table 5-24 for **Compression Brake and Exhaust Brake** applications must be set in the DDEC-ECU and the configuration parameters listed in Table 5-22 must be set in the DDEC-VCU. These parameters can be changed with VEPS or minidiag2.

Parameter	Description	Range	Recommended Setting	Parameter ID
PWM1 – Exhaust Flap Enable	Enables the Exhaust Flap or Turbo Brake on PWM1	0 = No Function 1 = Wastegate Control 2 = Exhaust Flap (VEPS) 3 = Exhaust Flap (minidiag2)	2 for VEPS or 3 for minidiag2	0 03 01
PWM2 – Compression Engine Brake Enable	Enables the Compression brake on PWM2	0 = No Function 1 = Not Used 2 = Compression Brake (VEPS) 3 = Compression Brake (minidiag2)	2 for VEPS or 3 for minidiag2	0 03 02
PWM6	Turbo Brake Sleeve Control	0 = No Function 1 = Not Used 2 = Not Used 3 = Exhaust Flap	0 = No Function	0 03 06

Table 5-24 DDEC-ECU Software 56 (Diagnostic Version 6) Configuration Parameter for Compression Brake and Exhaust Brake Applications - MBE 4000 Engine

For DDEC-ECU software 60 (Diagnostic Version 9), the parameters listed in Table 5-25 for **Compression Brake and Exhaust Brake** applications must be set in the DDEC-ECU and the configuration parameters listed in Table 5-22 must be set in the DDEC-VCU. These parameters can be changed with VEPS or minidiag2.

Parameter	Description	Range	Recommended Settings	Parameter ID
PWM1 (PV1)	MBE 4000 Wastegate Enable	0 = No Function 1 = Wastegate 2 = Not Used 3 = Exhaust Flap	0 = No Function	0 03 01
PWM2 (PV2)	EGR Value Enable	0 = No Function 1 = EGR Valve 2 = Not Used 3 = Engine Brake*	2 for VEPS or 3 for minidiag2	0 03 02
PWM5 (PV5)	Compression Brake Enable	0 = No Function 1 = Not Used 2 = Not Used 3 = Engine Brake†	3 = Compression Brake Enable	0 03 05
PWM6 (PV6)	MBE 4000 Turbo Brake/Exhaust Flap	0 = No Function 1 = Not Used 2 = Not Used 3 = Exhaust Flap or Turbo Brake Sleeve 4 = Future Grid Heater	3 = Exhaust Flap	0 03 06

* Moved to PV5 if PV2 is used for EGR.

† Alternative to PV2 if PV2 is used for EGR.

Table 5-25 DDEC-ECU Software 60 (Diagnostic Version 9) Configuration Parameter for Compression Brake and Exhaust Brake Applications - MBE 4000 Engine

Configuration for Compression Brake and Turbo Brake Applications

The configuration parameters for **Compression Brake and Turbo Brake** applications are listed in Table 5-26. These parameters can be configured or changed with VEPS or minidiag2.

Parameter	Description	Range	Recommended Settings	Parameter ID
Engine Brake Configuration	Enables the type of engine brake required	0 = Engine Brake configuration with Compression Brake & Exhaust flap 1 = Engine Brake Configuration w/ Compression Brake & Turbo Brake	0 = Low/Med	1 10 13
Engine Brake Stage 1 Mask for Low Braking	Mask determines which device turns on for low braking	64 = Constant Throttle Valve Only 80 = Constant Throttle & Exhaust Flap 81 = Constant Throttle Valve & Turbo Brake High	64	1 10 14
Engine Brake Stage 1 Factor for Low Braking	Factor determines the amount of low braking	0 – 100%	100	1 10 15
Engine Brake Stage 2 Mask for Medium Braking	Mask determines which device turns on for medium braking	64 = Constant Throttle Valve Only 80 = Constant Throttle & Exhaust Flap 81 = Constant Throttle Valve & Turbo Brake High	81	1 10 16
Engine Brake Stage 2 Factor for Medium Braking	Factor determines the amount of medium braking	0 – 100%	50	1 10 17
Engine Brake Stage 3 Mask for High Braking*	Mask determines which device turns on for high braking	64 = Constant Throttle Valve Only 80 = Constant Throttle & Exhaust Flap 81 = Constant Throttle Valve & Turbo Brake High	81	1 10 18
Engine Brake Stage 3 Factor for High Braking	Factor determines the amount of high braking	0 – 100%	100	1 10 19
Engine Brake Transmission Mask		64 = Constant Throttle Valve Only 80 = Constant Throttle & Exhaust Flap 81 = Constant Throttle Valve & Turbo Brake High	64	1 10 20
Engine Brake Transmission Factor	Factor determines the amount of high braking	0–100%	100	1 10 21

* The Engine Brake Stage 3 mask is used when the vehicle is exceeding the Road Speed limit. Therefore the Engine Brake Stage 3 mask should always be set to a non-zero value with engine brake. For Constant Throttle only or Exhaust Flap applications, the Stage 3 mask must be the same value as the Stage 2 mask.

Table 5-26 DDEC-VCU Configuration Parameter for Compression Brake and Turbo Brake Applications

For DDEC-ECU software 53 (Diagnostic Version 5), the parameters listed in Table 5-27 for **Compression Brake and Turbo Brake** applications must be set in the DDEC-ECU and the configuration parameters listed in Table 5-26 for Compression Brake and Turbo Brake must be set in the DDEC-VCU. These parameters can be changed with VEPS or minidiag2.

Parameter	Description	Range	Recommended Setting	Parameter ID
PWM1 – Exhaust Flap Enable	Enables the Exhaust Flap or Turbo Brake on PWM1	0 = No Function 1 = Wastegate Control 2 = Exhaust Flap (VEPS) 3 = Exhaust Flap (minidiag2)	1	0 06 01
PWM2 – Compression Engine Brake Enable	Enables the Compression brake on PWM2	0 = No Function 1 = Not Used 2 = Compression Brake (VEPS) 3 = Compression Brake (minidiag2)	2 for VEPS OR 3 for minidiag2	0 06 02
PWM6	Turbo Brake Sleeve Control	0 = No Function 1 = Not Used 2 = Not Used 3 = Exhaust Flap (Turbo Brake Sleeve)	3	0 35 01

Table 5-27 DDEC-ECU Software 53 (Diagnostic Version 5) Parameters for Compression Brake and Turbo Brake Applications

For DDEC-ECU software 56 (Diagnostic Version 6), the parameters listed in Table 5-28 for **Compression Brake and Turbo Brake** applications must be set in the DDEC-ECU and the configuration parameters listed in Table 5-26 must be set in the DDEC-VCU. These parameters can be changed with VEPS or minidiag2.

Parameter	Description	Range	Recommended Setting	Parameter ID
PWM1 – Exhaust Flap Enable	Enables the Exhaust Flap or Turbo Brake on PWM1	0 = No Function 1 = Wastegate Control 2 = Exhaust Flap (VEPS) 3 = Exhaust Flap (minidiag2)	1	0 03 01
PWM2 – Compression Engine Brake Enable	Enables the Compression brake on PWM2	0 = No Function 1 = Not Used 2 = Compression Brake (VEPS) 3 = Compression Brake (minidiag2)	2 for VEPS OR 3 for minidiag2	0 03 02
PWM6	Turbo Brake Sleeve Control	0 = No Function 1 = Not Used 2 = Not Used 3 = Exhaust Flap (Turbo Brake Sleeve)	3	0 03 06

Table 5-28 DDEC-ECU Software 56 (Diagnostic Version 6) Parameters for Compression Brake and Turbo Brake Applications

For DDEC-ECU software 60 (Diagnostic Version 9), the parameters listed in Table 5-29 for **Compression Brake and Exhaust Flap** applications must be set in the DDEC-ECU and the configuration parameters listed in Table 5-26 must be set in the DDEC-VCU. These parameters can be changed with VEPS or minidiag2.

Parameter	Description	Range	Recommended Settings	Parameter ID
PWM1 (PV1)	MBR 900 Exhaust Flap Enable/MBE 4000 Wastegate Enable	0 = No Function 1 = Wastegate 2 = Not Used 3 = Exhaust Flap*	1 = Wastegate	0 03 01
PWM2 (PV2)	EGR Value Enable	0 = No Function 1 = EGR Valve 2 = Not Used 3 = Engine Brake†	2 for VEPS or 3 for minidiag2	0 03 02
PWM5 (PV5)	Compression Brake Enable	0 = No Function 1 = Not Used 2 = Not Used 3 = Engine Brake‡	3 = Compression Brake Enable	0 03 05
PWM6 (PV6)	MBE 4000 Turbo Brake/Exhaust Flap	0 = No Function 1 = Not Used 2 = Not Used 3 = Exhaust Flap or Turbo Brake Sleeve 4 = Future Grid Heater	3 = Turbo Brake Sleeve	0 03 06

*MBE 900 EGR engine

† Moved to PV5 if PV2 is used for EGR.

‡ Alternative to PV2 if PV2 is used for EGR.

Table 5-29 DDEC-ECU Software 60 (Diagnostic Version 9) Configuration Parameter for Compression Brake and Turbo Brake Applications

Cruise Control of Engine Brake Option

The parameters listed in Table 5-30 can be set by VEPS or minidiag2 for the Engine Brake option with Cruise Control.

Parameter	Description	Range	Default	Parameter ID	Access
CRUISE CONTROL ENGINE BRAKE	Enables or disables the feature that allows the engine brake to be used while on cruise control if the vehicle exceeds the cruise set speed.	0 = Disable 1 = Enable	0	1 10 06	VEPS, Nexiq DDR, DDDL, DRS, or minidiag2
MAX CRUISE OVERSPEED FOR LOW ENGINE BRAKE	Engine Brake LOW will be activated when the road speed exceeds the maximum over speed limit above the cruise set speed.	0–48 km/hr	5 km/hr	1 10 07	VEPS, DRS, minidiag2
MIN CRUISE OVERSPEED FOR LOW ENGINE BRAKE	Engine Brake LOW will be deactivated when the road speed falls under the minimum over speed limit above the cruise set speed for engine brake low.	0–48 km/hr	2 km/hr	1 10 08	VEPS, DRS, minidiag2
MAX CRUISE OVERSPEED FOR HIGH ENGINE BRAKE	Engine Brake HIGH will be activated when the road speed exceeds the maximum over speed limit above the cruise set speed.	0–48 km/hr	10 km/hr	1 10 11	VEPS, DRS, minidiag2
MIN CRUISE OVERSPEED FOR HIGH ENGINE BRAKE	Engine Brake HIGH will be deactivated when the road speed falls under the minimum over speed limit above the cruise set speed for engine brake low.	0–48 km/hr	6 km/hr	1 10 12	VEPS, DRS, minidiag2
MAX CRUISE OVERSPEED FOR MED ENGINE BRAKE	Engine Brake MED/HIGH will be activated when the road speed exceeds the maximum over speed limit above the cruise set speed.	0–48 km/hr	5 km/hr	1 10 10	VEPS, DRS, minidiag2
MIN CRUISE OVERSPEED FOR MED ENGINE BRAKE	Engine Brake MED/HIGH will be deactivated when the road speed falls under the minimum over speed limit above the cruise set speed for engine brake low	0–48 km/hr	7 km/hr	1 10 09	VEPS, DRS, minidiag2

Table 5-30 Cruise Control Engine Brake Parameters

Engine Brake Option with Service Brake

The parameter listed in Table 5-31 can be set by VEPS, DRS, Nexiq DDR, DDDL, or minidiag2.

Parameter	Description	Choice	Default	Parameter ID
Engine Brake Service Brake Enable	When this function is enabled, an input from the service brake is required in order to activate the engine brake.	0 = Disable 1 = Enable	0	1 10 03

Table 5-31 Service Brake Control of Engine Brake Parameter

Engine Brakes Option with Minimum KPH

The minimum KPH for the Engine Brakes option is listed in Table 5-32.

Parameter	Description	Range	Default	Parameter ID	Access
Minimum Road Speed for Engine Brake Operation	The minimum vehicle speed required before engine braking will occur.	0-200 km/hr	0 km/hr	1 10 04	Nexiq DDR, DDDL, DRS, VEPS, or minidiag2
Engine Speed Min RPM	Minimum engine speed for engine brake operation	0-4000 RPM	1100 RPM	1 10 01	VEPS, DRS, minidiag2

Table 5-32 Minimum KPH for Engine Brakes Option

Engine Brake Option with Vehicle Speed Limit

Engine Brake with vehicle speed limiting can be configured by Nexiq DDR, DDDL, DRS, VEPS or minidiag2 as listed in Table 5-33.

Parameter	Description	Range	Choice	Default	Parameter ID
Road Speed Limiting With Engine Brake	Offset to turn on engine brakes when the road speed limit is exceeded.	0-48 km/hr	0 = Disable	5 km/hr	1 10 05

Table 5-33 Vehicle Speed Limiting for Engine Brake Option

5.6.3 INTERACTION WITH OTHER FEATURE

DDEC for MBE 900 and MBE 4000 will respond to requests from other vehicle systems via the J1939 data link to disable or enable engine brake.

5.7 ENGINE PROTECTION

DDEC for MBE 900 and MBE 4000 engine protection system monitors all engine sensors and electronic components, and recognizes system malfunctions. If a critical fault is detected, the Amber Warning Lamp (AWL) and Red Stop Lamp (RSL) illuminate. The malfunction codes are logged into the memory of the DDEC-ECU.

The standard parameters which are monitored for engine protection are:

- Low coolant level
- High coolant temperature
- Low oil pressure
- High air inlet temperature

5.7.1 OPERATION

Engine protection is a vital part of DDEC-ECU/DDEC-VCU programming and software. The DDEC-ECU monitors coolant level, various pressures and temperatures, and compares these parameters against the allowable limits to determine when a critical fault is reached. The AWL is illuminated and a code logged if there is an electronic system fault. This indicates the problem should be diagnosed as soon as possible. The DDEC-VCU illuminates the AWL and RSL and stores a malfunction code if a potentially engine damaging fault is detected. Once a critical fault is reached, the AWL and RSL are illuminated and a 60 or 30 second timer starts a countdown to the desired level of protection. The AWL will flash for 20 seconds (programmable) and the RSL will flash for 10 seconds (programmable) before the engine shuts down. The flashing will occur only if shutdown is enabled. Temperature and pressure limits are established in the engine's calibration and may differ slightly from one engine model to another.

Engine protection consists of different protection levels:

- Rampdown (Derate)
- Rampdown (Derate)/Shutdown

Rampdown (Derate)

The AWL and RSL illuminate if a fault is detected. The DDEC-ECU can reduce torque. See Figure 5-2 and Figure 5-3. No shutdown will occur.

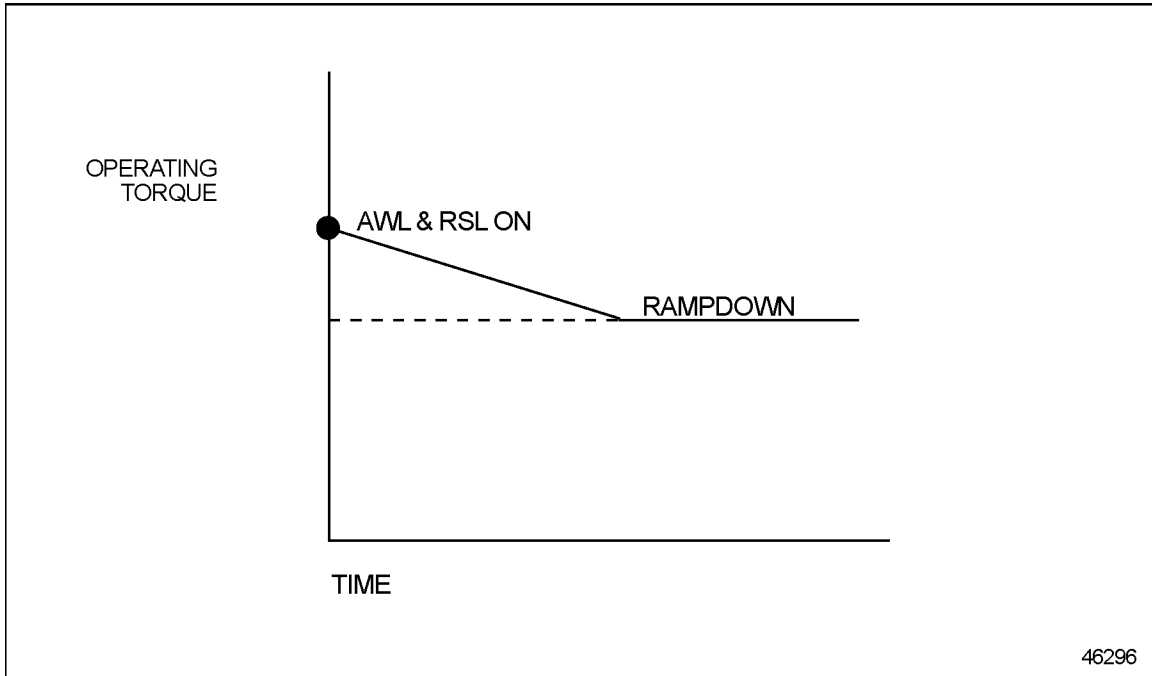


Figure 5-2 Rampdown Option

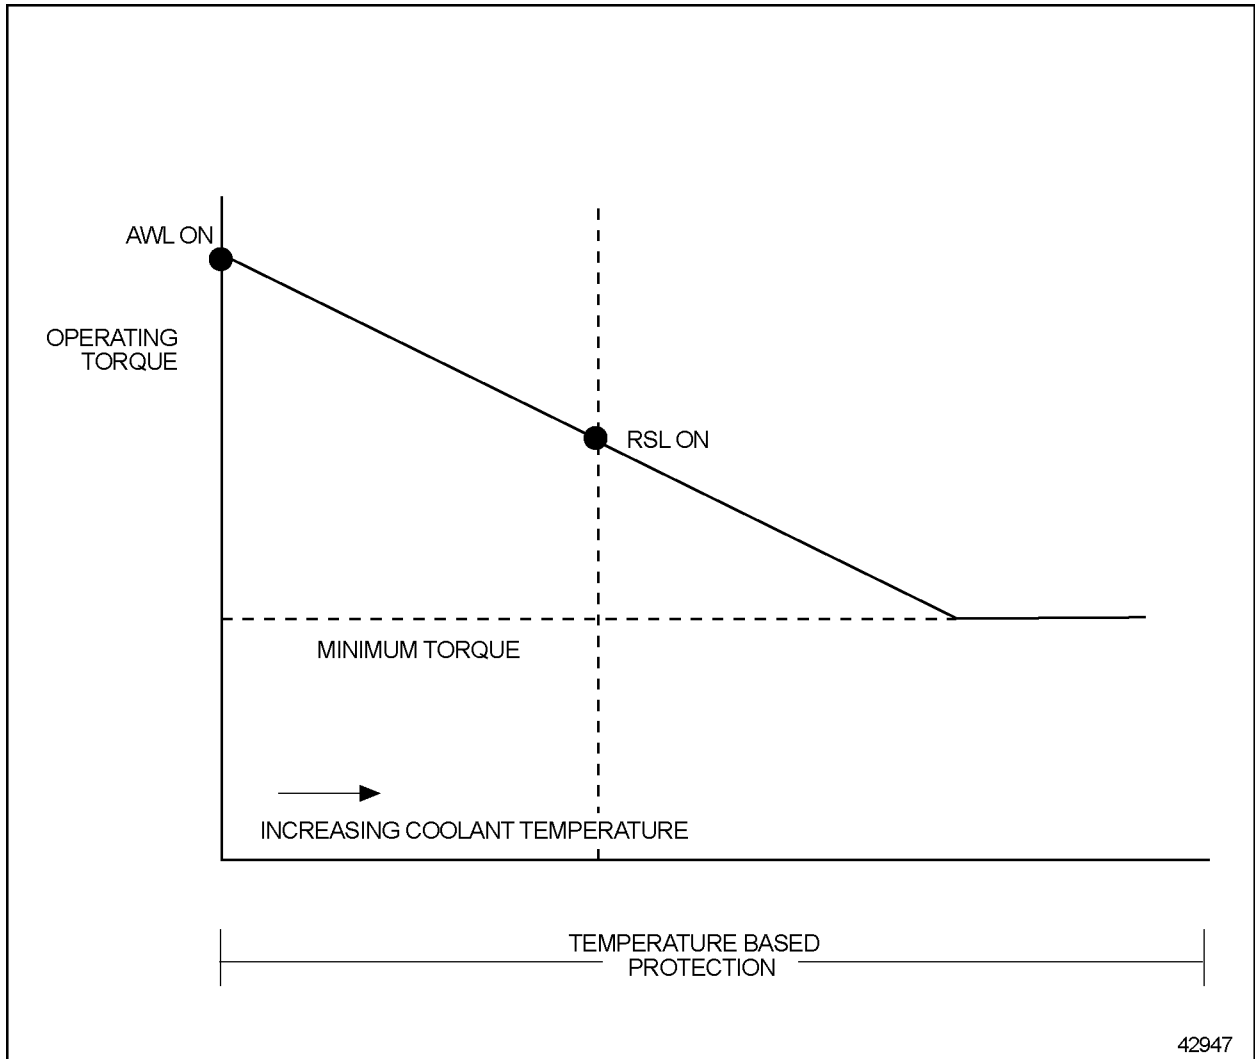


Figure 5-3 Coolant Overtemperature Rampdown (Derate)

Shutdown

The engine shuts down 60 seconds after the RSL is illuminated for coolant level or coolant temperature. The engine shuts down 30 seconds after the RSL is illuminated for oil pressure (see Figure 5-4). (The initial torque and/or speed which is used for reduction, is the torque and/or speed which occurred immediately prior to the fault condition.) The Stop Engine Override Switch is available to prevent engine shutdown at the operator's discretion.

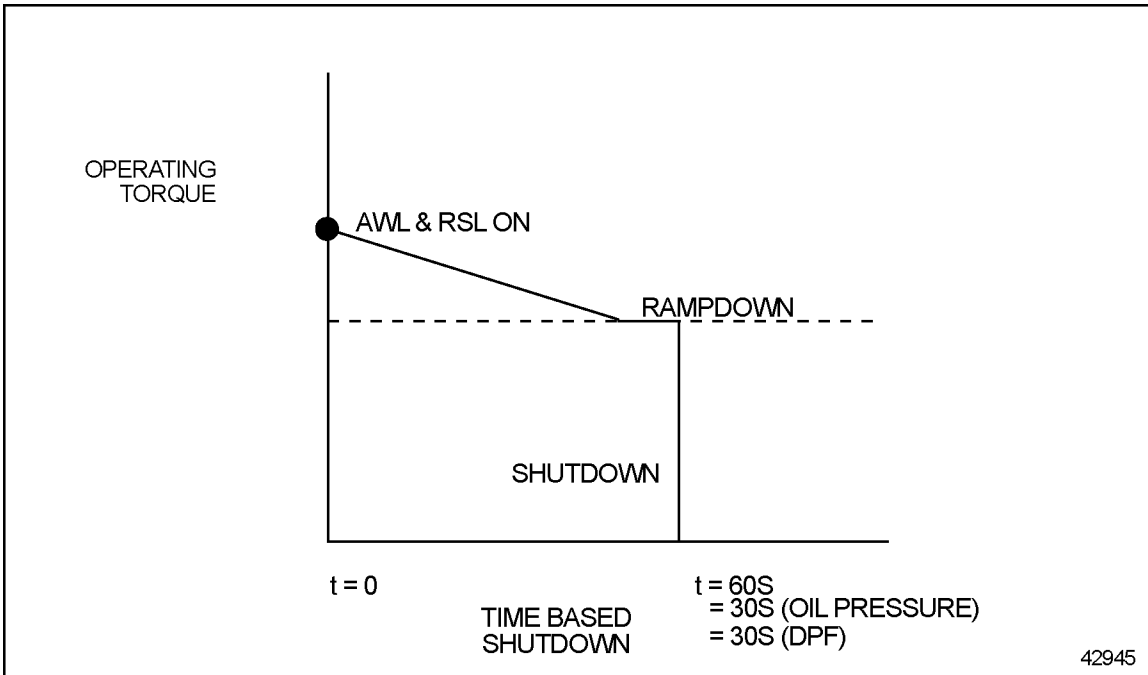


Figure 5-4 Engine Shutdown

See Figure 5-5 for coolant temperature.

An SEO Switch is required when this engine protection option is selected. Refer to section 5.7.2. The SEO options are available to prevent engine shutdown at the operator's discretion.

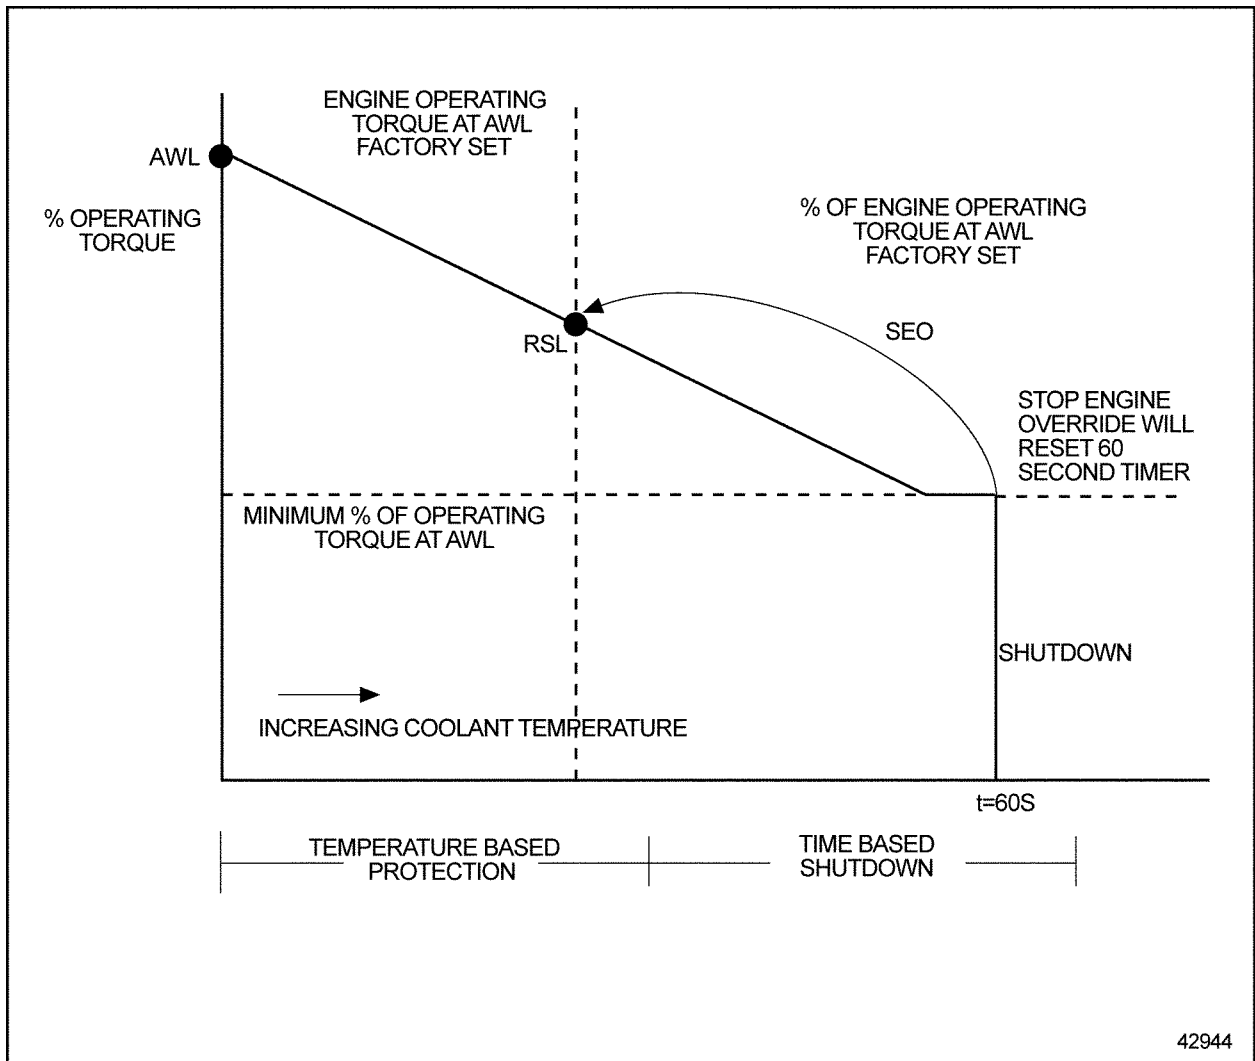


Figure 5-5 Coolant Overtemperature and Rampdown/Shutdown Protection with Stop Engine Override

5.7.2 STOP ENGINE OVERRIDE OPTION

The Stop Engine Override Switch is used for a momentary override. The DDEC-ECU will record the number of times the override is activated after a fault occurs.

Momentary Override - An SEO switch is used to override the shutdown sequence (see Figure 5-6). This override resets the 60 second (30 seconds for oil pressure) shutdown timer, restoring power to the level when the RSL was illuminated. The switch must be recycled after five seconds to obtain a subsequent override.

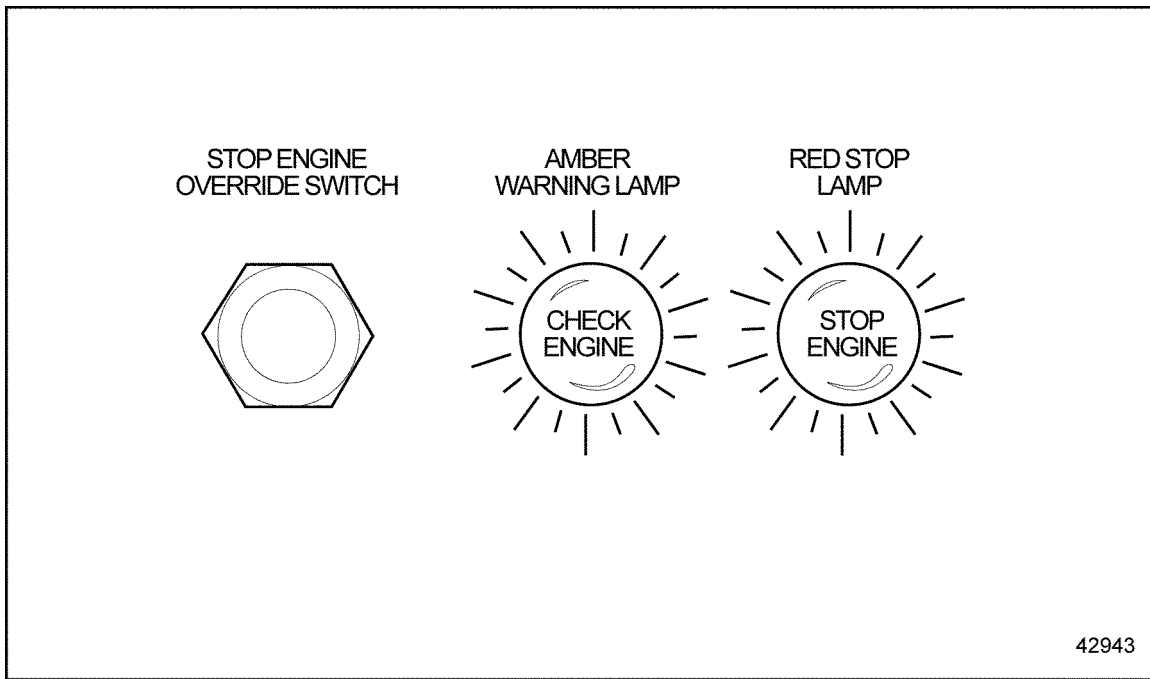


Figure 5-6 Typical SEO Switch and Warning Lamps

NOTE:

The operator has the responsibility to take action to avoid engine damage.

5.7.3 PROGRAMMING FLEXIBILITY

All DDEC-ECUs are programmed with pressure, temperature, and level protection limits. The level of protection can be one of the two engine protection features (Warning, or Rampdown/Shutdown) for each parameter monitored by the DDEC-ECU. These can be set with VEPS or minidiag2.

DDEC for MBE 900 and MBE 4000 engine protection system parameters are listed in Table 5-34 .

Parameter	Description	Choice/Range	Default	Parameter ID	Access
Enable Engine Protection Shutdown on Coolant Temperature	Enable/Disable shutdown for high coolant temperature	0 = Disable 1 = Enable	1 = Enable	1 18 01	Nexiq DDR, DDDL, DRS, VEPS, or minidiag2
Enable Engine Protection Shutdown on Coolant Level	Enable/Disable shutdown for low coolant level	0 = Disable 1 = Enable	0 = Disable	1 18 02	Nexiq DDR, DDDL, DRS, VEPS, or minidiag2
Enable Engine Protection Shutdown on Oil Pressure	Enable/Disable shutdown for low oil pressure	0 = Disable 1 = Enable	1 = Enable	1 10 03	Nexiq DDR, DDDL, DRS, VEPS, or minidiag2
Engine Protection Shutdown Time	Time after an engine protection event the engine will shutdown.	1–120 sec	60 sec	1 18 05	VEPS or minidiag2
Engine Protection Shutdown Time for Oil Pressure	Time after an oil pressure engine protection event the engine will shutdown.	1–120 sec	30 sec	1 18 06	VEPS or minidiag2
Enable Counter for Engine Protection Overrides	Holds the count of shutdown overrides that have occurred (Reset with minidiag2)	0–255	0	1 18 07	VEPS, DRS or minidiag2
AWL Engine Protection Shutdown Time	Time for the AWL to flash before the shutdown occurs	3–120 sec	20 sec	1 18 08	VEPS, DRS or minidiag2
RSL Engine Protection Shutdown Time	Time for the RSL to flash before the shutdown occurs	3–120 sec	10 sec	1 18 09	VEPS, DRS or minidiag2

Table 5-34 Engine Protection

THIS PAGE INTENTIONALLY LEFT BLANK

5.8 ENGINE STARTER CONTROL

MBE engine starters may be enabled by either the ignition-run key switch (KL-50) (see Figure 5-7) or the DDEC-ECU (see Figure 5-8).

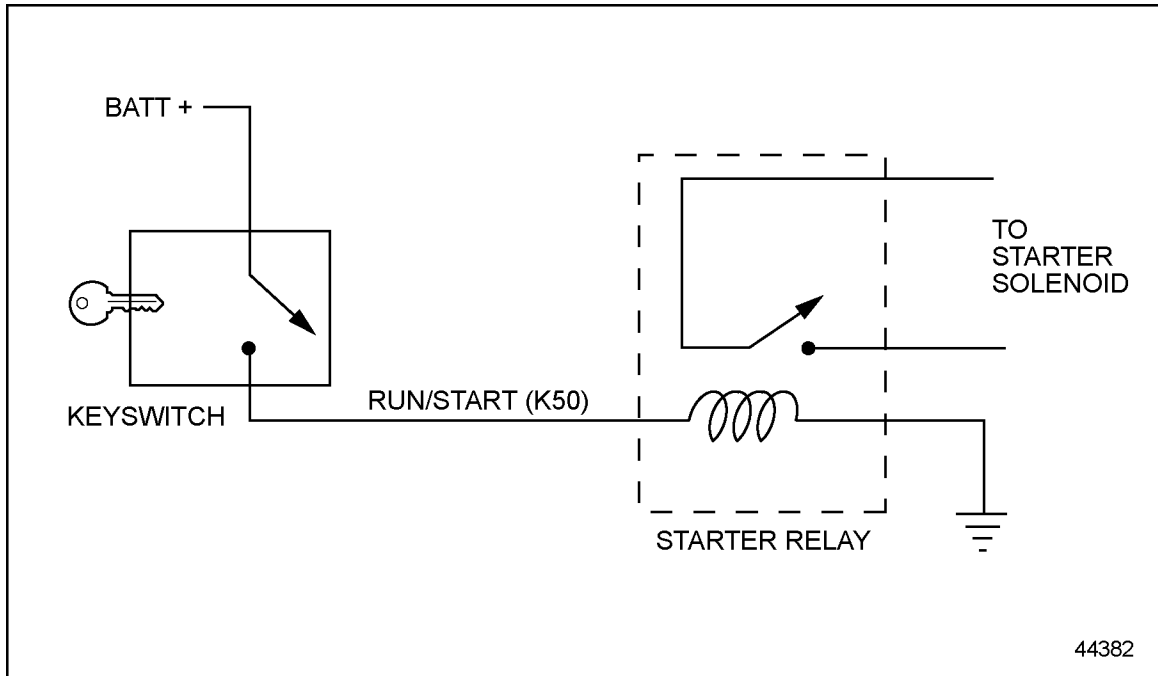


Figure 5-7 Key Switch Starter Control

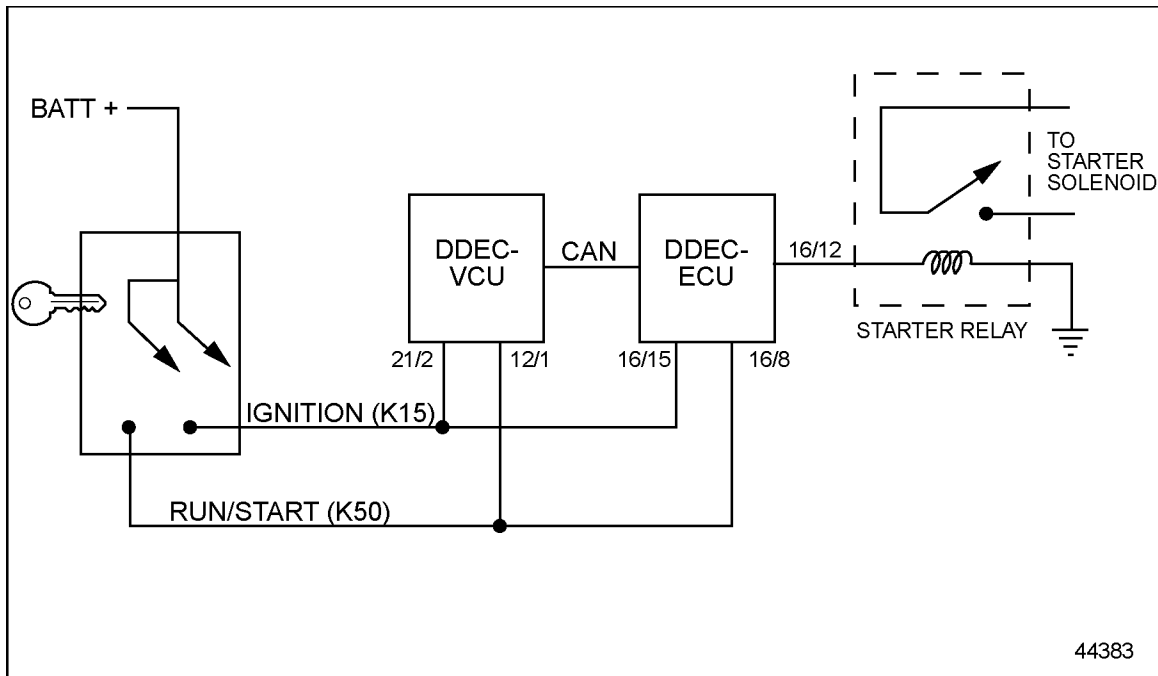


Figure 5-8 DDEC-ECU Starter Control

5.8.1 PROGRAMMING REQUIREMENTS AND FLEXIBILITY

The Engine Starter Control settings are listed in Table 5-35.

Parameter	Settings	De- fault	Parameter ID DDEC-ECU Software 53	Parameter ID DDEC-ECU Software 56	Parameter ID DDEC-ECU Software 56
Starter Type (JE / KB)	0 = Starter activated via DDEC-ECU 1 = Starter activated via key switch	0	0 06 09	0 01 03	0 01 03

Table 5-35 Engine Starter Control Settings

NOTE:

If the parameter is set for DDEC-ECU Starter Control and the starter is wired for Key Switch control, the engine will crank but will not start.

5.9 FAN CONTROL

The purpose of the Fan Control feature is to electronically control engine cooling fan activation and to provide a load for vehicle retardation, when required. DDEC for MBE 900 and MBE 4000 Fan Controls are designed to optimally control the engine cooling fan(s) based on engine cooling requirements. Fan Controls are designed to use other system inputs such as A/C pressure switches and operator requested fan operation.

NOTE:

Fan Controls are required for some on-highway truck and on-highway bus applications.

5.9.1 OPERATION

The DDEC-ECU continuously monitors and compares the coolant, oil, and intake manifold air temperature, engine torque, engine operation mode, and various optional inputs to calibrated levels stored within the DDEC-ECU. These limits are factory configured based on application.

When these temperature levels exceed the preset fan ON temperature value, the DDEC-ECU will enable the fan control digital output(s) that activate the fan. The fan will remain on, cooling the engine with the increased air flow until the temperature levels reach the preset fan OFF temperature. At this point, the DDEC-ECU will switch fan control to battery ground, which will activate the fan, effectively maintaining the coolant or intake manifold air temperature between the two preset levels.

DDEC for MBE 900 and MBE 4000 provides fan control for four different fan configurations:

- Single fan (refer to section 5.9.2, page 5-50)
- Dual fans (refer to section 5.9.3, page 5-52)
- Two-speed fan (refer to section 5.9.4, page 5-54)
- Variable speed single fan (PWM) (refer to section 5.9.5, page 5-56)

NOTE:

The MBE 900 on-highway engine cannot be configured for a two-speed fan due to the PV3/PV4 splice contained in the engine harness.

NOTE:

When the manifold air temperature or coolant temperature reaches the alarm limit, the AWL will illuminate and the fan will be enabled. The DDEC-ECU fan threshold parameters must be set below the alarm limits to insure the fan is enabled before the alarm level is reached.

5.9.2 SINGLE FAN

The single-fan control uses one digital output to drive a single-speed fan. The digital output is called Fan Control #1. Fan Control #1 is deactivated to turn the fan OFF. The fan remains ON for a minimum of 10 seconds when turned ON. The fan output will not be enabled until five seconds after the engine has started.

NOTE:

Fan output circuits are designed to sink no more than 2.0 A (DC) current.

Fan Control #1 is enabled (grounded) when at least one of the following conditions occur:

- Coolant temperature above factory set levels
- Intake manifold temperature above factory set levels
- Air conditioner is active (OEM supplied A/C switch is opened) – optional
- Coolant, or intake manifold air temperature sensor fails
- Engine Brake is active at high level
- Fan Control Override Switch is enabled
- VSG is enabled and active – optional

The digital inputs and outputs for a single fan are listed in Table 5-36.

Fan State	Fan Control Output 1	A/C Input	VSG Active	Override Input	Engine Brake Status	Primary Control
Off	Open	Grounded	Off	Open	Not in High Mode	Intake Manifold or Coolant Temperature
On	Grounded	Grounded	Off	Open	Not in High Mode	Intake Manifold or Coolant Temperature
On	Grounded	Don't Care	Don't Care	Don't Care	Don't Care	Sensor Fault
On	Grounded	Open	Don't Care	Don't Care	Don't Care	A/C Switch
On	Grounded	Don't Care	On	Don't Care	Don't Care	VSG Active
On	Grounded	Don't Care	Don't Care	Grounded	Don't Care	Fan Override Switch
On	Grounded	Don't Care	Don't Care	Don't Care	High Mode	Engine Brake High

Table 5-36 Single Fan Digital Inputs and Outputs

Single Speed Fan Installation

This section provides a schematic of the specific connection from the DDEC-ECU to the fan. See Figure 5-9 for the EGR engines and Figure 5-10 and Figure 5-11 for the non-EGR engines.

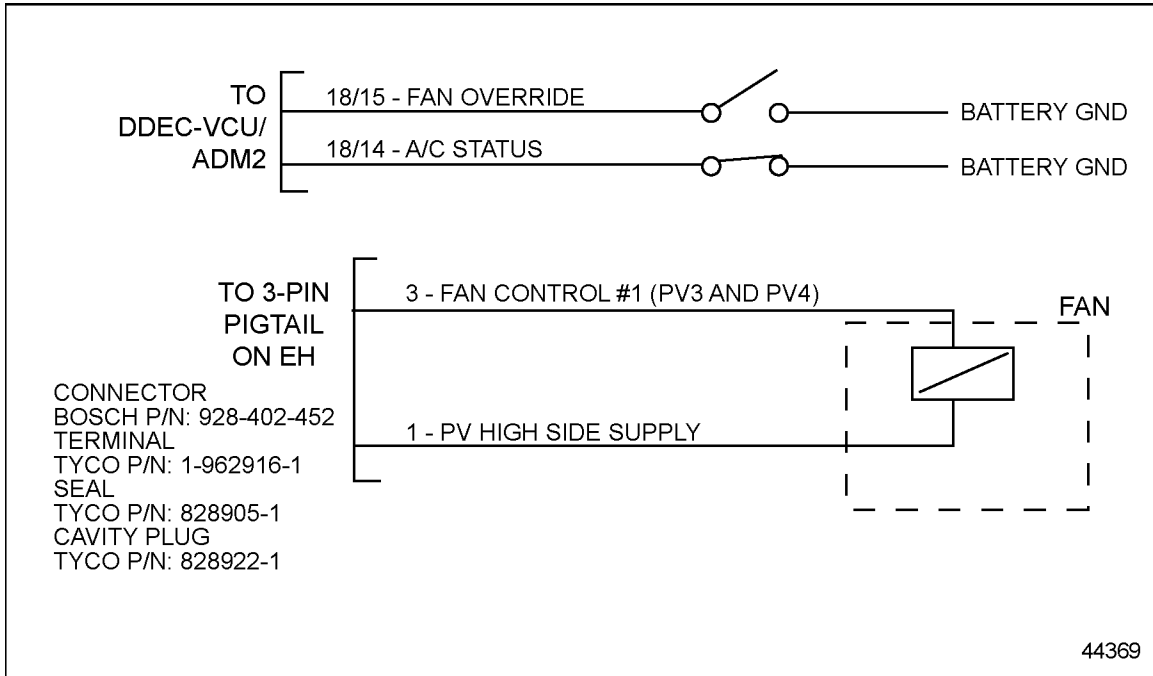


Figure 5-9 Single Speed Fan (Fan Type 4) — MBE 900 EGR Engine and MBE 4000 EGR Engine

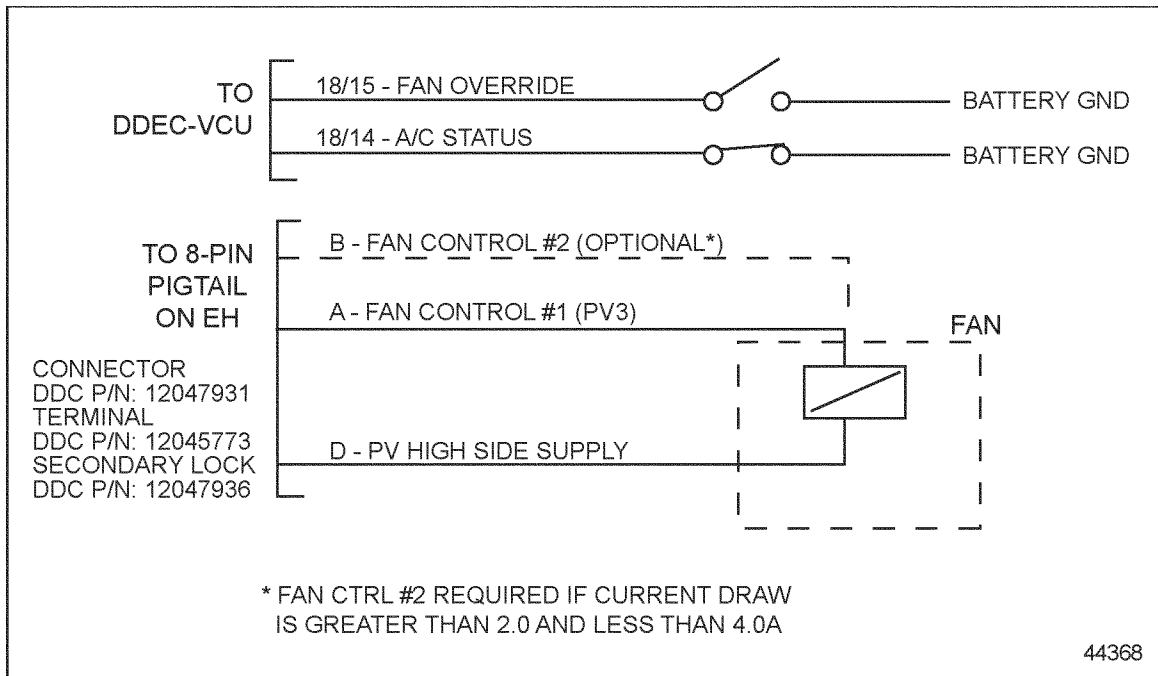


Figure 5-10 Single Speed Fan (Fan Type 4) – MBE 4000 Non-EGR Engine

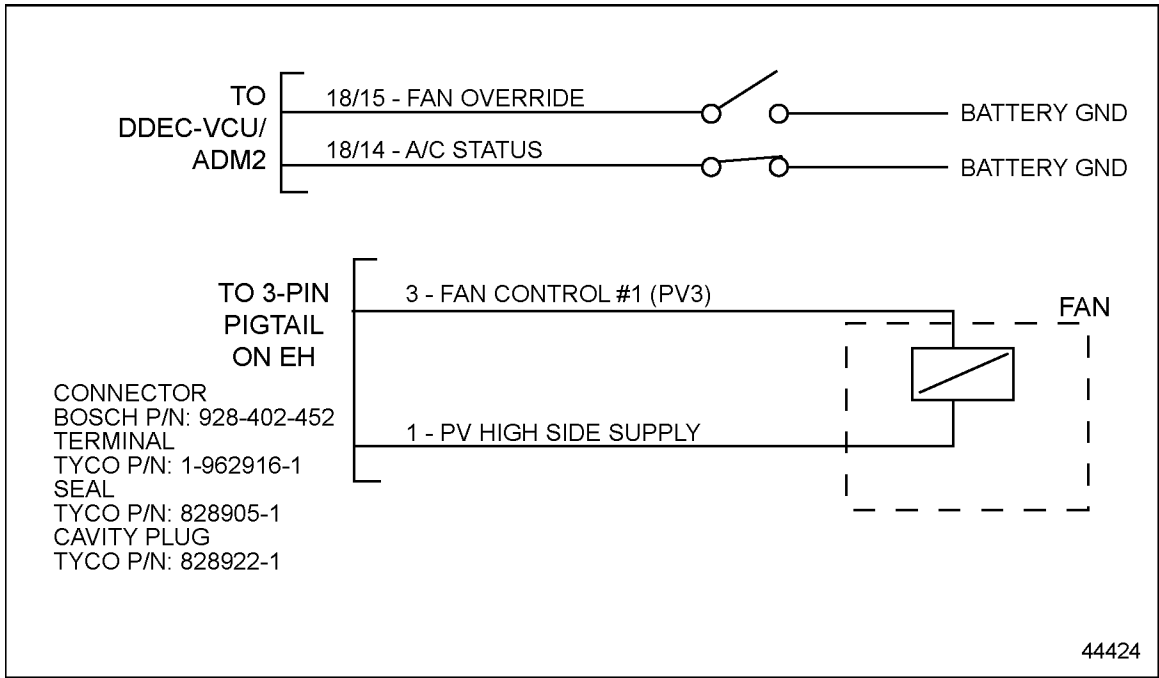


Figure 5-11 Single Speed Fan (Fan Type 4) – MBE 900 Engine

Compatible fans may be obtained from several vendors.

5.9.3 DUAL FANS

Dual fans and two-speed fans are not available for the MBE 4000 EGR engine and the MBE 900 EGR engine due to the PV3/PV4 splice in the Engine Harness. The splice is required to meet current requirements of single-speed Horton fans.

This configuration uses two digital outputs, Fan Control #1 and Fan Control #2, to drive two separate single-speed fans. Fan Control #1 and Fan Control #2 are opened to turn OFF each fan respectively. The fan remains on for 30 seconds whenever it is turned ON. The fan outputs will not be enabled until five seconds after the engine has started.

NOTE:

Fan output circuits are designed to sink no more than 2.0 A (DC) current.

The two fans are independent of one another and are controlled by different conditions. Both fans will be activated when either the Fan Control Override is enabled or when the conditions are met for Fan Engine Brake.

Fan Control #1 is enabled (grounded) when at least one of the following conditions occur:

- Intake manifold or coolant temperature above factory set levels
- Intake manifold or coolant temperature sensor fails
- Air conditioner is active (OEM supplied A/C switch is opened) – optional
- Engine Brake level is active at high level
- Fan control override switch is enabled
- VSG is enabled and active – optional

Fan control #2 is enabled (grounded) when one of the following conditions occur:

- Intake manifold or coolant temperature above DDC factory set levels
- Intake manifold or coolant temperature sensor fails
- Engine Brake level is active at high level
- Fan control override switch is enabled
- VSG is enabled and active – optional

The digital inputs and outputs for dual fans are listed in Table 5-37.

Fan State	Fan Control Output 1	Fan Control Output 2	A/C Input	VSG Status	Override Input	Engine Brake Status	Primary Control
1-On 2-On	Grounded	Grounded	Grounded	Off	Open	Not in High Mode	Engine Temperature Sensors
1-On 2-Off	Grounded	Open	Grounded	Off	Open	Not in High Mode	Engine Temperature Sensors
1-Off 2-On	Open	Grounded	Grounded	Off	Open	Not in High Mode	Engine Temperature Sensors
1-Off 2-Off	Open	Open	Grounded	Off	Open	Not in High Mode	Engine Temperature Sensors
1-On 2-Off	Grounded	Open	Grounded	Off	Open	Not in High Mode	Sensor Fault Low
1-On 2-On	Grounded	Grounded	Don't Care	Don't Care	Don't Care	Don't Care	Sensor Fault High
1-On 2-On	Grounded	Grounded	Open	Don't Care	Don't Care	Don't Care	A/C Switch
1-On 2-On	Grounded	Grounded	Don't Care	Don't Care	Open	Don't Care	Fan Override Switch
1-On 2-On	Grounded	Grounded	Don't Care	Don't Care	Don't Care	High Mode	Engine Brake
1-On 2-On	Grounded	Grounded	Don't Care	Active	Don't Care	Don't Care	VSG Status

Table 5-37 Dual Fans Digital Inputs and Outputs

Dual Fans Installation

See Figure 5-12 for fan installation for the non-EGR MBE 4000 engine. The EGR MBE 4000 does not support dual fans.

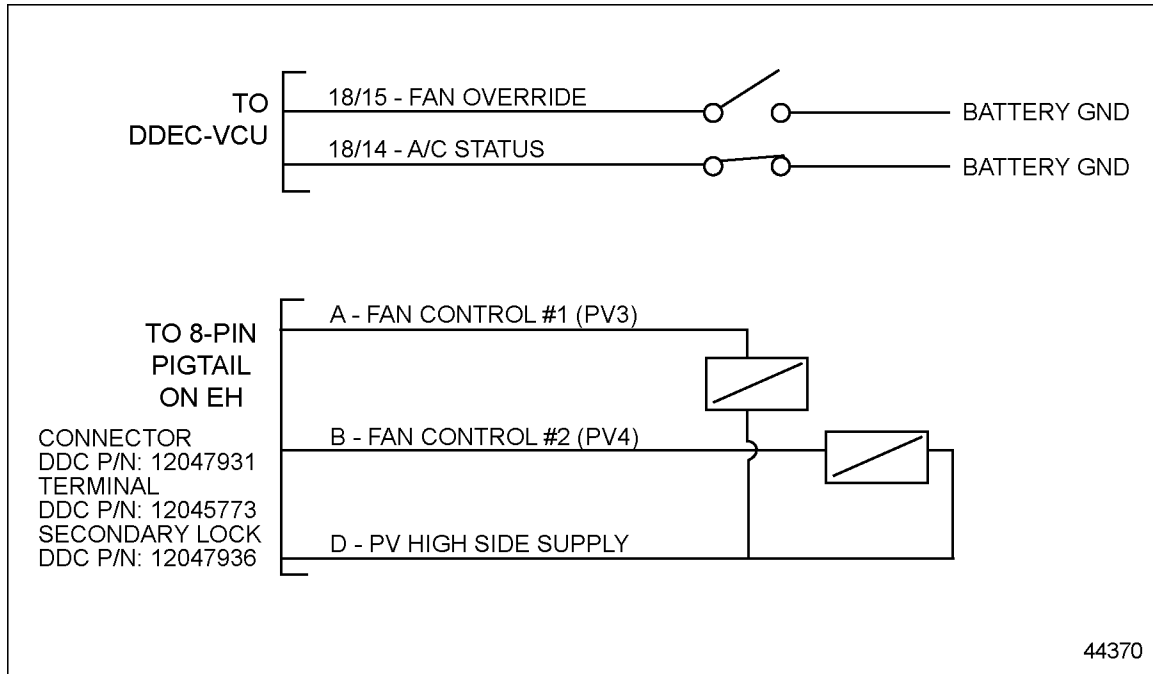


Figure 5-12 Dual Fan (Fan Type 6) – MBE 4000 Non-EGR Only

5.9.4 TWO-SPEED FAN

This configuration uses two digital outputs, Fan Control #1 and Fan Control #2, to drive a two-speed fan. When Fan Control #1 output is grounded, the fan operates in low-speed mode. When Fan Control #1 and Fan Control #2 are both grounded, the fan operates in high-speed mode.

NOTE:

Fan output circuits are designed to sink no more than 2.0 A (DC) current.

Fan Control #1 is enabled (grounded) when at least one of the following conditions occur:

- Coolant temperature above factory set levels
- Intake manifold air temperature above factory set levels

Fan control #2 is enabled (grounded) when one of the following conditions occur:

- Coolant temperature above factory set levels
- Intake manifold air temperature above factory set levels
- Coolant, or intake manifold air temperature sensor fails
- Air conditioner is active (OEM supplied A/C switch is opened) – optional
- Engine Brake level is active at high level
- Fan control override switch is enabled
- VSG enabled and active – optional

The digital inputs and outputs for a two-speed fan are listed in Table 5-38.

Fan State	Fan Control Output 1	Fan Control Output 2	A/C Input	VSG Status	Override Input	Engine Brake Status	Primary Control
Off	Open	Open	Grounded	Off	Open	Not in High Mode	Engine Temperature Sensors
Low	Grounded	Open	Grounded	Off	Open	Not in High Mode	Engine Temperature Sensors
High	Grounded	Grounded	Grounded	Off	Open	Not in High Mode	Engine Temperature Sensors
Low	Grounded	Open	Grounded	Off	Open	Not in High Mode	Sensor Fault Low
High	Grounded	Grounded	Don't Care	Don't Care	Don't Care	Don't Care	Sensor Fault High
High	Grounded	Grounded	Open	Don't Care	Don't Care	Don't Care	A/C Switch
High	Grounded	Grounded	Don't Care	Don't Care	Open	Don't Care	Fan Override Switch
High	Grounded	Grounded	Don't Care	Don't Care	Don't Care	High Mode	Engine Brake
High	Grounded	Grounded	Don't Care	Active	Don't Care	Don't Care	VSG Status

Table 5-38 Two-speed Fan Digital Inputs and Outputs

Two-speed Fan Installation

See Figure 5-13 for two-speed fan installation for MBE 4000 non-EGR engines. MBE 4000 EGR engines do not support two-speed fans.

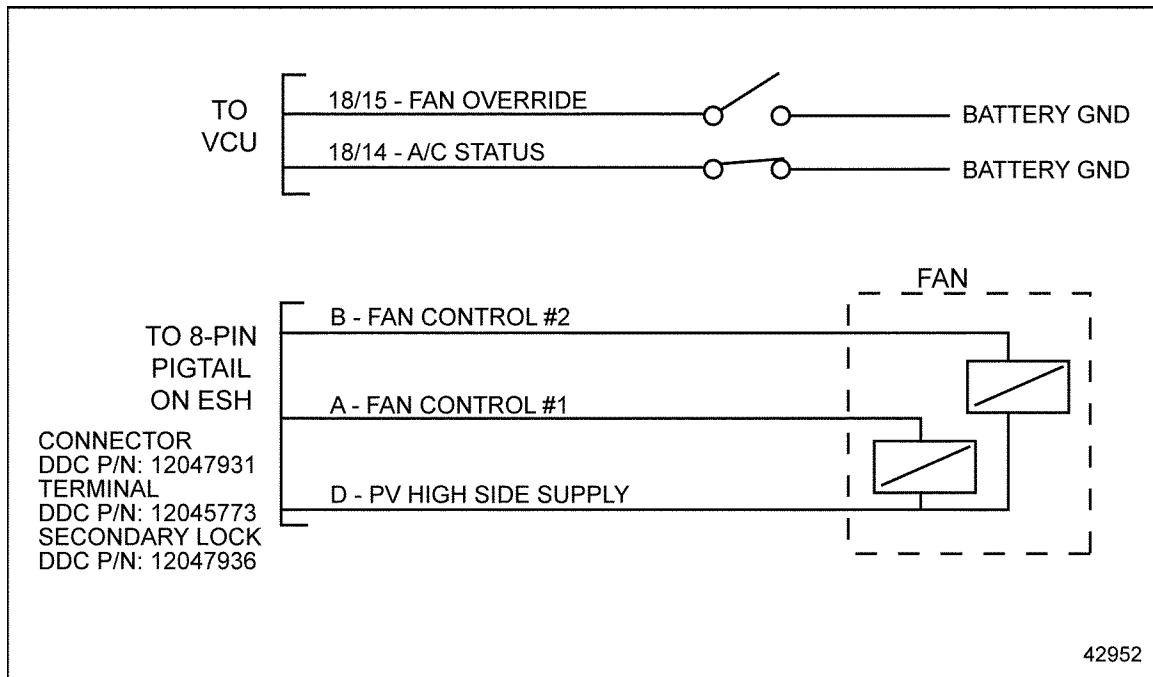


Figure 5-13 Two-speed Fan (Fan type 0 or 1) – MBE 4000 Non-EGR Engine

5.9.5 VARIABLE SPEED SINGLE-FAN

DDEC for MBE 900 and MBE 4000 uses a pulse width modulated (PWM) output to drive a variable speed fan.

The fan may be enabled by specific engine temperature sensors and various other inputs. The fan will ramp up to the requested speed in order to reduce noise, shock-loading, and belt slippage. If the fan is turned on for any reason other than high temperature, it will ramp up to the full fan speed (i.e. 5% or 10% duty cycle, application dependent). A decrease in fan speed will occur after a short time delay and will step down to the value dictated by the highest sensor request. If the A/C switch is opened, the fan will increase speed at the ramp rate until it is at a maximum. After the A/C switch is grounded the fan will remain on for a short time delay and then turn off.

NOTE:

Fan output circuits are designed to sink no more than 2.0 A (DC) current.

The PWM output is initiated when at least one of the following conditions occur:

- Intake manifold or coolant temperatures above factory set limits
- Air conditioner is active (OEM supplied A/C switch is opened) – optional
- Intake manifold or coolant temperature sensor fails
- Fan Control Override Switch is enabled
- VSG is enabled and active – optional

The digital inputs and outputs for PWM fan control are listed in Table 5-39.

Fan State	PWM Output	A/C Input	VSG Status	Override Input	Engine Brake Status	Primary Control
Off	Open >31% Duty Cycle	Grounded	Off	Open	Not in High Mode	Engine Temperature Sensors
On	Modulated	Grounded	Off	Open	Not in High Mode	Engine Temperature Sensors
On	Modulated	Grounded	Off	Open	Not in High Mode	Sensor Fault
Max Speed	Grounded <6% Duty Cycle	Grounded	Off	Open	Not in High Mode	Sensor Fault
Max Speed	Grounded <6% Duty Cycle	Open	Don't Care	Don't Care	Don't Care	A/C Switch
Max Speed	Grounded <6% Duty Cycle	Don't Care	Don't Care	Open	Don't Care	Fan Override Switch
Max Speed	Grounded <6% Duty Cycle	Don't Care	Don't Care	Don't Care	High Mode	Engine Brake
Max Speed	Grounded <6% Duty Cycle	Don't Care	Active	Don't Care	Don't Care	VSG Status

Table 5-39 PWM Fan Control Digital Inputs and Outputs

Installation

See Figure 5-14 and Figure 5-15 for variable-speed fan installation.

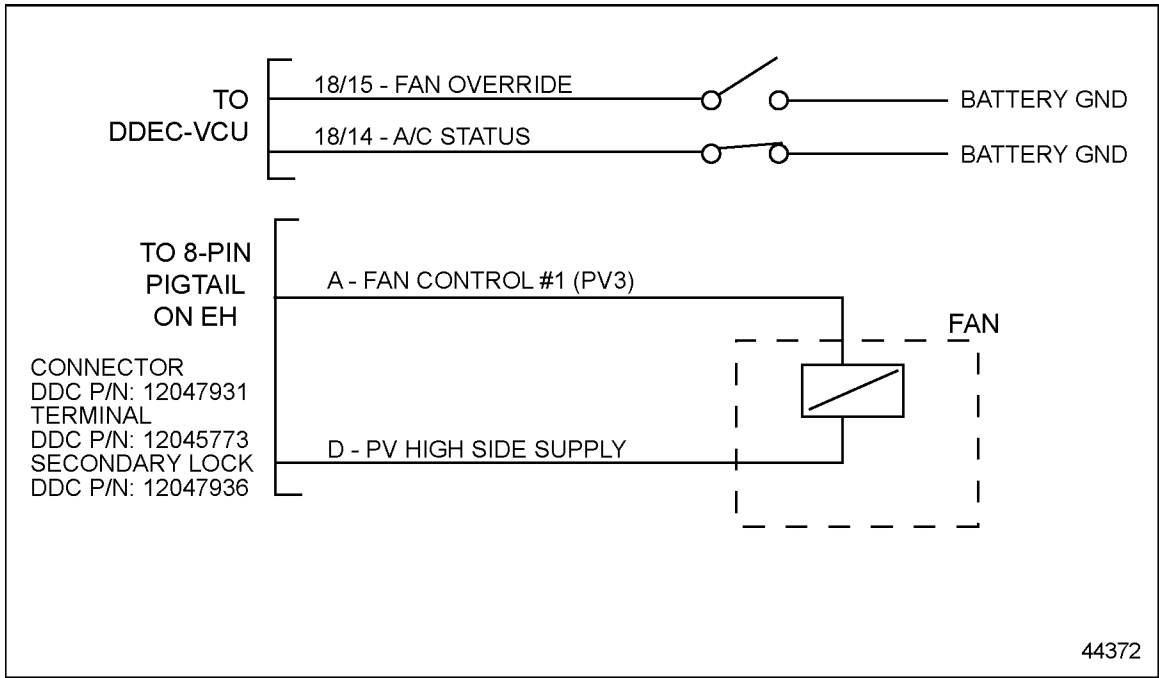


Figure 5-14 Variable Speed Fan (Fan Type 5) – MBE 4000

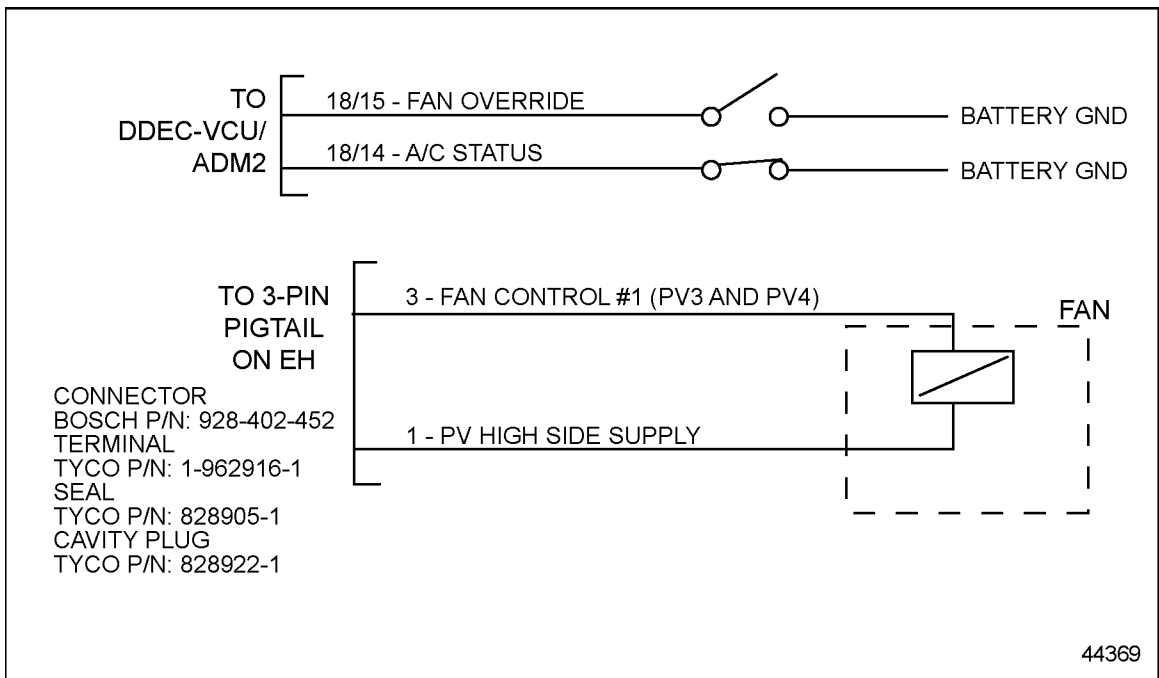


Figure 5-15 Variable Speed Fan (Fan Type 5) – MBE 900

5.9.6 PROGRAMMING REQUIREMENTS AND FLEXIBILITY

The DDEC-VCU fan control parameters are listed in Table 5-40 are set by VEPS or minidiag2.

Parameter	Description	Choice/Range	Default	Parameter ID
Fan Activation on Engine Brake	Enables/Disables fan activation when engine brakes are on high.	0 = Disable 1 = Enable	0	1 19 01
Fan Activation on VSG	Enables/Disables fan activation when VSG is active	0 = Disable 1 = Enable	0	1 19 05
Fan Activation on A/C Status	Enables/Disables fan activation when the air conditioning is on.	0 = Disable 1 = Enable	0	1 19 03
Enable Fast Idle on A/C*	Enable A/C logic for Fast Idle and Fan	0 = LIM2 1 = Fast Idle on A/C & Neutral 2 = Fast Idle on A/C	0	1 06 01

* Parameter 1 06 02 Fast Idle Speed defaults to 600 rpm

Table 5-40 Fan Control Parameters

For DDEC-ECU software 53 (Diagnostic Version 5), the parameters listed in Table 5-41 for Fan Control must be set in the DDEC-ECU and the configuration parameters listed in Table 5-40 must be set in the DDEC-VCU with VEPS or the minidiag2.

Parameter	Description	Choice/Range	Default	Parameter ID
Fan Control	Enables Fan Control	0 = Linnig Clutch – Two Speed (on-highway) 1 = Linnig Clutch – Two Speed (off-highway) 2 = Electronically Controlled Viscous Fan – Variable Speed w/ Fan Speed Sensor 3 = Hydrostatic Fan – Variable Speed 4 = Horton Clutch – Single Speed (Hydrostatic) 5 = Hydrostatic Fan – Variable Speed 6 = Hydrostatic Fan – Dual Fans		0 28 02
PV3 Enable	Enable/Disable Output 3	0 = Disable 1 = Enable	0	0 06 03
PV4 Enable	Enable/Disable Output 4	0 = Disable 1 = Enable	0	0 06 04
Fan, Step 1 Coolant Temp	Fan Coolant Temp Threshold for 1 or 2-speed Fan	0–97°C	96°C	0 36 01
Fan, Step 2 Coolant Temp	Fan Coolant Temp Threshold for 1 or 2-speed Fan*	0–100°C	96°C	0 38 01
Fan, Step 1 Manifold Air Temp	Fan Manifold Threshold for 1 or 2-speed Fan	0–150°C	70°C (MBE 4000) 75°C (MBE 900)	0 37 01
Fan, Step 2 Manifold Air Temp	Fan Manifold Threshold for 1 or 2-speed Fan†	0–150°C	70°C (MBE 4000) 75°C (MBE 900)	0 39 01

* For 1-speed installation this parameter should be set to the value in 0 36 01

† For 1-speed installation this parameter should be set to the value in 0 37 01

Table 5-41 Fan Control Software 53 (Diagnostic Version 5) Fan Control Parameters

For DDEC-ECU software 56 (Diagnostic Version 6), the parameters listed in Table 5-42 for Fan Control must be set in the DDEC-ECU and the configuration parameters listed in Table 5-40 must be set in the DDEC-VCU.

Parameter	Description	Choice/Range	Default	Parameter ID
Fan Control	Enables Fan Control	0 = Linnig Clutch – Two Speed (on-highway) 1 = Linnig Clutch – Two Speed (off-highway) 2 = Electronically Controlled Viscous Fan – Variable Speed w/ Fan Speed Sensor 3 = Hydrostatic Fan – Variable Speed 4 = Horton Clutch – Single Speed (Hydrostatic) 5 = Hydrostatic Fan – Variable Speed 6 = Hydrostatic Fan – Dual Fans		0 04 01
PV3 Enable	Enable/Disable Output 3	0 = No Function 1 = 1-speed Fan	0	0 03 03
PV4 Enable	Enable/Disable Output 4	0 = No Function 1 = 2-speed Fan or Horton Fan	0	0 03 04
Switch on Threshold on Coolant Temp Speed 1	Fan Coolant Temp Threshold for 1 or 2-speed Fan	0–97°C	96°C	0 04 02
Switch on Threshold on Coolant Temp Speed 2	Fan Coolant Temp Threshold for 1 or 2-speed Fan	0–100°C	96°C	0 04 04
Switch on Threshold on Air Intake Temp Speed 1	Fan Air Intake Temp Threshold for 1 or 2-speed Fan	0–150°C	70°C (MBE 4000) 75°C (MBE 900)	0 04 03
Switch on Threshold on Air Intake Temp Speed 2	Fan Air Intake Temp Threshold for 1 or 2-speed Fan	0–150°C	70°C (MBE 4000) 75°C (MBE 900)	0 04 05

Table 5-42 DDEC-ECU Software 56 (Diagnostic Version 6) Fan Control Parameters

For DDEC-ECU software 60 (Diagnostic Version 9), the parameters listed in Table 5-43 for Fan Control must be set in the DDEC-ECU and the configuration parameters listed in Table 5-40 must be set in the DDEC-VCU.

Parameter	Description	Choice/Range	Default	Parameter ID
Fan Control	Enables Fan Control	0 = Linnig Clutch – Two Speed (on-highway) 1 = Linnig Clutch – Two Speed (off-highway) 2 = Electronically Controlled Viscous Fan – Variable Speed w/ Fan Speed Sensor 3 = Hydrostatic Fan – Variable Speed 4 = Horton Clutch – Single Speed (Hydrostatic) 5 = Hydrostatic Fan – Variable Speed 6 = Hydrostatic Fan – Dual Fans	—	0 04 01
PV3 Enable	Enable/Disable Output 3	0 = No Function 1 = 1-speed Fan	0	0 03 03
PV4 Enable	Enable/Disable Output 4	0 = No Function 1 = 2-speed Fan or Horton Fan	0	0 03 04
Switch on Threshold on Coolant Temp Speed 1	Fan Coolant Temp Threshold for 1 or 2-speed Fan	0–97°C	MBE900 (EPA98) – 96°C MBE900 (EPA04) – 92°C MBE4000 (EPA98) – 96°C MBE4000 (EPA98) – 96°C	0 04 02
Switch on Threshold on Coolant Temp Speed 2	Fan Coolant Temp Threshold for 1 or 2-speed Fan	0–100°C	MBE900 (EPA98) – 96°C MBE900 (EPA04) – 92°C MBE4000 (EPA98) – 96°C MBE4000 (EPA98) – 96°C	0 04 04
Switch on Threshold on Air Intake Temp Speed 1	Fan Air Intake Temp Threshold for 1 or 2-speed Fan	0–150°C	MBE900 (EPA98) – 93°C MBE900 (EPA04) – 85°C MBE4000 (EPA98) – 75°C MBE4000 (EPA98) – 65°C	0 04 03
Switch on Threshold on Air Intake Temp Speed 2	Fan Air Intake Temp Threshold for 1 or 2-speed Fan	0–150°C	MBE900 (EPA98) – 93°C MBE900 (EPA04) – 85°C MBE4000 (EPA98) – 75°C MBE4000 (EPA98) – 65°C	0 04 05
Switch on Threshold on Air Intake for Braking Operation Speed 1	Air Intake Threshold for Braking Operation	0–150°C	MBE900 (EPA98) – 93°C MBE900 (EPA04) – 85°C MBE4000 (EPA98) – 75°C MBE4000 (EPA98) – 65°C	0 04 07
Switch on Threshold on Air Intake for Braking Operation Speed 2	Air Intake Threshold for Braking Operation	0–150°C	MBE900 (EPA98) – 93°C MBE900 (EPA04) – 85°C MBE4000 (EPA98) – 75°C MBE4000 (EPA98) – 65°C	0 04 08

Table 5-43 DDEC—ECU Software 60 (Diagnostic Version 9) Fan Control Parameters

5.10 FUEL ECONOMY INCENTIVE

The purpose of Fuel Economy Incentive is to allow the fleet manager to set a target fuel economy while providing the driver an incentive to meet the target.

5.10.1 OPERATION

Using the Fuel Economy Incentive option, a fleet manager can set a target fuel economy for each engine. If this fuel economy is exceeded, the driver will be given a slightly increased vehicle speed limit.

Target fuel economy, road speed limit, maximum MPH increase, conversion factor for MPH/MPG and the option of total average fuel economy or trip fuel economy are all calibrated using the DDR, DDDL, VEPS, DRS or at engine order entry.

In this example the following limits are set as listed in Table 5-44.

Item	Set Limit
Vehicle Speed Limit	60 MPH
Maximum MPH - the maximum allowable increase in vehicle speed	5 MPH
Conversion Factor	20 MPH/MPG
Target Fuel Economy	7 MPG

Table 5-44 Fuel Economy Limits

If the driver has an average fuel economy of 7.1 MPG then the new vehicle speed limit is 62 MPH.

Vehicle Speed Limit + (Average Fuel Economy — Target Fuel Economy) x Conversion = New Vehicle Speed Limit

$$60 \text{ MPH} + (7.1 - 7.0 \text{ MPG}) \times (20 \text{ MPH/MPG}) = 62 \text{ MPH}$$

The maximum vehicle speed obtainable regardless of the fuel economy is 65 MPH.

5.10.2 PROGRAMMING FLEXIBILITY

The parameters listed in Table 5-45 can be set using the DDR, DDDL, DRS, VEPS or minidiag2.

Parameter	Definition	Range	Default	Parameter ID
Enable Fuel Economy Incentive	Enables/disable the feature.	0 = Disable 1 = Enable	0	1 23 17
Minimum Economy	Indicates the minimum economy for fuel economy incentive.	4 to 20 MPG	7	1 23 23
Vehicle Speed Reward	Indicates customer set maximum speed increase for vehicle.	0 to 20 KPH	0	1 23 22
Convert Factor MPH/MPG ¹	The miles per hour you want to allow for each full mile per gallon above the minimum MPG.	0 to 20 MPH/MPG	2	1 23 24
FEI Use Trip Milage	FILT ECON bases the calculations on the fuel information, by periodic sampling of fuel consumption, recorded in the ECM. TRIP ECON bases the calculation on the trip portion of the fuel usage information.	0 = FILTERED FUEL ECON 1 = TRIP FUEL ECON	0	1 23 25
Max Cruise Set Speed	Cruise Control vehicle set speed cannot be faster than this value.	48 – 152 KPH	152 KPH	1 15 02

Table 5-45 Fuel Economy Incentive Parameters

5.10.3 INTERACTION WITH OTHER FEATURES.

Fuel Economy Incentive will increase the Cruise Control and vehicle speed limits. The Max Curise Set Speed must be set above the road speed limit by the Vehicle Speed Reward amount (Max Cruise Set Speed = Road Speed Limit + Vehicle Speed Reward).

A vehicle can be have with both PasSmart and Fuel Economy Incentive, but the extra speed increments provided by the two features do not add together. For example, if Fuel Economy Incentive is set for 7 MPH of extra speed when the driver hits the maximum fuel economy target and the same vehicle has a 5 MPH PasSmart increase, the resulting speed increase is 7 MPH, not 12 MPH.

5.11 IDLE SHUTDOWN TIMER AND VSG SHUTDOWN

The Idle Shutdown Timer will shutdown the engine if it remains idling for a specified period of time. The options that can operate with Idle Shutdown Timer are Idle Shutdown Override, Vehicle Power Shutdown or Shutdown on Variable Speed Governor (VSG).

5.11.1 OPERATION

Certain conditions must be met for the entire time-out period for shutdown to occur. These conditions include:

- Coolant temperature above 14°F (-10°C)
- Engine operation at idle
- The parking brake interlock digital input switched to battery ground
- OEM supplied interlocks enabled
- Ignition ON

Fueling is stopped after the specified idle time; the ignition circuit remains active after the engine shuts down. The AWL will flash 20 seconds before the shutdown occurs. The RSL will flash 10 seconds before shutdown occurs. The AWL will blink until the ignition is turned off to indicate shutdown has occurred. The ignition switch must be cycled to OFF (wait 10 seconds) and back to ON before the engine will restart, if shutdown occurs.

A Park Brake Switch may be installed (see Figure 5-16). Idle Shutdown Timer operates with a digital input configured as a park brake and switched to battery ground. The time can range from 1 to 5000 seconds (approximately 16 minutes).

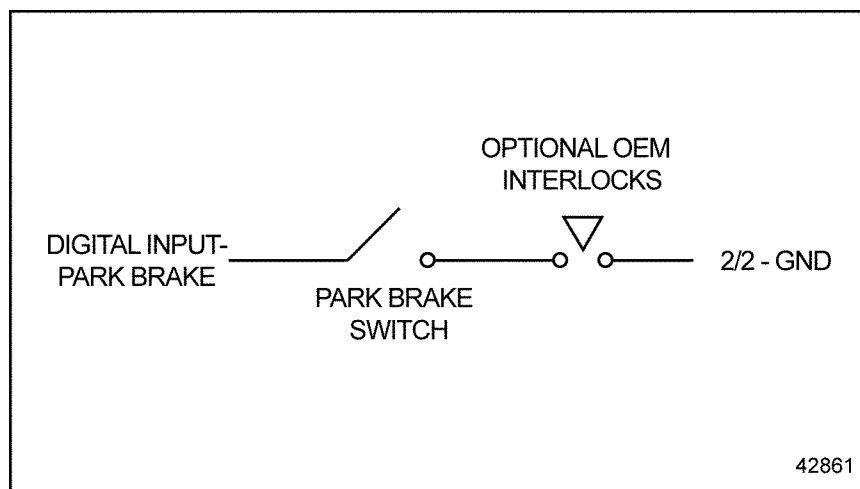


Figure 5-16 Park Brake Digital Input

Idle Shutdown Override - Optional

Idle Shutdown Override allows the operator to reset the idle shutdown timer.

If the accelerator pedal has been pressed or the park brake has been released, the conditions for the idle shutdown are no longer valid. The shutdown conditions must be met to reinitialize the counter.

The timer can be reset by one of the following conditions:

- ❑ Stop Engine Override button has been pressed (if configured)
- ❑ Clutch pedal has been pressed (if configured)
- ❑ Service brake has been pressed (if configured)
- ❑ Accelerator has been pressed above the idle position or has been fully pressed and released
- ❑ Park Brake has been released and configured

Vehicle Power Shutdown - Optional

Vehicle Power Shutdown is used with Idle Timer Shutdown or Engine Protection Shutdown. After the idle timer times out or engine protection shuts the engine down, the Vehicle Power Shutdown relay shuts down the rest of the electrical power to the vehicle.

A Vehicle Power Shutdown relay can be installed to shutdown all electrical loads when the engine is shutdown (see Figure 5-17). The engine will shutdown after the specified idle time and will reset the relay (ignition circuit).

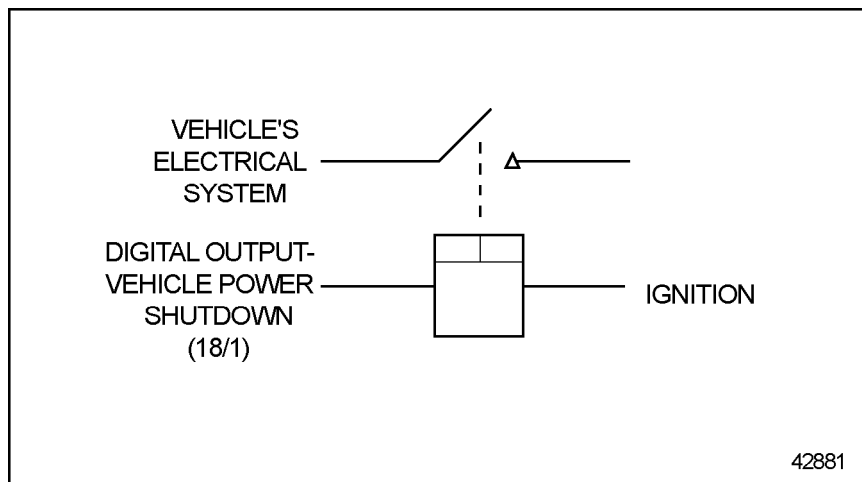


Figure 5-17 Vehicle Power Shutdown Relay

All electrical loads that should be turned OFF when the engine shuts down should be wired through this relay.

Shutdown on VSG - Optional

This option, when enabled, allows the engine to be shutdown when operating on VSG when the conditions are met for the Idle Timer Shutdown.

Maximum Engine Load Shutdown — Optional

This option, when enabled, allows the setting of a maximum load above which idle shutdown is disabled.

5.11.2 PROGRAMMING REQUIREMENTS AND FLEXIBILITY

To program the Idle Shutdown timer, the digital inputs listed in Table 5-46 must be configured.

Description	Pin	Type	Setting	Default	Parameter ID
Park Brake	21/16	Digital Input	0 = Disabled 1 = Enabled	0	1 13 08
Park Brake Input Configuration	—	Digital Input	0 – Hardwired 1 – Source Address 1 (SA1) 2 – Source Address 2 (SA2) 3 – Source Address 3 (SA3)	0	1 13 09

Table 5-46 Idle Shutdown Timer Digital Input

All the Idle Shutdown timer options are listed in Table 5-47.

Parameter	Description	Choice / Range	Default	Parameter ID	Access
IDLE SHUTDOWN ENABLE	Enables or Disables the Idle Shutdown feature.	0 = Disable 1 = Enable with Park Brake 2 = Enable without Park Brake, Reset for Accelerator Position > Idle 3 = Enable without Park Brake, Reset for Change in Accelerator Pedal Position	0	1 17 01	Nexiq DDR, DDDL, DRS, VEPS, minidiag2
IDLE SHUTDOWN TIME (MIN)	The amount of engine idle time that is allowed before the Idle Shutdown feature stops fueling the engine.	1 to 5000 seconds	60 sec	1 17 02	Nexiq DDR, DDDL, DRS, VEPS, minidiag2
VSG SHUTDOWN ENABLE	Enables or disables the Idle Timer Shutdown feature when operating on the Variable Speed Governor.	0 = Disable 1 = Enable with Park Brake 2 = Enable without Park Brake, Reset for Accelerator Position > Idle 3 = Enable without Park Brake, Reset for Change in Accelerator Pedal Position	0	1 17 03	Nexiq DDR, DDDL, DRS, VEPS, minidiag2
VSG SHUTDOWN TIME	The amount of engine idle time that is allowed before the idle shutdown feature stops fueling the engine.	1 to 5000 seconds	60 sec	1 17 04	Nexiq DDR, DDDL, DRS, VEPS, minidiag2
MIN COOLANT TEMP FOR SHUTDOWN	Minimum coolant temperature before an idle shutdown will occur	-40°C to 200°C	-10°C	1 17 08	VEPS, DRS, minidiag2
ENABLE IDLE/VSG SHUTDOWN OVERRIDE	Enables/disables override of Idle or VSG Shutdown	0 = Disable 1 = Enable	1	1 17 09	Nexiq DDR, DDDL, DRS, VEPS, minidiag2
MAX ENGINE LOAD FOR VSG SHUTDOWN	VSG shutdown disabled for engine loads greater than this value	0–5000 Nm	100	1 17 05	VEPS, DRS, minidiag2

Table 5-47 Idle Shutdown Timer Programming Options

5.12 LIMITERS

The DDEC-VCU supports three programmable engine limiters: LIM0, LIM1, and LIM2/AC. These limiters are each associated with a digital input. When the input is switched to ground, the limiter becomes active. If more than one LIM input is grounded at the same time, the LIM with the lowest limitation parameter setting will prevail.

5.12.1 OPERATION

Limiters can decrease the speed/load/torque from the setting of the common Limiter parameters, but cannot increase them beyond the common Limiter settings.

Each Limiter can set:

- Maximum engine speed (speed limiting applications)
- Minimum engine speed (switched high idle applications)
- Fast idle speed on air condition (LIM2/AC only)
- Maximum engine torque (torque limiting applications)
- Road speed limit (alternate road speed limit)

5.12.2 INSTALLATION

The Limiter pin assignments are listed in Table 5-48.

Limiter	Pin
LIM0	18/11
LIM1	18/12
LIM2/AC	18/14

Table 5-48 Limiter Pin Assignments

NOTE:

Due to VSS signal quality at low speeds, it is not recommended that the vehicle speed limit be set above a minimum of 48 kph to insure smooth road speed limiting. DDC cannot guarantee smooth speed limiting for maximum speeds set below 48 kph.

5.12.3 PROGRAMMING REQUIREMENTS AND FLEXIBILITY

LIM0 and LIM1 inputs are always active and do not use an enable parameter. LIM0 and LIM1 parameters are listed in Table 5-49.

Parameter	Range	Default	Parameter ID	Access
Minimum Engine Speed LIM0 enabled	0-4000 rpm	500 rpm	1 05 01	Nexiq DDR, DDDL, DRS, VEPS, minidiag2
Maximum Engine Speed LIM0 enabled	0-4000 rpm	4000 rpm	1 05 02	Nexiq DDR, DDDL, DRS, VEPS, minidiag2
Maximum Road Speed LIM0 enabled	0-152 kph	152 kph	1 05 03	Nexiq DDR, DDDL, DRS, VEPS, minidiag2
Maximum Engine Torque LIM0 enabled	0-5000 Nm	5000 Nm	1 05 04	Nexiq DDR, DDDL, DRS, VEPS, minidiag2
Minimum Engine Speed LIM1 enabled	0-4000 rpm	500 rpm	1 05 05	Nexiq DDR, DDDL, DRS, VEPS, minidiag2
Maximum Engine Speed LIM1 enabled	0-4000 rpm	4000 rpm	1 05 06	Nexiq DDR, DDDL, DRS, VEPS, minidiag2
Maximum Road Speed LIM1 enabled	0-152 kph	152 kph	1 05 07	Nexiq DDR, DDDL, DRS, VEPS, minidiag2
Maximum Engine Torque LIM1 enabled	0-5000 Nm	5000 Nm	1 05 08	Nexiq DDR, DDDL, DRS, VEPS, minidiag2

Table 5-49 LIM0 and LIM1 Parameters

LIM2 can be configured as a third limiter or as a special A/C function. When configured as LIM2 (parameter 1 06 01 = 0), LIM2 operates the same as LIM0 and LIM1. LIM2 parameters are listed in Table 5-50.

Parameter	Range	Default	Parameter ID	Access
Enable Fast Idle on Air condition Input	0 = Enable LIM2 1 = Enable fast idle on air condition in neutral only 2 = Enable fast idle on air condition	0	1 06 01	Nexiq DDR, DDDL, DRS, VEPS, minidiag2
Fast Idle Speed on Air Condition	500-3000 rpm	600 rpm	1 06 02	Nexiq DDR, DDDL, DRS, VEPS, minidiag2
Minimum Engine Speed LIM2 enabled	0-4000 rpm	500 rpm	1 06 03	Nexiq DDR, DDDL, DRS, VEPS, minidiag2
Maximum Engine Speed LIM2 enabled	0-4000 rpm	4000 rpm	1 06 04	Nexiq DDR, DDDL, DRS, VEPS, minidiag2
Maximum Road Speed LIM2 enabled	0-152 kph	152 kph	1 06 05	Nexiq DDR, DDDL, DRS, VEPS, minidiag2
Maximum Engine Torque LIM2 enabled	0-5000 Nm	5000Nm	1 06 06	Nexiq DDR, DDDL, DRS, VEPS, minidiag2

Table 5-50 LIM2 Parameters

THIS PAGE INTENTIONALLY LEFT BLANK

5.13 LOW GEAR TORQUE LIMITING

Low Gear Torque Limiting and Gear Down Protection is an optional feature that allows a transmission to be used with engines capable of producing more torque than the transmission's peak torque rating.

5.13.1 OPERATION

Low Gear Torque Limiting provides a limit on the available torque if the ratio of vehicle speed to engine speed is below a set point. This limits full torque in lower gears and allows a transmission to be used with engines above the transmission's regular torque rating. Two torque limits can be programmed.

Gear Down Protection will limit torque in the lowest gears. High Gear Power will limit torque in the intermediate gears..

Example 1 – One Torque Limit

The customer wants to hold the torque to 550 ft lbs (on an engine rated at 860 ft lbs) up to 8th gear. The transmission operates with the ratios listed in Table 5-51.

Gear	Ratio	Low Gear Threshold* DDEC-VCU – Output/Input Shaft Speed
5	3.57	0.280
6	2.79	0.358
7	2.14	0.467
	Desired Gear Down Protection Ratio	Gear Down Protection Ratio Parameter
8	1.65	0.606
9	1.27	0.787
10	1.00	1.0

*The low gear threshold is determined by taking the inverse of the gear ratios and choosing a value in between the gears you want to limit.

Table 5-51 Transmission Ratios

The "torque factor" is determined by dividing the desired torque by the rated torque. The "threshold" is determined by taking the inverse of the gear ratios and choosing a value in between the gears you want to limit.

To summarize, the customer wants to limit torque up to the 8th gear to 550 ft·lb. Estimate the "threshold" between 7th and 8th (0.5). From 8th gear on up, the full rated torque will be available. Set "Gear Ratio for Gear Down Protection" to 0.5 and set the "Torque Factor for Gear Down Protection to 0.64 (550/860).

Example 2 – Two Torque Limits

The customer wants to hold the torque to 450 ft lbs (on an engine rated at 860 ft lbs) up to 6th gear and up to 550 ft lbs up to 8th gear. The transmission operates with the ratios listed in Table 5-52.

Gear	Ratio	Low Gear Threshold* DDEC-VCU – Output/Input Shaft Speed
5	3.57	0.280
	Desired Gear Down Protection Ratio	Gear Down Protection Ratio Parameter
6	2.79	0.358
7	2.14	0.467
	Desired Gear Ratio for High Gear Power	Gear Ratio for High Gear Power Parameter
8	1.65	0.606
9	1.27	0.787
10	1.00	1.0

*The low gear threshold is determined by taking the inverse of the gear ratios and choosing a value in between the gears you want to limit.

Table 5-52 Transmission Ratios

The "torque factor" is determined by dividing the desired torque by the rated torque. The "threshold" is determined by taking the inverse of the gear ratios and choosing a value in between the gears you want to limit.

To summarize, the customer wants to limit torque up to the 6th gear to 450 ft-lb and 550 ft lbs up to 8th gear. Estimate the "threshold" between 5th and 6th (0.32) and 7th and 8th (0.5). From 8th gear on up, the full rated torque will be available.

Set "Gear Ratio for Gear Down Protection" to 0.32 and set the "Torque Factor for Gear Down Protection" to 0.52 (450/860). Set "Gear Ratio for High Gear Power" to 0.5 and the "Torque Factor High Gear Power" to 0.64 (550/860).

5.13.2 PROGRAMMING REQUIREMENTS AND FLEXIBILITY

A VSS or output shaft speed message over SAE J1939 is required (refer to section 3.7.4, "Vehicle Speed Sensor"). VEPS or minidiag2 can enable the parameters listed in Table 5-53.

Parameter	Description	Range	Default	Parameter ID
Torque Factor* Gear Down Protection	Provides a limit on the available torque if the ratio of vehicle speed to engine speed is below a set point.	0.00 to 1.00	1.00	1 23 01
Gear Ratio for Gear Down Protection	The gear ratio below which torque is limited. (output shaft rpm/input shaft rpm)	0.000 to 2.00	0.01	1 23 02
Torque Factor* High Gear Power	Provides a limit on the available torque if the ratio of vehicle speed to engine speed is below a set point.	0.000 to 1.00	1.00	1 23 03
Gear Ratio for High Gear Power	The gear ratio below which torque is limited. (output shaft rpm/input shaft rpm)	0.00 to 2.00	0.02	1 23 04

* % of maximum torque at the current engine speed

Table 5-53 Low Gear Torque Limiting Parameters

THIS PAGE INTENTIONALLY LEFT BLANK

5.14 MANAGEMENT INFORMATION PRODUCTS

The Management Information Products comprise a modular system that provides monitoring of any DDEC-equipped engine. These products provide substantial storage capacity, flexible data extraction and communication capabilities. Members of the system that collect data include:

- DDEC Data (refer to section 5.14.2)
- ProDriver® DC (refer to section 5.14.5)

PC software for data analysis and reporting include:

- DDEC Reports (refer to section 5.14.3)
- Detroit Diesel Data Summaries (refer to section 5.14.4)

5.14.1 OPERATION

The Management Information Products are designed to provide instantaneous feedback to the driver via the ProDriver DC display module. These driver-friendly features help provide an understanding of the effect of the driver's actions on the engine and vehicle performance.

The DDEC-VCU provides engine control and monitoring as well as a stored summary of engine performance.

Data in these devices can be extracted and analyzed with the PC software products as follows:

- DDEC Reports extracts data from all hardware devices and analyzes DDEC Data.
- Data Summaries extracts data from all hardware devices and analyzes data from all devices.

All these products allow printing of comprehensive reports for managing vehicle operation.

Additional diagnostic data available from Management Information includes:

- Instantaneous and average fuel economy
- Trip time, miles, fuel, total fuel used economy, and average speed
- Driving time, percentage, miles, fuel, and fuel economy
- Idle time, fuel and percentage
- Cruise time, percentage, miles, fuel, and fuel economy
- Top gear time, percentage, miles, fuel used, and fuel economy
- One gear down time, percentage, miles, fuel used, and fuel economy
- VSG time, fuel, and percentage
- Overspeed time and percentage for two speed thresholds
- Over-rev time and percentage
- Maximum speed and RPM
- Coasting time and percentage
- Driving average load factor

- Automated oil change interval tracking
- Hard braking incident records
- Driver initiated incident records
- Stop and check engine code logs
- Optimized Idle® active time, idle time, and estimated fuel savings
- SAE J1587 data link timeouts and power interruptions
- Leg time, distance, fuel used, fuel economy, average speed, and cruise time and percentage
- Last Stop records

5.14.2 DDEC DATA

DDEC Data is a standard part of the DDEC-VCU. DDEC Data utilizes available memory and processing speed, along with a built-in, battery-backed clock/calendar to document the performance of the driver and vehicle. Data is stored in three monthly records and in a trip file that may be reset at extraction. Data on periodic maintenance intervals, hard brake incidents, last stop records, daily engine usage, and ECM diagnostics is also stored.

DDEC Data can be extracted onto a PC hard disk through a wide range of options:

- Direct extraction using a DDEC translator box and cables connected to a PC running DDEC Reports.
- Wireless extraction via cellular telephone, satellite radio communications equipment. The PC can be operating DDEC Reports or DDEC Communications.

5.14.3 DDEC REPORTS

After the data is extracted from the ECM, DDEC Reports software produces a wide range of diagnostic and management reports. DDEC Reports produces comprehensive trip reports in both on-highway and nonroad markets. The on-highway reports are listed in Table 5-54.

Available Reports	DDEC-VCU	DDEC Reports Version Required
Trip Activity	X	2.0 or Later
Vehicle Speed/RPM	X	2.0 or Later
Overspeed / Over Rev	X	2.0 or Later
Engine Load/RPM	X	2.0 or Later
Vehicle Configuration	X	2.0 or Later
Periodic Maintenance	X	2.1 or Later
Hard Brake Incident	X	2.1 or Later
Last Stop	X	2.1 or Later
DDEC Diagnostic	X	2.1 or Later
Profile	X	2.1 or Later
Monthly Activity	X	2.1 or Later
Daily Engine Usage	X	2.1 or Later
Life to Date	X	2.1 or Later

Table 5-54 On-highway Reports Available from DDEC Reports


See Figure 5-18, Figure 5-19, and Figure 5-20 for examples of on-highway DDEC Reports. This Windows® 95 compatible product is included as part of the Detroit Diesel Diagnostic Link (DDDL) service tool. DDDL is designed for the service technician and with the built-in troubleshooting manual it is ideal for extracting data, analyzing and printing information from the DDEC-ECU.

DDEC® Reports - Daily Engine Usage

Print Date: July 3, 1998 04:10 PM

Detroit Diesel
 13400 Outer Drive, West
 Detroit, MI 48239-4001
 313-592-5500

Date Range: 6/02/98 to 6/19/98
 Vehicle ID: PDCPM
 Driver ID:

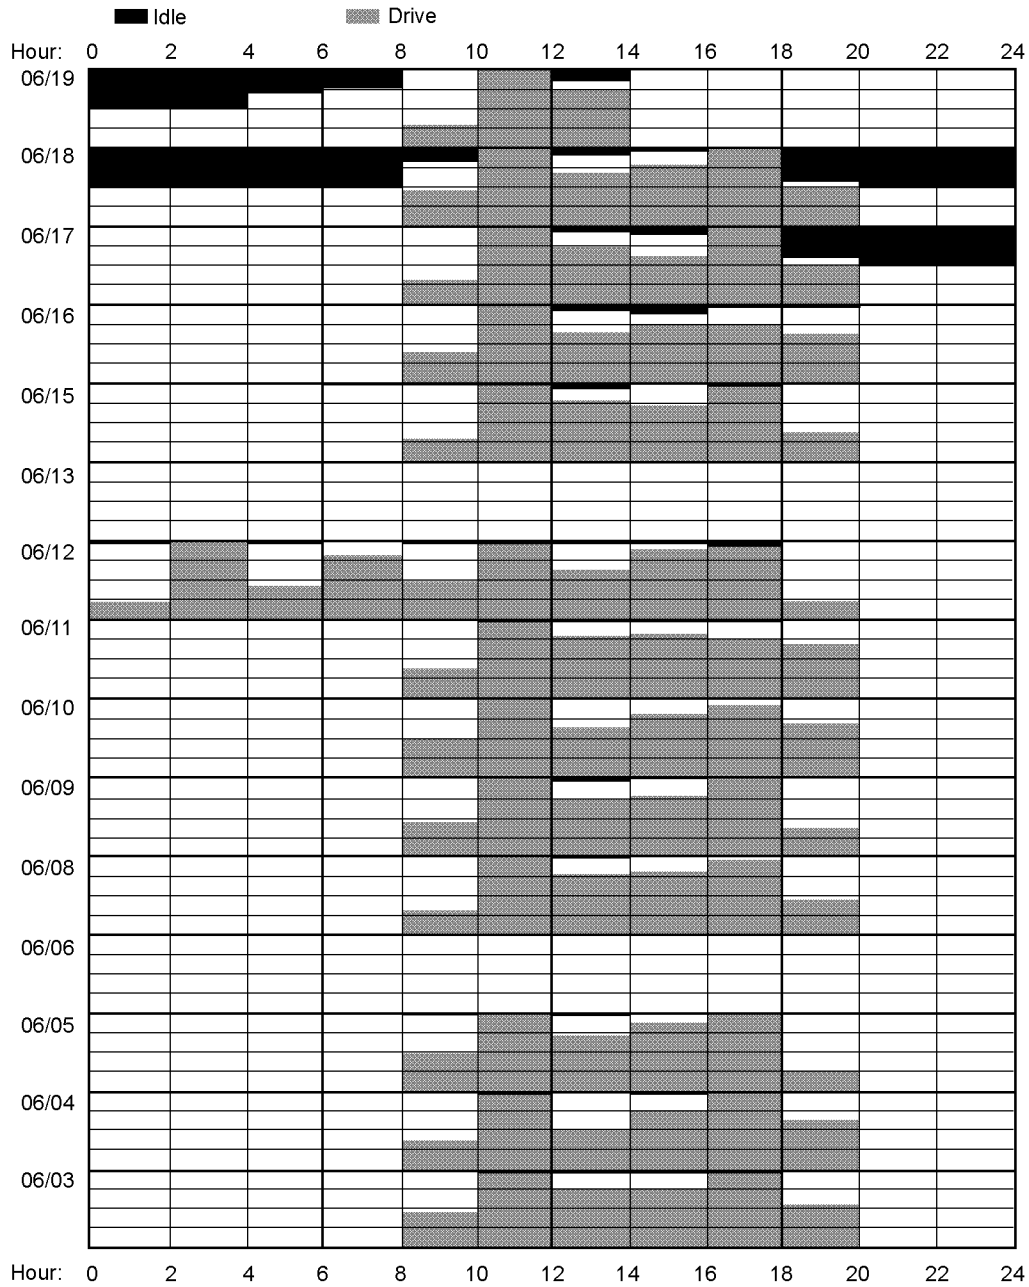

37527

Figure 5-18 DDEC Reports, On-highway - Idle and Drive Time

DDEC® Reports - Daily Engine Usage

Print Date: July 3, 1998 08:27 AM

Detroit Diesel
13400 West Outer Drive
Detroit, MI 48239
313-592-5500

Date Range: 6/02/98 to 6/19/98
Vehicle ID: PDCPM
Driver ID:

Date:	6/19/1998
Start Time:	01:00:00 (EST)
Odometer:	58068.5 mi
Distance:	205.1 mi
Fuel:	28.00 gal
Fuel Economy:	7.33 mpg
Average Speed:	49.4 mph

Total (hh:mm)	04:09	03:24	16:27
Hour (EST)	Drive (min)	Idle (min)	Off (min)
00:00-02:00	0	61	59
02:00-04:00	0	61	59
04:00-06:00	0	38	82
06:00-08:00	3	27	90
08:00-10:00	36	2	82
10:00-12:00	118	2	0
12:00-14:00	92	13	15
14:00-16:00	0	0	120
16:00-18:00	0	0	120
18:00-20:00	0	0	120
20:00-22:00	0	0	120
22:00-24:00	0	0	120

Date:	6/18/1998
Start Time:	01:00:00 (EST)
Odometer:	57650.6 mi
Distance:	418.0 mi
Fuel:	66.50 gal
Fuel Economy:	6.29 mpg
Average Speed:	47.4 mph

Total (hh:mm)	08:49	07:37	07:34
Hour (EST)	Drive (min)	Idle (min)	Off (min)
00:00-02:00	0	61	59
02:00-04:00	0	61	59
04:00-06:00	0	61	59
06:00-08:00	0	61	59
08:00-10:00	56	20	44
10:00-12:00	117	3	0
12:00-14:00	80	10	30
14:00-16:00	95	6	19
16:00-18:00	119	1	0
18:00-20:00	62	51	7
20:00-22:00	0	61	59
22:00-24:00	0	61	59

Date:	6/17/1998
Start Time:	08:55:59 (EST)
Odometer:	57233.0 mi
Distance:	417.6 mi
Fuel:	62.50 gal
Fuel Economy:	6.68 mpg
Average Speed:	48.8 mph

Total (hh:mm)	08:33	03:13	12:14
Hour (EST)	Drive (min)	Idle (min)	Off (min)
00:00-02:00	0	0	120
02:00-04:00	0	0	120
04:00-06:00	0	0	120
06:00-08:00	0	2	116
08:00-10:00	56	2	75
10:00-12:00	117	2	0
12:00-14:00	80	8	25
14:00-16:00	95	10	36
16:00-18:00	119	3	0
18:00-20:00	62	44	4
20:00-22:00	0	61	59
22:00-24:00	0	61	59

37526

Figure 5-19 DDEC Reports, On-highway - Daily Engine Usage

DDEC® Reports - Engine Load / RPM



Print Date: July 3, 1998 08:26 AM

Detroit Diesel
13400 West Outer Drive
Detroit, MI 48239
313-592-5500

Trip: 6/02/98 to 6/19/98
Vehicle ID: PDCPM
Driver ID:
Odometer: 58273.6 mi

Trip Distance: 5698.9 mi
Trip Fuel: 831.13 gal
Fuel Economy: 6.86 mpg
Avg. Drive Load: 46 %
Avg. Vehicle Speed: 49.0 mph

Trip Time: 134:33:33
Fuel Consumption: 6.18 gal/h
Idle Time: 18:14:17
Idle Percent: 13.55 %
Idle Fuel: 7.63 gal

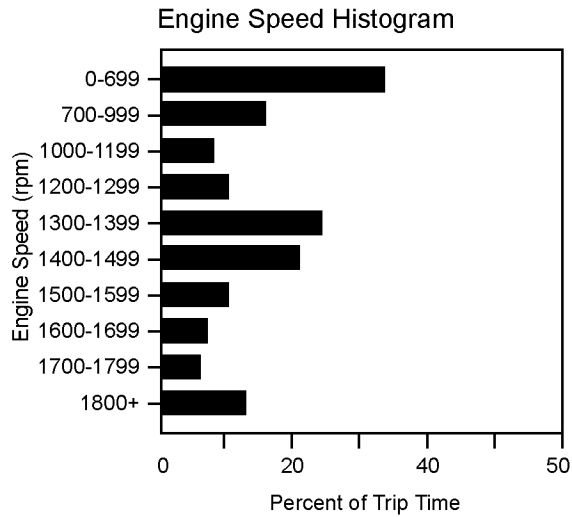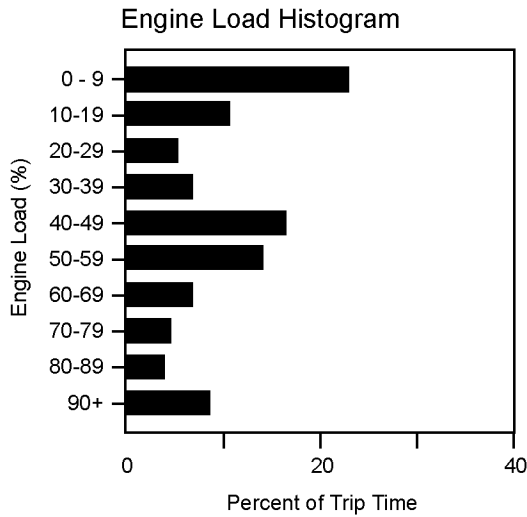

Percent of Trip Time in Load and RPM Table

Engine Load (%)

Engine RPM	0 - 9	10-19	20-29	30-39	40-49	50-59	60-69	70-79	80-89	90-100	TOTAL
0-699	0.5	5.4	0.5	0.2	0.1	0.1	0.1	0.1	0.1	0.1	7.2
700-999	8.1	0.7	0.4	0.3	0.2	0.1	0.1	0.4	0.4	0.2	10.8
1000-1199	7.1	0.9	0.9	0.6	0.6	0.5	0.6	0.5	0.5	1.1	13.3
1200-1299	1.7	0.7	0.7	0.5	0.6	0.5	0.5	0.4	0.3	1.3	7.2
1300-1399	1.5	0.6	0.5	0.6	0.9	0.9	0.6	0.5	0.3	1.9	8.4
1400-1499	3.1	1.8	2.4	4.5	12.9	10.8	4.5	2.7	2.2	3.0	47.7
1500-1599	0.7	0.3	0.2	0.3	0.5	0.5	0.3	0.2	0.2	0.7	4.0
1600-1699	0.2	0.1				0.1	0.1			0.4	0.9
1700-1799	0.1									0.1	0.3
1800+											0.1
Total	22.9	10.4	7.0	7.0	15.9	13.5	6.8	4.9	4.1	8.7	

37525

Figure 5-20 DDEC Reports, On-highway - Engine Load/RPM

5.14.4 DETROIT DIESEL DATA SUMMARIES

This new PC program for Windows 95/98 is used to analyze and report trip data from DDEC Data and ProDriver DC. Data Summaries can report trip data one vehicle at a time, summary reports for the whole fleet, and reports of driver trip activity.

Trip extractions from individual vehicles are loaded into Data Summaries database. The database divides trip extractions into yearly files. New extractions are added to the current year database making it possible to run reports for any time period within the year. This makes it possible for the user to form summary reports of the entire fleet, for a group of vehicles, or an individual vehicle. It is also possible to do the same for all drivers, groups of drivers, or individual drivers.

Data Summaries also supports ProDriver DC. Utilities in Data Summaries allow the user to format and setup the different data card types, such as the Driver Card, the Configuration Card, etc. A driver ID can be placed on Driver Cards. The extracted data is read from Driver Cards and placed into the database.

5.14.5 PRODRIVER DC

ProDriver DC (P/N: 23525745) is a dashboard-mounted display (see Figure 5-21) that provides real time and summary information on vehicle and engine operation. Real time graphic displays, shown when the engine is running, provide driver feedback on idle and driving performance relative to fleet goals. ProDriver DC also has a Fuel Economy Incentive status screen and a clock/calendar with battery backup. Engine alerts provide a descriptive message when the CEL and SEL are illuminated.

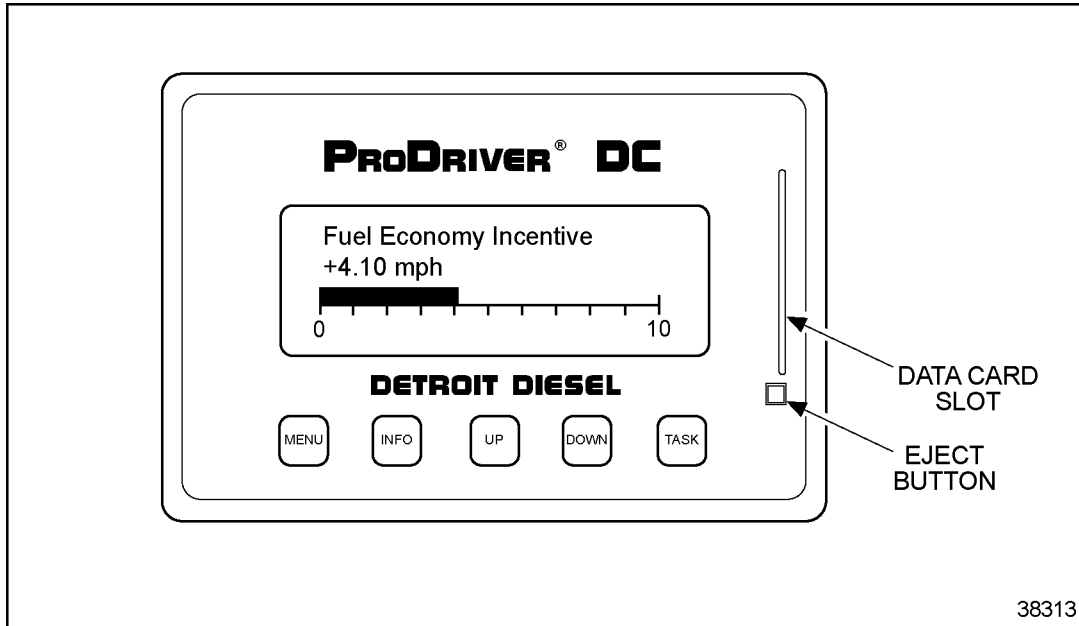


Figure 5-21 ProDriver DC

The Data Card provides a convenient way to transport data to and from the vehicle. The Data Card can hold up to 16 megabytes of data. It can also be formatted to perform various functions through the Detroit Diesel Data Summaries software. These functions are listed in Table 5-55.

Data Card	Functions
Driver Card	Assigned to a specific driver
	Capacity: 10 vehicles or 10 trips plus 2 months
Extraction Card	Extracts stored vehicle data
	Capacity: 100 extractions
Configuration Card	Loads new ProDriver DC user settings
	Multiple vehicles
	Vehicle ID and odometer not affected
Reprogramming Card	Upgrade ProDriver DC features, as new software becomes available

Table 5-55 Data Card Functions

Data Cards are the Smart Media product used in many digital cameras.

ProDriver DC configuration (user settings) can be viewed and changed with Detroit Diesel Data Summaries. Configuration options that can be changed at any time are: Display Intensity, Measurement Units, Language, and Alarm Status. Other setup parameters such as Vehicle Overspeed Limits can be changed, but only if the trip information in the ProDriver DC memory has first been extracted and cleared.

ProDriver DC has two access modes: Owner/Operator and Manager/Driver. The Owner/Operator mode does not require a password to change Setup. If the ProDriver DC access mode is set to Manager/Driver, a password is needed to enable changes to the ProDriver DC Setup menu.

Programming ProDriver DC with a Configuration Card is perhaps more convenient. When the card is inserted in ProDriver DC, the technician will be prompted through a few simple steps. Using the same Configuration Card on all ProDriver DC units in a fleet assures that each one has the same setup.

Trip summary data may be reviewed on the ProDriver DC screen or extracted to a PC for later analysis. Extraction options include:

- Direct connection to a PC running Detroit Diesel Data Summaries software through a translator box
- Automated direct connection with the Remote Data Interface
- Wireless communications such as the Highway Master cellular telephone service
- Extraction to a Driver Card or Extraction Card
- Wireless Extraction with IRIS

ProDriver DC Installation

The ProDriver DC module should be dashboard mounted in a location that is easily seen so the driver's eyes do not have to leave the road for a long period of time. The ProDriver DC module has the same installation dimensions as the ProDriver DC module. ProDriver DC can be mounted as either a flush mount or a surface mount. See Figure 5-22.

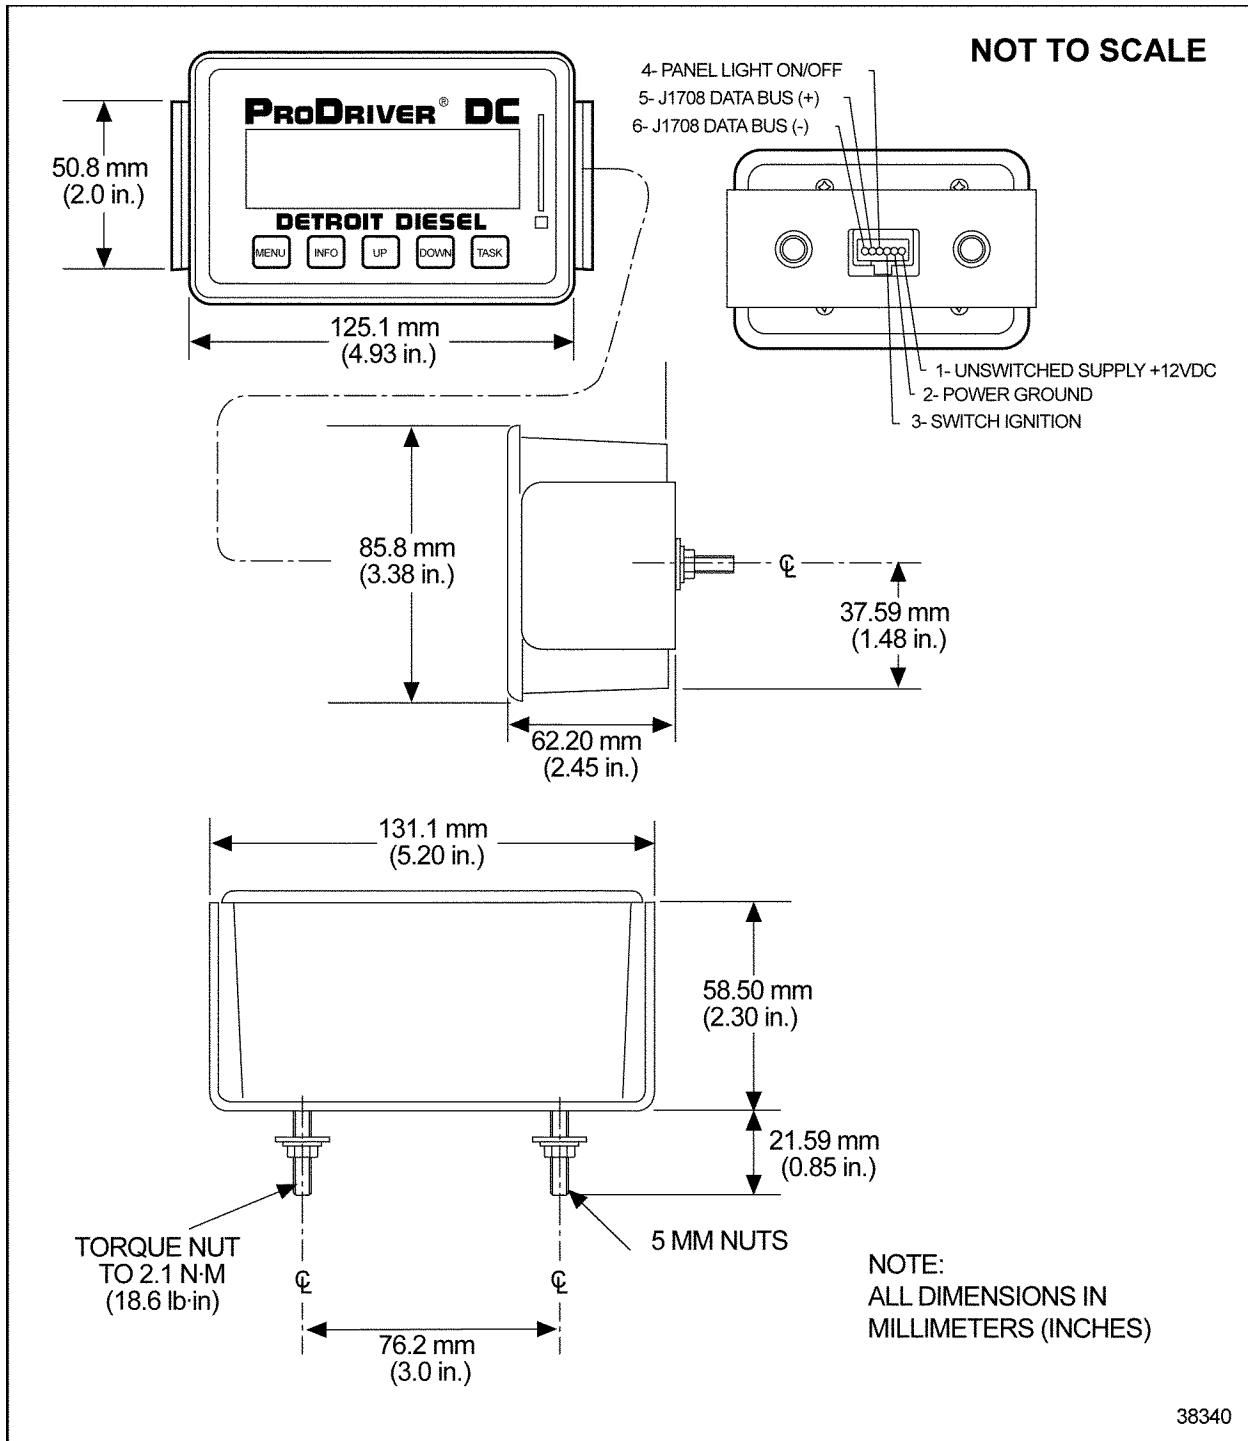


Figure 5-22 ProDriver DC Flush Mount

See Figure 5-23 for the mounting bracket for the flush mount ProDriver DC.

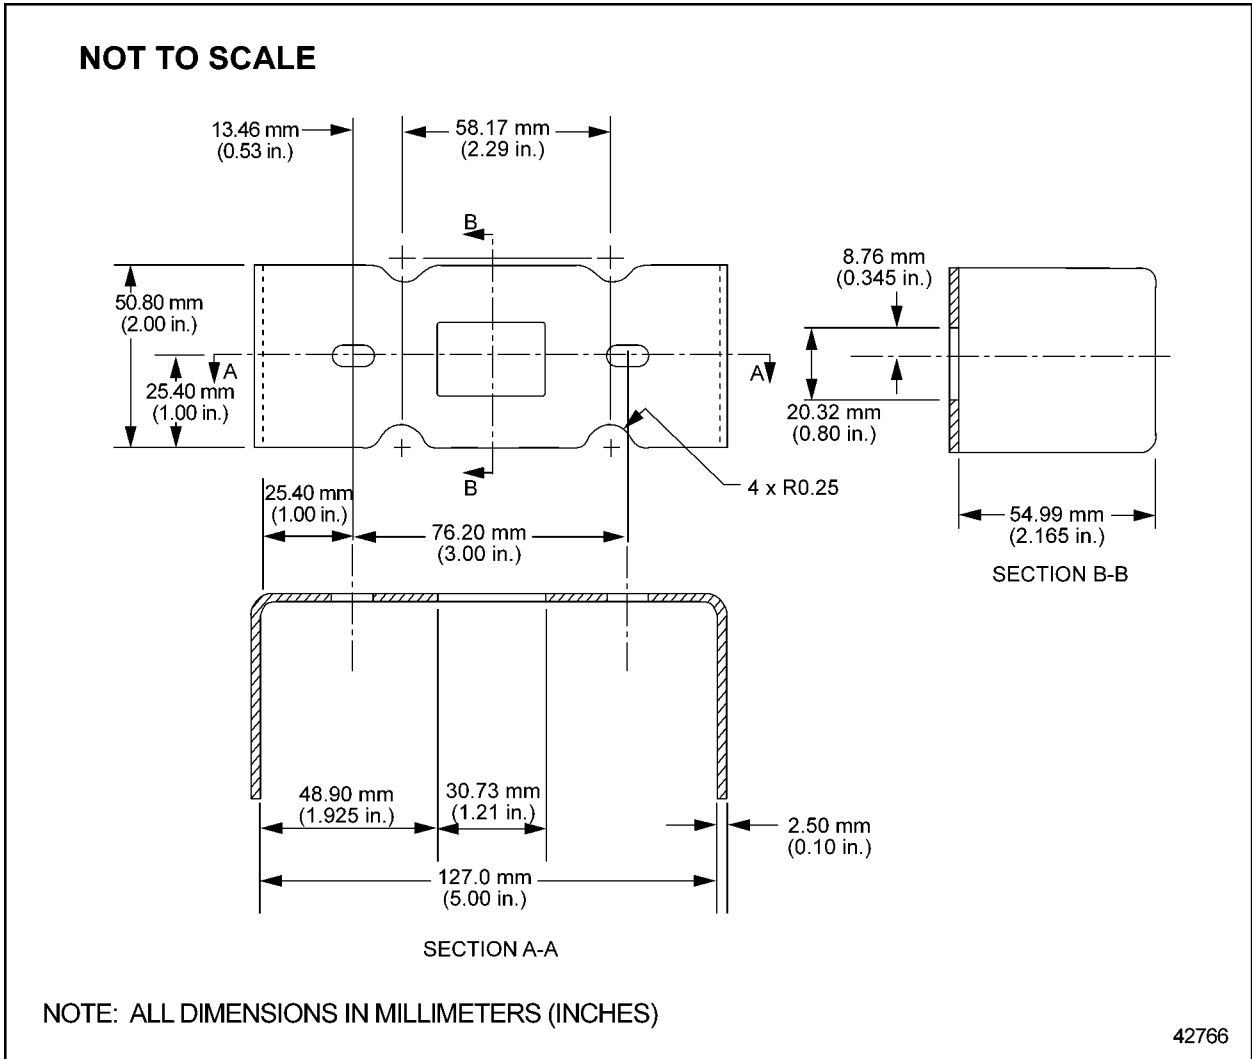


Figure 5-23 ProDriver DC Flush Mount Mounting Bracket

See Figure 5-24 for a cutout template of the flush mount display.

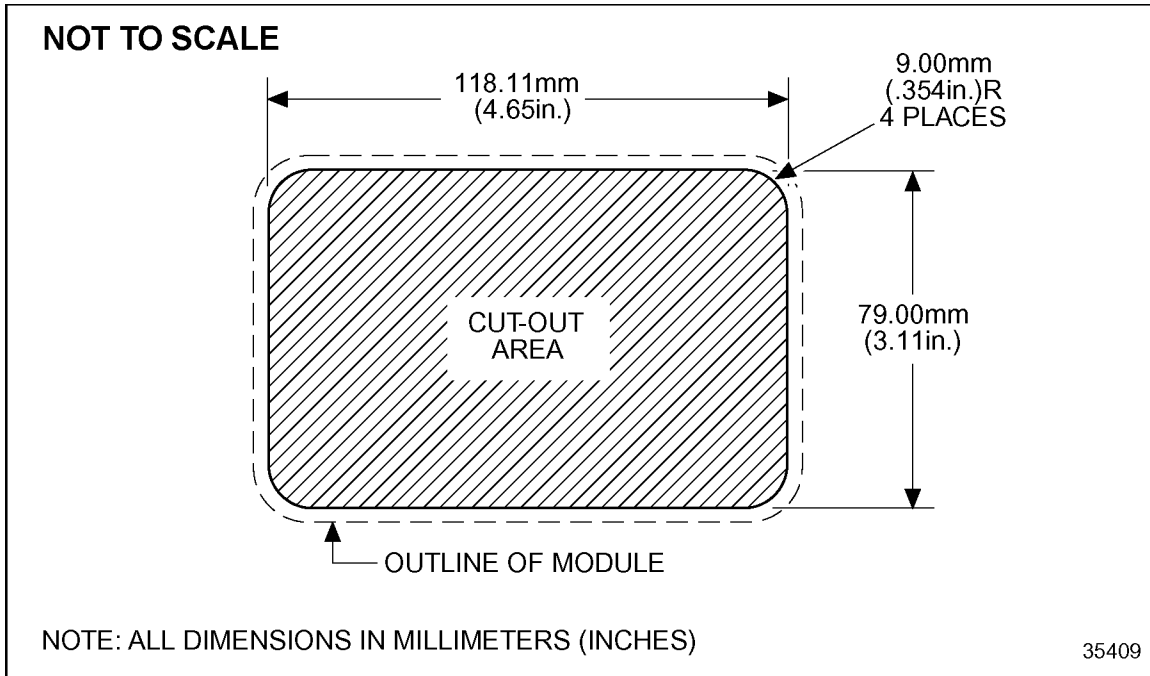


Figure 5-24 ProDriver DC Flush Mount Display Template

The surface mounted display for ProDriver DC is installed on top of the dash, the overhead or the face of the dash. See Figure 5-25.

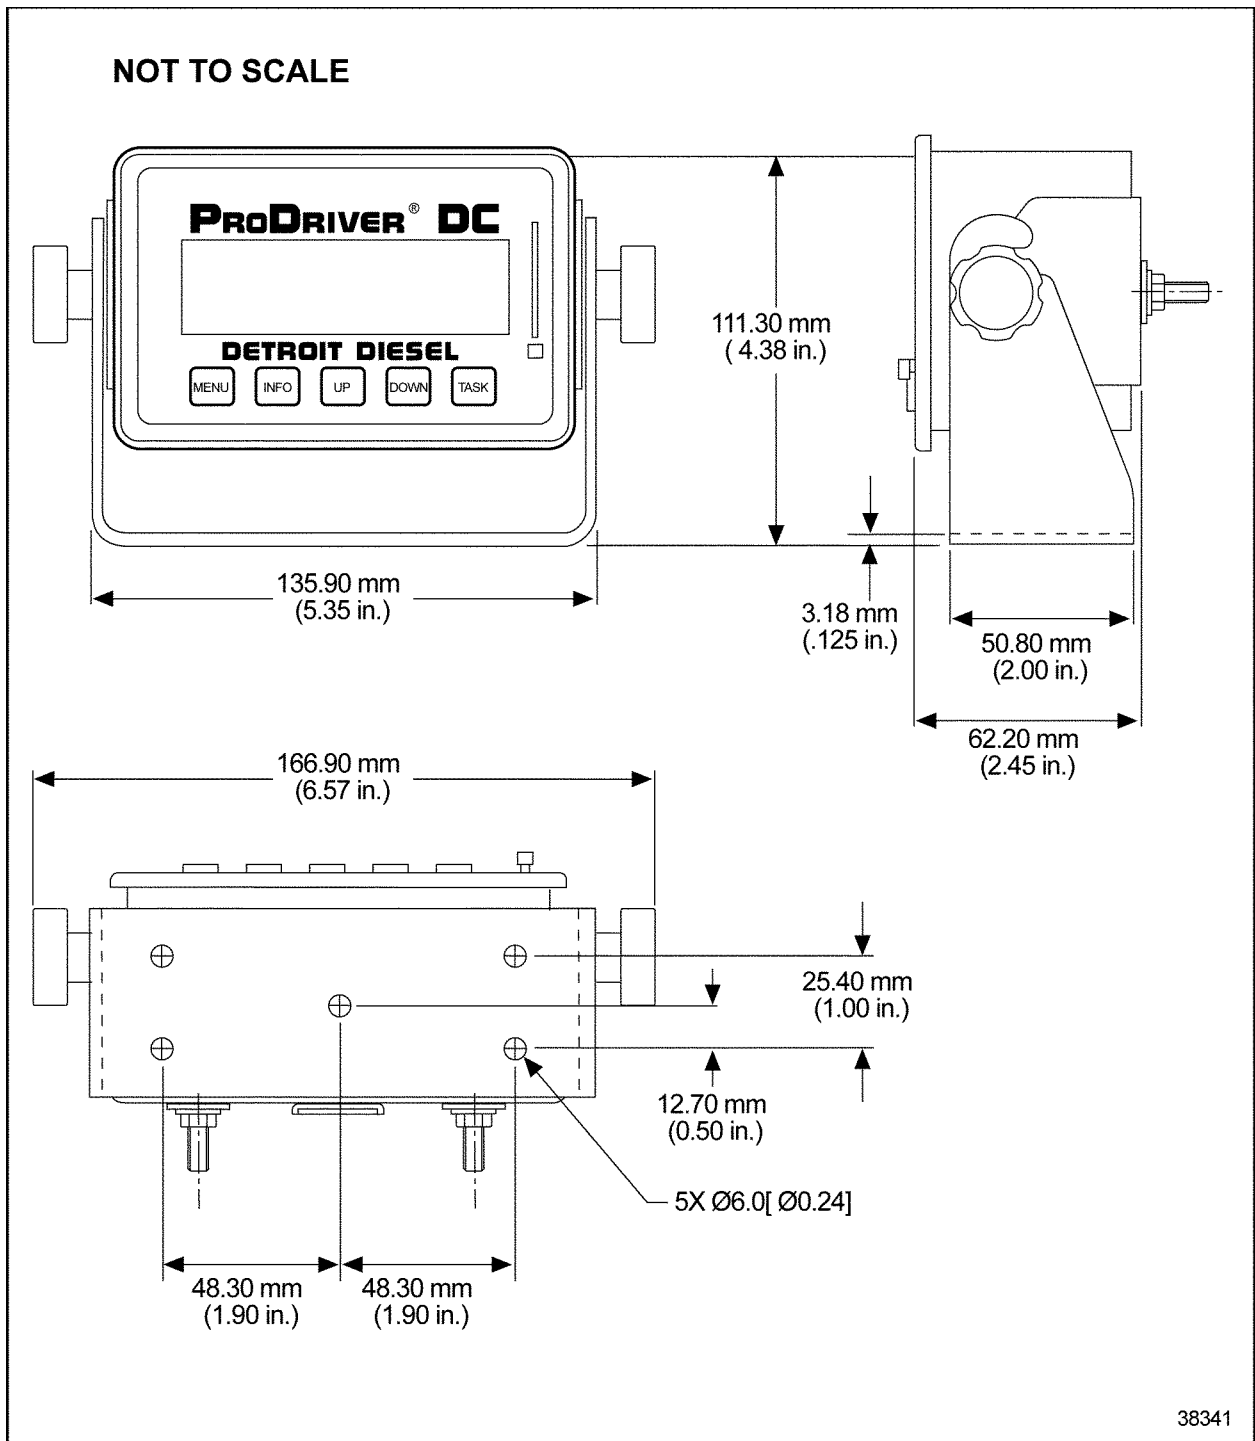


Figure 5-25 ProDriver DC Surface Mount

See Figure 5-26 for bracket dimensions and characteristics of the surface mount bracket.

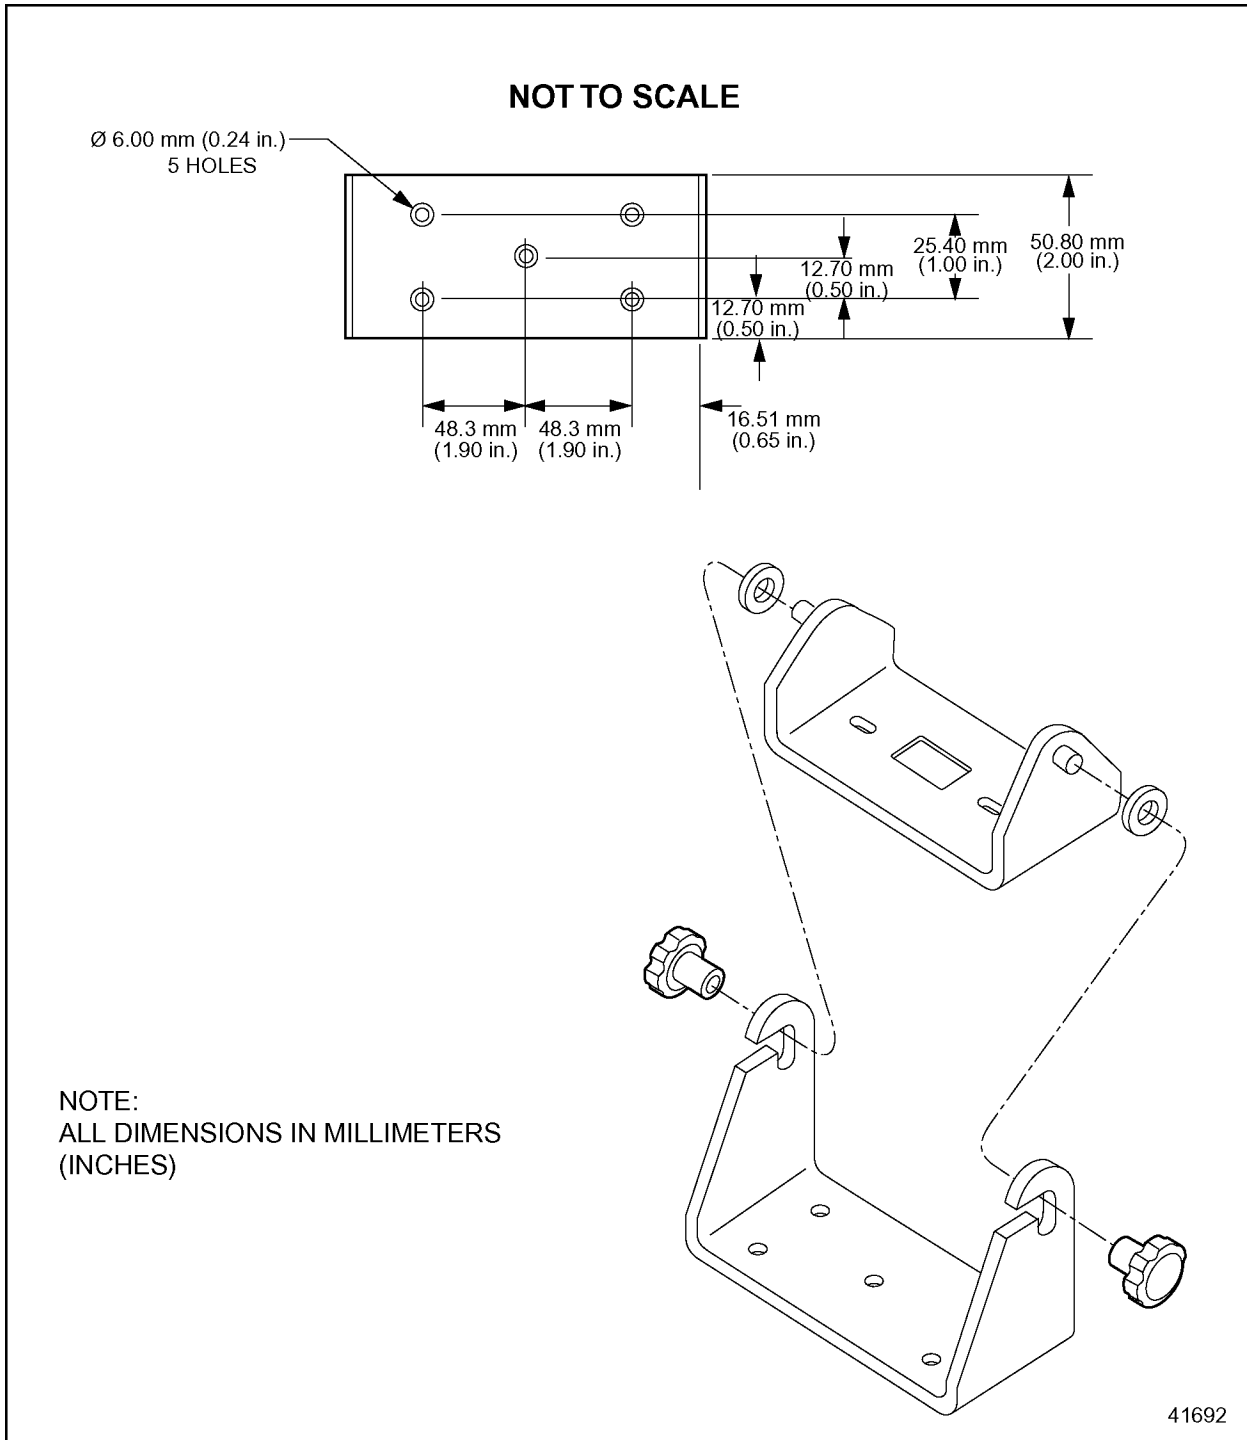


Figure 5-26 ProDriver DC Surface Mount Bracket

ProDriver DC has one harness for connection to the vehicle. The following paragraphs contain information that will be helpful in designing this harness.

The panel light on/off wire detects when the instrument panel lights are on. It is recommended that the 12 volt signal be taken from the high side of the intensity control potentiometer. This will ensure that the display intensity will change when the running lights are on as well as when the headlights are on.

See Figure 5-27 for the diagram to use when constructing a harness for ProDriver DC.

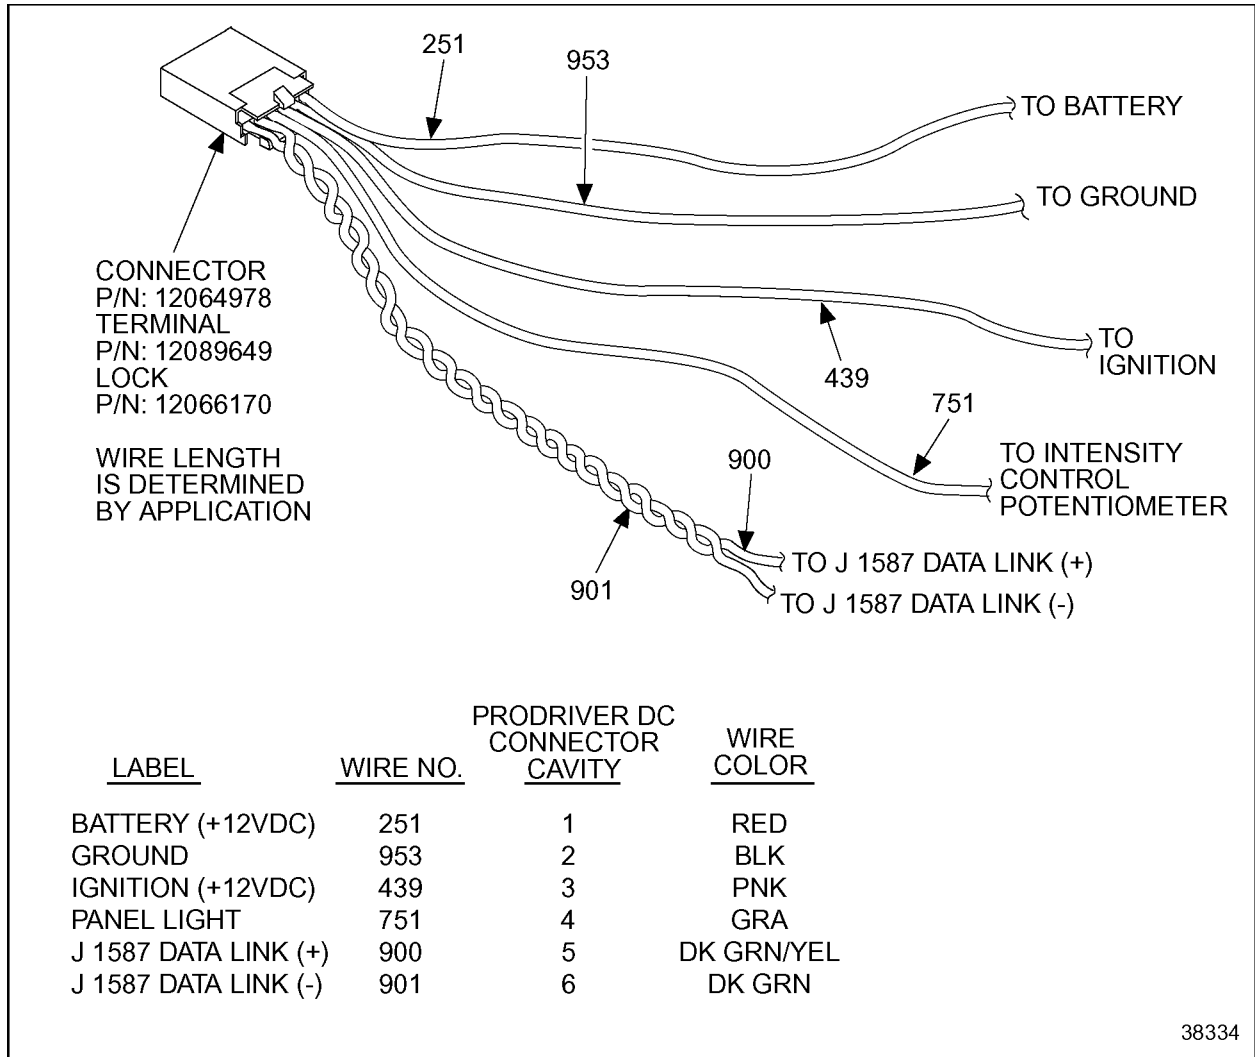


Figure 5-27 ProDriver DC Vehicle Harness

NOTE:

ProDriver DC is 12V only. The ignition and battery wires must be connected to +12V only.

A jumper harness (P/N: 23524862) is available to install a ProDriver DC in place of a ProDriver (see Figure 5-28).

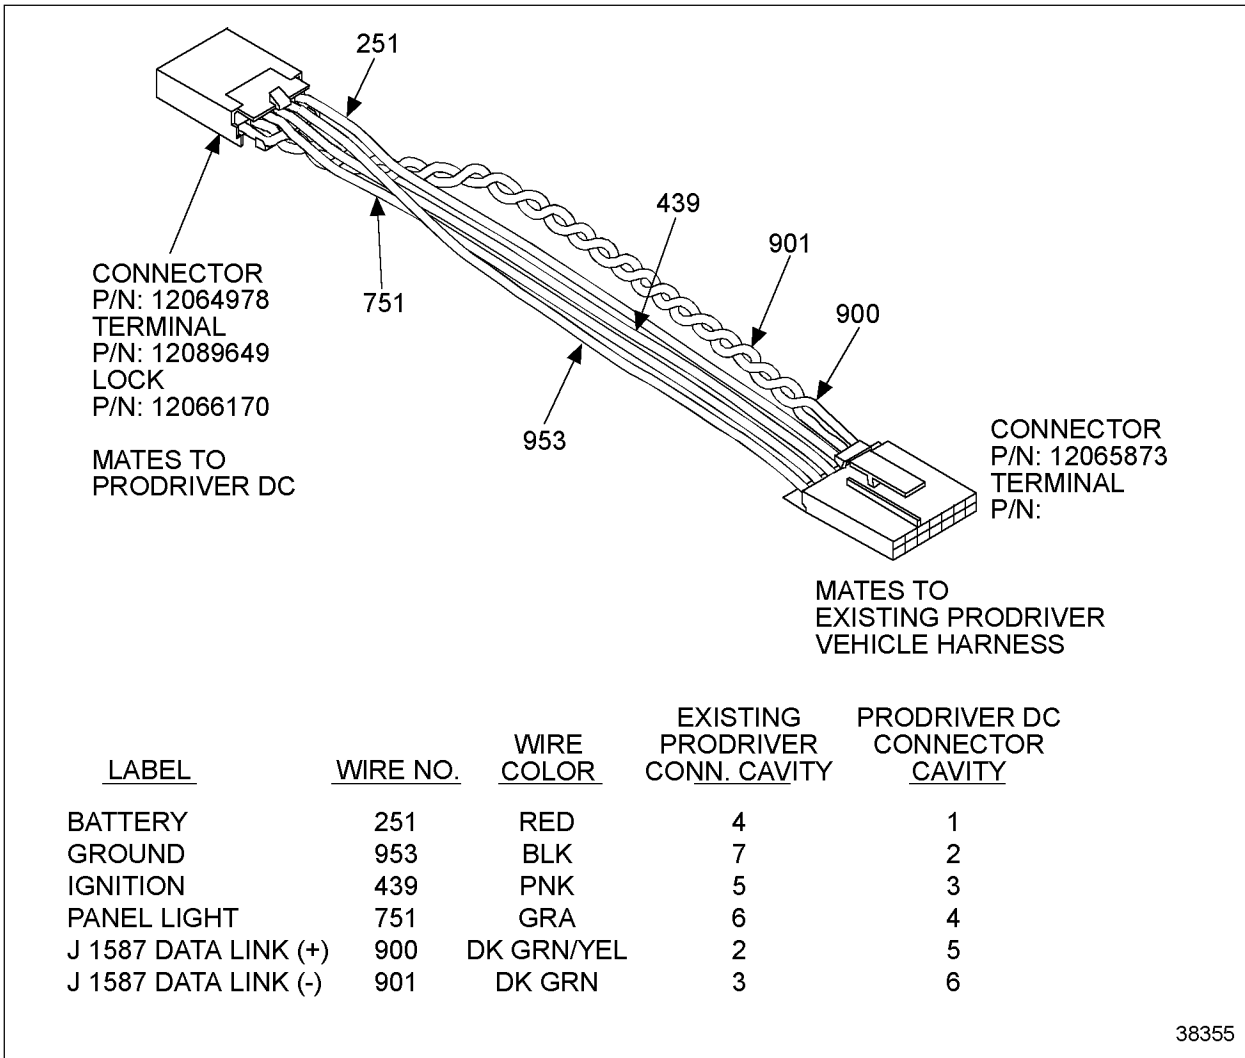


Figure 5-28 ProDriver DC Jumper Harness

5.14.6 MANAGEMENT INFORMATION PRODUCTS KITS

Several kits are available to install the Management Information Products.

ProDriver DC Kits are listed in Table 5-56, Table 5-58, and Table 5-60.

Part Number	Description	Quantity
23525745	ProDriver DC Display Unit	1
23525872	ProDriver DC Flush Mount Bracket	1
23525874	ProDriver DC Wiring Harness	1
12033769	Connector 2-way 630 Metri-Pack Fuse Holder	1
12033731	Cover Fuse Holder	1
12020156	Fuse Terminals — 16 ga.	2
12004003	Fuse — 3 Amp.	1
05101020	Nylon Tie Strap	5
18SP528	ProDriver DC Installation Instructions	1
6SE0703	ProDriver DC User Manual (6SE703)	1
7SE0447	ProDriver DC Pocket Card (7SE447)	1

Table 5-56 ProDriver DC Flush Mount Kit P/N: 23525759

Part Number	Description	Quantity
23525745	ProDriver DC Display Unit	1
23525872	ProDriver DC Flush Mount Bracket	1
23524862	ProDriver DC Adapter Harness	1
6SE0703	ProDriver DC User Manual (6SE703)	1
7SE0447	ProDriver DC Pocket Card (7SE447)	1

Table 5-57 ProDriver DC Flush Mount Kit P/N: 23525753

Part Number	Description	Quantity
23525745	ProDriver DC Display Unit	1
23525873	ProDriver DC Surface Mount Bracket	1
23525874	ProDriver DC Wiring Harness	1
12033769	Connector 2-way 630 Metri-Pack Fuse Holder	1
12033731	Cover Fuse Holder	1
12020156	Fuse Terminals — 16 ga.	2
12004003	Fuse — 3 Amp	1
05101020	Nylon Tie Strap	5
18SP528	ProDriver DC Installation Instructions	1
6SE0703	ProDriver DC User Manual (6SE703)	1
7SE0447	ProDriver DC Pocket Card (7SE447)	1

Table 5-58 ProDriver DC Surface Mount Kit P/N: 23525760

Part Number	Description	Quantity
23525745	ProDriver DC Display Unit	1
23524862	ProDriver DC Adapter Harness	1
23525873	ProDriver DC Surface Mount Bracket	1
6SE0703	ProDriver DC User Manual (6SE703)	1
7SE0447	ProDriver DC Pocket Card (7SE447)	1

Table 5-59 ProDriver DC Surface Mount Kit P/N: 23525754

Part Number	Description
23530729	Data Card (pack of 10)
23529276	ProDriver DC USB Data Card Reader
23529277	ProDriver DC PCMCIA Data Card Reader

Table 5-60 Other ProDriver DC Parts

5.15 OPTIMIZED IDLE

Optimized Idle® enhances the DDEC Idle Shutdown feature. Optimized Idle will automatically stop and restart the engine when required in order to keep the engine temperature above 60°F, the battery charged, and/or the vehicle interior at the desired temperature (using the optional Optimized Idle thermostat). Other benefits include an overall reduction in exhaust emissions and noise and improved starter and engine life (by starting a warm engine). The DDR, Detroit Diesel Diagnostic Link (DDDL), and DDEC Reports provide access to the Optimized Idle fuel and idle time savings, and run time information.

5.15.1 OPERATION

The following conditions must be met in order to use the Optimized Idle function:

- The Ignition must be ON with the vehicle idling
- Hood, cab, and/or engine compartment doors closed
- Transmission in neutral
- Park brake set
- Idle shutdown timer must be enabled
- Cruise master switch turned to ON position (if in the ON position, turn to OFF then to ON)

Once these conditions are met, remain idling and the Optimized Idle Active light will flash. This indicates that Optimized Idle will begin operation only after the idle shutdown timer is over. Optimized Idle allows the operation of all DDEC features such as PTO, throttle control, and VSG Cruise, while the active light is flashing.

The active light will stop flashing and stay on, after the shutdown timer has expired. The operator no longer can use other DDEC features, including the throttle, until the park brake is released, one of the safety conditions are broken, or the cruise switch is turned OFF. The engine operates in engine mode or thermostat mode. Once Optimized Idle becomes active, the engine will either shutdown if Optimized Idle parameters are satisfied or ramp to 1100 RPM.

If the engine does not start after the second attempt, or if the vehicle moves while Optimized Idle is active, the Check Engine Light will turn ON to indicate that Optimized Idle has been turned OFF (Active Light will turn OFF) due to the above condition. The ignition must be turned OFF and the engine restarted in order to use Optimized Idle.

The alarm will sound briefly prior to any engine start. After Optimized Idle starts the engine, the speed will be 1100 RPM.

Engine Mode

Optimized Idle will start and stop the engine to keep the following parameters within limits.

Battery Voltage - The engine will start when the battery voltage drops below 12.5 Volts for 12 Volt systems or 24.4 Volts for 24 Volt systems. The engine will run for a minimum of two hours when started due to low battery voltage.

Oil Temperature - The engine will start when the oil temperature drops below 60°F (15.55°C) and will run until the oil temperature reaches 104°F (40°C).

Thermostat Mode

The optional Optimized Idle thermostat must be turned ON. Engine mode parameters as well as the interior temperature are monitored in this mode. The thermostat informs the ECM when to start/stop the engine to keep the interior warm/cool based on the thermostat setting. It also monitors the outside temperature by way of the skin temperature sensor to determine if the ambient temperature is extreme enough that the engine should run continuously.

Any other accessories connected to the Vehicle Power Shutdown relay will turn ON for Thermostat Mode engine starts. The heater and A/C fans will remain OFF for Engine Mode starts.

If Optimized Idle starts the engine for the Engine Mode, and Thermostat Mode is then requested, the heater and A/C fan will turn ON approximately 30 seconds after the Thermostat Mode is requested.

Optimized Idle Start Up Sequence

The following occurs during to any Optimized Idle engine start:

1. Optimized Idle Active Light is ON. The ECM determines when the engine needs to start to charge the battery, warm the engine, or heat/cool the vehicle interior.
2. The alarm (mounted in the engine compartment) will sound briefly.
3. The starter will engage and the engine will start. If the engine speed does not reach a predetermined level within a few seconds, Optimized Idle will attempt a second engine start after 45 seconds. The alarm will sound again prior to the second engine start. If the engine still does not start after the second start attempt, the system will disarm for the rest of the ignition cycle.
4. The engine will ramp up to 1100 RPM. If the engine was started in the Thermostat Mode, the heater or A/C fans will turn ON after approximately 30 seconds.

5.15.2 INSTALLATION

New installations must be approved by Detroit Diesel. See Figure 5-29 for the Optimized Idle overall system schematic.

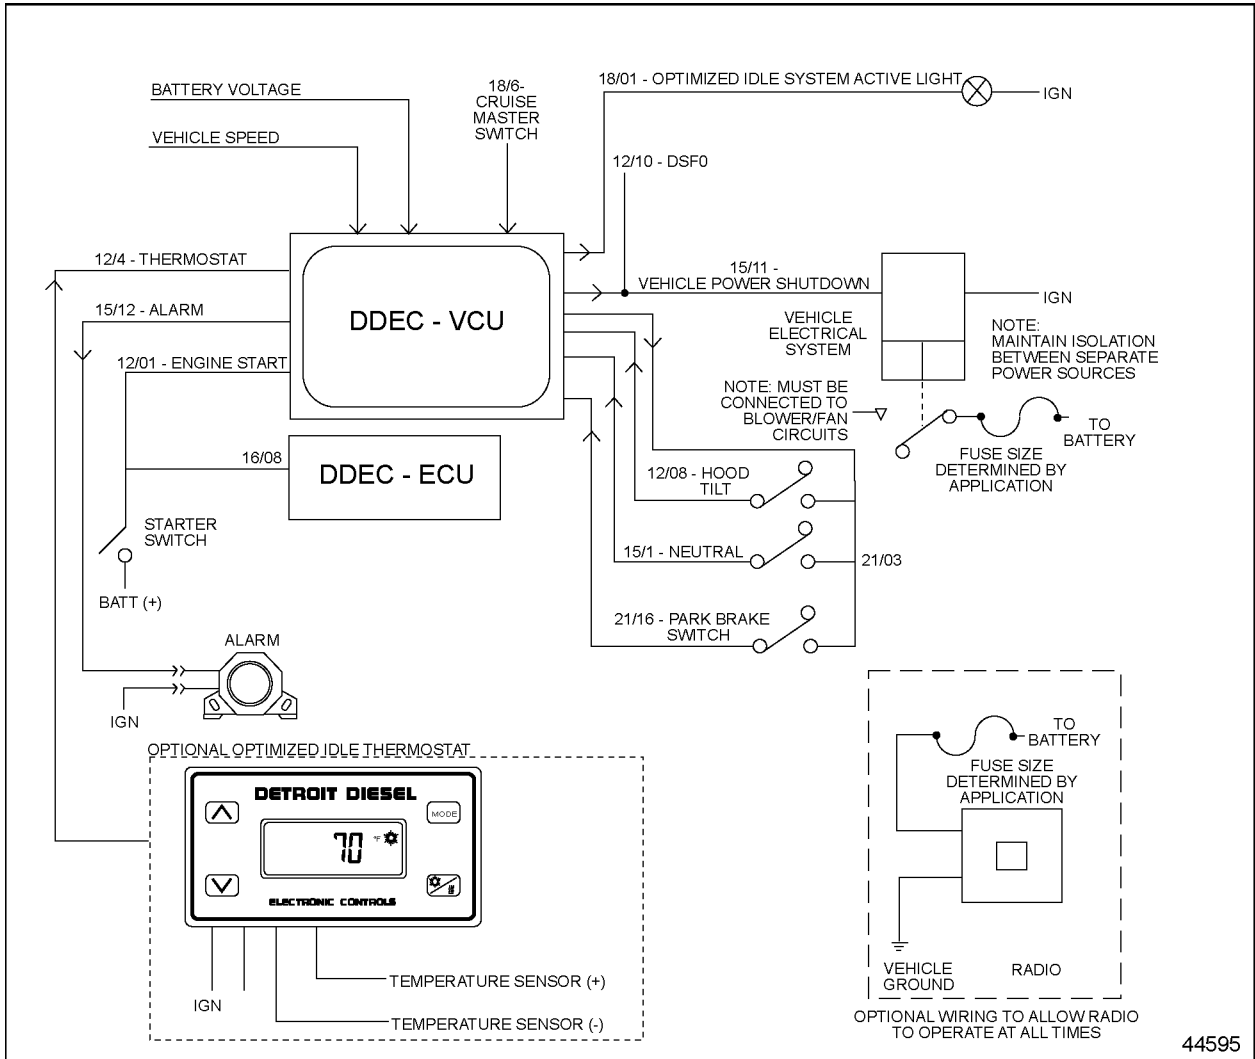


Figure 5-29 Optimized Idle System Overview for MBE Engines

5.15.3 PROGRAMMING REQUIREMENTS AND FLEXIBILITY

The digital inputs and outputs listed in Table 5-61 can be programmed with VEPS, DRS or minidiag.

Parameter / Description	Setting	Default	Parameter ID
OI Enable	1	0 — Disable	1 12 07
Output Relay/Starter Lockout	4	0 — Disable	1 16 01
VSS	2	—	1 08 01
OI Thermostat (optional) Enabled	4	3 — Off	1 09 04
OI Thermostat (optional) Disabled	3	—	1 09 04
Transmission Neutral Hard Wired	1	—	1 13 07
Park Brake Hard Wired	1	—	1 13 08
Clutch Switch Hard Wired	0	—	1 13 15
Input DSF3 (OI Hood Switch)	2	—	1 13 38
Configuration Variable Input DSF0	10	9 — Off	1 13 17
Configuration Relay 4 (OI Active Lamp)	10	9 — Off	1 14 10
Configuration Relay 3 (Vehicle Power Shutdown)	10	0 — Disable	1 14 01
Diagnosis Relay 4	1	0 — Disable	1 14 19
Starter Lockout Diagnostics (OI Alarm)	0	1 — Disable	1 16 02
Idle Shutdown Enabled	1	—	1 17 01
VSG Shutdown Enabled	1	—	1 17 03
Enable Idle/VSG Shutdown Override	1	—	1 17 09
Config VSG Control Enable	3	—	1 07 01
Engine Load for VSG Shutdown	200	—	1 17 05
Starter DDEC-ECU Control	0	—	0 01 03

Table 5-61 Optimized Idle Digital Inputs and Digital Outputs

5.15.4 INTERACTION WITH OTHER FEATURES

The Vehicle Power shutdown feature is used by Optimized Idle to turn off all accessory loads when the engine is shutdown. Optimized Idle will turn these loads on for Thermostat Mode starts.

No other DDEC features can be used when Optimized Idle is active.

5.16 PASSMART

The PasSmart™ feature is available on selected on-highway engines equipped with a Vehicle Speed Sensor.

5.16.1 OPERATION

The PasSmart feature allows a fleet manager to enable a second Vehicle Limit Speed (VLS) above the normal VLS to assist while passing other vehicles on the highway. This second VLS is programmed for a limited duration during a given time period (interval). The passing speed interval starts when the feature is programmed. An interval of 8, 12, or 24 hours will always reset at midnight.

The driver activates PasSmart by double-pumping the accelerator pedal. Starting at the full throttle position, the driver releases the throttle completely, returns the throttle to the full throttle position, releases it again and then returns to full throttle. If the driver completes this action within five seconds, PasSmart is activated.

After double-pumping the accelerator pedal, the vehicle is given 20 seconds to accelerate to a speed above the normal VLS limit. If the vehicle speed does not exceed the normal VLS speed in 20 seconds, the driver must repeat the double-pump action. Once the normal VLS has been exceeded, a new higher VLS becomes the maximum vehicle speed limit. This limit is the normal VLS plus the Passing Speed Increment.

A passing speed duration timer starts when vehicle speed exceeds the normal VLS limit and continues to count until the vehicle speed drops back below the normal VLS speed. At the end of the passing event when the vehicle speed drops back below the normal VLS, PasSmart is automatically deactivated and the driver cannot exceed the normal VLS unless the Accelerator Pedal is double-pumped again.

PasSmart operates only with the foot pedal and not with the Cruise Control switches or hand throttle. However, activating PasSmart does not disturb or deactivate Cruise Control if it is on when the passing event begins. Once the driver has passed the other vehicles and PasSmart has deactivated, Cruise Control automatically takes over. To deactivate Cruise Control during the pass, the driver must turn the Cruise Control switch to off.

When the Passing Speed Duration time expires, the AWL will begin to flash one minute prior to ramping the VLS limit back down to the normal VLS limit. The rampdown event always takes 5 seconds regardless of the Passing Speed Increment programmed into the ECU. The rampdown alert can be distinguished from an engine fault warning in that the AWL flashes for the PasSmart alert and remains on constantly for an engine fault.

If intervals of 8, 12, or 24 hours are selected, the interval will always reset after the chosen interval and at midnight. This allows fleets to synchronize the reset with driver change periods. All other intervals reset from the time they are selected. For example, if you select 4 hours, then a reset will occur every 4 hours from the time of programming but not necessarily at midnight.

PasSmart still operates when there is an active (non-shutdown) system fault. In this situation the AWL goes from constant illumination to flashing one minute before the VLS limit ramps down. At the end of the passing event when PasSmart is deactivated, the AWL will return to constant illumination if the fault is still active.

If there is an active stop engine fault, the rampdown/shutdown activity overrides PasSmart. The additional passing speed is not available until the fault is cleared.

For example, if the normal fleet speed limit is 65 MPH, the fleet manager can increase the VLS an additional 10 MPH for a maximum of 30 minutes each day with a reset interval of 8 hours or midnight. An example of these limits is listed in Table 5-62.

Parameter	Setting
Passing Speed Duration	30 minutes
Passing Speed Interval	8 hours
Passing Speed Increment	10 MPH

Table 5-62 PasSmart Settings

Each time the driver exceeds 65 MPH, the 30 minute clock counts down as long as the speed remains above 65 MPH. He or she can continue to enter and exit the PasSmart extra speed zone to pass vehicles until the entire 30 minutes of higher VLS is used up. The driver is warned by the AWL one minute before the time expires. The vehicle speed is then limited to 65 MPH until the 8 hour period expires (or midnight comes) and an additional 30 minutes of passing time is available.

5.16.2 INSTALLATION

An OEM supplied Vehicle Speed Sensor or output shaft speed over the SAE J1939 Data Link is required. Refer to section 3.7.4, "Vehicle Speed Sensor," for additional information.

5.16.3 PROGRAMMING REQUIREMENTS AND FLEXIBILITY

The PasSmart parameters are programmable at engine order entry or with DDDL, Vehicle Electronic Programming System (VEPS), the Nexiq DDR as listed in Table 5-63.

Parameter	Description	Range	Default	Parameter ID
Enable PasSmart	Enables/disables the feature.	0 = Disable 1 = Enable	0	1 23 16
Passing Speed Duration	The duration of time per interval that is permitted at the higher speed. A value of zero will disable the feature.	0 to 255 minutes	0	1 23 19
Passing Speed Interval	The period of time when the ECM resets to begin a new period.	1 to 24 hours*	1	1 23 21
Passing Speed Increment	The additional vehicle speed permitted above the programmed vehicle speed limit. A value of zero will disable the feature.	0 to 255 KPH	0	1 23 18
PasSmart Rampdown Time	The time within which the road speed limit will return to the programmed road speed limit when the feature is deactivated.	0 – 255 seconds	0	1 23 20

* The time within which the road speed limit will return to the programmed road speed limit when the the feature is deactivated.

Table 5-63 PasSmart Parameters

5.16.4 INTERACTION WITH OTHER FEATURES

PasSmart will increase the Vehicle Speed Limit.

A vehicle can be set up with both PasSmart and Fuel Economy Incentive, but the extra speed increments provided by the two features do not add together. For example, if Fuel Economy Incentive is set up to give 7 MPH of extra speed when the driver hits the maximum fuel economy target and the PasSmart increase is 5 MPH the resulting speed increase is 7 MPH, not 12 MPH.

THIS PAGE INTENTIONALLY LEFT BLANK

5.17 PASSWORDS

DDEC for MBE 900 and MBE 4000 is capable of providing protection for groups parameters (V 14.20 or later) or a fleet password for all parameters (V 13 or later).

5.17.1 OPERATION

A password of zero is used to deactivate the protection. The lockout passwords may be up to 10 numbers. There are no letters allowed. Each level can have its own unique password.

Passwords can be activated with DDDL (6.2 or later), VEPS, DRS (5.2 or later), or minidiag2. Once activated, the parameters may not be changed until the correct password is reentered. The DDEC-VCU is automatically locked at the next ignition cycle.

The groups selected for additional password protection are listed in Table 5-64.

Level	Parameters Protected
1	Fleet – All customer parameters
2	Optimized Idle, SmartCruise
3	Export – Road Speed Limiting, VSS Configuration, Anti-Tamper, PasSmart, Fuel Economy Incentive, Fleet Management, Low Gear Torque Limiting, Progressive Shift
4	Limiters
5	PTO, Idle Shutdown
6	I/O Config, Engine Protection, Fan Control, Engine Brakes, Trans Type, Droop, Remote Accelerator Pedal, CAN Configuration
7	Not Used

Table 5-64 Additional Password Protection

Back Door Password

In cases where the password for a locked module is not available, a separate “back door” password may be obtained from Detroit Diesel Technical Service. Detroit Diesel requires the “A” and “B” values read from the locked module with the Service Tool. The new unlock code will be provided by Detroit Diesel Technical Service for entry into the Service Tool. When the correct Back Door password is entered, all parameters with write access by the Service tool may be changed.

Changing the Password

The password itself may be changed. The DDEC-VCU is automatically locked at the next ignition cycle. Changing the password to a value of “0” will disable password protection. When the password is changed, the ignition must be off for at least 15 seconds.

THIS PAGE INTENTIONALLY LEFT BLANK

5.18 PROGRESSIVE SHIFT

The Progressive Shift option offers a high range maximum vehicle speed limit to encourage the use of high (top) gear during cruise operation. Progressive Shift encourages the driver to upshift from a lower to a higher gear prior to reaching the engine's governed speed. The resulting lower engine speed in high range should result in improved fuel economy. Progressive shifting techniques should be practiced by every driver, but can be forced if fleet management considers it necessary. The benefits from progressive shifting are best realized during stop-and-go driving cycles.

The maximum engine speed will be limited below the programmed MPH to encourage up shifting.

- Progressive Shift should be used in applications where the reduced driveability will not impede trip times or productivity.
- Progressive Shift is not compatible with most automatic transmission.

5.18.1 OPERATION

The Progressive Shift option has a setable gear ratio threshold and engine speed limit parameters, which are programmable with minidiag2. See Figure 5-30 for an example shift pattern.

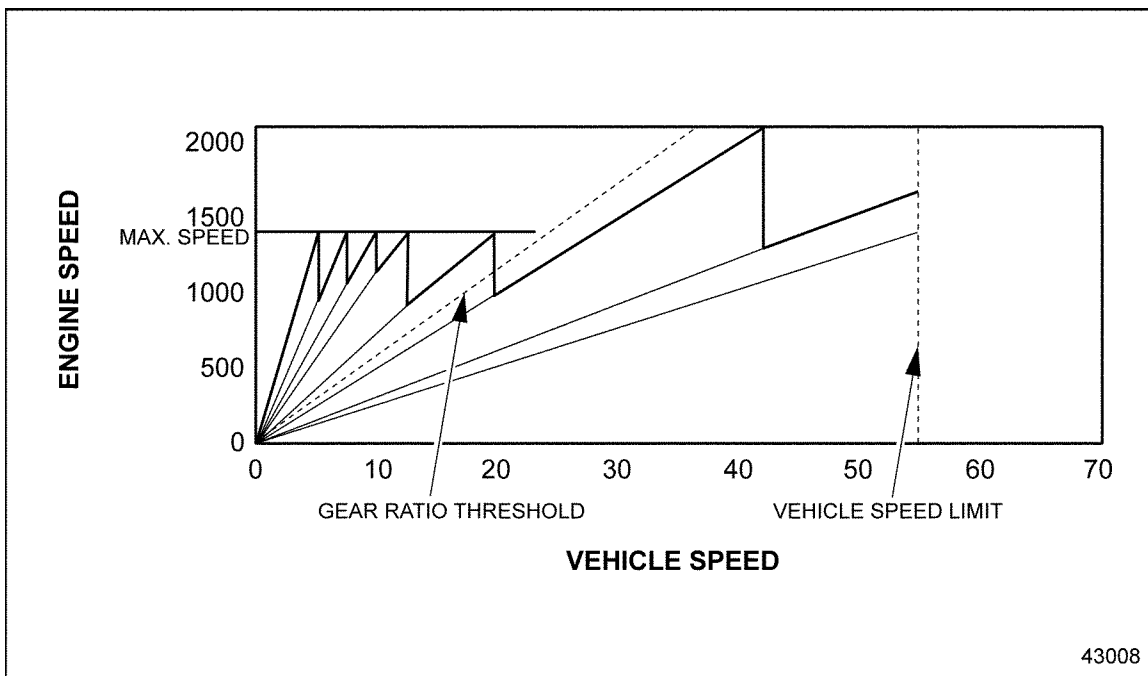


Figure 5-30 Progressive Shift Chart

An alternate use for the Progressive Shift option would be to encourage a driver into top gear. Normally this condition exists when the gearing selected at the time of order allows a vehicle speed limit to be reached in a gear lower than top gear.

5.18.2 GEAR RATIO THRESHOLD

The low range threshold of operation is defined by a Gear Ratio (DDEC-VCU parameter ID 1:23:07). The maximum engine speed will be limited to a maximum progressive shifting engine speed (DDEC-VCU parameter ID 1:23:06) when the transmission is a ratio less than the Gear Ratio. The engine will be allowed to run up to maximum rated engine speed when the transmission is in a ratio greater or equal to the Gear Ratio.

The Gear Ratio for progressive shifting may be calculated as follows:

$$\text{Gear Ratio} = \text{Transmission Output Shaft Speed (rpm)} / \text{Engine Speed (rpm)}$$

The ratio should be selected to be the lowest gear in which full engine speed is desired. The calculated number for calibration should be decreased by 10% to prevent engine limitation cycling due to changing conditions.

5.18.3 INSTALLATION INFORMATION

A Vehicle Speed Sensor (VSS) must be installed. It must be enabled, and all proper calculations entered into the DDEC-VCU with VEPS or the minidiag2. Refer to section 3.7.4, "Vehicle Speed Sensor," for additional information.

5.18.4 PROGRAMMING REQUIREMENTS AND FLEXIBILITY

Progressive Shift parameters that can be set by the Nexiq DDR, DDDL, DRS, VEPS or minidiag2 are listed in Table 5-65.

Parameter	Description	Default	Range	Sample Values	Parameter ID
Gear Ratio for Progressive Shifting	Gear ratio for which engine speed is limited when transmission gear is below this ratio	0.015	0.000 - 2.000	0.5	1 23 07
Max Engine Speed for Progressive Shifting	Maximum engine speed (rpm) when driving in lower gear	3000 rpm	500 – 3000 rpm	1400	1 23 06

Table 5-65 Progressive Shift Programming

5.19 STARTER LOCKOUT

The Starter Lockout function protects the starter motor from over-speed damage, e.g. re-engaging the starter motor while the engine is running.

5.19.1 OPERATION

The Starter Lockout output circuit drives a normally closed relay, which interrupts the starting signal when the output has been activated.

If enabled, the Starter Lockout output will be activated when the engine speed exceeds the minimum speed for the starting motor for a maximum amount of time. To ensure that the engine would start even under worst conditions, the over-speed time condition will be added to the engine speed condition before the starter is locked out. Both values, maximum speed and minimum over-speed time, are dependent on the coolant temperature. The output is disabled when the ignition switch has been cycled to off or the engine is not running, i.e. the engine speed has a value of zero.

The cranking time is limited to a programmed value to keep the starting motor from over crank damage. The starter lockout relay will be activated when cranking time exceeds this lockout limit.

Since the starter signal is not available, the engine speed will be monitored to detect when the engine is cranking. When the starter engages, engine speed rises from zero to starter cranking speed. After this has been detected, engine speed will not be below the programmed speed for over-crank detection for the programmed maximum starter crank time.

If the driver is still turning the start key and the engine doesn't start while the maximum crank time expires, the starter lockout relay will be activated to shut off the starting engine. In this instance, the starter lockout relay will remain activated until the programmed lockout time expires and the engine has stopped. This allows the starting motor to cool down before the driver is permitted to start the engine again.

5.19.2 INSTALLATION

The Starter Lockout output circuit drives a normally closed relay, which interrupts the starting signal when the output has been activated. See Figure 5-31.

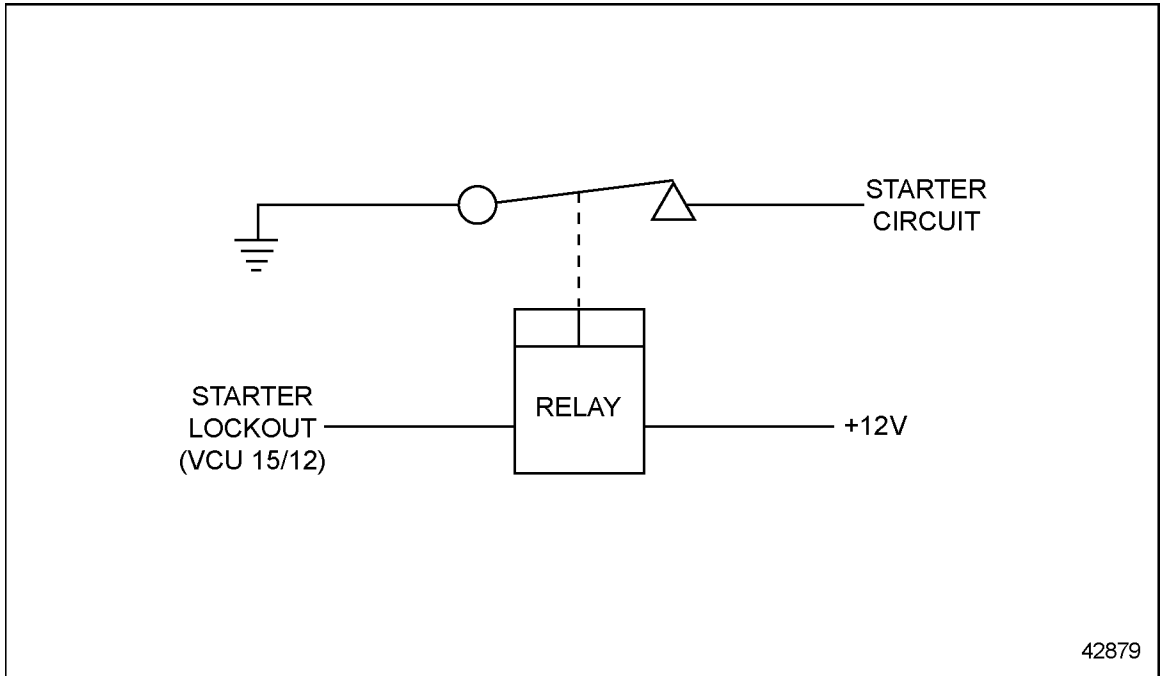


Figure 5-31 Starter Lockout

5.19.3 PROGRAMMING REQUIREMENTS AND FLEXIBILITY

Starter Lockout may be enabled or disabled as listed in Table 5-66 with VEPS, DRS or minidiag2.

Parameter	Description	Range	Default	Parameter ID
Relay 1	Enables/Disables the Starter Lockout Function	0 = Disable 1 = Starter Lockout 2 = Reserved 3 = Reserved 4 = OI Alarm 5 = Reserved	0	1 16 01
Starter Lockout Diagnosis	Enables/Disables Diagnoses for Starter Lockout	0 = Disable 1 = enable	0	1 16 02

Table 5-66 Starter Lockout

5.20 TACHOMETER DRIVE

DDEC for MBE 900 and MBE 4000 uses the Camshaft Position Sensor (CMP Sensor) signals to compute engine speed. The engine speed is transmitted over the SAE J1708/J1587 and J1939 Data Links. Engine speed can be displayed by connecting a tachometer from the DDEC-VCU connector pin 12/6. This circuit provides the standardized output signal for the tachometer drive per ATA recommended practice RP123. See Figure 5-32.

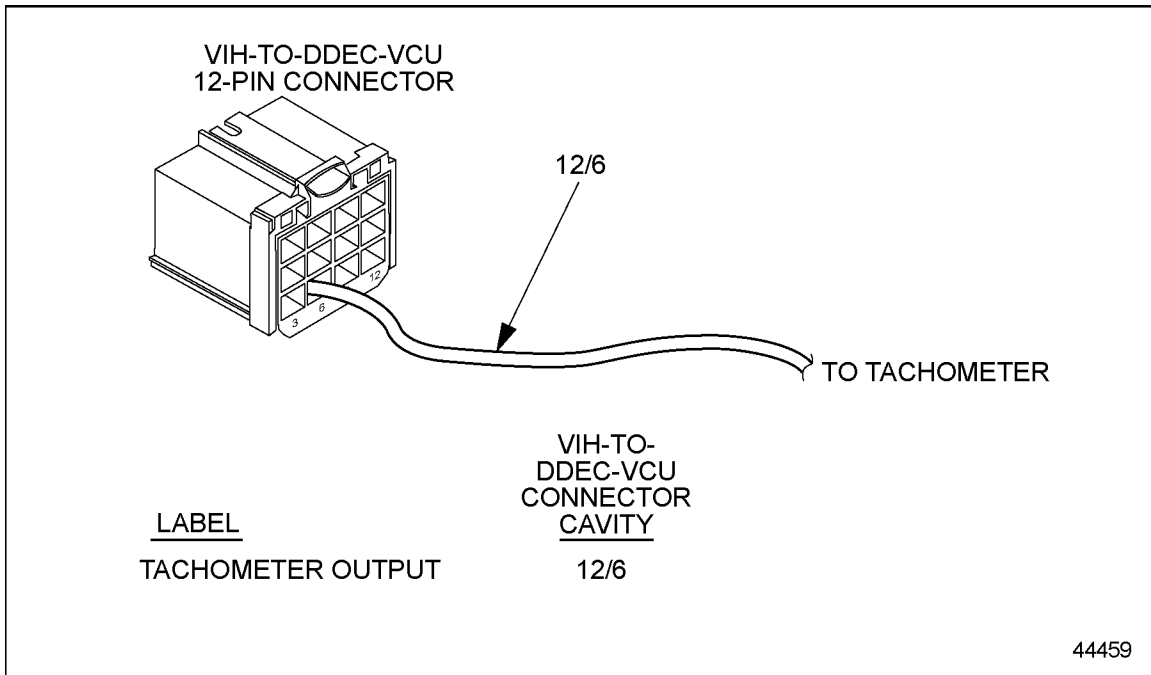


Figure 5-32 Tachometer Drive Installation

5.20.1 OPERATION

Pin 12/6 provides an engine speed signal for driving an external tachometer. This is a low-side output, so a pull-up resistor to VBat may be required for some applications. The signal duty cycle is 50%.

THIS PAGE INTENTIONALLY LEFT BLANK

5.21 THROTTLE CONTROL/GOVERNORS

There are two types of engine governors that are used with throttle controls. The engine governors are:

- The Automotive Limiting Speed Governor (ALSG) for torque control, typical governor for on-highway applications(refer to section 5.21.1)
- The Variable Speed Governor (VSG) for speed control, typical governor for off-highway applications (refer to section 5.21.2)

5.21.1 AUTOMOTIVE LIMITING SPEED GOVERNOR - ON-HIGHWAY

In on-highway applications and some nonroad applications, ALSG is the primary throttle source. The throttle input in a ALSG sets percent load. The amount of fuel input to the engine is determined by the throttle position. As the load on the engine varies the resulting engine speed will vary between idle speed and rated speed.

ALSG Accelerator Pedal

The accelerator pedal (AP) sends an input signal which the ALSG uses to calculate engine power proportional to the foot pedal position. This assembly is also referred to as the Accelerator Pedal Sensor (AP Sensor) assembly.

ALSG Accelerator Pedal Installation

DDEC for MBE 900 and MBE 4000 is compatible with an AP which has an output voltage that meets SAE J1843 and has less than 5% of voltage supply closed throttle variability.

The AP is an OEM supplied part. Vendor sources that may be contacted for additional design and installation details.

NOTE:

An Idle Validation Switch is required.

Williams Controls

14100 S.W. 72nd Avenue
Portland, Oregon 97224
Phone: (503) 684-8600
www.williamscontrols.com

See Figure 5-33 for installation requirements.

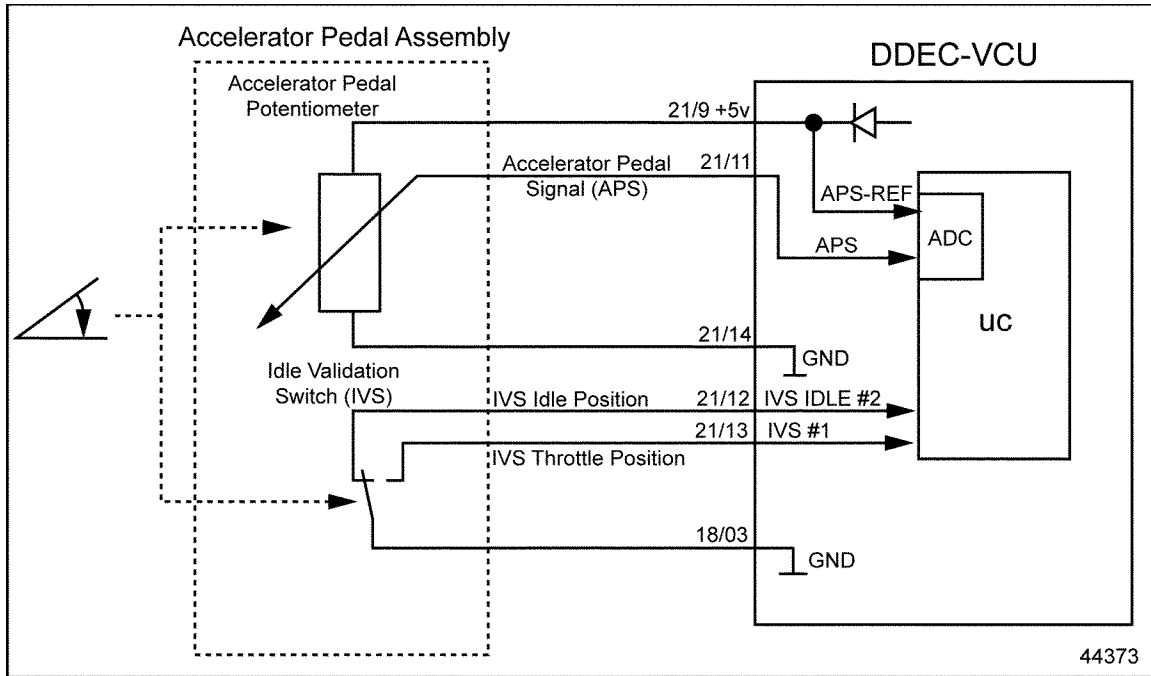


Figure 5-33 Accelerator Pedal Installation

An Idle Validation Switch is required and uses two digital inputs. Refer to section 4.1, "Digital Inputs," for additional information.

ALSG Electronic Foot Pedal Assembly Diagnostics

Idle Validation Switch inputs provide redundancy to assure that the engine will be at idle in the event of an AP in-range malfunction. The Idle Validation Switch is connected to two digital inputs on the DDEC-VCU. When the Idle Validation Switch on the AP is switched to battery ground, the engine speed will be at idle.

5.21.2 VARIABLE SPEED GOVERNOR

VSG control is available to fuel the engine in order to keep the selected VSG speed regardless of engine torque without driver interaction. The engine torque cannot exceed a programmed limit. Upon startup the engine will go to the speed selected by the VSG throttle position.

The VSG throttle control options are:

- Cab VSG – Cruise Switch VSG
- Remote VSG
- Analog VSG

Cab VSG – Cruise Switch VSG

The Cruise Control switches are used to activate and control the Cruise Switch VSG (Cab VSG) option.

NOTE:

Cab throttle and remote throttle can be overridden with the accelerator pedal unless “VSG Throttle Override” is disabled.

The Cruise On/Off switch must be turned ON and the park brake must be engaged (if configured). If Cruise Switch VSG is inactive and the Cruise Switch VSG conditions are met, pressing and releasing the Resume/Accel Switch will activate Cruise Switch VSG at the Resume VSG Speed. Pressing and releasing the Set/Coast Switch will activate Cruise Switch VSG at the Set VSG Speed. The Resume VSG Speed and the Set VSG Speed can be programmed with the VEPS or minidiag2 and cannot be greater than the VSG maximum speed or lower than the VSG minimum speed.

Once the VSG set speed is established, the Resume/Accel Switch can be used to increment the set speed at a rate of 200 rpm/sec (programmable). Releasing the Resume/Accel Switch will set the engine speed at the current operating speed.

The Set/Coast Switch will decrement the set speed at a rate of 200 rpm/sec (programmable), down to the minimum VSG speed. Releasing the Set/Coast Switch will set the engine speed at the current operating speed.

Cab VSG speed is disabled for any of the following:

- Turning the Cruise Master Switch off
- Vehicle speed is greater than Max Vehicle Speed in VSG (programmable – default 10 km/h)
- VSS fault
- Clutch Released Pedal or Service Brake Pedal are pressed - optional
- Park Brake is off (if configured)

If VSG Throttle Override is enabled, the throttle pedal can override the VSG engine speed up to the maximum engine speed for Throttle Override. Throttle pedal or remote throttle engine speed can override once the current VSG engine speed is reached. The previous VSG set speed will become active again, if it is greater than the engine speed equivalent to the throttle pedal percentage.

See Figure 5-35 for a diagram of Cab VSG Mode.

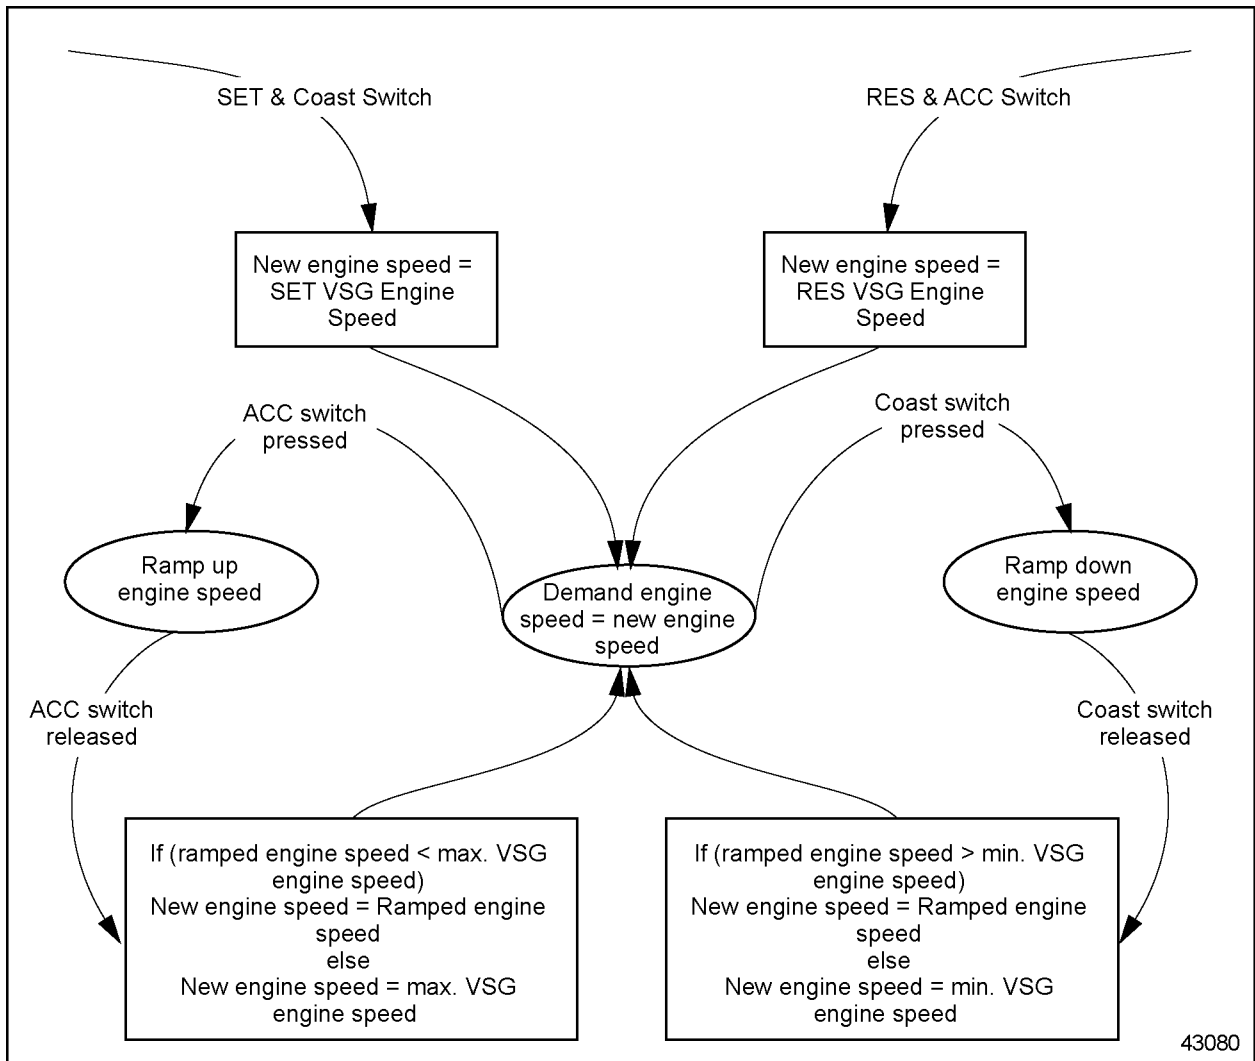


Figure 5-35 Cab VSG Mode

Cruise Switch VSG Programming Requirement and Flexibility

The digital inputs listed in Table 5-67 are required for Cruise Switch VSG. These digital inputs may be configured with VEPS or the minidiag2.

Digital Input	Setting	Default	Parameter ID
Enable Service Brake Input	1 = Enable 0 = Disable	1 = Enabled	1 13 04
Service Brake Input Configuration	0 = Hardwired 1 = Source Address 1 (SA1) 2 = Source Address 2 (SA2) 3 = Source Address 3 (SA3)	0 = Hardwired	1 13 05
Cruise Control On/Off Switch Configuration	0 = Hardwired 1 = Source Address 1 (SA1) 2 = Source Address 2 (SA2) 3 = Source Address 3 (SA3)	0 = Hardwired	1 13 11
Cruise Control Set/Coast & Resume/Accel Switch Configuration	0 = Hardwired 1 = Source Address 1 (SA1) 2 = Source Address 2 (SA2) 3 = Source Address 3 (SA3)	0 = Hardwired	1 13 12
Clutch Switch Configuration	0 = Hardwired 1 = Source Address 1 (SA1) 2 = Source Address 2 (SA2) 3 = Source Address 3 (SA3)	0 = Hardwired	1 13 15
Enable Park Brake Input	1 = Enable 0 = Disable	1 = Enabled	1 13 08
Park Brake Switch Configuration	0 = Hardwired 1 = Source Address 1 (SA1) 2 = Source Address 2 (SA2) 3 = Source Address 3 (SA3)	0 = Hardwired	1 13 09
Neutral Switch Configuration	0 = J1939 ETC2 1 = Hardwired	0 = J1939 ETC2	1 13 07

Table 5-67 Cruise Switch VSG Digital Inputs

The Cruise Switch VSG parameters are listed in Table 5-68 and Table 5-69.

Parameters	Description	Default	Range	Parameter ID	Access
VSG Control on VSG and Cruise Control Pin	Enables/disables the VSG function	0	0 = Disabled 1 = Enabled 2 = Enabled if neutral 3 = Enabled if neutral and park brake* 4 = Enabled if park brake*	1 07 01	Nexiq DDR, DDDL, DRS, VEPS, minidiag2
Max VSG Speed	Sets the max VSG speed	3000 RPM	500 – 3000 RPM	1 07 02	Nexiq DDR, DDDL, DRS, VEPS, minidiag2
Min VSG Speed	Sets the min VSG speed	500 RPM	500 – 3000 RPM	1 07 03	Nexiq DDR, DDDL, DRS, VEPS, minidiag2
VSG Throttle Override	Enables/disables the throttle pedal from overriding VSG mode.	1 = Enabled	0 = Disabled 1 = Enabled	1 07 04	Nexiq DDR, DDDL, DRS, VEPS, minidiag2
Max Engine Speed for Throttle Override	Sets the max engine speed that the throttle can obtain when in VSG mode.	3000 RPM	0 – 3000 RPM	1 07 05	Nexiq DDR, DDDL, DRS, VEPS, minidiag2
VSG Dropout on Service Brake or Park Brake	Enables/Disables the status of the Service Brake or Park Brake for disabling of VSG	0 = VSG independent of Service Brake or Park Brake	0 = Allows VSG to run independent of Service Brake or Park Brake 1 =VSG drops out on either Service Brake or Park Brake 2 = VSG drops out on Service Brake 3 = VSG drops out on Park Brake	1 07 06	Nexiq DDR, DDDL, DRS, VEPS, minidiag2
VSG Dropout on Clutch Switch	Enables/Disables the status of the Clutch Switch for disabling of VSG	0 = Disabled (Clutch switch will not disable VSG)	0 = Disabled 1 = Enabled	1 07 07	Nexiq DDR, DDDL, DRS, VEPS, minidiag2

* See parameter 1 07 06

Table 5-68 Cruise Switch VSG Parameters (1 of 2)

Parameters	Description	Default	Range	Parameter ID	Access
Max Vehicle Speed in VSG	Sets the max vehicle speed over which VSG is disabled	10 km/h	0 – 128 km/h	1 07 08	Nexiq DDR, DDDL, DRS, VEPS, minidiag2
Cruise Set VSG Speed	Sets the initial speed when the Set/Coast Switch is used to enable Cab VSG	500 RPM	Min VSG Speed to Max VSG Speed	1 07 09	Nexiq DDR, DDDL, DRS, VEPS, minidiag2
Set VSG Max Engine Torque	Sets the max engine torque that becomes active once the Set/Coast Switch is activated	500 Nm	0-5000 Nm	1 07 11	Nexiq DDR, DDDL, DRS, VEPS, minidiag2
Cruise Resume VSG Speed	Sets the initial speed when the Resume/Accel Switch is used to enable Cab VSG	500 RPM	Min VSG Speed to Max VSG Speed	1 07 12	Nexiq DDR, DDDL, DRS, VEPS, minidiag2
Resume VSG Max Engine Torque	Sets the max engine torque that becomes active once the Resume/Accel Switch is activated	5000 Nm	0-5000 Nm	1 07 14	Nexiq DDR, DDDL, DRS, VEPS, minidiag2
VSG Ramp Rate	Sets the rate of increase or decrease.	1000 RPM/sec	25 – 2500 RPM/sec	1 07 15	Nexiq DDR, DDDL, DRS, VEPS, minidiag2

Table 5-69 Cruise Switch VSG Parameters (2 of 2)

Remote VSG Mode

The Remote VSG will override the Cab VSG mode when the Remote VSG Switch input on the DDEC-VCU (18/10) is grounded. Remote VSG will also override throttle pedal and remote throttle unless “VSG Throttle Override” is disabled. The active throttle will override Remote VSG if “VSG Throttle Override” is enabled.

The preset speed is selected by toggling the remote VSG switch once for VSG Speed #1, twice within two seconds for VSG Speed #2, and three times within two seconds for VSG Speed #3.

Remote VSG speed is disabled for any of the following:

- Turning the Remote VSG switch off for more than two seconds
- Vehicle speed is greater than Max Vehicle Speed in VSG (programmable – default 10 km/h)
- VSS fault
- Clutch Released Pedal or Service Brake Pedal are pressed
- Park Brake is off (if configured)

If VSG Throttle Override is enabled, the throttle pedal can override the VSG Engine speed up to the Maximum Engine Speed for Throttle Override. The throttle pedal or remote throttle engine speed is less than current VSG engine speed, the engine will not respond to throttle requests less than the current VSG engine set speed. The previous VSG set speed will become active again, if it is greater than the engine speed equivalent to the throttle pedal percentage.

If remote VSG is active and then disabled due to one or more disabling condition, VSG mode will automatically reactivate when the disabling condition is removed.

NOTE:

If remote VSG is active and then disabled due to one or more disabling conditions, VSG mode will automatically reactivate when the disabling condition is removed.

See Figure 5-36 for a diagram of Remote VSG Mode.

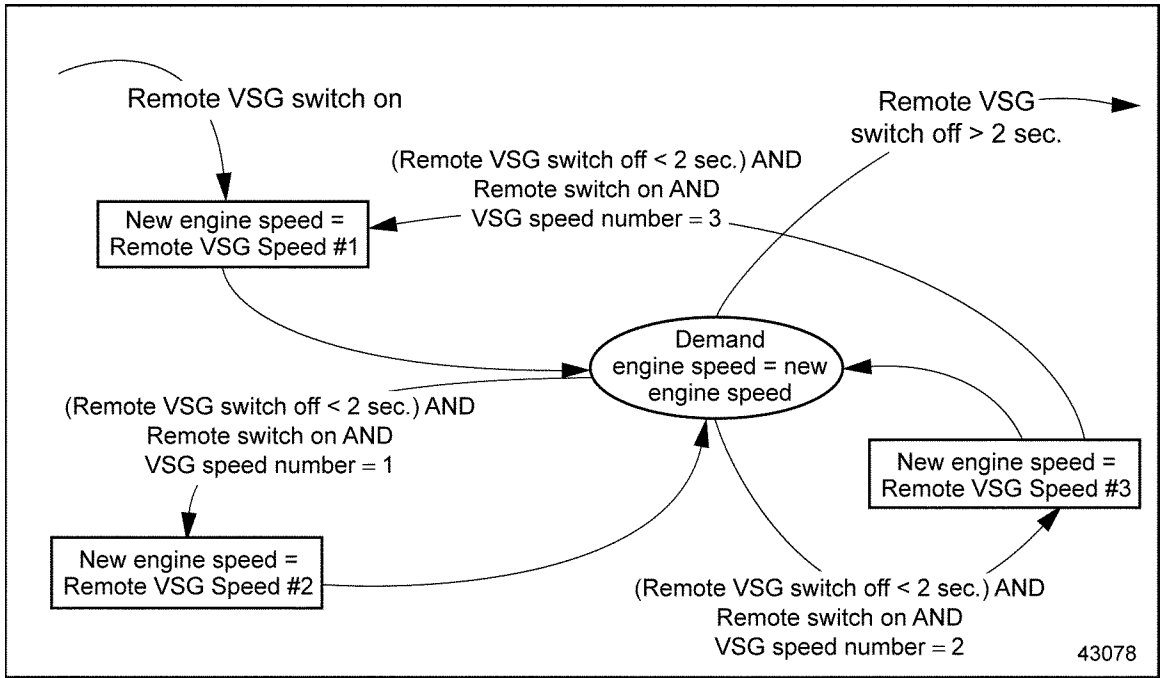


Figure 5-36 Remote VSG Mode

Installation

The Remote VSG Switch is wired to pin 18/10 of the DDEC-VCU. See Figure 5-37.

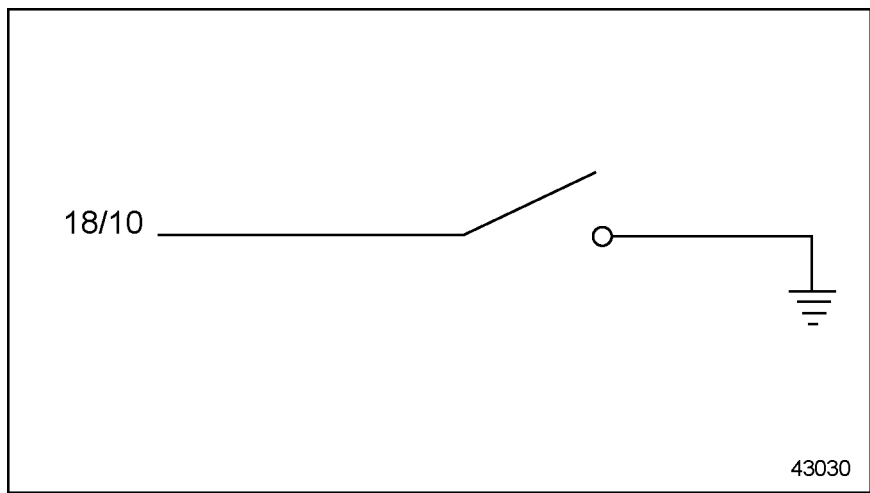


Figure 5-37 Remote VSG Switch

Remote VSG Programming Requirement and Flexibility

The Remote VSG parameters are listed in Table 5-70 and Table 5-71.

Parameters	Description	Range	Defaults	Parameter ID	Access
VSG Control on VSG and Cruise Control Pin	Enables/disables the VSG function	0 = Disabled 1 = Enabled 2 = Enabled if neutral 3 = Enabled if neutral and park brake* 4 = Enabled if park brake*	0	1 07 01	Nexiq DDR, DDDL, DRS, VEPS, minidiag2
Max VSG Speed	Sets the max VSG speed	500 – 3000 RPM	3000 RPM	1 07 02	Nexiq DDR, DDDL, DRS, VEPS, minidiag2
Min VSG Speed	Sets the min VSG speed	500 – 3000 RPM	500 RPM	1 07 03	Nexiq DDR, DDDL, DRS, VEPS, minidiag2
VSG Throttle Override	Enables/disables the throttle pedal from overriding VSG mode.	0 = Disabled 1 = Enabled	0 = Disabled	1 07 04	Nexiq DDR, DDDL, DRS, VEPS, minidiag2
Max Engine Speed for Throttle Override	Sets the max engine speed that the throttle can obtain when in VSG mode.	0 – 3000 RPM	3000 RPM	1 07 05	Nexiq DDR, DDDL, DRS, VEPS, minidiag2
VSG Dropout on Service Brake or Park Brake	Enables/Disables the status of the Service Brake or Park Brake for disabling of VSG	0 = Allows VSG to run independent of Service Brake or Park Brake 1 = VSG drops out on either Service Brake or Park Brake 2 = VSG drops out on Service Brake 3 = VSG drops out on Park Brake	0 = VSG independent of Service Brake or Park Brake	1 07 06	Nexiq DDR, DDDL, DRS, VEPS, minidiag2
VSG Dropout on Clutch Switch	Enables/Disables the status of the Clutch Switch for disabling of VSG	0 = Disabled 1 = Enabled	0 = Disabled (Clutch switch will not disable VSG)	1 07 07	Nexiq DDR, DDDL, DRS, VEPS, minidiag2

* See parameter 1 07 06

Table 5-70 Remote VSG Parameters (1 of 2)

Parameters	Description	Range	Defaults	Parameter ID	Access
Max Vehicle Speed in VSG	Sets the max vehicle speed over which VSG is disabled	0 – 128 km/h	10 km/h	1 07 08	Nexiq DDR, DDDL, DRS, VEPS, minidiag2
VSG Ramp Rate	Sets the rate of increase or decrease when in VSG mode.	25 – 2500 RPM/sec	1000 RPM/sec	1 07 15	Nexiq DDR, DDDL, DRS, VEPS, minidiag2
Number of Remote VSG Speed	Sets the number of remote VSG speeds that can be enabled	1 to 3	1	1 07 16	Nexiq DDR, DDDL, DRS, VEPS, minidiag2
VSG Speed #1	Sets the VSG #1 set speed	Min VSG RPM to Max VSG RPM	950 RPM	1 07 17	Nexiq DDR, DDDL, DRS, VEPS, minidiag2
VSG Speed #1 Governor Type		1 — 11	1	1 07 18	VEPS, minidiag2
VSG Speed #1 Max Engine Torque	Sets the max engine torque for VSG Speed #1	Low Idle - 5000 Nm	5000 Nm	1 07 19	Nexiq DDR, DDDL, DRS, VEPS, minidiag2
VSG Speed #2	#2 VSG set speed	Min VSG RPM to Max VSG RPM	1250 RPM	1 07 20	Nexiq DDR, DDDL, DRS, VEPS, minidiag2
VSG Speed #2 Governor Type		1 — 11	1	1 07 21	VEPS, minidiag2
VSG Speed #2 Max Engine Torque	Sets the max engine torque for VSG Speed #2	Low Idle - 5000 Nm	5000 Nm	1 07 22	Nexiq DDR, DDDL, DRS, VEPS, minidiag2
VSG Speed #3	#3 VSG set speed	Low Idle - 5000 Nm	1850 RPM	1 07 23	Nexiq DDR, DDDL, DRS, VEPS, minidiag2
VSG Speed #3 Governor Type		1 — 11	1	1 07 24	VEPS, minidiag2
VSG Speed #3 Max Engine Torque	Sets the max engine torque for VSG Speed #3	Low Idle - 5000 Nm	5000 Nm	1 07 25	Nexiq DDR, DDDL, DRS, VEPS, minidiag2

Table 5-71 Remote VSG Parameters (2 of 2)

Remote Accelerator Control for VSG or ALSG

A Remote Accelerator Pedal can be installed to control either an analog Remote VSG (VSG) or analog Remote Accelerator Pedal (ALSG).

The Remote VSG will start when the Remote VSG switch (18/10) is switched to battery ground. The Remote VSG logic will override the Cab VSG. Cab throttle and remote throttle are also overridden unless “VSG Throttle Override” is disabled. When ALSG operation is required, the Remote Accelerator Switch is switched to battery ground.

The Remote Accelerator Switch Select input (DDEC-VCU, 18/7) determines the active throttle control. When this pin is grounded, the engine will respond to the remote throttle input. When this input is not grounded, the engine will respond to the cab throttle pedal.

The VSG Enable input (DDEC-VCU, 18/10) determines if the engine will be in VSG or ALSG mode.

If remote VSG is active and then disabled due to one or more disabling condition, VSG mode will automatically reactivate when the disabling condition is removed.

Remote Accelerator Control Example

Example: If a remote throttle is required to work from idle to rated speed, the parameters listed in Table 5-72 must be set.

Parameter	Set To
VSG Throttle Override	1
VSG Speed #1	Idle
Max VSG Speed	Rated (or highest RPM for the engine)

Table 5-72 Remote Accelerator Control Parameter Settings

Installation

See Figure 5-38 for installation of a Remote Accelerator Control for VSG or ALSG.

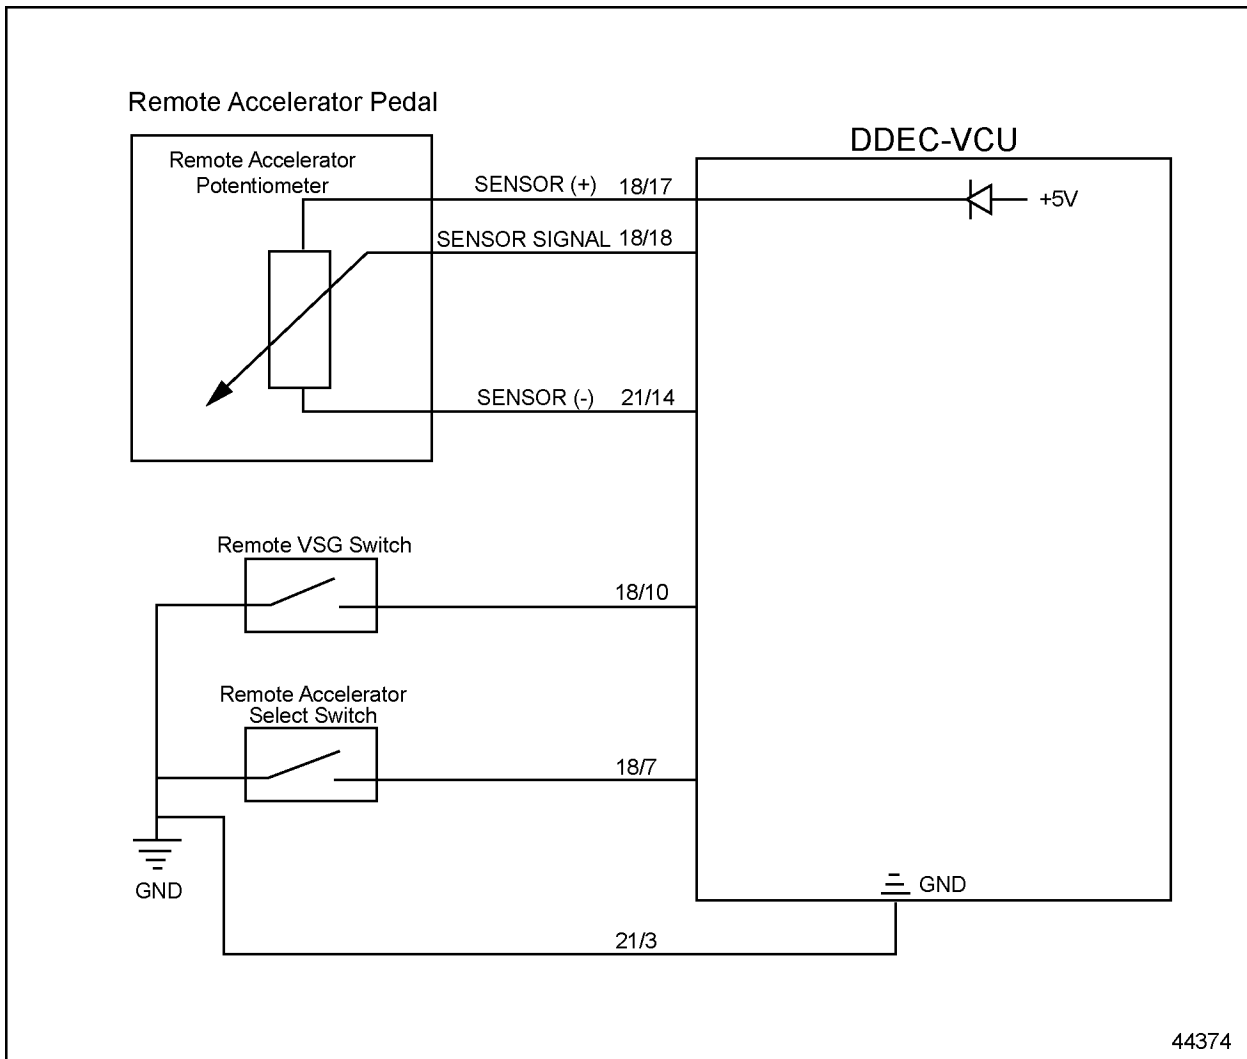


Figure 5-38 Remote Accelerator Control for VSG or ALSG

5.22 TRANSMISSION INTERFACE

DDEC for MBE 900 and MBE 4000 can be interfaced to manual or automatic/automated transmission over the J1939 data link.

5.22.1 INSTALLATIONS

The interface for automatic and automated transmissions is provided through the J1939 data link. The pin assignments for the J1939 data link are listed in Table 3-25.

AGS2 Installation

The AGS2 transmission is only used with the MBE 900 engine and has additional wiring requirements.

On non-multiplexed vehicles, the following outputs are required on the DDEC-VCU:

- Neutral Start Function
- Backup Lamp Output
- Check Trans Lamp Output
- Trans Temp Lamp Output

See Figure 5-39 for the interface to the DDEC-VCU and DDEC-ECU for non-multiplexed and Figure 5-40 for multiplexed.

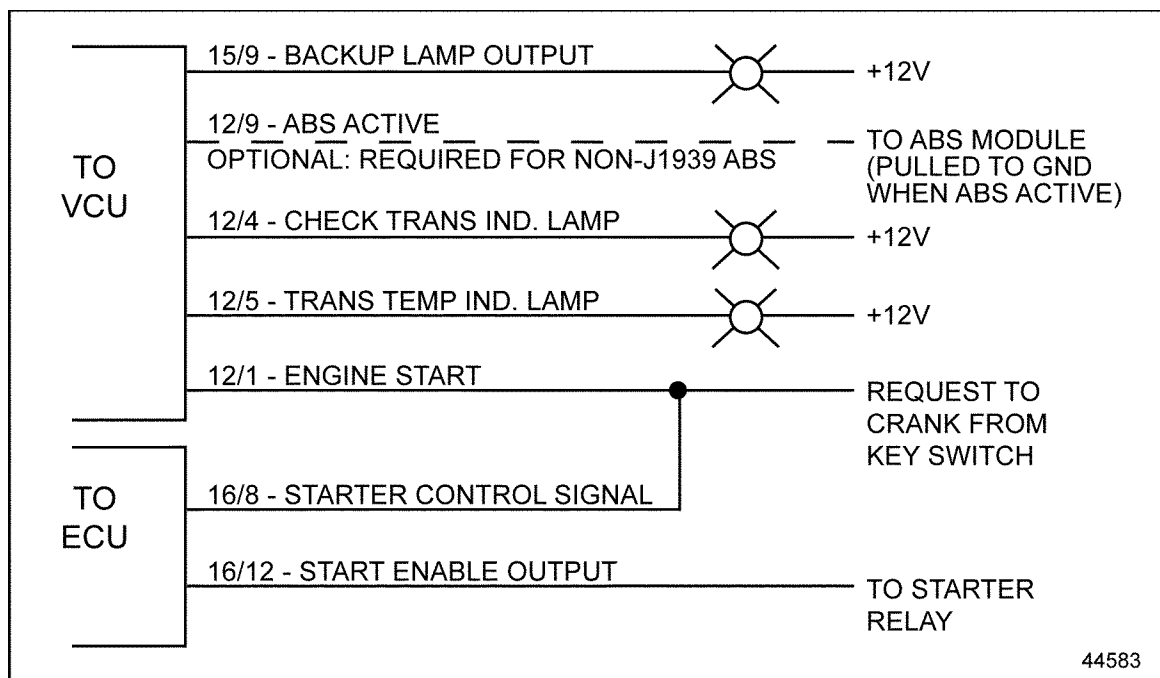


Figure 5-39 AGS2 Transmission Interface to DDEC-VCU/DDEC-ECU — Non-multiplexed

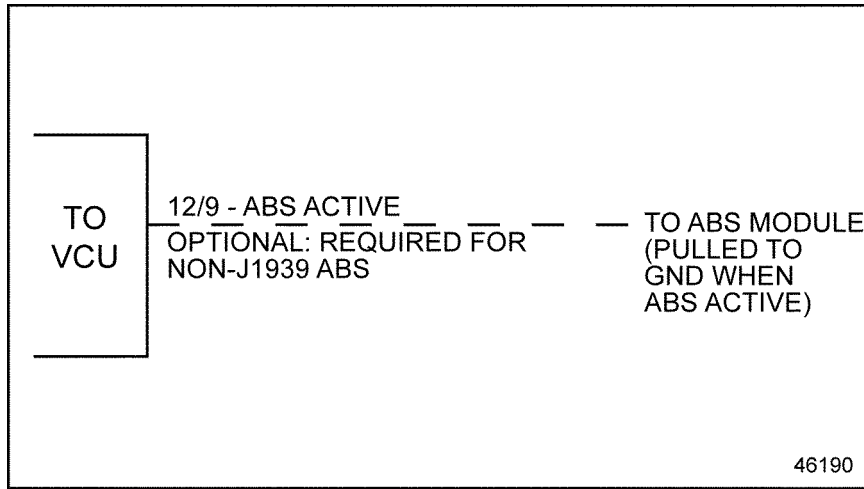


Figure 5-40 AGS2 Transmission Interface to DDEC-VCU/DDEC-ECU — Multiplexed

The AGS2 connector pinout is listed in Table 5-73.

Connector Pin	Description	Connector Pin	Description
1	SmartShift Lever Ground	12	Battery (+) — +12V
2	CAN2 (+) (Proprietary)	13	J1939 (-)
3	Not Used	14	J1587 (+)
4	Not Used	15	Battery (+) — +12V
5	CAN2 Low (Proprietary)	16	Not Used
6	Not Used	17	SmartShift Lever Input A
7	J1939 (+)	18	Ground
8	Not Used	19	SmartShift Lever Input B
9	Ignition — +12V	20	Not Used
10	Not Used	21	Ground
11	J1587 (-)	—	—

Table 5-73 AGS2 Connector

5.22.2 PROGRAMMING REQUIREMENTS AND FLEXIBILITY

The correct transmission type, listed in Table 5-74, must be programmed by VEPS, DRS or minidiag2. The minidiag2 parameter ID is 1 02 01. The default is 0, Manual Transmission.

Transmission	Transmission Type
Manual	0
Allison	
1000/2000	2
MD	2
HD	2
Eaton	
Lightning	0
Autoshift	1
UltraShift	2
Meritor	
Freedomline	1
Mercedes	
AGS2	5

Table 5-74 Transmission Type

The parameter listed in Table 5-75 set the “limp home speed” and must be set for DDEC-ECU Software 60 (Diagnostic Version 9).

Parameter	Description	Range	Parameter ID
Transmission Type	Selects Manual/Auto Transmission	0 = Manual 1 = Automatic/Automated	0 01 02

Table 5-75 Engine Identification

AGS2 transmissions have additional programming requirements on non-multiplexed vehicles as listed in Table 5-76.

Parameter	Setting	Default	Parameter ID
Starter Type	0 – Starter Activated via DDEC-ECU	0 = Started activated via DDEC-ECU	0 01 03
Transmit EBC1 for AGS2	0 = No EBC1 (J1939 ABS) 1 = Transmit EBC1 (Non-J1939 ABS)	0 = No EBC1	1 01 15
Transmission Type	5 = AGS2	0 = Manual	1 02 01
Configuration Relay 2	5 – AGS2 Backup Lamp	0 = Disabled	1 02 03
Configuration Analog Output	10 – AGS2 Trans Temp Indicator Lamp	9 = Disabled	1 09 01
OI Thermostat/AGS2 Lamp	5 – AGS2 Check Trans Lamp	3 = Not Used	1 09 04
Park Brake Multiplexed	0 = Hardwired 1 = SA1 2 = SA2 3 = SA3	0 = Hardwired	1 13 05
Enable Transmission Neutral Input	0 = J1939 (ETC 2)	0 = J1939 (ETC2)	1 13 07
Enable Park Brake Input	1 = Enable	0 = Disabled	1 13 08
Configuration Variable Input DSFO	0 = Disable	0 = Disabled	1 13 17
Configuration Variable Input DSF 1	0 = Disable (J1939 ABS) 1 = Enable ABS Input (non-J1939 ABS)	0 = Disabled	1 13 18
Relay 1/Starter Lockout	0 – Disabled	0 = Disabled	1 16 01
Starter Lockout Diagnosis	1 = Disabled	0 = Enable	1 16 02

Table 5-76 AGS2 Transmission Programming Requirements for Non-Multiplexed Vehicles (Example Configuration)

AGS2 transmissions have additional programming requirements on multiplexed vehicles as listed in Table 5-77.

Parameter	Setting	Default	Parameter ID
Starter Type	1 = Starter Directly Activated via Terminal 50*	0 = Starter Activated via DDEC-ECU	0 01 03
Transmission Type	5 = AGS2	0 = Manual	1 02 01
Park Brake Multiplexed	0 = Hardwired 1 = SA1 2 = SA2 3 = SA3	0 = Hardwired	1 13 05
Enable Transmission Neutral Input	0 = J1939 (ETC 2)	0 = J1939 (ETC 2)	1 13 07
Enable Park Brake Input	1 = Enable	0 = Disable	1 13 08
Configuration Variable Input DSFO	0 = Disable	0 = Disable	1 13 17
Configuration Variable Input DSF 1	0 = Disable (J1939 ABS) 1 = Enable ABS Input (non-J1939 ABS)	0 = Disable	1 13 18
Relay 1/Starter Lockout	0 – Disabled	0 – Disabled	1 16 01
Starter Lockout Diagnosis	1 = Disabled	0 = Enable	1 16 02

* If starter type is not 0, then a different module must prevent the starter from engaging when the transmission is in gear.

Table 5-77 AGS2 Transmission Programming Requirements for Multiplexed Vehicles (Example Configuration)

THIS PAGE INTENTIONALLY LEFT BLANK

5.23 VEHICLE SPEED LIMITING

A Vehicle Speed Sensor is necessary for the Vehicle Speed Limiting feature.

5.23.1 OPERATION

Vehicle Speed Limiting discontinues engine fueling at any vehicle speed above the programmed limit. The DDEC-VCU stops fueling when maximum vehicle speed is reached. If the Dual Road Speed Limiter Switch is OFF, the Global Vehicle Road Speed Limit will be the limit for the road speed. If the Dual Road Speed Limiter Switch is ON, the Dual Road Speed Limiter (LIM1) speed will be the limit. Alternatively, a third limit can be set with LIM0.

Setting any of the limits to the maximum value will disable that road speed limit.

5.23.2 INSTALLATION

An OEM supplied Vehicle Speed Sensor or output shaft speed over the SAE J1939 Data Link is required. Refer to section 3.7.4, "Vehicle Speed Sensor," for additional information.

If the Dual Road Speed Limiter switch is required, it is wired to DDEC-VCU pin 18/12 (LIM 1). This is a normally open switch. A third Road Speed Limit is available using DDEC-VCU pin 18/11 (LIM 0).

5.23.3 PROGRAMMING REQUIREMENTS AND FLEXIBILITY

The Vehicle Speed Limit is programmable by VEPS, DRS, DDDL, the Nexiq DDR, or the minidiag2 as listed in Table 5-78.

Parameter	Description	Range	Default	Parameter ID
Maximum Road Speed (Global)	Maximum vehicle speed. Alternate Road Speed Limit 1 cannot exceed this speed.	10 – 152 km/hr	152 km/hr	1 03 03
Alternate Road Speed LIM0	Maximum vehicle speed when DDEC-VCU pin 18/12 is connected to ground.	0–152 km/hr	152 km/hr	1 05 07
Alternate Road Speed LIM1	Maximum vehicle speed when DDEC-VCU pin 18/11 is connected to ground.	0 – 152 km/hr	152 km/hr	1 05 03

Table 5-78 Vehicle Speed Limiting Parameters

For more information on limiters, refer to section 5.12, "Limiters."

5.23.4 INTERACTION WITH OTHER FEATURES

The Cruise Control maximum set speed cannot exceed the Vehicle Speed Limit.

When Vehicle Speed Limiting is enabled and a VSS code is logged, the engine speed in all gears will be limited for the duration of the ignition cycle to engine speed at the Vehicle Speed Limit in top gear.

NOTE:

Due to VSS signal quality at low speeds, it is not recommended that the vehicle speed limit be set above a minimum of 48 kph to insure smooth road speed limiting. DDC cannot guarantee smooth speed limiting for maximum speeds set below 48 kph.

5.24 VEHICLE SPEED SENSOR ANTI-TAMPERING

VSS Anti-tampering can be used to detect fixed frequency oscillators or devices which track engine RPM and produce fewer pulses per revolution than a VSS wheel. These devices are used to trick the ECU into believing that vehicle speed is low.

A VSS fault will be logged if the sensor appears to be working improperly but the vehicle speed is not zero. The engine speed in all gears will be limited for the duration of the ignition cycle to the engine speed at the Vehicle Speed Limit in top gear.

This feature should only be enabled on installations with manual transmissions where a Vehicle Speed Sensor is wired directly to the DDEC-VCU.

NOTE:

Do Not use VSS anti-tampering with SAE J1939, automatic, semi-automatic, or torque converter transmissions.

5.24.1 PROGRAMMING FLEXIBILITY

Vehicle Speed Limiting must also be enabled. The parameters are listed in Table 5-79.

Parameter	Range	Default	Parameter Number	Access
Anti-tamper	0 = Disable 1 = Enable (Manual transmissions, traction control) 2* = Enable (Manual transmissions, no traction control)	0	1 08 10	VEPS, DRS, minidiag2
Vehicle Speed Sensor	0 = No sensor 2 = Magnetic VSS 3 = Vehicle speed over J1939	2	1 08 01	Nexiq DDR, DDDL, DRS, VEPS, minidiag2
Axle Ratio	1.00 - 20.00	5.29	1 08 03	Nexiq DDR, DDDL, DRS, VEPS, minidiag2
Number of Output Shaft Teeth	0 - 250	16	1 08 04	VEPS, DRS, minidiag2
Tire Revolutions per Kilometer	160 - 1599	312	1 08 05	VEPS, DRS, minidiag2
Top Gear Ratio (Output Shaft/Input Shaft)	0.1 - 2.55	1	1 08 06	VEPS, DRS, minidiag2
Second Highest Gear Ratio	0.1 - 2.55	2.55	1 08 07	Nexiq DDR, DDDL, DRS, VEPS, minidiag2

* V14.21 or later only

Table 5-79 VSS Anti-tampering Parameters

THIS PAGE INTENTIONALLY LEFT BLANK

6 COMMUNICATION PROTOCOLS— DDEC-VCU

Section	Page
6.1 OVERVIEW	6-3
6.2 SAE J1587 – DDEC-VCU ONLY	6-5
6.3 SAE J1939 – DDEC-VCU SUPPORTED MESSAGES	6-27

THIS PAGE INTENTIONALLY LEFT BLANK

6.1 OVERVIEW

Key components of the DDEC for MBE 900 and MBE 4000 system are the serial communication links SAE J1587 and SAE J1939. Using these communication links allows DDEC for MBE 900 and MBE 4000 to offer the following functionality:

- Transmitting sensor information from the DDEC-ECU via the data link at regular intervals and/or upon request to obtain data and to monitor for failures
- Sharing information between stand-alone modules used in the system via the data link
- Sharing engine data with electronic dashboard displays and vehicle management information systems via the data link
- Transmitting and performing diagnostic procedures from external instrumentation such as minidiag2 via the data link
- Transmitting to the powertrain the messages assigned to both the engine and the transmission retarder.

The following industry standard Society of Automotive Engineers (SAE) documents can be used as a reference:

- *SAE J1587, Electronic Data Interchange Between Microcomputer Systems In Heavy Duty Vehicle Applications*
- *SAE J1708, Serial Data Communications Between Microcomputer Systems In Heavy Duty Vehicle Applications*
- *SAE J1939, Recommended Practice for a Serial Control and Communication Vehicle Network*
- *SAE J1939/71, Vehicle Application Layer*
- *SAE J1939/01, Truck and Bus Applications*
- *SAE J1939/11, Physical Layer*
- *SAE J1939/73, Application Layer — Diagnostics*
- *SAE J1939/21, Data Link Layer*

To obtain a copy of the above documents contact the Society of Automotive Engineers (SAE).

SAE International

400 Commonwealth Drive
 Warrendale, PA 15096
 Attention: Publications
 Phone: (412) 776-4970
 www.sae.org

THIS PAGE INTENTIONALLY LEFT BLANK

6.2 SAE J1587 – DDEC-VCU ONLY

SAE RP J1587 defines the recommended format of messages and data being communicated between microprocessors used in heavy-duty vehicle applications. J1587 (+) and J1587 (-) as shown on the Vehicle Interface Harness schematic are used as the J1587 communication link. These circuits also exist in the nine-pin diagnostic connector for use with the diagnostic and reprogramming tools.

NOTE:

The maximum length for the SAE J1587 Data Link is 40 m (130 ft).

6.2.1 MESSAGE FORMAT

A complete description of the DDEC for MBE 900 and MBE 4000 parameters is provided within this section of the manual. The DDEC-VCU transmits parametric data at SAE J1587 recommended rates in packed message form. The first byte or character of each message is the Message Identification character (MID). The MID identifies which microcomputer on the serial communication link originated the information. Each device in the system originating messages must have a unique MID. The assignment of MIDs should be based on those listed in SAE RP J1587. The primary MID for DDEC for MBE 900 and MBE 4000 engines is 128.

The DDEC-VCU reacts on the MIDs listed in Table 6-1.

MID	Description
130	Transmission Control Unit (TCU)
136	Anti-lock Brake System (ABS)
140	Instrument Cluster Unit (ICU)
172	Service Link
179	Second Diagnostic Device
180	Off-board diagnostics
181	Satellite
182	Vehicle Electronic Programming System (VEPS)
219	Collision Avoidance
231	Cellular
171	ProDriver/ProDriver DC

Table 6-1 DDEC-VCU MIDs

Subsystems also require identifiers. The subsystem identifier character (SID) is a single byte character used to identify field-repairable or replaceable subsystems for which failures can be detected or isolated. SIDs are used in conjunction with SAE standard diagnostic codes defined in J1587 within PID194.

The identifiers used by DDEC for MBE 900 and MBE 4000 engines are defined and listed in Table 6-2.

Identifier	Description
Failure Mode Identifier (FMI)	The FMI describes the type of failure detected in the subsystem and identified by the PID or SID.
Message Identification Character (MID)	The MID is the first byte or character of each message that identifies which microcomputer on J1587 serial communication link originated the information.
Parameter Identification Character (PID)	A PID is a single byte character used in J1587 messages to identify the data byte(s) that follow. PIDs identify the parameters transmitted.
Subsystem Identification Character (SID)	A SID is a single byte character used to identify field-repairable or replaceable subsystems for which failures can be detected or isolated.

Table 6-2 Identifiers Used by DDEC for MBE 900 and MBE 4000

SAE J1587 Parameters Available with DDEC for MBE 900 and MBE 4000

DDEC for MBE 900 and MBE 4000 supports the J1587 parameter identifiers (PIDs) listed in Table 6-3 and Table 6-4.

PID	Description
25	Air Conditioner System Status #2
33	Clutch Cylinder Position
40	Engine Retarder
41	Cruise Control Switch Status
43	Ignition Switch Status
44	Attention/Warning Indicator Lamps Status
62	Retarder Inhibit Status
64	Direction Switch Status
65	Brake Switch Status
70	Parking Brake Switch Status
83	Vehicle Speed Limit Status
84	Vehicle Speed
85	Cruise Control Switch Status
86	Cruise Control Set Speed
89	VSG Switch Status
91	Percent Engine Load
92	Percent Engine Load
93	Output Torque
98	Engine Oil Level
100	Engine Oil Pressure
102	Turbo Boost Pressure
105	Intake Manifold Temperature
106	Air Inlet Pressure
107	Air Filter Differential Pressure
108	Barometric Pressure
110	Coolant Temperature
111	Coolant Level
121	Engine Retarder Status
168	Battery Potential (Voltage)

Table 6-3 SAE J1587 PIDs (part 1 of 2)

PID	Description
174	Fuel Temperature
175	Engine Oil Temperature
182	Trip Fuel
183	Fuel Rate
184	Instantaneous Fuel Economy, (mile/gal)
185	Average Fuel Economy, (mile/gal)
189	Rated Engine Speed
190	Engine Speed
194	Transmitter System Diagnostic Code and Occurrence Count Table
234	Software Identification
235	Total Idle Hours
236	Total Idle Fuel Used
237	Vehicle Identification Number (VIN)
243	Device Identification
244	Trip Miles
245	Total Miles
247	Total Engine hours
248	Total VSG Hours
249	Total Engine Revolution
250	Total Fuel Used
251	Clock
252	Date
439	Extended Range Boost Pressure

Table 6-4 SAE J1587 PIDs (part 2 of 2)

6.2.2 J1708/J1587 MESSAGE PRIORITY

Each message sent by DDEC for MBE 900 and MBE 4000 engines is assigned a priority on a scale of 1 to 8, in compliance with the message priority assignment specified in SAE RP J1708. The most critical message has a priority of one. The message assignments are listed in Table 6-5. All devices transmitting messages across DDEC for MBE 900 and MBE 4000 engines J1708/J1587 Data Link must be prioritized and transmitted in this manner.

Priority	Description
1 and 2	Reserved for messages that require immediate access to the bus.
3 and 4	Reserved for messages that require prompt access to the bus in order to prevent severe mechanical damage.
5 and 6	Reserved for messages that directly affect the economical or efficient operation of the vehicle.
7 and 8	All other messages not fitting into the previous priority categories.

Table 6-5 Message Priority Assignments

6.2.3 SAE J1587 PIDS REQUIRING ACTION

DDEC for MBE 900 and MBE 4000 engines will respond to data requests per the J1587 PID requests shown in the next sections.

Data Request

The format for a data request is shown below.

PID	Data
0	a a - Parameter number of the requested parameter

Component Specific Request

The format for a component specific request is shown below.

PID	Data
128	a b a - Parameter number of the requested parameter b - MID of the component from which the parameter data is requested

NOTE:

DDEC for MBE 900 and MBE 4000 engines responds with the appropriate data provided the MID in byte (b) matches the MID stored in calibration. The primary MID for DDEC for MBE 900 and MBE 4000 engines is 128.

Transmitter Data Request / Clear Count

The format for a transmitter data request is shown below.

PID 195	Data n a b c n - Number of parameter data characters = 3 a - MID of the device to which the request is directed b - SID or PID of a standard diagnostic code c - Diagnostic code number
Bits: 1 - 4 Bit: 5	Failure mode identifier (FMI) of a standard diagnostic code Byte (b) identifier 1 - Byte (b) is a Subsystem Identifier (SID) 0 - Byte (b) is a Parameter Identifier (PID)
Bit: 6	Type of diagnostic code 1 - Standard diagnostic code 0 - Expansion diagnostic codes
Bit: 7, 8	00 Request an ASCII descriptive message for the given diagnostic code. 01 - Request count be cleared for the given diagnostic code on the device with the given MID. 10 - Request counts be cleared for all diagnostic codes on the device with the given MID. The diagnostic code given in this transmission is ignored. 11 - Request additional diagnostic information for the given diagnostic code, the content of which is defined under PID 196.

NOTE:

DDEC for MBE 900 and MBE 4000 engines responds with the appropriate data using PID 196.

source: ECM calculated; outputs represent intended state

J1587 Outputs - Single Byte Parameters

PID 25 - Air Conditioner System Status #2

update rate: 1.0 s or on change

format:

PID	Data
25	a

a – Air Conditioner System Status

Bits 8–7: Compressor Discharge Side – N/A

Bits 6–5: Compressor

00 - Not At Very High Pressure

01 - is At Very High Pressure

10 - Error

11 - Not Available

Bits 4–3: Compressor Suction Side – N/A

Bits 2–1: Evaporator Temp– N/A

PID 33 - Clutch Cylinder Position

update rate: On Request

format:

PID	Data
33	a

a – Clutch Cylinder Position

PID 40 - Engine Retarder Switches Status

update rate: 0.2 s or on state change

format:

PID	Data
40	a
	a – Engine Retarder Switches Status
	Bits 8–7: Reserved – all bits set to 1
	Bits 6–3:: Engine Retarder level Switch
	0 - 0 Cylinders
	1 - 2 Cylinders
	3 - 3 Cylinders
	4 - 4 Cylinders
	5 - 5 Cylinders
	6 - 6 Cylinders
	7 - 7 Cylinders
	8 - 8 Cylinders
	9 - 13 – Reserved
	14 – Error
	15 – Not Available
	Bits 2–1: Engine Retarder Switch
	00 - Off
	01 - On
	10 - Error
	11 - Not Available

PID 41 - Cruise Control Switches Status

update rate: 1.0 s or on state change

format:

PID	Data
41	a
	a – Cruise Control Switches Status
Bits 8–7:	Reserved - all bits set to 1
Bits 6–5:	Cruise Control On/Off Switch Status
	00 - Off
	01 - On
	10 - Error
	11 - Not Available
Bits 4–3:	Cruise Control Set Switch Status
	00 - Off
	01 - On
	10 - Error
	11 - Not Available
Bits 2–1:	Cruise Control Resume Switch Status
	00 - Off
	01 - On
	10 - Error
	11 - Not Available

PID 43 - Ignition Switch Status

update rate: 1.0 s or on state change

format:

PID	Data
43	a
	a – Ignition Switch Status
Bits 8–7:	Start Aid Contacts Status – N/A
Bits 6–5:	Crank Contacts Status – N/A
Bits 4–3:	Run Contacts Status
	00 - Off
	01 - On
	10 - Error
	11 - Not Available
Bits 2–1:	Accessory Contacts Status – N/A

PID 44 - Attention/Warning Indicator Lamps Status

update rate: 10 time/s or 1 time/s when changing

format:

Bit: 1,2	Stop Engine Light Status
	00 - off
	01 - on
	10 - error
	11 - Not Available
Bit: 3,4	Check Engine Light Status
	00 - off
	01 - on
	10 -
	11 - Not Available
Bit: 5-8	Reserved, All Bits set to 1

PID 62 - Retarder Inhibit Status

update rate: On request

format:

Bits: 1, 2	Retarder Inhibit Status
	00 - Off (not Inhibited)
	01 - On (Inhibited)
Bits: 3-8	Uncommitted, all Bits set to 1

source: Digital output for Engine Brake Enable

comments: Used with the Engine Brake outputs.

PID 64 - Direction Switch Status

update rate: On Request

format:

PID	Data
64	a
	a – Direction Switch Status
Bits 8–7:	Reserved – both bits set to 1
Bits 6–5:	Forward Switch Status – N/A
Bits 4–3:	Neutral Switch Status
	00 - Off
	01 - On
	10 - Error
	11 - Not Available
Bits 2–1:	Reverse Switch Status – N/A

PID 65- Service Brake Status

update rate: 1 time/s

format:

Bits: 5-8	Uncommitted, all Bits set to 1
Bits: 4,3	Engine Brake Status
	0 - Not Active
	1 - Active
	Service Brake Switch Status
Bits: 1,2	0 - off
	1 - on

PID 70 - Parking Brake Switch Status

update rate: 1 time/s

format:

Bits: 8	Parking Brake Switch Status
	0 - off
	1 - on
Bits: 1-7	Uncommitted, all Bits set to 0

source: Parking Brake Switch

PID 83- Vehicle Speed Limit Status

update rate: 1 time/s

format:

Bit: 8	Vehicle Speed Limit Status
	1 - active
Bits: 1-7	All Bits set to 0

PID 84 - Vehicle Speed

update rate: 10 times/s

resolution: 0.5 mph/Bit (Uns/SI)

source: Vehicle Speed Sensor input

PID 85 - Cruise Control Switch Status

update rate: 10 times/s

format:

	On/Off Switch
Bit: 1	1-On 0-Off
	Set Switch
Bit: 2	1-Off 0-On
	Coast Switch
Bit: 3	1-Off 0-On
	Resume Switch
Bit: 4	1-Off 0-On
	Accel Switch
Bit: 5	1-Off 0-On
	Brake Switch
Bit: 6	1-Off 0-On
	Clutch Switch
Bit: 7	1-Off 0-On
	Cruise Active
Bit: 8	1-On 0-Off

source: Cruise Control switch inputs

comments: Cruise Control status (Bit 8) is not cleared if Cruise Control is active but being overridden by the throttle.

PID 86 - Cruise Control Set Speed

update rate: 0.1 times/s

resolution: 0.5 mph/Bit (Uns/SI)

source: Cruise Control switch inputs

comments: If no set speed, then all bits are set to 1.

PID 89 - VSG Switch Status

update rate: 1 time/s

format:

Bit: 1	On/off switch 0-Off 1-On
Bit: 2	Set switch 0-Off 1-On
Bit: 3	Coast switch 0-Off 1-On
Bit: 4	Resume switch 0-Off 1-On
Bit: 5	Accel switch 0-Off 1-On
Bit: 6	Brake 0-Off 1-On
Bit: 7	Clutch 0-Off 1-On
Bit: 8	VSG 0-Off 1-On

source: VSG switch inputs/ECM calculated

PID 91 - Percent Throttle

update rate: 10 times/s

resolution: 0.4%/Bit (Uns/SI)

source: Throttle Sensor input

PID 92 - Percent Engine Load

update rate: 10 times/s

resolution: 0.5%/Bit (Uns/SI)

source: ECM calculated

comments: Percent engine load is the ratio of actual torque and the minimum of the requested torque and digital torque limit.

PID 93 - Output Torque

update rate: 1 time/s
 resolution: 20 ft-lb/Bit (S/SI)
 source: ECM calculated

PID 98 - Engine Oil Level

update rate: 0.1 time/s
 resolution: 0.5%/Bit (Uns/SI)
 source: Oil Level Sensor

PID 100 - Engine Oil Pressure

update rate: 1 time/s
 resolution: 0.5 psi/Bit (Uns/SI)
 source: Oil pressure sensor
 sensor range: 0 to 65 psi

PID 102 - Turbo Boost Pressure (Gage)

update rate: 2 times/s
 resolution: 0.125 psig/Bit (Uns/SI)
 source: Turbo Boost Pressure Sensor

PID 105 - Intake Manifold Temperature

update rate: 1 time/s
 resolution: 1°F/Bit (Uns/SI)
 source: Intake Manifold Temperature Sensor

PID 106 - Air Inlet Pressure

update rate: 1 time/s
 resolution: 0.25 psi/Bit (Uns/SI)

PID 107 - Air Filter Differential Pressure

update rate: 0.1 time/s
 resolution: 0.2 in.H₂O/Bit (Uns/SI)
 source: Air Filter Differential Pressure Sensor

PID 108 - Barometric Pressure

update rate: 1 time/s
 resolution: 0.0625 psi/Bit (Uns/SI)
 source: Barometric Pressure Sensor or ECM calculated

PID 110 - Coolant Temperature

update rate: 1 time/s
 resolution: 1°F/Bit (Uns/SI)
 source: Coolant Temperature Sensor
 sensor range: 0 to 300 F

PID 111 - Coolant Level

update rate: 10 times/s
 resolution: 0.5%/Bit (Uns/SI) (or full = 100%, low = 0%)
 source: Coolant Level Sensor
 comments: If the Add Coolant Level Sensor (ACLS) is installed with the Engine Protection Coolant Level Sensor (CLS), the coolant level will be:
 100% When both sensors are in coolant
 50% When the ACLS is out of the coolant
 0% When both sensors are out of the coolant
 If only the CLS is configured:
 100% Full
 0% Low

PID 121 - Engine Retarder Status

update rate: 5 times/s
 format:
 Bit: 1 Set to 0
 Bit: 2 Set to 0
 Bit: 3 Set to 0
 Bit: 4 Set to 0
 Bit: 5 Set to 0
 Bit: 8 1 - Retarder active
 comments: Transmitted only if engine brakes are configured.

Double Byte Parameters

PID 168 - Battery Voltage

update rate: 1 time/s
resolution: 0.05 volts/Bit (Uns/I)
source: Battery voltage measured at input to ECM
comments: The ECM input battery voltage does fluctuate as injectors fire and will require filtering if used for display purposes.

PID 174 - Fuel Temperature

update rate: 1 time/s
resolution: 0.25°F/Bit (S/I)
source: Fuel Temperature Sensor
sensor range: -40 to 175°F

PID 175 - Engine Oil Temperature

update rate: 1 time/s
resolution: 0.25°F/Bit (S/I)
source: Oil temperature sensor
sensor range: -40 to 300°F

PID 182 - Trip Fuel

update rate: 0.1 times/s
resolution: 0.125 gal/Bit (Uns/I)
source: ECM calculated

PID 183 - Fuel Rate

update rate: 5 times/s
resolution: 1/64 gal/hour/Bit (Uns/I)
source: ECM calculated

PID 184 - Instantaneous Fuel Economy (MPG)

update rate: 5 times/s
resolution: 1/256 mpg/Bit (Uns/I)
source: ECM calculated

PID 185 - Average Fuel Economy (MPG)

update rate: 0.1 times/s
resolution: 1/256 mpg/Bit (Uns/I)
source: ECM calculated

PID 189 - Rated Engine Speed

update rate: On request only
resolution: 0.25 rpm/Bit (Uns/I)
source: Calibration value

PID 190 - Engine Speed

update rate: 10 times/s
resolution: 0.25 rpm/Bit (Uns/I)
source: ECM calculated

PID 439 (255 183)- Extended Range Boost Pressure

update rate: 1 time/s
resolution: 0.125 kPa/Bit (Uns/I)

Variable Length Parameters

PID 194 - Transmitter System Diagnostic Code / Occurrence Count Table

update rate: On Request only

format:

PID Data

194 n a b c a b c a b c a b c a b c...

n - Byte count of data that follows this character. This excludes characters MID, PID 194 and n but includes a, b, c type characters.

a - SID or PID of a standard diagnostic code.

b - Diagnostic code character

Bits: 1-4 FMI of a standard diagnostic code

Bit: 5 Byte (a) Identifier

1 - Byte (a) is a SID

0 - Byte (a) is a PID

Bit: 6 Type of Diagnostic Code

1 - standard diagnostic code

0 - expansion diagnostic codes (PID/SID from page 2)

Bit: 7 Current Status of Fault

1 - fault is inactive

0 - fault is active

Bit: 8 Occurrence count

1 - count is included

0 - count is not included

c - Occurrence count for the diagnostic code defined by the preceding 2 characters. The maximum occurrence count is 255. Bit 8 of byte (b) of the diagnostic code is used to determine if it is included.

source: ECM calculated

comment: comments: Diagnostic codes are transmitted periodically while active. When the active code becomes inactive, the code is transmitted once to indicate that the fault became inactive. Inactive diagnostic codes are available by request of PID 194. If more than 6 codes are active at any point, PID 194 is sectioned as described in PID 192.

PID 234- Software Identification

update rate: On Request only

format:

PID Data

234 n a a b c c

n = number of bytes: 5

a = Major software release level in ASCII

b = ASCII "."

c = Minor software release level in ASCII

Example: "01.05" is interpreted as Major release 1, Minor release 5

source: ECM calculated

PID 235- Total Idle Hours

update rate: On Request only

format:

PID Data

235 n a a a a

n = Number of bytes: 4

a = Total idle hours; scaled 0.05 hours/Bit (Uns/LI)

source: ECM calculated

comment: Accumulates time while the engine is operating at idle.

PID 236- Total Idle Fuel Used

update rate: On Request only

format:

PID Data

236 n a a a a

n = number of bytes: 4

a = Idle fuel used; scaled 1/8 hours/Bit (Uns/LI)

source: ECM calculated

comment: Accumulates while the engine is operating at idle.

PID 237- Vehicle Identification Number (VIN)

update rate: On Request only

format:

PID Data

237 n a a a ...

n = number of bytes: up to 17

a = VIN in ASCII characters

source: Calibration value

PID 243- Device Identification

update rate: On Request only

format:

PID Data
 243 n a b b b b c d d d d d d e f f f f f f f f f f
 n = number of bytes
 a = component ID = MID
 b = ATA/VMRS manufacturer ID (5 bytes)
 c = delimiter: ASCII '*'
 d = engine model number (8 bytes)
 e = delimiter: ASCII '*'
 f = engine serial number (10 bytes)

source: Calibration value

comment: This parameter may be sectioned using PID 192.

PID 244- Trip Miles

update rate: 0.1 times/s

format:

PID Data
 244 n a a a a
 n = number of bytes: 4
 a = trip miles 0.1 mile/Bit (Uns/LI)

source: ECM calculated

PID 245- Total Miles

update rate: 0.1 times/s

format:

PID Data
 245 n a a a a
 n = number of bytes: 4
 a = trip miles, 0.1 mile/Bit (Uns/LI)

source: ECM calculated

PID 247- Total Engine Hours

update rate: On request only

format:

PID Data
 247 n a a a a
 n = number of bytes: 4
 a = total engine hours 0.05 hour/Bit (Uns/LI)

source: ECM calculated

comment: Used to identify the total hours that the engine is operating. Time accumulated while the engine speed is above 60 rpm.

PID 248- Total VSG Hours

update rate: On request only

format:

PID Data

248 n a a a a

n = number of bytes: 4

b = total VSG hours 0.05 hour/Bit (Uns/LI)

source: ECM calculated

comment: Used to identify total engine hours the engine is operating in the following modes:

-Hand throttle VSG

-High idle using cruise switches

PID 249- Total Engine Revolutions

update rate: On request only

format:

PID Data

249 n a a a a

n = number of bytes: 4

a = total engine revolutions 1000 revolutions/Bit (Uns/SI)

PID 250- Total Fuel Used

update rate: On request only

format:

PID Data

250 n a a a a

n = number of bytes: 4

a = total fuel used 0.125 gal/Bit (Uns/LI)

source: ECM calculated

PID 251- Clock

update rate: On request only

format:

PID Data

251 n a b c

n = number of bytes: 3

a = Seconds 0.25 sec/Bit, range 0 to 59.75 seconds

b = Minutes 1.0 min/Bit, range 0 to 59 minutes

c = Hours 1.00 hour/Bit, range 0 to 23 hours

comment: Transmitted if clock data is considered valid. The time is broadcast in Greenwich Mean Time.

PID 252- Date

update rate: On request only

format:

PID Data

252 n a b c

n = number of bytes: 3

a = Day 0.25 day/Bit, range 1 to 31.75 days

b = Month 1.0 month/Bit, range 1 to 12 months

c = Year - 1985 1.00 year/Bit, range 0 to 99

comment: Day of the month is scaled such that 0 is a null value, values 1, 2, 3, and 4 are the first day of the month, 5, 6, 7, 8, are the second day of the month, etc. Transmitted if clock data is considered valid.

6.3 SAE J1939 – DDEC-VCU SUPPORTED MESSAGES

J1939 (+), J1939 (-), and J1939 Shield are used as the J1939 communication link.

6.3.1 MESSAGE FORMAT

The message format uses the parameter group number as the label for a group of parameters. Each of the parameters within the group can be expressed in ASCII, as scaled data, or as function states consisting of one or more Bits. Alphanumeric data will be transmitted with the most significant byte first. Other parameters consisting of two or more data bytes shall be transmitted least significant byte first. The type of data is also identified for each parameter.

The following sections identify the parameters that are supported by DDEC for MBE 900 and MBE 4000 engines , parameter group number response definitions (refer to section 6.3.2) and parameter group number command definitions (refer to section 6.3.3).

6.3.2 SAE J1939/71 APPLICATION LAYER

The Application Layer Parameter Group Number (PGN) response definitions are described in the following sections.

Electronic Engine Controller #1 – EEC1

Transmission Rate:	10 ms
Data Length:	8 bytes
Data Page:	0
PDU format:	240
PDU specific:	4
Default priority:	3
PGN:	61,444 (0x00F004)
Byte : 1	Status_EEC1
	Bits: 8-5 Not Defined
	Bits: 4-1 Engine / Retarder Torque Mode (SPN 899)
	0000: Low Idle Governor/No Request (Default Mode)
	0001: Accelerator Pedal/Operator Selection
	0010: Cruise Control
	0011: PTO Governor
	0100: Road Speed Governor
	0101: ASR Control
	0110: Transmission Control
	0111: ABS Control – N/A
	1000: DDEC-ECU Engine Protection
	1001: High Speed Governor
	1010: Braking System – N/A
	1011: Remote Accelerator - N/A
	1100: Not Defined
	1101: Not Defined
	1110: Trans Requested Engine Brake and Engine Speed >800 RPM
	1111: Not Available
Byte: 2	Drivers Demand Engine - Pct Torque (SPN 512)
	Resolution: 1% / Bit, -125% offset
Byte: 3	Actual Engine - Percent Torque (SPN 513)
	Resolution: 1% / Bit, -125% offset
Bytes: 4,5	Engine Speed (SPN 190)
	Resolution: 0.125 rpm / Bit, 0 rpm Offset
Byte: 6	Source address of controlling device for engine control (SPN 1483)
Byte: 7	Bits: 8–5 Not Defined
	Bits: 1–4 Engine Starter Mode – N/A
Byte: 8	Engine Demand–Percent Torque (SPN 2432)
	Resolution: 1%/Bit, —125% Offset

Electronic Engine Controller #2 – EEC2

Transmission Rate : 50 ms
 Data Length: 8 bytes
 Data Page: 0
 PDU format: 240
 PDU specific: 3
 Default priority: 3
 PGN: 61,443 (0x00F003)
 Byte: 1 Status_EEC2
 Bits: 8-7 Not Defined
 Bits: 6-5 Road Speed Limit Status (SPN 1437)
 00: Active
 01: Not Active
 Bits: 4-3 AP Kickdown Switch (SPN 559)
 00: Kickdown Passive
 01: Kickdown Active
 11: Not Configured
 Bits: 2,1 AP Low Idle Switch (SPN 558)
 00: Not In Low Idle Condition
 01: In Low Idle Condition
 10: Error Detected
 11: Not Configured
 Byte: 2 Accelerator Pedal Position (TPS) (SPN 91)
 Resolution: 0.4% / Bit, 0% Offset
 Byte: 3 Percent Load At Current Speed (SPN 92)
 Resolution: 1% / Bit, 0% Offset
 Byte: 4 Remote Accelerator–N/A
 Bytes: 5-8 Not Defined

Electronic Engine Controller #3 – EEC3

Transmission Rate : 250 ms
 Data Length: 8 bytes
 Data Page: 0
 PDU format: 254
 PDU specific: 223
 Default priority: 6
 PGN: 65,247 (0x00FEDF)
 Byte: 1 Nominal Friction - Percent Torque (SPN 514)
 Resolution: 1% / Bit, -125% offset
 Bytes: 2,3 Engine's Desired Operating Speed (SPN 515)
 Resolution: 0.125 rpm/Bit, 0 rpm Offset
 Byte 4: Engine's Desired Operating Speed Asymmetry Adjustment (SPN 519)
 Ratio: 0 to 250
 Bytes: 5-8 Not Defined

Engine Temperature #1 – ET1

Transmission Rate : 1 sec
 Data Length: 8 bytes
 Data Page: 0
 PDU format: 254
 PDU specific: 238
 Default priority: 6
 PGN: 65,262 (0x00FEEE)
 Byte: 1 Engine Coolant Temperature (SPN 110)
 Resolution: 1°C / Bit, -40°C offset
 Byte: 2 Fuel Temperature (SPN 174)
 Resolution: 1°C/Bit, -40°C Offset
 Bytes: 3,4 Engine Oil Temperature (SPN 175)
 Resolution: 0.03125°C / Bit, -273°C offset
 Bytes: 5,6 Turbo Oil Temperature -N/A
 Byte: 7 Engine Intercooler Temperature -N/A
 Byte 8: Engine Intercooler Thermostat Opening-N/A

Engine Fluid Level/Pressure – EFL/P1

Transmission Rate : 0.5 sec
Data Length: 8 bytes
Data Page: 0
PDU format: 254
PDU specific: 239
Default priority: 6
PGN: 65,263 (0x00FEEF)
Byte: 1 Fuel Delivery Pressure -N/A
Byte: 2 Extended Crankcase Blowby Pressure – N/A
Byte: 3 Engine Oil Level – N/A
Byte: 4 Engine Oil Pressure (SPN 100)
Resolution: 4 kPa / Bit, 0 kPa Offset
Byte: 5,6 Crankcase Pressure – N/A
Byte: 7 Coolant Pressure – N/A
Byte: 8 Coolant Level (SPN 111)
Resolution: 0.4%/Bit, 0% Offset

Cruise Control / Vehicle Speed – CCVS

Transmission Rate :	100 ms
Data Length:	8 bytes
Data Page:	0
PDU format:	254
PDU specific:	241
Default priority:	6
PGN:	65,265 (0x00FEF1)
Byte: 1	Measured_SW1
	Bits: 8,7 Not Defined
	Bits: 6,5 Cruise Control Pause Switch–N/A
	Bits: 4,3 Parking Brake Switch (SPN 70)
	00: Park Brake Not Set
	01: Park Brake Set
	11: Not Configured
	Bits: 2,1 Two-Speed Axle Switch (SPN 69)
	00: Low Speed Range
	01: High Speed Range
	10: Error
	11: Not Configured
Byte: 2,3	Wheel Based Vehicle Speed (SPN 84)
	Resolution: 1/256 km/h, 0 km/h Offset
Byte: 4	Measured_CC_SW1
	Bits: 8,7 Clutch Switch (SPN 598)
	00: Clutch Pedal Released
	01: Clutch Pedal Depressed
	11: Not Configured
	Bits: 6,5 Brake Switch (SPN 597)
	00: Brake Pedal Released
	01: Brake Pedal Depressed
	11: Not Configured
	Bits: 4,3 Cruise Control Enable Switch (SPN 596)
	00: Cruise Control Disabled
	01: Cruise Control Enabled
	11: Not Configured
	00: Park Brake Not Set
	01: Park Brake Set
	11: Not Configured
	Bits: 2,1 Cruise Control Active (SPN 595)
	00: Cruise Control Off
	01: Cruise Control On
	10: Error
	11: Not Configured

Byte: 5	Measured_CC_SW2
	Bits: 8,7 Cruise Control Accelerate Switch (SPN 602)
	00: Accelerate Switch Off
	01: Accelerate Switch On
	11: Not Configured
	Bits: 6,5 Cruise Control Resume Switch (SPN 601)
	00: Resume Switch Off
	01: Resume Switch On
	11: Not Configured
	Bits: 4,3 Cruise Control Coast Switch (SPN 600)
	00: Coast Switch Off
	01: Coast Switch On
	11: Not Configured
	Bits: 2,1 Cruise Control Set Switch (SPN 599)
	00: Set Switch Off
	01: Set Switch On
Byte: 6	Cruise Control Set Speed (SPN 86)
	Resolution: 1 km/h/Bit, 0 km/h Offset
Byte: 7	State_CC
	Bits: 8-6 Cruise Control State (SPN 527)
	000: Off/Disabled
	001: Hold
	010: Accel
	011: Decel/Coast
	100: Resume
	101: Set
	110: Accelerate Override
	111: Not Available
	Bits: 5-1 PTO State - (SPN 976)
	00000: Disabled/Off
	00001: Hold (PTO Mode is Active)
Byte: 8	Measured_Idle_SW1
	Bits: 8,7 Not Defined
	Bits: 6,5 Engine Test Mode Switch (SPN 966)
	00: Off
	01: On
	Bits: 4,3 Idle Decrement Switch (SPN 967)
	00: Off
	01: On
	Bits: 2,1 Idle Increment Switch (SPN 968)
	00: Off
	01: On

Vehicle Electrical Power – VEP

Transmission Rate : 1 sec
Data Length: 8 bytes
Data Page: 0
PDU format: 254
PDU specific: 247
Default priority: 6
PGN: 65,271 (0x00FEF7)
Byte: 1 Net Battery Current - N/A
Byte: 2 Alternator Current - N/A
Bytes: 3,4 Alternator Potential (voltage) - N/A
Bytes: 5,6 Electrical Potential (voltage) - N/A
Bytes: 7,8 Battery Potential (Voltage), Switched
Resolution: 0.05 V / Bit, 0 V offset

Electronic Retarder Controller #1 - ERC1

Transmission Rate :	100 ms
Data Length:	8 bytes
Data Page:	0
PDU format:	240
PDU specific:	0
Default priority:	6
PGN:	61,440 (0x00F000)
Byte : 1	Status_ERC1
	Bits: 8,7 Retarder Enable - Shift Assist Switch (SPN 572)
	00: Shift Assist Disabled
	01: Shift Assist Enabled
	Bits: 6,5 Retarder Enable - Brake Assist Switch (SPN 571)
	00: Brake Assist Disabled
	01: Brake Assist Enabled
	Bits: 4-1 Engine/Retarder Torque Mode (SPN 900)
Byte: 2	Actual Retarder - Percent Torque (SPN 520)
	Resolution: 1%/Bit, -125% Offset
Byte: 3	Intended Retarder Percent Torque - N/A
Byte: 4	Coolant Load Increase
	Bits: 8-5 Not Defined
	Bits: 3,4 Retarder Requesting Brake Light (SPN 1667)
	Bits: 1,2 Engine Coolant Load Increase (SPN 1082)
	00: No Coolant Load Increase
	01: Coolant Load Increase Possible
Byte: 5	Source address of controlling device for retarder control-N/A
Byte: 6	Drivers Demand Retarder-Percent Torque-N/A
Byte: 7	Retarder Selection, non-engine-N/A
Byte: 8	Actual Maximum Available Retarder-Percent Torque-N/A

Component Identification – CI

Transmission Rate : On Request
 Data Length: 18 bytes
 Data Page: 0
 PDU format: 254
 PDU specific: 235
 Default priority: 6
 PGN: 65,259 (0x00FEEB)
 Bytes: 1-18 “MRCBN*” + 3 byte engine type + “*” + 6 bytes engine number + “**”

Engine Configuration

Transmission Rate : 5 sec.
 Data Length: 28 bytes
 Data Page: 0
 PDU format: 254
 PDU specific: 227
 Default priority: 6
 PGN: 65,251 (0x00FEE3)

Bytes: 1,2	Engine Speed At Idle, Point 1 (SPN 188)
	Resolution: 0.125 rpm / Bit, 0 rpm offset
Byte: 3	Percent Torque At Idle, Point 1 (SPN 539)
	Resolution: 1% / Bit, -125% offset
Bytes: 4, 5	Engine Speed At Point 2 (SPN 528)
	Resolution: 0.125 rpm / Bit, 0 rpm offset
Byte: 6	Percent Torque At Point 2 (SPN 540)
	Resolution: 1% / Bit, -125% offset
Bytes: 7,8	Engine Speed At Point 3 (SPN 529)
	Resolution: 0.125 rpm / Bit, 0 rpm offset
Byte: 9	Percent Torque At Point 3 (SPN 541)
	Resolution: 1% / Bit, -125% offset
Bytes: 10, 11	Engine Speed At Point 4 (SPN 530)
	Resolution: 0.125 rpm / Bit, 0 rpm offset
Byte: 12	Percent Torque At Point 4 (SPN 542)
	Resolution: 1% / Bit, -125% offset
Bytes: 13, 14	Engine Speed At Point 5 (SPN 531)
	Resolution: 0.125 rpm / Bit, 0 rpm offset
Byte: 15	Percent Torque At Point 5 (SPN 543)
	Resolution: 1% / Bit, -125% offset
Bytes: 16, 17	Engine Speed At High Idle, Point 6 (SPN 532)
	Resolution: 0.125 rpm / Bit, 0 rpm offset
Bytes: 18, 19	(KP) Of Endspped Governor - N/A
Bytes: 20, 21	Reference Engine Torque (SPN 544)

Byte: 22, 23	Resolution: 1 Nm / Bit, 0 Nm offset Maximum Momentary Engine Override Speed, Point 7 (SPN 533)
Byte: 24	Resolution: 0.125 rpm / Bit, 0 rpm offset Maximum Momentary Engine Override Time Limit (SPN 534)
Byte: 25	Requested Speed Control Range Lower Limit - 300 RPM – N/A
Byte: 26	Requested Speed Control Range Upper Limit – N/A
Byte: 27	Requested Torque Control Range Lower Limit – N/A
Byte: 28	Requested Torque Control Range Upper Limit – N/A
Byte 29,30	Extended Range Requested Speed Control Range Upper Limit — N/A
Byte 31,32	Engine Moment of Inertia (SPN 1794)
	Resolution: 0.004 kgm ² /Bit, 0 kgm ² /Bit Offset
Byte 33,34	Default Engine Torque Limit — N/A

Torque Speed Control — TSC1

Reception Rate :	10 ms when active to the engine, 50 ms when active to the retarder
Data Length:	8 bytes
Data Page:	0
PDU format:	0
PDU specific:	Destination Address
Default priority:	3
PGN:	0 (0x000000)
Byte : 1	Control Bits
	Bits: 8,7 Not Defined
	Bits: 6,5 Override Control Mode Priority (SPN 897)
	00: Highest
	01: High
	10: Medium
	11: Low
	Bits: 4,3 Requested Speed Control Conditions (DDEC-ECU dependent) (SPN 696)
	00: Transient optimized for driveline disengaged and non-lockup conditions
	01: Stability optimized for driveline disengaged and non-lockup conditions
	10: Stability optimized for driveline engaged and/or in lockup condition 1
	11: Stability optimized for driveline engaged and/or in lockup condition 2
	Bits: 2,1 Override Control Modes – N/A
Byte: 2,3	Requested Speed / Speed Limit (SPN 898)
	Resolution: 0.125 rpm / Bit, 0 rpm offset
Byte: 4	Requested Torque / Torque Limit (SPN 518)
	Resolution: 1% / Bit, -125% offset
	0-125% for engine torque requests
	-125-0% for retarder torque requests
Bytes: 5-8	Not Defined

Electronic Transmission Controller #1 – ETC1

Reception Rate :	10 ms
Data Length:	8 bytes
Data Page:	0
PDU format:	240
PDU specific:	2
Default priority:	3
PGN:	61,442 (0x00F002)
Byte : 1	Status_ETC1
	Bits: 8,7 Not Defined
	Bits: 6,5 Shift in Progress (SPN 574)
	00: Shift is not in process
	01: Shift in process
	11: Not Available
	Bits: 4,3 Torque Converter Lockup Engaged (SPN 573)
	00: Torque Converter Lockup Disengaged
	01: Torque Converter Lockup Engaged
	Bits: 2,1 Driveline Engaged - (SPN 560)
	00: Driveline Disengaged
	01: Driveline Engaged
Byte: 2,3	Output Shaft Speed (SPN 191)
	Resolution: 0.125 rpm / Bit, 0 rpm offset
Byte: 4	Percent Clutch Slip - N/A
Byte: 5	Command_ETC1
	Bits: 8-5 Not Defined
	Bits: 4-3 Progressive Shift Disabled – N/A
	Bits: 2,1 Momentary Engine Overspeed Enable (SPN 606)
	00: Momentary Engine Overspeed Is Disabled
	01: Momentary Engine Overspeed Is Enabled
	11: N/A
Bytes: 6,7	Input Shaft Speed - N/A
Byte: 8	Source Address of Controlling Device for Transmission Control–N/A

Electronic Transmission Controller #2 – ETC2

Reception Rate :	100 ms
Data Length:	8 bytes
Data Page:	0
PDU format:	240
PDU specific:	5
Default priority:	6
PGN:	61,445 (0x00F005)
Byte : 1	Selected Gear – N/A
Byte: 2,3	Actual Gear Ratio – N/A
Byte: 4	Current Gear
	Resolution: 1 Gear Value/Bit, – 125 Offset
Byte: 5-6	Transmission Requested Range – N/A
Byte: 7-8	Transmission Current Range – N/A

Electronic Brake Controller #1 – EBC1

Reception Rate :	100 ms
Data Length:	8 bytes
Data Page:	0
PDU format:	240
PDU specific:	1
Default priority:	6
PGN:	61,441 (0x00F001)
Byte : 1	Status EBC1 – N/A
Byte: 2	Brake Pedal Position – N/A
Byte: 3	Status EBC2 – N/A
Byte: 4	Measured Aux.1 – N/A
Byte: 5	Engine Retarder Selection
	Bits: 8–7
	00: Off
	01: On
	Bits: 6,5
	00: Off
	01: On
	Bits: 4,3
	00: Off
	01: On
	Bits: 2,1
	00: Off
	01: On
Byte: 6	Status Bits – N/A
Byte: 7	Source Add Control – N/A
Byte: 8	Not Defined

Retarder Configuration – RC

Transmission Rate:	5 sec
Data Length:	19 bytes
Data Page:	0
PDU Format:	254
PDU Specific:	225
Default Priority:	6
PGN:	65, 249 (0x00FEE1)
Byte: 1	Type and Location
	Bits: 8–5 Retarder Location – N/A
	Bits: 4–1 Retarder Type N/A
Byte: 2	Retarder Control Method – N/A
Bytes: 3–4	Retarder Speed at Idle, Point 1
	Resolution: 0.125 rpm/bit, 0 rpm offset
Byte: 5	Percent Torque at Idle, Point 1
	Resolution: 1%/Bit, –125% offset
Bytes: 6,7	Maximum Retarder Speed, Point 2
	Resolution: 0.125 rpm/Bit, 0 rpm offset
Byte: 8	Percent Torque at Maximum Speed, Point 2
	Resolution: 1%/Bit, –125% offset
Bytes: 9,10	Retarder Speed, Point 3
	Resolution: 0.125 rpm/bit, 0 rpm offset
Byte: 11	Percent Torque, Point 3
	Resolution: 1%/Bit, –125% offset
Bytes: 12, 13	Retarder Speed, Point 4
	Resolution: 0.125 rpm/bit, 0 rpm offset
Byte: 14	Percent Torque, Point 4
	Resolution: 1%/Bit, –125% offset
Bytes: 15,16	Retarder Speed at Peak Torque, Point 5
	Resolution: 0.125 rpm/bit, 0 rpm offset
Bytes: 17,18	Reference Retarder Torque
	Resolution: 1 Nm/Bit, 0 Nm offset
Byte: 19	Percent Torque at Peak Torque, Point 5
	Resolution: 1%/Bit, –125% offset

Fuel Economy (Liquid) – LFE

Transmission Rate:	100 ms
Data Length:	8 Bytes
Data Page:	0
PDU Format:	254
PDU Specific:	242
Default Priority:	6
PGN:	65,266 (0x00FEF2)
Bytes: 1,2	Fuel Rate (SPN 183) Resolution: 0.05 L/h/bit, 0 km/L offset
Bytes: 3,4	Instantaneous Fuel Economy (SPN 184) Resolution: 1/512 km/ l/bit, 0 km/ l offset
Bytes: 5–6	Average Fuel Economy (SPN 185) Resolution: 1/512 km/ l/bit, 0 km/ l offset
Byte: 7	Throttle Position – N/A
Byte: 8	Not Defined

Inlet/Exhaust Conditions – IC

Transmission Rate:	500 ms
Data Length:	8 Bytes
Data Page:	0
PDU Format:	254
PDU Specific:	246
Default Priority:	6
PGN:	65,270 (0x00FEF6)
Byte: 1	Particulate Trap Inlet Pressure — N/A
Byte: 2	Boost Pressure (SPN 102) Resolution: 2 kPa/bit, 0kPa/bit offset
Byte: 3	Intake Manifold Temperature (SPN 105) Resolution: 1°C/bit, -40°C/bit offset
Byte: 4	Air Inlet Pressure — N/A
Byte: 5	Air Filter Differential Pressure — N/A
Byte: 6	Exhaust Gas Temperature — N/A
Byte: 8	Coolant Filter Differential Pressure — N/A

Engine Hours, Revolutions – Hours

Transmission Rate:	On Request
Data Length:	8 Bytes
Data Page:	0
PDU Format:	254
PDU Specific:	229
Default Priority:	6
PGN:	65,253 (0x00FEE5)
Bytes: 1–4	Total Engine Hours (SPN 247) Resolution: 0.05 hr/bit, 0 hr/bit offset
Bytes: 5–8	Total Engine Revolutions (249) Resolution: 1000 rev/bit, 0 rev/bit offset

Fuel Consumption (Liquid) – LFC

Transmission Rate:	On Request
Data Length:	8 Bytes
Data Page:	0
PDU Format:	254
PDU Specific:	233
Default Priority:	6
PGN:	65,257 (0x00FEE9)
Bytes: 1–4	Trip Fuel (SPN 182) Resolution: 0.05 L/bit, 0 L/bit offset
Bytes: 5–8	Total Fuel Used (SPN 250) Resolution: 0.05 L/bit, 0 L/bit offset

6.3.3 SAE J1939/21 DATA LINK LAYER

The Data Link Layer Parameter Group number (PGN) response definitions are described in the following sections.

Requests

Transmission Rate :	As Needed
Data Length:	3 bytes
Data Page:	0
PDU format:	234
PDU specific:	Destination Address
Default priority:	6
PGN:	59,904 (0x00EA00)
Byte : 1	Least Significant Byte of PGN
Byte: 2	Byte 2 of PGN
Byte: 3	Most Significant Byte of PGN

NOTE:

It is recommended that requests occur no more than 2 or 3 times per second.

6.3.4 SAE J1939/73 DIAGNOSTIC LAYER

This section describes the Diagnostic Layer Parameter Group Number (PGN) response definitions.

Active Diagnostic Trouble Codes – DM1

NOTE: V14 supports version 2 of this message.

Transmission Rate:		Whenever a DTC becomes an active fault and at a normal update rate of one second or longer, and then becomes inactive, a DM1 message will be transmitted to reflect this state change. If a different DTC changes state within one second update period, a new DM1 message is transmitted to reflect this new DTC.
Data Length:		Variable
Data Page:		0
PDU Format:		254
PDU Specific:		202
Default Priority:		6
PGN:		65226 (0x00FECA)
Byte: 1	Bits: 8–7	Malfunction Indicator lamp Status–N/A
	Bits: 6–5	Red Stop Lamp Status 00: Lamp Off 01: Lamp On
	Bits: 4–3	Amber Warning Lamp Status 00: Lamp Off 01: Lamp On
	Bits: 2–1	Protect lamp Status 00: Lamp Off 01: Lamp On
Byte: 2	Bits:8–1	Reserved for SAE assignment Lamp Status (set to 0xFF)
Byte: 3	Bits:8–1	SPN. 8 least significant bits of SPN
Byte: 4	Bits:8–1	SPN. 8 second byte of SPN
Byte: 5	Bits:8–6	SPN, 3 most significant bits
	Bits:5–1	FMI
Byte: 6	Bit: 8	SPN Conversion Method
	Bits:7–1	Occurrence Count
Byte: 7	Bits:8–1	Not Defined (Set to 0xFF)
Byte: 8	Bits:8–1	Not Defined (Set to 0xFF)

THIS PAGE INTENTIONALLY LEFT BLANK

APPENDIX A: FAULT CODES

J1939 SPN	J1587 PID	J1587 SID	FMI	Description
45	45	—	3	Grid Heater Open Circuit
45	45	—	4	Grid Heater Shortened to Ground
45	45	—	14	Grid Heater Special Instructions
45	45	—	12	Grid Heater Defect
84	84	—	1	Vehicle Speed Sensor Anti-tamper Fault 1
84	84	—	5	Vehicle Speed Sensor Anti-tamper Fault 2
84	84	—	0	Vehicle Speed Sensor Data Valid but Above Normal Range
84	84	—	3	Vehicle Speed Sensor Open Circuit
84	84	—	4	Vehicle Speed Sensor Short to Ground
84	84	—	2	Vehicle Speed Sensor Data Erratic (Output shaft speed from J1939 ETCI not in normal range)
84	84	—	14	Vehicle Speed Sensor not Plausible
86	86	—	14	Adaptive Cruise Control Fault
91	91	—	3	Accelerator Pedal Voltage Above Normal or Shorted High
91	91	—	2	Accelerator Pedal Data Erratic
91	91	—	4	Accelerator Pedal Voltage Below Normal or Shorted Low
94	94	—	3	Fuel Pressure Sensor Open Circuit
94	94	—	4	Fuel Pressure Sensor Short to Ground
94	94	—	0	Fuel Pressure High
94	94	—	1	Fuel Pressure Low
94	94	—	2	Engine Fuel Pressure Sensor Data Not Correct
94	94	—	14	Engine Fuel Pressure Sensor Measured Data Not Correct
95	95	—	0	Fuel Restriction High
95	95	—	3	Fuel Restriction Circuit Failed High
95	95	—	4	Fuel Restriction Circuit Failed Low
98	98	—	14	Engine Oil Level Data Valid but Very low
98	98	—	0	Engine Oil Level High
98	98	—	1	Engine Oil Level Low
98	98	—	3	Engine Oil Level Sensor Voltage High
98	98	—	4	Engine Oil Level Sensor Voltage Low
98	98	—	5	Engine Oil Level Sensor Open Circuit
98	98	—	2	Engine Oil Level Too High or Too Low
100	100	—	1	Engine Oil Pressure Low

J1939 SPN	J1587 PID	J1587 SID	FMI	Description
100	100	—	3	Engine Oil Pressure Sensor Open Circuit
100	100	—	2	Engine Oil Pressure Sensor Data Erratic
100	100	—	4	Engine Oil Pressure Sensor Short to Ground
100	100	—	14	Engine Oil Pressure Too Low
102	102	—	0	Boost Pressure High
102	102	—	1	Boost Pressure Low
102	102	—	2	Boost Pressure Sensor Data Erratic
102	102	—	3	Boost Pressure Sensor Open Circuit
102	102	—	4	Boost Pressure Sensor Short to Ground
102	102	—	13	Boost Pressure Out of Range
103	103	—	7	Turbo Charger 1 No Rev
103	103	—	14	Turbo Charger 2 No Rev
105	105	—	3	Intake Manifold Temperature Sensor Open Circuit
105	105	—	4	Intake Manifold Temperature Sensor Short to Ground
105	105	—	0	Intake Manifold Temperature High
107	107	—	0	Air Filter Restriction High
107	107	—	3	Air Filter Sensor Open Circuit
107	107	—	4	Air Filter Sensor Short to Ground
110	110	—	14	Engine Coolant Temperature Very High
110	110	—	0	Engine Coolant Temperature High
110	110	—	4	Engine Coolant Temperature Sensor Short to Ground
110	110	—	3	Engine Coolant Temperature Sensor Open Circuit
111	111	—	1	Coolant Level Low
111	111	—	3	Coolant Level Sensor Open Circuit
111	111	—	4	Coolant Level Sensor Short to Ground
111	111	—	14	Coolant Level Very Low
	123	—	7	OI Loop Fault
158	158	—	0	Switched Battery Voltage High
158	158	—	1	Switched Battery Voltage Low
158	158	—	2	Switched Battery Voltage Does Not match DDEC-ECU and DDEC-VCU
168	168	—	3	Battery Voltage High
168	168	—	4	Battery Voltage Low
174	174	—	3	Fuel Temperature Sensor Open Circuit
174	174	—	4	Fuel Temperature Sensor Short to Ground
175	175	—	3	Engine Oil Temperature Sensor Open Circuit
175	175	—	4	Engine Oil Temperature Sensor Short to Ground
190	190	—	0	Engine Speed High

J1939 SPN	J1587 PID	J1587 SID	FMI	Description
216	—	216	14	Other ECU Fault (Missing Information)
230	230	—	1	IVS Wired Backwrds
404	404	—	0	Turbo Compressor Out Temp High
404	404	—	1	Turbo Compressor Out Temp Low
527	—	254	12	Cruise Control – VCU Internal Error
558	—	230	5	Idle Validation Switch Open Circuit
558	—	230	12	Both Idle Validation Switches Closed Idle Validation Switch not Idle and Accelerator Pedal Signal Idle Idle Validation Switch Idle and Accelerator Pedal Signal not Idle
599	—	242	12	Cruise Control Switch Contact Set + Coast — Both SET and RES Contacts Closed at the Same Time
601	—	243	12	Cruise Control Switch Contact – Resume & Accel – Both contacts are closed at the same time.
609	—	233	2	Anti-Theft Device Wrong Key
609	—	233	9	Anti-Theft – No Transponder Code on Hardwire
609	—	233	11	Anti-Theft – Calibration Error
609	—	233	0	Anti-Theft – No Additional Key Can be Learned
609	—	233	12	DDEC-ECU Failure
609	—	233	14	DDEC-ECU Calibration Error
611	151	—	4	Oil Separator Diagnosis Short to Ground
611	151	—	12	Oil Separator Defect
620	—	232	2	Throttle Pedal Supply Data Erratic
620	—	232	3	Throttle Pedal Supply Above Normal
620	—	232	4	Throttle Pedal Supply Below Normal
625	—	248	14	Proprietary Data Link CAN Failed
625	—	248	2	Proprietary Data Link – No Communication Between ECU and VCU
629	—	254	12	DDEC-VCU Internal Error – Checksum Fault Flash
630	—	253	9	Engine Brake Calibration Parameters Invalid
636	—	21	1	Crankshaft Position Sensor Signal Voltage Too Low
636	—	21	7	No Match of Camshaft and Crankshaft Signals
636	—	21	8	Crankshaft Position Sensor Time Out
636	—	21	14	Crankshaft Position Sensor Pins Swapped
636	—	21	4	Crankshaft Position Sensor Short to Ground
636	—	21	3	Crankshaft Position Sensor Open Circuit
639	—	231	2	J1939 ETCl msg Missing
651	—	1	6	Injector Cylinder #1 Shorted Circuit
651	—	1	7	Injector Cylinder #1 No Plunger

J1939 SPN	J1587 PID	J1587 SID	FMI	Description
651	—	1	5	Injector Cylinder #1 Current Below Normal or Open Circuit
651	—	1	4	Injector Cylinder #1 – Short to Ground
651	—	1	3	Injector Cylinder #1 – Shorted High
651	—	1	12	Injector Cylinder #1 – Idle Smoothness Governor at Limit
651	—	1	14	Injector Cylinder #1 – Single Cylinder Correction at Limit
652	—	2	6	Injector Cylinder #2 Shorted Circuit
652	—	2	7	Injector Cylinder #2 No Plunger
652	—	2	5	Injector Cylinder #2 Current Below Normal or Open Circuit
652	—	2	12	Injector Cylinder #2 – Idle Smoothness Governor at Limit
652	—	2	14	Injector Cylinder #2 – Single Cylinder Correction at Limit
653	—	3	6	Injector Cylinder #3 Shorted Circuit
653	—	3	7	Injector Cylinder #3 No Plunger
653	—	3	5	Injector Cylinder #3 Current Below Normal or Open Circuit
653	—	3	12	Injector Cylinder #3 – Idle Smoothness Governor at Limit
653	—	4	14	Injector Cylinder #3 – Single Cylinder Correction at Limit
654	—	4	6	Injector Cylinder #4 Shorted Circuit
654	—	4	7	Injector Cylinder #4 No Plunger
654	—	4	5	Injector Cylinder #4 Current Below Normal or Open Circuit
654	—	4	12	Injector Cylinder #4 – Idle Smoothness Governor at Limit
654	—	4	14	Injector Cylinder #4 – Single Cylinder Correction at Limit
655	—	5	6	Injector Cylinder #5 Shorted Circuit
655	—	5	7	Injector Cylinder #5 No Plunger
655	—	5	5	Injector Cylinder #5 Current Below Normal or Open Circuit
655	—	5	12	Injector Cylinder #5 – Idle Smoothness Governor at Limit
655	—	5	14	Injector Cylinder #5 – Single Cylinder Correction at Limit
656	—	6	6	Injector Cylinder #6 Shorted Circuit
656	—	6	7	Injector Cylinder #6 No Plunger
656	—	6	5	Injector Cylinder #6 Current Below Normal or Open Circuit
656	—	6	12	Injector Cylinder #6 – Idle Smoothness Governor at Limit
656	—	6	14	Injector Cylinder #6 – Single Cylinder Correction at Limit
657	—	7	6	Injector Cylinder #7 Shorted Circuit
657	—	7	7	Injector Cylinder #7 No Plunger
657	—	7	5	Injector Cylinder #7 Current Below Normal or Open Circuit

J1939 SPN	J1587 PID	J1587 SID	FMI	Description
657	—	7	12	Injector Cylinder #7 – Idle Smoothness Governor at Limit
657	—	7	14	Injector Cylinder #7 – Single Cylinder Correction at Limit
658	—	8	6	Injector Cylinder #8 Shorted Circuit
658	—	8	7	Injector Cylinder #8 No Plunger
658	—	8	5	Injector Cylinder #8 Current Below Normal or Open Circuit
658	—	8	12	Injector Cylinder #8 – Idle Smoothness Governor at Limit
658	—	8	14	Injector Cylinder #8 – Single Cylinder Correction at Limit
677	—	39	3	Engine Starter Relay Shorted to High Source
677	—	39	5	Engine Starter Relay Open Circuit
677	—	39	6	Engine Starter Relay Shorted to Ground
677	—	39	7	Engine Starter Relay — Starter Does Not Engage
677	—	39	14	Engine Starter Relay Jammed
696	—	57	3	Aux PWM #1 Shorted High
696	—	57	4	Aux PWM #1 Short to Ground
696	—	57	5	Aux PWM #1 Open Circuit
696	—	57	6	Aux PWM #1 High Side Line Shorted to Ground
696	—	58	3	Aux PWM #2 Shorted High
696	—	58	5	Aux PWM #2 Open Circuit
696	—	58	6	Aux PWM #2 High Side Line Shorted to Ground
699	—	59	3	Aux PWM #3 Shorted High
699	—	59	5	Aux PWM #3 Open Circuit
699	—	59	6	Aux PWM #3 High Side Line Shorted to Ground
700	—	60	3	Aux PWM #4 Shorted High
700	—	60	5	Aux PWM #4 Open Circuit
700	—	60	6	Aux PWM #4 High Side Line Shorted to Ground
705	—	53	3	Aux PWM #5 Shorted High
705	—	53	4	Aux PWM #5 Short to Ground
705	—	53	11	Aux PWM #5 Bank2 Shorted
706	—	54	3	Aux PWM #6 Open Circuit
723	—	64	3	Camshaft Position Sensor Open Circuit
723	—	64	4	Camshaft Position Sensor Short to Ground
723	—	64	8	Camshaft Position Sensor Time Out
723	—	64	14	Camshaft Position Sensor Pins Swapped
	—	71	5	Grid Heater Valve Open Circuit
	—	71	6	Grid Heater Valve Short to Ground
730	—	38	0	Grid Heater — No Inc Boost Temperature
730	—	38	1	Grid Heater Relay Closed

J1939 SPN	J1587 PID	J1587 SID	FMI	Description
730	—	38	2	Grid Heater Relay Open
730	—	38	3	Grid Heater Open Circuit
730	—	38	4	Grid Heater Short to Ground
974	—	29	2	Remote Throttle Pedal Supply Out of Range
974	—	29	3	Remote Throttle Pedal Supply Open Load
974	—	29	4	Remote Throttle Pedal Short to Ground
986	—	159	0	Fan Speed Time Out
1004	—	56	3	Accessory Bus Shutdown Open Circuit
1004	—	56	4	Accessory Bus Shutdown short to Ground
1005	—	43	3	Gear Output 1 Open Circuit
1005	—	43	4	Gear Output 1 Short to Ground
1006	—	44	3	Gear Output 2 Open Circuit
1006	—	44	4	Gear Output 2 Short to Ground
2791	—	146	0	EGR Temperature High
2791	—	146	1	EGR Temperature Low
2791	—	146	2	EGR System Data Erratic
2791	—	146	7	EGR Valve Not Responding
2791	—	146	12	EGR Bad Component

APPENDIX B: CUSTOMER PROGRAMMABLE PARAMETERS

The following features have customer programmable parameters.

B.1 COLD START

The Cold Start parameters are listed in Table B-1.

Parameter	Setting	Default	Parameter ID	Access
Grid Heater	0 = Disabled 1 = Grid Heater (pin 15/10) 2 = Grid Heater (DDEC-ECU, not currently available)	0	01 02 06	VEPS or minidiag2

Table B-1 Cold Start Parameters

B.2 CRUISE CONTROL

The Cruise Control parameters listed in Table B-2 can be set by customers.

Parameter	Description	Range	Default	Parameter ID	Access
Min Road Speed	Minimum road speed for Cruise Control	38 – 152 km/hr	48 km/hr	1 15 01	Nexiq™ DDR, DDDL, DRS, VEPS, minidiag2
Max Set Speed	Cruise Control vehicle set speed cannot be faster than this value.	48–152 km/hr	152 km/hr	1 15 02	Nexiq DDR, DDL, DRS, VEPS, minidiag2
Cruise Set Speed Increment	Set Speed increment for every Resume/Accel switch momentary press.	0–10 km/hr	2 km/hr	1 15 03	VEPS, DRS, minidiag2
Cruise Set Speed Decrement	Set Speed decrement for every Set/Coast switch momentary press.	0–10 km/hr	2 km/hr	1 15 04	VEPS, DRS, minidiag2
Cruise Set Speed Ramp Up	Set Speed increment for Resume/Accel switch continuous press.	0–20 km/hr/sec	2 km/hr/sec	1 15 05	VEPS, DRS, minidiag2
Cruise Set Speed Ramp Down	Set Speed decrement for Set/Coast switch continuous press.	0–20 km/hr/sec	2 km/hr/sec	1 15 06	VEPS, DRS, minidiag2
Enable Cruise Auto Resume	Enables or disables the auto resume feature.	0 = Disable 1 = Enable after 1st clutch release 2 = Enable after clutch released twice	0	1 15 07	Nexiq DDR, DDL, DRS, VEPS, minidiag2
Enable Engine Brakes on Cruise Control	Enables or disables the engine brakes during Cruise Control.	0 = Disable 1 = Enable	0	1 10 06	Nexiq DDR, DDL, DRS, VEPS, minidiag2
Adaptive Cruise Control*	Enables/Disables the feature.	0 = Disable 1 = Enable	0	1 15 10	DRS, VEPS, minidiag2

* Only if Smart Cruise is installed on the vehicle.

Table B-2 Cruise Control Parameters

The parameters listed in listed in Table B-3 can be set by VEPS or minidiag2 for the Engine Brake option with Cruise Control.

Parameter	Description	Range	Default	Parameter ID	Access
CRUISE CONTROL ENGINE BRAKE	Enables or disables the feature that allows the engine brake to be used while on cruise control if the vehicle exceeds the cruise set speed.	0 = Disable 1 = Enable	0	1 10 06	VEPS, Nexiq DDR, DDDL, DRS, or minidiag2
MAX CRUISE OVERSPEED FOR LOW ENGINE BRAKE	Engine Brake LOW will be activated when the road speed exceeds the maximum over speed limit above the cruise set speed.	0–48 km/hr	5 km/hr	1 10 07	VEPS, DRS, minidiag2
MIN CRUISE OVERSPEED FOR LOW ENGINE BRAKE	Engine Brake LOW will be deactivated when the road speed falls under the minimum over speed limit above the cruise set speed for engine brake low.	0–48 km/hr	2 km/hr	1 10 08	VEPS, DRS, minidiag2
MAX CRUISE OVERSPEED FOR HIGH ENGINE BRAKE	Engine Brake HIGH will be activated when the road speed exceeds the maximum over speed limit above the cruise set speed.	0–48 km/hr	10 km/hr	1 10 11	VEPS, DRS, minidiag2
MIN CRUISE OVERSPEED FOR HIGH ENGINE BRAKE	Engine Brake HIGH will be deactivated when the road speed falls under the minimum over speed limit above the cruise set speed for engine brake low.	0–48 km/hr	6 km/hr	1 10 12	VEPS, DRS, minidiag2
MAX CRUISE OVERSPEED FOR MED ENGINE BRAKE	Engine Brake MED/HIGH will be activated when the road speed exceeds the maximum over speed limit above the cruise set speed.	0–48 km/hr	5 km/hr	1 10 10	VEPS, DRS, minidiag2
MIN CRUISE OVERSPEED FOR MED ENGINE BRAKE	Engine Brake MED/HIGH will be deactivated when the road speed falls under the minimum over speed limit above the cruise set speed for engine brake low	0–48 km/hr	7 km/hr	1 10 09	VEPS, DRS, minidiag2

Table B-3 Cruise Control Engine Brake Parameters

B.3 ENGINE BRAKE

The Engine Brake parameter listed in Table B-4 can be configured by customers.

Parameter	Choice/Range	Default	Parameter ID	Access
Engine Brake Configuration	0 = Compression Brake and Exhaust Flap (Low/Med) 1 = Compression Brake and Turbo Brake (Low/Med/High)	0	1 10 13	VEPS or minidiag2

Table B-4 Engine Brake Parameter

3.1 CONFIGURATION FOR MBE 900 COMPRESSION BRAKE (CONSTANT THROTTLE) ONLY APPLICATION

The DDEC-VCU configuration parameters for **Compression Brake Only** applications are listed in Table B-5. The DDEC-ECU parameters for MBE 900 compression brake (constant throttle) only applications are listed in Table B-6, Table B-7, and Table B-8.

Parameter	Description	Range	Setting†	Parameter ID	Access
Engine Brake Configuration	Enables the type of engine brake required	0 = Engine Brake configuration with Compression Brake & Exhaust Flap 1 = Engine Brake Configuration w/ Compression Brake & Turbo Brake	0 = Low/High	1 10 13	VEPS or minidiag2
Engine Brake Stage 1 Mask for Low Braking	Mask determines which device turns on for low braking	64 = Constant Throttle Valve Only 80 = Constant Throttle & Exhaust Flap 81 = Constant Throttle Valve & Turbo Brake High	64	1 10 14	VEPS or minidiag2
Engine Brake Stage 1 Factor for Low Braking	Factor determines the amount of low braking	0 – 100%	100	1 10 15	VEPS or minidiag2
Engine Brake Stage 2 Mask for Medium Braking	Mask determines which device turns on for medium braking	64 = Constant Throttle Valve Only 80 = Constant Throttle & Exhaust Flap 81 = Constant Throttle Valve & Turbo Brake High	64	1 10 16	VEPS or minidiag2
Engine Brake Stage 2 Factor for Medium Braking	Factor determines the amount of medium braking	0 – 100%	100	1 10 17	VEPS or minidiag2
Engine Brake Stage 3 Mask for High Braking*	Mask determines which device turns on for high braking	64 = Constant Throttle Valve Only 80 = Constant Throttle & Exhaust Flap 81 = Constant Throttle Valve & Turbo Brake High	64	1 10 18	VEPS or minidiag2
Engine Brake Stage 3 Factor for High Braking	Factor determines the amount of high braking	0 – 100%	100	1 10 19	VEPS or minidiag2
Engine Brake Transmission Mask	—	64 = Constant Throttle Valve Only 80 = Constant Throttle & Exhaust Flap 81 = Constant Throttle Valve & Turbo Brake High	64	1 10 20	VEPS or minidiag2
Engine Brake Transmission Factor	Factor determines the amount of high braking	0–100%	100	1 10 21	VEPS or minidiag2

* The Engine Brake Stage 3 mask is used when the vehicle is exceeding the Road Speed limit. Engine Brake Stage 3 mask should always be set to a non-zero value for engines with an engine brake. For Constant Throttle only or Exhaust Flap applications, the Stage 3 mask must be the same value as the Stage 2 mask.

† Recommended Setting

Table B-5 DDEC-VCU Configuration Parameter for Compression Brake Only

The DDEC-ECU software 53 (Diagnostic Version 5) parameters listed in Table B-6 for **Compression Brake Only** applications must be set in the DDEC-ECU and the configuration parameters B-5 must be set in the DDEC-VCU.

Parameter	Description	Range	Setting*	Parameter ID	Access
PWM1 – Exhaust Flap Enable	Enables the Exhaust Flap or Turbo Brake on PWM1	0 = No Function 1 = Wastegate Control 2 = Exhaust Flap (VEPS) 3 = Exhaust Flap (minidiag2)	0 = No Function	0 06 01	VEPS or minidiag2
PWM2 – Compression Engine Brake Enable	Enables the Compression brake on PWM2	0 = No Function 1 = Not Used 2 = Compression Brake (VEPS) 3 = Compression Brake (minidiag2)	2 for VEPS OR 3 for minidiag2	0 06 02	VEPS or minidiag2
PWM6	Turbo Brake Sleeve	0 = No Function 1 = Not Used 2 = Not Used 3 = Exhaust Flap	0 = No Function	0 35 02	VEPS or minidiag2

* Recommended Settings

Table B-6 DDEC-ECU Software 53 (Diagnostic Version 5) Parameters for Compression Brake Only Applications

The DDEC-ECU software 56 (Diagnostic Version 5) parameters listed in Table B-7 for **Compression Brake Only** applications must be set in the DDEC-ECU and the configuration parameters B-5 must be set in the DDEC-VCU.

Parameter	Description	Range	Setting*	Parameter ID	Access
PWM1 – Exhaust Flap Enable	Enables the Exhaust Flap or Turbo Brake on PWM1	0 = No Function 1 = Wastegate Control 2 = Exhaust Flap (VEPS) 3 = Exhaust Flap (minidiag2)	0 = No Function	0 03 01	VEPS or minidiag2
PWM2 – Compression Engine Brake Enable	Enables the Compression brake on PWM2	0 = No Function 1 = Not Used 2 = Compression Brake (VEPS) 3 = Compression Brake (minidiag2)	2 for VEPS OR 3 for minidiag2	0 03 02	VEPS or minidiag2
PWM6	Turbo Brake Sleeve	0 = No Function 1 = Not Used 2 = Not Used 3 = Exhaust Flap	0 = No Function	0 03 06	VEPS or minidiag2

* Recommended Settings

Table B-7 DDEC-ECU Software 56 (Diagnostic Version 6) Parameters for Compression Brake Only Applications

The DDEC-ECU software 60 (Diagnostic Version 9) parameters listed in Table B-8 for **Compression Brake Only** applications must be set in the DDEC-ECU and the configuration parameters listed in Table B-5 must be set in the DDEC-VCU.

Parameter	Description	Range	Settings	Parameter ID	Access
PWM1 (PV1)	MBR 900 Exhaust Flap Enable/MBE 4000 Wastegate Enable	0 = No Function 1 = Boost Control* 2 = Not Used 3 = Exhaust Flap†	0 = No Function	0 03 01	VEPS or minidiag2
PWM2 (PV2)	EGR Value Enable	0 = No Function 1 = EGR Valve 2 = Not Used 3 = Engine Brake‡	2 for VEPS or 3 for minidiag2	0 03 02	VEPS or minidiag2
PWM5 (PV5)	Compression Brake Enable	0 = No Function 1 = Not Used 2 = Not Used 3 = Engine Brake§	3 = Compression Brake Enable	0 03 05	VEPS or minidiag2
PWM6 (PV6)	MBE 4000 Turbo Brake/Exhaust Flap	0 = No Function 1 = Not Used 2 = Not Used 3 = Exhaust Flap or Turbo Brake Sleeve 4 = Future Grid Heater	0 = No Function	0 03 06	VEPS or minidiag2

* Only if turbo brake

† MBE 900 EGR engine

‡ Moved to PV5 if PV2 is used for EGR.

§ Alternative to PV2 if PV2 is used for EGR.

|| Recommended Setting

Table B-8 DDEC-ECU Software 60 (Diagnostic Version 9) Configuration Parameter for Compression Brake Only Applications - MBE 900 Engine

3.2 CONFIGURATION FOR MBE 900 COMPRESSION BRAKE AND EXHAUST BRAKE APPLICATIONS

The configuration parameters listed in Table B-9 for **Compression Brake and Exhaust Brake** are for the MBE 906.

Parameter	Description	Range	Setting†	Parameter ID	Access
Engine Brake Configuration	Enables the type of engine brake required	0 = Engine Brake configuration w/ Compression Brake & Exhaust flap 1 = Engine Brake Configuration w/ Compression Brake & Turbo Brake	0 = Low/Med	1 10 13	VEPS or minidiag2
Engine Brake Stage 1 Mask for Low Braking	Mask determines which device turns on for low braking	64 = Constant Throttle Valve Only 80 = Constant Throttle & Exhaust Flap 81 = Constant Throttle Valve & Turbo Brake High	64	1 10 14	VEPS or minidiag2
Engine Brake Stage 1 Factor for Low Braking	Factor determines the amount of low braking	0 – 100%	100	1 10 15	VEPS or minidiag2
Engine Brake Stage 2 Mask for Medium Braking	Mask determines which device turns on for medium braking	64 = Constant Throttle Valve Only 80 = Constant Throttle & Exhaust Flap 81 = Constant Throttle Valve & Turbo Brake High	80	1 10 16	VEPS or minidiag2
Engine Brake Stage 2 Factor for Medium Braking	Factor determines the amount of medium braking	0 – 100%	100	1 10 17	VEPS or minidiag2
Engine Brake Stage 3 Mask for High Braking*	Mask determines which device turns on for high braking	64 = Constant Throttle Valve Only 80 = Constant Throttle & Exhaust Flap 81 = Constant Throttle Valve & Turbo Brake High	80	1 10 18	VEPS or minidiag2
Engine Brake Stage 3 Factor for High Braking	Factor determines the amount of high braking	0 – 100%	100	1 10 19	VEPS or minidiag2
Engine Brake Transmission Mask	—	64 = Constant Throttle Valve Only 80 = Constant Throttle & Exhaust Flap 81 = Constant Throttle Valve & Turbo Brake High	64	1 10 20	VEPS or minidiag2
Engine Brake Transmission Factor	Factor determines the amount of high braking	0–100%	100	1 10 21	VEPS or minidiag2

* The Engine Brake Stage 3 mask is used when the vehicle is exceeding the Road Speed limit. Therefore the Engine Brake Stage 3 mask should always be set to a non-zero value with engine brake. For Constant Throttle only or Exhaust Flap applications, the Stage 3 mask must be the same value as the Stage 2 mask.

† Recommended Setting

Table B-9 DDEC-VCU Configuration Parameter for Compression and Exhaust Brake Applications - MBE 906 Engine

The DDEC-ECU software 53 (Diagnostic Version 5) parameters listed in Table B-10 for **Compression Brake and Exhaust Brake** applications must be set in the DDEC-ECU and the configuration parameters listed in Table B-9 must be set in the DDEC-VCU.

Parameter	Description	Range	Recommended Setting	Parameter ID	Access
PWM1 – Exhaust Flap Enable	Enables the Exhaust Flap or Turbo Brake on PWM1	0 = No Function 1 = Wastegate Control 2 = Exhaust Flap (VEPS) 3 = Exhaust Flap (minidiag2)	2 for VEPS or 3 for minidiag2	0 06 01	VEPS or minidiag2
PWM2 – Compression Engine Brake Enable	Enables the Compression brake on PWM2	0 = No Function 1 = Not Used 2 = Compression Brake (VEPS) 3 = Compression Brake (minidiag2)	2 for VEPS or 3 for minidiag2	0 06 02	VEPS or minidiag2
PWM6	Turbo Brake Sleeve Control	0 = No Function 1 = Not Used 2 = Not Used 3 = Exhaust Flap	0 = No Function	0 35 02	VEPS or minidiag2

Table B-10 DDEC-ECU Software 53 (Diagnostic Version 5) Configuration Parameter for Compression and Exhaust Brake Applications - MBE 906 Engine

The DDEC-ECU software 56 (Diagnostic Version 6) parameters listed in Table B-11 for **Compression Brake and Exhaust Brake** applications must be set in the DDEC-ECU and the configuration parameters listed in Table B-9 must be set in the DDEC-VCU.

Parameter	Description	Range	Recommended Setting	Parameter ID	Access
PWM1 – Exhaust Flap Enable	Enables the Exhaust Flap or Turbo Brake on PWM1	0 = No Function 1 = Wastegate Control 2 = Exhaust Flap (VEPS) 3 = Exhaust Flap (minidiag2)	2 for VEPS or 3 for minidiag2	0 03 01	VEPS or minidiag2
PWM2 – Compression Engine Brake Enable	Enables the Compression brake on PWM2	0 = No Function 1 = Not Used 2 = Compression Brake (VEPS) 3 = Compression Brake (minidiag2)	2 for VEPS or 3 for minidiag2	0 03 02	VEPS or minidiag2
PWM6	Turbo Brake sleeve Control	0 = No Function 1 = Not Used 2 = Not Used 3 = Exhaust Flap	0 = No Function	0 03 06	VEPS or minidiag2

Table B-11 DDEC-ECU Software 56 (Diagnostic Version 6) Configuration Parameter for Compression and Exhaust Brake Applications - MBE 906 Engine

The DDEC-ECU software 60 (Diagnostic Version 9) parameters listed in Table B-12 for **Compression Brake and Exhaust Flap** applications must be set in the DDEC-ECU and the configuration parameters listed in Table B-9 must be set in the DDEC-VCU.

Parameter	Description	Range	Recommended Settings	Parameter ID	Access
PWM1 (PV1)	MBR 900 Exhaust Flap Enable/MBE 4000 Wastegate Enable	0 = No Function 1 = Boost Control* 2 = Not Used 3 = Exhaust Flap†	2 for VEPS or 3 for minidiag2	0 03 01	VEPS or minidiag2
PWM2 (PV2)	EGR Value Enable	0 = No Function 1 = EGR Valve 2 = Not Used 3 = Engine Brake‡	2 for VEPS or 3 for minidiag2	0 03 02	VEPS or minidiag2
PWM5 (PV5)	Compression Brake Enable	0 = No Function 1 = Not Used 2 = Not Used 3 = Engine Brake§	3 = Compression Brake Enable	0 03 05	VEPS or minidiag2
PWM6 (PV6)	MBE 4000 Turbo Brake/Exhaust Flap	0 = No Function 1 = Not Used 2 = Not Used 3 = Exhaust Flap or Turbo Brake Sleeve 4 = Future Grid Heater	0 = No Function	0 03 06	VEPS or minidiag2

* Only if tubo brake

† MBE 900 EGR engine

‡ Moved to PV5 if PV2 is used for EGR.

§ Alternative to PV2 if PV2 is used for EGR.

Table B-12 DDEC-ECU Software 60 (Diagnostic Version 9) Configuration Parameter for Compression Brake and Exhaust Flap Applications - MBE 900 Engine

3.3 CONFIGURATION FOR MBE 4000 COMPRESSION BRAKE AND EXHAUST BRAKE APPLICATIONS

The configuration parameters listed in Table B-13 for **Compression Brake and Exhaust Brake** are for the MBE 4000. These parameters can be configured or changed with VEPS or minidiag2.

Parameter	Description	Range	Recommended Setting	Parameter ID	Access
Engine Brake Configuration	Enables the type of engine brake required	0 = Engine Brake Configuration w/ Compression Brake & Exhaust Flap 1 = Engine Brake Configuration with Compression Brake & Turbo Brake	0 = Low/Med	1 10 13	VEPS or minidiag2
Engine Brake Stage 1 Mask for Low Braking	Mask determines which device turns on for low braking	64 = Constant Throttle Valve Only 80 = Constant Throttle & Exhaust Flap 81 = Constant Throttle Valve & Turbo Brake High	64	1 10 14	VEPS or minidiag2
Engine Brake Stage 1 Factor for Low Braking	Factor determines the amount of low braking	0 – 100%	100	1 10 15	VEPS or minidiag2
Engine Brake Stage 2 Mask for Medium Braking	Mask determines which device turns on for medium braking	64 = Constant Throttle Valve Only 80 = Constant Throttle & Exhaust Flap 81 = Constant Throttle Valve & Turbo Brake High	80	1 10 16	VEPS or minidiag2
Engine Brake Stage 2 Factor for Medium Braking	Factor determines the amount of medium braking	0 – 100%	100	1 10 17	VEPS or minidiag2
Engine Brake Stage 3 Mask for High Braking*	Mask determines which device turns on for high braking	64 = Constant Throttle Valve Only 80 = Constant Throttle & Exhaust Flap 81 = Constant Throttle Valve & Turbo Brake High	80	1 10 18	VEPS or minidiag2
Engine Brake Stage 3 Factor for High Braking	Factor determines the amount of high braking	0 – 100%	100	1 10 19	VEPS or minidiag2
Engine Brake Transmission Mask		64 = Constant Throttle Valve Only 80 = Constant Throttle & Exhaust Flap 81 = Constant Throttle Valve & Turbo Brake High	64	1 10 20	VEPS or minidiag2
Engine Brake Transmission Factor	Factor determines the amount of high braking	0–100%	100	1 10 21	VEPS or minidiag2

*The Engine Brake Stage 3 mask is used when the vehicle is exceeding the Road Speed limit. Engine Brake Stage 3 mask should always be set to a non-zero value for engines with an engine brake. For Constant Throttle only or Exhaust Flap applications, the Stage 3 mask must be the same value as the Stage 2 mask.

Table B-13 DDEC-VCU Configuration Parameter for Compression Brake and Exhaust Brake Applications - MBE 4000 Engine

The DDEC-ECU software 53 (Diagnostic Version 5) parameters listed in Table B-14 for **Compression Brake and Exhaust Brake** applications must be set in the DDEC-ECU and the configuration parameters listed in Table B-13 must be set in the DDEC-VCU.

Parameter	Description	Range	Setting*	Parameter ID	Access
PWM1 – Exhaust Flap Enable	Enables the Exhaust Flap or Turbo Brake on PWM1	0 = No Function 1 = Wastegate Control 2 = Exhaust Flap (VEPS) 3 = Exhaust Flap (minidiag2)	2 for VEPS or 3 for minidiag2	0 06 01	VEPS or minidiag2
PWM2 – Compression Engine Brake Enable	Enables the Compression brake on PWM2	0 = No Function 1 = Not Used 2 = Compression Brake (VEPS) 3 = Compression Brake (minidiag2)	2 for VEPS or 3 for minidiag2	0 06 02	VEPS or minidiag2
PWM6	Turbo Brake Sleeve Control	0 = No Function 1 = Not Used 2 = Not Used 3 = Exhaust Flap	0 = No Function	0 35 02	VEPS or minidiag2

* Recommended Setting

Table B-14 DDEC-ECU Software 53 (Diagnostic Version 5) Configuration Parameter for Compression Brake and Exhaust Brake Applications - MBE 4000 Engine

The DDEC-ECU software 56 (Diagnostic Version 6) parameters listed in Table B-15 for **Compression Brake and Exhaust Brake** applications must be set in the DDEC-ECU and the configuration parameters listed in Table B-13 must be set in the DDEC-VCU. These parameters can be changed with VEPS or minidiag2.

Parameter	Description	Range	Setting*	Parameter ID	Access
PWM1 – Exhaust Flap Enable	Enables the Exhaust Flap or Turbo Brake on PWM1	0 = No Function 1 = Wastegate Control 2 = Exhaust Flap (VEPS) 3 = Exhaust Flap (minidiag2)	2 for VEPS or 3 for minidiag2	0 03 01	VEPS or minidiag2
PWM2 – Compression Engine Brake Enable	Enables the Compression brake on PWM2	0 = No Function 1 = Not Used 2 = Compression Brake (VEPS) 3 = Compression Brake (minidiag2)	2 for VEPS or 3 for minidiag2	0 03 02	VEPS or minidiag2
PWM6	Turbo Brake Sleeve Control	0 = No Function 1 = Not Used 2 = Not Used 3 = Exhaust Flap	0 = No Function	0 03 06	VEPS or minidiag2

* Recommended Setting

Table B-15 DDEC-ECU Software 56 (Diagnostic Version 6) Configuration Parameter for Compression Brake and Exhaust Brake Applications - MBE 4000 Engine

The DDEC-ECU software 60 (Diagnostic Version 9) parameters listed in Table B-16 for **Compression Brake and Exhaust Brake** applications must be set in the DDEC-ECU and the configuration parameters listed in Table B-13 must be set in the DDEC-VCU.

Parameter	Description	Range	Settings‡	Parameter ID	Access
PWM1 (PV1)	MBE 4000 Wastegate Enable	0 = No Function 1 = Wastegate 2 = Not Used 3 = Exhaust Flap	0 = No Function	0 03 01	VEPS or minidiag2
PWM2 (PV2)	EGR Value Enable	0 = No Function 1 = EGR Valve 2 = Not Used 3 = Engine Brake*	2 for VEPS or 3 for minidiag2	0 03 02	VEPS or minidiag2
PWM5 (PV5)	Compression Brake Enable	0 = No Function 1 = Not Used 2 = Not Used 3 = Engine Brake†	3 = Compression Brake Enable	0 03 05	VEPS or minidiag2
PWM6 (PV6)	MBE 4000 Turbo Brake/Exhaust Flap	0 = No Function 1 = Not Used 2 = Not Used 3 = Exhaust Flap or Turbo Brake Sleeve 4 = Future Grid Heater	3 = Exhaust Flap	0 03 06	VEPS or minidiag2

* Moved to PV5 if PV2 is used for EGR.

† Alternative to PV2 if PV2 is used for EGR.

‡ Recommended Setting

Table B-16 DDEC-ECU Software 60 (Diagnostic Version 9) Configuration Parameter for Compression Brake and Exhaust Brake Applications - MBE 4000 Engine

3.4 CONFIGURATION FOR COMPRESSION BRAKE AND TURBO BRAKE APPLICATIONS

The configuration parameters for **Compression Brake and Turbo Brake** applications are listed in Table B-17.

Parameter	Description	Range	Setting†	Parameter ID	Access
Engine Brake Configuration	Enables the type of engine brake required	0 = Engine Brake configuration with Compression Brake & Exhaust flap 1 = Engine Brake Configuration w/ Compression Brake & Turbo Brake	0 = Low/Med	1 10 13	VEPS or minidiag2
Engine Brake Stage 1 Mask for Low Braking	Mask determines which device turns on for low braking	64 = Constant Throttle Valve Only 80 = Constant Throttle & Exhaust Flap 81 = Constant Throttle Valve & Turbo Brake High	64	1 10 14	VEPS or minidiag2
Engine Brake Stage 1 Factor for Low Braking	Factor determines the amount of low braking	0 – 100%	100	1 10 15	VEPS or minidiag2
Engine Brake Stage 2 Mask for Medium Braking	Mask determines which device turns on for medium braking	64 = Constant Throttle Valve Only 80 = Constant Throttle & Exhaust Flap 81 = Constant Throttle Valve & Turbo Brake High	81	1 10 16	VEPS or minidiag2
Engine Brake Stage 2 Factor for Medium Braking	Factor determines the amount of medium braking	0 – 100%	50	1 10 17	VEPS or minidiag2
Engine Brake Stage 3 Mask for High Braking*	Mask determines which device turns on for high braking	64 = Constant Throttle Valve Only 80 = Constant Throttle & Exhaust Flap 81 = Constant Throttle Valve & Turbo Brake High	81	1 10 18	VEPS or minidiag2
Engine Brake Stage 3 Factor for High Braking	Factor determines the amount of high braking	0 – 100%	100	1 10 19	VEPS or minidiag2
Engine Brake Transmission Mask		64 = Constant Throttle Valve Only 80 = Constant Throttle & Exhaust Flap 81 = Constant Throttle Valve & Turbo Brake High	64	1 10 20	VEPS or minidiag2
Engine Brake Transmission Factor	Factor determines the amount of high braking	0–100%	100	1 10 21	VEPS or minidiag2

* The Engine Brake Stage 3 mask is used when the vehicle is exceeding the Road Speed limit. Therefore the Engine Brake Stage 3 mask should always be set to a non-zero value with engine brake. For Constant Throttle only or Exhaust Flap applications, the Stage 3 mask must be the same value as the Stage 2 mask.

† Recommended Setting

Table B-17 DDEC-VCU Configuration Parameter for Compression Brake and Turbo Brake Applications

The DDEC-ECU software 53 (Diagnostic Version 5) parameters listed in Table B-18 for **Compression Brake and Turbo Brake** applications must be set in the DDEC-ECU and the configuration parameters listed in Table B-17 for Compression Brake and Turbo Brake must be set in the DDEC-VCU.

Parameter	Description	Range	Setting*	Parameter ID	Access
PWM1 – Exhaust Flap Enable	Enables the Exhaust Flap or Turbo Brake on PWM1	0 = No Function 1 = Wastegate Control 2 = Exhaust Flap (VEPS) 3 = Exhaust Flap (minidiag2)	1	0 06 01	VEPS or minidiag2
PWM2 – Compression Engine Brake Enable	Enables the Compression brake on PWM2	0 = No Function 1 = Not Used 2 = Compression Brake (VEPS) 3 = Compression Brake (minidiag2)	2 for VEPS OR 3 for minidiag2	0 06 02	VEPS or minidiag2
PWM6	Turbo Brake Sleeve Control	0 = No Function 1 = Not Used 2 = Not Used 3 = Exhaust Flap (Turbo Brake Sleeve)	3	0 35 01	VEPS or minidiag2

* Recommended Setting

Table B-18 DDEC-ECU Software 53 (Diagnostic Version 5) Parameters for Compression Brake and Turbo Brake Applications

The DDEC-ECU software 56 (Diagnostic Version 6) parameters listed in Table B-19 for **Compression Brake and Turbo Brake** applications must be set in the DDEC-ECU and the configuration parameters listed in Table B-17 must be set in the DDEC-VCU.

Parameter	Description	Range	Setting*	Parameter ID	Access
PWM1 – Exhaust Flap Enable	Enables the Exhaust Flap or Turbo Brake on PWM1	0 = No Function 1 = Wastegate Control 2 = Exhaust Flap (VEPS) 3 = Exhaust Flap (minidiag2)	1	0 03 01	VEPS or minidiag2
PWM2 – Compression Engine Brake Enable	Enables the Compression brake on PWM2	0 = No Function 1 = Not Used 2 = Compression Brake (VEPS) 3 = Compression Brake (minidiag2)	2 for VEPS OR 3 for minidiag2	0 03 02	VEPS or minidiag2
PWM6	Turbo Brake Sleeve Control	0 = No Function 1 = Not Used 2 = Not Used 3 = Exhaust Flap (Turbo Brake Sleeve)	3	0 03 06	VEPS or minidiag2

* Recommended Setting

Table B-19 DDEC-ECU Software 56 (Diagnostic Version 6) Parameters for Compression Brake and Turbo Brake Applications

The DDEC-ECU software 60 (Diagnostic Version 9) parameters listed in Table B-20 for **Compression Brake and Exhaust Flap** applications must be set in the DDEC-ECU and the configuration parameters listed in Table B-17 must be set in the DDEC-VCU.

Parameter	Description	Range	Setting§	Parameter ID	Access
PWM1 (PV1)	MBR 900 Exhaust Flap Enable/MBE 4000 Wastegate Enable	0 = No Function 1 = Wastegate 2 = Not Used 3 = Exhaust Flap*	1 = Wastegate	0 03 01	VEPS or minidiag2
PWM2 (PV2)	EGR Value Enable	0 = No Function 1 = EGR Valve 2 = Not Used 3 = Engine Brake†	2 for VEPS or 3 for minidiag2	0 03 02	VEPS or minidiag2
PWM5 (PV5)	Compression Brake Enable	0 = No Function 1 = Not Used 2 = Not Used 3 = Engine Brake‡	3 = Compression Brake Enable	0 03 05	VEPS or minidiag2
PWM6 (PV6)	MBE 4000 Turbo Brake/Exhaust Flap	0 = No Function 1 = Not Used 2 = Not Used 3 = Exhaust Flap or Turbo Brake Sleeve 4 = Future Grid Heater	3 = Turbo Brake Sleeve	0 03 06	VEPS or minidiag2

*MBE 900 EGR engine

† Moved to PV5 if PV2 is used for EGR.

‡ Alternative to PV2 if PV2 is used for EGR.

§ Recommended Setting

Table B-20 DDEC-ECU Software 60 (Diagnostic Version 9) Configuration Parameter for Compression Brake and Turbo Brake Applications

3.5 ENGINE BRAKE OPTION WITH SERVICE BRAKE

The parameter listed in Table B-21 sets SService Brake control of the Engine Brake.

Parameter	Description	Choice	Default	Parameter ID	Access
Engine Brake Service Brake Enable	When this function is enabled, an input from the service brake is required in order to activate the engine brake.	0 = Disable 1 = Enable	0	1 10 03	Nexiq DDR, DDDL, DRS, VEPS, or minidiag2

Table B-21 Service Brake Control of Engine Brake Parameter

3.6 ENGINE BRAKES OPTION WITH MINIMUM KPH

The minimum KPH for the Engine Brakes option is listed in Table B-22.

Parameter	Description	Range	Default	Parameter ID	Access
Minimum Road Speed for Engine Brake Operation	The minimum vehicle speed required before engine braking will occur.	0-200 km/hr	0 km/hr	1 10 04	Nexiq DDR, DDDL, DRS, VEPS, or minidiag2
Engine Speed Min RPM	Minimum engine speed for engine brake operation	0-4000 RPM	1100 RPM	1 10 01	VEPS, DRS, minidiag2

Table B-22 Minimum KPH for Engine Brakes Option

3.7 ENGINE BRAKE OPTION WITH VEHICLE SPEED LIMIT

Engine Brake with vehicle speed limiting can be configured as listed in Table B-23.

Parameter	Description	Range	Choice	Default	Parameter ID	Access
Road Speed Limiting With Engine Brake	Offset to turn on engine brakes when the road speed limit is exceeded.	0-48 km/hr	0 = Disable	5 km/hr	1 10 05	Nexiq DDR, DDDL, DRS, VEPS, or minidiag2

Table B-23 Vehicle Speed Limiting for Engine Brake Option

B.4 ENGINE PROTECTION

DDEC for MBE 900 and MBE 4000 engine protection system parameters are listed in Table B-24.

Parameter	Description	Choice/Range	Default	Parameter ID	Access
Enable Engine Protection Shutdown on Coolant Temperature	Enable/Disable shutdown for high coolant temperature	0 = Disable 1 = Enable	1 = Enable	1 18 01	Nexiq DDR, DDDL, DRS, VEPS, or minidiag2
Enable Engine Protection Shutdown on Coolant Level	Enable/Disable shutdown for low coolant level	0 = Disable 1 = Enable	0 = Disable	1 18 02	Nexiq DDR, DDDL, DRS, VEPS, or minidiag2
Enable Engine Protection Shutdown on Oil Pressure	Enable/Disable shutdown for low oil pressure	0 = Disable 1 = Enable	1 = Enable	1 10 03	Nexiq DDR, DDDL, DRS, VEPS, or minidiag2
Enable Engine Protection Shutdown on Oil Level	Enable/Disable shutdown for low oil level	0 = Disable 1 = Enable	1 = Enable	1 18 04	Nexiq DDR, DDDL, DRS, VEPS, or minidiag2
Engine Protection Shutdown Time	Time after an engine protection event the engine will shutdown.	1–120 sec	60 sec	1 18 05	VEPS or minidiag2
Engine Protection Shutdown Time for Oil Pressure	Time after an oil pressure engine protection event the engine will shutdown.	1–120 sec	30 sec	1 18 06	VEPS or minidiag2
Enable Counter for Engine Protection Overrides	Holds the count of shutdown overrides that have occurred (Reset with minidiag2)	0–255	0	1 18 07	VEPS, DRS or minidiag2
AWL Engine Protection Shutdown Time	Time for the AWL to flash before the shutdown occurs	3–120 sec	20 sec	1 18 08	VEPS, DRS or minidiag2
RSL Engine Protection Shutdown Time	Time for the RSL to flash before the shutdown occurs	3–120 sec	10 sec	1 18 09	VEPS, DRS or minidiag2

Table B-24 Engine Protection

B.5 FAN CONTROL

The DDEC-VCU fan control parameters are listed in Table B-25 .

Parameter	Description	Choice/Range	De- fault	Parame- ter ID	VEPS or minidiag2
Fan Activation on Engine Brake	Enables/Disables fan activation when engine brakes are on high.	0 = Disable 1 = Enable	0	1 19 01	VEPS or minidiag2
Fan Activation on VSG	Enables/Disables fan activation when VSG is active	0 = Disable 1 = Enable	0	1 19 05	VEPS or minidiag2
Fan Activation on A/C Status	Enables/Disables fan activation when the air conditioning is on.	0 = Disable 1 = Enable	0	1 19 03	VEPS or minidiag2
Enable Fast Idle on A/C*	Enable A/C logic for Fast Idle and Fan	0 = LIM2 1 = Fast Idle on A/C & Neutral 2 = Fast Idle on A/C	0	1 06 01	VEPS or minidiag2

* Parameter 1 06 02 Fast Idle Speed defaults to 600 rpm

Table B-25 DDEC-VCU Fan Control Parameters

The DDEC-ECU software 53 (Diagnostic Version 5) parameters listed in Table B-26 for Fan Control must be set in the DDEC-ECU and the configuration parameters listed in Table B-25 must be set in the DDEC-VCU with VEPS or the minidiag2.

Parameter	Description	Choice/Range	Default	Parameter ID	Access
Fan Control	Enables Fan Control	0 = Linnig Clutch – Two Speed (on-highway) 1 = Linnig Clutch – Two Speed (off-highway) 2 = Electronically Controlled Viscous Fan – Variable Speed w/ Fan Speed Sensor 3 = Hydrostatic Fan – Variable Speed 4 = Horton Clutch – Single Speed (Hydrostatic) 5 = Hydrostatic Fan – Variable Speed 6 = Hydrostatic Fan – Dual Fans		0 28 02	VEPS or minidiag2
PV3 Enable	Enable/Disable Output 3	0 = Disable 1 = Enable	0	0 06 03	VEPS or minidiag2
PV4 Enable	Enable/Disable Output 4	0 = Disable 1 = Enable	0	0 06 04	VEPS or minidiag2
Fan, Step 1 Coolant Temp	Fan Coolant Temp Threshold for 1 or 2-speed Fan	0–97°C	96°C	0 36 01	VEPS or minidiag2
Fan, Step 2 Coolant Temp	Fan Coolant Temp Threshold for 1 or 2-speed Fan*	0–100°C	96°C	0 38 01	VEPS or minidiag2
Fan, Step 1 Manifold Air Temp	Fan Manifold Threshold for 1 or 2-speed Fan	0–150°C	70°C (MBE 4000) 75°C (MBE 900)	0 37 01	VEPS or minidiag2
Fan, Step 2 Manifold Air Temp	Fan Manifold Threshold for 1 or 2-speed Fan†	0–150°C	70°C (MBE 4000) 75°C (MBE 900)	0 39 01	VEPS or minidiag2

* For 1-speed installation this parameter should be set to the value in 0 36 01

† For 1-speed installation this parameter should be set to the value in 0 37 01

Table B-26 Fan Control Software 53 (Diagnostic Version 5) Fan Control Parameters

The DDEC-ECU software 56 (Diagnostic Version 6) parameters listed in Table B-27 for Fan Control must be set in the DDEC-ECU and the configuration parameters listed in Table B-25 must be set in the DDEC-VCU.

Parameter	Description	Choice/Range	Default	Parameter ID	Access
Fan Control	Enables Fan Control	0 = Linnig Clutch – Two Speed (on-highway) 1 = Linnig Clutch – Two Speed (off-highway) 2 = Electronically Controlled Viscous Fan – Variable Speed w/ Fan Speed Sensor 3 = Hydrostatic Fan – Variable Speed 4 = Horton Clutch – Single Speed (Hydrostatic) 5 = Hydrostatic Fan – Variable Speed 6 = Hydrostatic Fan – Dual Fans		0 04 01	VEPS or minidiag2
PV3 Enable	Enable/Disable Output 3	0 = No Function 1 = 1-speed Fan	0	0 03 03	VEPS or minidiag2
PV4 Enable	Enable/Disable Output 4	0 = No Function 1 = 2-speed Fan or Horton Fan	0	0 03 04	VEPS or minidiag2
Switch on Threshold on Coolant Temp Speed 1	Fan Coolant Temp Threshold for 1 or 2-speed Fan	0–97°C	96°C	0 04 02	VEPS or minidiag2
Switch on Threshold on Coolant Temp Speed 2	Fan Coolant Temp Threshold for 1 or 2-speed Fan	0–100°C	96°C	0 04 04	VEPS or minidiag2
Switch on Threshold on Air Intake Temp Speed 1	Fan Air Intake Temp Threshold for 1 or 2-speed Fan	0–150°C	70°C (MBE 4000) 75°C (MBE 900)	0 04 03	VEPS or minidiag2
Switch on Threshold on Air Intake Temp Speed 2	Fan Air Intake Temp Threshold for 1 or 2-speed Fan	0–150°C	70°C (MBE 4000) 75°C (MBE 900)	0 04 05	VEPS or minidiag2

Table B-27 DDEC-ECU Software 56 (Diagnostic Version 6) Fan Control Parameters

The DDEC-ECU software 60 (Diagnostic Version 9) parameters listed in Table B-28 for Fan Control must be set in the DDEC-ECU and the configuration parameters listed in Table B-25 must be set in the DDEC-VCU.

Parameter	Description	Choice/Range	Default	Parameter ID
Fan Control	Enables Fan Control	0 = Linnig Clutch – Two Speed (on-highway) 1 = Linnig Clutch – Two Speed (off-highway) 2 = Electronically Controlled Viscous Fan – Variable Speed w/ Fan Speed Sensor 3 = Hydrostatic Fan – Variable Speed 4 = Horton Clutch – Single Speed (Hydrostatic) 5 = Hydrostatic Fan – Variable Speed 6 = Hydrostatic Fan – Dual Fans	—	0 04 01
PV3 Enable	Enable/Disable Output 3	0 = No Function 1 = 1-speed Fan	0	0 03 03
PV4 Enable	Enable/Disable Output 4	0 = No Function 1 = 2-speed Fan or Horton Fan	0	0 03 04
Switch on Threshold on Coolant Temp Speed 1	Fan Coolant Temp Threshold for 1 or 2-speed Fan	0–97°C	MBE900 (EPA98) – 96°C MBE900 (EPA04) – 92°C MBE4000 (EPA98) – 96°C MBE4000 (EPA98) – 96°C	0 04 02
Switch on Threshold on Coolant Temp Speed 2	Fan Coolant Temp Threshold for 1 or 2-speed Fan	0–100°C	MBE900 (EPA98) – 96°C MBE900 (EPA04) – 92°C MBE4000 (EPA98) – 96°C MBE4000 (EPA98) – 96°C	0 04 04
Switch on Threshold on Air Intake Temp Speed 1	Fan Air Intake Temp Threshold for 1 or 2-speed Fan	0–150°C	MBE900 (EPA98) – 93°C MBE900 (EPA04) – 85°C MBE4000 (EPA98) – 75°C MBE4000 (EPA98) – 65°C	0 04 03
Switch on Threshold on Air Intake Temp Speed 2	Fan Air Intake Temp Threshold for 1 or 2-speed Fan	0–150°C	MBE900 (EPA98) – 93°C MBE900 (EPA04) – 85°C MBE4000 (EPA98) – 75°C MBE4000 (EPA98) – 65°C	0 04 05
Switch on Threshold on Air Intake for Braking Operation Speed 1	Air Intake Threshold for Braking Operation	0–150°C	MBE900 (EPA98) – 93°C MBE900 (EPA04) – 85°C MBE4000 (EPA98) – 75°C MBE4000 (EPA98) – 65°C	0 04 07
Switch on Threshold on Air Intake for Braking Operation Speed 2	Air Intake Threshold for Braking Operation	0–150°C	MBE900 (EPA98) – 93°C MBE900 (EPA04) – 85°C MBE4000 (EPA98) – 75°C MBE4000 (EPA98) – 65°C	0 04 08

Table B-28 DDEC—ECU Software 60 (Diagnostic Version 9) Fan Control Parameters

B.6 FUEL ECONOMY INCENTIVE

The Fuel Economy Incentive parameters are listed in Table B-29..

Parameter	Definition	Range	Default	Parameter ID	Access
Enable Fuel Economy Incentive	Enables/disable the feature.	0 = Disable 1 = Enable	0	1 23 17	Nexiq DDR, DDDL, DRS, VEPS, or minidiag2
Minimum Economy	Indicates the minimum economy for fuel economy incentive.	4 to 20 MPG	7	1 23 23	Nexiq DDR, DDDL, DRS, VEPS, or minidiag2
Vehicle Speed Reward	Indicates customer set maximum speed increase for vehicle.	0 to 20 KPH	0	1 23 22	Nexiq DDR, DDDL, DRS, VEPS, or minidiag2
Convert Factor MPH/MPG'	The miles per hour you want to allow for each full mile per gallon above the minimum MPG.	0 to 20 MPH/MPG	2	1 23 24	Nexiq DDR, DDDL, DRS, VEPS, or minidiag2
FEI Use Trip Milage	FILT ECON bases the calculations on the fuel information, by periodic sampling of fuel consumption, recorded in the ECM. TRIP ECON bases the calculation on the trip portion of the fuel usage information.	0 = FILTERED FUEL ECON 1 = TRIP FUEL ECON	0	1 23 25	Nexiq DDR, DDDL, DRS, VEPS, or minidiag2
Max Cruise Set Speed	Cruise Control vehicle set speed cannot be faster than this value.	48 – 152 KPH	152 KPH	1 15 02	Nexiq DDR, DDDL, DRS, VEPS, or minidiag2

Table B-29 Fuel Economy Incentive Parameters

B.7 IDLE SHUTDOWN

All the Idle Shutdown timer options are listed in listed in Table B-30.

Parameter	Description	Choice / Range	Default	Parameter ID	Access
IDLE SHUTDOWN ENABLE	Enables or Disables the Idle Shutdown feature.	0 = Disable 1 = Enable with Park Brake 2 = Enable without Park Brake, Reset for Accelerator Position > Idle 3 = Enable without Park Brake, Reset for Change in Accelerator Pedal Position	0	1 17 01	Nexiq DDR, DDDL, DRS, VEPS, minidiag2
IDLE SHUTDOWN TIME (MIN)	The amount of engine idle time that is allowed before the Idle Shutdown feature stops fueling the engine.	1 to 5000 seconds	60 sec	1 17 02	Nexiq DDR, DDDL, DRS, VEPS, minidiag2
VSG SHUTDOWN ENABLE	Enables or disables the Idle Timer Shutdown feature when operating on the Variable Speed Governor.	0 = Disable 1 = Enable with Park Brake 2 = Enable without Park Brake, Reset for Accelerator Position > Idle 3 = Enable without Park Brake, Reset for Change in Accelerator Pedal Position	0	1 17 03	Nexiq DDR, DDDL, DRS, VEPS, minidiag2
VSG SHUTDOWN TIME	The amount of engine idle time that is allowed before the idle shutdown feature stops fueling the engine.	1 to 5000 seconds	60 sec	1 17 04	Nexiq DDR, DDDL, DRS, VEPS, minidiag2
MIN COOLANT TEMP FOR SHUTDOWN	Minimum coolant temperature before an idle shutdown will occur	-40°C to 200°C	-10°C	1 17 08	VEPS, DRS, minidiag2
ENABLE IDLE/VSG SHUTDOWN OVERRIDE	Enables/disables override of Idle or VSG Shutdown	0 = Disable 1 = Enable	1	1 17 09	Nexiq DDR, DDDL, DRS, VEPS, minidiag2
MAX ENGINE LOAD FOR VSG SHUTDOWN	VSG shutdown disabled for engine loads greater than this value	0–5000 Nm	100	1 17 05	VEPS, DRS, minidiag2

Table B-30 Idle Shutdown Timer Programming Options

B.8 LIMITERS

LIM0 and LIM1 inputs are always active and do not use an enable parameter. LIM0 and LIM1 parameters are listed in Table B-31.

Parameter	Range	Default	Parameter ID	Access
Minimum Engine Speed LIM0 enabled	0-4000 rpm	500 rpm	1 05 01	Nexiq DDR, DDDL, DRS, VEPS, minidiag2
Maximum Engine Speed LIM0 enabled	0-4000 rpm	4000 rpm	1 05 02	Nexiq DDR, DDDL, DRS, VEPS, minidiag2
Maximum Road Speed LIM0 enabled	0-152 kph	152 kph	1 05 03	Nexiq DDR, DDDL, DRS, VEPS, minidiag2
Maximum Engine Torque LIM0 enabled	0-5000 Nm	5000 Nm	1 05 04	Nexiq DDR, DDDL, DRS, VEPS, minidiag2
Minimum Engine Speed LIM1 enabled	0-4000 rpm	500 rpm	1 05 05	Nexiq DDR, DDDL, DRS, VEPS, minidiag2
Maximum Engine Speed LIM1 enabled	0-4000 rpm	4000 rpm	1 05 06	Nexiq DDR, DDDL, DRS, VEPS, minidiag2
Maximum Road Speed LIM1 enabled	0-152 kph	152 kph	1 05 07	Nexiq DDR, DDDL, DRS, VEPS, minidiag2
Maximum Engine Torque LIM1 enabled	0-5000 Nm	5000 Nm	1 05 08	Nexiq DDR, DDDL, DRS, VEPS, minidiag2

Table B-31 LIM0 and LIM1 Parameters

LIM2 can be configured as a third limiter or as a special A/C function. When configured as LIM2 (parameter 1 06 01 = 0), LIM2 operates the same as LIM0 and LIM1. LIM2 parameters are listed in Table B-32.

Parameter	Range	Default	Parameter ID	Access
Enable Fast Idle on Air condition Input	0 = Enable LIM2 1 = Enable fast idle on air condition in neutral only 2 = Enable fast idle on air condition	0	1 06 01	Nexiq DDR, DDDL, DRS, VEPS, minidiag2
Fast Idle Speed on Air Condition	500-3000 rpm	600 rpm	1 06 02	Nexiq DDR, DDDL, DRS, VEPS, minidiag2
Minimum Engine Speed LIM2 enabled	0-4000 rpm	500 rpm	1 06 03	Nexiq DDR, DDDL, DRS, VEPS, minidiag2
Maximum Engine Speed LIM2 enabled	0-4000 rpm	4000 rpm	1 06 04	Nexiq DDR, DDDL, DRS, VEPS, minidiag2
Maximum Road Speed LIM2 enabled	0-152 kph	152 kph	1 06 05	Nexiq DDR, DDDL, DRS, VEPS, minidiag2
Maximum Engine Torque LIM2 enabled	0-5000 Nm	5000Nm	1 06 06	Nexiq DDR, DDDL, DRS, VEPS, minidiag2

Table B-32 LIM2 Parameters

B.9 LOW GEAR TORQUE LIMITING

A VSS or output shaft speed message over SAE J1939 is required (refer to section 3.7.4, "Vehicle Speed Sensor"). The parameters are listed in Table 5-53.

Parameter	Description	Range	Default	Parameter ID	Access
Torque Factor* Gear Down Protection	Provides a limit on the available torque if the ratio of vehicle speed to engine speed is below a set point.	0.00 to 1.00	1.00	1 23 01	VEPS or minidiag2
Gear Ratio for Gear Down Protection	The gear ratio below which torque is limited. (output shaft rpm/input shaft rpm)	0.000 to 2.00	0.01	1 23 02	VEPS or minidiag2
Torque Factor* High Gear Power	Provides a limit on the available torque if the ratio of vehicle speed to engine speed is below a set point.	0.000 to 1.00	1.00	1 23 03	VEPS or minidiag2
Gear Ratio for High Gear Power	The gear ratio below which torque is limited. (output shaft rpm/input shaft rpm)	0.00 to 2.00	0.02	1 23 04	VEPS or minidiag2

* % of maximum torque at the current engine speed

Table B-33 Low Gear Torque Limiting Parameters

B.10 PASSMART

The PasSmart parameters listed in Table B-34 are programmable at engine order entry or with DDDL, Vehicle Electronic Programming System (VEPS), the Nexiq DDR as listed in .

Parameter	Description	Range	Default	Parameter ID	Access
Enable PasSmart	Enables/disables the feature.	0 = Disable 1 = Enable	0	1 23 16	Nexiq DDR, DDDL or VEPS
Passing Speed Duration	The duration of time per interval that is permitted at the higher speed. A value of zero will disable the feature.	0 to 255 minutes	0	1 23 19	Nexiq DDR, DDDL or VEPS
Passing Speed Interval	The period of time when the ECM resets to begin a new period.	1 to 24 hours*	1	1 23 21	Nexiq DDR, DDDL or VEPS
Passing Speed Increment	The additional vehicle speed permitted above the programmed vehicle speed limit. A value of zero will disable the feature.	0 to 255 KPH	0	1 23 18	Nexiq DDR, DDDL or VEPS
PasSmart Rampdown Time	The time within which the road speed limit will return to the programmed road speed limit when the feature is deactivated.	0 – 255 seconds	0	1 23 20	Nexiq DDR, DDDL or VEPS

* The time within which the road speed limit will return to the programmed road speed limit when the the feature is deactivated.

Table B-34 PasSmart Parameters

B.11 PROGRESSIVE SHIFT

Progressive Shift parameters are listed in Table B-35.

Parameter	Description	Default	Range	Sample Values	Parameter ID	Access
Gear Ratio for Progressive Shifting	Gear ratio for which engine speed is limited when transmission gear is below this ratio	0.015	0.000 - 2.000	0.5	1 23 07	Nexiq DDR, DDDL, DRS, VEPS or minidiag2
Max Engine Speed for Progressive Shifting	Maximum engine speed (rpm) when driving in lower gear	3000 rpm	500 – 3000 rpm	1400	1 23 06	Nexiq DDR, DDDL, DRS, VEPS or minidiag2

Table B-35 Progressive Shift Programming

B.12 STARTER LOCKOUT

Starter Lockout may be enabled or disabled as listed in Table B-36.

Parameter	Description	Range	Default	Parameter ID	Access
Relay 1	Enables/Disables the Starter Lockout Function	0 = Disable 1 = Starter Lockout 2 = Reserved 3 = Reserved 4 = OI Alarm 5 = Reserved	0	1 16 01	VEPS, DRS or minidiag2
Starter Lockout Diagnosis	Enables/Disables Diagnoses for Starter Lockout	0 = Disable 1 = enable	0	1 16 02	VEPS, DRS or minidiag2

Table B-36 Starter Lockout

B.13 THROTTLE CONTROL/GOVERNORS

The Cruise Switch VSG parameters are listed in Table B-37 and Table B-38.

Parameters	Description	Default	Range	Parameter ID	Access
VSG Control on VSG and Cruise Control Pin	Enables/disables the VSG function	0	0 = Disabled 1 = Enabled 2 = Enabled if neutral 3 = Enabled if neutral and park brake* 4 = Enabled if park brake*	1 07 01	Nexiq DDR, DDDL, DRS, VEPS, minidiag2
Max VSG Speed	Sets the max VSG speed	3000 RPM	500 – 3000 RPM	1 07 02	Nexiq DDR, DDDL, DRS, VEPS, minidiag2
Min VSG Speed	Sets the min VSG speed	500 RPM	500 – 3000 RPM	1 07 03	Nexiq DDR, DDDL, DRS, VEPS, minidiag2
VSG Throttle Override	Enables/disables the throttle pedal from overriding VSG mode.	1 = Enabled	0 = Disabled 1 = Enabled	1 07 04	Nexiq DDR, DDDL, DRS, VEPS, minidiag2
Max Engine Speed for Throttle Override	Sets the max engine speed that the throttle can obtain when in VSG mode.	3000 RPM	0 – 3000 RPM	1 07 05	Nexiq DDR, DDDL, DRS, VEPS, minidiag2
VSG Dropout on Service Brake or Park Brake	Enables/Disables the status of the Service Brake or Park Brake for disabling of VSG	0 = VSG independent of Service Brake or Park Brake	0 = Allows VSG to run independent of Service Brake or Park Brake 1 = VSG drops out on either Service Brake or Park Brake 2 = VSG drops out on Service Brake 3 = VSG drops out on Park Brake	1 07 06	Nexiq DDR, DDDL, DRS, VEPS, minidiag2
VSG Dropout on Clutch Switch	Enables/Disables the status of the Clutch Switch for disabling of VSG	0 = Disabled (Clutch switch will not disable VSG)	0 = Disabled 1 = Enabled	1 07 07	Nexiq DDR, DDDL, DRS, VEPS, minidiag2

* See parameter 1 07 06

Table B-37 Cruise Switch VSG Parameters (1 of 2)

Parameters	Description	Default	Range	Parameter ID	Access
Max Vehicle Speed in VSG	Sets the max vehicle speed over which VSG is disabled	10 km/h	0 – 128 km/h	1 07 08	Nexiq DDR, DDDL, DRS, VEPS, minidiag2
Cruise Set VSG Speed	Sets the initial speed when the Set/Coast Switch is used to enable Cab VSG	500 RPM	Min VSG Speed to Max VSG Speed	1 07 09	Nexiq DDR, DDDL, DRS, VEPS, minidiag2
Set VSG Max Engine Torque	Sets the max engine torque that becomes active once the Set/Coast Switch is activated	500 Nm	0-5000 Nm	1 07 11	Nexiq DDR, DDDL, DRS, VEPS, minidiag2
Cruise Resume VSG Speed	Sets the initial speed when the Resume/Accel Switch is used to enable Cab VSG	500 RPM	Min VSG Speed to Max VSG Speed	1 07 12	Nexiq DDR, DDDL, DRS, VEPS, minidiag2
Resume VSG Max Engine Torque	Sets the max engine torque that becomes active once the Resume/Accel Switch is activated	5000 Nm	0-5000 Nm	1 07 14	Nexiq DDR, DDDL, DRS, VEPS, minidiag2
VSG Ramp Rate	Sets the rate of increase or decrease.	1000 RPM/sec	25 – 2500 RPM/sec	1 07 15	Nexiq DDR, DDDL, DRS, VEPS, minidiag2

Table B-38 Cruise Switch VSG Parameters (2 of 2)

The Remote VSG parameters are listed in Table B-39 and Table B-40.

Parameters	Description	Range	Defaults	Parameter ID	Access
VSG Control on VSG and Cruise Control Pin	Enables/disables the VSG function	0 = Disabled 1 = Enabled 2 = Enabled if neutral 3 = Enabled if neutral and park brake* 4 = Enabled if park brake*	0	1 07 01	Nexiq DDR, DDDL, DRS, VEPS, minidiag2
Max VSG Speed	Sets the max VSG speed	500 – 3000 RPM	3000 RPM	1 07 02	Nexiq DDR, DDDL, DRS, VEPS, minidiag2
Min VSG Speed	Sets the min VSG speed	500 – 3000 RPM	500 RPM	1 07 03	Nexiq DDR, DDDL, DRS, VEPS, minidiag2
VSG Throttle Override	Enables/disables the throttle pedal from overriding VSG mode.	0 = Disabled 1 = Enabled	0 = Disabled	1 07 04	Nexiq DDR, DDDL, DRS, VEPS, minidiag2
Max Engine Speed for Throttle Override	Sets the max engine speed that the throttle can obtain when in VSG mode.	0 – 3000 RPM	3000 RPM	1 07 05	Nexiq DDR, DDDL, DRS, VEPS, minidiag2
VSG Dropout on Service Brake or Park Brake	Enables/Disables the status of the Service Brake or Park Brake for disabling of VSG	0 = Allows VSG to run independent of Service Brake or Park Brake 1 = VSG drops out on either Service Brake or Park Brake 2 = VSG drops out on Service Brake 3 = VSG drops out on Park Brake	0 = VSG independent of Service Brake or Park Brake	1 07 06	Nexiq DDR, DDDL, DRS, VEPS, minidiag2
VSG Dropout on Clutch Switch	Enables/Disables the status of the Clutch Switch for disabling of VSG	0 = Disabled 1 = Enabled	0 = Disabled (Clutch switch will not disable VSG)	1 07 07	Nexiq DDR, DDDL, DRS, VEPS, minidiag2

* See parameter 1 07 06

Table B-39 Remote VSG Parameters (1 of 2)

Parameters	Description	Range	Defaults	Parameter ID	Access
Max Vehicle Speed in VSG	Sets the max vehicle speed over which VSG is disabled	0 – 128 km/h	10 km/h	1 07 08	Nexiq DDR, DDDL, DRS, VEPS, minidiag2
VSG Ramp Rate	Sets the rate of increase or decrease when in VSG mode.	25 – 2500 RPM/sec	1000 RPM/sec	1 07 15	Nexiq DDR, DDDL, DRS, VEPS, minidiag2
Number of Remote VSG Speed	Sets the number of remote VSG speeds that can be enabled	1 to 3	1	1 07 16	Nexiq DDR, DDDL, DRS, VEPS, minidiag2
VSG Speed #1	Sets the VSG #1 set speed	Min VSG RPM to Max VSG RPM	950 RPM	1 07 17	Nexiq DDR, DDDL, DRS, VEPS, minidiag2
VSG Speed #1 Governor Type		1 — 11	1	1 07 18	VEPS, minidiag2
VSG Speed #1 Max Engine Torque	Sets the max engine torque for VSG Speed #1	Low Idle - 5000 Nm	5000 Nm	1 07 19	Nexiq DDR, DDDL, DRS, VEPS, minidiag2
VSG Speed #2	#2 VSG set speed	Min VSG RPM to Max VSG RPM	1250 RPM	1 07 20	Nexiq DDR, DDDL, DRS, VEPS, minidiag2
VSG Speed #2 Governor Type		1 — 11	1	1 07 21	VEPS, minidiag2
VSG Speed #2 Max Engine Torque	Sets the max engine torque for VSG Speed #2	Low Idle - 5000 Nm	5000 Nm	1 07 22	Nexiq DDR, DDDL, DRS, VEPS, minidiag2
VSG Speed #3	#3 VSG set speed	Low Idle - 5000 Nm	1850 RPM	1 07 23	Nexiq DDR, DDDL, DRS, VEPS, minidiag2
VSG Speed #3 Governor Type		1 — 11	1	1 07 24	VEPS, minidiag2
VSG Speed #3 Max Engine Torque	Sets the max engine torque for VSG Speed #3	Low Idle - 5000 Nm	5000 Nm	1 07 25	Nexiq DDR, DDDL, DRS, VEPS, minidiag2

Table B-40 Remote VSG Parameters (2 of 2)

B.14 VEHICLE SPEED LIMITING

The Vehicle Speed Limiting programmable parameters are listed in Table B-41.

Parameter	Description	Range	Default	Parameter ID	Access
Maximum Road Speed (Legal)	Maximum vehicle speed. Alternate Road Speed Limit 1 cannot exceed this speed.	10 – 152 km/hr	152 km/hr	1 03 03	Nexiq DDR, DDDL, DRS, VEPS, minidiag2
Alternate Road Speed LIM0	Maximum vehicle speed when DDEC-VCU pin 18/12 is connected to ground.	0 – 152 km/hr	152 km/hr	1 05 07	Nexiq DDR, DDDL, DRS, VEPS, minidiag2
Alternate Road Speed LIM1	Maximum vehicle speed when DDEC-VCU pin 18/11 is connected to ground.	0–152 km/hr	152 km/hr	1 05 03	Nexiq DDR, DDDL, DRS, VEPS, minidiag2

Table B-41 Vehicle Speed Limiting Parameters

B.15 VEHICLE SPEED SENSOR ANTI-TAMPERING

Vehicle Speed Limiting must also be enabled. The parameters are listed in Table B-42.

Parameter	Range	Default	Parameter ID	Access
Anti-tamper	0 = Disable 1 = Enable (Manual transmissions, traction control) 2* = Enable (Manual transmissions, no traction control)	0	1 08 10	VEPS, DRS, minidiag2
Vehicle Speed Sensor	0 = No sensor 2 = magnetic VSS 3 = Vehicle speed over J1939	2	1 08 01	Nexiq DDR, DDDL, DRS, VEPS, minidiag2
Axle Ratio	1.00 - 20.00	5.29	1 08 03	Nexiq DDR, DDDL, DRS, VEPS, minidiag2
Number of Output Shaft Teeth	0 - 250	16	1 08 04	VEPS, DRS, minidiag2
Tire Revolutions per Kilometer	160 - 1599	312	1 08 05	VEPS, DRS, minidiag2
Top Gear Ratio (Output Shaft/Input Shaft)	0.1 - 2.55	1	1 08 06	VEPS, DRS, minidiag2
Second Highest Gear Ratio	0.1 - 2.55	2.55	1 08 07	Nexiq DDR, DDDL, DRS, VEPS, minidiag2

Table B-42 VSS Anti-tampering Parameters

15.1 VEHICLE SPEED SENSOR

To obtain accurate vehicle mileage, the parameters listed in listed in Table B-43 must be programmed.

Parameter	Range	Default	Parameter ID	Access
VSS Input Configuration	0 = No Sensor 2 = Magnetic Pickup* 3 = VSS via J1939	2 = Magnetic	1 08 01	Nexiq DDR, DDDL, DRS, VEPS, minidiag2
Axle Ratio	1 – 20.0	5.29	1 08 03	Nexiq DDR, DDDL, DRS, VEPS, minidiag2
Number of Output Shaft Teeth	0 – 250	16	1 08 04	Nexiq DDR, DDDL, DRS, VEPS, minidiag2
Tire Revs/Kilometer	160 – 1599	312	1 08 05	Nexiq DDR, DDDL, DRS, VEPS, minidiag2
Top Gear Ratio	0.1 – 2.55	1	1 08 06	Nexiq DDR, DDDL, DRS, VEPS, minidiag2
Gear Ratio Tolerance	0 – 60	2	1 08 08	Nexiq DDR, DDDL, DRS, VEPS, minidiag2
Second Highest Gear Ratio	0.1 – 2.55	1	1 08 07	Nexiq DDR, DDDL, DRS, VEPS, minidiag2
Two Speed Axle – Second Axle Ratio	1 – 20.0	5.29	1 08 09	Nexiq DDR, DDDL, DRS, VEPS, minidiag2
Anti-tamper	0 = Disable 1 = Enable	0 = Disable	1 08 10	Nexiq DDR, DDDL, DRS, VEPS, minidiag2

* Range must be set to 2.

Table B-43 Vehicle Speed Sensor Parameters

INDEX

A

- Active Codes, 5-19
- Amber Warning Lamp (AWL)
 - engine protection, 5-39
 - idle shutdown, 5-65
 - use in diagnostics, 5-19
- Anti-Lock Brake Systems, 5-5
- Automotive Limiting Speed Governor (ALSG), 5-111,
 - accelerator pedal, 5-111

C

- Cold Start, 5-7
- Communication Link, J1939, 6-27, 3-38
- Conduit and Loom, 3-67
- Criteria, wires, 3-53
- Cruise Control, 5-11
 - clutch released, 5-14
 - cruise control modes, 5-15
 - engine brake, 5-24
 - service brake released, 5-14
 - throttle inhibit switch, 5-14
 - vehicle speed, 5-11

D

- Data Card, 5-84
- Data Link
 - 1708/1587, messages, 6-9
 - SAE J1587, 6-5, anti-lock brakes, 5-5
 - SAE J1939, anti-lock brakes, 5-5
- DDEC Reports, 5-78
- DDEC-ECU, diagnostics, 5-19
- Deutsch Connectors, 3-54
- Deutsch Terminals
 - installation, 3-54
 - removal, 3-56
- Diagnostics, 5-19
 - amber warning lamp, 5-19
 - red stop lamp, 5-19
- Digital Inputs, 4-3
- Digital Outputs, 4-17, optimized idle active light, 4-20
- Dual Speed Axle, 5-21

E

- Engine Brake, 5-23
 - cruise control, 5-24
 - minimum mph, 5-24
 - service brake control of, 5-24
 - switches, 5-23
- Engine Coolant Level Sensor, 3-76
- Engine Protection, 5-39
 - rampdown (derate), 5-40
 - shutdown, 5-42
 - stop engine override, momentary override, 5-44
- Engine Starter Control, 5-47

F

- Fan Control, 5-49
 - dual fans, 5-52
 - single fan, 5-50
 - two-speed fan, 5-54
 - variable speed single-fan, 5-56
- FMI, failure mode identifier, 6-6
- Fuel Economy Incentive, 5-63

G

- Governors, 5-111
 - automotive limiting speed governor, 5-111
 - VSG, 5-112

H

- Harnesses
 - ProDriver DC jumper harness, 5-92
 - ProDriver DC vehicle harness, 5-91

I

- Idle Shutdown Timer, 5-65
 - enabled on VSG, 5-67
 - idle shutdown override, 5-66
 - vehicle power shutdown, 5-66
- Inactive Codes, 5-19

L

- Low Gear Torque Limiting, 5-73

M

Main Power Supply Shutdown, 3-41, 3-44
 Management Information Products
 DDEC data, 5-78
 DDEC reports, 5-78
 ProDriver DC, 5-84
 Message Identification Character (MID), description of, 6-5
 MIDs, message identifier, 6-6

O

OEM, installed sensors, 3-75
 Optimized Idle, 5-95
 digital outputs, 4-20
 engine mode, 5-96
 thermostat mode, 5-96

P

PasSmart, 5-99
 Passwords, 5-103
 PIDs, 6-7
 double byte parameters, 6-20
 parameter identifier, 6-6
 single byte parameters, 6-11
 variable length parameters, 6-22
 Power Supply, 12 volt system, 3-39
 ProDriver DC, 5-84
 data card, 5-84
 installation, 5-85
 flush mount, 5-86
 surface mount, 5-89
 Progressive Shift, 5-105, gear ratio threshold, 5-106

R

Red Stop Lamp (RSL)
 engine protection, 5-39
 shutdown, 5-42
 use in diagnostics, 5-19

S

SAE J1587
 anti-lock brakes, 5-5
 diagnostic connector, 3-49
 message format, 6-5

PIDs, 6-7
 double byte parameters, 6-20
 single byte parameters, 6-11
 transmitter data request, 6-10
 variable length parameters, 6-22

SAE J1939
 anti-lock brakes, 5-5
 data link layer parameter group number response definitions, 6-46
 DDEC-VCU, 6-27
 message format, 6-27

SAE J1939/71, application layer parameter group definitions, 6-27

Sensors, 3-71, 3-75
 engine coolant level sensor, 3-76
 factory-installed sensors, 3-71, function and location, 3-71
 OEM-installed sensors, 3-75, function and guidelines, 3-75
 vehicle speed sensor, 3-80

SIDs, subsystem identifier, 6-6

Starter Lockout, 5-107

Stop Engine Override Options, 5-44

Switch Inputs Multiplexing, 4-15

T

Tachometer Drive, 5-109

Tape and Taping, 3-69

Terminal Installation, Deutsch connectors, 3-54

Terminal Removal, Deutsch terminals, 3-56

Throttle Control, 5-111

Transmission Interface, 5-125

V

Variable Speed Governor (VSG), 5-112

Vehicle Interface Harness (VIH), power wiring, 3-36

Vehicle Power Shutdown, 5-65

Vehicle Speed Limiting, 5-131

Vehicle Speed Sensor, 3-80

W

Wait to Start Lamp, 5-8

Wires

criteria, 3-53
recommendations, 3-53
requirements, 3-53
Wiring

power wiring, 3-36
ProDriver DC jumper harness, 5-92
ProDriver DC vehicle harness, 5-91
tachometer, 5-109